
INSTALLATION INSTRUCTIONS



K1 Desk Mounts



205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com

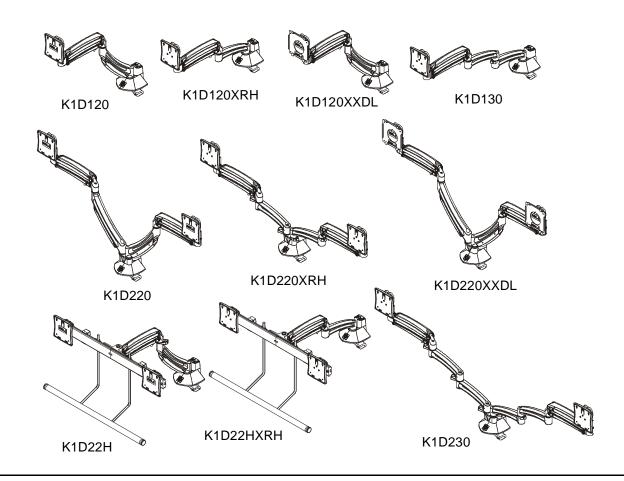

K1D Series

DISCLAIMER

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® is a registered trademark of Milestone AV Technologies. All rights reserved.



IMPORTANT SAFETY INSTRUCTIONS!

WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.



CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.

WARNING: Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.

WARNING: Failure to provide adequate structural strength for this component can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this component is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the component.



WARNING: Use this mounting system only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

WARNING: Never operate this mounting system if it is damaged. Return the mounting system to a service center for examination and repair.


WARNING: Do not use this product outdoors.


WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components attached to the K1D Series Monitor Arm up to (and including) the display does not exceed the weight limits listed below. Use with products heavier than the maximum weight indicated may result in collapse of the mount and its accessories causing possible injury.


MODEL	Max Weight Allowed for <u>EACH</u> Display	Max Weight Capacity of Mounting System
K1D120	25 lbs (11.34 kg)	25 lbs (11.34 kg)
K1D120XRH	25 lbs (11.34 kg)	25 lbs (11.34 kg)
K1D120XXDL	25 lbs (11.34 kg)	25 lbs (11.34 kg)
K1D130	10 lbs (4.54 kg)	10 lbs (4.54 kg)
K1D220	25 lbs (11.34 kg)	50 lbs (22.68 kg)
K1D220XRH	25 lbs (11.34 kg)	50 lbs (22.68 kg)
K1D220XXDL	25 lbs (11.34 kg)	50 lbs (22.68 kg)
K1D22H	9 lbs (4.08 kg)	18 lbs (8.16 kg)
K1D22HXRH	9 lbs (4.08 kg)	18 lbs (8.16 kg)
K1D230	10 lbs (4.54 kg)	20 lbs (9.07 kg)


--SAVE THESE INSTRUCTIONS!--


DIMENSIONS

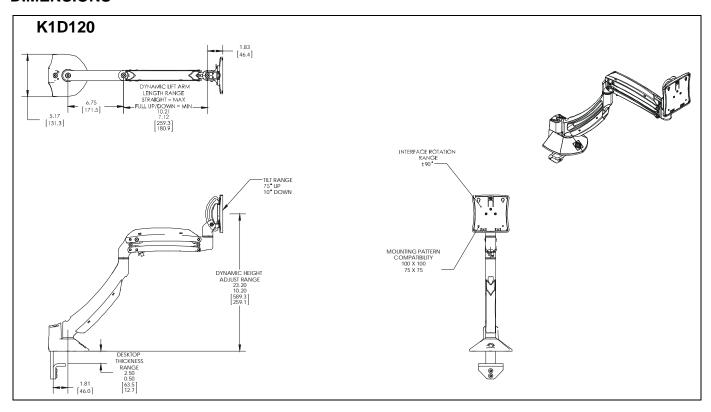


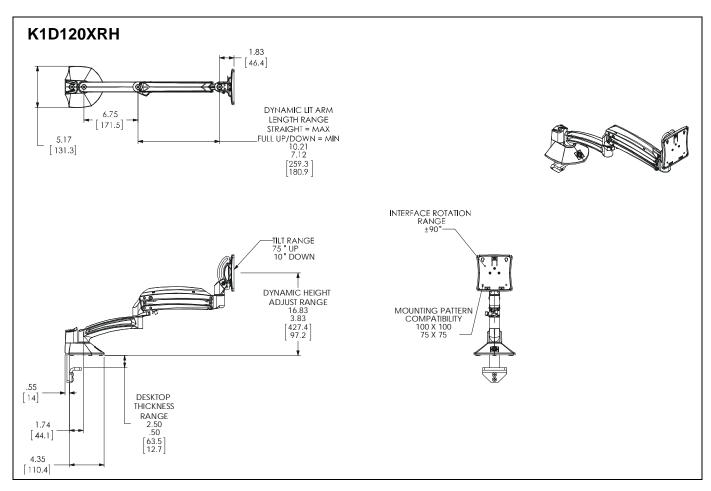


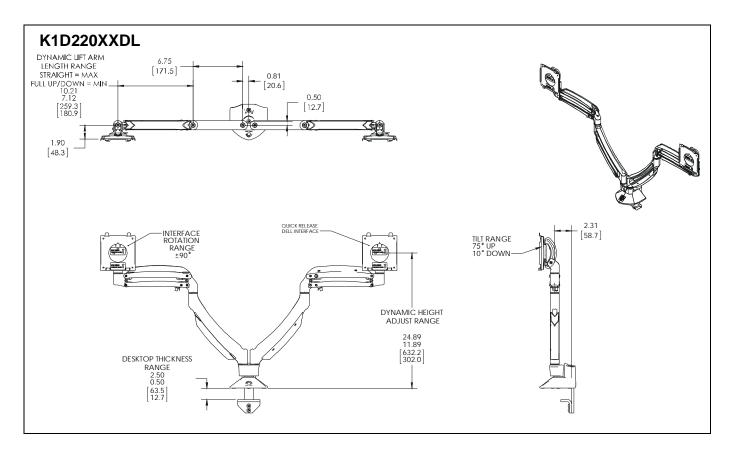


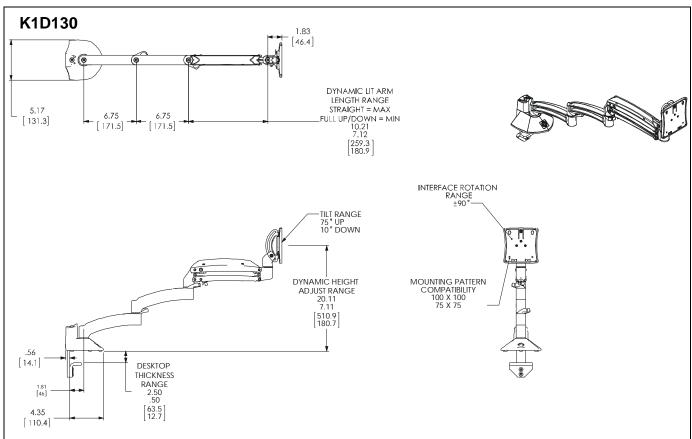


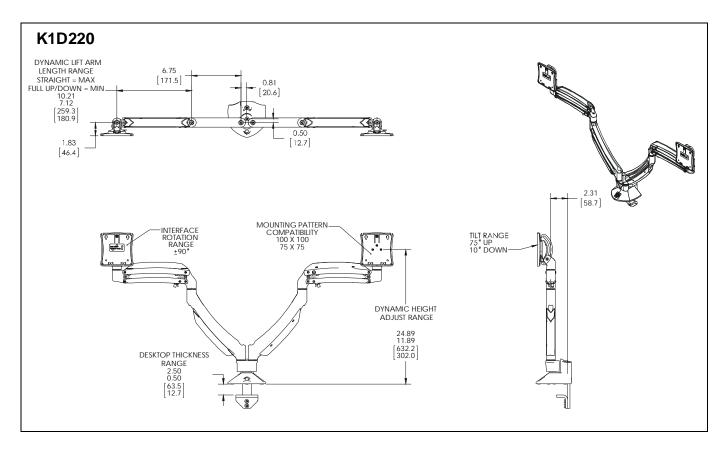


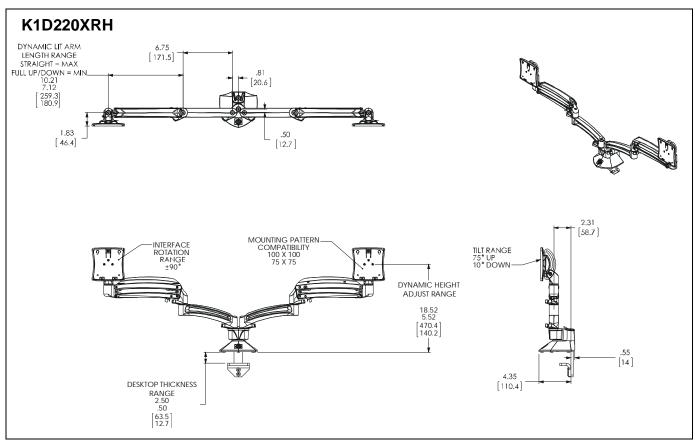

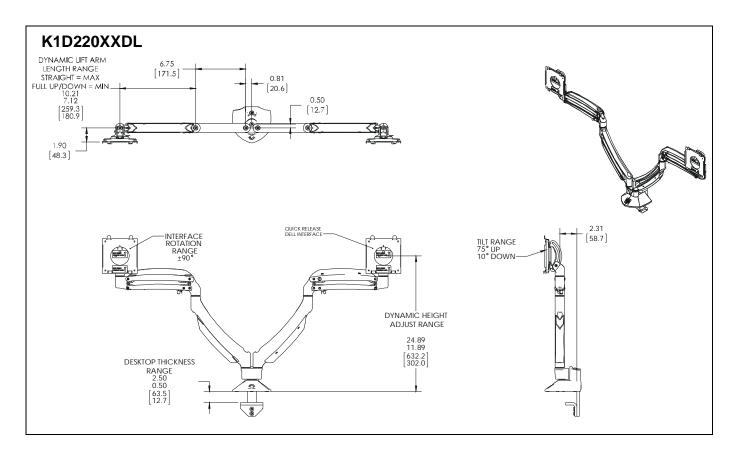

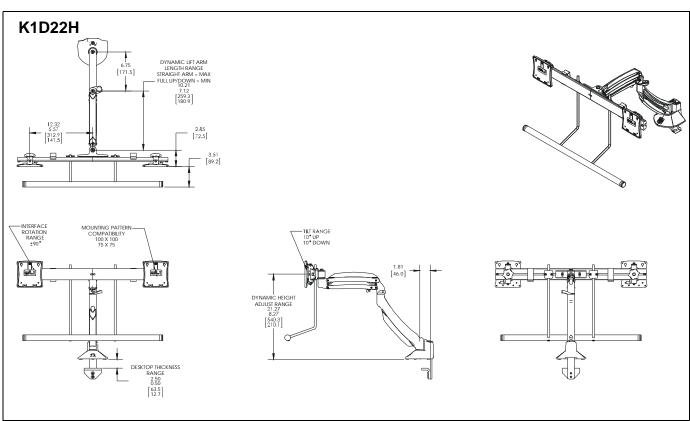

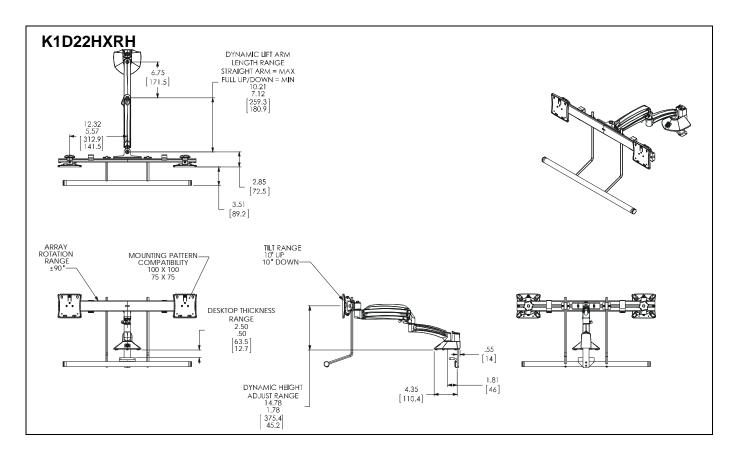


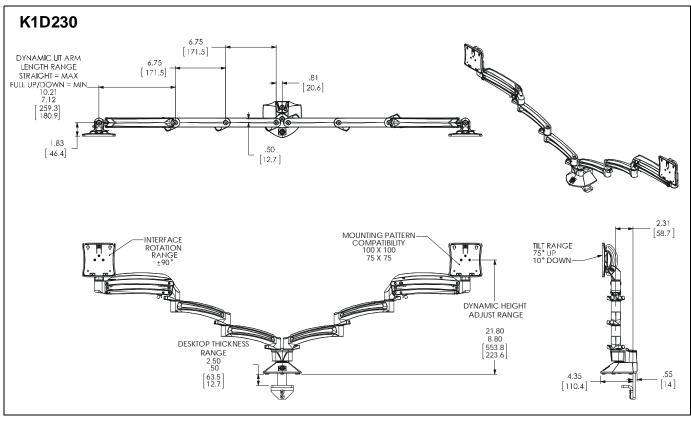


LEGEND

	Tighten Fastener	Pencil Mark
	Apretar elemento de fijación	Marcar con lápiz
	Befestigungsteil festziehen	Stiftmarkierung
	Apertar fixador	Marcar com lápis
	Serrare il fissaggio	Segno a matita
	Bevestiging vastdraaien	Potloodmerkteken
	Serrez les fixations	Marquage au crayon
	Loosen Fastener	Drill Hole
	Aflojar elemento de fijación	Perforar
	Befestigungsteil lösen	Bohrloch
*	Desapertar fixador	Fazer furo
	Allentare il fissaggio	Praticare un foro
	Bevestiging losdraaien	Gat boren
	Desserrez les fixations	Percez un trou
	Phillips Screwdriver	Adjust
,	Destornillador Phillips	Ajustar
[] []	Kreuzschlitzschraubendreher	Einstellen
	Chave de fendas Phillips	Ajustar
W	Cacciavite a stella	Regolare
4	Kruiskopschroevendraaier	Afstellen
	Tournevis à pointe cruciforme	Ajuster
	Open-Ended Wrench	Remove
	Llave de boca	Quitar
61	Gabelschlüssel	Entfernen
	Chave de bocas	Remover
0	Chiave a punte aperte	Rimuovere
	Steeksleutel	Verwijderen
	Clé à fourche	Retirez
	By Hand	Optional
,	A mano	Opcional
	Von Hand	Optional
Ful	Com a mão	Opcional
\\$ /	A mano	Opzionale
	Met de hand	Optie
	À la main	En option
	Hex-Head Wrench	Security Wrench
	Llave de cabeza hexagonal	Llave de seguridad
	Sechskantschlüssel	Sicherheitsschlüssel
	Chave de cabeça sextavada	Chave de segurança
	Chiave esagonale	Chiave di sicurezza
	Zeskantsleutel	Veiligheidssleutel
	Clé à tête hexagonale	Clé de sécurité

TOOLS REQUIRED FOR INSTALLATION

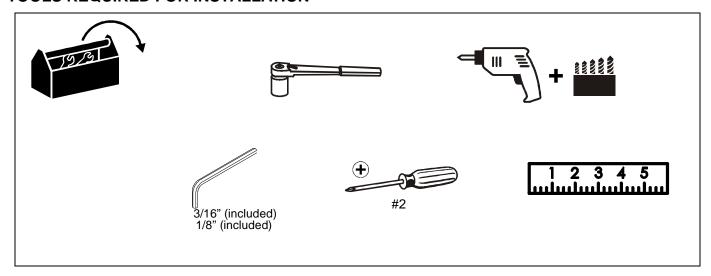

PARTS

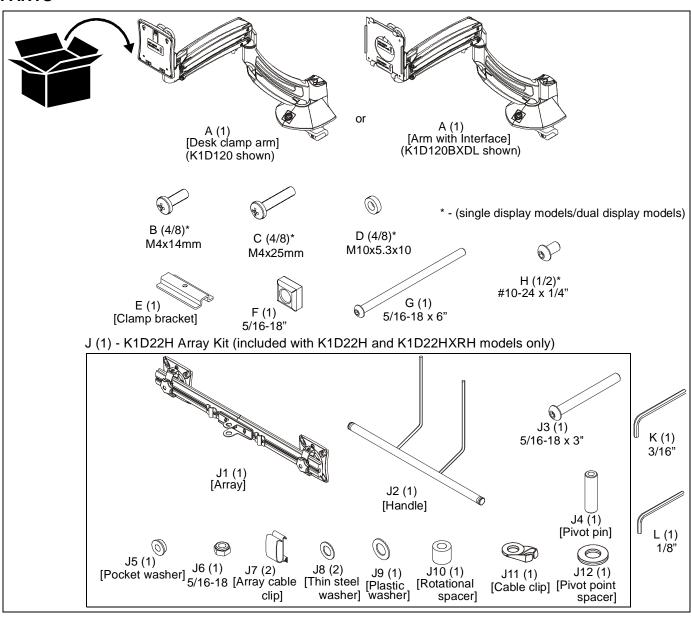

Assembly And Installation

Connecting Desk Clamp Arms to Desk Standard Installation

 Loosen clamp screw until enough space is created between clamp and mount to allow for desk mounting. (See Figure 1)

NOTE: If space is limited behind desk (i.e. against wall, etc.), remove lower piece of clamp and two screws holding it to the mount and reattach parts prior to Step 3! (See Figure 2)

- Place mount on top of desk at desired mounting location. (See Figure 1)
- Tighten clamp using clamp screw until mount is securely fastened to desk. (See Figure 1)

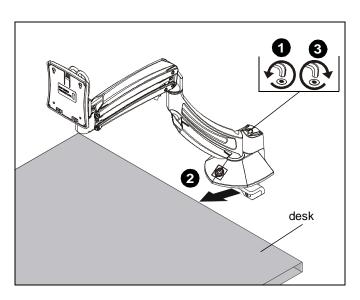


Figure 1

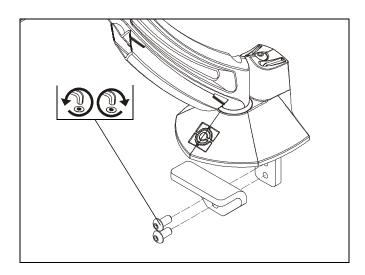


Figure 2

Grommet Hole Option

NOTE: K1D clamp mounts may be installed directly to grommet holes between 1 1/4" and 2 1/2" in diameter. If grommet hardware (E-G) is used, they can be installed to grommet holes between 3/8" and 2 1/2" in diameter.

Direct Installation

- Remove lower piece of clamp from assembly by removing two button head cap screws holding piece to assembly. (See Figure 3)
- Install remaining part of clamp through grommet hole. (See Figure 3)

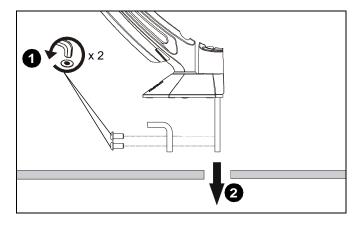


Figure 3

- Reattach removed piece of clamp and screws to assembly. (See Figure 4)
- 4. Tighten clamp using clamp screw until mount is securely fastened to desk. (See Figure 4)

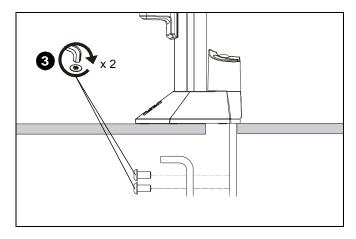


Figure 4

Using Grommet Hardware

 Remove desk clamp from mount by loosening button head cap screw until clamp is completely disengaged from the bolt. (See Figure 5)

Maneuver clamp so that it is totally removed from desk mount. (See Figure 5)

NOTE: Set removed washer aside for re-use.

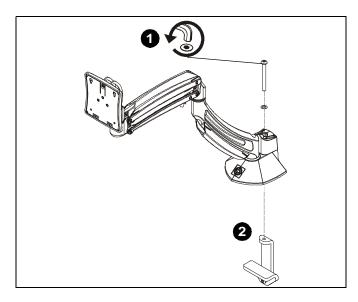


Figure 5

- Locate a flat surface (thickness of 3/4" minimum to 3 1/2" maximum) on which to mount the desk mount plate.
- If mounting hole does not already exist on desk, drill 3/8" mounting hole in desk at desired mounting location.

IMPORTANT!: Mounting hole must be between 3/8" and 2 1/2" in diameter!

- 5. Place mount on desk over grommet hole. (See Figure 6)
- Use 5/16-18 x 6" button head cap screw (G), removed washer, clamp bracket (E) and 5/16-18" square nut (F) to secure mount to desk. (See Figure 6)

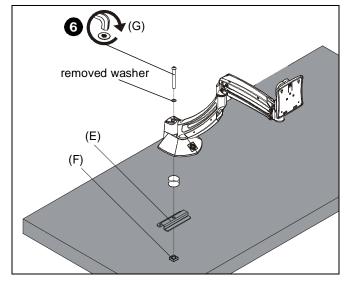


Figure 6

Array Installation (K1D22H and K1D22HXRH ONLY)

- Slide rotational spacer (J10) into opening on array attachment bracket. (See Figure 7)
- Use 5/16-18 x 3" button head cap screw (J3), two thin steel washers (J8), plastic washer (J9), pocket washer (J5), pivot pin (J4), pivot point spacer (J12) and 5/16-18 lock nut (J6) to secure array (J1) to K1D arm (A). (See Figure 7)

NOTE: Cable clip (J11) can be used in place of pivot point spacer (J12) if additional cable management is desired. (See Figure 7)

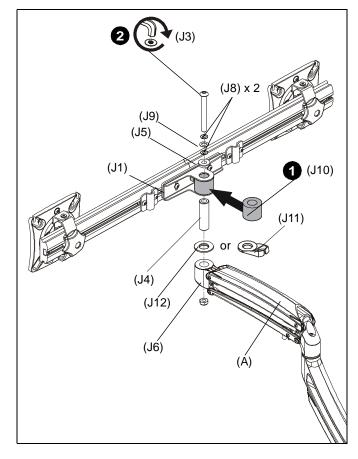


Figure 7

Display Installation - Standard Faceplate

NOTE: If installing mount that includes custom faceplate (K1D120XXDL or K1D220XXDL), proceed to Display Installation - Custom Faceplate Section.

 Remove quick release faceplate from mount by pulling quick release lever and sliding faceplate off mount. (See Figure 8)

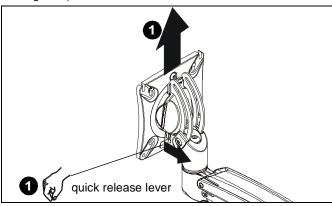


Figure 8

WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components attached to the K1D Series Monitor Arm up to (and including) the display does not exceed the weight limits listed below. Use with products heavier than the maximum weight indicated may result in collapse of the mount and its accessories causing possible injury.

MODEL	Max Weight Allowed for <u>EACH</u> Display	Max Weight Capacity of Mounting System
K1D120	25 lbs (11.34 kg)	25 lbs (11.34 kg)
K1D120XRH	25 lbs (11.34 kg)	25 lbs (11.34 kg)
K1D120XXDL	25 lbs (11.34 kg)	25 lbs (11.34 kg)
K1D130	10 lbs (4.54 kg)	10 lbs (4.54 kg)
K1D220	25 lbs (11.34 kg)	50 lbs (22.68 kg)
K1D220XRH	25 lbs (11.34 kg)	50 lbs (22.68 kg)
K1D220XXDL	25 lbs (11.34 kg)	50 lbs (22.68 kg)
K1D22H	9 lbs (4.08 kg)	18 lbs (8.16 kg)

MODEL	Max Weight Allowed for <u>EACH</u> Display	Max Weight Capacity of Mounting System
K1D22HXRH	9 lbs (4.08 kg)	18 lbs (8.16 kg)
K1D230	10 lbs (4.54 kg)	20 lbs (9.07 kg)

- 2. Carefully place display face down on protective surface.
- 3. Connect faceplate to display

For flush mounting hole installation:

 Using Phillips screwdriver, carefully install four M4x14mm screws (B) through corresponding holes on faceplate and into the mounting holes on the display. (See Figure 9)

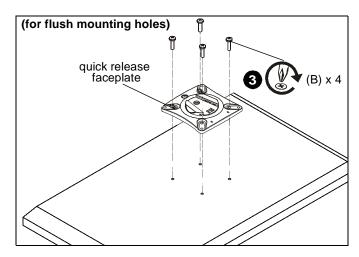


Figure 9

For recessed mounting hole installation:

- Place four spacers (D) on top of mounting holes on back of display. (See Figure 10)
- Using Phillips screwdriver, carefully install four M4x25mm screws (C) through corresponding holes on faceplate, spacers (D) and into the mounting holes on the display. (See Figure 10)

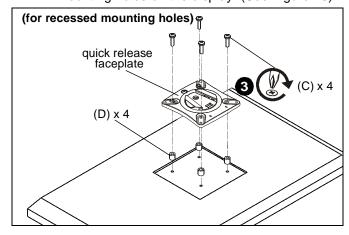


Figure 10

- Position display with faceplate attached above mount. (See Figure 11)
- Slide faceplate onto mounting head until quick release tab clicks into place. (See Figure 11)

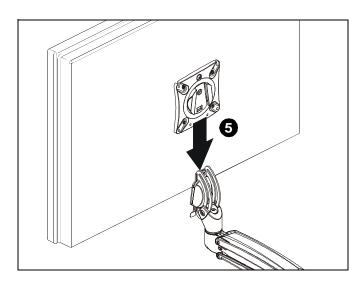


Figure 11

Display Installation - Custom Faceplate

IMPORTANT!: Custom interface brackets are designed specifically for Dell's quick-connect style monitors. Do not attempt to install any other type of monitors to these mounts!

- Position monitor over mounting tabs on quick-connect bracket (A). (See Figure 12)
- Lower monitor onto quick-connect bracket, inserting mounting tabs into top two top mounting holes on back of monitor. (See Figure 12)

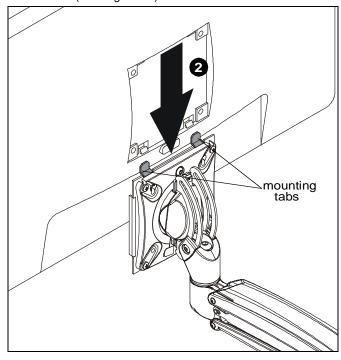


Figure 12

 Slide base of monitor towards mount until lower tabs secure display to mount. An audible "click" should be heard. (See Figure 13)

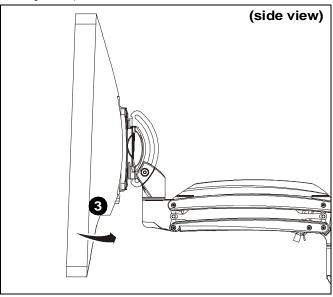


Figure 13

Handle Installation (K1D22H models only)

- Loosen four screws securing handle brackets to K1D22H array. (See Figure 14)
- 2. Install uprights of handle (J2) into handle brackets located on the back of K1D22H array. (See Figure 14)

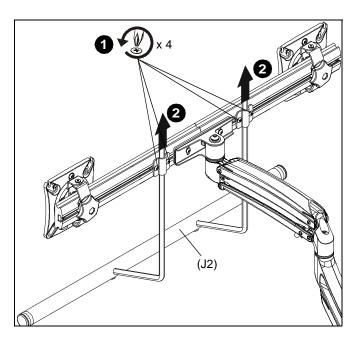


Figure 14

 Position handle (J2) at desired height and secure by tightening button head cap screws attaching handle brackets to array. (See Figure 15)

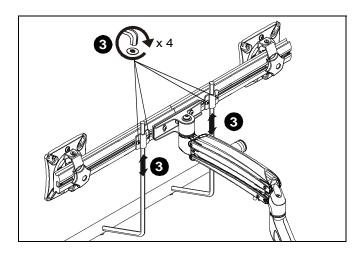


Figure 15

Adjustments

Lift Arm Tension Adjustment

 Use 3/16" hex key (K) to adjust lift arm tension adjustment screw. (See Figure 16)

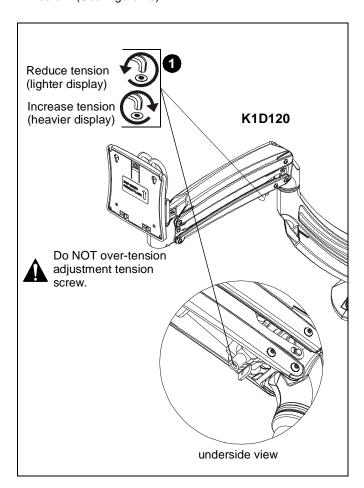


Figure 16

NOTE: Tension may also be adjusted with upper tension adjustment screw inside cable management cover and 1/8" hex key (L). (See Figure 17)

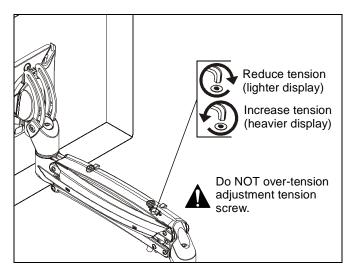


Figure 17

Pitch Adjustment (non-array models)

- 1. Adjust pitch to desired tilt position. (See Figure 18)
- 2. Adjust pitch tension screw to change the adjustment tension. (See Figure 18)

Pivot Adjustment (non-array models)

- 3. Adjust pivot position as desired. (See Figure 18)
- 4. Use 3/16" hex key (K) to adjust pivot point tension screws to change pivot adjustment tension. (See Figure 18)

Portrait Adjustment

NOTE: (Optional) Rotational adjustment may be locked by installing rotational locking screw (H) into back of faceplate. (See Figure 18)

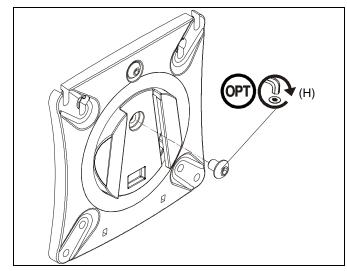


Figure 18

- The monitor may be adjusted 90 degrees in either direction in order to provide a portrait view of the monitor. (See Figure 19)
- 6. Use 3/16" hex key (K) to adjust rotational adjustment screw to adjust rotational tension. (See Figure 19)
- The monitor may be adjusted 90 degrees in either direction in order to provide a portrait view of the monitor. (See Figure 19)
- 8. Use 3/16" hex key (K) to adjust rotational adjustment screw to adjust rotational tension. (See Figure 19)

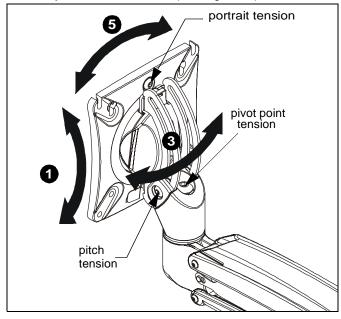


Figure 19

Adjustments - K1D22H ONLY

Display Adjustments

- 1. Loosen knobs securing faceplates to array. (See Figure 20)
- Slide displays laterally on array to adjust lateral shift. (See Figure 20)
- 3. Adjust pitch and pivot position as desired. (See Figure 20)
- Tighten knobs to secure faceplates in position. (See Figure 20)

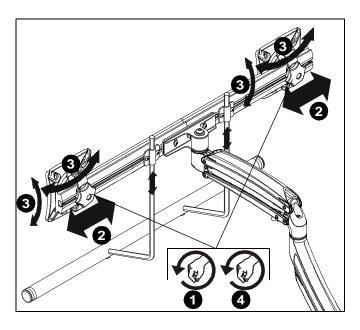


Figure 20

Array Bar Roll Adjustment

- Loosen roll adjustment screws on back of array bracket. (See Figure 21)
- 2. Adjust roll of array bar as desired. (See Figure 21)
- Tighten roll adjustment screws on back of array bracket. (See Figure 21)

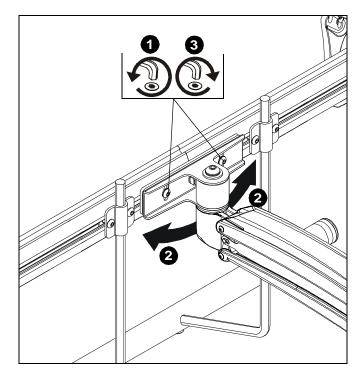


Figure 21

Display Removal - Standard Faceplate

WARNING: Only remove display from mount when the display can be lifted up from the mount! DO NOT remove display unless the display is in the upright position! (See Figure 22)

- 1. Make sure display is in the upright position.
- Remove quick release faceplate from mount by pulling quick release lever and sliding faceplate off mount. (See Figure 22)

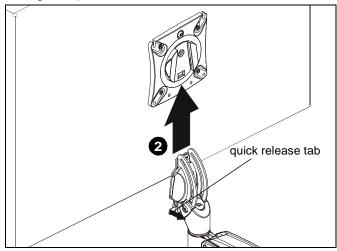


Figure 22

Display Removal - Custom Faceplate

WARNING: Only remove display from mount when the display can be lifted up from the mount! DO NOT remove display unless the display is in the upright position! (See Figure 23)

- Press quick release tab on back of display to release display from faceplate. (See Figure 23)
- Pull bottom of display away from faceplate. (See Figure 24)
- Lift display up from faceplate. (See Figure 23) and (See Figure 24)

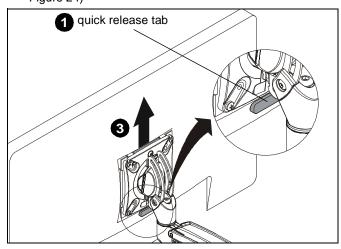


Figure 23

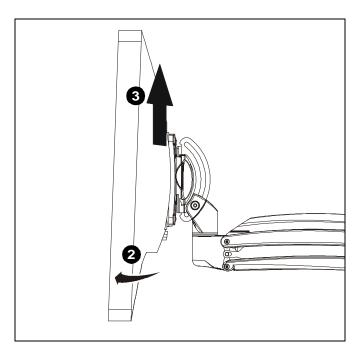


Figure 24

Pivot Adjustment Range

Single Arm Models

 Adjust arm angle as desired up to 90 degrees in either direction. (See Figure 25)

WARNING: Swinging the arm beyond 90 degrees may result in the mount slipping off the desk causing serious injury!

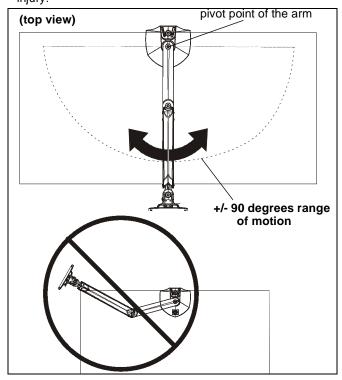


Figure 25

Dual Arm Models

 Adjust arm angles as desired within a 90 degree range from the pivot point of the arm and a perpendicular centerline of mount. (See Figure 26)

WARNING: Swinging the arm beyond this range may result in the mount slipping of the desk causing serious injury!

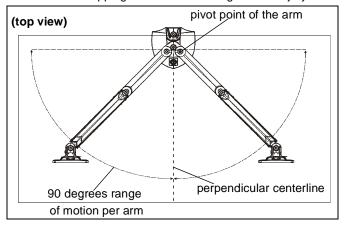


Figure 26

Cable Management

- Press insides of cable management covers at both ends to unhinge tabs on either end of cable management cover on upper arm. (See Figure 27)
- 2. Lift cable management cover up until tabs are unhinged and cover is in the "open" position. (See Figure 27)

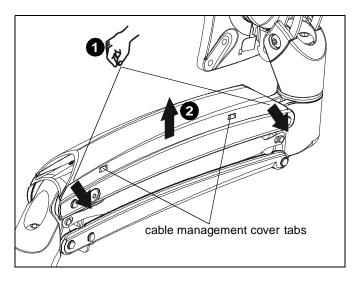


Figure 27

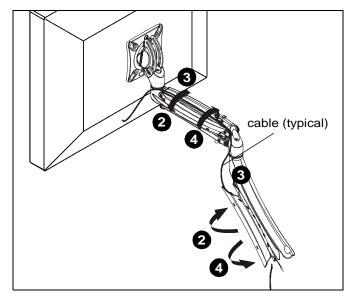


Figure 28

3. Route cables through cable management channels. (See Figure 28)

IMPORTANT!: Be sure to leave enough slack in the cables near display and arm joint to allow for full arm articulation!

- Close cable management covers on monitor arm. (See Figure 28)
- 5. Repeat Steps 1-4 for lower arm.

Array Models

- 1. Install array cable clips (J7) to back of array. (See Figure 29)
- Route cables through array cable clips (J7) as desired. (See Figure 29)
- Route cables through arm cable clips as desired. (See Figure 29)

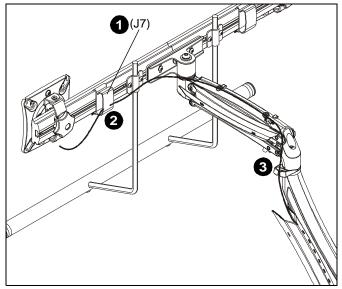


Figure 29



205 Westwood Ave, Long Branch, NJ 07740

Phone: 866-94 BOARDS (26273) / (732)-222-1511

Fax: (732)-222-7088 | E-mail: sales@touchboards.com



Chief, a products division of Milestone AV Technologies

8800-002614 Rev00 ©2014 Milestone AV Technologies www.chiefmfg.com 06/14 USA/International A 6436 City West Parkway, Eden Prairie, MN 55344

P 800.582.6480 / 952.225.6000

F 877.894.6918 / 952.894.6918

Europe A Franklinstraat 14, 6003 DK Weert, Netherlands

P +31 (0) 495 580 852

F +31 (0) 495 580 845

Asia Pacific A Office No. 918 on 9/F, Shatin Galleria

18-24 Shan Mei Street Fotan, Shatin, Hong Kong

852 2145 4099

F 852 2145 4477

