




Extended Cuffs

Standard Cuffs

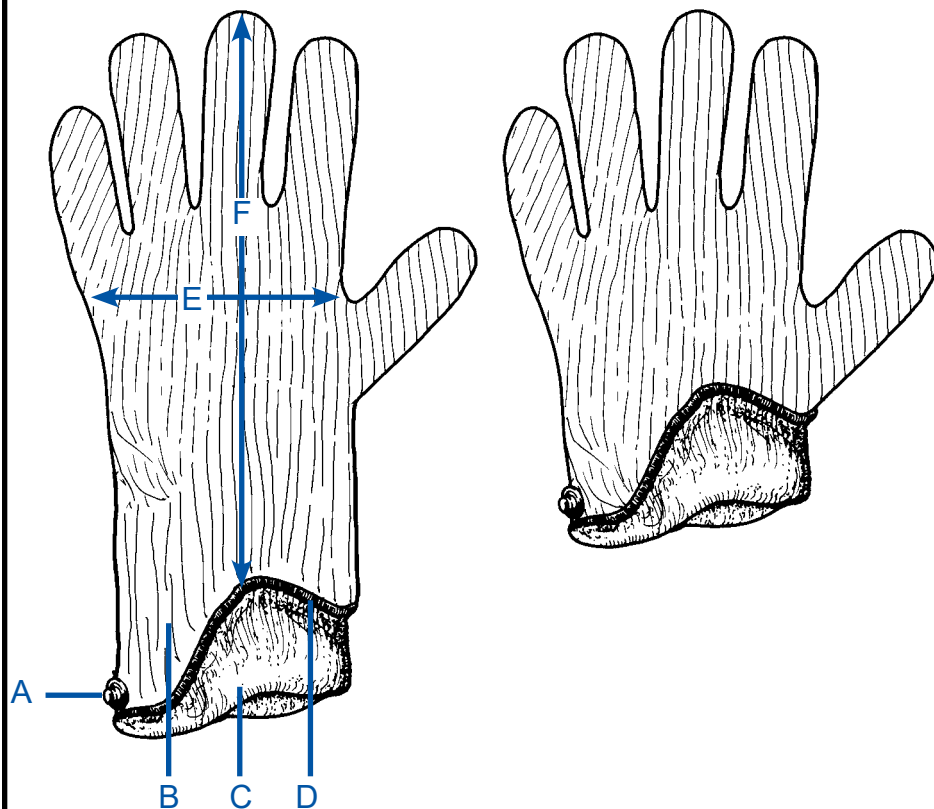

- A. 0.160" (4mm) stud to fit 1/8" (4mm) spring loaded medical snap.*
- B. Exterior fabric is 97.9% textured polyester. Conductive fiber filament (Rgp < 1×10^7 ohms) made of carbon suffused nylon 6 monofilament spaced every 0.25 inches. Material will not slough and can be precision cleaned for use in cleanrooms down to class 100.
Can be washed multiple times in a mild detergent**.
- C. Inner lining constructed of Nomex® makes gloves ideal for use in any process involving heat up to 200°F (93.3°C).
- D. Conductive, color coded cuff (see chart below) interconnects with the conductive fiber and snap providing a true and rapid ground path.

Extended Cuffs

Item # (Sold in Pairs)	Size	Cuff Color	E	F
17007	Small	Tan	9"	13"
17008	Medium	Blue	9"	13 1/4"
17009	Large	Brown	9"	13 1/2"

Standard Cuffs

Item # (Sold in Pairs)	Size	Cuff Color	E	F
68112	Small	Tan	9"	9 3/8"
68111	Medium	Blue	9"	10"
68110	Large	Brown	9"	10 3/8"

*Glove should be grounded to verify dissipation of static charges.
Use Desco 09480 coil cord or equivalent to ground.

**Glove Laundering

For proper operation, the ESD Gloves must be laundered periodically. Woolite works well. Liquid detergents are better than dry in that there is less caking and frictional wear. Launder glove in cool or warm water, tumble dry with low heat or hang dry. Machine washing works well if using a standard house machine on gentle cycle. It is not recommended to launder these gloves in heavy industrial laundry machines as it will lead to premature wear. Gloves should be tumbled dry using low heat. DO NOT BLEACH. After laundering, verify (Rgp) < 1×10^7 ohms.

*E measures around the hand at the fullest part (excluding thumb)
F measures from the tip of the middle finger to the base of the hand
Unless otherwise noted, tolerance $\pm 1/2$ "*



Made in the
United States of America

HOT GLOVES, STATIC DISSIPATIVE

DESCO

DESCO WEST: 3651 WALNUT AVE, CHINO, CA 91710 WEBSITE: Desco.com
PHONE: (909) 627-8178

DESCO EAST: ONE COLGATE WAY, CANTON, MA 02021-1407
PHONE: (781) 821-8370

**DRAWING
NUMBER**
68110

DATE:
June
2017