# T3-CLCK-SM20 SERIES








The T3-CLCK-SM20 is designed exclusively for the CLOCKAUDIO™ SM-20-RF Shock Mount adaptor.

This stylish, mini Tablebox is available in three finishes (brass, silver, or black) to compliment a variety of decors.

The T3-CLCK-SM20 is a simple installation requiring a 2-inch round hole. Simple mounting instructions are on the back of this sheet.


Designed to accommodate a wide range of tables and lecterns with ¾-inch to 3¼-inch thick surfaces. All necessary hardware is provided as part of the assembly to mount a CLOCKAUDIO™ SM-20-RF Shock Mount (Not included).

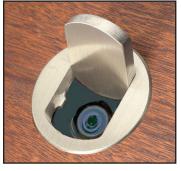



## **APPLICATIONS**

- Conference and Boardroom Tables
- Lecterns
- Judicial Benches and Tables
- Courtrooms
- State Houses
- Pulpits

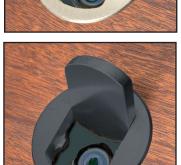



\* CLOCKAUDIO™ SM-20-RF shock mount adapter not included.



205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com

#### FSR Inc.

244 Bergen Boulevard, Woodland Park, NJ 07424 Phone: 973.785.4347 · Fax: 973.785.4207

Order Desk: 1-800-332-FSR1


Web: www.fsrinc.com · E-mail: sales@fsrinc.com

## **SPECIFICATIONS**

#### TOP

Material — Aluminum, Brass Finish — Anodized Black Clear Brass Clear Lacquer Thickness — .312" Inner Diameter — 1.975" Outer Diameter — 2.175"

Parts Included

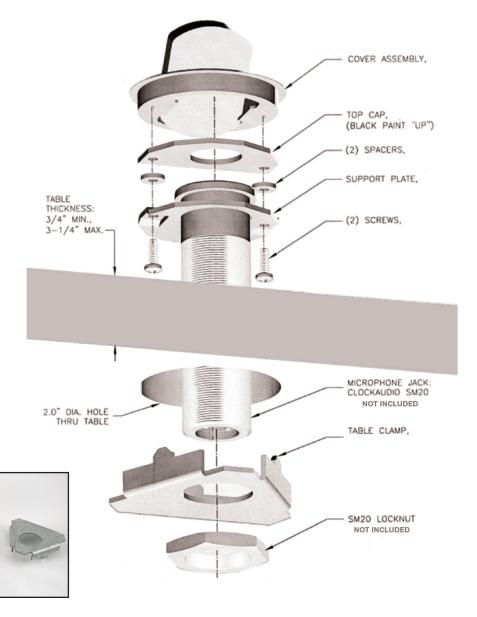

### T3-CLCK SM20 MOUNTING INSTRUCTIONS

NOTE: Perform SM-20 or SM-20-RF switch settings BEFORE installing it into the T3-CLCK-SM20 Mount. Verify that the table surface thickness is between 3/4" and 3 1/4", and that there is adequate clearance below the mounted assembly for the XLR connector and cable.

Drill a 2" diameter hole in the table in the desired mounting ocation. Insert the SM20 or SM-20-RF Microphone Mount into the T3-CLCK support plate and fasten to the top cap and cover assembly using the two screws and spacers provided. Use the illustration above to confirm proper parts placement and orientation. Place the assembled T3-CLCK-SM20 into the 2" hole in the table surface and use the table clamp and locknut to secure to the table.

Specifications are subject to change without notice.





