



www.jbctools.com

INSTRUCTION MANUAL



WS440 High-Temperature Wire Strippers

Ref. WS440-A

Index

	Page
1. Packing List	3
2. Safety	4
3. Features & Connections	5
4. Changing Cartridges	6
5. Adjustable Strip Gauge	7
6. Stripping a Wire	7
7. Changing Grips	8-9
8. Accesories	10
9. Notes	11
10. Specifications	12

Packing List

The following items are included:

WS440 High-Temperature Wire Strippers 1 unit
Ref. WS440-A



Metal Brush.....1 unit
Ref. 0022793



Manual 1 unit
Ref. 0023034



Safety

Warning

- Do not touch the blade or the metal parts around.
- Do not allow the blade be close to flammable materials.
- Keep your workplace clean and tidy. Wear appropriate protection glasses and gloves when working to avoid personal harm.
- This appliance can be used by children over the age of eight and also persons with reduced physical, sensory or mental capabilities or lack of experience provided that they have been given adequate supervision or instruction concerning use of the appliance and understand the hazards involved.
- Maintenance must not be carried out by children unless supervised.
- Place the tool on the stand when is not in use.
- Turn off the power when not in use, changing parts or storing.

Caution

- Do not use the Wire Stripper for other applications than wire stripping.
- Do not modify or customize the Wire Stripper.
- Do not hit the blade against workbench to eliminate stripped insulation debris, This behavior would damage the blade.
- Remove power from the tool by holding the plug, not the wires.
- Be careful with the fumes produced when stripping. We recomend to use a fume extractor.

Features and Connections


WS Control Unit

(Required but not supplied)



Stand cable
Ref. 0011283



Stand
Ref. WS-SA
(Required but not supplied)

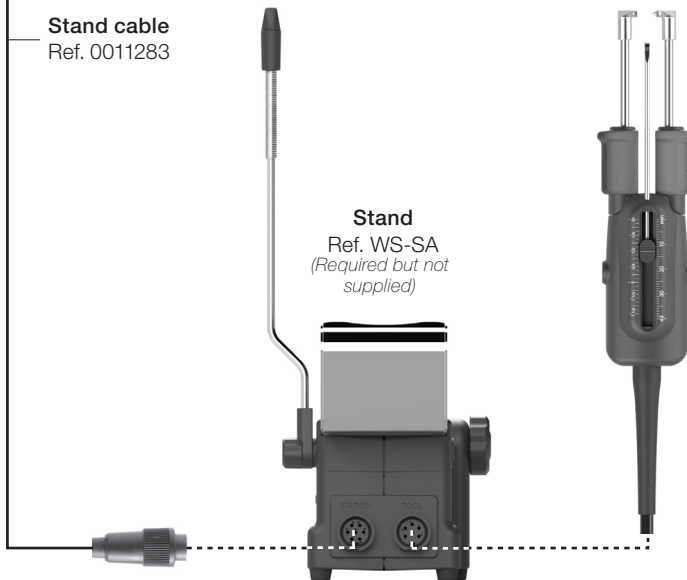


W440 Cartridge
(Required but not supplied)

WS440 High-Temperature Wire Strippers
Ref. WS440-A


Changing Cartridges

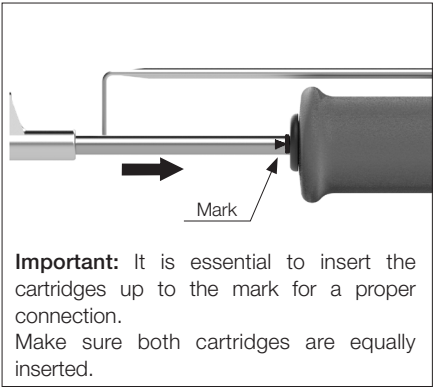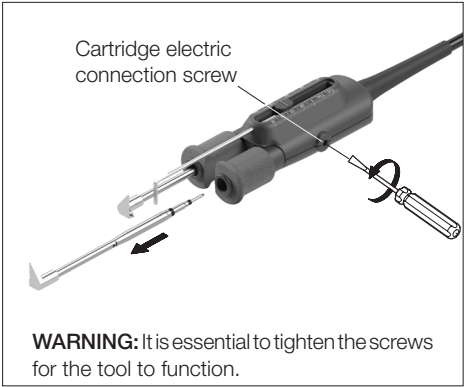

W440 cartridges have a proper centering to ensure a good functionality. Before tightening the screws, align the cartridges in working position using a flat pliers (Ref. PLR-195).

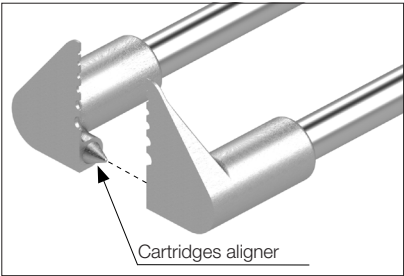


W440 Blade Range

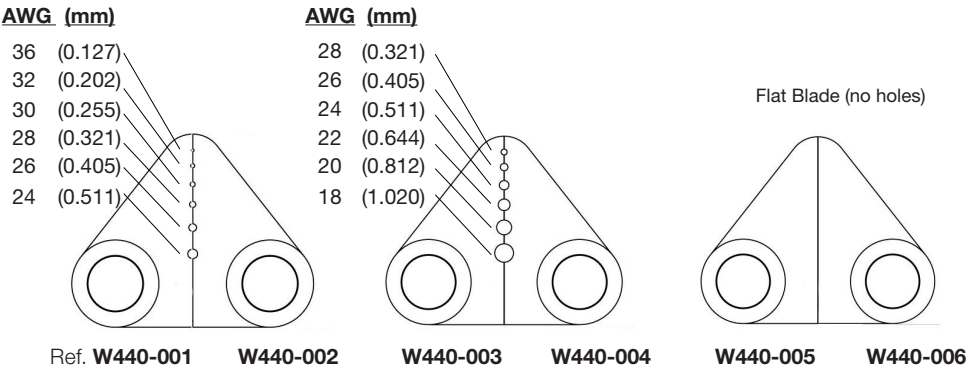

For **special blade cartridges** contact us on customtips@jbctools.com


Adjustable Strip Gauge

Adjust the strip gauge according to your stripping requirements.

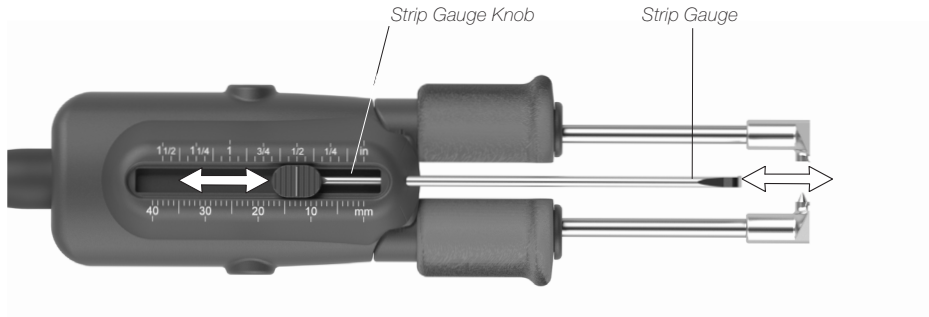


Stripping a Wire

1. Align

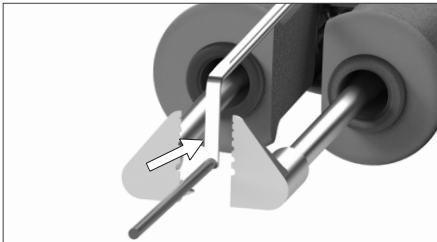


Place the wire touching the strip gauge.

2. Close

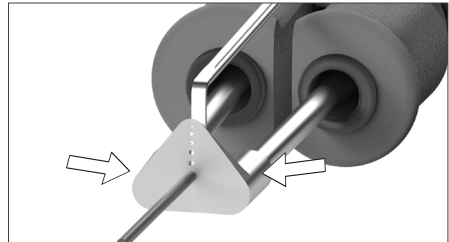

Pinch the wire with the blades according to the diameter of the wire to be stripped. The pinched area will be melted by heat.


2. Remove

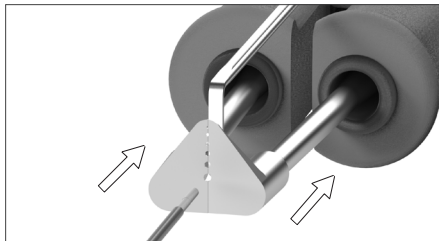


Pull toward the wire end to be stripped.

Changing Grips


1. Insert the slide-on tabs into the new grip.

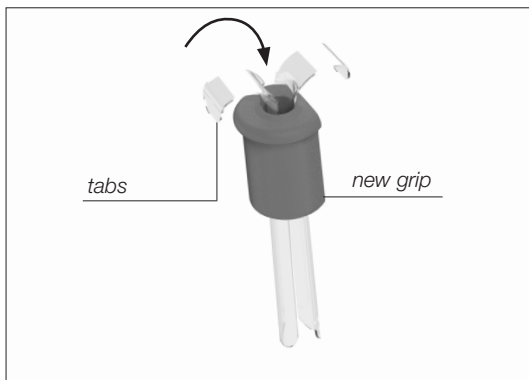


2. Place the tabs inserted into the grip at the top of the handle.

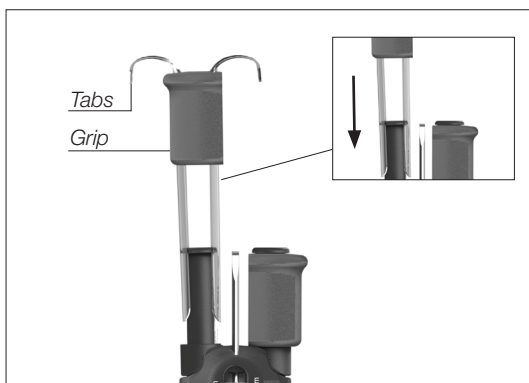


3. Push the grip with the tabs onto the handle.

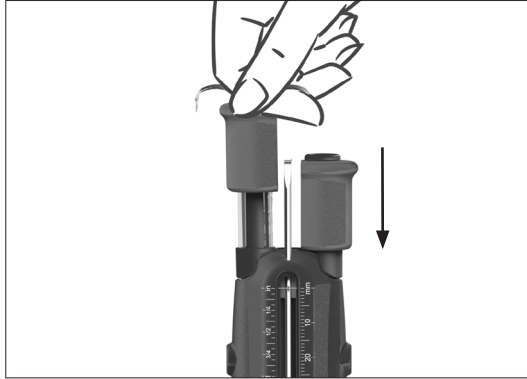


4. To remove the tabs, hold the grip and pull them out. Use pliers if necessary.

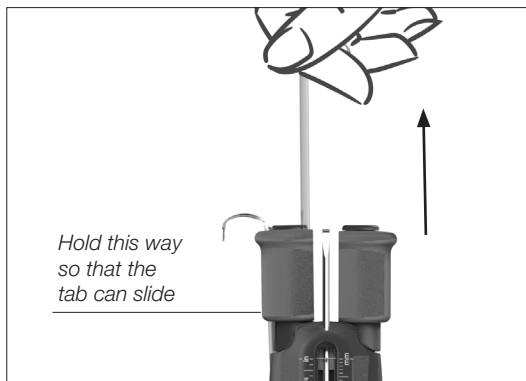

Accessories

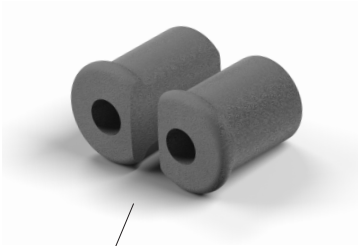

Grips
Ref. 0023533

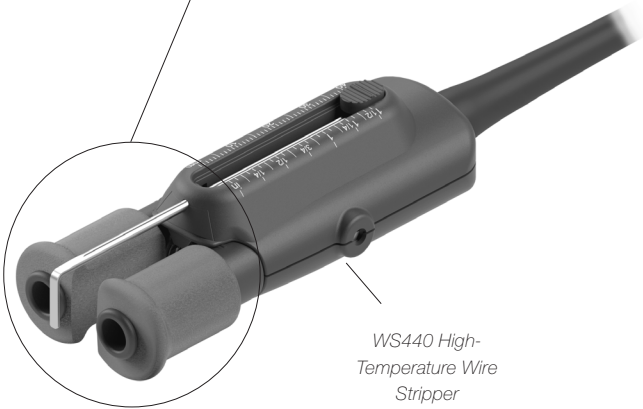

WS440 High-Temperature Wire Stripper

Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Specifications

- Weight: 0.12 kg (0.26 lb)
- Dimensions: 97 x 36 x 27 mm (3.82 x 1.42 x 1.06 in)
- Package Dimensions: 277 x 73 x 50 mm (10.91 x 2.87 x 1.97 lb)
- Package Weight: 0.16 kg (0.35lb)
- Max. power per cartridge: 40W
- Cable length: 1,2 m (47.2 in)

JBC

Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear or misuse.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.

Get 1 extra year JBC warranty by registering here:
<https://www.jbctools.com/productregistration/>
within 30 days of purchase.



This product should not be thrown in the garbage.

In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.

