
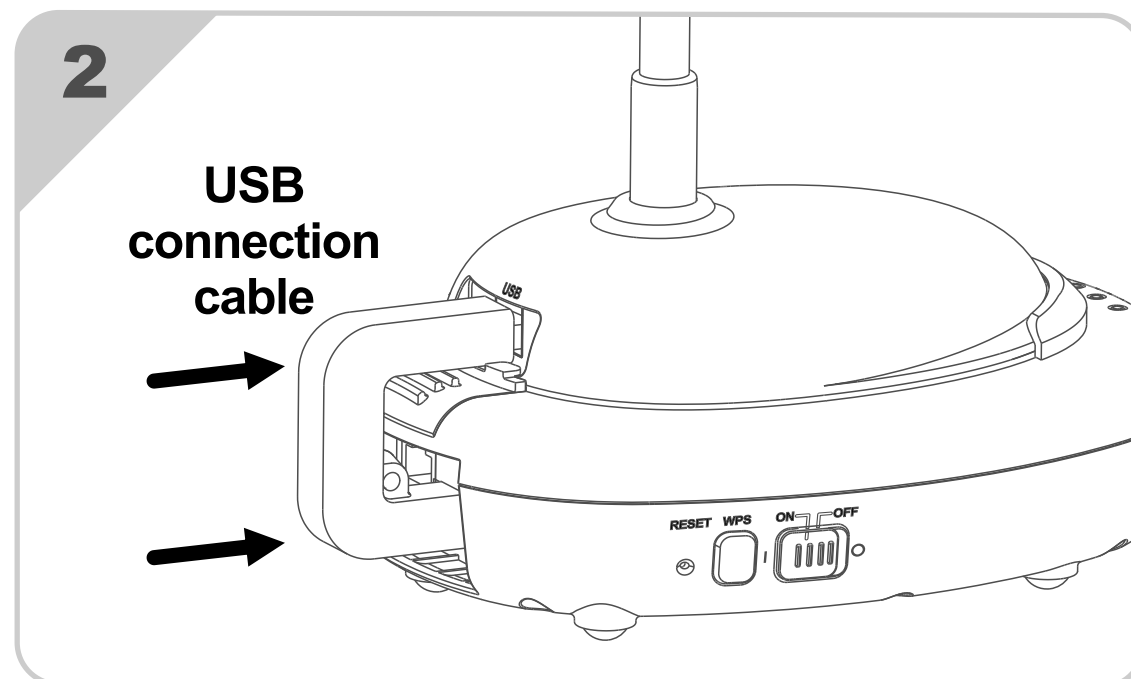


DC-W50 Quick Start Guide

Important

- * Please activate your warranty at www.MyLumens.com/reg
- * To download the latest version of quick start guide, multilingual user manual, software, or driver, etc., please visit LumensTM <http://www.Mylumens.com/support.php>
- * To ensure successful installation, please be sure to follow each of the following steps.

1. Installation

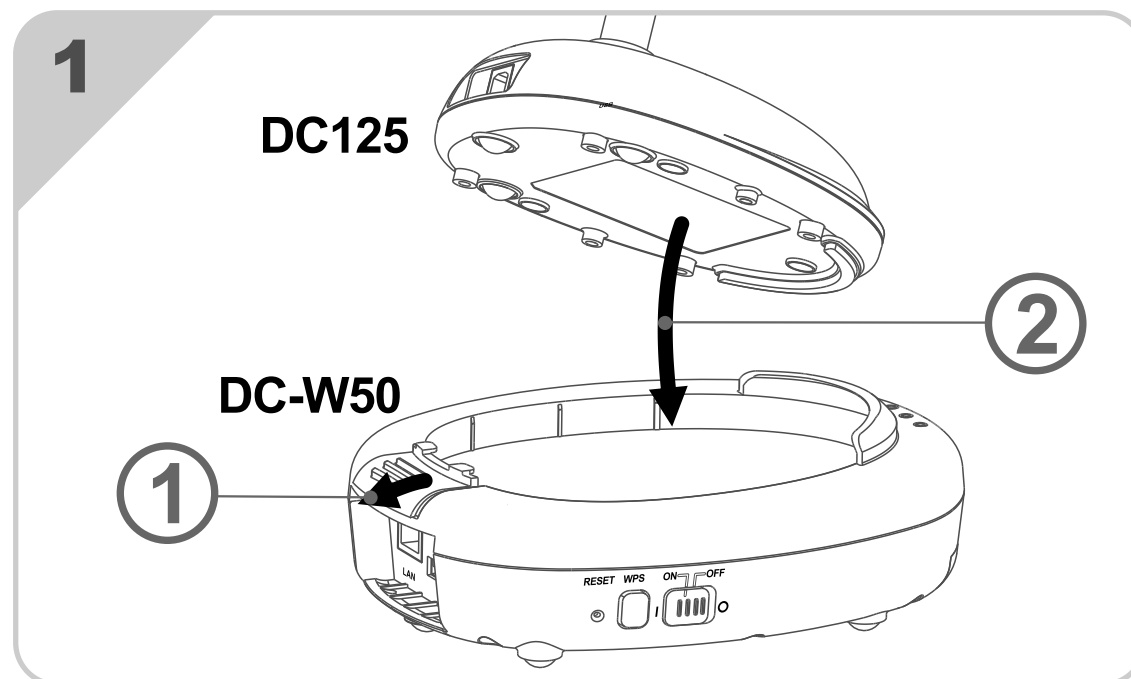

2. Connection Setting

2.1 Connecting to a Network

1. Please turn on the DC-W50 first.
2. Open the wireless connection list in the computer.
3. In the wireless connection list, select [Lumens_Wireless_Flyer], press [Lumens_Wireless_Flyer] and enter connection password (default password: ladibugflyer) to activate the connection.


2.2 Change the SSID

1. Open the Internet Explorer browser, and enter [192.168.2.1] (default) in the address bar.
2. Enter the login name [Admin] and enter the default password [1234] and click [Login].
3. Select [Basic] and enter the name of the new device into [Device Name] and the new SSID into [SSID] as shown in the figure below. (Only English letters and numbers are accepted)
4. Click [Save] to apply changes. Repeat Steps 1-3 of **2.1. Connecting to a Network** to select the newly created wireless network.

<Note>

Device Name : Name of the document camera device

SSID :Name of wireless network device

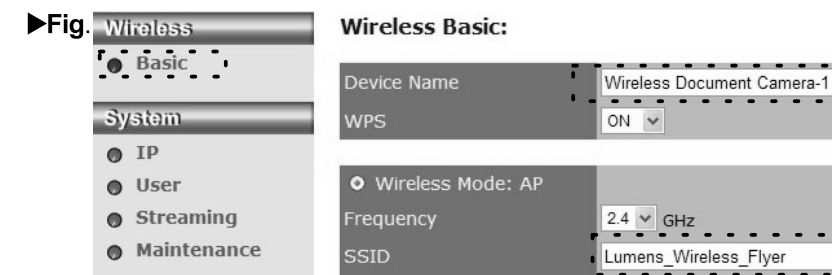

3. Start Using

1. Charge the unit for 3 hours before the first use.
2. Switch power to [ON].(Note: When the unit is full charged, indicator lights blue.)
3. Connect the DC-W50 to PC by following Steps 1-3 of **2.1. Connecting to a Network**.
4. Modify [Device Name] and [SSID] before the first use. Please refer to **2.2 Change the SSID**.
5. Double click to active software.
6. Click and select the Wireless Document Camera.
7. Select "Wireless Document Camera -1".(Default document camera)
8. Select login account [Admin].
9. Enter password (default password is [1234]) and click [Login].
10. If a firewall notification appears on initial application, click on [WLAN] and select [Allow access].

<Note> For the operating instructions of the software LadibugTM, please download the **Ladibug Quick Start Guide** from the website.