


The MimioView™ document camera works seamlessly with MimioStudio™ classroom software to display documents, 3-D objects, and microscope slides for your entire class to view. You can use the MimioView camera to display still images or live video.

Touchboards

205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

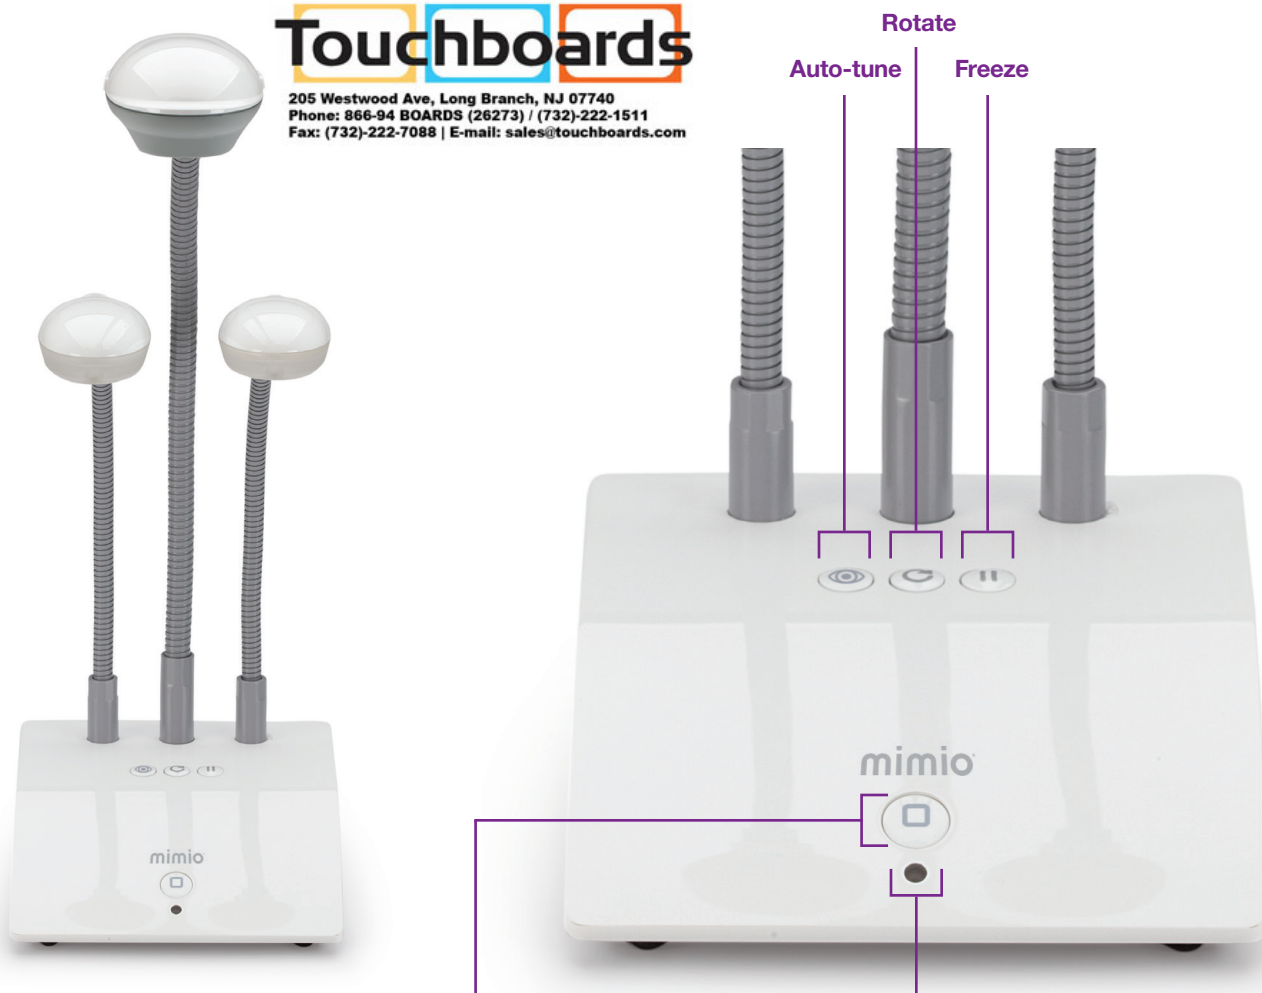

View Button

Press to open the MimioStudio™ View window and turn the camera and lights on.

Press again to close the MimioStudio View window and turn the camera and lights off.

Status Light

Off: Not receiving power; USB cable is not connected, or computer is turned off.

Solid Green: MimioView is connected and receiving power; MimioStudio software is running.

Flashing Green: MimioView is connected and receiving power; MimioStudio software is not running.