
Chi Flipper

Rectangle

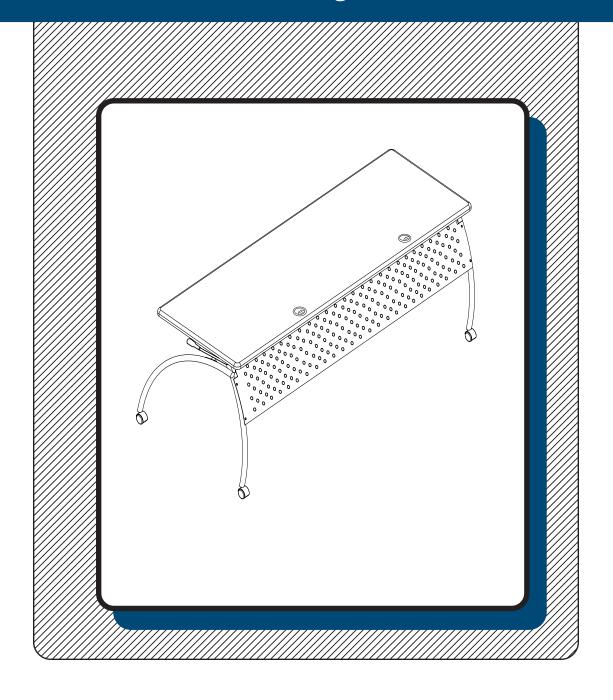

Assembly Instructions

Chi Flipper - Rectangle


Part Drawing	Description	Qty	Part	Drawing	Description	Qty
P1 P1	Table Top	1 EA		I	Hardware List	
			А		M6*12mm Socket Scre	w 10 EA
			В		M6*45mm Socket Scr	ew 5 EA
P2	Left Leg	1 EA	B1		M6*57mm Socket Screen	ew 2 EA
		-	С		Plastic Grommet	2 EA
	ð		D		2" Locking Caster	2 EA
P3	Right Leg	1 EA	D1		2" Caster	2 EA
			E		Allen Wrench	1 EA
P4	Bottom Support	1 EA	F	2	Caster Wrench	1 EA
			G		Spring Washer	4 EA
P5	Top Support	1 EA		í _M .	Wood Corous	4 5 4
			Н		Wood Screws	4 EA
P6	Handle	2 EA	ı	0	Connecting Bracket	2 EA
 P7	Lock Rod	1 EA	J	-	Spring	2 EA
	LOUK NOU	I LA				
P8	Front Panel	1 EA				

Assembly Diagram

READ THROUGH INSTRUCTIONS FROM BEGINNING

TO END BEFORE STARTING TO ASSEMBLE UNIT.

- 1.) Identify and Separate all the Parts and Hardware.
- 2.) Attach the Right Leg(P3) and the Left Leg (P2) to the Bottom Support (P4) using two Screws (A) for each leg as shown in Illustration #1. Tighten Screws (A) using Allen Wrench (E). Insert Top Support (P5) between the Right Leg (P3) and Left Leg (P2) top tube and attach using one Socket Screw (B1) through each leg. Place a Spring Washer (G) on each caster stem and screw in two Locking Casters (D) and two Casters (D1) into the threaded holes in the bottom of the legs as shown. Tighten with Caster Wrench (F).

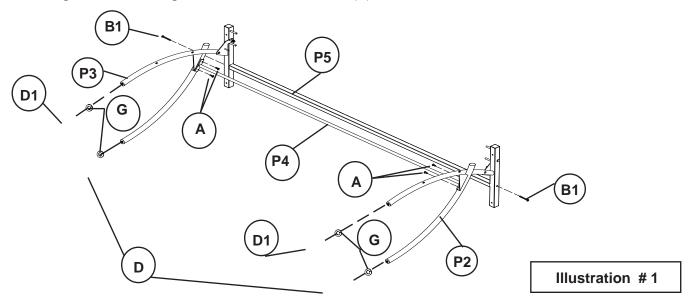

3.) Insert a Handle (P6) through the large hole at the top of each leg. Place the Lock Rod (P7) between the legs. Insert the handle into the end of the Lock Rod (P7), align holes and secure by using one Screw (A) in each Handle (P6) as shown in Illustration #2. Attach one end of the Spring(J) on the leg using one Screw (A) and hook the other end into the hole on Lock Rod (P7) as shown. Repeat this Step for the Spring(J) on the opposite side.


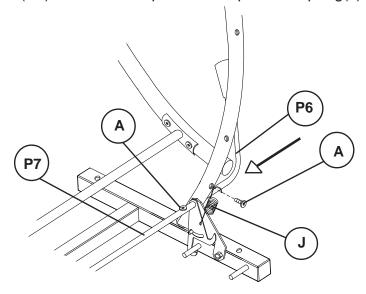


Illustration #2

4.) Place Table Top (P1) upside down on a padded surface. Place the assembly from Step 3 over the embedded threaded inserts in the Top Panel (P1) making sure the Leg's braces are to the rear as shown in Illustration #3. Attach the frame assembly to the Top Panel (P1) using two Screws (B) through each Leg's top tube and one Screw (B) through the Top Supprt (P5).

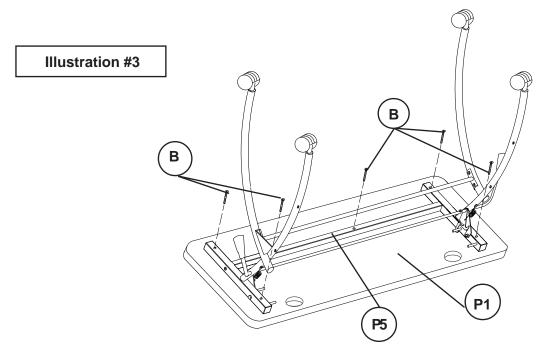

5.) Attach the Front Panel (P8) to the Right Leg (P3) and Left Leg (P2) using two Screws (A) for each as shown in Illustration #4. The table can now be turned over.



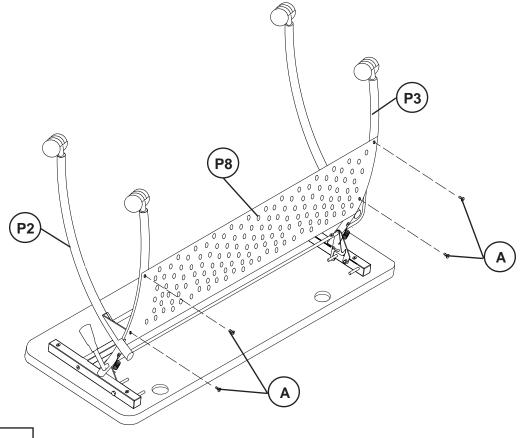


Illustration #5

- 6.) To install Grommet (C), separate parts and press Grommet Sleeve into the round opening in Top Platform (P1) as shown in Illustration #4.
- 7.) Snap the plastic Cap into the Sleeve as shown in Illustration #5.

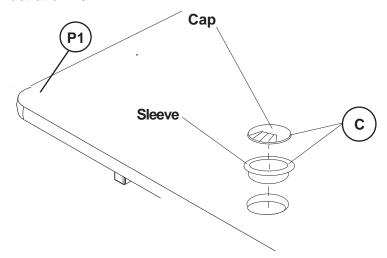

8.) Attach the optional Connecting Plates (I) using two Wood Screws (H) as shown in Illustration #6.

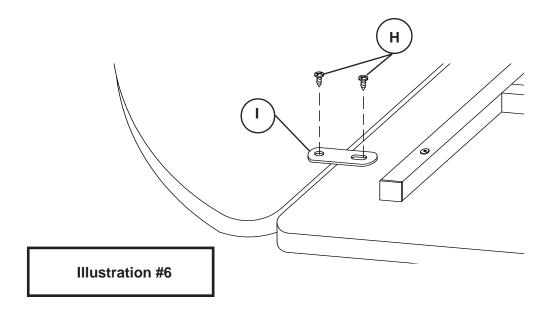

Chi Flipper

Rectangle

