






THR-100-COUNTER

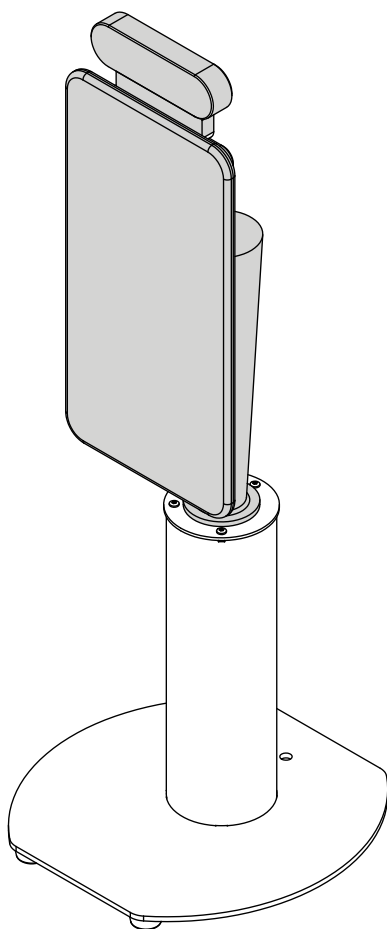

⚠ WARNING

ENG - Before installing make sure the supporting surface will support the combined load of the equipment and hardware. Screws must be tightly secured. Do not overtighten screws or damage can occur and product may fail. Never exceed the Maximum Load Capacity. Always use an assistant or mechanical lifting equipment to safely lift and position equipment. This product is intended for indoor use only. Use of this product outdoors could lead to product failure or personal injury. Be careful not to pinch fingers when operating the mount. For support please call customer care at 1-800-865-2112.

ENG Tools Needed for Assembly.

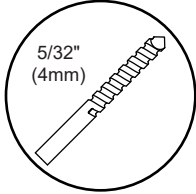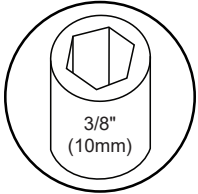

ENG Symbols




ENG WARNING



ENG Screws must get at least three full turns and fit snug.



ENG Skip to step.

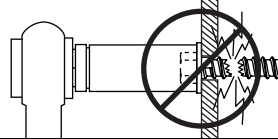


ENG Do not overtighten screws.




ENG To properly tighten screws: Tighten until screw head makes contact, then tighten another 1/2 turn. Do not overtighten screws.


1

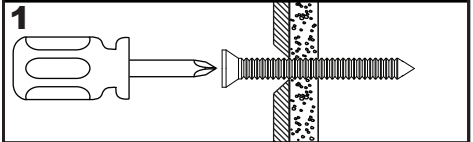


2

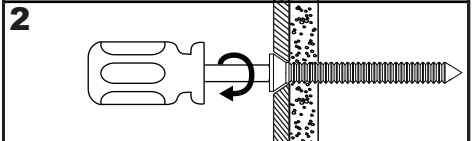

3

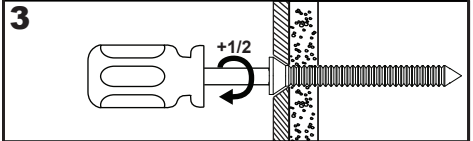

4

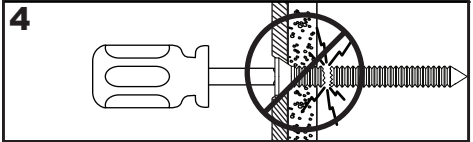


ENG Parts (Before beginning, make sure you have all parts shown below).

Parts List

		THR-100-COUNTER	
Description	Qty	Part #	
A countertop weldment	1	147-4895	
B mounting plate	1	147-4794	
C M3 x 6mm screw	3	520-2153	
D 3/32" allen wrench	1	560-1097	
E adhesive rubber feet	4	570-1036	
F wood screw	1	5S1-015-C03	


B (1)

mounting plate



A (1)

countertop weldment

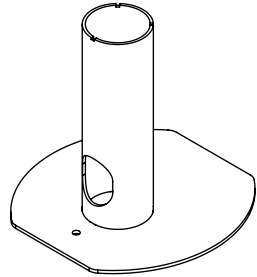

D (1)

3/32" allen wrench



C (3)

M3 x 6mm




E (4)





rubber feet



F (1)



#14 x 2-1/2" wood screw



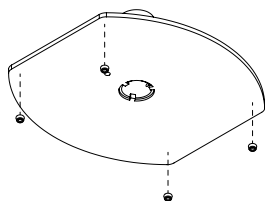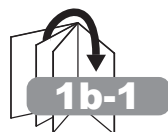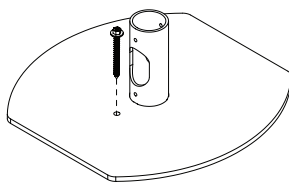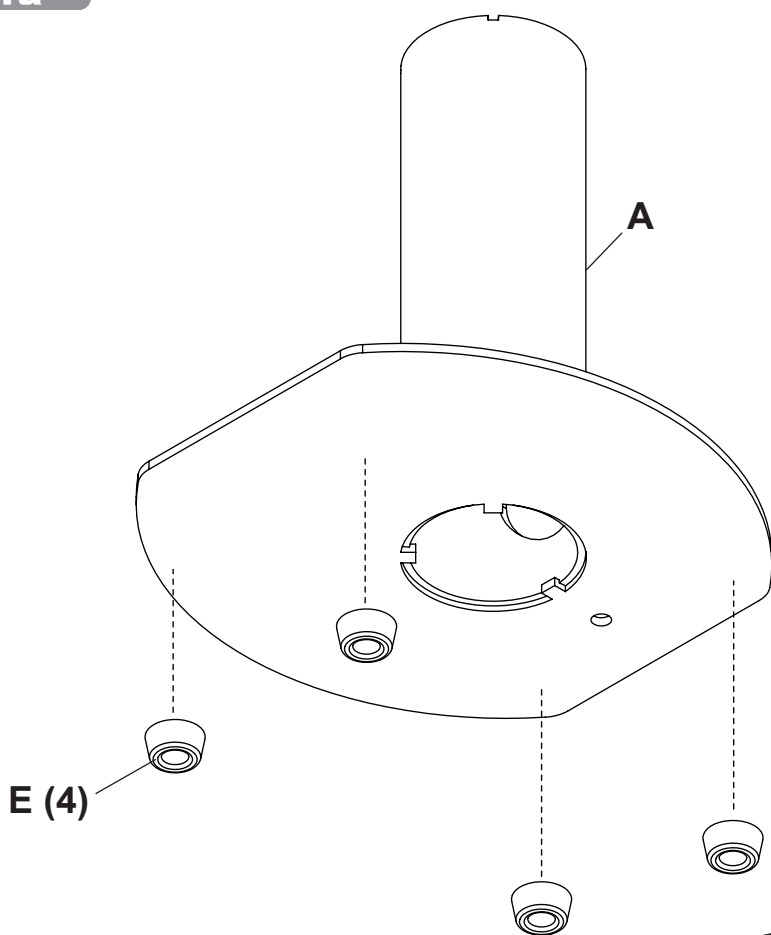1**ENG** Free standing**ENG** Secured**1a**


1b-1

ENG Drill mounting holes into supporting surface (2.5" (64mm) minimum depth required).


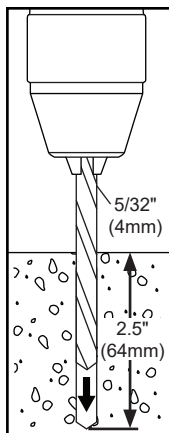
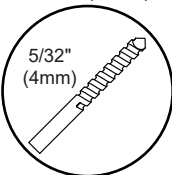


1b-2


ENG Install using wood screw provided.

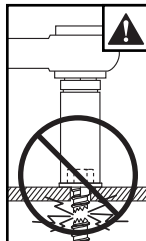

ENG	Maximum 80 in. • lb (9 N.M.).
ESP	Máxima 80 in. • lb (9 N.M.).
FRN	Maximum 80 in. • lb (9 N.M.).
DEU	Maximum 80 in. • lb (9 N.M.).
NEL	Maximaal 80 in. • lb (9 N.M.).
ITL	Massima 80 in. • lb (9 N.M.).
ČES	Maximum 80 in. • lb (9 N.M.).
SLK	Maximum 80 in. • lb (9 N.M.).
POR	Máxima 80 in. • lb (9 N.M.).
TÜR	Maksimum 80 in. • lb (9 N.M.).

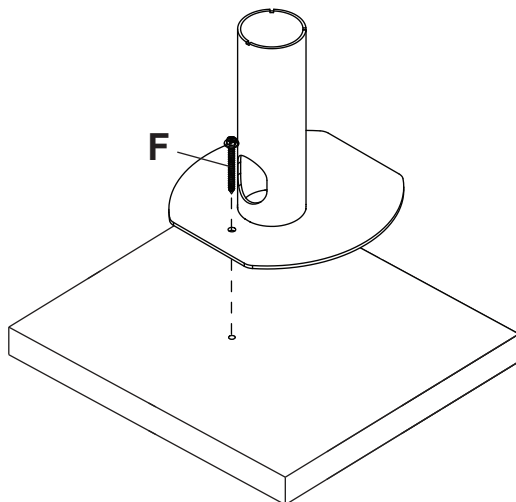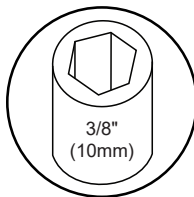
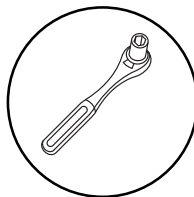


2

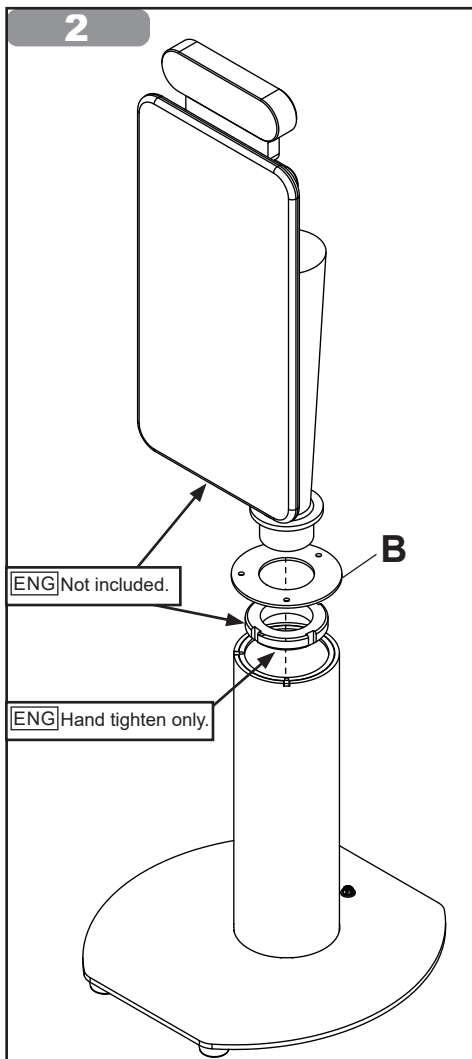

3

[ENG] To avoid stripping screws, do not install at an angle.

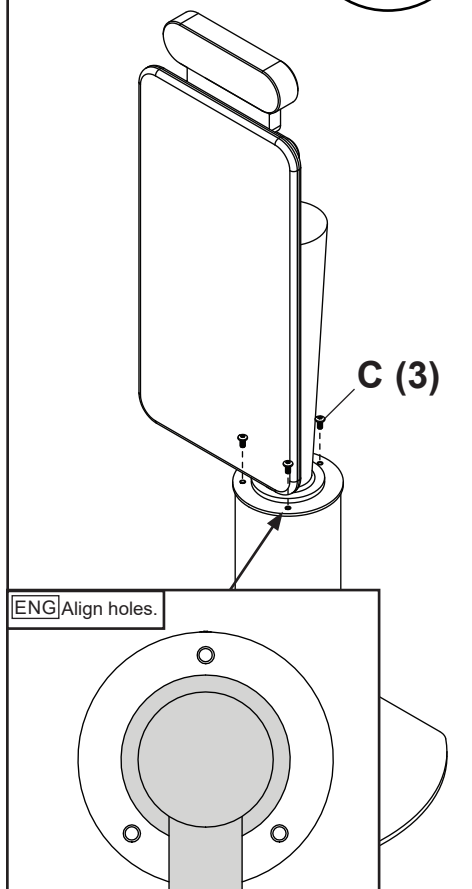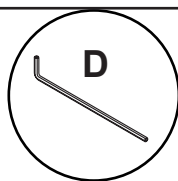

ENG This page intentionally left blank.

ENG	Warranty	ESP	Garantía	FRN	Garantie	DEU	Garantie	NEL	Garantie
ITL	Garanzia	ČES	Záruka	SLK	Záruka	POR	Garantia	TÜR	Garanti

www.peerless-av.com/warranty

peerless-AV®

Peerless-AV

2300 White Oak Circle
Aurora, IL 60502
Email: tech@peerlessmounts.com
Ph: (800) 865-2112
Fax: (800) 359-6500
www.peerless-av.com

© 2020, Peerless Industries, Inc.

Peerless-AV Europe

Unit 3 Watford Interchange,
Colonial Way, Watford, Herts,
WD24 4WP, United Kingdom
Customer Care
44 (0) 1923 200 100
www.peerless-av.com

© 2020, Peerless Industries, Inc.

Peerless-AV América Latina

Av. de las Industrias 413
Parque Industrial Escobedo
General Escobedo N.L., México 66062
Servicio al Cliente
01-800-849-65-77
www.peerless-av.com

© 2020, Peerless Industries, Inc.