


Assembly Instructions:

To purchase parts or accessories, please contact us at
www.spectrumfurniture.com
 1-800-235-1262
 Thank you for choosing Spectrum products!



(8) 0100167
 8-32 x 1/2" Thread-cutting Screw



**Rear Rack Rail for
 Instructor Media Console**
 #68100 - 29"H (14RU)
 #68150 - 36"H (18RU)

Before you begin, please make sure all parts and proper quantities are included. Any parts damaged during shipment must be reported within 15 days of receipt. To report information regarding damages or if you have any questions, please call 1-800-235-1262.

Tools Required:
 Phillips Screwdriver or
 Electric Drill w/ Phillips Driver

Rack Rail Installation

- Open the rear equipment rack door.
- Align each rack rail with the pre-drilled equipment rack mounting holes. **Figure 1.** Be sure the short leg on each rail points inward as shown.
- Attach each rail to the equipment rack frame with (4) 8-32 x 1/2" PH thread-cutting screws, while making sure the screws are installed straight. An electric drill can be used to install the screws, but make sure the drill torque is set so the screws do not strip out. Do not tighten completely until all screws are installed.



205 Westwood Ave, Long Branch, NJ 07740
 Phone: 866-94 BOARDS (26273) / (732)-222-1511
 Fax: (732)-222-7088 | E-mail: sales@touchboards.com

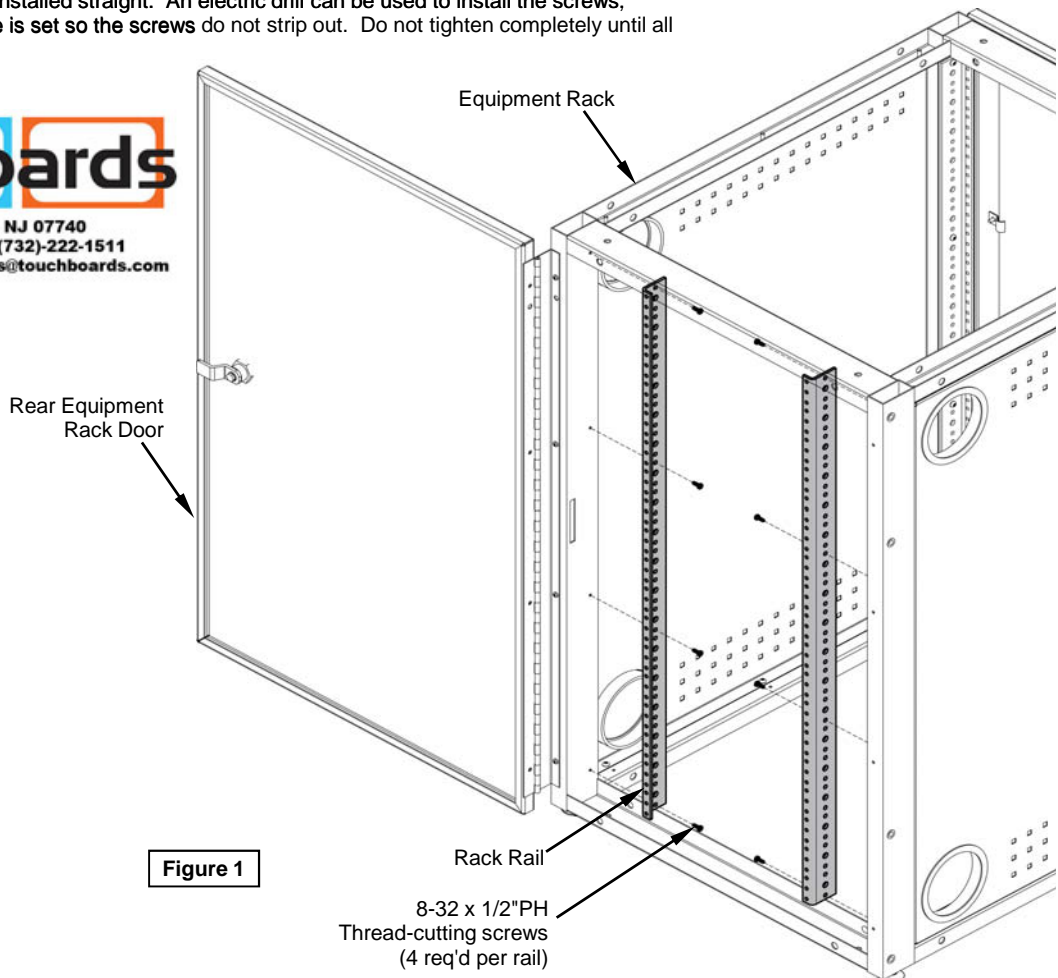


Figure 1



925 First Avenue, PO Box 400, Chippewa Falls, WI 54729 Ph: 1-800-235-1262 Fax: 1-800-335-0473
 E-mail: spectrum@spectrumfurniture.com web: www.spectrumfurniture.com