Assembly Instructions

Important

Before you begin, please make sure all parts and proper quantities are included. Any parts damaged during shipment must be reported within 15 days of receipt. To report information regarding damage, to purchase parts or accessories, or if you have any questions, please contact us at:

> www.spectrumfurniture.com 715-723-6750, 800-235-1262


Thank you for purchasing Spectrum products!



(1) 0118596 Cube top



(1) 0101382 #14 x 7/8" PHSM



(1) 0118879 Cube bottom



(16) 0100167 8-32 x 1/2" PH thread-cutting screw



(4) 0102297 7mm x 30mm JCW screw







(4) 0107139 **Bumper Stop**




(1) 025039 4mm Hex wrench

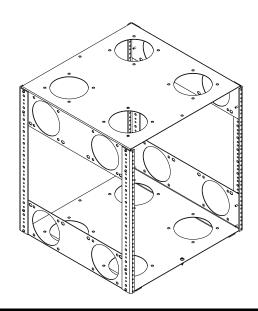

Rack Cube 55197



1. Assemble Cube

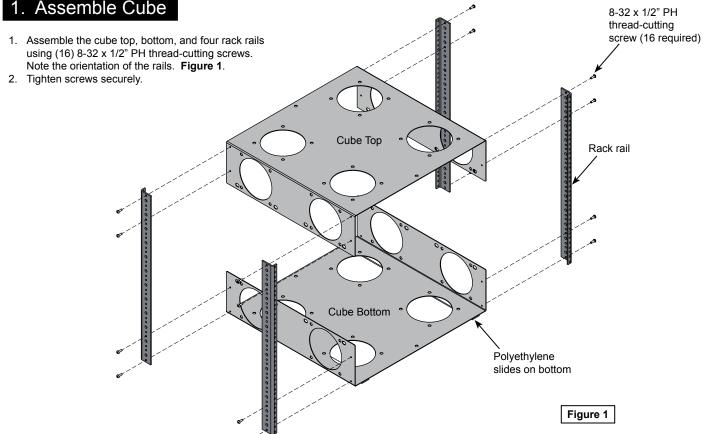

2. Install Cube

- Determine which side of the lectern the cube will be installed (left or right side). Removing the doors using the quick-release levers will provide better access.
- Install the (4) bumper stops to the base panel as shown with one 7mm x 30mm JCW screw each. Figure 2.
- 3. Install the cube assembly into the lectern.
- 4. Secure the cube to the base panel with (1) #14 x 7/8" PHSM screw and tighten securely.
- 5. The bumper stops can be rotated if adjustment is necessary.

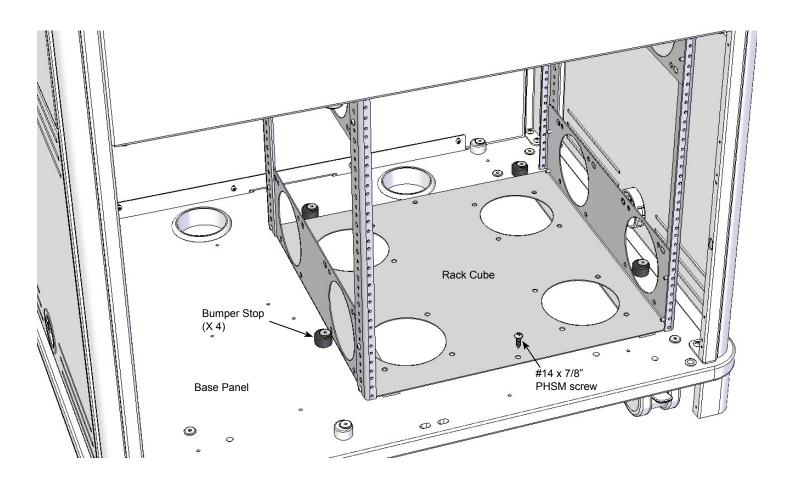


Figure 2

The rack cube provides 12RU of rack space and is easily removed from the lectern. This simplifies installation of equipment and provides the ability to integrate equipment remotely. The cube can be installed into the lectern at a later date or when convenient.

The cube also provides mounting capabilities for multiple cooling fans if necessary. Compatible with most 4.75" cooling fans with 4.13" mounting hole spacing (12 mounting locations available).

