

Tech Tub²® Trolley with UV Tub



Assembly Guide

FTT706-UV_2010-UV_2010-USB-UV_2020_A

Check out our other products online at
www.copernicused.com

For assistance, please contact us:

1-800-267-8494

Email info@copernicused.com


Have your packing slip ready for reference

WARNING




- This product is meant to be assembled by an adult.
- In its unassembled state, small parts present a hazard.
- To be used under direct supervision of an adult.

Tech Tub² Trolley with UV Tub
– charges 6 devices
(FTT706-UV)

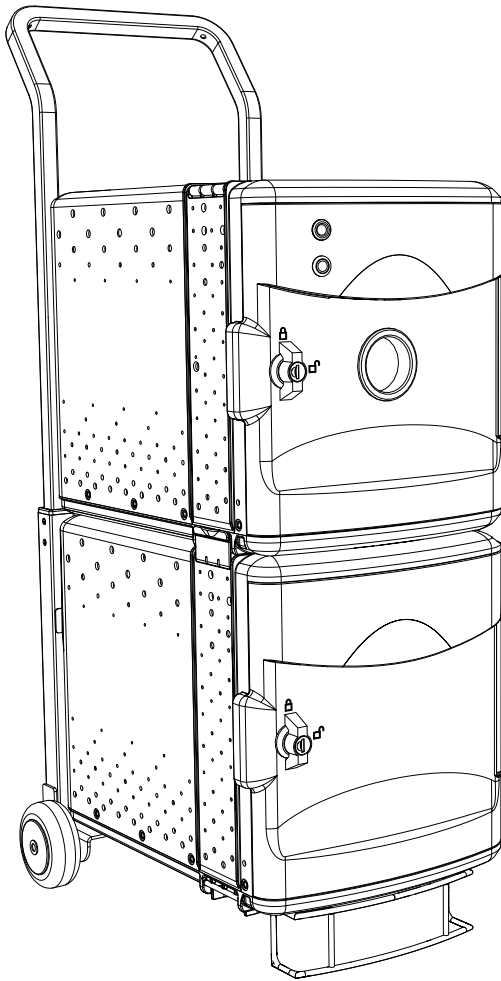

Tech Tub² Trolley with UV Tub
– charges 10 devices
(FTT2010-UV)
Tech Tub² Trolley with UV Tub
– USB charges and syncs 10 iPads
(FTT2010-USB-UV)

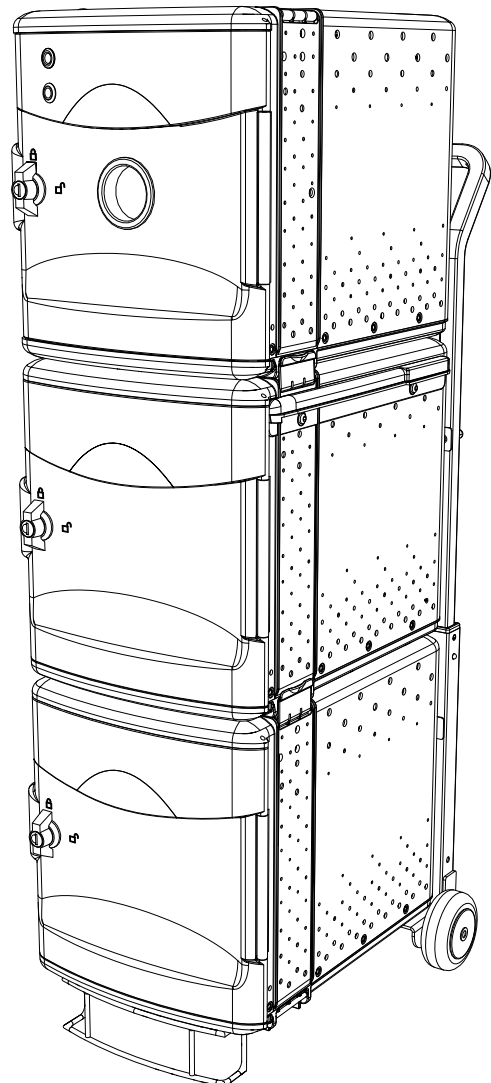

Tech Tub²® Trolley with UV Tub



Assembly Guide

FTT706-UV_2010-UV_2010-USB-UV_2020_A

Check out our other products online at
www.copernicused.com

For assistance, please contact us:

1-800-267-8494

Email info@copernicused.com

Have your packing slip ready for reference

Dear Educator,

Thank you for purchasing the Tech Tub²® Trolley with UV Tub. We hope it meets all your expectations and you and your students enjoy using it at your school.

If you have any questions, concerns or ideas on how we can improve please let us know by contacting our Customer Solutions Ninjas at 1-800-267-8494 or info@copernicused.com.

Happy teaching,

Kaylyn Belcourt
President

We do not inherit the earth from our ancestors, we borrow it from our children.	Change is the end result of all true learning.	What you leave behind is not what is engraved in stone monuments, but what is woven into the lives of others.	Education is the most powerful weapon which you can use to change the world.
---	--	---	--

LEO BUSCAGLIA

NORTH AMERICAN

PROVERB

PERICLES

NELSON MANDELA

Life Time
Tech Tub²
Warranty

Register your Product

Registering your warranty ensures we have all the information we need to make any future warranty claims quick and easy. Please visit www.copernicused.com/warranty and complete the form within 10 business days from product assembly. By registering your product, you will be entered into a draw to win Copernicus product.

Life Time
Frame
Warranty

Make a Warranty Claim

We offer a Lifetime Warranty on almost everything we make. Please call 1-800-267-8494 or email info@copernicused.com to start your warranty claim. Proof of purchase will be required upon warranty claim (i.e. copy of invoice).

1 Year
Bulbs and
Electrical
Components



Warning! Hazard Risks!

Please read the warnings below for important safety information regarding your product. Failure to read these warnings or to follow the instructions below could result in personal injury or damage to your product that could void your warranty.



Small
Parts

In its unassembled state, this product contains parts that can be hazardous to small children. This product should be assembled by an adult.



Adult
Supervision

This product is to be used under the supervision of an adult.




Indoor Use
Only

This product is intended for indoor use only. To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The internal components are not sealed from the environment.



Power Strip
Specifications

Read your power strip electrical specifications. Only plug in devices that are approved for use with this power strip. Connect the supplied power strip directly to a wall outlet. **Do not connect to another power strip or use an extension cord.** Unplug when not in use. **Do not leave this product plugged in for more than 72 consecutive hours.** Turn off power strip before unplugging.

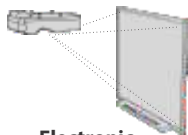

Electronic
Equipment

Read the electrical specifications of any electronic equipment you are using with your Copernicus products. Failure to read these specifications and follow their instructions could result in damage to your equipment or personal injury.



Cable Trip
Hazard

Ensure that any cables extending across the floor to your product are properly bundled and marked to avoid tripping or falling which may lead to personal injury.



Electrical Shock

Do not install or use the electrical components of this unit during a lightning storm.



Climb Hazard


Do not climb on, hang from or suspend objects from any components of your product unless otherwise specified.

Tech Tub²® Trolley


Before beginning, you should have:

Contents - FTT100-0

Trolley Frame
1x

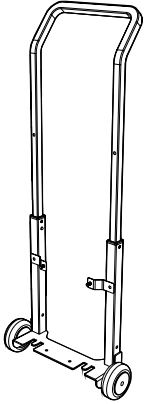


Front Support
1x

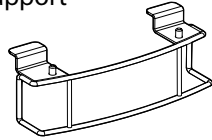

Extension bracket
2x

Used only with FTT2010-UV or FTT2010-USB-UV

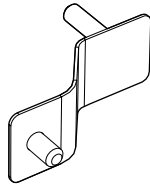

In Box 1

Hardware Actual Size

A M6 x 15mm
2x



B M6 Acorn Nut
4x



C M6 Washer
6x



D M6 Lock Washer
4x



E M6 Lock Nut
2x



F M5 Washer
4x



G M5 Lock Nut
4x




Tools Not to Scale

Allen Key
(43281)
1x



8mm/10mm
Hex Wrench
1x




FTT706-UV Includes

FTT700 (1x)



Tech Tub 2°
6 Device
Main Body
1x



6 outlet
Power Strip
(25515)
1x

FTT-UV (1x)




UV Tech Tub
1x




Power Cord
1x
25527

FTT2010-UV Includes

FTT1100 (1x)

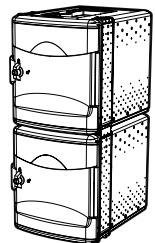


Tech Tub 2°
10 Device
Main Body
1x



10 outlet
Power Strip
(255159)
1x

FTT-UV (1x)

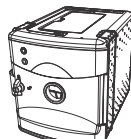


UV Tech Tub
1x




Power Cord
1x
25527

FTT2010-USB-UV Includes

FTT1100 (1x)

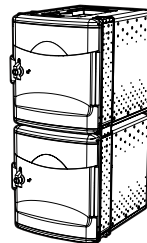


Tech Tub 2°
10 Device
Main Body
1x



10 outlet
USB Hub
(TEC-USB)
x1

FTT-UV (1x)

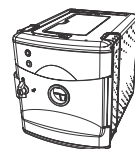

UV Tech Tub
1x



Power Cord
1x
25527

Tips for Assembly

Watch for These Helpful Symbols

- Watch for this symbol throughout the Assembly Guide. Wherever you see it, pay close attention. The symbol denotes a step needing extra attention to ensure it is done correctly.
- The star symbol highlights an advisory note.



Before You Begin

- Lay out and identify all of the included parts.
- The hardware has been packed together in one bag.
- Read the assembly guide over once to familiarize yourself with them.



! Please note that in its unassembled state, this product contains parts that can be hazardous to small children. This product should be assembled by an adult.

As You Assemble the Unit

- Follow the steps in sequence.
- Before beginning each step, find the part(s) that you need for that step.
- Pay attention to the labels on the parts; they are there to help direct you at certain stages.
- The title of each step states what you will be doing. Review the text and the pictures as you build the unit.

Customer Service - FAQ's



For missing parts and other issues regarding the frame:

Please call Copernicus Customer Service, where we will be happy to help.

1-800-267-8494. Monday - Friday 8:00am - 4:30 pm EST.

OR

Email our Tech Support Service at info@copernicused.com

**Need Tech Support?
Have a Question?**



Email our Tech Support Service


**Check out some of our
other great products!**



www.copernicused.com

1

You will need: (Not to Scale)

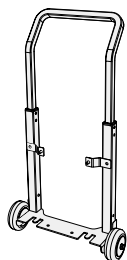

Trolley Handle


1x

Trolley Frame

1x

Fully Extend Trolley Handle

Depress button at the bottom and pull up on the handle.

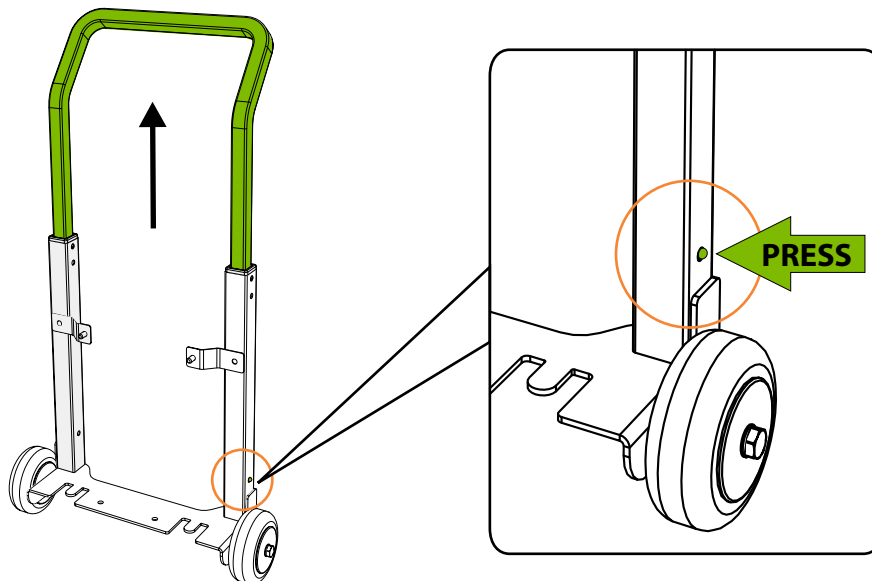

2

FTT2010-UV
ONLY

Actual Size:


(B) M6 Acorn Nut
2x

(C) M6 Washer
2x


(D) M6 Lock Washer
2x



You will need: (Not to Scale)




Extension
Bracket
2x

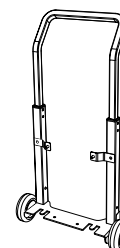

Trolley Frame
1x

Fasten Extension Bracket to top Holes on Trolley Handle

Pay attention to orientation of brackets when installing them onto the trolley handle

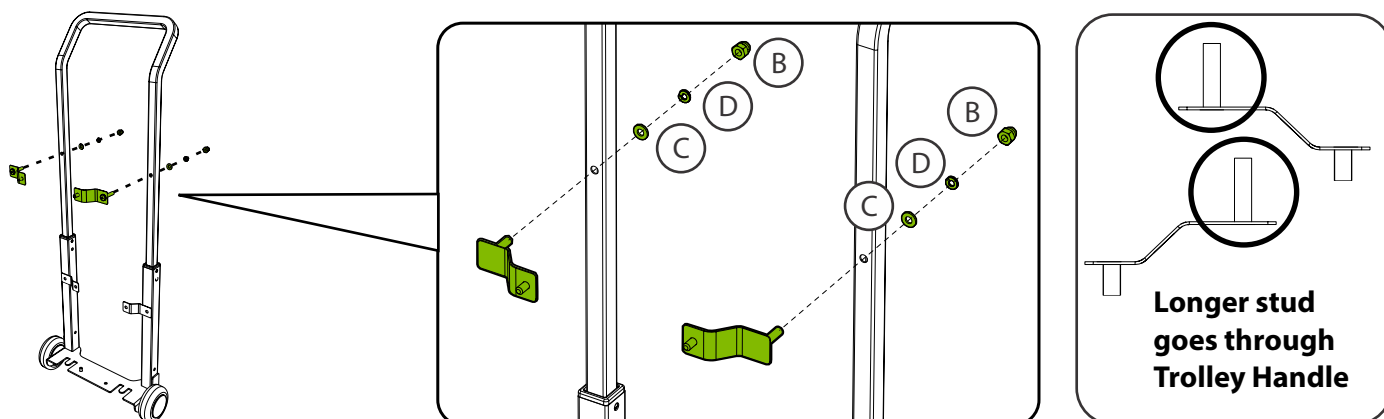

3

Actual Size:

FTT706-UV
ONLY



M5 Washer
2x



M5 Lock Nut
2x



FTT2010-UV
FTT2010-USB-UV
ONLY




M5 Washer
4x



M5 Lock Nut
4x




You will need:
(Not to Scale)



Trolley
Handle
1x
Trolley
Frame
1x


Attach the Tech Tub² to the Trolley Frame

1 Fit Trolley Onto Back of Tech Tub

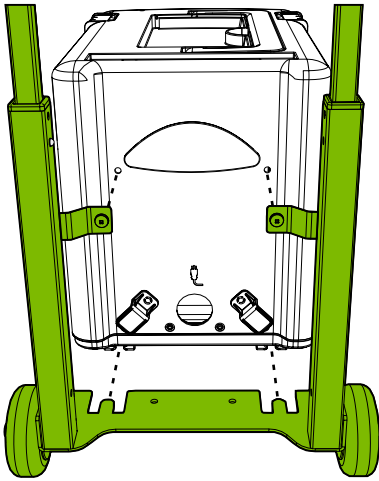


! Ensure the tabs on the base of the trolley are fully inserted into the feet on the Tech Tub².

2 Fasten Hardware Through Inside of Tech Tub

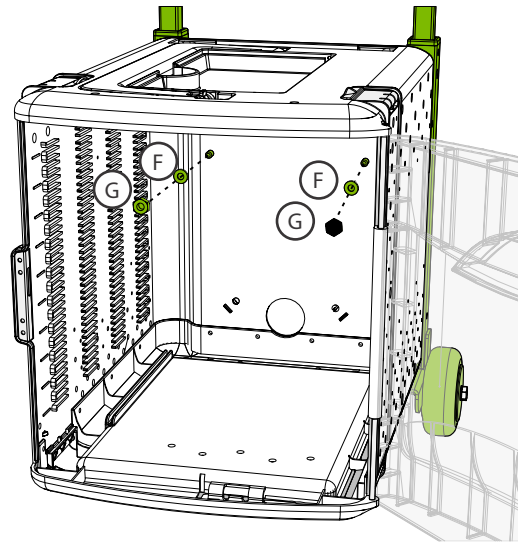


FTT2010-UV
FTT2010-USB-UV
ONLY

1

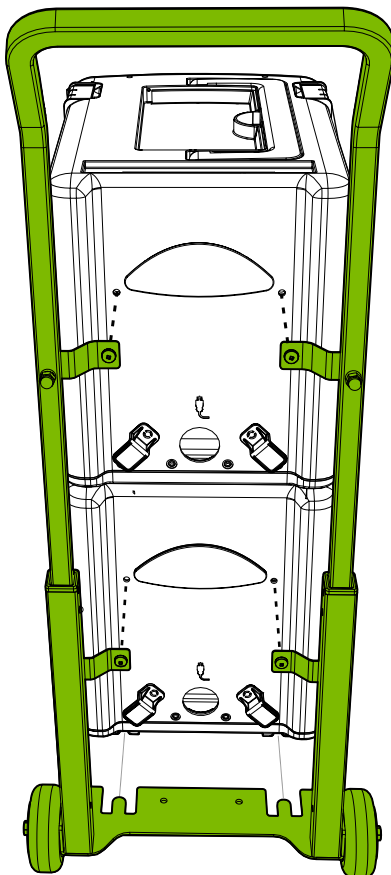

2

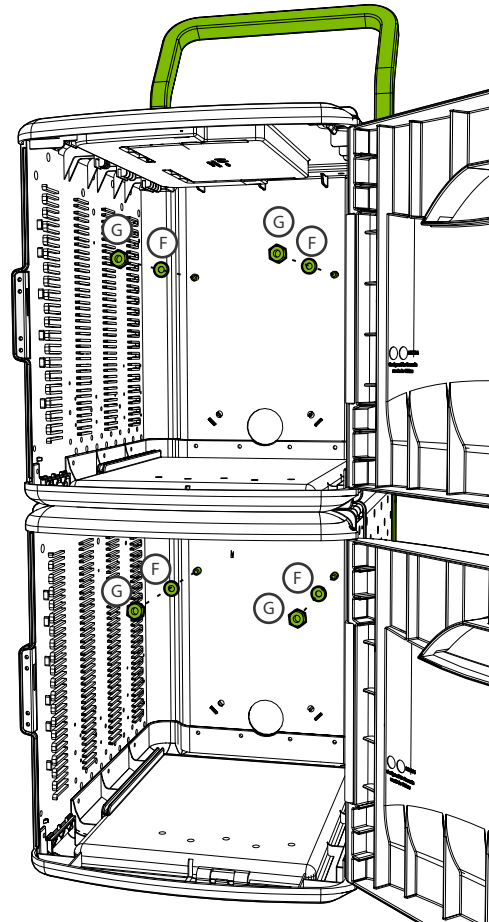

(A) M6 x 15mm
2x



(C) M6 Washer
2x




(E) M6 Lock Nut
2x




Fasten Trolley Base to Bottom of the Tech Tub²

1 Tip Trolley Onto Back


FTT706-UV

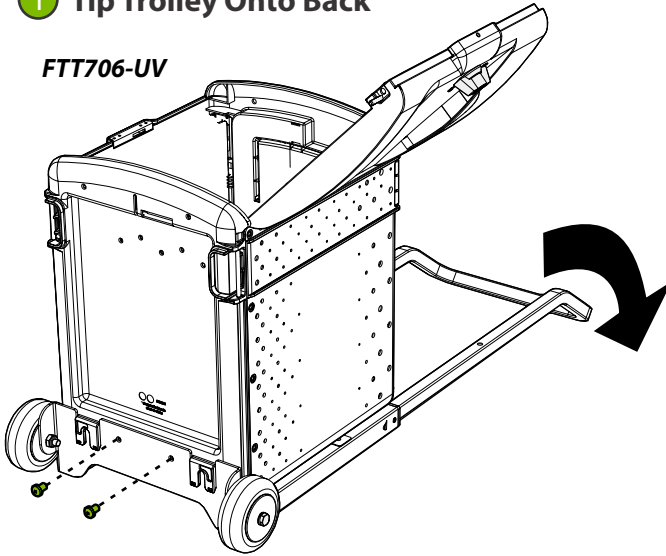



FTT2010-UV
FTT2010-USB-UV

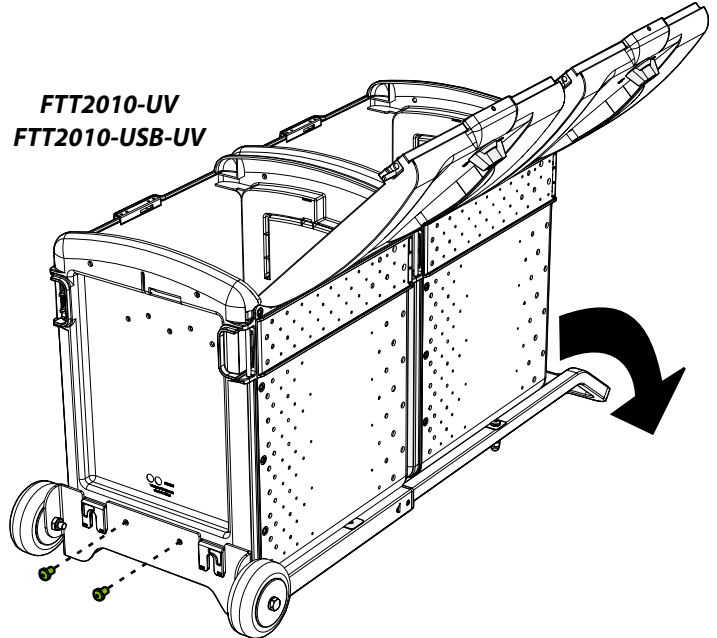

2 Insert Fasteners Through Trolley and Tech Tub


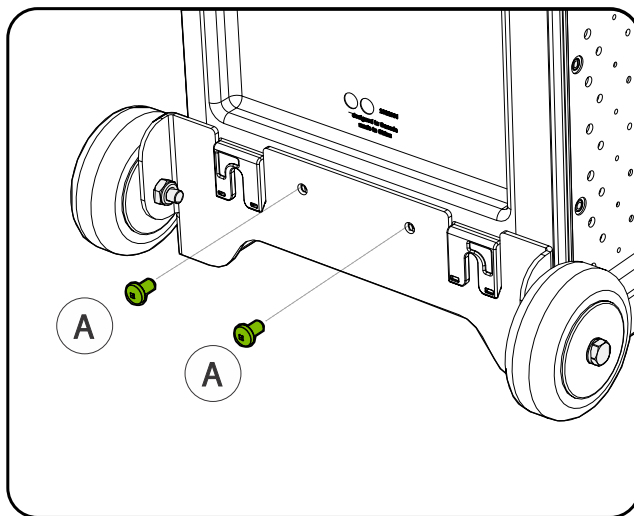


3 Fasten Hardware From Inside Tech Tub

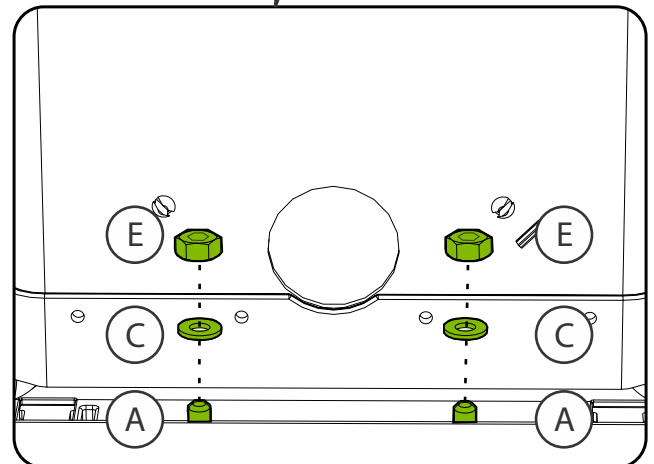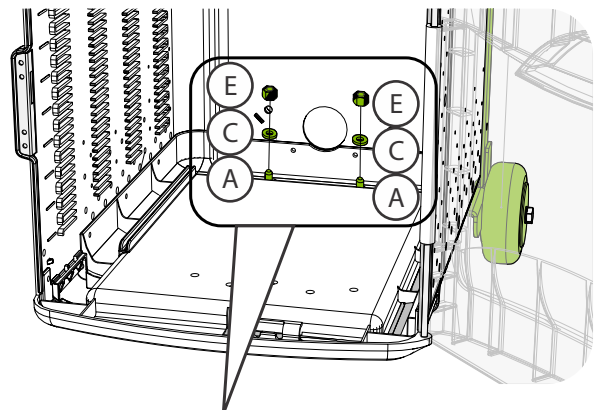


5

Actual Size:


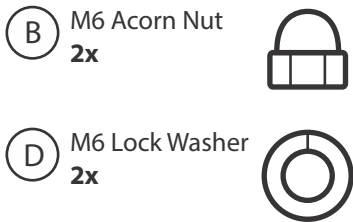


You will need: (Not to Scale)

Front Support
1x

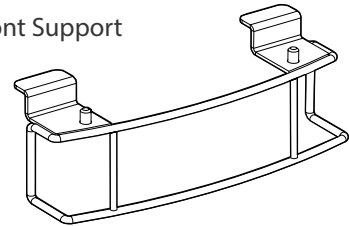

Attach Front Support to Bottom of Tech Tub²

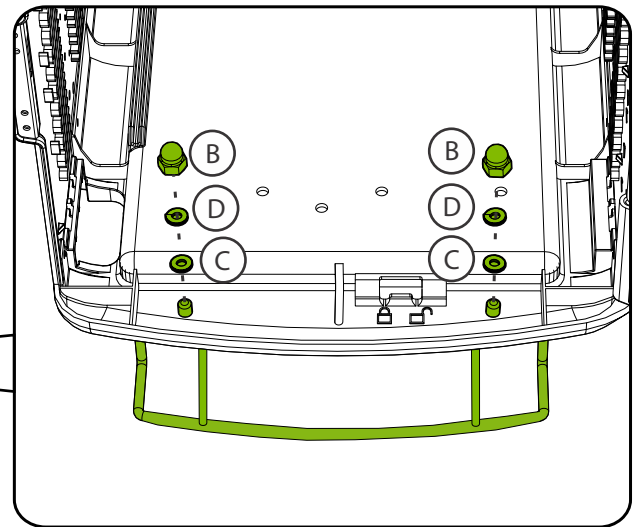
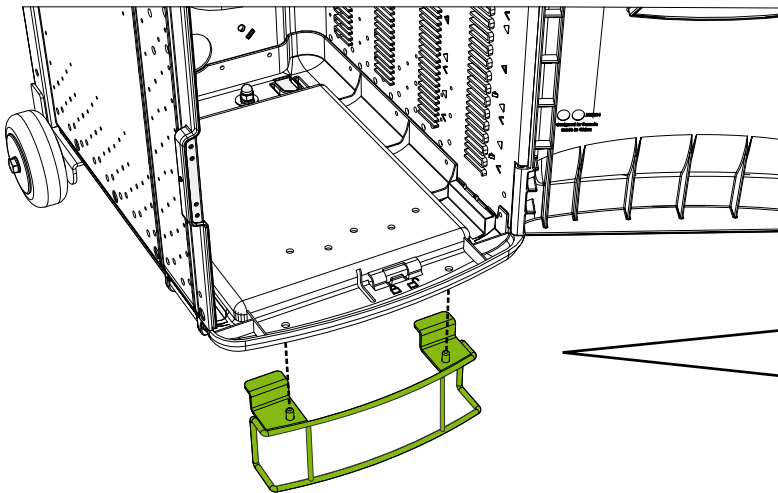


! Note the orientation of the Front Support before installation.




Tech Tub² - 6 and 10 Device Setup:
Please follow the assembly guide found in the tub shipping box to complete your Tech Tub² setup.


You will need: (Not to Scale)

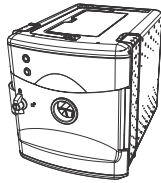UV Tech Tub
1xTech Tub 2 - 6 Device
1xTrolley Frame
1x**Connect the UV Tech Tub to the 6 Device Tub.**


- 1 Flip up Locking Tab and Open side Flip Locks on 6-device tub

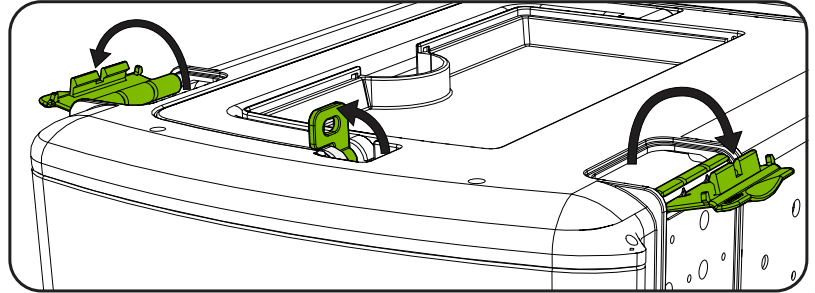

- 2 Insert back feet of UV Tech Tub into slot on top of 6-device tub
- 3 Insert front feet of UV Tech Tub into holes on top of 6-device tub
- 4 Connect tubs using side Flip Locks

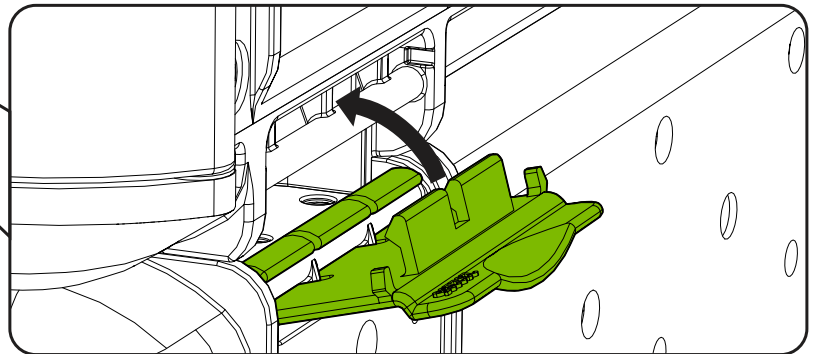

- 5 Open the front door of UV Tech Tub and slide locking pin through metal tab

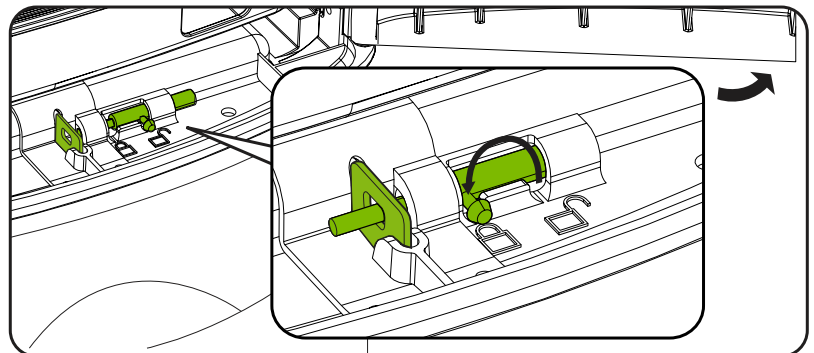

- 6 Close and lock front door of UV Tech Tub to secure



Do not connect more than three Tech Tub² or UV Tech Tub

Before operating the UV Tech Tub, remove it from the trolley and place on a surface that is at least 30" above the floor.


Do not place the UV Tech Tub on the floor.

This is to prevent accidental collisions that can cause damage or injury from impact and tip over.


You will need: (Not to Scale)

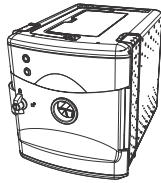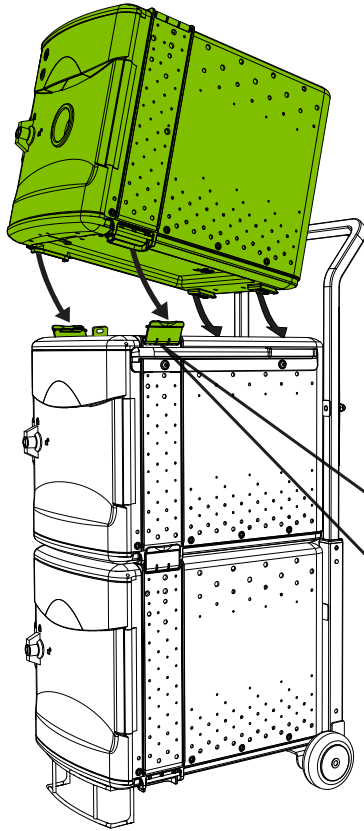UV Tech Tub
1xTech Tub 2 - 10 Device
1xTrolley Frame
1x**Connect the UV Tech Tub to the 10 Device Tub.**


- 1 Flip up Locking Tab and Open side Flip Locks on 6-device tub

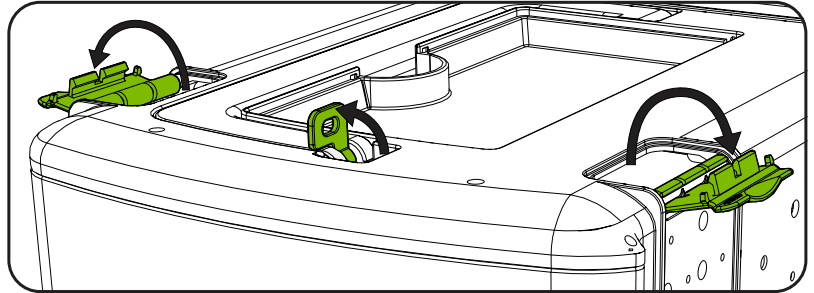

- 2 Insert back feet of UV Tech Tub into slot on top of 6-device tub
- 3 Insert front feet of UV Tech Tub into holes on top of 6-device tub
- 4 Connect tubs using side Flip Locks

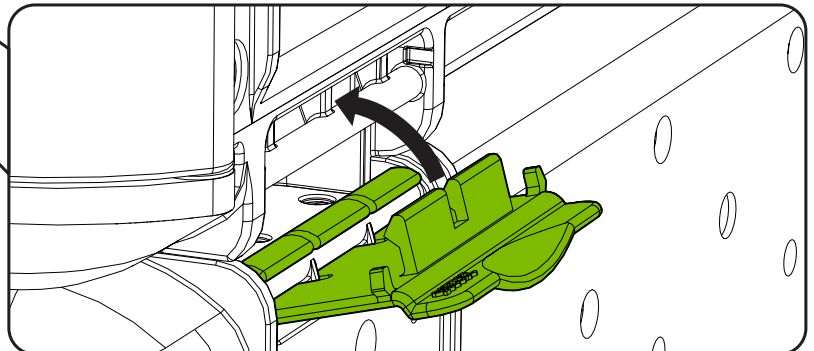

- 5 Open the front door of UV Tech Tub and slide locking pin through metal tab

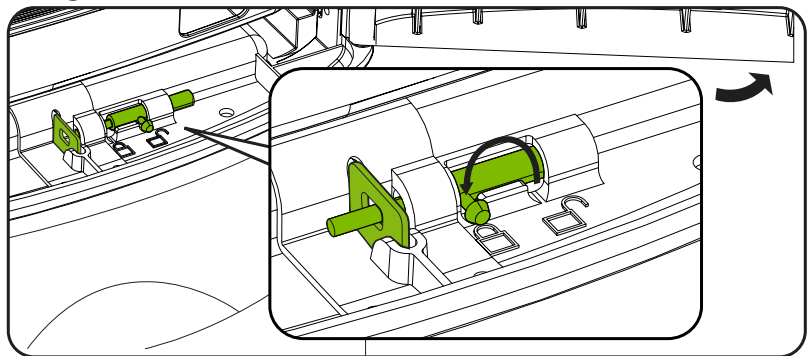

- 6 Close and lock front door of UV Tech Tub to secure

Do not connect more than three Tech Tub² or UV Tech Tub

Before operating the UV Tech Tub, remove it from the trolley and place on a surface that is at least 30" above the floor.

Do not place the UV Tech Tub on the floor.

This is to prevent accidental collisions that can cause damage or injury from impact and tip over.