

soga®

ICE SHAVER MANUAL



1.UP

A: If the blade tray is on the machine, you can press “UP” to take out of the blade tray after the “Rotation pressing ice column” move the top.

B: If the blade tray is not on the machine, when you press “UP” for a long time, the “Rotation pressing ice column” move to the top and then you can put the blade tray on the machine.

2.DOWN

A: Press “DOWN” to let machine to operate after putting the round ice column into the blade tray.

B: If need to clean the “Rotation pressing ice column”, press “DOWN” to let “Rotation pressing ice column” move to the bottom. Then take out of the “Rotation pressing ice column”

3. DISPLAY SCREEN

The time on display screen is present work time. The default work time is 68 seconds. Customers can set up the work time according to requirement.

4/5. TIME + /-

Under standby mode, customers can set up the work time according to different ice flavors. The work time unit is second.


6. PAUSE

Press “PAUSE” to stop the machine to operate.

7. AUTO

Press “AUTO” to operate the machine after putting the round ice column into ice tray, “Rotation pressing ice column” will move to the top after finishing operation.

2) Operation Manual

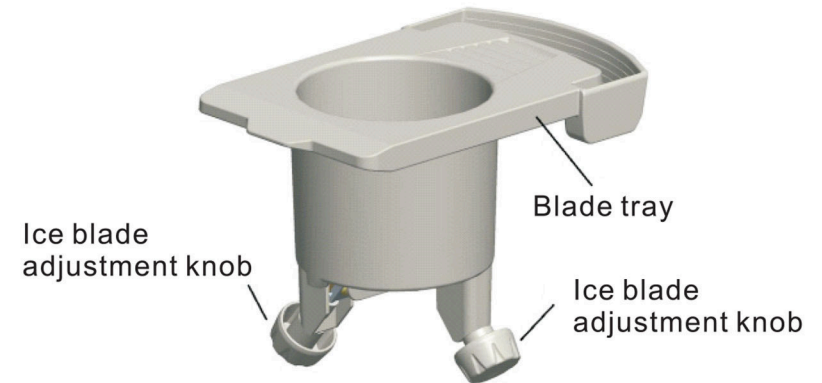

PICTURE 4

Putting the round ice column into ice tray and put the ice tray into machine.

Note:

Please make sure that the ice tray is put into machine correctly. If can't put the ice tray on the right place, the machine will alarm and the lights will flicker.

Put the container on the Auto-base.(see picture 1) .When press “DOWN” or “AUTO”, The machine begin to work. Customers can adjust the ice adjustment knob to get the wanted thickness of ice. When machine finish the work, press “UP”, The “Rotation pressing ice column” move to place of beginning. If press “AUTO”, The “Rotation pressing ice column” move to place of beginning automatically.

Care and Maintenance.


Maintenance:cleaning the machine surface;
 cleaning blade tray;
 cleaning “Rotation Pressing ice column”

1. Cleaning the machine surface when it is dirty.
2. Cleaning blade tray. You can put the blade tray into water to clean after use for each time. Can't be cleaned by detergent.
3. Cleaning “Rotation pressing ice column”. Press “DOWN” for three seconds. The “Rotation pressing ice column” move to right place and put off the “Rotation pressing ice column” from up to down.
4. After cleaning the “Rotation pressing ice column”, put it into machine. Press “UP”.The “Rotation pressing ice column” will move to beginning place.

Questions and Solutions

Questions		Solutions
1	Machine don't move down (can't work).	checking if blade tray on the right place or other problem.
2	Machine don't move up.	checking if blade tray on the right place or other problem.
3	“Rotation pressing ice column”can't be taken out.	See Cleaning 3.
4	The thickness of ice is two heavy or can't work.	Adjusting the blade adjustment knob or check if the blades are damaged.
5	Don't have power.	Check if the fuse is broken.

Assembling Instruction :

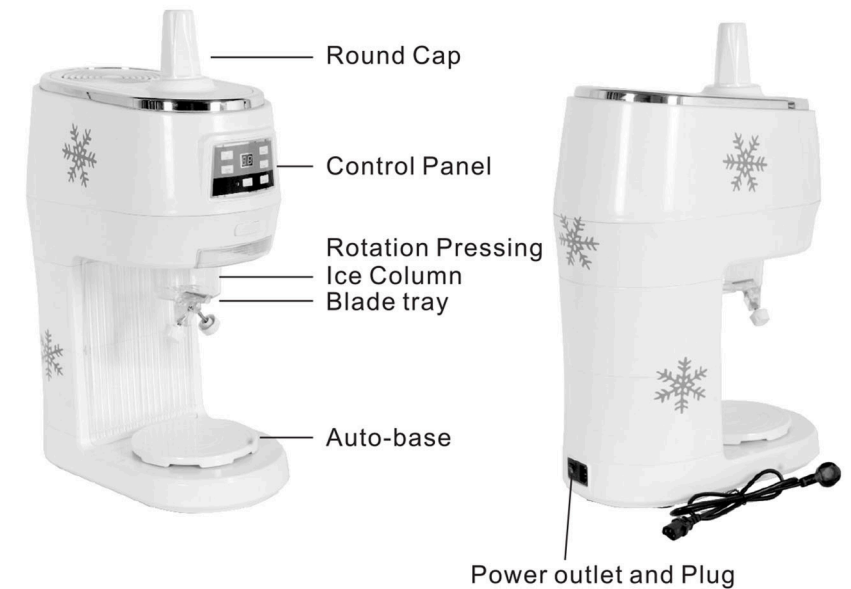


PICTURE 1

PICTURE 2

Control &Operation Manual

1) Control Panel

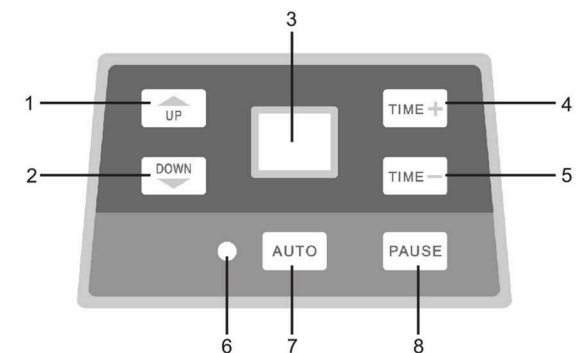

PICTURE 3

How to make ice flavors.

Recipe: flavors powder and water.

How to make ice flavors.

- 1、 Put flavor powder and water into blender.(Ratio: flavor powder: water: 1:3) Blending for 8 minutes with blender.
- 2、 Take out of foam on the top after stop blending for 5 minutes.
- 3、 Put the mixtures into special container under -20 degree centigrade. The ice flavors can be used after 12 hours.

Technical Parameter

Trade Name	Model Number	Rating
SOGA	IceShaverBY208S	AC220-240V,50/60Hz,350W

Disposal:

- Do not dispose of in general waste.
- Take to an approved electrical appliance recycling center.
- Remove any detachable components (if applicable) prior to disposal.

Warranty:

- Standard 12-month manufacturer warranty.
- Keep proof of purchase for warranty claims.
- For support, contact:SOGA International Pty Ltd
1/7-9 Chambers Road, Altona North VIC 3025 Australia
Email: support@sogainternational.com

Compliance Information:

- This product complies with: AS/NZS CISPR 14-1:2021
- Certificate No. : HTT202507715K, Issued Date: Jul. 17, 2025
- Report No.: HTT202507715KR, Date of Report : Jul. 17, 2025