



MAGNUM (WGR-U)  
CONTROLLED ROTATION  
UNIBODY SEWER NOZZLE  
AND SWITCHER HEAD  
USER MANUAL



# TABLE OF CONTENTS

<b>MANUFACTURER'S INFORMATION</b> .....	<b>3</b>
SPECIFICATIONS .....	3
DESCRIPTION AND INTENDED USE .....	3
KEY FEATURES .....	3
EC DECLARATION OF CONFORMITY .....	4
UK DECLARATION OF CONFORMITY .....	5
<b>WARNING AND SAFETY INSTRUCTIONS</b> .....	<b>6</b>
BACKOUT PREVENTION .....	6
OPERATOR TRAINING RISK ASSESSMENT .....	7
PPE.....	8
PRE-RUN SAFETY CHECK .....	9
<b>Warthog® MAGNUM (WGR-U) OVERVIEW</b> .....	<b>10</b>
WARTHOG® MAGNUM (WGR-U) MODEL INFORMATION .....	12
<b>OPERATION</b> .....	<b>14</b>
<b>TROUBLESHOOTING</b> .....	<b>15</b>
<b>FLUID REPLACEMENT</b> .....	<b>16</b>
<b>WHR MAGNUM MAINTENANCE TOOLS AND MATERIALS</b> .....	<b>17</b>
<b>DISASSEMBLY</b> .....	<b>18</b>
<b>ASSEMBLY</b> .....	<b>22</b>
<b>WGR SWITCHER 1 AND 1¼</b> .....	<b>27</b>
OVERVIEW .....	27
WHR SWITCHER MAINTENANCE TOOLS AND MATERIALS.....	27
OPERATION AND TROUBLESHOOTING .....	28
WHR SWITCHER DISASSEMBLY .....	29
WHR SWITCHER ASSEMBLY .....	30
<b>WARTHOG® MAGNUM (WGR-U) MAINTENANCE SCHEDULE</b> .....	<b>31</b>
<b>WARTHOG® MAGNUM (WGR-U) SERVICE KITS</b> .....	<b>32</b>
<b>WARTHOG® HERO MAGNUM (WHR-U) FIN EXTENSION KIT</b> .....	<b>33</b>
<b>TERMS AND CONDITIONS AND WARRANTY</b> .....	<b>34</b>

StoneAge Inc.  
466 S. Skylane Drive  
Durango, CO 81303, USA  
Phone: 970-259-2869  
Toll Free: 866-795-1586  
www.stoneagetools.com

StoneAge NL  
Reedijk 7Q  
3274 KE Heinoord  
Netherlands  
(+31) (0) 85 902 73 70  
sales-NL@stoneagetools.com

StoneAge UK  
Unit 3  
Crucible Business Park  
Woodbury Lane  
Norton  
Worcester  
Worcestershire, WR5 2DQ  
United Kingdom  
+44 (0) 1684 892065  
sales-eu@stoneagetools.com

This manual must be used in accordance with all applicable national laws. The manual shall be regarded as a part of the machine and shall be kept for reference until the final dismantling of the machine, as defined by applicable national law(s). Updated manuals can be downloaded at: <https://www.stoneagetools.com/manuals>

<b>Warthog® MAGNUM (WGR-U) SPECIFICATIONS</b>	
<b>Tool Model:</b>	<b>WGR-1 &amp; WGR-1¼</b>
<b>Pipe Size:</b>	<b>8-36 in. (200-900 mm)</b>
<b>Pressure Range:</b>	<b>1200-5000psi (100-550 bar)</b>
<b>Flow Range:</b>	<b>50-120 gpm (83-350 lpm)</b>
<b>Flow Coefficient:</b>	<b>6 Cv</b>
<b>Visc Service Life:</b>	<b>1600 Hours</b>
<b>Rotation Speed:</b>	<b>150-400rpm</b>
<b>Inlet Connection:</b>	<b>1" NPT or BSPP &amp; 1¼" NPT or BSPP</b>
<b>Jet Port Size:</b>	<b>5 x 1/8" NPT</b>
<b>Jet/Plug Type:</b>	<b>CNP2 / AP2 002</b>
<b>Outside Diameter:</b>	<b>4.5 in. (110 mm)</b>
<b>Overall Length:</b>	<b>10.3 in. (260 mm)</b>
<b>Weight:</b>	<b>13 lbs (6 kg)</b>
<b>Max Water Temperature:</b>	<b>160 °F (70 °C)</b>

## DESCRIPTION OF EQUIPMENT AND INTENDED USE

The Warthog® MAGNUM (WGR-U) is designed for mid-size pipes and lines, with the proven power and durability of the Magnum line of sewer tools.

## KEY FEATURES:

- Engineered to handle recycled water
- Tool profile keeps seals protected and prevents hang-ups
- New access ports enable viscous fluid change without disassembly for easy field maintenance
- Head design eliminates the gap between the body which keeps seals protected and prevents snagging
- 1" inlet option allows for higher pressure and better maneuverability in small pipes
- New 6-fin centralizer design allows steeper rear jets for max pulling/flushing

**EC DECLARATION OF CONFORMITY**

**Manufacturer:** StoneAge Incorporated  
466 South Skylane Drive Durango, CO 81303 USA

**Authorized Representative** StoneAge Netherlands BV  
Reedijk 7Q  
3274 KE Heinenoord Netherlands  
Sander de Korte, Customer Service Manager

**Declare that:** Warthog® MAGNUM (WGR-U)  
are rotary swivel tools designed for cleaning sewer pipes.


**Are compliant with the following Directives and Standards:**

Directive 2006/42/EC (Machinery Directive)

EN ISO 12100:2010 (E) Safety of machinery – General principles for design – Risk assessment and risk reduction


The Technical Files for the Warthog® MAGNUM (WGR-U) are maintained at:

StoneAge Incorporated, 466 South Skylane Drive, Durango, CO 81303, USA and were compiled by the Engineering Manager. The Technical File is available through the Authorized Representative. This Declaration of Conformity is issued under the exclusive responsibility of StoneAge Incorporated.

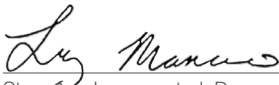

StoneAge Incorporated, Durango, CO, USA  
Liz Mancuso, Director of Engineering

02/15/23  
Date

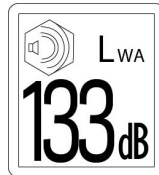

## UK DECLARATION OF CONFORMITY

**Manufacturer:** StoneAge Incorporated  
466 South Skylane Drive Durango, CO 81303 USA

**Authorized Representative:** StoneAge UK  
Unit 3  
Crucible Business Park  
Woodbury Lane  
Norton  
Worcester  
Worcestershire, WR5 2DQ  
United Kingdom  
Steve Ellis, Managing Director StoneAge UK

**Declare that:** Warthog® MAGNUM (WGR-U)  
are rotary swivel tools designed for cleaning sewer pipes.

### Are compliant with the following Statutory Requirements and Designated Standards:

(E) Safety of machinery – General principles for design – Risk assessment and risk reduction  
EN ISO 12100:2010 (E) Safety of machinery – General principles for design – Risk assessment and risk reduction

The Technical Files for the Warthog® MAGNUM (WGR-U) are maintained at:


StoneAge Incorporated, 466 South Skylane Drive, Durango, CO 81303, USA and were compiled by the Engineering Manager. The Technical File is available through the Authorized Representative. This Declaration of Conformity is issued under the exclusive responsibility of StoneAge Incorporated.



StoneAge Incorporated, Durango, CO, USA  
Liz Mancuso, Director of Engineering

02/15/23

Date

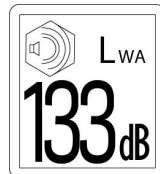

**UK  
CA**

# WARNING AND SAFETY INSTRUCTIONS


## ⚠️ WARNING

Because of the short length of the Warthog® MAGNUM (WGR-U), the tool can turn around in pipes and come back at the operator at a high rate of speed. There must be an anti-reversal device of sufficient length to ensure that the rigid length measurement from the tip of the nozzle to the back end of the hose crimp is 1-1/2 times the internal diameter of any pipe that can be accessed in the cleaning operation. A rigid “stinger” should be used between the hose and the tool. (see below)


Operators **MUST** read, understand, and follow the Operational Procedures (Section 9.0) of WJTA-IM-CA's, Industry Best Practices For The Use Of High-pressure Waterjetting Equipment, or equivalent. Make sure there is an operator controlled dump in the system, operated by the person closest to the cleaning job. It is recommended that the hose be marked a few feet from the end with a piece of tape so the operator knows when to stop when retracting the tool.

## ⚠️ DANGER

Operations with this equipment can be potentially hazardous. Caution must be exercised prior to and during machine and water jet tool use. Please read and follow all of these instructions, in addition to the guidelines in the WJTA Recommended Practices handbook, available online at [www.wjta.org](http://www.wjta.org). Deviating from safety instructions and recommended practices can lead to severe injury and/or death.

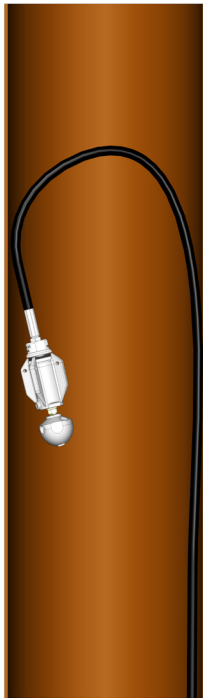

**IMPROPER USE:**  
WGR-U will turn around in large diameter pipe  
**VERY DANGEROUS!**

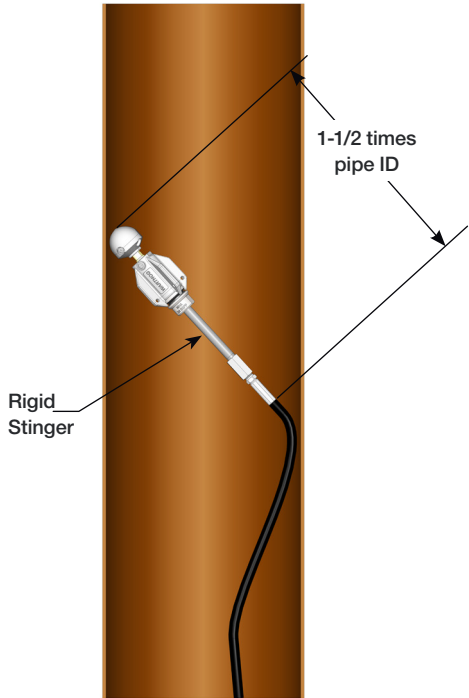

**PROPER USE:**  
WGR-U with rigid “stinger” to prevent turnaround, still able to pass through elbows.



# WARNING AND SAFETY INSTRUCTIONS

## OPERATOR TRAINING

Managers, Supervisors, and Operators **MUST** be trained in Health and Safety Awareness of High-pressure Water Jetting and hold a copy the Water Jetting Association (WJA) Code of Practice, or equivalent (see [www.waterjetting.org.uk](http://www.waterjetting.org.uk)).

Operators **MUST** be trained to identify and understand all applicable standards for the equipment supplied. Operators should be trained in manual handling techniques to prevent bodily injury.

StoneAge has designed and manufactured this equipment considering all hazards associated with its operation. StoneAge assessed these risks and incorporated safety features in the design. StoneAge **WILL NOT** accept responsibility for the results of misuse.

**IT IS THE RESPONSIBILITY OF THE INSTALLER/ OPERATOR** to conduct a job specific risk assessment prior to use. Job specific risk assessment **MUST** be repeated for each different set up, material, and location.

The risk assessment **MUST** conform to the Health and Safety at Work Act 1974 and other relevant Health and Safety legislation.

Operators **MUST** read, understand, and follow the Operational and Training Requirements (Section 6.0) of WJTA-IMCA's, Industry Best Practices For The Use Of High-pressure Waterjetting Equipment, or equivalent.

Operators **MUST** read, understand and follow the Warnings, Safety Information, Assembly, Installation, Connection, Operation, Transport, Handling, Storage, and Maintenance Instructions detailed in this manual.

The risk assessment **MUST** consider potential material or substance hazards including:

- Aerosols
- Biological and microbiological (viral or bacterial) agents
- Combustible materials
- Dusts
- Explosion
- Fibers
- Flammable substances
- Fluids
- Fumes
- Gases
- Mists
- Oxidizing Agents

# WARNING AND SAFETY INSTRUCTIONS

## PERSONAL PROTECTIVE EQUIPMENT REQUIREMENTS

Use of Personal Protective Equipment (PPE) is dependent on the working pressure of water and the cleaning application. Managers, Supervisors, and Operators **MUST** carry out a job specific risk assessment to define the exact requirements for PPE. See Personal Protective Equipment (Section 5) of WJTA-IMCA's, Industry Best Practices For The Use Of High-pressure Waterjetting Equipment for additional information.

**Hygiene** - Operators are advised to wash thoroughly after all waterjetting operations to remove any waterblast residue which may contain traces of harmful substances.

**First aid provision** - users **MUST** be provided with suitable first aid facilities at the operation site.

PPE may include:

- **Eye protection:** Full face visor
- **Foot protection:** Kevlar® brand or steel toe capped, waterproof, non-slip safety boots
- **Hand protection:** Waterproof gloves
- **Ear protection:** Ear protection for a minimum of 85 dBA
- **Head protection:** Hard hat that accepts a full face visor and ear protection
- **Body protection:** Multi-layer waterproof clothing approved for waterjetting
- **Hose protection:** Hose shroud
- **Respiratory protection:** May be required; refer to job specific risk assessment





# WARNING AND SAFETY INSTRUCTIONS

## **WARNING**

Operations with this equipment can be potentially hazardous. Caution **MUST** be exercised prior to and during equipment and water jet tool use. Please read and follow all of these instructions, in addition to the guidelines in the WJTA-IMCA's Industry Best Practices handbook, available online at [www.wjta.org](http://www.wjta.org). Deviating from safety instructions and recommended practices can lead to severe injury and/or death.

- Do not exceed the maximum operating pressure specified for any component in a system.
- The immediate work area **MUST** be marked off to keep out untrained persons.
- Inspect the equipment for visible signs of deterioration, damage, and improper assembly. Do not operate if damaged, until repaired.
- Make sure all threaded connections are tight and free of leaks.
- Users of the Warthog® MAGNUM (WGR-U) **MUST** be trained and/or experienced in the use and application of high-pressure technology and cleaning, as well as all associated safety measures, according to the WJTA Recommended Practices for the use of High-pressure Waterjetting Equipment.
- Install mechanical stops, stingers and back out preventers as appropriate when doing any tube, pipe or vessel cleaning.
- Always de-energize the system before servicing or replacing any parts. Failure to do so can result in severe injury and/or death.

## PRE-RUN SAFETY CHECK

Refer to WJTA-IMCA's Industry Best Practices For The Use Of High-pressure Waterjetting Equipment and/or The Water Jetting Association's, WJA Code of Practice for additional safety information.

- Complete a job specific risk assessment and act on the resulting actions.
- Adhere to all site specific safety procedures.
- Ensure the waterblasting zone is properly barricaded and that warning signs are posted.
- Ensure the workplace is free of unnecessary objects (e.g. loose parts, hoses, tools).
- Ensure all Operators are using the correct Personal Protective Equipment (PPE).
- Check that the air hoses are properly connected and tight.
- Check all hoses and accessories for damage prior to use. Do not use damaged items. Only high quality hoses intended for waterblast applications should be used as high-pressure hoses.
- Check all high-pressure threaded connections for tightness.
- Operate the high-pressure water at full pressure and use the Pneumatic Foot Pedal Dump Control to verify that the dump valve is working properly.
- Ensure that Operators never connect, disconnect, or tighten hoses, adapters, or accessories with the high-pressure water pump unit running.
- Ensure no personnel are in the hydroblasting zone.

## MAGNUM (WGR-U)


PIPE SIZE: 8-36" Pipes | 200-900 mm

INLET: 1" & 1¼" NPT or BSPP

FLOW RATE: 50-120 gpm | 190-450 lpm

SERVICE INTERVAL: 1600 hours

Ideal for municipal and industrial sewer cleaning professionals who need a premium nozzle for dependable use in the harshest environments. This nozzle is engineered to handle recycled water and features a wide range of highly specialized head options to deliver optimal cleaning every situation.

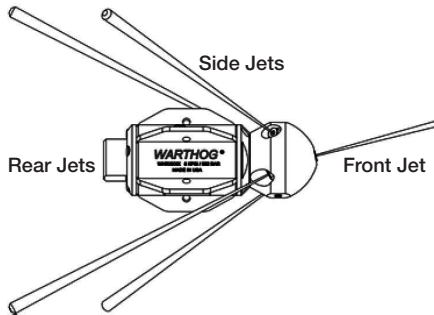

### DESCALER

- Side jets are angled to reduce stand-off distance to the pipe wall, delivering intense jet impact to remove tough build up, calcium deposits, and scaling with ease
- Jetting is configured with more force to the side jets for cleaning and polishing

#### DESCALER

6 Ports:

Front: 1 @ 15°

Side: 2 @ 100°

Rear: 4 @ 142°

DESCALING



PULLING/  
FLUSHING



### PULLER/DESCALER

- Jetting is configured with more force to the side jets for cleaning and polishing and to the rear jets for extra pulling power
- Side jets are angled to reduce stand-off distance to the pipe wall, delivering intense jet impact to remove tough build up, calcium deposits, and scaling with ease
- Rear jets are angled further back to increase pulling power for long runs and climbs, and max flushing capability

#### PULLER /DESCALER

5 Ports:

Front: 1 @ 15°

Side: 2 @ 100°

Rear: 4 @ 155°

DESCALING



PULLING/  
FLUSHING



## ROOT DESTROYER

- Jetting is configured to send max force to specially angled side jets optimized for root cutting
- 8 powerful jets in-line jets create a water blade proven to clear roots faster, saving time, water and money
- Reduces the use of mechanical tools that can damage the pipe

## ROOT DESTROYER / PULLER

- Adjust jet angles for increased pulling power
- Jetting is configured to send max force to precision angled side jets optimized for descaling and root cutting
- Eight powerful jets: Two jets angled for maximum power to the side of the pipe and six jets in offset pairs to pin and pulverize roots while providing extra pulling
- Reduces the use of mechanical tools that can damage the pipe

## SWITCHER

- Jetting is configured to send full flow to the front and side jets for cleaning OR to the rear jets for pulling and flushing
- The operator controls which set of jets get water flow, while the tool is in the pipe
- One nozzle with two sets of jets - turn on pulling jets to run down the pipe, switch to descaling jets to clean and unplug
- The only nozzle of it's kind in the industry—complete your job with half the runs saving water, time and money

## MANHOLE CLEANER

- Jetting is configured to send equal force to all jets which are uniquely angled for full coverage of the manhole chamber
- Designed to accept extension nipples that reduce the standoff distance, delivering a high pressure attack directly to the build-up
- Safer than 3D tools or manual cleaning methods

## ROOT DESTROYER

9 Ports:  
Front: 1 @ 15°  
Rear: 8 @ 135°

DESCALING



PULLING/  
FLUSHING



## ROOT DESTROYER / PULLER

9 Ports:  
Front: 1 @ 15°  
Side: 2 @ 100°  
Rear: 2 @ 149°  
2 @ 152°  
2 @ 155°

DESCALING



PULLING/  
FLUSHING



## SWITCHER

PULLING MODE:  
Front: 1 @ 15°  
Rear: 4 @ 155°

CLEANING MODE:  
Side: 2 @ 100°  
Rear: 2 @ 125°

DESCALING



PULLING/  
FLUSHING



## MANHOLE CLEANER

4 Ports:  
Front: 2 @ 30°  
Side: 2 @ 110°

# Warthog® MAGNUM (WGR-U) OVERVIEW

## DESCRIPTION

The Warthog® MAGNUM (WGR-U) Controlled Rotation Sewer Nozzle is designed for waterjet cleaning of pipes and sewer lines.

- Jet thrust from the water powers the rotation of the head and pulls the tool through the line.
- The WGR is available with one of four female threaded inlet nuts; 1" & 1¼" NPT or BSPP
- The WGR is capable of working pressures up to 5000 psi and flow rates of 50-120 gpm / 190-450 lpm.
- The carbide face seals allow the use of recycled water or fresh water for jetting.
- The nozzle utilizes a rotor and viscous fluid speed control mechanism to provide consistent rotation speed.
- As with all Warthog nozzles, the orifice sizes are selected to best match the desired operating conditions of pressure and flow.
- Hose length and size must be known to correctly determine the proper orifice sizes.
- Contact your distributor or reference <https://www.warthog-nozzles.com/> to help in nozzle selection.

**DESCALER (WGR-DS) HEAD OFFSET CHART**

WGR-DS WITH 600' OF Ø1" HOSE			PRESSURE					
			2000 PSI	2500 PSI	3000 PSI	3500 PSI	4000 PSI	4500 PSI
FLOW	GPM	L/MIN	140 BAR	170 BAR	210 BAR	240 BAR	280 BAR	310 BAR
	50	190	R31	R31	R31	R31	R31	R20
	60	230	R31	R31	R31	R20	R20	R20
	70	260	R31	R31	R20	R20	R20	R20
	80	300	R31	R31	R20	R20	R20	R20
	90	340		R20	R20	R20	R20	N/A

WGR-DS WITH 600' OF Ø1¼" HOSE			PRESSURE					
			2000 PSI	2500 PSI	3000 PSI	3500 PSI	4000 PSI	4500 PSI
FLOW	GPM	L/MIN	140 BAR	170 BAR	210 BAR	240 BAR	280 BAR	310 BAR
	50	190	R31	R31	R31	R31	R20	R20
	60	230	R31	R31	R31	R20	R20	R20
	70	260	R31	R20	R20	R20	R20	R20
	80	300	R31	R20	R20	R20	R20	N/A
	90	340	R20	R20	R20	N/A	N/A	N/A
	100	380	R20	R20	R20	N/A	N/A	N/A
	110	420	R20	R20	N/A	N/A	N/A	N/A
120	450	R20	R20	N/A	N/A	N/A	N/A	



## HIGH FLOW DESCALER (WGR-HFDS) HEAD OFFSET CHART

WGR-HFDS WITH 600' OF Ø1¼" HOSE			PRESSURE					
			2000 PSI	2500 PSI	3000 PSI	3500 PSI	4000 PSI	4500 PSI
FLOW	GPM	L/MIN	140 BAR	170 BAR	210 BAR	240 BAR	280 BAR	310 BAR
	80	300	R31	R20	R20	R20	R20	R20
	90	340	R20	R20	R20	R20	N/A	N/A
	100	380	R20	R20	N/A	N/A	N/A	N/A
	110	420	R20	R20	N/A	N/A	N/A	N/A
	120	450	R20	R20	N/A	N/A	N/A	N/A

## PULLER / DESCALER (WGR-PDS) HEAD OFFSET CHART

WGR-PDS WITH 600' OF Ø1" HOSE			PRESSURE					
			2000 PSI	2500 PSI	3000 PSI	3500 PSI	4000 PSI	4500 PSI
FLOW	GPM	L/MIN	140 BAR	170 BAR	210 BAR	240 BAR	280 BAR	310 BAR
	50	190	R31	R31	R31	R31	R31	R20
	60	230	R31	R31	R31	R20	R20	R20
	70	260	R31	R31	R20	R20	R20	R20
	80	300	R31	R31	R20	R20	R20	R20
	90	340		R20	R20	R20	R20	N/A

## ROOT DESTROYER (WGR-RD) HEAD OFFSET CHART

WGR-RD WITH 600' OF Ø1" HOSE			PRESSURE					
			2000 PSI	2500 PSI	3000 PSI	3500 PSI	4000 PSI	4500 PSI
FLOW	GPM	L/MIN	140 BAR	170 BAR	210 BAR	240 BAR	280 BAR	310 BAR
	50	190	N/A	R35	R35	R35	R35	R35
	60	230	R35	R35	R35	R35	R35	R35
	70	260	R35	R35	R35	R35	R35	R20
	80	300	R35	R35	R35	N/A	N/A	N/A
	90	340		R35	R35	N/A	N/A	N/A

## ROOT DESTROYER PULLER (WGR-RDP) HEAD OFFSET CHART


WGR-RDP WITH 600' OF Ø1" HOSE			PRESSURE					
			2000 PSI	2500 PSI	3000 PSI	3500 PSI	4000 PSI	4500 PSI
FLOW	GPM	L/MIN	140 BAR	170 BAR	210 BAR	240 BAR	280 BAR	310 BAR
	50	190	R31	R31	R31	R31	R31	R31
	60	230	R31	R31	R31	R31	N/A	N/A
	70	260	R31	R31	R31	N/A	N/A	N/A
	80	300	R31	R31	N/A	N/A	N/A	N/A
	90	340		R31	N/A	N/A	N/A	N/A

## ⚠ DANGER

*Do not attempt to clean a manhole with the WHR hanging by the hose. The tool can turn around and strike the Operator. Specific accessories are offered and are required to safely clean manholes. Do not allow the tool to enter a manhole or vault while in operation. If the tool is not contained in a pipe it presents a serious hazard and if not avoided could result in death or serious injury.*

**NOTE:** A 15-25 foot long section of leader hose of a different color than the jetter hose is recommended to indicate how close the tool is to exiting the pipe.

- Flush the jetter hose prior to installing the nozzle to remove debris. Install the hose guard or Tiger Tail. If the WHR is being used in pipe diameters less than 10 inches it can be attached directly to the hose end. If being used in larger pipes a straight rigid pipe or centralizer must be placed behind the tool such that the rigid length is greater than the pipe diameter to ensure the tool cannot turn around in the pipe.
- To clean lines, position the WHR and Tiger Tail so it can enter the pipe to be cleaned. The recommended cleaning direction is upstream from the manhole.
- Slowly bring the pump up to pressure, making certain that the WHR begins to pull its way into the pipe in the proper direction; allow it to advance a few feet and note the location of the leader hose or other hose marker being used. Once the pump is up to operating pressure, feed out the reel at a reasonable rate to allow the jets time to clean the pipe.
- If roots are present, feeding at a slower rate will improve the cleaning results. Depending on the amount of debris in the pipe, it may be necessary to occasionally pull the WHR back toward the manhole to prevent buildup of debris behind the tool.
- When finished cleaning, withdraw the tool back to its initial starting point noted by the location of the leader or hose marker.
- Shut down and secure the pump before removing the WHR from the line.
- After the job has been completed, remove the WHR from the hose and blow out the water with compressed air to prolong the life of the internal components.

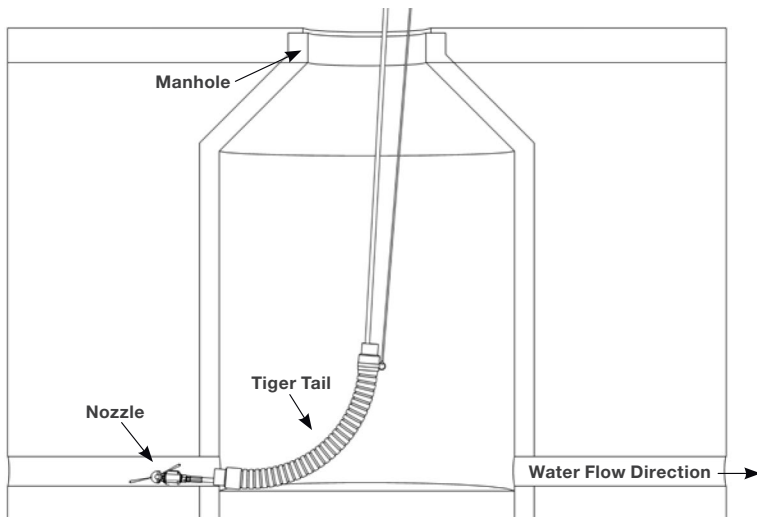

**Figure 1. Proper Nozzle Setup**

**HEAD WILL NOT ROTATE:**

- Check to see if any jets, or inserts, are plugged. Even if a jet is only partially blocked it can keep the head from rotating. Jets must be removed from the head to be properly cleaned. Poking the material plugging the jet back into the head will not fix the problem because it will re-plug the jet once water starts flowing. If the jets are all clear, wash the nozzle off with water to remove any debris or grit between the head, body and shaft. Then try rotating head by hand. It should feel free with a slight amount of smooth resistance. If it feels rough, gritty, or hard to turn, the tool needs to be repaired. It may need new bearings and shaft seals or high pressure seals. It is possible the tool needs viscous fluid added or changed, but if viscous fluid is confirmed to be present, a rebuild should be considered.

**HEAD SPINS TOO FAST:**

- If the nozzle is spinning significantly faster than normal, or if the nozzle starts to sound different (like a jet engine or a turbo charger) the nozzle may be low on viscous fluid, or the viscous fluid may be contaminated. In this case, add or change the fluid as appropriate. Continued operation in this state can mechanically damage the tool and a rebuild may be required to replace the faulty shaft seals.

**HIGH-PRESSURE WATER SEALS LEAK:**

- The WHR's seal design uses a slight amount of water for lubrication. At full pressure it should not leak more than a few drops with a new set of seals. The high pressure seals may need to be replaced if you are not able to get to full pressure.

**LOCK-UP TROUBLESHOOTING TIP:**

- Rotate in reverse 1 1/4 to 1 1/2 turns to unlock braking mechanism. If tool rotates smoothly then redress may not be required.
- If the head rotates freely by hand, check the jet sizes and calculate pressure loss through the coil tubing and check with your distributor or StoneAge® to make certain there is enough jet torque to provide rotation.
- Verify jetting at <http://jetting.stoneagetools.com/#/t/sw> contact your factory authorized Warthog® dealer or contact StoneAge®, Inc.

**TO KEEP THE TOOL RUNNING AT ITS BEST, PLEASE FOLLOW THE MAINTENANCE SCHEDULE IN THIS MANUAL**

# FLUID REPLACEMENT

## SPEED CONTROL FLUID CHANGE

Fluid replacement is made easy with the WHR. Disassembly of the tool is not required, which means there is less chance for contamination and longer overall tool life. Fluid changes should be performed by qualified persons.

This procedure is recommended for replacing the fluid with the same viscosity.


Not all of the fluid will be replaced using this procedure. Full disassembly and cleaning is recommended when changing speed, or viscosity of fluid. The WHR is designed for maximum fluid life and frequent fluid changes should not be required. A complete fluid change is necessary when replacing bearings and shaft seals.

## NOTICE

Improper fluid change maintenance can result in reduced bearing or shaft seal life. Use extreme care when performing this procedure. The fluid is thick and only very light pressure should be applied to the syringe. Excess pressure will force fluid past the inner shaft seals and into the bearings.

## VISCOUS FLUID REPLACEMENT INSTRUCTIONS

1. Position the tool (preferably mounted in a vise) at an angle with one Port Plug (BJ 026) at the highest point and the other Port Plug at the lowest point. Clean around, then remove the upper Port Plug from the body.
2. Fill the Syringe (BC 410) with viscous fluid by removing the end near the handle, pulling out the plunger, and pouring the Viscous Fluid (BJ 048-M) in to fill the Syringe Body. With plunger re-installed, purge air out of Syringe hose.
3. Screw the syringe into the upper port, then remove the lower Port Plug. Using the assistance of gravity, gently ease the new fluid into the WHR Body while letting the old fluid flow out the opposite hole.
4. Rotate the Head while flushing.  
**DO NOT PRESSURIZE THE CHAMBER** by aggressively forcing in fluid. The fluid is thick and some time is required to complete the flush.
5. Reinstall the exit Port Plug, then remove the Syringe and install the inlet Port Plug.

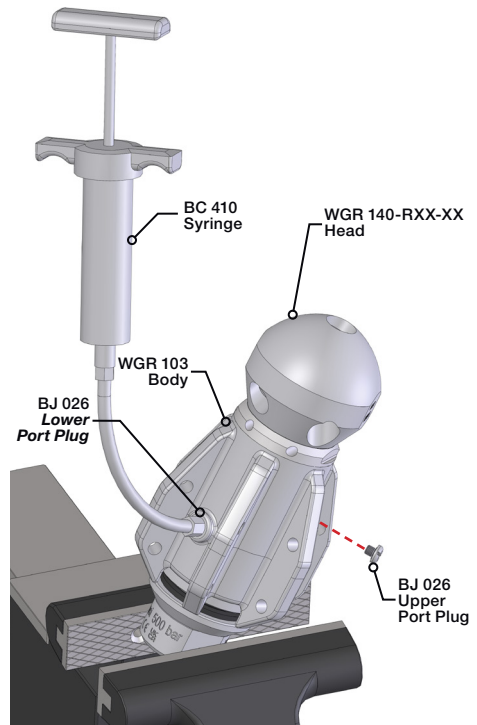



Product training and proper tools are required to service this nozzle. If you are uncomfortable performing the service, bring the nozzle to your authorized dealer.

The use of a bench vise and an arbor press is recommended. Take care throughout the entire procedure to keep the internals clean and free from grit, lint, and contamination. Failure to do so could result in premature failure after service. See complete Disassembly and Assembly instructions in this manual.

## NECESSARY TOOLS:

- 3/8" Drive Ratchet with 3" Extension
- Arbor Press (recommended)
- Bearing Splitter
- Bench vise (recommended)
- Cotton swab
- Large Adjustable Wrench (12" Crescent® Wrench)
- Medium size flat-head screw driver
- Pick
- Rubber Band
- Automotive Sliding Wrench (18" Crescent® C718 Automotive Wrench)
- 5/32" Hex Key

## NECESSARY MATERIALS:

- Clean lint free rags or blue shop towels
- Isopropyl Alcohol
- Anti-Seize - Swagelok® Blue Goop® StoneAge PN (GP 043)
- Grease - P80 Grip-IT® Lubricant StoneAge PN (GP 038-X)
- Grease - Chevron Multifak® EP1 StoneAge PN (GP 049)
- When installing jets, StoneAge uses Parker® Yellow ThreadMate and Teflon Tape or an equivalent combination on the threads of each jet.

## WGR-U 612 TOOL KIT (INCLUDES)



**WGR 184**  
HP Seal Press



**WGR 182**  
Installation Press



**WGR 186**  
HP Seal Puller



**WGR 181**  
Removal Press Tube



**WGR 183**  
Hex Tool



**WGR 180**  
Magnum Shaft  
Lock Pin

*Blue Goop® is a registered trademark of Swagelok® Company.*

*P-80 Grip-it® Quick-Drying Temporary Lubricant - International Products Corporation.*

*Parker® Yellow ThreadMate™ is a registered trademark of Parker-Hannifin Corporation.*

*Chevron® and Multifak® EP 1 are registered trademarks and/or trademarks of Chevron® USA Inc.*

# DISASSEMBLY

## DISASSEMBLY

1. Remove the head by clamping it in a bench vise with the Inlet Nut facing up. Insert the provided Magnum Shaft Lock Pin through the hole in the Front Nut in order to lock the shaft, the Magnum Shaft Lock Pin should stick out the opposite side. Rotating the Body may be required to align the through hole and the shaft. Unscrew the body from the head by hand.

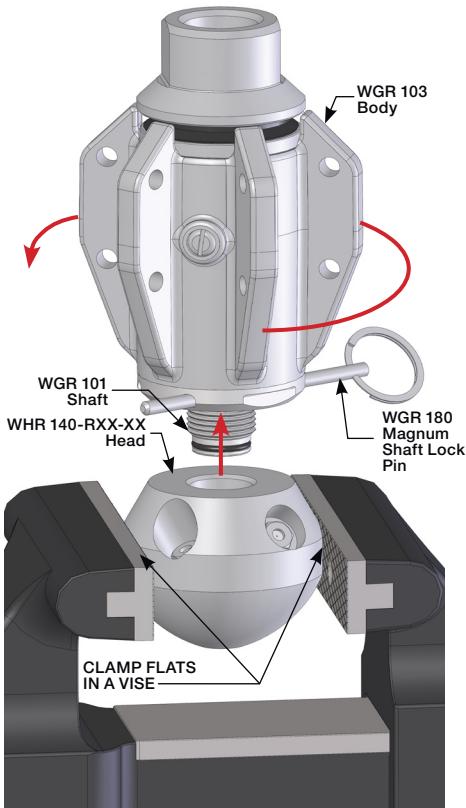
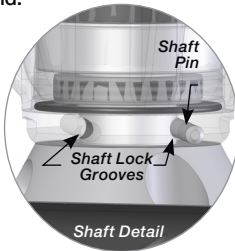


Figure 1: For Step 1

2. With the Body still in the vise, use an Automotive Sliding Wrench on the flats of the Body to carefully hold it in place. Use caution not to deform the Body with too much pressure.
3. Use a Large Adjustable Wrench to remove the Inlet Nut from the Body.

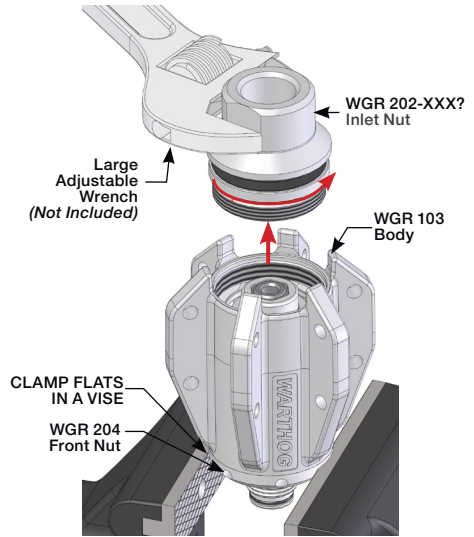


Figure 2: For Steps 2-3

4. Use a pick to carefully remove the Wave Spring.

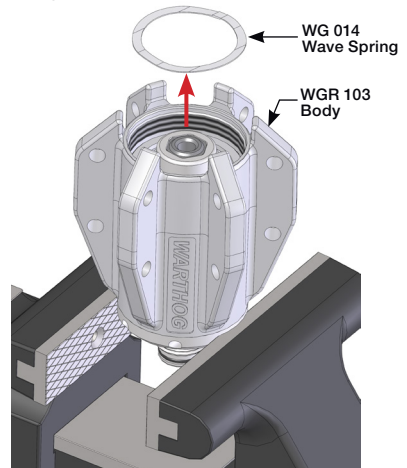


Figure 3: For Step 4

- Remove the Port Plug that is closest to the Front Nut with a medium size, flat-head, screw driver.
- Place the Body flat onto an Arbor Press with the Front Nut facing up. Gently use the press to push down on the top of the Shaft Assembly so that it slips out of the bottom of the Body. Fluid may bleed out during removal. The front Bearing inside the Body should remain in place. The rear Bearing should slide out with the Shaft, along with the Seal Spacer and Shaft Seal when the Shaft is removed.

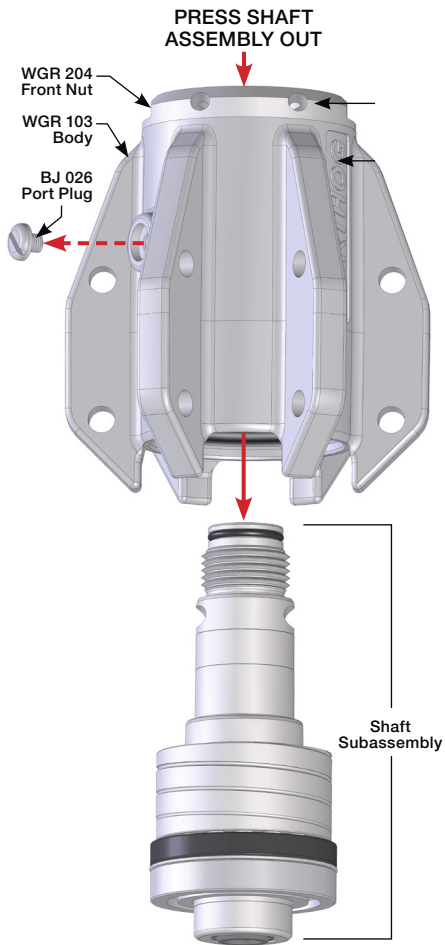


Figure 4: For Steps 5-6

- Carefully clamp the flats of the Front Nut in a bench vise. Rotate the Body off the Front Nut.

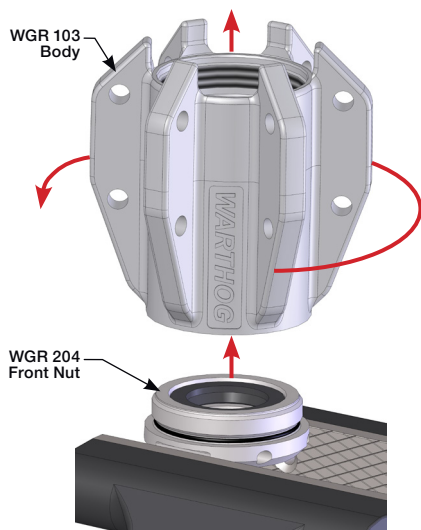


Figure 5: For Step 7

- Flip the Body over and place onto an Arbor Press. Seat the Removal Tool against the Bearing to press the Shaft Seal, Seal Spacer, and Bearing out of the Body.

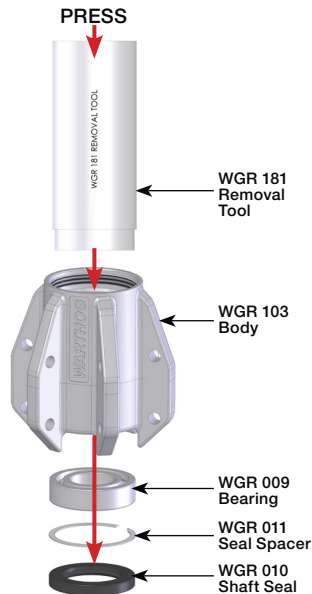


Figure 6: For Step 8

9. Using a pick, remove the Shaft Seal and O-Ring from the Front Nut.

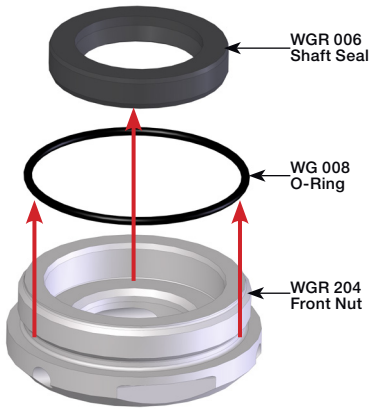


Figure 7: For Step 9

10. Using a pick, remove the Shaft Seal and both O-Rings from the Inlet Nut. Use care to not scratch or damage the seal bore or glands of the Inlet Nut otherwise leakage may occur.

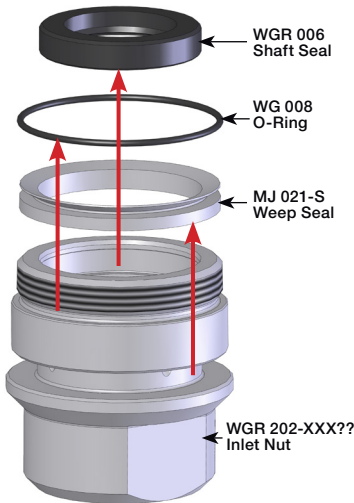


Figure 8: For Step 10

11. Squeeze the HP Seal Puller together and insert it into the bore of the Nut HP Seal, then release. The HP Seal Puller should hook the bottom edge of the Nut HP Seal; pull upward in a circular pattern to work the Nut HP Seal out of the Inlet Nut. Using a pick remove the Wave Spring and O-Ring. Inspect the polished faces, if damaged, replace HP Seal set together.

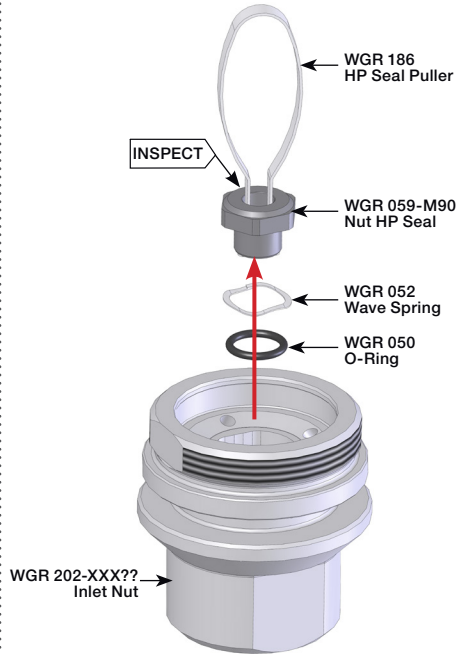


Figure 9: For Step 11



### TECH TIP:

Be sure to inspect all the indicated areas in the disassembly process. This will aid in determining which parts need to be replaced.

- Squeeze the HP Seal Puller together and insert it into the bore of the Shaft HP Seal, then release. The HP Seal Puller should hook the bottom edge of the Shaft HP Seal; pull upward in a circular pattern to work the Shaft HP Seal out of the Shaft. Remove the Wave Spring. *Removing the Shaft HP Seal is required to prevent it from being damaged while removing the Bearing in the next step.* Inspect the polished faces, if damaged, replace HP Seal set and together.
- Use a pick to remove the O-Rings from the Shaft. Do not scratch the glands in the shaft otherwise leakage may occur.

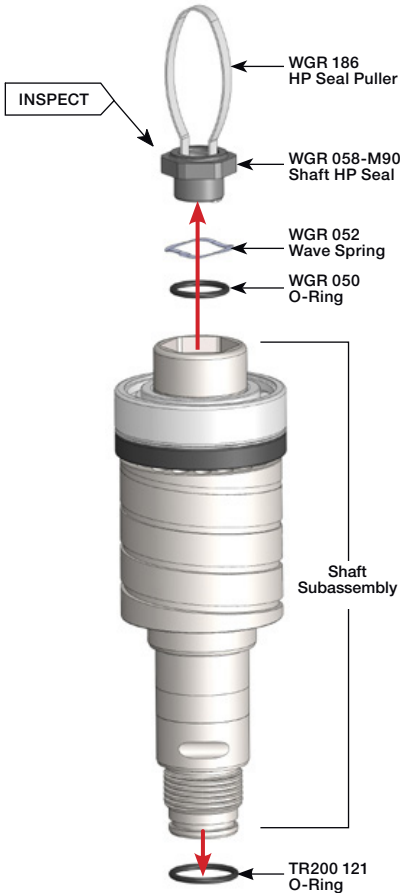


Figure 10: For Steps 12-13

- Evenly seat a Bearing Splitter under the Rear Bearing then press on the end of the Shaft to remove Bearing. Use care to not catch or bend the Seal Spacer. The Seal Spacer and Shaft Seal will then slip off the shaft.



- Inspect the Shaft for grooving where the four shaft seals and bearing ride for signs of the bearings slipping or scratches which extend into the area where the seals operate. Inspect the front shaft lock grooves for interfering deformation. Remove burrs or high spots by gently grinding or filing. If any place is severely damaged or worn, the shaft may need to be replaced.

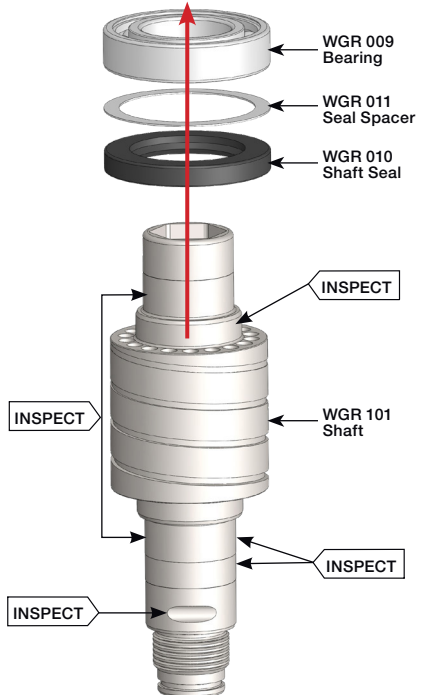


Figure 11: For Steps 14-15

## ASSEMBLY

### NOTICE

Wash all appropriate parts in solvent and blow dry before assembling. Always use the new replacement parts from our service kits. See the "Service Kit" section of this manual for a list of available replacement parts.

GREASE 1 = Chevron Multifak® EP 1

GREASE 2 = P80 Grip-IT® Lubricant

ANTI-SEIZE = Swagelock® Blue Goop or Equal

1. Install the O-Ring into the recess inside the bore of the Inlet Nut. Apply grease after it is seated in the recess. Then place the Wave Spring into the Inlet Nut.
2. Apply a light coating of grease to the stem of the Nut HP Seal. Using the HP Seal Press (WGR 184) gently press the Nut HP Seal into the Inlet Nut. Rocking the Nut HP Seal in a small circular pattern while applying light pressure may aid in installation. *\*Pressing too hard will damage or chip the seal. Always use the Seal Install Tool to avoid damage to the polished face.\* The Nut HP Seal should compress freely*

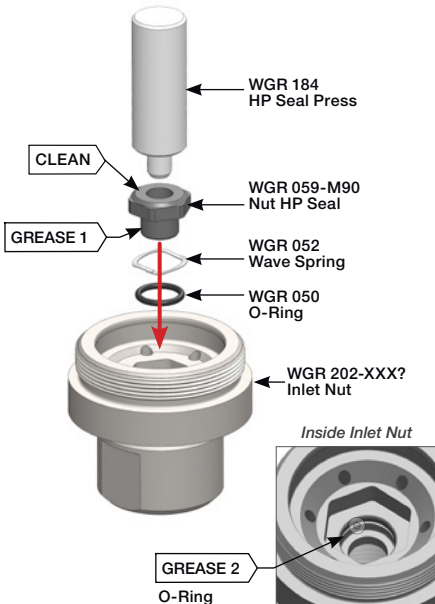


Figure 12: For Steps 1-2

3. Install the Shaft Seal with the lip spring facing down into the Inlet Nut. Generously coat the inside of the Shaft Seal with grease. Seat the O-Ring (WG 008) around the base of the threads. Slip the Weep Seal (MJ 021-S) into the deep groove past the threads.

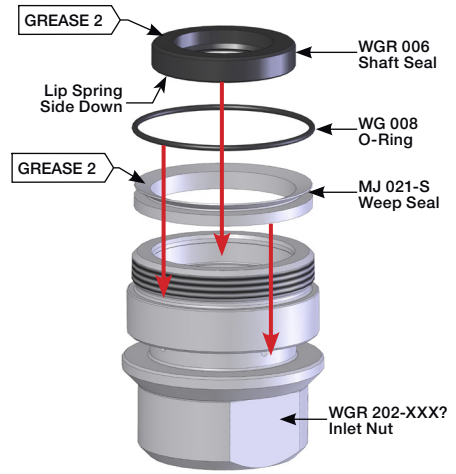


Figure 13: For Step 3

4. Press the Shaft Seal with the lip spring facing down until it is 1/16" below the edge of the Front Nut. Generously coat the inside of the Shaft Seal with grease.
5. Press the O-Ring into the groove below the threads.

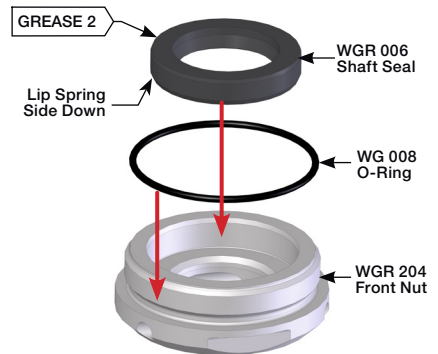


Figure 14: For Steps 4-5

- Pack and coat every surface of the Bearing with grease.
- Use the "Bearing End" side of the Install Tube (WGR 181), Install the Bearing and into the Body on top of the Seal Spacer.



**TECH TIP:**  
The use of an Arbor Press is recommended for the next two steps.

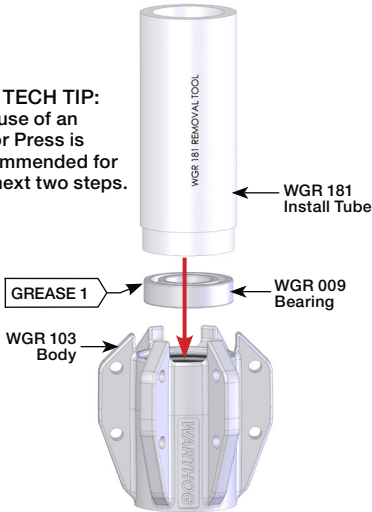


Figure 15: For Steps 6-7

- Grease the Seal Spacer and install on top of the Bearing inside the Body.
- Lightly coat the Shaft Seal with grease and use the "Seal End" side of the Install Tube (WGR 181) to press the Shaft Seal into the Body.
- Install the both Port Plugs (BJ 026). Hand tighten the one closest to the Inlet Nut end.

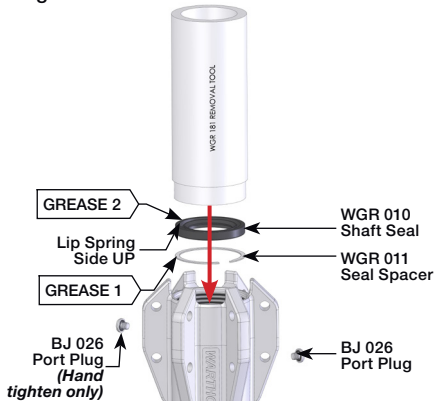


Figure 16: For Steps 8-10

- Install the assembled Front Nut. Apply anti-seize to the threads of the Body and torque to 115-135 ft-lbs.

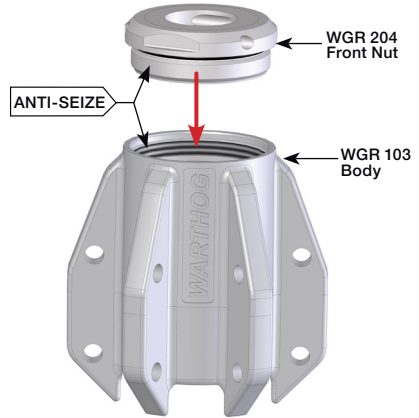


Figure 17: For Step 11

- Flip the Body over so the Front Nut faces down.
- Lightly coat the Shaft with grease where the Shaft Seals and Bearings ride. Gently insert the Shaft into the Body then push the Shaft into place by hand. The shoulder on the Shaft should stick out slightly from the Front Nut.

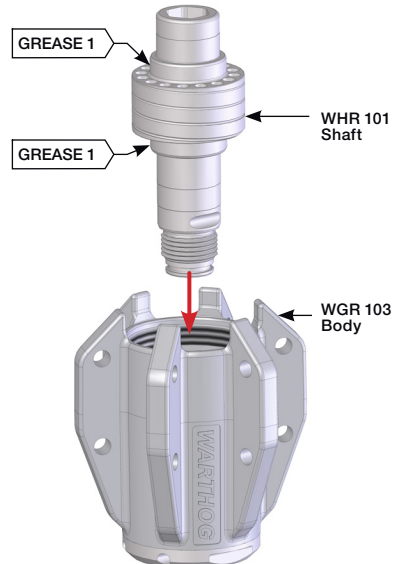


Figure 18: For Steps 12-13

## NOTICE

Medium viscosity fluid (**BJ 048-M**) is recommended by StoneAge for maximized performance and Minimized maintenance.

Please contact your Dealer or StoneAge Customer Service to select the right fluid for your application.

- Fill the Body with fluid (BJ 048-M) to the bottom of the chamfer of the shoulder on the Shaft.

**⚠ This fluid level height is critical.**

- Spin the Shaft to bleed the Fluid. Attach the Hex Tool (WHR 183) to a 3/8" drive ratchet with a 3" extension and insert it into the internal hex in the end of the Shaft. Rotate the Shaft slowly in a Counterclockwise direction to work out all the air bubbles from the system.

### TECH TIP:

The viscosity of the fluid is very thick. Be sure to take time to allow all the air bubbles to come out.

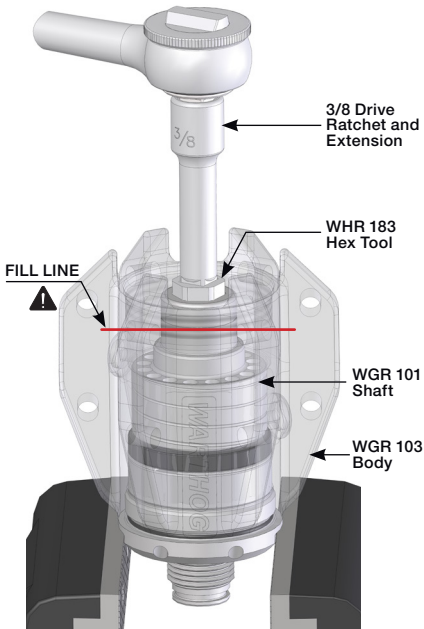


Figure 19: For Steps 14-15

### TECH TIP:

Before proceeding; The use of an Arbor Press and Install Tube (WGR 181) is recommended for the next three steps.

- Remove the Port Plug furthest from the Front Nut.
- Lightly coat the Shaft Seal with grease.
- Use the Install Tube (WGR 181) to install the Shaft Seal with the lip spring facing the center of the Body. It is normal for the visc fluid to ooze out of the open port.
- Clean off any excess fluid on the Body and install the Port Plug.

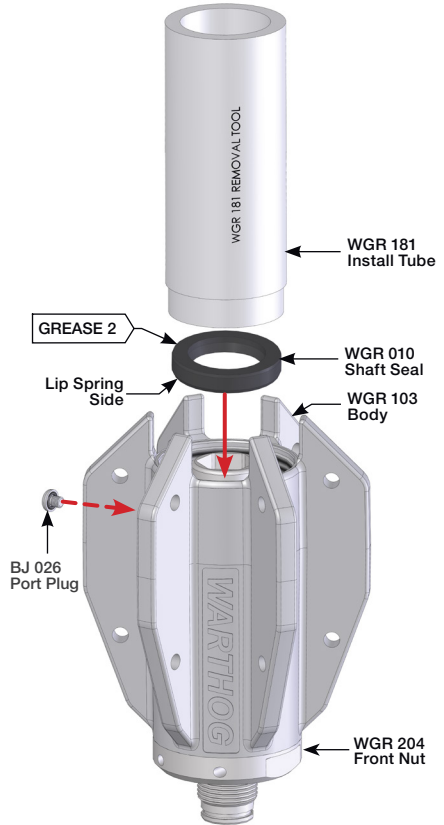


Figure 20: For Steps 16-19



20. Install the Seal Spacer on top of the Shaft Seal.
21. Pack and coat every surface of the Bearing with grease.
22. Use the Install Tube (WGR 181) Install the Bearing and into the Body on top of the Seal Spacer.

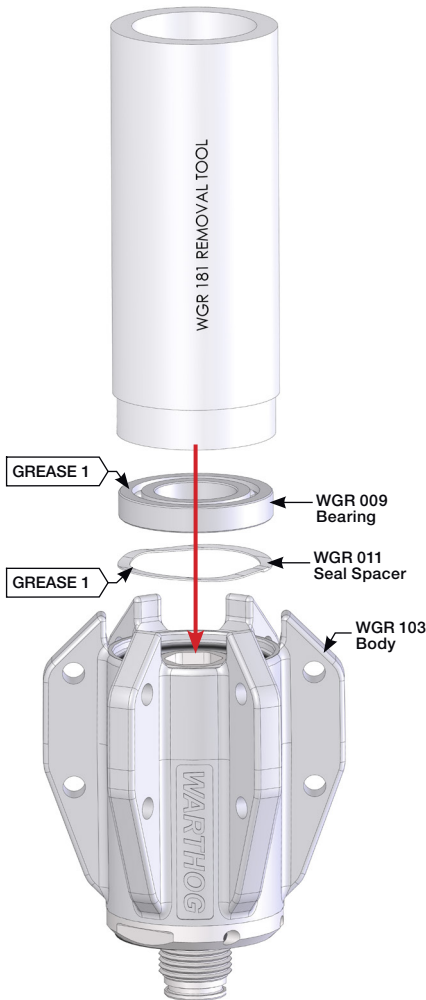


Figure 21: For Steps 20-22

23. Install the O-Ring (WGR 050) into the groove in the bore of the Shaft. Install the O-Ring (TR200 121) into the groove before the start of the Shaft threads. Grease both O-Rings after installation.
24. Place the Wave Spring into the Shaft.
25. Apply a light coating of grease to the stem of the Shaft HP Seal. Using the HP Seal Press (WGR 184) gently press the Shaft HP Seal (WGR 058-M90) into the Shaft. Rocking the Shaft HP Seal in a small circular pattern while applying light pressure may aid in installation. *\*Pressing too hard will damage or chip the seal. Always use the Seal Press Tool to avoid damage to the polished face.\* The Shaft HP Seal should compress freely.*
26. Clean the polished face of the Shaft HP Seal with Isopropyl alcohol. The polished face needs to be clean and free from lint, grease and oils.


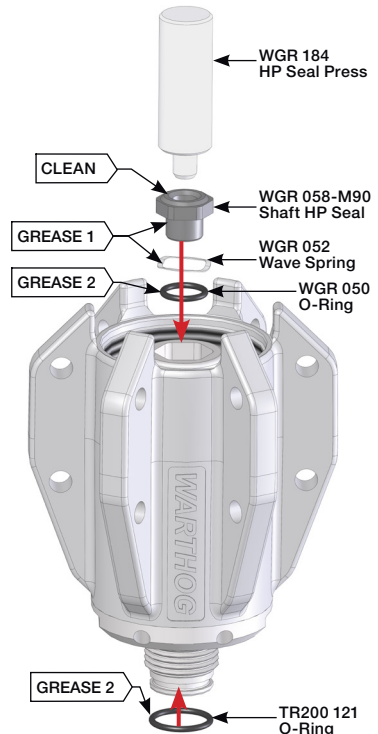



Figure 22: For Steps 23-26

# ASSEMBLY


27. Clamp the flats of the Front Nut a vise.
28. Generously coat the Wave Spring with grease. Drop into the Body on top of the Bearing.

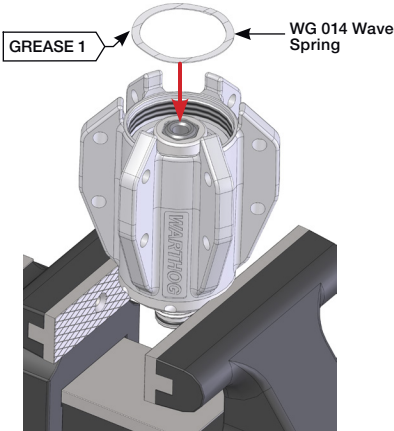

29. Apply anti-seize on the threads of the Inlet Nut. Install the Inlet Nut tightly. (A torque of 115-135 ft-lb. is recommended)
30. Hold the tool at an angle so one of the ports is the highest position, remove the Port Plug to relieve any pressure built up from installing the Inlet Nut then reinstall the Port Plug.

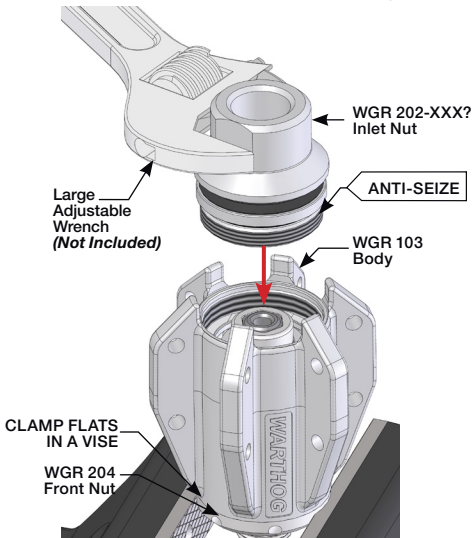

31. Install the Head by clamping the flats in a vise with the threads facing up.
32. Push the provided Magnum Shaft Lock Pin through the first hole in the Front Nut, locking the shaft in place.
33. Make sure the threads on the Shaft and inside the Head are free from grit, debris, and old Loctite®. Make sure the O-Ring on the shaft is clean and in good condition. Apply Blue Loctite® 242 to the Shaft threads and install into the Head tightly. (A torque of 50 ft-lb. is recommended).

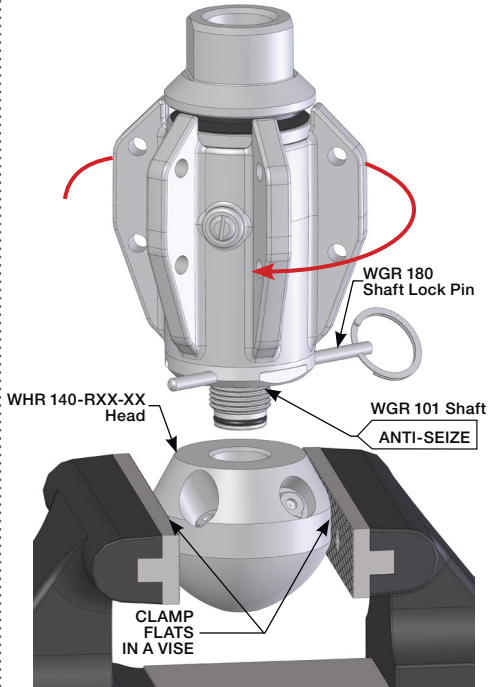

## DESCRIPTION AND INTENDED USE:

The Switcher is designed to allow an operator to “switch” between a pulling/flushing mode and a cleaning mode while using the same head. This is made possible by an internal mechanism called a Poppet. When flow is cycled on and off, the Poppet redirects all flow to either the pulling/flushing (back and front) jets or the cleaning (side) jets. One Warthog Switcher Head can perform a cleaning job that would normally require two or more different heads with different jet configurations. Utilizing the Switcher head will increase both time and water consumption savings. The design is more efficient because all of the flow is directed to exactly where it is most useful for either pulling/flushing or cleaning.

WGR SWITCHER PARTS		
MODEL:	SWT	CC
CNP2 XXX Jets	9	9
GP 025-SS-P2 Plug	?	?
SA 062 O-Ring	4	4
WGR 060-R31 Head	1	
WGR 060-R45-CC Head	0	1
WGR 061-1-1.75 Bushing	1	1
WGR 062 Cartridge Assembly	1	1
WGR 064 Poppet	1	1
WGR 066 Spring	1	1

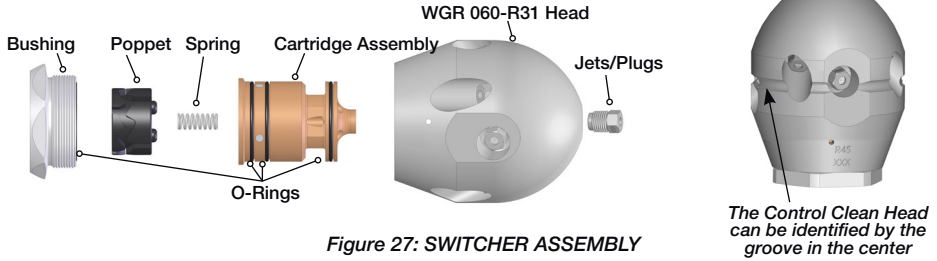


Figure 27: SWITCHER ASSEMBLY

## WGR SWITCHER MAINTENANCE TOOLS AND MATERIALS

Product training and proper tools are required to service this nozzle. If you are uncomfortable performing the service, bring the nozzle to your authorized dealer.

Take care throughout the entire procedure to keep the internals clean and free from grit, lint, and contamination. Failure to do so could result in premature failure after service. See complete Disassembly and Assembly instructions in this manual.

For maintenance video:

<https://www.youtube.com/playlist?list=PL-XpY-7HhmpxVkcCu1zG45Wh5w0VY3MwZ0>

### NECESSARY TOOLS:

- 3/8” Nut Driver
- Arbor Press
- Automotive Sliding Wrench
- (18” Crescent® C718 Automotive Wrench)
- Bench Vise
- Pick
- Pin or needle
- Small Punch

### NECESSARY MATERIALS:

- Clean lint free rags or blue shop towels
- Anti-Seize - Swagelok® Blue Goop®
- StoneAge PN (GP 043)
- Grease- P80 Grip-It® StoneAge PN (GP 038-X)

*When installing jets, StoneAge uses Parker® Yellow ThreadMate and Teflon Tape or an equivalent combination on the threads of each jet.*


# WGR SWITCHER OPERATION AND TROUBLESHOOTING

## OPERATION:

Install the WGR Switcher Nozzle onto the hose end. Position hose and nozzle into the pipe to be cleaned. We recommend running the nozzle into the pipe about 3-5 feet. Verify switcher's position of by bringing the nozzle up to operating pressure.

## Note:

1. While pressurizing the hose and nozzle expect a pressure jump when the switcher engages, which should be below the operating pressure.
2. In the pulling/flushing mode there will be more tension on the hose versus the cleaning mode. Also listen to the sound and watch the air/water flowing out of the pipe. Faster air/water flowing from the pipe indicates the switcher is in the pulling/flushing mode. Slower air/water flowing from the pipe indicates the switcher is in the cleaning mode. To switch modes, dump pressure from the hose and nozzle until the pressure gauge reads zero. This may take several seconds. Then bring the hose and nozzle back to operating pressure. Repeat these steps to switch between modes as necessary.

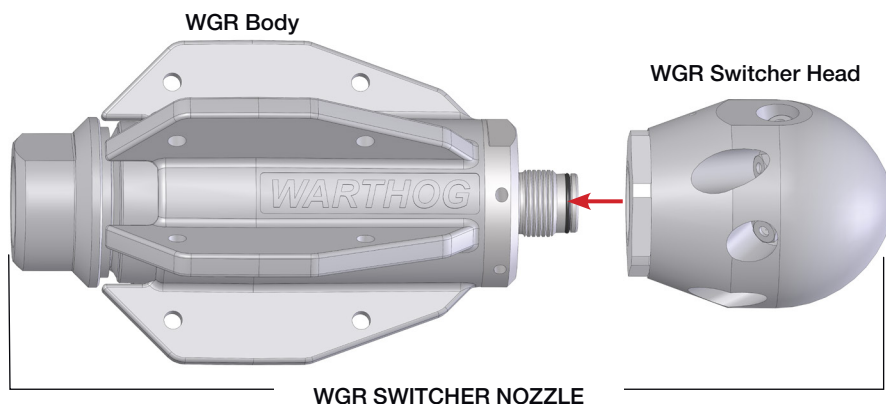

## TROUBLE SHOOTING:

### Tool Is Not Switching:

- If the Switcher appears to be “stuck” in either the pulling/flushing or cleaning mode, first cycle the pump up and down in pressure several times.
- If cycling the tool doesn't fix the problem, the Switcher Head will need to be removed from the WGR Body and disassembled (refer to the disassembly/assembly page). The Switcher is designed to handle debris up to .030 inches in diameter, but larger particles may lock up the mechanism. Thoroughly clean all the components once disassembled. Examine components for excessive wear or any other visible problems. Once cleaned and examined, the Switcher can be reassembled following the procedure on the second page. If proper switching is not achieved with this procedure, the Switcher will need to be returned to StoneAge for evaluation.

## DISASSEMBLY

1. Secure the wrench flats of the Switcher Head in a vise with the Bushing facing up.
2. Using an Automotive Sliding Wrench, break the Bushing loose from the Head and continue to remove it by hand.

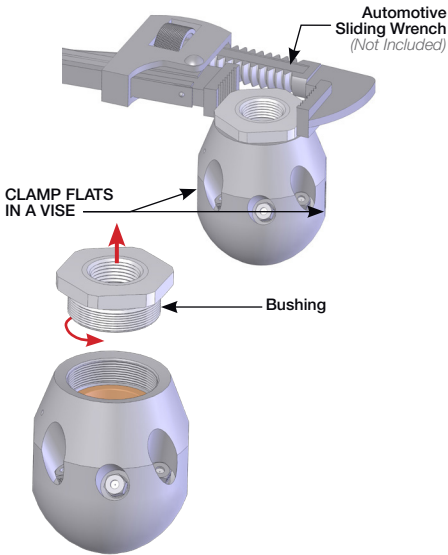


Figure 28: For Steps 1-2

3. Within the Switcher, there is a Poppet with a Spring beneath it. Push and turn the Poppet inwards until it can be removed. Set the Poppet and Spring aside.

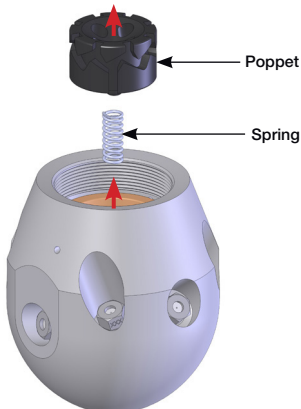


Figure 29: For Step 3

4. Remove the Front Jet from the Front Port with a 3/8" Nut Driver.

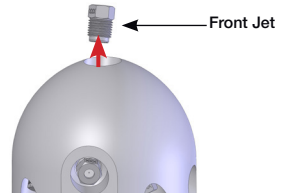


Figure 30: For Step 4

5. To remove the Cartridge Assembly from the Head, place the Head on the Arbor Press with the Front Port facing up. Locate the nose of the Cartridge Assembly through the Front Port. Insert a small punch to contact the nose inside the head and an Arbor Press to push down on the punch to release the Cartridge Assembly.

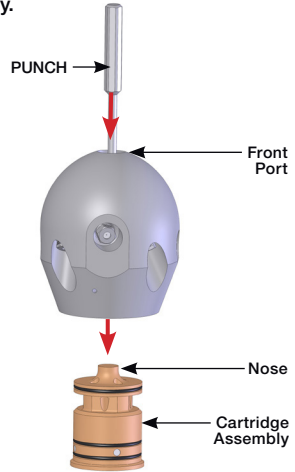


Figure 31: For Step 5

6. Use a pick to remove the O-Ring in the groove of the Bushing, and the three O-Rings on the Cartridge Assembly.

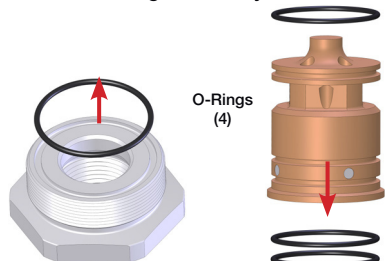


Figure 32: For Step 6

## ASSEMBLY

### NOTICE

If reusing parts instead of replacing them;

- **Wash** all parts thoroughly in solvent and blow dry before assembling.
- **Clean** any blockages or debris from the weep holes in the head with a pin.
- **Inspect** the Spring and the channels of the Poppet for wear.
- **Inspect** all O-Rings for wear and tearing.
- **Inspect** the threads of the Inlet Nut for wear.

**GREASE** = Lithium Complex NGLI 1 or Equal

**ANTI-SEIZE** = Swagelock® Blue Goop or Equal

1. To begin reassembly, install the O-Ring into the groove in the Bushing and the three O-Rings onto the Cartridge Assembly. Apply grease to all the O-Rings.

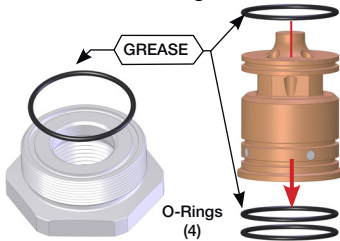


Figure 33: For Step 1

2. Install the prepped Front Jet into the Front Port with a 3/8" Nut Driver.
3. Use the small punch to press the Cartridge Assembly back into the Head. Use the Arbor Press on the punch to tap the Cartridge back into the Head evenly.

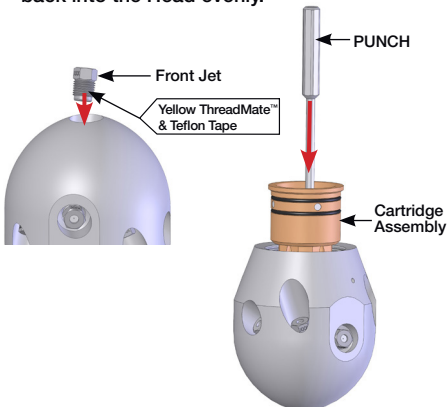


Figure 34: For Steps 2-3

4. Install the Spring into the center of the Cartridge Assembly.
5. Press the Poppet into the Head assembly and rotate while pressing until its held in place.

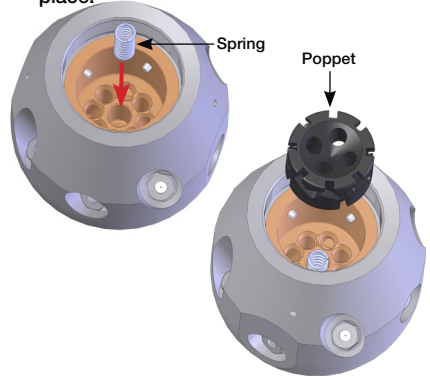


Figure 35: For Steps 4-5

6. Apply grease on and around the O-Ring in the Bushing.
7. Apply anti-seize to the threads of the Bushing, and begin to hand tighten it into the Head.
8. Secure the wrench flats of the Switcher Head in a vise with the Bushing facing up and securely tighten the Bushing to the Head with an Automotive Sliding Wrench,


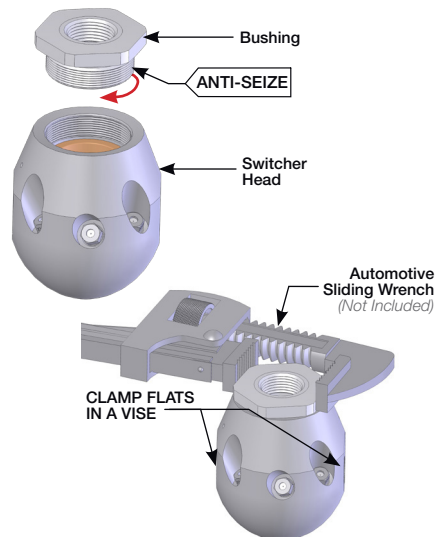


Figure 36: For Steps 6-8

# Warthog® MAGNUM (WGR-U) MAINTENANCE

ITEM	FREQUENCY	MAINTENANCE REQUIRED
Nozzle	Weekly	<ul style="list-style-type: none"> <li>Rinse the nozzle with clean water to remove debris between the head, body and shaft.</li> </ul>
Inserts	Weekly	<ul style="list-style-type: none"> <li>Inspect all inserts for blockages.</li> <li>Remove inserts with blockages and clean and dry them thoroughly.</li> <li>Use thread sealant and ensure inserts are not cross threaded when inserting them back into the head.</li> <li>Install the inserts back into the exact locations from which they were removed to ensure the nozzle remains balanced.</li> <li>If using the nozzle in recycled water, remove inserts and check for the following; Erosion or chipping of the orifice, missing or damaged flow straighteners, and/or visible damage to the insert itself.</li> </ul>
Head	Weekly	<ul style="list-style-type: none"> <li>Ensure head is rotating properly; when turned by hand, head should turn free with slight, smooth resistance.</li> <li>If head spins too fast or sounds different than usual, nozzle may be low on viscous fluid or fluid is contaminated.</li> <li>If head feels gritty when turning, flush between head and body.</li> <li>If head still feels gritty when turning, rebuild recommended.</li> </ul>
Insert Orifice Size	Every 6 months	<ul style="list-style-type: none"> <li>Inspect insert orifice size with pin gages.</li> <li>Replace inserts as needed to retain most effective jetting capability and cleaning efficiency during operation.</li> </ul>
Body	After one Year	<ul style="list-style-type: none"> <li>See “Viscous Fluid Replacement” section of the User Manual.</li> <li>Flush viscous fluid with same type (BJ 048-M).</li> <li>This procedure is <i>only</i> recommended for replacing with the <i>same</i> fluid. Not all of the fluid will be replaced during the flushing procedure, therefore full disassembly and cleaning of the tool is recommended when changing to a different speed, or viscosity of fluid.</li> <li>Full fluid change is necessary when replacing bearings and shaft seals.</li> </ul>
Nozzle	After two Years	<ul style="list-style-type: none"> <li>Full disassembly, inspection, and overhaul. See complete Disassembly and Assembly instructions in the User Manual or Maintenance Video. (Links provided below.)</li> <li>Take care throughout the entire procedure to keep the internals clean and free from grit, lint, and contamination. Failure to do so could result in premature failure after service.</li> </ul>

# Warthog® MAGNUM (WGR-U) SERVICE KITS

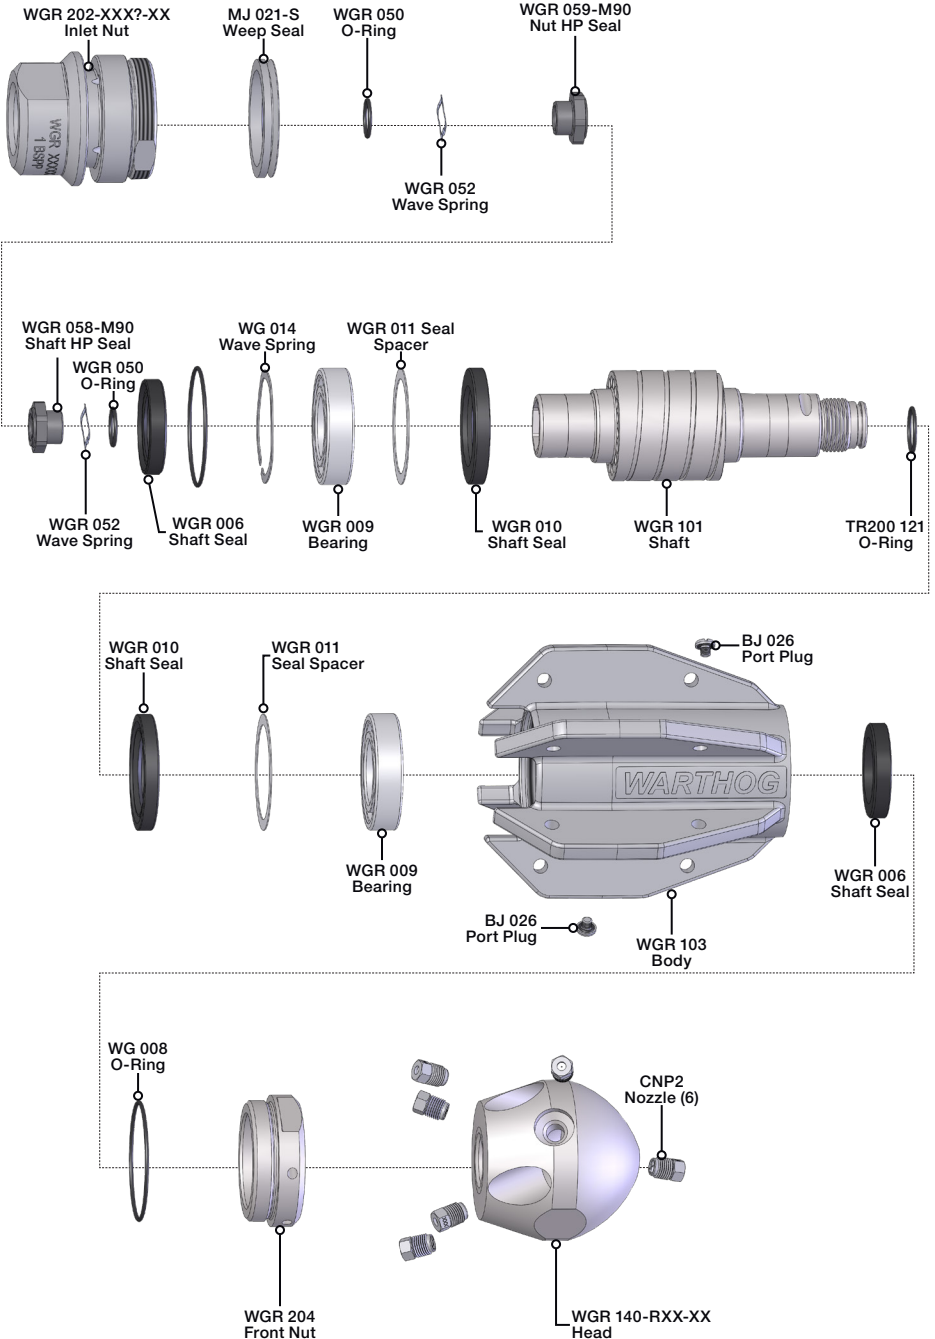



KITS AND KIT CONTENTS

WGR-U 600-ST1 SERVICE KIT

- 1 BJ 062-S Anti-Seize 2g
- 1 TR200 121 O-Ring 3/4 OD 90A BUNA-N
- 2 WG 008 O-Ring 1-3/16 OD 70D BUNA-N
- 1 WG 014 Wave Spring for Bearing
- 1 WGR 009 Ball Bearing
- 2 WGR 006 38mm OD Seal with Sealing Lip
- 2 WGR 009 Slip Fit Body Bearing
- 2 WGR 010 Shaft Seal
- 2 WGR 011 Seal Spacer

WGR-U 600-VS SERVICE KIT WITH VISC

- 1 BC 410 Syringe Tube Assembly
- 1 BJ 048-M 6oz of Medium Visc
- 1 BJ 062-S Anti-Seize 2g
- 1 PL 726 WGR MAGNUM USER MANUAL
- 1 TR200 121 O-Ring 3/4 OD 90A BUNA-N
- 2 WG 008 O-Ring 1-3/16 OD 70D BUNA-N
- 1 WG 014 Wave Spring for Bearing
- 2 WGR 006 Small Shaft Seal
- 2 WGR 009 Ball Bearing
- 2 WGR 010 Shaft Seal
- 2 WGR 011 Seal Spacer

WGR-U 612 TOOL KIT

- 1 WGR 180 Magnum Shaft Lock Pin
- 1 WGR 181 Removal Press Tube
- 1 WGR 182 Installation Press Tube
- 1 WGR 183 Hex Tool
- 1 WGR 184 HP Seal Install Tool
- 1 WGR 186 HP Seal Puller Tool




WGR-U 610-RT1 OVERHAUL KIT

- 2 BJ 026 Port Plug
- 1 BJ 062-S Anti-Seize 2g
- 2 GP 805 Container with Foam
- 1 MJ 021-S Weep Seal
- 1 PL 726 WGR MAGNUM USER MANUAL
- 1 TR200 121 O-Ring
- 2 WG 008 O-Ring 1-3/16 OD 70D BUNA-N
- 1 WG 014 Wave Spring for Bearing
- 2 WGR 006 38mm OD Seal with Sealing Lip
- 1 WGR 009 Ball Bearing
- 2 WGR 010 Shaft Seal
- 2 WGR 011 Seal Spacer
- 2 WGR 050 O-Ring
- 2 WGR 052 Wave Spring
- 1 WGR 058-M90 Shaft HP Seal
- 1 WGR 059-M90 Nut HP Seal

WGR-U 610-VS OVERHAUL KIT WITH VISC

- 1 BC 410 Syringe Tube Assembly
- 2 BJ 026 Port Plug
- 1 BJ 048-M 6oz of Medium Visc
- 1 BJ 062-S Anti-Seize 2g
- 2 GP 805 Container with Foam
- 1 MJ 021-S Weep Seal
- 1 PL 726 WGR MAGNUM USER MANUAL
- 1 TR200 121 O-Ring
- 2 WG 008 O-Ring 1-3/16 OD 70D BUNA-N
- 1 WG 014 Wave Spring for Bearing
- 2 WGR 006 38mm OD Seal with Sealing Lip
- 1 WGR 009 Ball Bearing
- 2 WGR 010 Shaft Seal
- 2 WGR 011 Seal Spacer
- 2 WGR 050 O-Ring
- 2 WGR 052 Wave Spring
- 1 WGR 058-M90 Shaft HP Seal
- 1 WGR 059-M90 Nut HP Seal

**WGR X87-K FIN EXTENSION KIT**

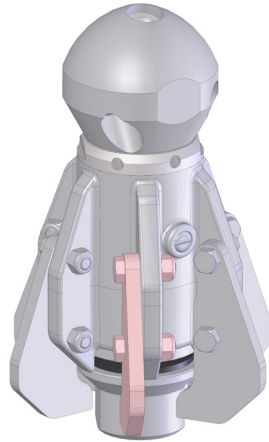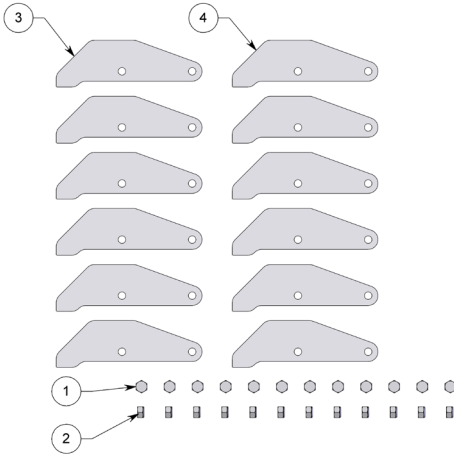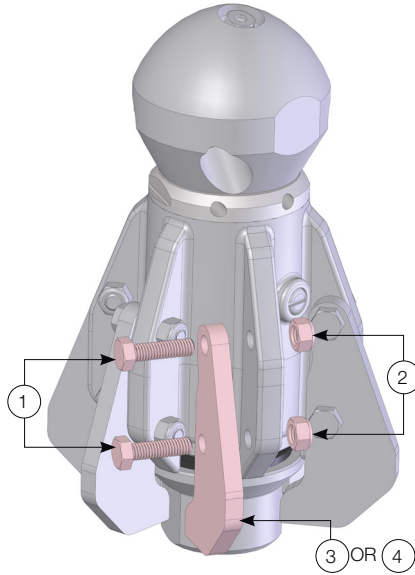

#	WGR X87-K PART NUMBER	WGR 087-K	WGR 287-K
1	GB 3M6-22-1.00 BOLT, HEX M6X1.00 X 22 SS	12	12
2	GN 3M6-1.0-L NUT, NYLOK M6x1.0 SS	12	12
4	WGR 087 FIN EXTENSION, STEEL	6	-
3	WGR 287 FIN EXTENSION, PLASTIC	-	6



PAGE LEFT BLANK INTENTIONALLY



# TERMS AND CONDITIONS AND WARRANTY INFORMATION

**1. Acceptance of Terms and Conditions.** Receipt of these Terms and Conditions of Sale ("Terms and Conditions") shall operate as the acceptance by StoneAge, Inc. ("Seller") of the order submitted by the purchaser ("Buyer"). Such acceptance is made expressly conditional on assent by Buyer to these Terms and Conditions. Such assent shall be deemed to have been given unless written notice of objection to any of these Terms and Conditions (including inconsistencies between Buyer's purchase order and this acceptance) is given by Buyer to Seller promptly on receipt hereof.

Seller desires to provide Buyer with prompt and efficient service. However, to individually negotiate the terms of each sales contract would substantially impair Seller's ability to provide such service. Accordingly, the product(s) furnished by Seller are sold only according to the terms and conditions stated herein and with the terms and conditions stated in any effective StoneAge Dealer Agreement or StoneAge Reseller Agreement, if applicable. Notwithstanding any terms and conditions on Buyer's order, Seller's performance of any contract is expressly made conditional on Buyer's agreement to these Terms and Conditions unless otherwise specifically agreed to in writing by Seller. In the absence of such agreement, commencement of performance, shipment and/or delivery shall be for Buyer's convenience only and shall not be deemed or construed to be an acceptance of Buyer's terms and conditions.

**2. Payment/Prices.** Unless other arrangements have been made in writing between Seller and Buyer, payment for the product(s) shall be made upon receipt of invoice. The prices shown on the face hereof are those currently in effect. Prices invoiced shall be per pricelist in effect at the time of shipment. Prices are subject to increase for inclusion of any and all taxes which are applicable and which arise from the sale, delivery or use of the product(s), and the collection of which Seller is or may be responsible to provide to any governmental authority, unless acceptable exemption certificates are provided by Buyer in accordance with applicable law. Buyer shall pay all charges for transportation and delivery and all excise, order, occupation, use or similar taxes, duties, levies, charges or surcharges applicable to the product(s) being purchased, whether now in effect or hereafter imposed by any governmental authority, foreign or domestic.

**3. Warranty.** SELLER MAKES NO WARRANTIES OR REPRESENTATIONS AS TO THE PERFORMANCE OF ANY PRODUCT EXCEPT AS SET FORTH IN THE STONEAGE LIMITED WARRANTY PROVIDED WITH THE PRODUCT.

**4. Delivery.** Seller is not obligated to make delivery by a specified date, but will always use its best efforts to make delivery within the time requested. The proposed shipment date is an estimate. Seller will notify Buyer promptly of any material delay and will specify the revised delivery date as soon as practicable. UNDER NO CIRCUMSTANCES SHALL SELLER HAVE ANY LIABILITY WHATSOEVER FOR LOSS OF USE OR FOR ANY DIRECT OR CONSEQUENTIAL DAMAGES RESULTING FROM DELAY REGARDLESS OF THE REASON(S).

All product(s) will be shipped F.O.B. point of origin, unless specifically agreed otherwise, and Buyer shall pay all shipping costs and insurance costs from that point. Seller, in its sole discretion, will determine and arrange the means and manner of transportation of the product(s). Buyer shall bear all risk of loss commencing with the shipment or distribution of the product(s) from Seller's warehouse. Order shortages or errors must be reported within fifteen (15) business days from receipt of shipment to secure adjustment. No product(s) may be returned without securing written approval from Seller.

**5. Modification.** These Terms and Conditions are intended by Seller and Buyer to constitute a final, complete and exclusive expression of agreement relating to the subject matter hereof and cannot be supplemented or amended without Seller's prior written approval.

**6. Omission.** Seller's waiver of any breach or Seller's failure to enforce any of these Terms and Conditions at any time, shall not in any way affect, limit or waive Seller's right thereafter to enforce and compel strict compliance with every term and condition hereof.

**7. Severability.** If any provision of these Terms and Conditions is held to be invalid or unenforceable, such invalidity or unenforceability shall not affect the validity or enforceability of the other portions hereof.

**8. Disputes.** Seller and Buyer shall attempt in good faith to promptly resolve any dispute arising under these Terms and Conditions by negotiations between representatives who have authority to settle the controversy. If unsuccessful, Seller and Buyer shall further attempt in good faith to settle the dispute by nonbinding third-party mediation, with fees and expenses of such mediation apportioned equally to each side. Any dispute not so resolved by negotiation or mediation may then be submitted to a court of competent jurisdiction in accordance with the terms hereof. These procedures are the exclusive procedures for the resolution of all such disputes between the Seller and Buyer.



# TERMS AND CONDITIONS AND WARRANTY INFORMATION

**9. Governing Law.** All sales, agreements for sale, offers to sell, proposals, acknowledgments and contracts of sale, including, but not limited to, purchase orders accepted by Seller, shall be considered a contract under the laws of the State of Colorado and the rights and duties of all persons, and the construction and effect of all provisions hereof shall be governed by and construed according to the laws of such state.

**10. Jurisdiction and Venue.** Seller and Buyer agree that the state or federal courts located within the City and County of Denver, Colorado shall have sole and exclusive jurisdiction over any litigation concerning any dispute arising under these Terms and Conditions not otherwise resolved pursuant to Section 9 as well as any alleged defects of any Products or damages sustained as a result of such alleged defects. Seller and Buyer further agree that should any litigation be commenced in connection with such a dispute, it shall only be commenced in such courts. Seller and Buyer agree to the exclusive jurisdiction of such courts and neither will raise any objection to the jurisdiction and venue of such courts, including as a result of inconvenience.

**11. Attorney's Fees.** If any litigation is commenced between Seller and Buyer, or their personal representatives, concerning any provision hereof, the party prevailing in the litigation shall be entitled, in addition to such other relief that is granted, to a reasonable sum as and for their attorneys' fees and costs in such litigation or mediation.

## STONEAGE TRADEMARK LIST

View the list of StoneAge's trademarks and service marks and learn how the trademarks should be used. Use of StoneAge trademarks may be prohibited, unless expressly authorized.

<http://www.StoneAgetools.com/trademark-list/>

## STONEAGE PATENT DATA

View the list of StoneAge's current U.S. patent numbers and descriptions.

[PAT http://www.sapatents.com](http://www.sapatents.com)

## STONEAGE TERMS AND WARRANTY

View StoneAge's Terms and Warranty Conditions online.

<http://www.stoneagetools.com/terms>

<http://www.stoneagetools.com/warranty>

# TERMS AND CONDITIONS AND WARRANTY INFORMATION

## WARRANTY:

Warranties set forth herein extend only to End-Users, meaning customers acquiring, or that have previously acquired, a product manufactured by StoneAge ("Product") for their own use and not for resale, either directly from StoneAge Inc. ("StoneAge") or from a StoneAge Authorized Dealer or Reseller ("Dealer"). No warranty of any kind or nature is made by StoneAge beyond those expressly stated herein.

**1. LIMITED WARRANTY PERIOD.** Subject to the limitations and conditions hereinafter set forth, StoneAge warrants its Product to be free from defects in workmanship and material for a period of one (1) year from the date of purchase by the End-User, provided that the end of the limited warranty period shall not be later than eighteen (18) months from the date of shipment of the Product to the Dealer or the End-User by StoneAge ("Limited Warranty Period"). All replacement parts which are furnished under this Limited Warranty and properly installed shall be warranted to the same extent as the original Product under this Limited Warranty if, and only if, the original parts were found to be defective within the original Limited Warranty Period covering the original Product. Replacement parts are warranted for the remainder of the original Limited Warranty Period. This Limited Warranty does not cover any component part of any Product not manufactured by StoneAge. Any such component part is subject exclusively to the component manufacturer's warranty terms and conditions.

**2. LIMITED WARRANTY COVERAGE.** StoneAge's sole obligation under this Limited Warranty shall be, at StoneAge's option and upon StoneAge's inspection, to repair, replace or issue a credit for any Product which is determined by StoneAge to be defective in material or workmanship. StoneAge reserves the right to examine the alleged defective Product to determine whether this Limited Warranty is applicable, and final determination of limited warranty coverage lies solely with StoneAge. No statement or recommendation made by a StoneAge representative, Dealer or agent to End-User shall constitute a warranty by StoneAge or a waiver or modification to any of the provisions hereof or create any liability for StoneAge.

**3. WARRANTY SERVICE PROVIDERS.** Service and repair of the Product is to be performed only by StoneAge authorized service representatives, including Dealers who are authorized repair centers, with StoneAge approved parts. Information about StoneAge authorized service representatives can be obtained through the StoneAge website at [www.stoneagetools.com/service](http://www.stoneagetools.com/service). Unauthorized service, repair or modification of the Product or use of parts not approved by StoneAge will void this Limited Warranty. StoneAge reserves the right to change or improve the material and design of the Product at any time without notice to End-User, and StoneAge is not obligated to make the same improvements during warranty service to any Product previously manufactured.

**4. WARRANTY EXCLUSIONS.** This Limited Warranty does not cover, and StoneAge shall not be responsible for the following, or damage caused by the following: (1) any Product that has been altered or modified in any way not approved by StoneAge in advance in writing; (2) any Product that has been operated under more severe conditions or beyond the rated capacity specified for that Product; (3) depreciation or damage caused by normal wear and tear, failure to follow operation or installation instructions, misuse, negligence or lack of proper protection during storage; (4) exposure to fire, moisture, water intrusion, electrical stress, insects, explosions, extraordinary weather and/or environmental conditions including, but not limited to lightning, natural disasters, storms, windstorms, hail, earthquakes, acts of God or any other force majeure event; (5) damage to any Product caused by any attempt to repair, replace, or service the Product by persons other than StoneAge authorized service representatives; (6) costs of normal maintenance parts and services; (7) damage sustained during unloading, shipment or transit of the Product; or (8) failure to perform the recommended periodic maintenance procedures listed in the Operator's Manual accompanying the Product.

**5. REQUIRED WARRANTY PROCEDURES.** To be eligible for warranty service, the End-User must: (1) report the Product defect to the entity where the Product was purchased (i.e. StoneAge or the Dealer) within the Limited Warranty Period specified in this Limited Warranty; (2) submit the original invoice to establish ownership and date of purchase; and (3) make the Product available to a StoneAge authorized service representative for inspection to determine eligibility for coverage under this Limited Warranty. This Limited Warranty shall not extend to any person or entity who fails to provide proof of original purchase from StoneAge or a Dealer. No Product may be returned for credit or adjustment without prior written permission from StoneAge.

**6. DISCLAIMER OF IMPLIED WARRANTIES AND OTHER REMEDIES.** EXCEPT AS EXPRESSLY STATED HEREIN (AND TO THE FULLEST EXTENT ALLOWED UNDER APPLICABLE LAW), STONEAGE HEREBY DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND ANY AND ALL WARRANTIES, REPRESENTATIONS OR PROMISES AS TO THE QUALITY, PERFORMANCE OR FREEDOM FROM DEFECT OF THE PRODUCT COVERED BY THIS LIMITED WARRANTY. STONEAGE FURTHER DISCLAIMS ALL IMPLIED INDEMNITIES.



# TERMS AND CONDITIONS AND WARRANTY INFORMATION

**7. LIMITATION OF LIABILITY.** End-User specifically acknowledges that the Product may be operated at high speeds and/or pressures, and that as such it may be inherently dangerous if not used correctly. End-User shall familiarize itself with all operation materials provided by StoneAge and shall at all times use and require its agents, employees and contractors to use all necessary and appropriate safety devices, guards and proper safe operating procedures. In no event shall StoneAge be responsible for any injuries to persons or property caused directly or indirectly by the operation of the Product if End-User or any agent, employee, or contractor of End-User: (1) fails to use all necessary and appropriate safety devices, guards and proper safe operating procedures; (2) fails to maintain in good working order such safety devices and guards; (3) alters or modifies the Product in any way not approved by StoneAge in advance in writing; (4) allows the Product to be operated under more severe conditions or beyond the rated capacity specified for the Product; or (5) otherwise negligently operates the Product. End-User shall indemnify and hold StoneAge harmless from any and all liability or obligation incurred by or against StoneAge, including costs and attorneys' fees, to or by any person so injured.

TO THE FULL EXTENT ALLOWED BY APPLICABLE LAW, STONEAGE SHALL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR PUNITIVE DAMAGES (INCLUDING WITHOUT LIMITATION, LOSS OF PROFITS, LOSS OF GOODWILL, DIMINUTION OF VALUE, WORK STOPPAGE, INTERRUPTION OF BUSINESS, RENTAL OF SUBSTITUTE PRODUCT, OR OTHER COMMERCIAL LOSS EVEN TO THE EXTENT SUCH DAMAGES WOULD CONSTITUTE DIRECT DAMAGES), WITH RESPECT TO THE COVERED STONEAGE PRODUCT, OR OTHERWISE IN CONNECTION WITH THIS LIMITED WARRANTY, REGARDLESS OF WHETHER STONEAGE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

IT IS UNDERSTOOD THAT STONEAGE'S LIABILITY, WHETHER IN CONTRACT, IN TORT, UNDER ANY WARRANTY, IN NEGLIGENCE, OR OTHERWISE SHALL NOT EXCEED THE AMOUNT OF THE PURCHASE PRICE PAID BY THE END-USER FOR THE PRODUCT. STONEAGE'S MAXIMUM LIABILITY SHALL NOT EXCEED, AND END-USER'S REMEDY IS LIMITED TO EITHER (1) REPAIR OR REPLACEMENT OF THE DEFECTIVE WORKMANSHIP OR MATERIAL OR, AT STONEAGE'S OPTION, (2) REFUND OF THE PURCHASE PRICE, OR (3) ISSUANCE OF A CREDIT FOR THE PURCHASE PRICE, AND SUCH REMEDIES SHALL BE END-USER'S ENTIRE AND EXCLUSIVE REMEDY.

YOU, THE END-USER, UNDERSTAND AND EXPRESSLY AGREE THAT THE FOREGOING LIMITATIONS ON LIABILITY ARE PART OF THE CONSIDERATION IN THE PRICE OF THE STONEAGE PRODUCT YOU PURCHASED.

Some jurisdictions do not allow the limitation or exclusion of liability for certain damages, so the above limitations and exclusions may not apply to you. This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction. If any provisions of this Limited Warranty is held to be invalid or unenforceable, such invalidity or unenforceability shall not affect the validity or enforceability of the other portions hereof.



1-866-795-1586 • [www.STONEAGETOOLS.com](http://www.STONEAGETOOLS.com)

© 2023 StoneAge, Inc. All Rights Reserved