

# Altivar Machine ATV320

## Variable Speed Drives for Asynchronous and Synchronous Motors

### Programming Manual

09/2021



---

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this guide are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owners.

This guide and its content are protected under applicable copyright laws and furnished for informational use only. No part of this guide may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the guide or its content, except for a non-exclusive and personal license to consult it on an "as is" basis. Schneider Electric products and equipment should be installed, operated, serviced, and maintained only by qualified personnel.

As standards, specifications, and designs change from time to time, information contained in this guide may be subject to change without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this material or consequences arising out of or resulting from the use of the information contained herein.

As part of a group of responsible, inclusive companies, we are updating our communications that contain non-inclusive terminology. Until we complete this process, however, our content may still contain standardized industry terms that may be deemed inappropriate by our customers.

© 2021 Schneider Electric. All rights reserved.

# Table of Contents




	<b>Safety Information</b> .....	<b>7</b>
	<b>About the Book</b> .....	<b>13</b>
	<b>General Overview</b> .....	<b>17</b>
<b>Chapter 1</b>	<b>Overview</b> .....	<b>19</b>
	Factory configuration .....	<b>20</b>
	Application functions .....	<b>21</b>
	Basic functions .....	<b>25</b>
	Graphic display terminal option .....	<b>26</b>
	Powering up the drive for the first time .....	<b>29</b>
	Remote display terminal option .....	<b>32</b>
	Accessory: Graphic Display Terminal VW3A1111 .....	<b>33</b>
	Structure of the parameter tables .....	<b>36</b>
	Finding a parameter in this document .....	<b>37</b>
	Description of the HMI .....	<b>38</b>
	Structure of the menus .....	<b>40</b>
	Cyber Security .....	<b>41</b>
<b>Chapter 2</b>	<b>Setup</b> .....	<b>43</b>
	Steps for setting-up the drive .....	<b>44</b>
	Initial steps .....	<b>45</b>
	Software enhancements .....	<b>47</b>
	<b>Programming</b> .....	<b>49</b>
<b>Chapter 3</b>	<b>Reference Mode (rEF)</b> .....	<b>51</b>
	Introduction .....	<b>52</b>
	Organization tree .....	<b>53</b>
	Menu .....	<b>54</b>
<b>Chapter 4</b>	<b>Monitoring Mode (MO<sub>n</sub>)</b> .....	<b>55</b>
	Introduction .....	<b>56</b>
	Organization tree .....	<b>57</b>
	Menu .....	<b>58</b>
	[MONIT. MOTOR] .....	<b>58</b>
	[I/O MAP] .....	<b>59</b>
	[MONIT. SAFETY] .....	<b>62</b>
	[MONIT. FUN. BLOCKS] .....	<b>63</b>
	[COMMUNICATION MAP] .....	<b>64</b>
	[MONIT. PI] .....	<b>70</b>
	[MONIT. POWER TIME] .....	<b>70</b>
	[ALARMS] .....	<b>71</b>
	[OTHER STATE] .....	<b>72</b>
	[DIAGNOSTICS] .....	<b>72</b>
	[PASSWORD] .....	<b>83</b>
<b>Chapter 5</b>	<b>Configuration Mode (ConF)</b> .....	<b>85</b>

Introduction	86
Organization tree	87
My Menu	88
Factory Settings	89
Macro Configuration	90
Full	93
[SIMPLY START]	93
[SETTINGS]	98
[MOTOR CONTROL]	113
[INPUTS / OUTPUTS CFG]	133
[COMMAND]	163
[FUNCTION BLOCKS]	167
[APPLICATION FUNCT.] (FUN-)	171
REFERENCE SWITCHING	176
REFERENCE OPERATIONS	177
RAMP	179
STOP CONFIGURATION	182
AUTO DC INJECTION	185
JOG	187
PRESET SPEEDS	189
+/- SPEED	193
+/- SPEED AROUND A REFERENCE	195
REFERENCE MEMORIZING	197
FLUXING BY LOGIC INPUT	198
BRAKE LOGIC CONTROL	200
EXTERNAL WEIGHT MEASUREMENT	211
HIGH SPEED HOISTING	213
PID REGULATOR	218
PID PRESET REFERENCES	226
TORQUE LIMITATION	227
2ND CURRENT LIMITATION	230
DYN CURRENT LIMIT	231
LINE CONTACTOR COMMAND	232
OUTPUT CONTACTOR COMMAND	234
POSITIONING BY SENSORS	236
PARAMETER SET SWITCHING	242
MULTIMOTORS / MULTICONFIGURATIONS	245
AUTO TUNING BY LOGIC INPUT	249
TRAVERSE CONTROL	250
[FAULT MANAGEMENT]	264
[COMMUNICATION]	289
<b>Chapter 6</b>	
<b>Interface (ItF)</b>	<b>294</b>
Access Level (LAC)	295
Language (LnG)	297
Monitoring Configuration (MCF)	298
Display configuration (dCF)	302
<b>Chapter 7</b>	
<b>Open / Save as (trA)</b>	<b>310</b>
<b>Chapter 8</b>	
<b>Password (COd)</b>	<b>314</b>
<b>Chapter 9</b>	
<b>Multipoint Screen</b>	<b>316</b>
<b>Maintenance and Diagnostics</b>	<b>318</b>
<b>Chapter 10</b>	
<b>Maintenance</b>	<b>320</b>
<b>Chapter 11</b>	
<b>Diagnostics and Troubleshooting</b>	<b>322</b>
Error code	323
Clearing the detected fault	323

	Fault detection codes which require a power reset after the detected fault is cleared	<b>324</b>
	Fault detection codes that can be cleared with the automatic restart function after the cause has disappeared	<b>326</b>
	Fault detection codes that are cleared as soon as their cause disappears	<b>329</b>
	Option card changed or removed	<b>329</b>
	Control block changed	<b>329</b>
	Fault detection codes displayed on the remote display terminal	<b>330</b>
	<b>Annex</b>	<b>332</b>
<b>Chapter 12</b>	<b>Index of Functions</b>	<b>334</b>
<b>Chapter 13</b>	<b>Index of Parameter Codes</b>	<b>336</b>
<b>Chapter 14</b>	<b>Glossary</b>	<b>356</b>



## Safety Information

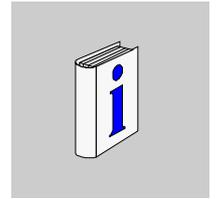

### Important Information

#### NOTICE

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, or maintain it. The special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a DANGER or WARNING safety label indicates that an electrical hazard exists, which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid a possible injury or death.

### **DANGER**

**DANGER** indicates a hazardous situation, which, if not avoided, **will result** in death or serious injury.

### **WARNING**

**WARNING** indicates a hazardous situation, which, if not avoided, **could result** in death, or serious injury..

### **CAUTION**

**CAUTION** indicates a potentially hazardous situation, which, if not avoided, **could result** in minor or moderate injury.

### **NOTICE**

**NOTICE** is used to address practices not related to physical injury.

**PLEASE NOTE**

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

**Qualification Of Personnel**

Only appropriately trained persons who are familiar with and understand the contents of this manual and all other pertinent product documentation are authorized to work on and with this product. In addition, these persons must have received safety training to recognize and avoid hazards involved. These persons must have sufficient technical training, knowledge and experience and be able to foresee and detect potential hazards that may be caused by using the product, by changing the settings and by the mechanical, electrical and electronic equipment of the entire system in which the product is used. All persons working on and with the product must be fully familiar with all applicable standards, directives, and accident prevention regulations when performing such work.

**Intended Use**

This product is a drive for three-phase synchronous and asynchronous motors and intended for industrial use according to this manual. The product may only be used in compliance with all applicable safety regulations and directives, the specified requirements and the technical data. Prior to using the product, you must perform a risk assessment in view of the planned application. Based on the results, the appropriate safety measures must be implemented. Since the product is used as a component in an entire system, you must ensure the safety of persons by means of the design of this entire system (for example, machine design). Any use other than the use explicitly permitted is prohibited and can result in hazards. Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel.

**Product related information**

**Read and understand these instructions before performing any procedure with this drive.**

** DANGER****HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH**

- Only appropriately trained persons who are familiar with and fully understand the contents of the present manual and all other pertinent product documentation and who have received all necessary training to recognize and avoid hazards involved are authorized to work on and with this drive system.
- Installation, adjustment, repair and maintenance must be performed by qualified personnel.
- Verify compliance with all local and national electrical code requirements as well as all other applicable regulations with respect to grounding of all equipment.
- Only use properly rated, electrically insulated tools and measuring equipment.
- Do not touch unshielded components or terminals with voltage present.
- Prior to performing any type of work on the drive system, block the motor shaft to prevent rotation.
- Insulate both ends of unused conductors of the motor cable.
- Do not short across the DC bus terminals or the DC bus capacitors or the braking resistor terminals.

**Failure to follow these instructions will result in death or serious injury.**

**⚡ ⚠ DANGER**

**HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH**

Before performing work on the drive system:

- Disconnect all power, including external control power that may be present. Take into account that the circuit breaker or main switch does not deenergize all circuits.
- Place a “Do Not Turn On” label on all power switches related to the drive system.
- Lock all power switches in the open position.
- Wait 15 minutes to allow the DC bus capacitors to discharge.
- Verify the absence of voltage. (1)

Before applying voltage to the drive system:

- Verify that the work has been completed and that the entire installation cannot cause hazards.
- If the mains input terminals and the motor output terminals have been grounded and short-circuited, remove the ground and the short circuits on the mains input terminals and the motor output terminals.
- Verify proper grounding of all equipment.
- Verify that all protective equipment such as covers, doors, grids is installed and/or closed.

**Failure to follow these instructions will result in death or serious injury.**

Refer to Verifying the absence of voltage to the installation manual of the product.

Damaged products or accessories may cause electric shock or unanticipated equipment operation.

**⚡ ⚠ DANGER**

**ELECTRIC SHOCK OR UNANTICIPATED EQUIPMENT OPERATION**

Do not use damaged products or accessories.

**Failure to follow these instructions will result in death or serious injury.**

Contact your local Schneider Electric sales office if you detect any damage whatsoever.

This equipment has been designed to operate outside of any hazardous location. Only install this equipment in zones known to be free of a hazardous atmosphere.

**⚠ DANGER**

**POTENTIAL FOR EXPLOSION**

Install and use this equipment in non-hazardous locations only.

**Failure to follow these instructions will result in death or serious injury.**

Your application consists of a whole range of different interrelated mechanical, electrical, and electronic components, the drive being just one part of the application. The drive by itself is neither intended to nor capable of providing the entire functionality to meet all safety-related requirements that apply to your application. Depending on the application and the corresponding risk assessment to be conducted by you, a whole variety of additional equipment is required such as, but not limited to, external encoders, external brakes, external monitoring devices, guards, etc.

As a designer/manufacturer of machines, you must be familiar with and observe all standards that apply to your machine. You must conduct a risk assessment and determine the appropriate Performance Level (PL) and/or Safety Integrity Level (SIL) and design and build your machine in compliance with all applicable standards. In doing so, you must consider the interrelation of all components of the machine. In addition, you must provide instructions for use that enable the user of your machine to perform any type of work on and with the machine such as operation and maintenance in a safe manner.

The present document assumes that you are fully aware of all normative standards and requirements that apply to your application. Since the drive cannot provide all safety-related functionality for your entire application, you must ensure that the required Performance Level and/or Safety Integrity Level is reached by installing all necessary additional equipment.

## **WARNING**

### **INSUFFICIENT PERFORMANCE LEVEL/SAFETY INTEGRITY LEVEL AND/OR UNINTENDED EQUIPMENT OPERATION**

- Conduct a risk assessment according to EN ISO 12100 and all other standards that apply to your application.
- Use redundant components and/or control paths for all critical control functions identified in your risk assessment.
- Implement all monitoring functions required to avoid any type of hazard identified in your risk assessment, for example, slipping or falling loads.
- Verify that the service life of all individual components used in your application is sufficient for the intended service life of your overall application.
- Perform extensive commissioning tests for all potential error situations to verify the effectiveness of the safety-related functions and monitoring functions implemented, for example, but not limited to, speed monitoring by means of encoders, short circuit monitoring for all connected equipment, correct operation of brakes and guards.
- Perform extensive commissioning tests for all potential error situations to verify that the load can be brought to a safe stop under all conditions.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

A specific application note is available on hoisting machines and can be downloaded on [www.se.com](http://www.se.com)

The products may perform unexpected movements because of incorrect wiring, incorrect settings, incorrect data or other errors.

## **WARNING**

### **UNEXPECTED EQUIPMENT OPERATION**

- Carefully install the wiring in accordance with the EMC requirements.
- Do not operate the product with unknown or unsuitable settings or data.
- Perform a comprehensive commissioning test.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

**⚠ WARNING****LOSS OF CONTROL**

- The designer of any control scheme must consider the potential failure modes of control paths and, for critical control functions, provide a means to achieve a safe state during and after a path failure. Examples of critical control functions are emergency stop, overtravel stop, power outage and restart.
- Separate or redundant control paths must be provided for critical control functions.
- System control paths may include communication links. Consideration must be given to the implications of unanticipated transmission delays or failures of the link.
- Observe all accident prevention regulations and local safety guidelines.<sup>1</sup>
- Each implementation of the product must be individually and thoroughly tested for proper operation before being placed into service.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

1. For USA: Additional information, refer to NEMA ICS 1.1 (latest edition), "Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control" and to NEMA ICS 7.1 (latest edition), "Safety Standards for Construction and Guide for Selection, Installation and Operation of Adjustable-Speed Drive Systems".

The temperature of the products described in this manual may exceed 80 °C (176 °F) during operation.

**⚠ WARNING****HOT SURFACES**

- Ensure that any contact with hot surfaces is avoided.
- Do not allow flammable or heat-sensitive parts in the immediate vicinity of hot surfaces.
- Verify that the product has sufficiently cooled down before handling it.
- Verify that the heat dissipation is sufficient by performing a test run under maximum load conditions

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

Machines, controllers, and related equipment are usually integrated into networks. Unauthorized persons and malware may gain access to the machine as well as to other devices on the network/fieldbus of the machine and connected networks via insufficiently secure access to software and networks.

**⚠ WARNING****UNAUTHORIZED ACCESS TO THE MACHINE VIA SOFTWARE AND NETWORKS**

- In your hazard and risk analysis, consider all hazards that result from access to and operation on the network/fieldbus and develop an appropriate cyber security concept.
- Verify that the hardware infrastructure and the software infrastructure into which the machine is integrated as well as all organizational measures and rules covering access to this infrastructure consider the results of the hazard and risk analysis and are implemented according to best practices and standards covering IT security and cyber security (such as: ISO/IEC 27000 series, Common Criteria for Information Technology Security Evaluation, ISO/ IEC 15408, IEC 62351, ISA/IEC 62443, NIST Cybersecurity Framework, Information Security Forum - Standard of Good Practice for Information Security, SE recommended Cybersecurity Best Practices<sup>\*</sup>).
- Verify the effectiveness of your IT security and cyber security systems using appropriate, proven methods.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

(\*) : SE Recommended Cybersecurity Best Practices can be downloaded on SE.com

**⚠ WARNING****LOSS OF CONTROL**

Perform a comprehensive commissioning test to verify that communication monitoring properly detects communication interruptions


**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

***NOTICE*****DESTRUCTION DUE TO INCORRECT MAINS VOLTAGE**

- Before switching on and configuring the product, verify that it is approved for the mains voltage.

**Failure to follow these instructions can result in equipment damage.**

## About the Book

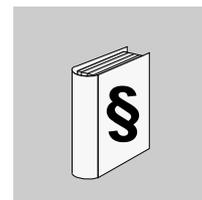

### At a Glance

#### Document scope

The purpose of this document is to:

- help you to set-up the drive,
- show you how to program the drive,
- show you the different menus, modes and parameters,
- help you in maintenance and diagnostics.

#### Validity note

Original instructions and information given in this manual have been written in English (before optional translation).

**NOTE:** The products listed in the document are not all available at the time of publication of this document online. The data, illustrations and product specifications listed in the guide will be completed and updated as the product availabilities evolve. Updates to the guide will be available for download once products are released on the market.

This documentation is valid for the Altivar Machine ATV320 drives.

The technical characteristics of the devices described in this document also appear online. To access this information online:

Step	Action
1	Go to the Schneider Electric home page <a href="http://www.schneider-electric.com">www.schneider-electric.com</a> .
2	In the Search box type the reference of a product or the name of a product range. <ul style="list-style-type: none"> <li>• Do not include blank spaces in the reference or product range.</li> <li>• To get information on grouping similar modules, use asterisks (*).</li> </ul>
3	If you entered a reference, go to the <b>Product Datasheets</b> search results and click on the reference that interests you. If you entered the name of a product range, go to the <b>Product Ranges</b> search results and click on the product range that interests you.
4	If more than one reference appears in the <b>Products</b> search results, click on the reference that interests you.
5	Depending on the size of your screen, you may need to scroll down to see the data sheet.
6	To save or print a data sheet as a .pdf file, click <b>Download XXX</b> product datasheet.

The characteristics that are presented in this manual should be the same as those characteristics that appear online. In line with our policy of constant improvement, we may revise content over time to improve clarity and accuracy. If you see a difference between the manual and online information, use the online information as your reference.

## Related documents

Use your tablet or your PC to quickly access detailed and comprehensive information on all our products on [www.schneider-electric.com](http://www.schneider-electric.com).

The internet site provides the information you need for products and solutions

- The whole catalog for detailed characteristics and selection guides
- The CAD files to help design your installation, available in over 20 different file formats
- All software and firmware to maintain your installation up to date
- A large quantity of White Papers, Environment documents, Application solutions, Specifications... to gain a better understanding of our electrical systems and equipment or automation
- And finally all the User Guides related to your drive, listed below:

Title of Documentation	Reference Number
Digital Catalog for Industrial Automation	<a href="#">Digit-Cat</a>
ATV320 Catalog	<a href="#">DIA2ED2160311EN (English)</a> , <a href="#">DIA2ED2160311FR (French)</a>
ATV320 Getting Started	<a href="#">NVE21763 (English)</a> , <a href="#">NVE21771 (French)</a> , <a href="#">NVE21772 (German)</a> , <a href="#">NVE21773 (Spanish)</a> , <a href="#">NVE21774 (Italian)</a> , <a href="#">NVE21776 (Chinese)</a>
ATV320 Getting Started Annex (SCCR)	<a href="#">NVE21777 (English)</a>
ATV320 Installation manual	<a href="#">NVE41289 (English)</a> , <a href="#">NVE41290 (French)</a> , <a href="#">NVE41291 (German)</a> , <a href="#">NVE41292 (Spanish)</a> , <a href="#">NVE41293 (Italian)</a> , <a href="#">NVE41294 (Chinese)</a>
ATV320 Programming manual	<a href="#">NVE41295 (English)</a> , <a href="#">NVE41296 (French)</a> , <a href="#">NVE41297 (German)</a> , <a href="#">NVE41298 (Spanish)</a> , <a href="#">NVE41299 (Italian)</a> , <a href="#">NVE41300 (Chinese)</a>
ATV320 Modbus Serial Link manual	<a href="#">NVE41308 (English)</a>
ATV320 Ethernet IP/Modbus TCP manual	<a href="#">NVE41313 (English)</a>
ATV320 PROFIBUS DP manual (VW3A3607)	<a href="#">NVE41310 (English)</a>
ATV320 DeviceNet manual (VW3A3609)	<a href="#">NVE41314 (English)</a>
ATV320 CANopen manual (VW3A3608, 618, 628)	<a href="#">NVE41309 (English)</a>
ATV320 POWERLINK manual (VW3A3619)	<a href="#">NVE41312 (English)</a>
ATV320 EtherCAT manual (VW3A3601)	<a href="#">NVE41315 (English)</a>
ATV320 Communication Parameters	<a href="#">NVE41316 (English)</a>
ATV320 Safety Functions manual	<a href="#">NVE50467 (English)</a> , <a href="#">NVE50468 (French)</a> , <a href="#">NVE50469 (German)</a> , <a href="#">NVE50470 (Spanish)</a> , <a href="#">NVE50472 (Italian)</a> , <a href="#">NVE50473 (Chinese)</a>
BMP Synchronous Motor manual	<a href="#">0198441113981-EN (English)</a> , <a href="#">0198441113982-FR (French)</a> , <a href="#">0198441113980-DE (German)</a> , <a href="#">0198441113984-ES (Spanish)</a> , <a href="#">0198441113983-IT (Italian)</a> , <a href="#">0198441113985-ZH (Chinese)</a>
ATV320 ATV Logic manual	<a href="#">NVE71954 (English)</a> , <a href="#">NVE71955 (French)</a> , <a href="#">NVE71957 (German)</a> , <a href="#">NVE71959 (Spanish)</a> , <a href="#">NVE71958 (Italian)</a> , <a href="#">NVE71960 (Chinese)</a>
SoMove: FDT	<a href="#">SoMove_FDT (English, French, German, Spanish, Italian, Chinese)</a>
ATV320: DTM	<a href="#">ATV320_DTM_Library (English, French, German, Spanish, Italian, Chinese)</a>
ATV320 ATEX manual	<a href="#">NVE41307 (English)</a>
Recommended Cybersecurity Best Practices	<a href="#">CS-Best-Practices-2019-340 (English)</a>

You can download these technical publications and other technical information from our website at <http://download.schneider-electric.com>

## Terminology

The technical terms, terminology, and the corresponding descriptions in this manual normally use the terms or definitions in the relevant standards.

In the area of drive systems this includes, but is not limited to, terms such as **error, error message, failure, fault, fault reset, protection, safe state, safety function, warning, warning message**, and so on.

Among others, these standards include:

- IEC 61800 series: Adjustable speed electrical power drive systems
- IEC 61508 Ed.2 series: Functional safety of electrical/electronic/programmable electronic safety-related
- EN 954-1 Safety of machinery - Safety related parts of control systems
- EN ISO 13849-1 & 2 Safety of machinery - Safety related parts of control systems.
- IEC 61158 series: Industrial communication networks - Fieldbus specifications
- IEC 61784 series: Industrial communication networks - Profiles
- IEC 60204-1: Safety of machinery - Electrical equipment of machines - Part 1: General requirements

In addition, the term **zone of operation** is used in conjunction with the description of specific hazards, and is defined as it is for a **hazard zone** or **danger zone** in the EC Machinery Directive (2006/42/EC) and in ISO 12100-1.

Also see the glossary at the end of this manual.

## Contact Us

Select your country on:

[www.schneider-electric.com/contact](http://www.schneider-electric.com/contact)

Schneider Electric Industries SAS

Head Office

35, rue Joseph Monier


92500 Rueil-Malmaison

France



---

# General Overview

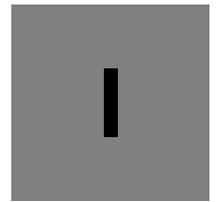

---

## What's in this Part?

This part contains the following chapters:

Chapter	Chapter Name	Page
1	Overview	<a href="#">19</a>
2	Setup	<a href="#">43</a>



# Overview

# 1

## What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Factory configuration	<a href="#">20</a>
Application functions	<a href="#">21</a>
Basic functions	<a href="#">25</a>
Graphic display terminal option	<a href="#">26</a>
Graphic display terminal optioni	<a href="#">26</a>
Powering up the drive for the first time	<a href="#">29</a>
Remote display terminal option	<a href="#">32</a>
Accessory: Graphic Display Terminal VW3A1111	<a href="#">33</a>
Structure of the parameter tables	<a href="#">36</a>
Finding a parameter in this document	<a href="#">37</a>
Description of the HMI	<a href="#">38</a>
Structure of the menus	<a href="#">40</a>
Cyber security	<a href="#">41</a>

## Factory configuration

### Factory settings

The Altivar 320 is factory-set for common operating conditions:

- Display: drive ready **[Ready]** (*r d Y*) when motor is ready to run and the output frequency when motor is running.
- The LI3 to LI6 logic inputs, AI2 and AI3 analog inputs, LO1 logic output, AO1 analog output, and R2 relay are unassigned.
- Stop mode if error is detected: freewheel.

Code	Description	Factory settings values	Page
<i>b F r</i>	<b>[Standard mot. freq]</b>	<b>[50Hz IEC]</b>	<a href="#">94</a>
<i>l l l</i>	<b>[2/3 wire control]</b>	<b>[2 wire]</b> ( <i>l l l</i> ): 2-wire control	<a href="#">93</a>
<i>l l l</i>	<b>[Motor control type]</b>	<b>[Standard]</b> ( <i>S l d</i> ): standard motor law	<a href="#">114</a>
<i>A l l</i>	<b>[Acceleration]</b>	3.0 seconds	<a href="#">95</a>
<i>d l l</i>	<b>[Deceleration]</b>	3.0 seconds	<a href="#">96</a>
<i>L S P</i>	<b>[Low speed]</b>	0 Hz	<a href="#">96</a>
<i>H S P</i>	<b>[High speed]</b>	50 Hz	<a href="#">96</a>
<i>i l H</i>	<b>[Mot. therm. current]</b>	Nominal motor current (value depending on drive rating)	<a href="#">95</a>
<i>S d l l</i>	<b>[Auto DC inj. level 1]</b>	0.7 x nominal drive current, for 0.5 seconds	<a href="#">102</a>
<i>S F r</i>	<b>[Switching freq.]</b>	4 kHz	<a href="#">103</a>
<i>F r d</i>	<b>[Forward]</b>	<b>[LI1]</b> ( <i>L i 1</i> ): Logic input LI1	<a href="#">134</a>
<i>r r S</i>	<b>[Reverse assign.]</b>	<b>[LI2]</b> ( <i>L i 2</i> ): Logic input LI2	<a href="#">134</a>
<i>F r l</i>	<b>[Ref.1 channel]</b>	<b>[AI1]</b> ( <i>A i 1</i> ): Analog input AI1	<a href="#">163</a>
<i>r l</i>	<b>[R1 Assignment]</b>	<b>[No drive fit]</b> ( <i>F l l</i> ): The contact opens when a fault is detected or when the drive has been switched off	<a href="#">146</a>
<i>b r R</i>	<b>[Dec ramp adapt.]</b>	<b>[Yes]</b> ( <i>Y E S</i> ): Function active (automatic adaptation of deceleration ramp)	<a href="#">181</a>
<i>R l r</i>	<b>[Automatic restart]</b>	<b>[No]</b> ( <i>n o</i> ): Function inactive	<a href="#">266</a>
<i>S l l</i>	<b>[Type of stop]</b>	<b>[Ramp stop]</b> ( <i>r n P</i> ): On ramp	<a href="#">182</a>
<i>l F G</i>	<b>[Macro configuration]</b>	<b>[Start/Stop]</b> ( <i>S l S</i> )	<a href="#">90</a>

**Note:** If you want to keep the drive presettings to a minimum, select the macro configuration **[Macro configuration]** (*l F G*) = **[Start/stop]** (*S l S*) followed by **[Restore config.]** (*F l S*) = **[Config. CFG]** (*i n i*). For more information, see page [90](#).

Check whether the values above are compatible with the application.

## Application functions

The tables on the following pages show the combinations of functions and applications, in order to guide your selection.

The applications in these tables relate to the following machines, in particular:

- **Hoisting:** cranes, overhead cranes, gantries (vertical hoisting, translation, slewing), lifting platforms
- **Handling:** palletizers/depalletizers, conveyors, roller tables
- **Packing:** carton packers, labeling machines
- **Textiles:** weaving looms, carding frames, washing machines, spinners, drawing frames
- **Wood:** automatic lathes, saws, milling
- **Process**

Each machine has its own special features, and the combinations listed here are neither mandatory nor exhaustive.

Some functions are designed specifically for a particular application. In this case, the application is identified by a tab in the margin on the relevant programming pages.

## Motor control functions

Functions	Page	Applications					
		Hoisting	Handling	Packing	Textiles	Wood	Process
V/f ratio	<a href="#">114</a>		■			■	
Sensorless flux vector control	<a href="#">114</a>	■	■	■	■	■	■
2-point vector control	<a href="#">114</a>	■			■		
Open-loop synchronous motor	<a href="#">114</a>				■		
Output frequency up to 599 Hz	<a href="#">113</a>				■	■	
Motor overvoltage limiting	<a href="#">128</a>				■	■	
DC bus connection (see Installation manual)	-				■		■
Motor fluxing using a logic input	<a href="#">198</a>	■	■	■			
Switching frequency of up to 16 kHz	<a href="#">103</a>				■	■	
Auto-tuning	<a href="#">95</a>	■	■	■	■	■	■

## Functions on speed references

Functions	Page	Applications					
		Hoisting	Handling	Packing	Textiles	Wood	Process
Differential bipolar reference	<a href="#">137</a>	■	■	■			
Reference delinearization (magnifying glass effect)	<a href="#">140</a>	■	■				
Frequency control input	<a href="#">163</a>				■		■
Reference switching	<a href="#">176</a>			■			
Reference summing	<a href="#">177</a>			■			
Reference subtraction	<a href="#">177</a>			■			
Reference multiplication	<a href="#">177</a>			■			
Adjustable profile ramp	<a href="#">179</a>	■	■				
Jog operation	<a href="#">187</a>		■		■		■
Preset speeds	<a href="#">189</a>	■	■	■			
+ speed / - speed using single action pushbuttons (1 step)	<a href="#">193</a>						■
+ speed / - speed using double action pushbuttons (2 steps)	<a href="#">193</a>	■					
+/- speed around a reference	<a href="#">196</a>				■		■
Save reference	<a href="#">197</a>						■

## Application-Specific functions

Functions	Page	Applications					
		Hoisting	Handling	Packing	Textiles	Wood	Process
Fast stop	<a href="#">182</a>					■	
Brake control	<a href="#">200</a>	■	■				
Load measurement	<a href="#">211</a>	■					
High-speed hoisting	<a href="#">213</a>	■					
Rope slack	<a href="#">216</a>	■					
PID regulator	<a href="#">218</a>						■
Motor/generator torque limit	<a href="#">227</a>		■		■		■
Load sharing	<a href="#">130</a>	■	■				
Line contactor control	<a href="#">232</a>	■	■			■	
Output contactor control	<a href="#">235</a>	■					
Positioning by limit switches or sensors	<a href="#">236</a>	■	■	■			
Stop at distance calculated after deceleration limit switch	<a href="#">238</a>		■	■			
Parameter switching	<a href="#">242</a>	■	■	■	■	■	■
Motor or configuration switching	<a href="#">245</a>	■	■	■			
Traverse control	<a href="#">250</a>				■		
Stop configuration	<a href="#">182</a>		■		■	■	

## Safety functions/Fault management

Functions	Page	Applications					
		Hoisting	Handling	Packing	Textiles	Wood	Process
Safe Torque Off (STO) (Safety function, see dedicated document)	-	■	■	■	■	■	■
Deferred stop on thermal alarm	<a href="#">272</a>	■					■
Alarm handling	<a href="#">154</a>	■	■	■	■	■	■
Fault management	<a href="#">264</a>	■	■	■	■	■	■
IGBT tests	<a href="#">274</a>	■	■	■	■	■	■
Catch a spinning load	<a href="#">267</a>				■	■	
Motor protection with PTC probes	<a href="#">264</a>	■	■	■	■	■	■
Undervoltage management	<a href="#">273</a>				■	■	
4-20 mA loss	<a href="#">274</a>	■	■		■	■	■
Uncontrolled output cut (output phase loss)	<a href="#">270</a>		■				
Automatic restart	<a href="#">266</a>		■				
Use of the "Pulse input" input to measure the speed of rotation of the motor	<a href="#">279</a>	■	■				
Load variation detection	<a href="#">281</a>	■					
Underload detection	<a href="#">284</a>						■
Overload detection	<a href="#">286</a>						■
Safety Integrated functions (see related documents page <a href="#">14</a> )			■	■	■	■	■

## Basic functions

### Drive ventilation


The fan starts automatically when the drive thermal state reaches 70% of the maximum thermal state and if the **[Fan Mode]** (*F F Π*) is set to **[Standard]** (*S E d*).

For ATV320●●●●●W(S), **[Fan Mode]** (*F F Π*) is forced to **[Always]** (*r u n*), the fan is always activated.

## Graphic display terminal option

### Description of the graphic display terminal

With the graphic display terminal, which works with FLASH V1.1IE26 or higher, it is possible to display more detailed information than can be shown on the integrated display terminal.

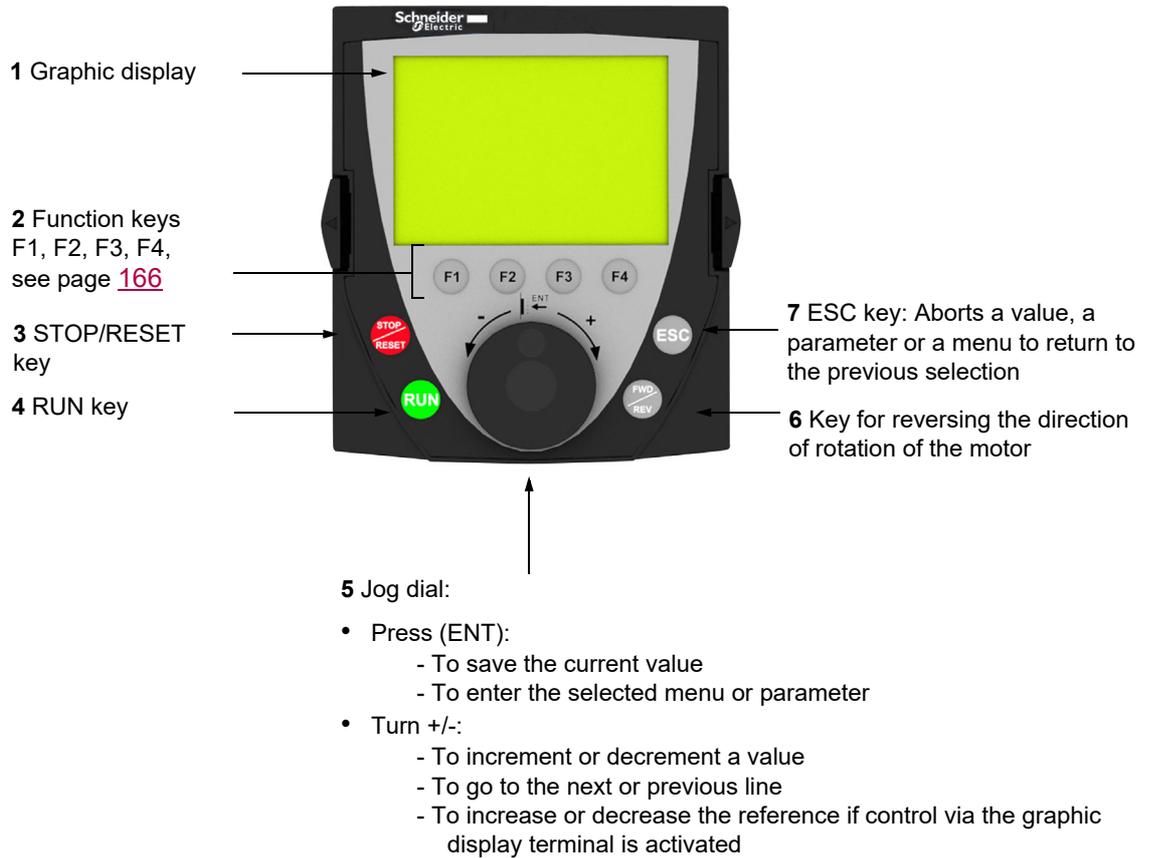

**Note:** Keys **3**, **4**, **5** and **6** can be used to control the drive directly, if control via the graphic display terminal is activated.

To activate the keys on the remote display terminal, you first have to configure [\[Ref.1 channel\] \(F r I\) = \[HMI\] \(L C C\)](#). For more information, see page [163](#).

**Example configuration windows:**

*Single selection*

LANGUAGE	
English	
Français	✓
Deutsch	
Italiano	
Español	
Chinese	
Русский	
Türkçe	

When powering up the graphic display terminal for the first time, the user has to select the required language.


When only one selection is possible, the selection made is indicated by ✓ .  
Example: Only one language can be chosen.

*Multiple selection*

PARAMETER SELECTION	
SETTINGS	
Ramp increment	<input checked="" type="checkbox"/>
Acceleration-----	<input checked="" type="checkbox"/>
Deceleration-----	<input type="checkbox"/>
Acceleration 2-----	<input type="checkbox"/>
Deceleration 2	
Edit	

When multiple selection is possible, the selections made are indicated by ✓ .  
Example: A number of parameters can be chosen to form the **[USER MENU]**.

**Example configuration window for one value:**

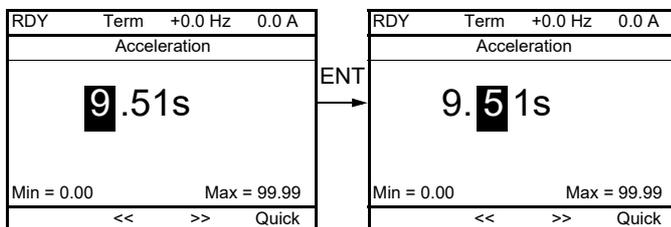

The << and >> arrows (keys F2 and F3) are used to select the digit to be modified, and the jog dial is rotated to increase or decrease this number.

**Example visualization of function blocks state:**

RDY	⊗	Term	+0.0 Hz	0.0 A
Acceleration				
9.51s				
Min = 0.00		Max = 99.99		
<<		>>		Quick

⊗ OFF light: A valid function blocks program is in the ATV320 in stop mode.

⊗ ON light: A valid function blocks program is in the ATV320 in run mode. The drive is considered as being in running state and configuration parameters cannot be modified.

**Powering up the drive with Graphic display terminal for the first time**

When powering up the graphic display terminal for the first time, the user has to select the required language.

LANGUAGE	
English	
Français	✓
Deutsch	
Italiano	
Español	
Chinese	
Русский	
Türkçe	

Display after the graphic display terminal has been powered up for the first time. Select the language and press ENT.

↓ ENT

<b>Schneider</b>	
	
<b>ATV320U15M2B</b>	
1.5kW/2HP 220V Single	
Config. n°0	

The drive's rating details will now appear.

↓ 3 seconds

RDY	Term	0.0 Hz	0.0 A
ACCESS LEVEL			
Basic			
Standard			✓
Advanced			
Expert			

↓ ENT

RDY	Term	0.0 Hz	0.0 A
1 DRIVE MENU			
1.1 SPEED REFERENCE			
1.2 MONITORING			
1.3 CONFIGURATION			
Code	<<	>>	Quick

## Powering up the drive for the first time

With the integrated display terminal, when powering up the drive for the first time, the user immediately accesses to **[Standard mot. freq]** (*b F r*) (see page 94) in the menu (CO nF > FULL > SIM).



Display after the drive has been powered up for the first time.

↓ 3 seconds

RDY	Term	0.0 Hz	0.0 A
ACCESS LEVEL			
Basic			
Standard			
Advanced			
Expert			

The **[ACCESS LEVEL]** screen follows automatically.

↓ ENT

RDY	Term	0.0 Hz	0.0 A
1 DRIVE MENU			
1.1 SPEED REFERENCE			
1.2 MONITORING			
1.3 CONFIGURATION			
Code	<<	>>	Quick

Automatically switches to the **[1 DRIVE MENU]** menu after 3 seconds. Select the menu and press ENT.


↓ ESC

MAIN MENU			
1 DRIVE MENU			
2 IDENTIFICATION			
3 INTERFACE			
4 OPEN / SAVE AS			
5 PASSWORD			

The MAIN MENU appears on the graphic display terminal if you press the ESC key.

**Subsequent power-ups**

With the integrated display terminal, at subsequent power-ups of the drive for the first time, the user immediately accesses to the drive state (Same list as [\[Drive state\]](#) ([H 5 I](#)) page [73](#)). Example : Ready (rdY).

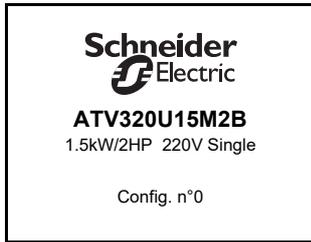

Display after powering up.

↓ 3 seconds

RDY	Term	0.0 Hz	0.0 A
1 DRIVE MENU			
1.1 SPEED REFERENCE			
1.2 MONITORING			
1.3 CONFIGURATION			
Code	<<	>>	Quick

Automatically switches to the [\[1 DRIVE MENU\]](#) menu after 3 seconds. Select the menu and press ENT.

↓ 10 seconds

RDY	Term	+0.0 Hz	0.0 A
Frequency ref.			
+ 1.3 Hz			
Min = -599.0		Max = +599.0	
Quick			


Automatically switches to the monitoring screen after 10 seconds.

**Identification menu**

The **[2 IDENTIFICATION]** (  *id* - ) menu can only be accessed on the graphic display terminal.

This is a read-only menu that cannot be configured. It enables the following information to be displayed:


- Drive reference, power rating and voltage
- Drive software version
- Drive serial number
- Safety function status and checksum
- Function blocks program and catalogue version
- Type of options present, with their software version
- Graphic display terminal type and version

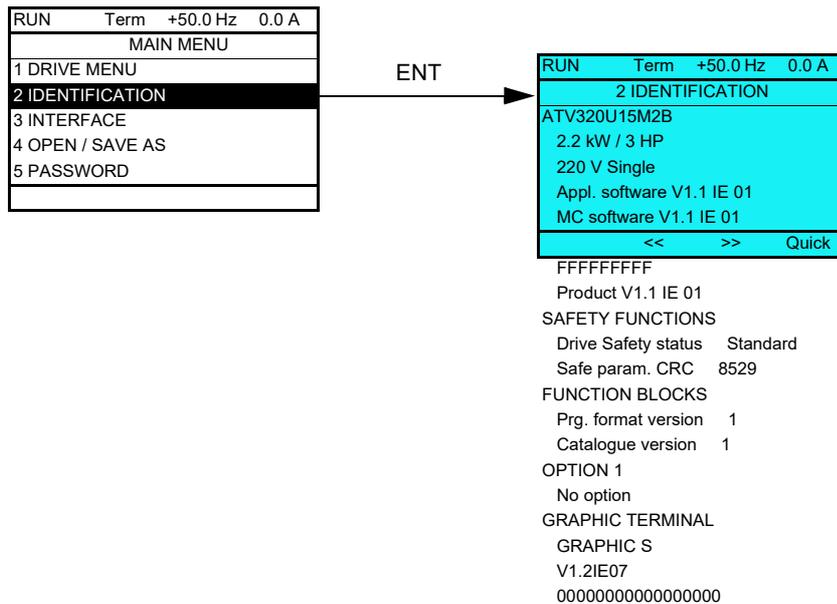

## Remote display terminal option

### Description of the remote display terminal

This remote display terminal is a local control unit which can be mounted on the door of the wall-mounted or floor-standing enclosure. It has a cable with connectors, which is connected to the drive serial link (see the documentation supplied with the remote display terminal). With this remote display terminal, up and down arrows are used for navigation rather than a jog dial.

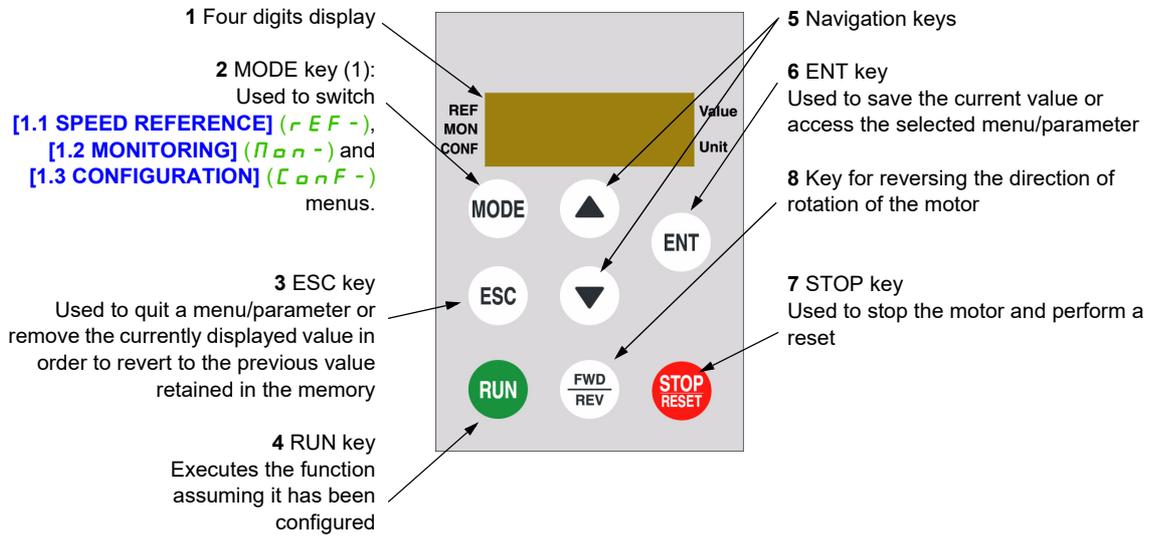

(1) If the drive is locked by a code ([PIN code 1] (COD) page 315), pressing the MODE key enables you to switch from the [1.2 MONITORING] (MON -) menu to the [1.1 SPEED REFERENCE] (REF -) menu and vice versa.

To activate the keys on the remote display terminal, you first have to configure [Ref.1 channel] (FRI) = [HMI] (LLE). For more information, see page 163.

## Accessory: Graphic Display Terminal VW3A1111

### Software Version of the Graphic Display Terminal

## ⚠ WARNING

### UNANTICIPATED EQUIPMENT OPERATION

The software version of the Graphic Display Terminal VW3A1111 must be equal to or higher than V2.0 to be used with ATV320 drives.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

**Note:** Go to **[Identification] (o i d -)** menu to verify the software version of the Graphic Display Terminal.

### Software Version of the Graphic Display Terminal

On VW3A1111 Graphic Display Terminal, the parameter labels may differ from VW3A1110 Remote Graphic Display Terminal. This document shows the labels of the Remote Graphic Display Terminal VW3A1110.

**Note:** The code of the menus and parameters remains identical for VW3A1111 and VW3A1110.


On VW3A1111, the password feature, the interface menu and the configuration transfer/storage are identical to the VW3A1110 Graphic Display Terminal.

The Multipoint Screen feature of the Graphic Display Terminal VW3A1111 can be used with ATV320.

VW3A1111 and VW3A1110 shows different keys, for more information refer to the description of each Graphic Display Terminal.

### Description of the Graphic Display Terminal

This Graphic Display Terminal is a local control unit which can be either plugged on the drive or mounted on the door of the wall-mounted or floor-standing enclosure. It has a cable with connectors, which is connected to the drive front Modbus serial link.

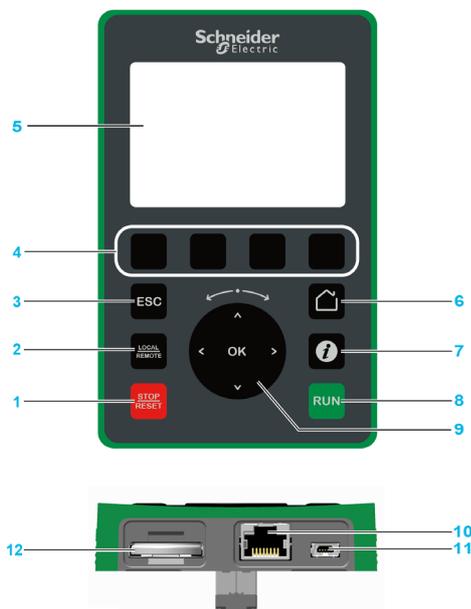

**1 STOP / RESET:** Stop command / apply a Fault Reset.

**2 LOCAL / REMOTE:** used to switch between local and remote control of the drive if one of the function keys displays **[T/K] (F E)**, otherwise the key is unused.

**Note:** To assign a function key (F1...F4) to the function LOCAL/REMOTE, go to **[Command] (CTL-)** menu and assign **[F1 key assignment] (F n 1)** or ... or **[F4 key assignment] (F n 4)** to **[T/K] (F E)**.

**3 ESC:** used to quit a menu/parameter or remove the currently displayed value in order to revert to the previous value retained in the memory

**4 F1 to F4:** function keys used to access quick view, and submenus. Simultaneous press of F1 and F4 keys generates a screenshot file in the Graphic Display Terminal internal memory.

**5 Graphic display.**

**6 Home:** Used to access directly at the home page if the Graphic Display Terminal displays "Quick" on one of its function keys.

**7 Information:** used to show the code of menus, submenus, and parameters if the Graphic Display Terminal displays "Code" on one of its function keys.

**8 RUN:** executes the function assuming it has been configured.

**9 Touch wheel / OK:** used to save the current value or access the selected menu/parameter. The touch wheel is used to scroll fast into the menus. Up/down arrows are used for precise selections, right/left arrows are used to select digits when setting a numerical value of a parameter.


**10 RJ45 Modbus serial port:** used to connect the Graphic Display Terminal to the drive in remote control.

**11 Mini USB port:** used to connect the Graphic Display Terminal to a computer.

**12 Battery:** (10 years service life. Type: CR2032). The battery positive pole points to the front face of the Graphic Display Terminal.

**Note:** Keys 1, 8 and 9 can be used to control the drive if control via the Graphic Display Terminal is activated. To activate the keys on the Graphic Display Terminal, you first need to set [\[Ref Freq 1 Config\]](#) Fr1 to [\[Ref.Freq-Rmt.Term\]](#) LCC ([\[Ref.1 channel\]](#) (FRI) to [\[HMI\]](#) (LCC)).

**Description of Graphic Display**

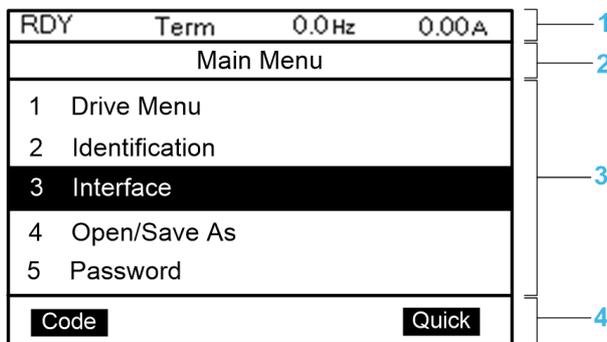


1 Display line: its content can be configured

2 Menu line: indicates the name of the current menu or submenu

3 Menus, submenus, parameters, values, bar charts, and so on, are displayed in drop-down window format on a maximum of five lines. The line or value selected by the navigation button is displayed in reverse video

4 Section displaying tabs (1 to 4 by menu), these tabs can be accessed using F1 to F4 keys

Display line details:

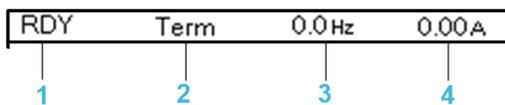

Number	Description
1	Drive status
2	Active control channel - TERM: terminals - HMI: Graphic Display Terminal - MDB: integrated Modbus serial - CAN: CANopen® - NET: fieldbus module - TUD: +/- speed - PWS: DTM based commissioning software
3	Customer defined via the menu <a href="#">[Param. Bar Select]</a> (P b 5 -)
4	Customer defined via the menu <a href="#">[Param. Bar Select]</a> (P b 5 -)

## Graphic Display Terminal Connected to a Computer

### NOTICE

#### INOPERATIVE PERIPHERAL EQUIPMENT

Do not connect equipment to the RJ45 port and to the USB port of the Graphic Display Terminal at the same time.

**Failure to follow these instructions can result in equipment damage.**

The Graphic Display Terminal is recognized as a USB storage device named SE\_VW3A1111 while plugged on a computer.

This allows to access the saved drive configurations (*DRVCONF* folder) and the Graphic Display Terminal screenshots (*PRTSCR* folder).

Screenshots can be stored by a simultaneous press on F1 and F4 function keys

### How to Update Language Files on the Graphic Display Terminal?




The Graphic Display Terminal (VW3A1111) language files can be updated:

- Download the latest version of language files here: [Languages\\_Drives\\_VW3A1111](#)
- Unzip the file and follow the instructions of the ReadMe text file.

### How to customize the logo displayed at power on of the Graphic Display Terminal?

From the firmware version V2.0 of the Graphic Display Terminal, the logo displayed at power on by the Graphic Display Terminal can be customized. By default, the Schneider-Electric logo is displayed.

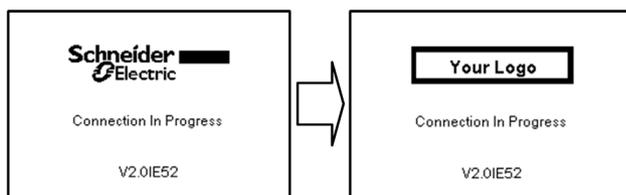

To modify the displayed logo, you must:

- Create your own logo and save it as a bitmap file (.bmp) with the name logo\_init. The logo must be saved in black & white and the dimensions must be 137x32 pixels.
- Connect the Graphic Display Terminal to a computer via an USB cable.
- Copy your logo (logo\_init.bmp) in the folder KPCONFIG of the Graphic Display Terminal.

At next power on of the Graphic Display Terminal connected to the drive, your own logo should be displayed.

If the logo of Schneider-Electric is still displayed, verify the characteristics of your file and the location where it has been copied.

### Structure of the parameter tables

The parameter tables contained in the descriptions of the various menus are organized as follows.

Example:

Parameters described in this page can be accessed by: DRI- > CONF > FULL > FUN-

Code	Name / Description	Adjustment range	Factory setting
P i d -	<b>[PID REGULATOR]</b> <small>Note: This function cannot be used with certain other functions. Follow the instructions on page 171.</small>		
P i f	<b>[PID feedback ass.]</b>		<b>[No] (no)</b>
no	[No] (no): Not assigned		
A I 1	[AI1] (A I 1): Analog input A1		
A I 2	[AI2] (A I 2): Analog input A2		
A I 3	[AI3] (A I 3): Analog input A3		
P i	[RP] (P i): Pulse input		
A I v 2	[AI virtual 2] (A I v 2): Virtual analog input 2		
o A O 1	[OA01] (o A O 1): Function blocks: Analog Output 01		
...			
o A O 10	[OA10] (o A O 10): Function blocks: Analog Output 10		

- |                                                        |                                                   |
|--------------------------------------------------------|---------------------------------------------------|
| 1. Way to access the parameters described in this page | 5. Name of submenu on graphic display terminal    |
| 2. Submenu code on 4-digit 7-segment display           | 6. Name of parameter on graphic display terminal  |
| 3. Parameter code on 4-digit 7-segment display         | 7. Value of parameter on graphic display terminal |
| 4. Parameter value on 4-digit 7-segment display        |                                                   |

**Note:** The text in square brackets [ ] indicates what you will see on the graphic display terminal.

A menu followed by the mention "(continued)" appears sometimes to locate you in the structure.

Example:

F u n -	<b>[APPLICATION FUNCT.] (continued)</b>
P i d -	<b>[PID REGULATOR]</b> <small>Note: This function cannot be used with certain other functions. Follow the instructions on page 171.</small>

In this case, the mention "(continued)" indicates that the [APPLICATION FUNCT.] submenu is above the [PID REGULATOR] submenu in the structure.

A parameter can contain some pictograms. Each pictogram has its legend at the end of the table.

Main mictograms:



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.

## Finding a parameter in this document

The following assistance with finding explanations on a parameter is provided:

- With the integrated display terminal and the remote display terminal: Direct use of the parameter code index, page [336](#), to find the page giving details of the displayed parameter.
- With the graphic display terminal: Select the required parameter and press F1  : [\[Code\]](#). The parameter code is displayed instead of its name while the key is held down.

Example: ACC

RDY	Term	+0.0 Hz	0.0 A
SETTINGS			
Ramp increment	:		0.1
Acceleration	:		9.51 s
Deceleration	:		9.67 s
Low speed	:		0.0 Hz
High speed	:		50.0 Hz
Code	<<	>>	Quick

Code  
→


RDY	Term	+0.0 Hz	0.0 A
SETTINGS			
Ramp increment	:		0.1
ACC	:		9.51 s
Deceleration	:		9.67 s
Low speed	:		0.0 Hz
High speed	:		50.0 Hz
Code	<<	>>	Quick

- Then use the parameter code index, page [336](#), to find the page giving details of the displayed parameter.

## Description of the HMI

### Functions of the Display and the Keys

- 1 The **ESC** key is used for menu navigation (backward) and parameters adjustment (cancel)
- 2 The **Jog dial** is used for menu navigation (up or down) and parameters adjustment (increase/decrease value or element choice). It can be used as Virtual analogic input 1 for drive frequency reference.
- 3 The **ENT** key (push on the Jog dial) is used for menu navigation (forward) and parameters adjustment (validate)

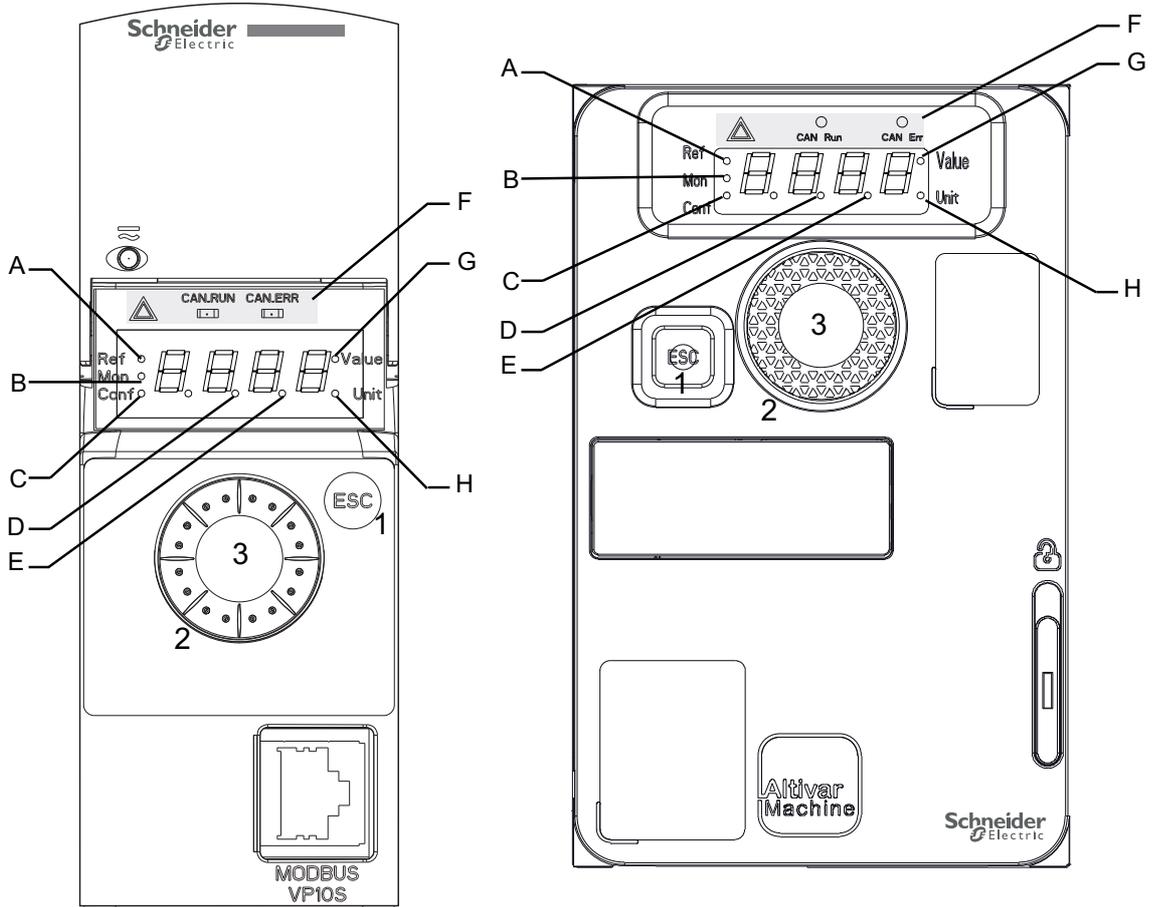

A	REF mode selected ( <i>r E F -</i> )	E	Dot used to display parameter value (1/10 unit)
B	MON mode selected ( <i>М о n -</i> )	F	From the left to the right: <ul style="list-style-type: none"> <li>• Indicates that the drive has detected an error</li> <li>• CANopen RUN Led Status (refer to the CANopen Manual).</li> <li>• CANopen Error Led Status (refer to the CANopen Manual).</li> </ul>
C	CONF mode selected ( <i>C o n F</i> )	G	Current display is parameter value
D	Dot used to display parameter value (1/100 unit)	H	Current display is parameter unit

**Normal display, with no error code displayed and no startup:**


Displays the parameter selected in the [1.2 MONITORING] (*М о n -*) menu (default: [Frequency ref.] (*F r H*)).

- *i n i t*: Initialization sequence (only on remote display terminal)
- *t u n*: AutoTuning
- *d C b*: Injection braking
- *r d y*: Drive ready
- *n S t*: Freewheel stop control

- **CL**: Current limit
- **FSE**: Fast stop
- **FL**: Fluxing function is activated
- **nLP**: Control is powered on but the DC bus is not loaded
- **CEL**: Controlled stop
- **abr**: Adapted deceleration
- **SoC**: Stand by output cut
- **uSA**: Undervoltage alarm
- **SS1**: Safety function SS1
- **SLS**: Safety function SLS
- **Sto**: Safety function STO
- **SMS**: Safety function SMS
- **GdL**: Safety function GDL

In the event of a detected error, the display will flash to notify the user accordingly. If a graphic display terminal is connected, the name of the detected error will be displayed.

## Structure of the menus

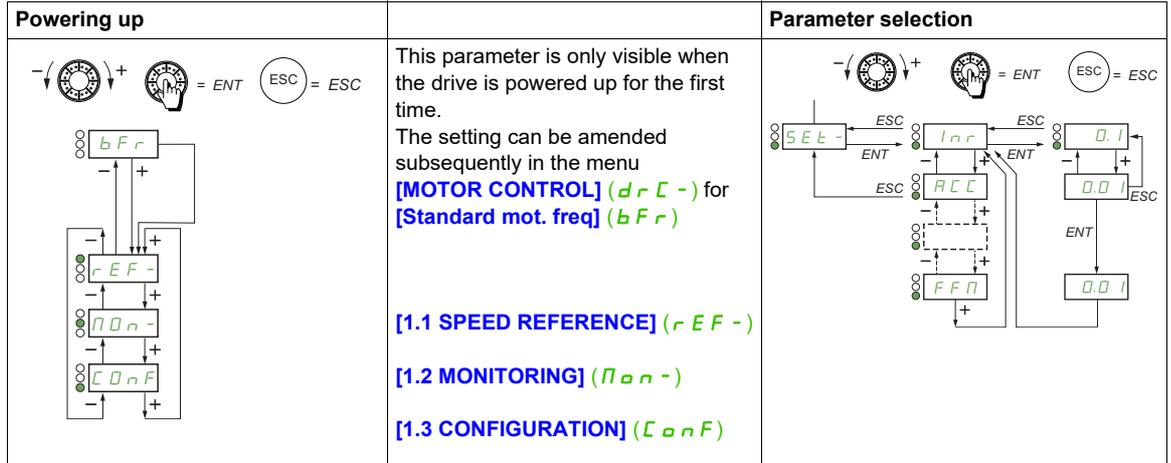

On the 7-segment display, a dash after menu and submenu codes is used to differentiate them from parameter codes.


Example: [APPLICATION FUNCT.] (F u n -) menu, [Acceleration] (A C C) parameter

### Selection of multiple assignments for one parameter

Example: List of group 1 alarms in [INPUTS / OUTPUTS CFG] (i \_ o -) menu

A number of alarms can be selected by "checking" them as follows.

The digit on the right indicates:

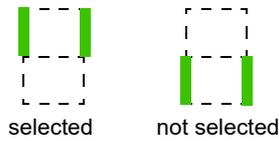

The same principle is used for all multiple selections.

## Cyber Security

Cyber Security is a branch of network administration that addresses attacks on or by computer systems and through computer networks that can result in accidental or intentional disruptions.

The objective of Cyber Security is to help provide increased levels of protection for information and physical assets from theft, corruption, misuse, or accidents while maintaining access for their intended users.

No single Cyber Security approach is adequate. Schneider Electric recommends a defense-in-depth approach. Conceived by the **National Security Agency (NSA)**, this approach layers the network with security features, appliances, and processes.

The basic components of this approach are:

- Risk assessment
- A security plan built on the results of the risk assessment
- A multi-phase training campaign
- Physical separation of the industrial networks from enterprise networks using a demilitarized zone (DMZ) and the use of firewalls and routing to establish other security zones
- System access control
- Device hardening
- Network monitoring and maintenance

This chapter defines the elements that help you configure a system that is less susceptible to cyber attacks.

For detailed information on the defense-in-depth approach, refer to the TVDA: [How Can I Reduce Vulnerability to Cyber Attacks in the Control Room \(STN V2\) on the Schneider Electric website.](#)

To submit a Cyber Security question, report security issues, or get the latest news from Schneider Electric, visit the Schneider Electric website.

## Password Management

With Ethernet and Profinet option module, Ethernet channels and Profinet channels, allowing the access to the configuration of the drive, are secured by a password. The password is required in case of access via PC software tools provided by Schneider-Electric (such as SoMove FDT / DTM).

The ethernet password must contain:

- A total of eight characters
- At least one upper-case letter,
- At least one lower-case letter,
- At least one special character (for example, @, #, \$),
- No blank character.

The first connection a dialog box is displayed (see the figure below) requiring the modification of the default password. This dialog box will continue to be displayed until a password is defined.



### Additionally:

- The system can be secured with a drive password (see page [314](#)) to access the drive configuration and parameter visibility.
- The device topology can be secured to a password (see page [283](#)). These passwords must contain four digits.

**Note:** After five unsuccessful login attempts, the access must be reactivated by the administrator. Schneider Electric recommends to:

- Modify the password every 90 days
- Use a dedicated password (not related to your personal password)

**Note:** No responsibility is assumed by Schneider Electric for any consequences if anyone hacks your product password and if you use the same password for personal usage.

## Backing-up and Restoring the Software Configuration

To protect your data, Schneider Electric recommends backing-up the device configuration and keeping your backup file in a safe place. The backup is available in the device DTM, using "load from device" and "store to device" functions.

## Remote Access to the Drive

When remote access is used between a device and the drive, ensure your network is secure (VPN, Firewall...). Machines, controllers, and related equipment are usually integrated into networks. Unauthorized persons and malware may gain access to the machine as well as to other devices on the network/fieldbus of the machine and connected networks via insufficiently secure access to software and networks.

### **WARNING**

#### **UNAUTHORIZED ACCESS TO THE MACHINE VIA SOFTWARE AND NETWORKS**

- In your hazard and risk analysis, consider all hazards that result from access to and operation on the network/fieldbus and develop an appropriate cybersecurity concept.
- Verify that the hardware infrastructure and the software infrastructure into which the machine is integrated as well as all organizational measures and rules covering access to this infrastructure consider the results of the hazard and risk analysis and are implemented according to best practices and standards covering IT security and cybersecurity, such as:
  - ISO/IEC 27000 series, ISO/ IEC 15408, IEC 62351, ISA/IEC 62443,
  - NIST Cybersecurity Framework,
  - Information Security Forum - Standard of Good Practice for Information Security,
  - Schneider Electric [Recommended Cybersecurity Best Practices](#).
- Verify the effectiveness of your IT security and cybersecurity systems using appropriate, proven methods.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Data Flow Restriction

To secure the access to the drive and limit the data flow, the use of a firewall device is required.

ConneXium Tofino Firewall Product

The ConneXium TCSEFEA Tofino Firewall is a security appliance that provides levels of protection against cyber threats for industrial networks, automation systems, SCADA systems, and process control systems.

This Firewall is designed to permit or deny communications between devices connected to the external network connection of the Firewall and the protected devices connected to the internal network connection.

The Firewall can restrict network traffic based on user defined rules that would permit only authorized devices, communication types and services.

The Firewall includes built-in security modules and an off-line configuration tool for creating secure zones within an industrial automation environment.

## Control Command Restriction

To prevent unauthorized use of the command of the drive, it is possible to grant access to a limited number of IP address using the IP master parameter.

The parameter IP Master defines which device can command with the device. This parameter is available in the device DTM.

## Deactivation of unused functions

To avoid unauthorized access, it is advisable to deactivate unused functions.

Example: Fast Device Replacement if Ethernet option module is used.

# Setup

# 2

## What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Steps for setting-up the drive	<a href="#">44</a>
Initial steps	<a href="#">45</a>
Software enhancements	<a href="#">47</a>

## Steps for setting-up the drive

# INSTALLATION

1. Please refer to the installation manual.



## Tips:

- Before beginning programming, complete the customer setting tables, page 336.
- Use the [Restore config.] (F C S) parameter, page 89, to return to the factory settings at any time.
- To locate the description of a function quickly, use the index of functions page 334.
- Before configuring a function, read carefully the "Function compatibility" section page 174.

**Note:** The following operations must be performed for optimum drive performance in terms of accuracy and response time:

- Enter the values indicated on the motor rating plate in the [MOTOR CONTROL] (d r C -) menu, page 113.
- Perform auto-tuning with the motor cold and connected using the [Auto-tuning] (t u n) parameter, page 95.

# PROGRAMMING

2. Apply input power to the drive, but do not give a run command.

## 3. Configure:

- The nominal frequency of the motor [Standard mot. freq.] (b F r) page 94 if this is not 50 Hz.
- The motor parameters in the [MOTOR CONTROL] (d r C -) menu, page 113, only if the factory configuration of the drive is not suitable.
- The application functions in the [INPUTS / OUTPUTS CFG] (i - o -) menu, page 133, the [COMMAND] (C E L -) menu, page 163, and the [APPLICATION FUNCT.] (F u n -) menu, page 176, only if the factory configuration of the drive is not suitable.

4. In the [SETTINGS] (S E t -) menu, adjust the following parameters:

- [Acceleration] (R C C), page 95 and [Deceleration] (d E C), page 96.
- [Low speed] (L S P), page 96 and [High speed] (H S P), page 98.
- [Mot. therm. current] (i t H), page 95.

5. Start the drive.

The products may perform unexpected movements because of incorrect wiring, incorrect settings, incorrect data or other errors.

## ⚠ WARNING

### UNANTICIPATED EQUIPMENT OPERATION

- Carefully install the wiring in accordance with the EMC requirements.
- Do not operate the product with unknown or unsuitable settings or data.
- Perform a comprehensive commissioning test.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Initial steps

If the drive was not connected to mains for an extended period of time, the capacitors must be restored to their full performance before the motor is started.

### NOTICE

#### REDUCED CAPACITOR PERFORMANCE

- Apply mains voltage to the drive for one hour before starting the motor if the drive has not been connected to mains for the specified periods of time.(1)
- Verify that no Run command can be applied before the period of one hour has elapsed.
- Verify the date of manufacture if the drive is commissioned for the first time and run the specified procedure if the date of manufacture is more than 12 months in the past.

**Failure to follow these instructions can result in equipment damage.**

(1) Period of time:

- 12 months at a maximum storage temperature of +50°C (+122°F)
- 24 months at a maximum storage temperature of +45°C (+113°F)
- 36 months at a maximum storage temperature of +40°C (+104°F)

If the specified procedure cannot be performed without a Run command because of internal mains contactor control, perform this procedure with the power stage enabled, but the motor being at a standstill so that there is no appreciable mains current in the capacitors.

## Before powering up the drive

### ⚠ WARNING

#### UNANTICIPATED EQUIPMENT OPERATION

Before switching on the device, verify that no unintended signals can be applied to the digital inputs that could cause unintended movements.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Drive locked in blocking state

The drive is in a blocking state and displays **[Freewheel stop] (r 5 E)**. If a Run command such as Run forward, Run reverse, DC injection is still active during:

- I A product reset to the factory settings,
- I A manual "Fault Reset" using **[Fault Reset] (r 5 F)**,
- I A manual "Fault reset" by applying a product switched off and on again,
- I A stop command given by a channel that is not the active channel command (such as Stop key of the display terminal in 2/3 wires control).

It will be necessary to deactivate all active Run commands prior to authorizing a new Run command.

## Mains contactor

### NOTICE

#### RISK OF DAMAGE TO THE DRIVE

Do not switch on the drive at intervals of less than 60 s.

**Failure to follow these instructions can result in equipment damage.**

### Using a motor with a lower rating or dispensing with a motor altogether

With the factory settings, motor output phase loss detection is active (**[Output Phase Loss] (o P L) = [Yes] (Y E 5)**, page 270). To avoid the usage of a motor with the same rating as the drive when testing the drive or during a maintenance phase, deactivate the motor output phase loss detection (**[Output Phase Loss] (o P L) = [No] (n o)**). This can prove particularly useful if very large drives are being tested with a small motor.

Set **[Motor control type] (C t t)**, page 114, to **[Standard] (S t d)** in **[Motor control menu] (d r C -)**.

## NOTICE

### MOTOR OVERHEATING

Install external thermal monitoring equipment under the following conditions:

- If a motor with a nominal current of less than 20% of the nominal current of the drive is connected.
- If you use the function Motor Switching.

**Failure to follow these instructions can result in equipment damage.**

## DANGER

### HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

If output phase monitoring is disabled, phase loss and, by implication, accidental disconnection of cables, are not detected.

- Verify that the setting of this parameter does not result in unsafe conditions.

**Failure to follow these instructions will result in death or serious injury.**

## Software enhancements

### Overview

Since the ATV320 was first launched, it has benefited from the addition of several new functions. The software version has been updated to V3.5IE46.

Although this documentation relates to version V3.5IE46, it can still be used with earlier versions

### Enhancements Made

Comparison	Enhancements
V3.2IE43 to V3.5IE46	Software improvement
V2.9IE40 to V3.2IE43	Improvements related to cybersecurity. By default, user authentication is necessary to connect to the drive via PC software tools, such as SoMove-DTM (using Modbus TCP communication through Ethernet). <b>[User authentication] SEC</b> - menu has been added in <b>[COMMUNICATION CARD] L b d</b> - menu. For more information refer to DTM online help. <b>NOTE:</b> To fully support this evolution with Ethernet module (respectively Profinet module), the minimum firmware version of Ethernet module (respectively Profinet module) must be V1.15IE19 (respectively V1.9IE19).
V2.9IE37 to V2.9IE40	Software improvement (such as ATV logic timer).
V2.9IE36 to V2.9IE37	Graphic Display Terminal (VW3A1111) is supported by ATV320. Some fixed bugs (such as untimely SAFF errors).
V2.9IE34 to V2.9IE36	Software improvement.
V2.7IE32 to V2.9IE34	Support of ATV320 IP66 offer. New parameter for the identification of the drive via fieldbus (refer to <b>[Fieldbus Identifier Sel] n E i d</b> ). Fallback mode on Analog Output AO1 (refer to <b>[Enable AQ1 fallback] R o F I</b> ). Software improvement.
V2.7IE30 to V2.7IE32	Software improvement.
V2.7IE28 to V2.7IE30	Support of ATV320 600V - 3phase – Compact (ATV320●●●S6C). Software improvement.
V2.7IE26 to V2.7IE28	Software improvement.
V2.7IE25 to V2.7IE26	Software improvement.
V2.7IE23 to V2.7IE25	Support of ATV320 200V - 3phase – Compact (ATV320●●●M3C). Software improvement.
V2.7IE23	First version.

For more information related to "Software improvement" on each version, contact your Customer Care Centre.





## What's in this Part?

This part contains the following chapters:

Chapter	Chapter Name	Page
3	Reference Mode (rEF)	<a href="#">51</a>
4	Monitoring Mode (MOn)	<a href="#">55</a>
5	Configuration Mode (ConF)	<a href="#">85</a>
6	Interface (ItF)	<a href="#">294</a>
7	Open / Save as (trA)	<a href="#">310</a>
8	Password (COd)	<a href="#">314</a>
9	Multipoint Screen	<a href="#">316</a>

Unsuitable settings or unsuitable data or unsuitable wiring may trigger unintended movements, trigger signals, damage parts and disable monitoring functions.

### **WARNING**

#### **UNANTICIPATED EQUIPMENT OPERATION**

- Only start the system if there are no persons or obstructions in the zone of operation.
- Verify that a functioning emergency stop push-button is within reach of all persons involved in the operation.
- Do not operate the product with unknown settings or data.
- Verify that the wiring is appropriate for the settings.
- Never modify a parameter unless you fully understand the parameter and all effects of the modification.
- When commissioning, carefully run tests for all operating states, operating conditions and potential error situations.
- Anticipate movements in unintended directions or oscillation of the motor.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

If the power stage is disabled unintentionally, for example, as a result of power outage, errors or functions, there is a possibility that the motor is no longer decelerated in a controlled way.

### **WARNING**

#### **UNANTICIPATED EQUIPMENT OPERATION**

Verify that movements without braking effect does not result in unsafe conditions.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**



## Reference Mode (rEF)

# 3

---

### What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Introduction	<a href="#">52</a>
Organization tree	<a href="#">53</a>
Menu	<a href="#">54</a>

## Introduction

Use the reference mode to monitor and, if the reference channel is the analog input 1 (**[Ref.1 channel]** (FR1) page 163 set to **[AI virtual 1]** (R1I)), adjust the actual reference value by modifying the analog input voltage value.

If local control is enabled (**[Ref.1 channel]** (FR1) page 163 set to **[HMI]** (LCL)), the jog dial on the remote display terminal or the Up/Down Navigation keys on the remote display terminal acts as a potentiometer to change the reference value up and down within the limits preset by other parameters (**[Low speed]** (LSP) or **[High speed]** (HSP)).

There is no need to press the ENT key to confirm the change of the reference.

## Organization tree


(1) Depending on the active reference channel

Possible values:

(R I U I)  
 (L F r)  
 (Π F r)  
 (r P i)  
 (F r H)  
 (r P L)

(2) 2 s or ESC

Displayed parameter value and unit of the diagram are given as examples.

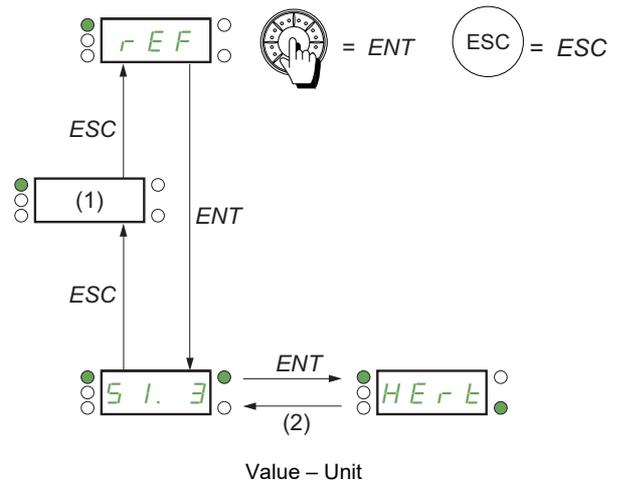

Parameters described in this page can be accessed by:

DRI- &gt; REF-

## Menu

Code	Name / Description	Adjustment range	Factory setting
<i>dr i -</i>	<b>[1 DRIVE MENU]</b>		
<i>rEF -</i>	<b>[1.1 SPEED REFERENCE]</b> Displayed parameters depend on drive settings.		
<i>R i u I</i> ★ (1)	<b>[Image input AIV1]</b> First virtual AI value. This parameter allows to modify the frequency reference with the embedded jog dial.	0 to 100% of HSP-LSP	0%
<i>LFr</i> ★ (1)	<b>[HMI Frequency ref.]</b> HMI frequency reference (signed value). This parameter allows to modify the frequency reference with the remote HMI.	-599 to +599 Hz	0 Hz
<i>MF r</i> ★ (1)	<b>[Multiplying coeff.]</b> Multiply frequency variable. Multiplying coefficient, can be accessed if <b>[Multiplier ref.-] (M R 2, M R 3)</b> page 178 has been assigned to the graphic terminal.	0 to 100%	100%
<i>r P i</i> ★ (1)	<b>[Internal PID ref.]</b> PID: Internal reference PI. This parameter allows to modify the PID internal reference with the jog dial. Internal PID reference is visible if <b>[PID feedback] (P i F)</b> is not set to <b>[No] (n o)</b> .	0 to 32,767	150
<i>F r H</i> ★	<b>[Frequency ref.]</b> Frequency reference before ramp (signed value). Actual frequency reference applied to the motor regardless of which reference channel has been selected. This parameter is in read-only mode. Frequency reference is visible if the command channel is not HMI or virtual AI.	-599 to +599 Hz	-
<i>r P C</i> ★	<b>[PID reference]</b> PID: Setpoint value. PID reference is visible if <b>[PID feedback] (P i F)</b> is not set to <b>[No] (n o)</b> .	0 to 65,535	-

(1) It is not necessary to press the ENT key to confirm the modification of the reference.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

## Monitoring Mode (MOn)



# 4

---

### What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Introduction	<a href="#">56</a>
Organization tree	<a href="#">57</a>
Menu	<a href="#">58</a>

## Introduction

The parameters can be accessed when the drive is running or stopped.

Some functions have numerous parameters. In order to clarify programming and avoid having to scroll through endless parameters, these functions have been grouped in submenus. Like menus, submenus are identified by a dash after their code.

When the drive is running, the value displayed is one of the monitoring parameters. By default, the value displayed is the input frequency reference ([Frequency ref.] (F r H) parameter page 58).

While the value of the new monitoring parameter required is being displayed, press a second time on the jog dial key to display the units or press and hold down the jog dial (ENT) again (for 2 seconds) to confirm the change of monitoring parameter and store it. From then on, it is the value of this parameter that will be displayed during operation (even after powering down).


Unless the new choice is confirmed by pressing and holding down ENT again, the display will revert to the previous parameter after powering down.

**Note:** After the drive has been turned off or following a loss of supply mains, the parameter displayed is the drive status (example: [Ready] (r d Y)). The selected parameter is displayed following a run command.

## Organization tree

Displayed parameters of the diagram are given as examples.

(1) Visible only with graphic display terminal

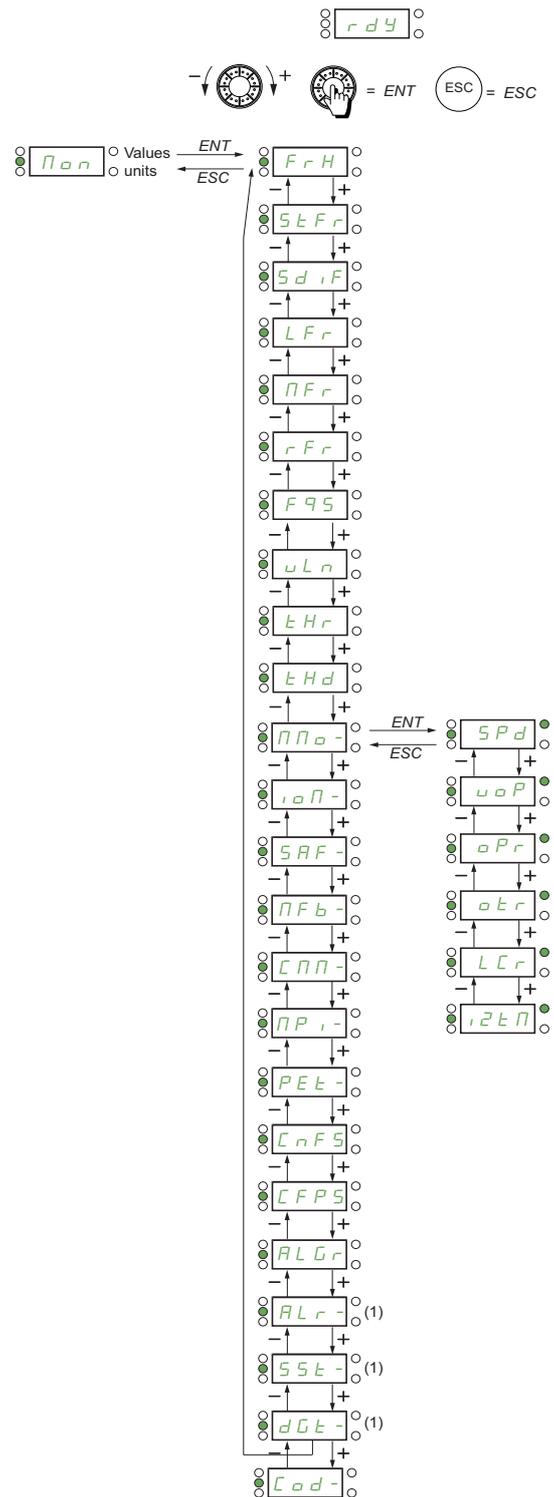

Parameters described in this page can be accessed by:



DRI- &gt; MON-

## Menu

Code	Name / Description	Unit
<b>Π ο η -</b>	<b>[1.2 MONITORING]</b>	
<b>A I V I</b> <b>( )</b>	<b>[Image input AIV1]</b> First virtual AI value. This parameter is read-only. It enables you to display the speed reference applied to the motor.	%
<b>F r H</b>	<b>[Frequency ref.]</b> Frequency reference before ramp (signed value). This parameter is read-only. It enables you to display the speed reference applied to the motor, regardless of which reference channel has been selected.	Hz
<b>S t F r</b>	<b>[Stator Frequency]</b> Displays the estimated stator frequency in Hz (signed value)	Hz
<b>S d i F</b>	<b>[Stator Freq Consist]</b> Stator Frequency Consistency. Displays the difference between the estimated stator frequency and the internal computed stator frequency in Hz. For more information refer to the ATV320 safety functions manual (see page 14)	Hz
<b>L F r</b>	<b>[HMI Frequency ref.]</b> HMI frequency reference (signed value). This parameter only appears if the function has been enabled. It is used to change the speed reference from the remote control. ENT does not have to be pressed to enable a change of reference.	Hz
<b>Π F r</b> <b>★</b> <b>( )</b>	<b>[Multiplying coeff.]</b> Multiply frequency variable. Multiplying coefficient, can be accessed if <b>[Multiplier ref. -] (Π A 2, Π A 3)</b> page 178 has been assigned.	%
<b>Π Π F</b>	<b>[Measured output fr.]</b> Measured motor frequency (signed value) The measured motor speed is displayed if the speed monitoring card has been inserted. (VW3A3620)	Hz
<b>r F r</b>	<b>[Output frequency]</b> Estimated motor frequency (signed value).	Hz
<b>F 9 5</b> <b>★</b>	<b>[Pulse in. work. freq.]</b> Measured frequency of the "Pulse input" input (see page 279).	Hz
<b>υ L n</b>	<b>[Mains voltage]</b> Main voltage (from DC bus). Mains voltage based on DC bus measurement, motor running or stopped.	V
<b>t H r</b>	<b>[Motor thermal state]</b> Motor thermal state. 100% = Nominal thermal state, 118% = "OLF" threshold (motor overload).	%
<b>t H d</b>	<b>[Drv.thermal state]</b> Drive thermal state. 100% = Nominal thermal state, 118% = "OHF" threshold (drive overload).	%
<b>Π Π ο -</b>	<b>[MONIT. MOTOR]</b>	
<b>S P d</b>	<b>[Motor speed]</b> Motor speed in rpm. (Estimated value)	rpm
<b>υ ο P</b>	<b>[Motor voltage]</b> Motor voltage. (Estimated value)	V
<b>ο P r</b>	<b>[Motor power]</b> Output power monitoring (100% = nominal motor power, estimated value based on current measure).	%
<b>ο t r</b>	<b>[Motor torque]</b> Output torque value (100% = nominal motor torque, estimated value based on current measure).	%

Parameters described in this page can be accessed by:

DRI- &gt; MON- &gt; IOM- &gt; LIA-

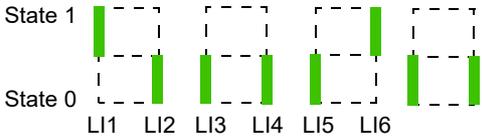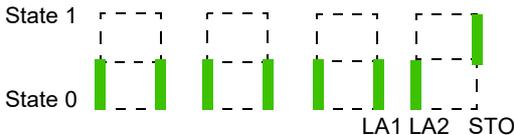Code	Name / Description	Unit
<b>Π α η -</b>	<b>[1.2 MONITORING] (continued)</b>	
<b>Π Π α -</b>	<b>[MONIT. MOTOR] (continued)</b>	
<b>L C r</b>	<b>[Motor current]</b> Estimated motor current. (Value measured)	A
<b>ι ρ ε η</b>	<b>[I<sup>2</sup>t overload level]</b> Monitoring of I <sup>2</sup> t overload level This parameter can be accessed if <b>[I<sup>2</sup>t model activation]</b> ( <b>ι ρ ε ρ</b> ) is set to <b>[Yes]</b> ( <b>γ ε ε</b> ) see page <a href="#">231</a>	%
<b>ι ο η -</b>	<b>[I/O MAP]</b>	
<b>L ι ρ -</b>	<b>[LOGIC INPUT CONF.]</b> Logic input functions.	
<b>L ι ρ</b>	<b>[LI1 assignment]</b> Read-only parameters, cannot be configured. It displays all the functions that are assigned to the logic input in order to check for multiple assignments. If no functions have been assigned, <b>[No]</b> ( <b>η ο</b> ) is displayed. Use the jog dial to scroll through the functions. The use of graphic display terminal allows to see the delay <b>[LI1 On Delay]</b> ( <b>L ι δ</b> ). Possible values are the same than in configuration menu page <a href="#">135</a> .	
<b>L ρ ρ</b> to <b>L β ρ</b> <b>L ρ ι ρ</b> <b>L ρ ρ ρ</b>	<b>[L-- assignment]</b> All the logic inputs available on the drive are processed as in the example for LI1 above.	
<b>L ι σ ι</b>	<b>[State of logic inputs LI1 to LI6]</b> Can be used to visualize the state of logic inputs LI1 to LI6 (display segment assignment: high = 1, low = 0).  Example above: LI1 and LI6 are at 1; LI2 to LI5 are at 0.	
<b>L ι σ ρ</b>	<b>[State of Safe Torque Off]</b> Can be used to visualize the state of LA1, LA2 and STO (Safe Torque Off) (display segment assignment: high = 1, low = 0).  Example above: LA1 and LA2 are at 0; STO (Safe Torque Off) is at 1.	

Parameters described in this page can be accessed by:

DRI- &gt; MON- &gt; IOM- &gt; AIA-

Code	Name / Description	Unit
<b>A , A -</b>	<b>[ANALOG INPUTS IMAGE]</b> Analog input functions.	
<b>A , I C</b>	<b>[AI1]</b> AI1 customer image: Value of analog input 1.	V
<b>A , I A</b>	<b>[AI1 assignment]</b> AI1 functions assignment. If no functions have been assigned, <b>[No] (n o)</b> is displayed. Following parameters are visible on the graphic display terminal by pressing the ENT key on the parameter.  <b>n o</b> <b>[No] (n o)</b> : Not assigned <b>F r 1</b> <b>[Ref.1 channel] (F r 1)</b> : Reference source 1 <b>F r 2</b> <b>[Ref.2 channel] (F r 2)</b> : Reference source 2 <b>S A 2</b> <b>[Summing ref. 2] (S A 2)</b> : Summing reference 2 <b>P , F</b> <b>[PID feedback] (P , F)</b> : PI feedback (PI control) <b>L A A</b> <b>[Torque limitation] (L A A)</b> : Torque limitation: Activation by an analog value <b>d A 2</b> <b>[Subtract. ref. 2] (d A 2)</b> : Subtracting reference 2 <b>P , n</b> <b>[Manual PID ref.] (P , n)</b> : Manual speed reference of the PI(D) regulator (auto-man) <b>F P , i</b> <b>[PID speed ref.] (F P , i)</b> : Speed reference of the PI(D) regulator (predictive reference) <b>S A 3</b> <b>[Summing ref. 3] (S A 3)</b> : Summing reference 3 <b>F r 1 b</b> <b>[Ref.1B channel] (F r 1 b)</b> : Reference source 1B <b>d A 3</b> <b>[Subtract. ref. 3] (d A 3)</b> : Subtracting reference 3 <b>F L o C</b> <b>[Forced local] (F L o C)</b> : Forced local reference source <b>n A 2</b> <b>[Ref. 2 multiplier] (n A 2)</b> : Multiplying reference 2 <b>n A 3</b> <b>[Ref. 3 multiplier] (n A 3)</b> : Multiplying reference 3 <b>P E S</b> <b>[Weight input] (P E S)</b> : External weight measurement function <b>, A 0 1</b> <b>[IA01] ( , A 0 1)</b> : Functions blocks: Analog Input 01 ... <b>, A 1 0</b> <b>[IA10] ( , A 1 0)</b> : Functions blocks: Analog Input 10	
<b>u , L 1</b>	<b>[AI1 min value]</b> Voltage scaling parameter of 0%.	V
<b>u , H 1</b>	<b>[AI1 max value]</b> Voltage scaling parameter of 100%.	V
<b>A , I F</b>	<b>[AI1 filter]</b> Interference filtering cut-off time of the low-filter.	s
<b>A , A -</b>	<b>[ANALOG INPUTS IMAGE] (continued)</b> Analog input functions.	
<b>A , I 2 C</b>	<b>[AI2]</b> AI2 customer image: Value of analog input 2.	V
<b>A , I 2 A</b>	<b>[AI2 assignment]</b> AI2 functions assignment. If no functions have been assigned, <b>[No] (n o)</b> is displayed. Following parameters are visible on the graphic display terminal by pressing the ENT key on the parameter.  Identical to <b>[AI1 assignment] (A , I A)</b> page 60.	
<b>u , L 2</b>	<b>[AI2 min value]</b> Voltage scaling parameter of 0%.	V
<b>u , H 2</b>	<b>[AI2 max value]</b> Voltage scaling parameter of 100%.	V
<b>A , I 2 F</b>	<b>[AI2 filter]</b> Interference filtering cutoff time of the low-filter.	s

Parameters described in this page can be accessed by:

DRI- &gt; MON- &gt; IOM- &gt; AIA-

Code	Name / Description	Unit
<b>A , A -</b>	<b>[ANALOG INPUTS IMAGE] (continued)</b> Analog input functions.	
<b>A , 3 C</b>	<b>[AI3]</b> AI3 customer image: Value of analog input 3.	V
<b>A , 3 A</b>	<b>[AI3 assignment]</b> AI3 functions assignment. If no functions have been assigned, <b>[No] (n o)</b> is displayed. Following parameters are visible on the graphic display terminal by pressing the ENT key on the parameter.  Identical to <b>[AI1 assignment] (A , 1 A)</b> page 60.	
<b>C r L 3</b>	<b>[AI3 min value]</b> Current scaling parameter of 0%.	mA
<b>C r H 3</b>	<b>[AI3 max value]</b> Current scaling parameter of 100%.	mA
<b>A , 3 F</b>	<b>[AI3 filter]</b> Interference filtering cutoff time of the low-filter.	s
<b>I O Π -</b>	<b>[I/O MAP] (continued)</b>	
<b>A o A -</b>	<b>[ANALOG OUTPUTS IMAGE]</b> Analog output functions. Following parameters are visible on the graphic display terminal by pressing the ENT key on the parameter.	
<b>A o 1 C</b> <b>(C)</b>	<b>[AO1C]</b> AO1 customer image: Value of analog output 1.	
<b>A o 1</b>	<b>[AO1 assignment]</b> AO1 functions assignment. If no functions have been assigned, <b>[No] (n o)</b> is displayed.  Identical to <b>[AO1 assignment] (A o 1)</b> page 153.	
<b>u o L 1</b> <b>★</b>	<b>[AO1 min Output]</b> Voltage scaling parameter of 0%. Can be accessed if <b>[AO1 Type] (A o 1 E)</b> is set to <b>[Voltage] ( I O u)</b> .	V
<b>u o H 1</b> <b>★</b>	<b>[AO1 max Output]</b> Voltage scaling parameter of 100%. Can be accessed if <b>[AO1 Type] (A o 1 E)</b> is set to <b>[Voltage] ( I O u)</b> .	V
<b>A o L 1</b> <b>★</b>	<b>[AO1 min output]</b> Current scaling parameter of 0%. Can be accessed if <b>[AO1 Type] (A o 1 E)</b> is set to <b>[Current] ( O A)</b> .	mA
<b>A o H 1</b> <b>★</b>	<b>[AO1 max output]</b> Current scaling parameter of 100%. Can be accessed if <b>[AO1 Type] (A o 1 E)</b> is set to <b>[Current] ( O A)</b> .	mA
<b>A 5 L 1</b>	<b>[Scaling AO1 max]</b> Minimum scaling value for AO1.	%
<b>A 5 H 1</b>	<b>[Scaling AO1 min]</b> Maximum scaling value for AO1.	%
<b>A o 1 F</b>	<b>[AO1 filter]</b> Cutoff time of the low-filter.	s

Parameters described in this page can be accessed by:

DRI- &gt; MON- &gt; IOM- &gt; FSI-

Code	Name / Description	Unit
<b>I O M -</b>	<b>[I/O MAP] (continued)</b>	
<b>F S I -</b>	<b>[FREQ. SIGNAL IMAGE]</b> Frequency signal image. This menu is visible only on graphic display terminal.	
<b>P F r C</b>	<b>[RP input]</b> Filtered customer pulse input frequency reference. Following parameters are visible on the graphic display terminal by pressing the ENT key on the parameter.	Hz
<b>P , A</b>	<b>[RP assignment]</b> Pulse input assignment. If no functions have been assigned, <b>[No] (n o)</b> is displayed.  Identical to <b>[A11 assignment] (A , I A)</b> page 60.	
<b>P , L</b>	<b>[RP min value]</b> RP minimum value. Pulse input scaling parameter of 0%.	kHz
<b>P F r</b>	<b>[RP max value]</b> RP maximum value Pulse input scaling parameter of 100%.	kHz
<b>P F i</b>	<b>[RP filter]</b> Interference filtering pulse input cutoff time of the low-filter.	ms
<b>M o n -</b>	<b>[1.2 MONITORING] (continued)</b>	
<b>S A F -</b>	<b>[MONIT. SAFETY]</b> For more details on Integrated Safety Functions, please refer to dedicated Safety manual.	
<b>S t o S</b>	<b>[STO status]</b> Status of the Safe Torque Off safety function.	
<b>i d L E</b>	<b>[Idle] ( i d L E)</b> : STO not in progress	
<b>S t o</b>	<b>[Safe stop] ( S t o)</b> : STO in progress	
<b>F L t</b>	<b>[Fault] ( F L t)</b> : STO error detected	
<b>S L S S</b>	<b>[SLS status]</b> Status of the Safely-limited speed safety function.	
<b>n o</b>	<b>[Not config.] ( n o)</b> : SLS not configured	
<b>i d L E</b>	<b>[Idle] ( i d L E)</b> : SLS not in progress	
<b>W A i t</b>	<b>[SLS wait time] ( W A i t)</b> : SLS waiting for activation	
<b>S t r t</b>	<b>[SLS start] ( S t r t)</b> : SLS in transient state	
<b>S S i</b>	<b>[Safe ramp] ( S S i)</b> : SLS ramp in progress	
<b>S L S</b>	<b>[Spd limited] ( S L S)</b> : SLS speed limitation in progress	
<b>S t o</b>	<b>[Safe stop] ( S t o)</b> : SLS safe torque off request in progress	
<b>F L t</b>	<b>[Fault] ( F L t)</b> : SLS error detected	
<b>S S i S</b>	<b>[SS1 status]</b> Status of the Safe Stop 1 safety function.	
<b>n o</b>	<b>[Not config.] ( n o)</b> : SS1 not configured	
<b>i d L E</b>	<b>[Idle] ( i d L E)</b> : SS1 not in progress	
<b>S S i</b>	<b>[Safe ramp] ( S S i)</b> : SS1 ramp in progress	
<b>S t o</b>	<b>[Safe stop] ( S t o)</b> : SS1 safe torque off request in progress	
<b>F L t</b>	<b>[Fault] ( F L t)</b> : SS1 error detected	
<b>S M S S</b>	<b>[SMS status]</b> Status of the Safe Maximum Speed safety function.	
<b>n o</b>	<b>[Not Set] ( n o)</b> : SMS not set	
<b>o F F</b>	<b>[Active] ( o F F)</b> : SMS active	
<b>F t i</b>	<b>[Internal Err.] ( F t i)</b> : SMS internal error	
<b>F t o</b>	<b>[Max Speed] ( F t o)</b> : Maximum Speed reached	

Parameters described in this page can be accessed by:

DRI- &gt; MON- &gt; SAF-

Code	Name / Description	Unit
<b>G d L S</b>	<b>[GDL status]</b> Status of the Guard Door Locking safety function.  <b>no</b> <b>[Not Set]</b> ( <b>no</b> ): GDL not set <b>oFF</b> <b>[Inactive]</b> ( <b>oFF</b> ): GDL inactive <b>S t d</b> <b>[Short Delay]</b> ( <b>S t d</b> ): Short Delay In Progress <b>L G d</b> <b>[Long Delay]</b> ( <b>L G d</b> ): Long Delay In Progress <b>o n</b> <b>[Active]</b> ( <b>L G d</b> ): GDL active <b>L F t</b> <b>[Internal Err.]</b> ( <b>L G d</b> ): GDL internal error	
<b>S F F E</b>	<b>[Safety fault reg.]</b> Safety function error register.  Bit0 = 1: Logic inputs debounce time-out (verify value of debounce time LIDT according to the application) Bit1 Reserved Bit2 = 1: Motor speed sign has changed during SS1 ramp Bit3 = 1: Motor speed has reached the frequency limit threshold during SS1 ramp. Bit4: Reserved Bit5: Reserved Bit6 = 1: Motor speed sign has changed during SLS limitation Bit7 = 1: Motor speed has reached the frequency limit threshold during SS1 ramp. Bit8: Reserved Bit9: Reserved Bit10: Reserved Bit11: Reserved Bit12: Reserved Bit13 = 1: Not possible to measure the motor speed (verify the motor wiring connection) Bit14 = 1: Motor ground short-circuit detected (verify the motor wiring connection) Bit15 = 1: Motor phase to phase short-circuit detected (verify the motor wiring connection)	
<b>no n -</b>	<b>[1.2 MONITORING] (continued)</b>	
<b>no f b -</b>	<b>[MONIT. FUN. BLOCKS]</b> For more details on Function Blocks, please refer to dedicated Function Blocks manual.	
<b>F b S t</b>	<b>[FB status]</b> Function Block Status.  <b>i d L E</b> <b>[Idle]</b> ( <b>i d L E</b> ): Idle state <b>C H E C</b> <b>[Check prog.]</b> ( <b>C H E C</b> ): Check program state <b>S t o P</b> <b>[Stop]</b> ( <b>S t o P</b> ): STOP state <b>i n i t</b> <b>[Init]</b> ( <b>i n i t</b> ): Initialization state <b>r u n</b> <b>[Run]</b> ( <b>r u n</b> ): RUN state <b>E r r</b> <b>[Error]</b> ( <b>E r r</b> ): Error state	
<b>F b F t</b>	<b>[FB fault]</b> Status of the function blocks execution.  <b>no</b> <b>[No]</b> ( <b>no</b> ): No error detected <b>i n t</b> <b>[Internal]</b> ( <b>i n t</b> ): Internal error detected <b>b i n</b> <b>[Binary file]</b> ( <b>b i n</b> ): Binary error detected <b>i n P</b> <b>[Intern para.]</b> ( <b>i n P</b> ): Internal parameter error detected <b>P A r</b> <b>[Para. RW]</b> ( <b>P A r</b> ): Parameter access error detected <b>C A L</b> <b>[Calculation]</b> ( <b>C A L</b> ): Calculation error detected <b>t o A u</b> <b>[TO AUX]</b> ( <b>t o A u</b> ): TimeOut AUX task <b>t o P P</b> <b>[TO synch]</b> ( <b>t o P P</b> ): TimeOut in PRE/POST task <b>A d L</b> <b>[Bad ADLC]</b> ( <b>A d L</b> ): ADLC with bad parameter <b>i n</b> <b>[Input assign.]</b> ( <b>i n</b> ): Input not configured	
<b>F b i -</b>	<b>[FB IDENTIFICATION]</b>	
<b>b u E r</b> ★	<b>[Program version]</b> Program user version. Can be accessed if <b>[FB status]</b> ( <b>F b S t</b> ) is not set to <b>[Idle]</b> ( <b>i d L E</b> ).	
<b>b n S</b> ★	<b>[Program size]</b> Program file size. Can be accessed if <b>[FB status]</b> ( <b>F b S t</b> ) is not set to <b>[Idle]</b> ( <b>i d L E</b> ).	

Parameters described in this page can be accessed by:

DRI- &gt; MON- &gt; FBI-

Code	Name / Description	Unit
<i>b n u</i>	<b>[Prg. format version]</b> Binary format version of the drive. Can be accessed if <b>[FB status]</b> ( <i>F b S t</i> ) is not set to <b>[Idle]</b> ( <i>i d L E</i> ).	
<i>C t u</i>	<b>[Catalogue version]</b> Catalog version of the drive.	
<i>Π α η -</i>	<b>[1.2 MONITORING]</b> (continued)	
<i>C Π Π -</i>	<b>[COMMUNICATION MAP]</b> This menu is visible only on graphic display terminal, except for <b>[COM. SCANNER INPUT MAP]</b> ( <i>, 5 Π -</i> ) and <b>[COM SCAN MAP]</b> ( <i>, 5 Π -</i> ) menus.	
<i>C Π d C</i>	<b>[Command channel]</b> Active command channel.	
<i>t E r Π</i>	<b>[Terminals]</b> ( <i>t E r Π</i> ): Terminals	
<i>H Π i</i>	<b>[HMI]</b> ( <i>H Π i</i> ): Graphic display terminal or remote display terminal	
<i>Π d b</i>	<b>[Modbus]</b> ( <i>Π d b</i> ): Integrated Modbus	
<i>C A n</i>	<b>[CANopen]</b> ( <i>C A n</i> ): Integrated CANopen®	
<i>t u d</i>	<b>[+/- speed]</b> ( <i>t u d</i> ): +/- speed command	
<i>n E t</i>	<b>[Com. card]</b> ( <i>n E t</i> ): Communication card (if inserted)	
<i>P 5</i>	<b>[PC tool]</b> ( <i>P 5</i> ): PC software	
<i>C Π d</i>	<b>[Cmd value]</b> DRIVECOM command register value. <b>[Profile]</b> ( <i>C H C F</i> ) is not set to <b>[I/O profile]</b> ( <i>i o</i> ), see page 163.  Possible values in CiA402 profile, separate or not separate mode. Bit 0: "Switch on"/Contactor command Bit 1: "Disable voltage"/Authorization to supply AC power Bit 2: "Quick stop"/Emergency stop Bit 3: "Enable operation"/Run command Bit 4 to Bit 6: Reserved (set to 0) Bit 7: "Fault reset"/error acknowledgment active on 0 to 1 rising edge Bit 8: Halt Stop according to the <b>[Type of stop]</b> ( <i>S t t</i> ) parameter without leaving the Operation enabled state Bit 9: Reserved (set to 0) Bit 10: Reserved (set to 0) Bit 11 to Bit 15: Can be assigned to a command  Possible values in the I/O profile. On state command <b>[2 wire]</b> ( <i>2 C</i> ). Bit 0: Forward (on state) command = 0: No forward command = 1: Forward command The assignment of bit 0 cannot be modified. It corresponds to the assignment of the terminals. It can be switched. Bit 0 ( <i>C d d d</i> ) is only active if the channel of this control word is active. Bit 1 to Bit 15: Can be assigned to commands.  On edge command <b>[3 wire]</b> ( <i>3 C</i> ). Bit 0: Stop (run authorization). = 0: Stop = 1: Run is authorized on a forward or reverse command Bit 1: Forward (on 0 to 1 rising edge) command The assignment of bits 0 and 1 cannot be modified. It corresponds to the assignment of the terminals. It can be switched. Bits 0 ( <i>C d d d</i> ) and 1 ( <i>C d d l</i> ) are only active if the channel of this control word is active. Bit 2 to Bit 15: Can be assigned to commands	
<i>r F C C</i>	<b>[Active ref. channel]</b> HMI reference channel.	
<i>t E r Π</i>	<b>[Terminals]</b> ( <i>t E r Π</i> ): Terminals	
<i>L o C</i>	<b>[Local]</b> ( <i>L o C</i> ): Jog dial	
<i>H Π i</i>	<b>[HMI]</b> ( <i>H Π i</i> ): Graphic display terminal or remote display terminal	
<i>Π d b</i>	<b>[Modbus]</b> ( <i>Π d b</i> ): Integrated Modbus	
<i>C A n</i>	<b>[CANopen]</b> ( <i>C A n</i> ): Integrated CANopen®	
<i>t u d</i>	<b>[tUd]</b> ( <i>t u d</i> ): +/- speed command	
<i>n E t</i>	<b>[Com. card]</b> ( <i>n E t</i> ): Communication card (if inserted)	
<i>P 5</i>	<b>[PC tool]</b> ( <i>P 5</i> ): PC software	

Code	Name / Description	Unit
<i>F r H</i>	<b>[Frequency ref.]</b> Frequency reference before ramp.	Hz
<i>E t A</i>	<b>[ETA state word]</b> DRIVECOM status word.  Possible values in CiA402 profile, separate or not separate mode. Bit 0: "Ready to switch on", awaiting power section supply mains Bit 1: "Switched on", ready Bit 2: "Operation enabled", running Bit 3: "Fault" = 0: No fault = 1: Fault Bit 4: "Voltage enabled", power section supply mains present = 0: Power section supply mains absent = 1: Power section supply mains present When the drive is powered by the power section only, this bit is always at 1. Bit 5: Quick stop/Emergency stop Bit 6: "Switched on disabled", power section supply mains locked Bit 7: Alarm = 0: No alarm = 1: Alarm Bit 8: Reserved (= 0) Bit 9: Remote: command or reference via the network = 0: Command or reference via the graphic display terminal or the remote display terminal = 1: Command or reference via the network Bit 10: Target reference reached = 0: The reference is not reached = 1: The reference has been reached When the drive is in speed mode, this is the speed reference. Bit 11: "Internal limit active", reference outside limits = 0: The reference is within the limits = 1: The reference is not within the limits When the drive is in speed mode, the limits are defined by the <b>[Low speed] (L 5 P)</b> and <b>[High speed] (H 5 P)</b> parameters. Bit 12 and Bit 13: Reserved (= 0) Bit 14: "Stop key", STOP via stop key = 0: STOP key not pressed = 1: Stop triggered by the STOP key on the graphic display terminal or the remote display terminal Bit 15: "Direction", direction of rotation = 0: Forward rotation at output = 1: Reverse rotation at output  The combination of bits 0, 1, 2, 4, 5 and 6 defines the state in the DSP 402 state chart (see the Communication manuals).  Possible values in the I/O profile. <b>Note:</b> The value is identical in the CiA402 profile and the I/O profile. In the I/O profile, the description of the values is simplified and does not refer to the CiA402 (Drivecom) state chart. Bit 0: Reserved (= 0 or 1) Bit 1: Ready = 0: Not ready = 1: Ready Bit 2: Running = 0: The drive will not start if a reference other than zero is applied. = 1: Running, if a reference other than zero is applied, the drive can start. Bit 3: Fault = 0: No fault = 1: Fault Bit 4: Power section supply mains present = 0: Power section supply mains absent = 1: Power section supply mains present Bit 5: Reserved (= 1) Bit 6: Reserved (= 0 or 1) Bit 7: Alarm = 0: No alarm = 1: Alarm Bit 8: Reserved (= 0) Bit 9: Command via a network = 0: Command via the terminals or the graphic display terminal = 1: Command via a network	

Parameters described in this page can be accessed by:

DRI- &gt; MON- &gt; CMM-

Code	Name / Description	Unit
	Bit 10: Reference reached = 0: The reference is not reached = 1: The reference has been reached Bit 11: Reference outside limits = 0: The reference is within the limits = 1: The reference is not within the limits When the drive is in speed mode, the limits are defined by LSP and HSP parameters. Bit 12 and Bit 13: Reserved (= 0) Bit 14: Stop via STOP key = 0: STOP key not pressed = 1: Stop triggered by the STOP key on the graphic display terminal or the remote display terminal Bit 15: Direction of rotation = 0: Forward rotation at output = 1: Reverse rotation at output	
<b>П nd -</b>	<b>[MODBUS NETWORK DIAG]</b> Modbus network diagnostic.	
<b>П db l</b>	<b>[COM LED]</b> View of the Modbus Communication.	
<b>П IC t</b>	<b>[Mb NET frames nb.]</b> Modbus network frame counter: Number of processed frames.	
<b>П IE C</b>	<b>[Mb NET CRC errors]</b> Modbus network CRC error counter: Number of CRC errors.	
<b>С П П -</b>	<b>[COMMUNICATION MAP] (continued)</b>	
<b>С SA -</b>	<b>[COM. SCANNER INPUT MAP]</b> Used for CANopen® and Modbus Network.	
<b>н П 1</b>	<b>[Com Scan In1 val.]</b> Value of the 1st input word.	
<b>н П 2</b>	<b>[Com Scan In2 val.]</b> Value of the 2nd input word.	
<b>н П 3</b>	<b>[Com Scan In3 val.]</b> Value of the 3rd input word.	
<b>н П 4</b>	<b>[Com Scan In4 val.]</b> Value of the 4th input word.	
<b>н П 5</b>	<b>[Com Scan In5 val.]</b> Value of the 5th input word.	
<b>н П 6</b>	<b>[Com Scan In6 val.]</b> Value of the 6th input word.	
<b>н П 7</b>	<b>[Com Scan In7 val.]</b> Value of the 7th input word.	
<b>н П 8</b>	<b>[Com Scan In8 val.]</b> Value of the 8th input word.	
<b>С П П -</b>	<b>[COMMUNICATION MAP] (continued)</b>	
<b>С SA -</b>	<b>[COM SCAN MAP]</b>	
<b>н С 1</b>	<b>[Com Scan Out1 val.]</b> Value of the 1st output word.	
<b>н С 2</b>	<b>[Com Scan Out2 val.]</b> Value of the 2nd output word.	
<b>н С 3</b>	<b>[Com Scan Out3 val.]</b> Value of the 3rd output word.	
<b>н С 4</b>	<b>[Com Scan Out4 val.]</b> Value of the 4th output word.	
<b>н С 5</b>	<b>[Com Scan Out5 val.]</b> Value of the 5th output word.	

Code	Name / Description	Unit
<i>n C 6</i>	<b>[Com Scan Out6 val.]</b> Value of the 6th output word.	
<i>n C 7</i>	<b>[Com Scan Out7 val.]</b> Value of the 7th output word.	
<i>n C 8</i>	<b>[Com Scan Out8 val.]</b> Value of the 8th output word.	
<i>C P P -</i>	<b>[COMMUNICATION MAP] (continued)</b>	
<i>C I -</i>	<b>[CMD. WORD IMAGE]</b> Command word image: Only accessible via graphic display terminal.	
<i>C P d 1</i>	<b>[Modbus cmd.]</b> Modbus command word image.	
<i>C P d 2</i>	<b>[CANopen cmd.]</b> CANopen® command word image.	
<i>C P d 3</i>	<b>[COM. card cmd.]</b> Communication card command word image.	
<i>C P P -</i>	<b>[COMMUNICATION MAP] (continued)</b>	
<i>r I -</i>	<b>[FREQ. REF. WORD MAP]</b> Frequency reference image: Only accessible via graphic display terminal.	
<i>L F r 1</i>	<b>[Modbus ref.]</b> Modbus frequency reference image.	Hz
<i>L F r 2</i>	<b>[CANopen ref.]</b> CANopen® frequency reference image.	Hz
<i>L F r 3</i>	<b>[Com. card ref.]</b> Communication card frequency reference image.	Hz
<i>C P P -</i>	<b>[COMMUNICATION MAP] (continued)</b>	
<i>C n P -</i>	<b>[CANopen MAP]</b> CANopen® image: Only accessible via graphic display terminal.	
<i>C o n</i>	<b>[RUN LED]</b> View of the CANopen® RUN Led Status.	
<i>C A n E</i>	<b>[ERR LED]</b> View of the CANopen® Error Led Status.	
<i>P o 1 -</i>	<b>[PDO1 IMAGE]</b> View of the RPDO1 and TPDO1.	
<i>r P 1 1</i> ★	<b>[Received PDO1-1]</b> First frame of the received PDO1.	
<i>r P 1 2</i> ★	<b>[Received PDO1-2]</b> Second frame of the received PDO1.	
<i>r P 1 3</i> ★	<b>[Received PDO1-3]</b> Third frame of the received PDO1.	
<i>r P 1 4</i> ★	<b>[Received PDO1-4]</b> Fourth frame of the received PDO1.	
<i>t P 1 1</i> ★	<b>[Transmit PDO1-1]</b> First frame of the transmit PDO1.	

Parameters described in this page can be accessed by:

DRI- &gt; MON- &gt; CMM- &gt; CNM- &gt; P01-

Code	Name / Description	Unit
<i>EP12</i> ★	<b>[Transmit PDO1-2]</b> Second frame of the transmit PDO1.	
<i>EP13</i> ★	<b>[Transmit PDO1-3]</b> Third frame of the transmit PDO1.	
<i>EP14</i> ★	<b>[Transmit PDO1-4]</b> Fourth frame of the transmit PDO1.	
<i>ENP-</i>	<b>[CANopen MAP] (continued)</b> CANopen® image: Only accessible via graphic display terminal.	
<i>P02-</i>	<b>[PDO2 IMAGE]</b> View of the RPDO2 and TPDO2: Same structure as <b>[PDO1 IMAGE]</b> ( <i>P01-</i> ).	
<i>rP21</i> ★	<b>[Received PDO2-1]</b> First frame of the received PDO2.	
<i>rP22</i> ★	<b>[Received PDO2-2]</b> Second frame of the received PDO2.	
<i>rP23</i> ★	<b>[Received PDO2-3]</b> Third frame of the received PDO2.	
<i>rP24</i> ★	<b>[Received PDO2-4]</b> Fourth frame of the received PDO2.	
<i>EP21</i> ★	<b>[Transmit PDO2-1]</b> First frame of the transmit PDO2.	
<i>EP22</i> ★	<b>[Transmit PDO2-2]</b> Second frame of the transmit PDO2.	
<i>EP23</i> ★	<b>[Transmit PDO2-3]</b> Third frame of the transmit PDO2.	
<i>EP24</i> ★	<b>[Transmit PDO2-4]</b> Fourth frame of the transmit PDO2.	
<i>ENP-</i>	<b>[CANopen MAP] (continued)</b> CANopen® image: Only accessible via graphic display terminal.	
<i>P03-</i>	<b>[PDO3 IMAGE]</b> View of the RPDO3 and TPDO3: Same structure as <b>[PDO1 IMAGE]</b> ( <i>P01-</i> ).	
<i>rP31</i> ★	<b>[Received PDO3-1]</b> First frame of the received PDO3.	
<i>rP32</i> ★	<b>[Received PDO3-2]</b> Second frame of the received PDO3.	
<i>rP33</i> ★	<b>[Received PDO3-3]</b> Third frame of the received PDO3.	
<i>rP34</i> ★	<b>[Received PDO3-4]</b> Fourth frame of the received PDO3.	

Parameters described in this page can be accessed by:

DRI- &gt; MON- &gt; CMM- &gt; CNM- &gt; P03-

Code	Name / Description	Unit
<i>EP31</i> ★	<b>[Transmit PDO3-1]</b> First frame of the transmit PDO3.	
<i>EP32</i> ★	<b>[Transmit PDO3-2]</b> Second frame of the transmit PDO3.	
<i>EP33</i> ★	<b>[Transmit PDO3-3]</b> Third frame of the transmit PDO3.	
<i>EP34</i> ★	<b>[Transmit PDO3-4]</b> Fourth frame of the transmit PDO3.	
<i>CnN-</i>	<b>[CANopen MAP] (continued)</b> CANopen® image: Only accessible via graphic display terminal.	
<i>nNtS</i>  <i>boot</i> <i>StoP</i> <i>oPE</i> <i>PoPE</i>	<b>[Canopen NMT state]</b> Drive NMT State of the CANopen® slave.  <b>[Boot]</b> ( <i>boot</i> ): Bootup <b>[Stopped]</b> ( <i>StoP</i> ): Stopped <b>[Operation]</b> ( <i>oPE</i> ): Operational <b>[Pre-op]</b> ( <i>PoPE</i> ): Pre-Operational	
<i>nbtP</i>	<b>[Number of TX PDO]</b> Number of transmit PDO.	
<i>nbrP</i>	<b>[Number of RX PDO]</b> Number of receive PDO.	
<i>ErCo</i>	<b>[Error code]</b> CANopen® error register (from 1 to 5).	
<i>rECI</i>	<b>[RX Error Counter]</b> Controller Rx error counter (not stored at power off).	
<i>tECI</i>	<b>[TX error counter]</b> Controller Tx error counter (not stored at power off).	

Parameters described in this page can be accessed by:

DRI- &gt; MON- &gt; MPI-

Code	Name / Description	Unit
<b>Π ο η -</b>	<b>[1.2 MONITORING] (continued)</b>	
<b>Π Ρ ι -</b> ★	<b>[MONIT. PI]</b> PID management. Visible if <b>[PID feedback ass.]</b> ( <i>P i F</i> ) is not set to <b>[No]</b> ( <i>η ο</i> ).	
<i>r P i</i> (↻) ★	<b>[Internal PID ref.]</b> Internal PID reference: As a process value.	
<i>r P E</i> ★	<b>[PID error]</b> PID error value.	
<i>r P F</i> ★	<b>[PID feedback]</b> PID feedback value.	
<i>r P C</i> ★	<b>[PID reference]</b> PID setpoint value via graphic display terminal.	
<i>r P ο</i>	<b>[PID Output]</b> PID output value with limitation.	Hz
<b>Π ο η -</b>	<b>[1.2 MONITORING] (continued)</b>	
<b>P E t -</b>	<b>[MONIT. POWER TIME]</b>	
<i>A P H</i>	<b>[Consumption]</b> Energy consumption in Wh, kWh or MWh (accumulated consumption). If you read this parameter via fieldbus, the unit of this parameter is given by the parameter <b>[Unit]</b> ( <i>UNT</i> ). See the Communication Parameters file.	Wh, kWh, MWh
<i>r t H</i>	<b>[Run time]</b> Run elapsed time display (resetable) in seconds, minutes or hours (length of time the motor has been switched on). If you read this parameter via fieldbus, the unit of this parameter is given by the parameter <b>[Unit]</b> ( <i>UNT</i> ). See the Communication Parameters file.	s, min, h
<i>P t H</i>	<b>[Power on time]</b> Power elapsed time display in seconds, minutes or hours (length of time the drive has been switched on). If you read this parameter via fieldbus, the unit of this parameter is given by the parameter <b>[Unit]</b> ( <i>UNT</i> ). See the Communication Parameters file.	s, min, h
<i>r P r</i> (↻)	<b>[Operating t. reset]</b> Reset of run elapsed time.	
<i>η ο</i> <i>A P H</i> <i>r t H</i> <i>P t H</i>	<b>[No]</b> ( <i>η ο</i> ): Reset operation not in progress <b>[Reset kWh]</b> ( <i>A P H</i> ): Clear <b>[Reset kWh]</b> ( <i>A P H</i> ) <b>[rst. runtime]</b> ( <i>r t H</i> ): Clear <b>[rst. runtime]</b> ( <i>r t H</i> ) <b>[rst. P On t.]</b> ( <i>P t H</i> ): Clear <b>[rst. P On t.]</b> ( <i>P t H</i> )	
<b>Π ο η -</b>	<b>[1.2 MONITORING] (continued)</b>	
<i>C n F 5</i>	<b>[Config. active]</b> View of the active configuration.	
<i>η ο</i> <i>C n F 0</i> <i>C n F 1</i> <i>C n F 2</i>	<b>[In progress]</b> ( <i>η ο</i> ): Transitory state (configuration changing) <b>[Config. n°0]</b> ( <i>C n F 0</i> ): Configuration 0 active <b>[Config. n°1]</b> ( <i>C n F 1</i> ): Configuration 1 active <b>[Config. n°2]</b> ( <i>C n F 2</i> ): Configuration 2 active	
<i>C F P 5</i> ★	<b>[Utilised param. set]</b> Configuration parameter status (can be accessed if parameter switching has been enabled, see page 242).	

Parameters described in this page can be accessed by:

DRI- &gt; MON- &gt; ALR-

Code	Name / Description	Unit
<i>no</i> <i>CFP1</i> <i>CFP2</i> <i>CFP3</i>	[None] ( <i>no</i> ): Not assigned [Set N°1] ( <i>CFP1</i> ): Parameter set 1 active [Set N°2] ( <i>CFP2</i> ): Parameter set 2 active [Set N°3] ( <i>CFP3</i> ): Parameter set 3 active	
<i>ALGr</i>	<b>[Alarm groups]</b> Current impacted alarm group numbers. Group of alarms could be user defined in <b>[INPUTS / OUTPUTS CFG] (i-o-)</b> page <a href="#">133</a> .  --- ( <i>---</i> ): No alarm group impacted 1-- ( <i>1--</i> ): Alarm group 1 -2- ( <i>-2-</i> ): Alarm group 2 12- ( <i>12-</i> ): Alarm group 1 and 2 --3 ( <i>--3</i> ): Alarm group 3 1-3 ( <i>1-3</i> ): Alarm group 1 and 3 -23 ( <i>-23</i> ): Alarm group 2 and 3 123 ( <i>123</i> ): Alarm group 1, 2 and 3	
<i>SPd1</i> or <i>SPd2</i> or <i>qSPd3</i>	<b>[Cust. output value]</b>  [Cust. output value] ( <i>SPd1</i> ), [Cust. output value] ( <i>SPd2</i> ) or [Cust. output value] ( <i>SPd3</i> ) depending on the [Scale factor display] ( <i>SD5</i> ) parameter, page <a href="#">112</a> ([Cust. output value] ( <i>SPd3</i> ) in the factory setting)	
<i>ALr-</i>	<b>[ALARMS]</b> List of current alarms. If an alarm is present, a ✓ appears on the graphic display terminal.	
<i>noAL</i> <i>PtCL</i> <i>EtF</i> <i>uSA</i> <i>CtA</i> <i>FtA</i> <i>F2A</i> <i>SrA</i> <i>tSA</i> <i>tS2</i> <i>tS3</i> <i>uPA</i> <i>FLA</i> <i>tHA</i> <i>AG1</i> <i>AG2</i> <i>AG3</i> <i>PEE</i> <i>PFA</i> <i>AP3</i> <i>SSA</i> <i>tAd</i> <i>tJA</i> <i>boA</i> <i>uLA</i> <i>oLA</i> <i>rSDA</i> <i>tEHA</i> <i>tELA</i> <i>dLdA</i> <i>F9LA</i>	[No alarm] ( <i>noAL</i> ) [PTC alarm] ( <i>PtCL</i> ) [External fault] ( <i>EtF</i> ) [UnderV. al.] ( <i>uSA</i> ) [I attained] ( <i>CtA</i> ) [Freq. Th. attain.] ( <i>FtA</i> ) [Freq. Th. 2 attained] ( <i>F2A</i> ) [Freq.ref.att] ( <i>SrA</i> ) [Th.mot. att.] ( <i>tSA</i> ) [Th.mot2 att.] ( <i>tS2</i> ) [Th.mot3 att.] ( <i>tS3</i> ) [Underv. prev.] ( <i>uPA</i> ) [HSP attain.] ( <i>FLA</i> ) [Al. °C drv] ( <i>tHA</i> ) [Alarm group 1] ( <i>AG1</i> ) [Alarm group 2] ( <i>AG2</i> ) [Alarm group 3] ( <i>AG3</i> ) [PID error al] ( <i>PEE</i> ) [PID fdbk al.] ( <i>PFA</i> ) [AI3 Al. 4-20mA] ( <i>AP3</i> ) [Lim T/I att.] ( <i>SSA</i> ) [Th.driv.att.] ( <i>tAd</i> ) [IGBT alarm] ( <i>tJA</i> ) [Brake R. al.] ( <i>boA</i> ) [Underload. Proc. Al.] ( <i>uLA</i> ) [Overload. Proc. Al.] ( <i>oLA</i> ) [Rope slack alarm] ( <i>rSDA</i> ) [High torque alarm] ( <i>tEHA</i> ) [Low torque alarm] ( <i>tELA</i> ) [Dynamic load alarm] ( <i>dLdA</i> ) [Freq. meter Alarm] ( <i>F9LA</i> )	

Parameters described in this page can be accessed by:

DRI- &gt; MON- &gt; SST-

Code	Name / Description	Unit
<b>55E -</b>	<b>[OTHER STATE]</b> List of secondary states. This menu is visible only on graphic display terminal.	
<i>FL</i>	<b>[In motor fluxing] (FL)</b>	
<i>PtCLL</i>	<b>[PTC Alarm] (PtCLL)</b>	
<i>FSt</i>	<b>[Fast stop in prog.] (FSt)</b>	
<i>CtA</i>	<b>[Current Th. attained] (CtA)</b>	
<i>FtA</i>	<b>[Freq. Th. attained] (FtA)</b>	
<i>F2A</i>	<b>[Freq. Th. 2 attained] (F2A)</b>	
<i>SrA</i>	<b>[Frequency ref. att.] (SrA)</b>	
<i>tSA</i>	<b>[Motor th. state att.] (tSA)</b>	
<i>EtF</i>	<b>[External fault alarm] (EtF)</b>	
<i>Aut</i>	<b>[Auto restart] (Aut)</b>	
<i>FtL</i>	<b>[Remote] (FtL)</b>	
<i>tun</i>	<b>[Auto-tuning] (tun)</b>	
<i>uSA</i>	<b>[Undervoltage] (uSA)</b>	
<i>CnF1</i>	<b>[Config. 1 act.] (CnF1)</b>	
<i>CnF2</i>	<b>[Config. 2 act.] (CnF2)</b>	
<i>FLA</i>	<b>[HSP attained] (FLA)</b>	
<i>CFP1</i>	<b>[Set 1 active] (CFP1)</b>	
<i>CFP2</i>	<b>[Set 2 active] (CFP2)</b>	
<i>CFP3</i>	<b>[Set 3 active] (CFP3)</b>	
<i>brS</i>	<b>[In braking] (brS)</b>	
<i>dbl</i>	<b>[DC bus charged] (dbl)</b>	
<i>tHA</i>	<b>[High torque alarm] (tHA)</b>	
<i>tLA</i>	<b>[Low torque alarm] (tLA)</b>	
<i>FFrd</i>	<b>[Forward] (FFrd)</b>	
<i>FFrs</i>	<b>[Reverse] (FFrs)</b>	
<i>F9LA</i>	<b>[Freq. metre Alarm] (F9LA)</b>	
<b>dGt -</b>	<b>[DIAGNOSTICS]</b> This menu is visible only on graphic display terminal.	
<b>PFH -</b>	<b>[FAULT HISTORY]</b> Shows the 8 last detected faults.	
<b>dP1</b>	<b>[Past fault 1]</b> Fault record 1 (1 is last).	
<i>noF</i>	<b>[No fault] (noF):</b> No detected fault stored	
<i>ASf</i>	<b>[Angle error] (ASf):</b> Angle setting detected fault	
<i>BLf</i>	<b>[Brake control] (BLf):</b> Brake's motor 3-phases loss	
<i>brf</i>	<b>[Brake feedback] (brf):</b> Brake contactor detected error	
<i>CFf</i>	<b>[Incorrect config.] (CFf):</b> Invalid configuration at power on	
<i>CFi2</i>	<b>[Bad conf] (CFi2):</b> Configuration transfer detected error	
<i>CnF</i>	<b>[Com. network] (CnF):</b> NET option communication interruption	
<i>CoF</i>	<b>[CAN com.] (CoF):</b> CANopen® communication interruption	
<i>Crf</i>	<b>[Capa.charg] (Crf):</b> Load relay detected fault	
<i>Csf</i>	<b>[Ch.sw. fault] (Csf):</b> Channel switching detected error	
<i>dLf</i>	<b>[Load fault] (dLf):</b> Dynamic load detected error	
<i>EEf1</i>	<b>[Control EEprom] (EEf1):</b> Control EEprom detected error	
<i>EEf2</i>	<b>[Power Eeprom] (EEf2):</b> Power EEprom detected error	
<i>EPf1</i>	<b>[External fault LI/Bit] (EPf1):</b> External detected fault from LI or local link	
<i>EPf2</i>	<b>[External fault com.] (EPf2):</b> External interruption from communication board	
<i>FbE</i>	<b>[FB fault] (FbE):</b> Function block detected error	
<i>FbE5</i>	<b>[FB stop fly.] (FbE5):</b> Function block stop detected error	
<i>FCf1</i>	<b>[Out. contact. stuck] (FCf1):</b> Output contactor: closed contactor	
<i>FCf2</i>	<b>[Out. contact. open.] (FCf2):</b> Output contactor: opened contactor	
<i>HCF</i>	<b>[Cards pairing] (HCF):</b> Hardware configuration detected error	
<i>Hdf</i>	<b>[IGBT desaturation] (Hdf):</b> Hardware detected error	
<i>iLf</i>	<b>[Option int link] (iLf):</b> Option internal link interruption	
<i>inF1</i>	<b>[Rating error] (inF1):</b> Unknown drive rating	
<i>inF2</i>	<b>[PWR Calib.] (inF2):</b> Unknown or incompatible power board	
<i>inF3</i>	<b>[Int.serial link] (inF3):</b> Internal serial link communication interruption	
<i>inF4</i>	<b>[Int.Mfg area] (inF4):</b> Invalid industrialization zone	
<i>inF5</i>	<b>[Internal-option] (inF5):</b> Unknown or incompatible option board	
<i>inF9</i>	<b>[Internal- I measure] (inF9):</b> Current measurement circuit detected error	

Parameters described in this page can be accessed by:

DRI- &gt; MON- &gt; DGT- &gt; PFH-

Code	Name / Description	Unit
<i>inFA</i>	<b>[Internal-mains circuit]</b> ( <i>inFA</i> ): Input phase loss circuit detected error	
<i>inFb</i>	<b>[Internal- th. sensor]</b> ( <i>inFb</i> ): Thermal sensor detected error (OC or SC)	
<i>inFE</i>	<b>[Internal-CPU]</b> ( <i>inFE</i> ): CPU detected fault (ram, flash, task ...)	
<i>LCF</i>	<b>[Input contactor]</b> ( <i>LCF</i> ): Line contactor detected error	
<i>LI3</i>	<b>[AI3 4-20mA loss]</b> ( <i>LI3</i> ): AI3 4-20 mA loss	
<i>obF</i>	<b>[Overbraking]</b> ( <i>obF</i> ): Overbraking	
<i>ocF</i>	<b>[Overcurrent]</b> ( <i>ocF</i> ): Overcurrent	
<i>oHF</i>	<b>[Drive overheat]</b> ( <i>oHF</i> ): Drive overheating	
<i>oLC</i>	<b>[Proc.Overload Fit]</b> ( <i>oLC</i> ): Torque overload	
<i>oLF</i>	<b>[Motor overload]</b> ( <i>oLF</i> ): Motor overload	
<i>oPF1</i>	<b>[1 output phase loss]</b> ( <i>oPF1</i> ): Motor 1-phase loss	
<i>oPF2</i>	<b>[3out ph loss]</b> ( <i>oPF2</i> ): Motor 3-phases loss	
<i>oS F</i>	<b>[Mains overvoltage]</b> ( <i>oS F</i> ): Oversupply detected fault	
<i>oEFL</i>	<b>[PTC fault]</b> ( <i>oEFL</i> ): Motor overheating detected error from PTCL: standard product	
<i>PHF</i>	<b>[Input phase loss]</b> ( <i>PHF</i> ): Main input 1-phase loss	
<i>PEFL</i>	<b>[LI6=PTC probe]</b> ( <i>PEFL</i> ): PTCL detected error (OC or SC)	
<i>SFFF</i>	<b>[Safety]</b> ( <i>SFFF</i> ): Safety function	
<i>SCF1</i>	<b>[Motor short circuit]</b> ( <i>SCF1</i> ): Motor short circuit (hard detection)	
<i>SCF3</i>	<b>[Ground short circuit]</b> ( <i>SCF3</i> ): Direct ground short-circuit (hard detection)	
<i>SCF4</i>	<b>[IGBT short circuit]</b> ( <i>SCF4</i> ): IGBT short-circuit (hard detection)	
<i>SCF5</i>	<b>[Motor short circuit]</b> ( <i>SCF5</i> ): Load short-circuit during Igon load sequence (hard detection)	
<i>SLF1</i>	<b>[Modbus com.]</b> ( <i>SLF1</i> ): Modbus local serial communication interruption	
<i>SLF2</i>	<b>[PC com.]</b> ( <i>SLF2</i> ): PC Software communication interruption	
<i>SLF3</i>	<b>[HMI com.]</b> ( <i>SLF3</i> ): Remote terminal communication interruption	
<i>soF</i>	<b>[Overspeed]</b> ( <i>soF</i> ): Overspeed	
<i>SPF</i>	<b>[Speed fdback loss]</b> ( <i>SPF</i> ): Speed feedback loss	
<i>SSF</i>	<b>[Torque/current lim]</b> ( <i>SSF</i> ): Torque current limitation detected fault	
<i>tJF</i>	<b>[IGBT overheat]</b> ( <i>tJF</i> ): IGBT overheating	
<i>tNF</i>	<b>[Auto-tuning]</b> ( <i>tNF</i> ): Tune detected fault	
<i>uLF</i>	<b>[Pr.Underload Fit]</b> ( <i>uLF</i> ): Torque underload	
<i>uSF</i>	<b>[Undervoltage]</b> ( <i>uSF</i> ): Undervoltage	
<b>H5 I</b>	<b>[Drive state]</b> HMI Status of the detected fault record 1.	
<i>tun</i>	<b>[Auto-tuning]</b> ( <i>tun</i> ): Auto-tuning	
<i>dCb</i>	<b>[In DC inject.]</b> ( <i>dCb</i> ): Injection braking	
<i>rdY</i>	<b>[Ready]</b> ( <i>rdY</i> ): Drive ready	
<i>nSt</i>	<b>[Freewheel]</b> ( <i>nSt</i> ): Freewheel stop control	
<i>run</i>	<b>[Drv running]</b> ( <i>run</i> ): Motor in steady state or run command present and zero reference	
<i>ACC</i>	<b>[In accel.]</b> ( <i>ACC</i> ): Acceleration	
<i>dEC</i>	<b>[In decel.]</b> ( <i>dEC</i> ): Deceleration	
<i>CLi</i>	<b>[Current lim.]</b> ( <i>CLi</i> ): Current limit (in case of using a synchronous motor, if the motor does not start, follow the procedure page <a href="#">120</a> )	
<i>FSt</i>	<b>[Fast stop]</b> ( <i>FSt</i> ): Fast stop	
<i>FLu</i>	<b>[Mot. fluxing]</b> ( <i>FLu</i> ): Fluxing function is activated	
<i>nLP</i>	<b>[no mains V.]</b> ( <i>nLP</i> ): Control is powered on but the DC bus is not loaded	
<i>CLL</i>	<b>[control.stop]</b> ( <i>CLL</i> ): Controlled stop	
<i>abr</i>	<b>[Dec. adapt.]</b> ( <i>abr</i> ): Adapted deceleration	
<i>SoC</i>	<b>[Output cut]</b> ( <i>SoC</i> ): Stand by output cut	
<i>uSA</i>	<b>[UnderV. al.]</b> ( <i>uSA</i> ): Undervoltage alarm	
<i>tC</i>	<b>[In mfg. test]</b> ( <i>tC</i> ): TC indus mode activated	
<i>St</i>	<b>[in autotest]</b> ( <i>St</i> ): Self test in progress	
<i>FA</i>	<b>[autotest err]</b> ( <i>FA</i> ): Self test detected error	
<i>YES</i>	<b>[Autotest OK]</b> ( <i>YES</i> ): Self test OK	
<i>EP</i>	<b>[eeprom test]</b> ( <i>EP</i> ): Self test Eeprom detected error	
<i>FLt</i>	<b>[In fault]</b> ( <i>FLt</i> ): Product has detected a fault	
<i>SS1</i>	<b>[SS1 active]</b> ( <i>SS1</i> ): Safety function SS1	
<i>SLS</i>	<b>[SLS active]</b> ( <i>SLS</i> ): Safety function SLS	
<i>Sto</i>	<b>[STO active]</b> ( <i>Sto</i> ): Safety function STO	
<i>SMS</i>	<b>[SMS active]</b> ( <i>SMS</i> ): Safety function SMS	
<i>GdL</i>	<b>[GdL active]</b> ( <i>GdL</i> ): Safety function GdL	
<b>EP I</b>	<b>[ETA state word]</b> DRIVECOM status register of detected fault record 1 (same as <b>[ETA state word]</b> ( <i>ETR</i> ) page <a href="#">65</a> ).	
<b>PI I</b>	<b>[ETI state word]</b> Extended status register of detected fault record 1 (see the communication parameters file).	

Parameters described in this page can be accessed by:

DRI- &gt; MON- &gt; DGT- &gt; PFH-

Code	Name / Description	Unit
<i>C P I</i>	<b>[Cmd word]</b> Command register of detected fault record 1 (same as <b>[Cmd word]</b> ( <i>C P d</i> ) page 64).	
<i>L C P I</i>	<b>[Motor current]</b> Estimated motor current of detected fault record 1 (same as <b>[Motor current]</b> ( <i>L C r</i> ) page 59).	A
<i>r F P I</i>	<b>[Output frequency]</b> Estimated motor frequency of detected fault record 1 (same as <b>[Output frequency]</b> ( <i>r F r</i> ) page 58).	Hz
<i>r t P I</i>	<b>[Elapsed time]</b> Elapsed run time of detected fault record 1 (same as <b>[Elapsed time]</b> ( <i>r t H</i> ) page 70).	h
<i>u L P I</i>	<b>[Mains voltage]</b> Main voltage of detected fault record 1 (same as <b>[Mains voltage]</b> ( <i>u L n</i> ) page 58).	V
<i>t H P I</i>	<b>[Motor thermal state]</b> Motor thermal state of detected fault record 1 (same as <b>[Motor thermal state]</b> ( <i>t H r</i> ) page 58).	%
<i>d C C I</i>	<b>[Command Channel]</b> Command channel of detected fault record 1 (same as <b>[Command channel]</b> ( <i>C P d C</i> ) page 64).	
<i>d r C I</i>	<b>[Channel ref. active]</b> Reference channel of detected fault record 1 (same as <b>[Channel ref. active]</b> ( <i>r F C C</i> ) page 64).	
<i>S r 1 I</i>	<b>[Saf01 Reg n-1]</b> SAF1 Register x (1 is last)	
<i>S r 2 I</i>	<b>[Saf02 Reg n-1]</b> SAF2 Register x (1 is last)	
<i>S r A I</i>	<b>[SF00 Reg n-1]</b> SF00 Register x (1 is last)	
<i>S r b I</i>	<b>[SF01 Reg n-1]</b> SF01 Register x (1 is last)	
<i>S r C I</i>	<b>[SF02 Reg n-1]</b> SF02 Register x (1 is last)	
<i>S r d I</i>	<b>[SF03 Reg n-1]</b> SF03 Register x (1 is last)	
<i>S r E I</i>	<b>[SF04 Reg n-1]</b> SF04 Register x (1 is last)	
<i>S r F I</i>	<b>[SF05 Reg n-1]</b> SF05 Register x (1 is last)	
<i>S r G I</i>	<b>[SF06 Reg n-1]</b> SF06 Register x (1 is last)	
<i>S r H I</i>	<b>[SF07 Reg n-1]</b> SF07 Register x (1 is last)	
<i>S r I I</i>	<b>[SF08 Reg n-1]</b> SF08 Register x (1 is last)	
<i>S r J I</i>	<b>[SF09 Reg n-1]</b> SF09 Register x (1 is last)	
<i>S r K I</i>	<b>[SF10 Reg n-1]</b> SF10 Register x (1 is last)	
<i>S r L I</i>	<b>[SF11 Reg n-1]</b> SF11 Register x (1 is last)	

Parameters described in this page can be accessed by:

DRI- &gt; MON- &gt; DGT- &gt; PFH-

Code	Name / Description	Unit
<b>PFH -</b>	<b>[FAULT HISTORY] (continued)</b> Shows the 8 last detected faults.	
<b>dP2</b>	<b>[Past fault 2]</b> [Saf1 Reg n-2] (5r 12), [Saf2 Reg n-2] (5r 22), [SF00 Reg n-2] (5r A2), [SF01 Reg n-2] (5r b2), and [SF02 Reg n-2] (5r C2) to [SF11 Reg n-2] (5r L2) may be visible with this parameter. Identical to <b>[Past fault 1] (dP 1)</b> page 72.	
<b>dP3</b>	<b>[Past fault 3]</b> [Saf1 Reg n-3] (5r 13), [Saf2 Reg n-3] (5r 23), [SF00 Reg n-3] (5r A3), [SF01 Reg n-3] (5r b3), and [SF02 Reg n-3] (5r C3) to [SF11 Reg n-3] (5r L3) may be visible with this parameter. Identical to <b>[Past fault 1] (dP 1)</b> page 72.	
<b>dP4</b>	<b>[Past fault 4]</b> [Saf1 Reg n-4] (5r 14), [Saf2 Reg n-4] (5r 24), [SF00 Reg n-4] (5r A4), [SF01 Reg n-4] (5r b4), and [SF02 Reg n-4] (5r C4) to [SF11 Reg n-4] (5r L4) may be visible with this parameter. Identical to <b>[Past fault 1] (dP 1)</b> page 72.	
<b>dP5</b>	<b>[Past fault 5]</b> [Saf1 Reg n-5] (5r 15), [Saf2 Reg n-5] (5r 25), [SF00 Reg n-5] (5r A5), [SF01 Reg n-5] (5r b5), and [SF02 Reg n-5] (5r C5) to [SF11 Reg n-5] (5r L5) may be visible with this parameter. Identical to <b>[Past fault 1] (dP 1)</b> page 72.	
<b>dP6</b>	<b>[Past fault 6]</b> [Saf1 Reg n-6] (5r 16), [Saf2 Reg n-6] (5r 26), [SF00 Reg n-6] (5r A6), [SF01 Reg n-6] (5r b6), and [SF02 Reg n-6] (5r C6) to [SF11 Reg n-6] (5r L6) may be visible with this parameter. Identical to <b>[Past fault 1] (dP 1)</b> page 72.	
<b>dP7</b>	<b>[Past fault 7]</b> [Saf1 Reg n-7] (5r 17), [Saf2 Reg n-7] (5r 27), [SF00 Reg n-7] (5r A7), [SF01 Reg n-7] (5r b7), and [SF02 Reg n-7] (5r C7) to [SF11 Reg n-7] (5r L7) may be visible with this parameter. Identical to <b>[Past fault 1] (dP 1)</b> page 72.	
<b>dP8</b>	<b>[Past fault 8]</b> [Saf1 Reg n-8] (5r 18), [Saf2 Reg n-8] (5r 28), [SF00 Reg n-8] (5r A8), [SF01 Reg n-8] (5r b8), and [SF02 Reg n-8] (5r C8) to [SF11 Reg n-8] (5r L8) may be visible with this parameter. Identical to <b>[Past fault 1] (dP 1)</b> page 72.	

Parameters described in this page can be accessed by:

DRI- &gt; MON- &gt; PFL-

Code	Name / Description	Unit
<b>d G E -</b>	<b>[DIAGNOSTICS] (continued)</b>	
<b>P F L -</b>	<b>[CURRENT FAULT LIST]</b>	
<i>n o F</i>	[No fault] ( <i>n o F</i> ): No detected fault stored	
<i>A S F</i>	[Angle error] ( <i>A S F</i> ): Angle setting detected fault	
<i>b L F</i>	[Brake control] ( <i>b L F</i> ): Brake's motor 3-phases loss	
<i>b r F</i>	[Brake feedback] ( <i>b r F</i> ): Brake contactor detected error	
<i>C F F</i>	[Incorrect config.] ( <i>C F F</i> ): Invalid configuration at power on	
<i>C F i 2</i>	[Bad conf] ( <i>C F i 2</i> ): Configuration transfer detected error	
<i>C n F</i>	[Com. network] ( <i>C n F</i> ): NET option communication interruption	
<i>C o F</i>	[CAN com.] ( <i>C o F</i> ): CANopen® communication interruption	
<i>C r F</i>	[Capa.charg] ( <i>C r F</i> ): Load relay detected fault	
<i>C S F</i>	[Ch.sw. fault] ( <i>C S F</i> ): Channel switching detected error	
<i>d L F</i>	[Load fault] ( <i>d L F</i> ): Dynamic load detected error	
<i>E E F 1</i>	[Control EEprom] ( <i>E E F 1</i> ): Control EEprom detected error	
<i>E E F 2</i>	[Power Eeprom] ( <i>E E F 2</i> ): Power EEprom detected error	
<i>E P F 1</i>	[External fault LI/Bit] ( <i>E P F 1</i> ): External detected fault from LI or local link	
<i>E P F 2</i>	[External fault com.] ( <i>E P F 2</i> ): External interruption from communication board	
<i>F b E</i>	[FB fault] ( <i>F b E</i> ): Function block detected error	
<i>F b E S</i>	[FB stop fly.] ( <i>F b E S</i> ): Function block stop detected error	
<i>F C F 1</i>	[Out. contact. stuck] ( <i>F C F 1</i> ): Output contactor: closed contactor	
<i>F C F 2</i>	[Out. contact. open.] ( <i>F C F 2</i> ): Output contactor: opened contactor	
<i>H C F</i>	[Cards pairing] ( <i>H C F</i> ): Hardware configuration detected error	
<i>H d F</i>	[IGBT desaturation] ( <i>H d F</i> ): Hardware detected error	
<i>i L F</i>	[Option int link] ( <i>i L F</i> ): Option internal link interruption	
<i>i n F 1</i>	[Rating error] ( <i>i n F 1</i> ): Unknown drive rating	
<i>i n F 2</i>	[PWR Calib.] ( <i>i n F 2</i> ): Unknown or incompatible power board	
<i>i n F 3</i>	[Int.serial link] ( <i>i n F 3</i> ): Internal serial link communication interruption	
<i>i n F 4</i>	[Int.Mfg area] ( <i>i n F 4</i> ): Invalid industrialization zone	
<i>i n F 5</i>	[Internal-option] ( <i>i n F 5</i> ): Unknown or incompatible option board	
<i>i n F 9</i>	[Internal- I measure] ( <i>i n F 9</i> ): Current measurement circuit detected error	
<i>i n F A</i>	[Internal-mains circuit] ( <i>i n F A</i> ): Input phase loss circuit detected error	
<i>i n F b</i>	[Internal- th. sensor] ( <i>i n F b</i> ): Thermal sensor detected error (OC or SC)	
<i>i n F E</i>	[Internal-CPU] ( <i>i n F E</i> ): CPU detected fault (ram, flash, task ...)	
<i>L C F</i>	[Input contactor] ( <i>L C F</i> ): Line contactor detected error	
<i>L F F 3</i>	[AI3 4-20mA loss] ( <i>L F F 3</i> ): AI3 4-20 mA loss	
<i>o b F</i>	[Overbraking] ( <i>o b F</i> ): Overbraking	
<i>o C F</i>	[Overcurrent] ( <i>o C F</i> ): Overcurrent	
<i>o H F</i>	[Drive overheat] ( <i>o H F</i> ): Drive overheating	
<i>o L C</i>	[Proc.Overload Flt] ( <i>o L C</i> ): Torque overload	
<i>o L F</i>	[Motor overload] ( <i>o L F</i> ): Motor overload	
<i>o P F 1</i>	[1 output phase loss] ( <i>o P F 1</i> ): Motor 1-phase loss	
<i>o P F 2</i>	[3out ph loss] ( <i>o P F 2</i> ): Motor 3-phases loss	
<i>o S F</i>	[Mains overvoltage] ( <i>o S F</i> ): Oversupply detected fault	
<i>o t F L</i>	[PTC fault] ( <i>o t F L</i> ): Motor overheating detected error from PTCL: standard product	
<i>P H F</i>	[Input phase loss] ( <i>P H F</i> ): Main input 1-phase loss	
<i>P t F L</i>	[LI6=PTC probe] ( <i>P t F L</i> ): PTCL detected error (OC or SC)	
<i>S A F F</i>	[Safety] ( <i>S A F F</i> ): Safety function	
<i>S C F 1</i>	[Motor short circuit] ( <i>S C F 1</i> ): Motor short circuit (hard detection)	
<i>S C F 3</i>	[Ground short circuit] ( <i>S C F 3</i> ): Direct ground short-circuit (hard detection)	
<i>S C F 4</i>	[IGBT short circuit] ( <i>S C F 4</i> ): IGBT short-circuit (hard detection)	
<i>S C F 5</i>	[Motor short circuit] ( <i>S C F 5</i> ): Load short-circuit during Igon load sequence (hard detection)	
<i>S L F 1</i>	[Modbus com.] ( <i>S L F 1</i> ): Modbus local serial communication interruption	
<i>S L F 2</i>	[PC com.] ( <i>S L F 2</i> ): PC Software communication interruption	
<i>S L F 3</i>	[HMI com.] ( <i>S L F 3</i> ): Remote terminal communication interruption	
<i>S o F</i>	[Overspeed] ( <i>S o F</i> ): Overspeed	
<i>S P F</i>	[Speed fdback loss] ( <i>S P F</i> ): Speed feedback loss	
<i>S S F</i>	[Torque/current lim] ( <i>S S F</i> ): Torque current limitation detected fault	
<i>t J F</i>	[IGBT overheat] ( <i>t J F</i> ): IGBT overheating	
<i>t n F</i>	[Auto-tuning] ( <i>t n F</i> ): Tune detected fault	
<i>u L F</i>	[Pr.Underload Flt] ( <i>u L F</i> ): Torque underload	
<i>u S F</i>	[Undervoltage] ( <i>u S F</i> ): Undervoltage	

Parameters described in this page can be accessed by:

DRI- &gt; MON- &gt; AFI-

Code	Name / Description	Unit
<b>AF I -</b>	<b>[MORE FAULT INFO]</b> Additional detected fault information.	
<b>LnF</b>	<b>[Network fault]</b> Communication option card fault code. This parameter is read-only. The fault code remains saved in the parameter, even if the cause disappears. The parameter is reset after the drive is disconnected and then reconnected. The values of this parameter depend on the network card. Consult the manual for the corresponding card.	
<b>ILFI</b>	<b>[Internal link fault 1]</b> Communication interruption between option card 1 and drive. This parameter is read-only. The fault code remains saved in the parameter, even if the cause disappears. The parameter is reset after the drive is disconnected and then reconnected.	
<b>SFFE</b>	<b>[Safety fault reg.] (1)</b> Safety function fault error register.  Bit0 = 1: Logic inputs debounce time-out (verify value of debounce time LIDT according to the application) Bit1 Reserved Bit2 = 1: Motor speed sign has changed during SS1 ramp Bit3 = 1: Motor speed has reached the frequency limit threshold during SS1 ramp. Bit4: Reserved Bit5: Reserved Bit6 = 1: Motor speed sign has changed during SLS limitation Bit7 = 1: Motor speed has reached the frequency limit threshold during SS1 ramp. Bit8: Reserved Bit9: Reserved Bit10: Reserved Bit11: Reserved Bit12: Reserved Bit13 = 1: Not possible to measure the motor speed (verify the motor wiring connection) Bit14 = 1: Motor ground short-circuit detected (verify the motor wiring connection) Bit15 = 1: Motor phase to phase short-circuit detected (verify the motor wiring connection)	
<b>SFFI</b>	<b>[Safety fault Reg1] (1)</b> Safety fault register 1. Application control error register.  Bit0 = 1: PWRM consistency detected error Bit1 = 1: Safety functions parameters detected error Bit2 = 1: Application auto test has detected an error Bit3 = 1: Diagnostic verification of safety function has detected an error Bit4 = 1: Logical input diagnostic has detected an error Bit5 = 1: SMS or GDL safety functions detected error (Details in <a href="#">[SAFF Subcode 4] SFD4</a> register page <a href="#">79</a> ) Bit6 = 1: Application watchdog management active Bit7 = 1: Motor control detected error Bit8 = 1: Internal serial link core detected error Bit9 = 1: Logical input activation detected error Bit10 = 1: Safe Torque Off function has triggered an error Bit11 = 1: Application interface has detected an error of the safety functions Bit12 = 1: Safe Stop 1 function has detected an error of the safety functions Bit13 = 1: Safely Limited Speed function has triggered an error Bit14 = 1: Motor data is corrupted Bit15 = 1: Internal serial link data flow detected error	

(1) Hexadecimal values are displayed on the Graphic display terminal

Example:

SFFE = **0x0008** in HexadecimalSFFE = Bit **3**

Parameters described in this page can be accessed by:

DRI- &gt; MON- &gt; AFI-

Code	Name / Description	Unit
<b>SFF2</b>	<p><b>[Safety fault Reg2] (1)</b>            Safety fault register 2            Motor Control error register            Bit0 = 1 : Consistency stator frequency verification has detected an error            Bit1 = 1 : Stator frequency estimation detected error            Bit2 = 1 : Motor control watchdog management is active            Bit3 = 1 : Motor control hardware watchdog is active            Bit4 = 1 : Motor control auto test has detected an error            Bit5 = 1 : Chain testing detected error            Bit6 = 1 : Internal serial link core detected error            Bit7 = 1 : Direct short-circuit detected error            Bit8 = 1 : PWM driver detected error            Bit9 = 1 : GDL internal detected error            Bit10 : Reserved            Bit11 = 1 : Application interface has detected an error of the safety functions            Bit12 = 1 : Reserved            Bit13: Reserved            Bit14 = 1 : Motor data is corrupted            Bit15 = 1 : Internal serial link data flow detected error</p>	
<b>SF00</b>	<p><b>[SAFF Subcode 0] (1)</b>            Safety fault subregister 00            Application auto test error register            Bit0 : Reserved            Bit1 = 1 : Ram stack overflow            Bit2 = 1 : Ram address integrity error            Bit3 = 1 : Ram data access error            Bit4 = 1 : Flash Checksum Error            Bit5 : Reserved            Bit6 : Reserved            Bit7 : Reserved            Bit8 : Reserved            Bit9 = 1 : Fast task overflow            Bit10 = 1 : Slow task overflow            Bit11 = 1 : Application task overflow            Bit12 : Reserved            Bit13 : Reserved            Bit14 = 1 : PWRM line is not activated during initialization phase            Bit15 = 1 : Application hardware Watch Dog is not running after initialization</p>	
<b>SF01</b>	<p><b>[SAFF Subcode 1] (1)</b>            Safety fault subregister 01            Logical input diagnostics error register            Bit0 = 1 : Management - state machine error            Bit1 = 1 : Data required for test management are corrupted            Bit2 = 1 : Channel selection detected error            Bit3 = 1 : Testing - state machine detected error            Bit4 = 1 : Test request is corrupted            Bit5 = 1 : Pointer to test method is corrupted            Bit6 = 1 : Incorrect test action provided            Bit7 = 1 : Detected Error in results collecting            Bit8 = 1 : LI3 detected error. Cannot activate safe function            Bit9 = 1 : LI4 detected error. Cannot activate safe function            Bit10 = 1 : LI5 detected error. Cannot activate safe function            Bit11 = 1 : LI6 detected error. Cannot activate safe function            Bit12 = 1 : Test sequence updated while a diagnostic is in progress            Bit13 = 1 : Detected error in test pattern management            Bit14 : Reserved            Bit15 : Reserved</p>	

(1) Hexadecimal values are displayed on the Graphic display terminal

Example:

SFFE = **0x0008** in HexadecimalSFFE = Bit **3**

Code	Name / Description	Unit
<b>S F 0 2</b>	<p><b>[SAFF Subcode 2] (1)</b></p> <p>Safety fault subregister 02 Application Watchdog Management detected error register</p> <p>Bit0 = 1 : Fast task detected error Bit1 = 1 : Slow task detected error Bit2 = 1 : Application task detected error Bit3 = 1 : Background task detected error Bit4 = 1 : Safety fast task/input detected error Bit5 = 1 : Safety slow task/input detected error Bit6 = 1 : Safety app task/input detected error Bit7 = 1 : Safety app task/treatment detected error Bit8 = 1 : Safety background task detected error Bit9 : Reserved Bit10 : Reserved Bit11 : Reserved Bit12 : Reserved Bit13 : Reserved Bit14 : Reserved Bit15 : Reserved</p>	
<b>S F 0 3</b>	<p><b>[SAFF Subcode 3] (1)</b></p> <p>Safety fault subregister 03</p> <p>Bit0 = 1 : Debounce time out Bit1 = 1 : Input not consistent Bit2 = 1 : Consistency check - state machine detected error Bit3 = 1 : Consistency check - debounce timeout corrupted Bit4 = 1 : Response time data detected error Bit5 = 1 : Response time corrupted Bit6 = 1 : Undefined consumer queried Bit7 = 1 : Configuration detected error Bit8 = 1 : Inputs are not in nominal mode Bit9 : Reserved Bit10 : Reserved Bit11 : Reserved Bit12 : Reserved Bit13 : Reserved Bit14 : Reserved Bit15 : Reserved</p>	
<b>S F 0 4</b>	<p><b>[SAFF Subcode 4] (1)</b></p> <p>Safety fault subregister 04 <b>[Safe Torque Off] S k a</b> detected error register</p> <p>Bit0 = 1 : No signal configured Bit1 = 1 : State machine detected error Bit2 = 1 : Internal data detected error Bit3 : Reserved Bit4 : Reserved Bit5 : Reserved Bit6 : Reserved Bit7 : Reserved Bit8 = 1 : SMS overspeed detected error Bit9 = 1 : SMS internal detected error Bit10 : Reserved Bit11 = 1 : GDL internal detected error 1 Bit12 = 1 : GDL internal detected error 2 Bit13 : Reserved Bit14 : Reserved Bit15 : Reserved</p>	

(1) Hexadecimal values are displayed on the Graphic display terminal

Example:

SFFE = **0x0008** in Hexadecimal

SFFE = Bit **3**

Parameters described in this page can be accessed by:

DRI- &gt; MON- &gt; AFI-

Code	Name / Description	Unit
<b>S F 0 5</b>	<p><b>[SAFF Subcode 5] (1)</b>            Safety fault subregister 05            [Safe Stop 1] <b>S 5 /</b> detected error register            Bit0 = 1 : State machine detected error            Bit1 = 1 : Motor speed sign changed during stop            Bit2 = 1 : Motor speed reached trigger area            Bit3 = 1 : Theoretical motor speed corrupted            Bit4 = 1 : Unauthorized configuration            Bit5 = 1 : Theoretical motor speed computation detected error            Bit6 : Reserved            Bit7 = 1 : Speed sign check: consistency detected error            Bit8 = 1 : Internal SS1 request corrupted            Bit9 : Reserved            Bit10 : Reserved            Bit11 : Reserved            Bit12 : Reserved            Bit13 : Reserved            Bit14 : Reserved            Bit15 : Reserved</p>	
<b>S F 0 6</b>	<p><b>[SAFF Subcode 6] (1)</b>            Safety fault subregister 06            [Safely Limited Speed] <b>S L 5</b> detected error register            Bit0 = 1 : State machine error register            Bit1 = 1 : Motor speed sign changed during limitation            Bit2 = 1 : Motor speed has reached the frequency limit threshold            Bit3 = 1 : Data corruption            Bit4 : Reserved            Bit5 : Reserved            Bit6 : Reserved            Bit7 : Reserved            Bit8 : Reserved            Bit9 : Reserved            Bit10 : Reserved            Bit11 : Reserved            Bit12 : Reserved            Bit13 : Reserved            Bit14 : Reserved            Bit15 : Reserved</p>	
<b>S F 0 7</b>	<p><b>[SAFF Subcode 7] (1)</b>            Safety fault subregister 07            Application Watchdog Management detected error register            Bit0 : Reserved            Bit1 : Reserved            Bit2 : Reserved            Bit3 : Reserved            Bit4 : Reserved            Bit5 : Reserved            Bit6 : Reserved            Bit7 : Reserved            Bit8 : Reserved            Bit9 : Reserved            Bit10 : Reserved            Bit11 : Reserved            Bit12 : Reserved            Bit13 : Reserved            Bit14 : Reserved            Bit15 : Reserved</p>	

(1) Hexadecimal values are displayed on the Graphic display terminal

Example:

SFFE = **0x0008** in HexadecimalSFFE = Bit **3**

Code	Name / Description	Unit
<b>S F 0 8</b>	<p><b>[SAFF Subcode 8] (1)</b></p> <p>Safety fault subregister 08 Application Watchdog Management detected error register</p> <p>Bit0 = 1 : PWM task detected error Bit1 = 1 : Fixed task detected error Bit2 = 1 : ATMC watchdog detected error Bit3 = 1 : DYNFCT watchdog detected error Bit4 : Reserved Bit5 : Reserved Bit6 : Reserved Bit7 : Reserved Bit8 : Reserved Bit9 : Reserved Bit10 : Reserved Bit11 : Reserved Bit12 : Reserved Bit13 : Reserved Bit14 : Reserved Bit15 : Reserved</p>	
<b>S F 0 9</b>	<p><b>[SAFF Subcode 9] (1)</b></p> <p>Safety fault subregister 09 Motor control Auto Test detected error register</p> <p>Bit0 : Reserved Bit1 = 1 : Ram stack overflow Bit2 = 1 : Ram address integrity detected error Bit3 = 1 : Ram data access detected error Bit4 = 1 : Flash Checksum detected error Bit5 : Reserved Bit6 : Reserved Bit7 : Reserved Bit8 : Reserved Bit9 = 1 : 1ms task overflow Bit10 = 1 : PWM task overflow Bit11 = 1 : Fixed task overflow Bit12 : Reserved Bit13 : Reserved Bit14 = 1 : Unwanted interruption Bit15 = 1 : Hardware WD is not running after initialization</p>	
<b>S F 1 0</b>	<p><b>[SAFF Subcode 10] (1)</b></p> <p>Safety fault subregister 10 Motor control direct short-circuit detected error register</p> <p>Bit0 = 1 : Ground short circuit - Configuration detected error Bit1 = 1 : Phase to phase short circuit - Configuration detected error Bit2 = 1 : Ground short circuit Bit3 = 1 : Phase to phase short circuit Bit4 : Reserved Bit5 : Reserved Bit6 : Reserved Bit7 : Reserved Bit8 : Reserved Bit9 : Reserved Bit10 : Reserved Bit11 : Reserved Bit12 : Reserved Bit13 : Reserved Bit14 : Reserved Bit15 : Reserved</p>	

(1) Hexadecimal values are displayed on the Graphic display terminal

Example:

SFFE = **0x0008** in Hexadecimal

SFFE = Bit **3**

Parameters described in this page can be accessed by:

DRI- &gt; MON- &gt; AFI-

Code	Name / Description	Unit
<i>S F I I</i>	<b>[SAFF Subcode 11] (1)</b> Safety fault subregister 11 Motor Control dynamic check of activity detected error register Bit0 = 1 : Application requested a diagnostic of direct short circuit Bit1 = 1 : Application requested consistency verification of stator frequency estimation (voltage and current) Bit2 = 1 : Application requested diagnostic of SpdStat provided by Motor Control Bit3 : Reserved Bit4 : Reserved Bit5 : Reserved Bit6 : Reserved Bit7 : Reserved Bit8 = 1 : Motor Control safe diagnostic of direct short circuit is enabled Bit9 = 1 : Motor Control consistency check of stator frequency estimation is enabled Bit10 = 1 : Motor Control diagnostic of SpdStat provided by Motor Control is enabled Bit11 : Reserved Bit12 : Reserved Bit13 : Reserved Bit14 : Reserved Bit15 : Reserved	
<i>d G t -</i>	<b>[DIAGNOSTICS] (continued)</b>	
<i>t A C</i>	<b>[IGBT alarm counter]</b> Transistor alarm time counter (length of time the "IGBT temperature" alarm has been active).	
<i>t A C 2</i>	<b>[Min. freq time]</b> Transistor alarm time counter at minimum switching frequency (length of time the "IGBT temperature" alarm has been active after the drive has automatically reduced the switching frequency to the minimum value).	
<i>n t J</i>  	<b>[IGBT alarm Nb]</b> Transistor alarm counter: number detected during lifecycle.  Visible if <a href="#">[3.1 ACCESS LEVEL] (L A C)</a> is set to <a href="#">[Expert] (E P r)</a> .	
<i>S E r -</i>	<b>[SERVICE MESSAGE]</b> See page <a href="#">304</a> .	
<i>r F L t</i>	<b>[Reset past faults]</b> Reset all resetable previous detected faults.	
<i>n o</i> <i>y E S</i>	<b>[No] (n o)</b> : Reset not active <b>[YES] (y E S)</b> : Reset in progress	



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

(1) Hexadecimal values are displayed on the Graphic display terminal

Example:

SFFE = **0x0008** in Hexadecimal

SFFE = Bit **3**

Code	Name / Description	Unit
<b>Π α η -</b>	<b>[1.2 MONITORING] (continued)</b>	
<b>Γ ο δ -</b>	<b>[PASSWORD]</b> HMI Password. If you have lost your code, please contact Schneider Electric.	
<b>Γ Σ Ε</b>	<b>[State]</b> Status of the drive (lock/unlock). Information parameter, cannot be modified.	
<b>Λ Γ</b>	<b>[Locked] (Λ Γ)</b> : The drive is locked by a password	
<b>υ Λ Γ</b>	<b>[Unlocked] (υ Λ Γ)</b> : The drive is not locked by a password	
<b>Γ ο δ</b>	<b>[PIN code 1]</b> Confidential code.  Enables the drive configuration to be protected using an access code. When access is locked by means of a code, only the parameters in the <b>[1.2 MONITORING] (Π α η -)</b> and <b>[1.1 SPEED REFERENCE] (ρ Ε Φ -)</b> menus can be accessed. The MODE key can be used to switch between menus. <b>Note:</b> Before entering a code, do not forget to make a careful note of it.	
<b>ο Φ Φ</b>	<b>[OFF] (ο Φ Φ)</b> : No access locking codes. - To lock access, enter a code (2 to 9,999). The display can be incremented using the jog dial. Then press ENT. <b>[ON] (ο η)</b> appears on the screen to indicate that access has been locked.	
<b>ο η</b>	<b>[ON] (ο η)</b> : A code is locking access (2 to 9,999). - To unlock access, enter the code (incrementing the display using the jog dial) and press ENT. The code remains on the display and access is unlocked until the next time the drive is turned off. Access will be locked again the next time the drive is turned on. - If an incorrect code is entered, the display changes to <b>[ON] (ο η)</b> , and access remains locked. Access is unlocked (the code remains on the screen). - To reactivate locking with the same code when access has been unlocked, return to <b>[ON] (ο η)</b> using the jog dial and then press ENT. <b>[ON] (ο η)</b> remains on the screen to indicate that access has been locked. - To lock access with a new code when access has been unlocked, enter the new code (increment the display using the jog dial) and then press ENT. <b>[ON] (ο η)</b> appears on the screen to indicate that access has been locked. - To clear locking when access has been unlocked, return to <b>[OFF] (ο Φ Φ)</b> using the jog dial and then press ENT. <b>[OFF] (ο Φ Φ)</b> remains on the display. Access is unlocked and will remain so until the next restart.	
<b>Γ ο δ 2</b> ★	<b>[PIN code 2]</b> Confidential code 2. Visible if <b>[3.1 ACCESS LEVEL] (Λ Ρ Γ)</b> is set to <b>[Expert] (Ε Ρ ρ)</b> .	
<b>ο Φ Φ</b>	The value <b>[OFF] (ο Φ Φ)</b> indicates that no password has been set <b>[Unlocked] (υ Λ Γ)</b> .	
<b>ο η</b>	The value <b>[ON] (ο η)</b> indicates that the drive configuration is protected and an access code must be entered in order to unlock it. Once the correct code has been entered, it remains on the display and the drive is unlocked until the next time the power supply is disconnected.	
<b>Β Β Β Β</b>	PIN code 2 is an unlock code known only to Schneider Electric Product Support.	
<b>υ Λ ρ</b>	<b>[Upload rights]</b>	
<b>υ Λ ρ 0</b>	<b>[Permitted] (υ Λ ρ 0)</b> : Means that SoMove or the graphic display terminal can save the whole configuration (password, protections, configuration). When the configuration is edited, only the non protected parameters will be accessible.	
<b>υ Λ ρ 1</b>	<b>[Not allowed] (υ Λ ρ 1)</b> : Means that SoMove or the graphic display terminal cannot save the configuration	
<b>δ Λ ρ</b>	<b>[Download rights]</b>	
<b>δ Λ ρ 0</b>	<b>[Locked drv] (δ Λ ρ 0)</b> : Locked drive: means that the configuration can be downloaded only in a locked drive which configuration has the same password. If the passwords are different, download is not permitted.	
<b>δ Λ ρ 1</b>	<b>[Unlocked. drv] (δ Λ ρ 1)</b> : Unlocked drive: means that the configuration can be downloaded only in a drive without active password	
<b>δ Λ ρ 2</b>	<b>[Not allowed] (δ Λ ρ 2)</b> : Not allowed: the configuration cannot be downloaded	
<b>δ Λ ρ 3</b>	<b>[Lock/unlock] (δ Λ ρ 3)</b> : Lock. + Not: download is permitted following case 0 or case 1	

★ These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

( ) Parameter that can be modified during operation or when stopped.



# Configuration Mode (ConF)



# 5

---

## What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Introduction	<a href="#">86</a>
Organization tree	<a href="#">87</a>
My Menu	<a href="#">88</a>
Factory Settings	<a href="#">89</a>
Macro Configuration	<a href="#">90</a>
Full	<a href="#">93</a>


## Introduction

Configuration mode includes 4 parts:

1. "My Menu" menu includes up to 25 parameters available for user customization using the graphic display terminal or SoMove software.
2. Store/recall parameter set: These 2 functions are used to store and recall customer settings.
3. **[Macro configuration]** ( **C F C** ) parameter which allows to load predefined values for applications (see page [90](#)).
4. FULL: This menu provides access to all other parameters. It includes 10 sub-menus:
  - **[SIMPLY START]** ( **S , Π -** ) page [93](#)
  - **[SETTINGS]** ( **S E t -** ) page [98](#)
  - **[MOTOR CONTROL]** ( **d r C -** ) page [113](#)
  - **[INPUTS / OUTPUTS CFG]** ( **i - o -** ) page [133](#)
  - **[COMMAND]** ( **C t L -** ) page [163](#)
  - **[FUNCTION BLOCK]** ( **F b Π -** ) page [167](#)
  - **[APPLICATION FUNCT.]** ( **F u n -** ) page [176](#)
  - **[FAULT MANAGEMENT]** ( **F L t -** ) page [262](#)
  - **[COMMUNICATION]** ( **C o Π -** ) page [289](#)
  - **[ACCESS LEVEL]** ( **L # C** ) page [295](#)

## Organization tree

Displayed parameter values are given as examples.

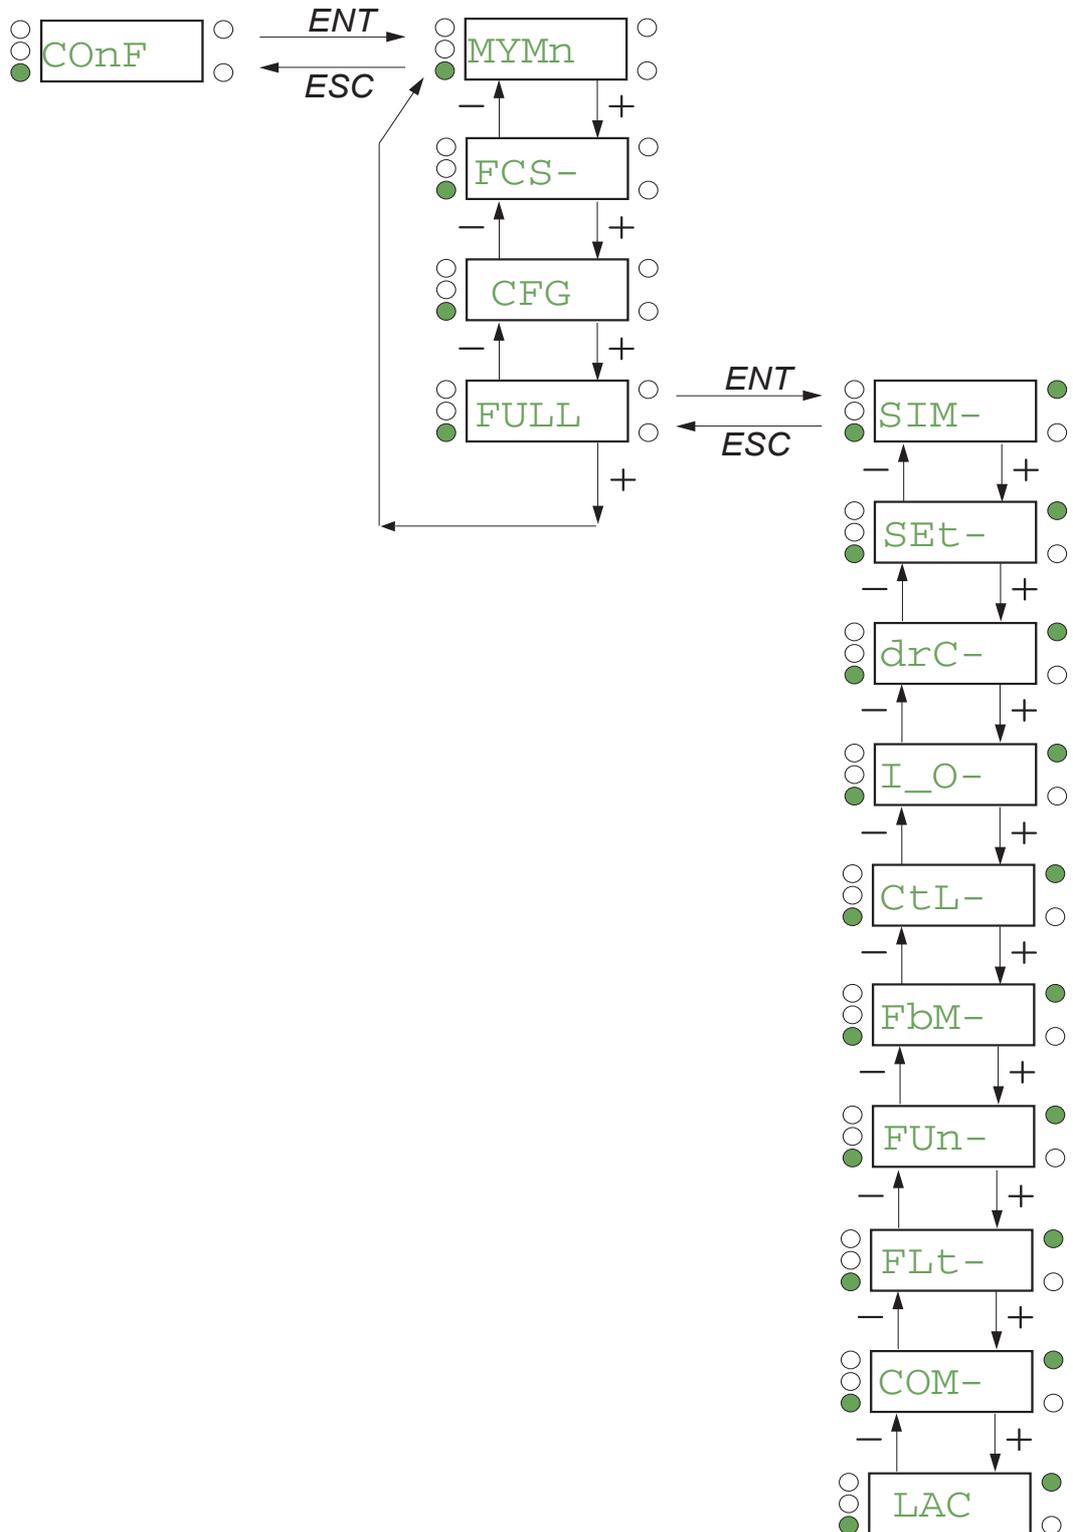

Parameters described in this page can be accessed by:

DRI- > CONF > MYMN-

## My Menu

Code	Name / Description
<a href="#">C o n F</a>	<a href="#">[1.3 CONFIGURATION]</a>
<a href="#">M Y M N</a>	<a href="#">[MY MENU]</a>
	This menu contains the parameters selected in the <a href="#">[3.4 DISPLAY CONFIG.]</a> ( <a href="#">d C F -</a> ) menu on page <a href="#">302</a> .

### Factory Settings

Code	Name / Description	Factory setting
<b>CONF</b>	<b>[1.3 CONFIGURATION]</b>	
<b>FCS-</b>	<b>[FACTORY SETTINGS]</b>	
<b>FCS,</b>	<b>[Config. Source]</b>	<b>[Macro-Conf] (no)</b>
★	<p>Choice of source configuration.</p> <p>If the configuration switching function is configured, it will not be possible to access <b>[Config 1] (CFG1)</b> and <b>[Config 2] (CFG2)</b>.</p> <p><b>Note:</b> To load the drive's presets previously stored (<b>[Config 1] (5tr1)</b> or <b>[Config 2] (5tr2)</b>), select the source configuration <b>[Config. Source] (FCS,)</b> = <b>[Config 1] (CFG1)</b> or <b>[Config 2] (CFG2)</b> followed by a factory setting <b>[Goto FACTORY SETTINGS] (GFS)</b> = <b>[YES] (YES)</b>.</p> <p><b>[Macro-Conf] (no):</b> Factory configuration, return to selected macro configuration</p> <p><b>[Config 1] (CFG1):</b> Configuration 1</p> <p><b>[Config 2] (CFG2):</b> Configuration 2</p>	
<b>Fry-</b>	<b>[PARAMETER GROUP LIST]</b>	
	<p>Selection of menus to be loaded.</p> <p>See the multiple selection procedure on page 38 for the integrated display terminal and page 26 for the graphic display terminal.</p> <p><b>Note:</b> In factory configuration and after a return to "factory settings", <b>[PARAMETER GROUP LIST]</b> will be empty.</p> <p><b>[All] (ALL):</b> All parameters (the function blocks program will also be erased)</p> <p><b>[Drive configuration] (drn):</b> The <b>[1 DRIVE MENU] (dr,-)</b> menu without <b>[COMMUNICATION] (CON-)</b>. In the <b>[3.4 DISPLAY CONFIG.]</b> menu, <b>[Return std name] (GSP)</b> page 304 returns to <b>[No] (no)</b>.</p> <p><b>[Motor param] (mot):</b> Motor parameters, see page 312.</p> <p>The following selections can only be accessed if <b>[Config. Source] (FCS,)</b> is set to <b>[Macro-Conf.] (no)</b>.</p> <p><b>[Comm. menu] (con):</b> The <b>[COMMUNICATION] (CON-)</b> menu without either <b>[Scan. In1 address] (nPB1)</b> to <b>[Scan. In8 address] (nPB8)</b> or <b>[Scan.Out1 address] (nPB1)</b> to <b>[Scan.Out8 address] (nPB8)</b>.</p> <p><b>[Display config.] (dis):</b> The <b>[3.3 MONITORING CONFIG.] (PCF-)</b> menu</p>	
<b>GFS</b>	<b>[Goto FACTORY SETTINGS]</b>	
★	<div style="border: 1px solid black; padding: 10px;"> <p><b>⚠ WARNING</b></p> <p><b>UNANTICIPATED EQUIPMENT OPERATION</b></p> <p>Verify that restoring the factory settings is compatible with the type of wiring used.</p> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div>	
🕒 2 s	<p>It is only possible to revert to the factory settings if at least one group of parameters has previously been selected.</p> <p><b>[No] (no):</b> No</p> <p><b>[Yes] (YES):</b> The parameter changes back to <b>[No] (no)</b> automatically as soon as the operation is complete</p>	
<b>GCS,</b>	<b>[Save config]</b>	<b>[No] (no)</b>
★	<p>The active configuration to be saved does not appear for selection. For example, if it is <b>[Config 0] (5tr0)</b>, only <b>[Config 1] (5tr1)</b> and <b>[Config 2] (5tr2)</b> appear. The parameter changes back to <b>[No] (no)</b> as soon as the operation is complete.</p> <p><b>[No] (no):</b> No</p> <p><b>[Config 0] (5tr0):</b> Press and hold down the ENT key for 2 s</p> <p><b>[Config 1] (5tr1):</b> Press and hold down the ENT key for 2 s</p> <p><b>[Config 2] (5tr2):</b> Press and hold down the ENT key for 2 s</p>	

★ These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

🕒 2 s To change the assignment of this parameter, press the ENT key for 2 s.

Parameters described in this page can be accessed by:

DRI- &gt; CONF

## Macro Configuration

Code	Name / Description	Factory setting
<b>C o n F</b>	<b>[1.3 CONFIGURATION] (continued)</b>	
<b>C F G</b>	<b>[Macro configuration]</b>	<b>[Start/Stop] (S t S)</b>
★	<b>⚠ WARNING</b>	
⌚ 2 s	<b>UNANTICIPATED EQUIPMENT OPERATION</b> Verify that the selected macro configuration is compatible with the type of wiring used. <b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b>	
<b>S t S</b>	<b>[Start/Stop] (S t S):</b> Start/stop	
<b>H d G</b>	<b>[M. handling] (H d G):</b> Handling	
<b>H S t</b>	<b>[Hoisting] (H S t):</b> Hoisting	
<b>G E n</b>	<b>[Gen. Use] (G E n):</b> General use	
<b>P i d</b>	<b>[PID regul.] (P i d):</b> PID regulation	
<b>n E t</b>	<b>[Network C.] (n E t):</b> Communication bus	



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



To change the assignment of this parameter, press the ENT key for 2 s.

## Example of total return to factory settings

- **[Config. Source] (F C S i)** is set to **[Macro-Conf] ( i n i)**
- **[PARAMETER GROUP LIST] (F r Y -)** is set to **[All] (R L L)**
- **[Goto FACTORY SETTINGS] (G F S)** is set to **[Yes] (Y E S)**

**Assignment of the inputs/outputs**

Input/output	[Start/Stop]	[M. handling]	[Gen. Use]	[Hoisting]	[PID regul.]	[Network C.]
[AI1]	[Ref.1 channel]	[Ref.1 channel]	[Ref.1 channel]	[Ref.1 channel]	[Ref.1 channel] (PID reference)	[Ref.2 channel] ([Ref.1 channel] = integrated Modbus) (1)
[AI2]	[No]	[Summing ref. 2]	[Summing ref. 2]	[No]	[PID feedback]	[No]
[AI3]	[No]	[No]	[No]	[No]	[No]	[No]
[AO1]	[No]	[No]	[No]	[No]	[No]	[No]
[R1]	[No drive flt]	[No drive flt]	[No drive flt]	[No drive flt]	[No drive flt]	[No drive flt]
[R2]	[No]	[No]	[No]	[Brk control]	[No]	[No]
[LI1] (2-wire)	[Forward]	[Forward]	[Forward]	[Forward]	[Forward]	[Forward]
[LI2] (2-wire)	[Reverse]	[Reverse]	[Reverse]	[Reverse]	[Reverse]	[Reverse]
[LI3] (2-wire)	[No]	[2 preset speeds]	[Jog]	[Fault reset]	[PID integral reset]	[Ref. 2 switching]
[LI4] (2-wire)	[No]	[4 preset speeds]	[Fault reset]	[External fault]	[2 preset PID ref.]	[Fault reset]
[LI5] (2-wire)	[No]	[8 preset speeds]	[Torque limitation]	[No]	[4 preset PID ref.]	[No]
[LI6] (2-wire)	[No]	[Fault reset]	[No]	[No]	[No]	[No]
[LI1] (3-wire)	[Drive running]	[Drive running]	[Drive running]	[Drive running]	[Drive running]	[Drive running]
[LI2] (3-wire)	[Forward]	[Forward]	[Forward]	[Forward]	[Forward]	[Forward]
[LI3] (3-wire)	[Reverse]	[Reverse]	[Reverse]	[Reverse]	[Reverse]	[Reverse]
[LI4] (3-wire)	[No]	[2 preset speeds]	[Jog]	[Fault reset]	[PID integral reset]	[Ref. 2 switching]
[LI5] (3-wire)	[No]	[4 preset speeds]	[Fault reset]	[External fault]	[2 preset PID ref.]	[Fault reset]
[LI6] (3-wire)	[No]	[8 preset speeds]	[Torque limitation]	[No]	[4 preset PID ref.]	[No]
[LO1]	[No]	[No]	[No]	[No]	[No]	[No]
Graphic display terminal keys						
F1 key	[No]	[No]	[No]	[No]	[No]	Control via graphic display terminal
F2, F3, F4 keys	[No]	[No]	[No]	[No]	[No]	[No]

In 3-wire control, the assignment of inputs LI1 to LI6 shifts.

(1) To start with, integrated Modbus **[Modbus Address] (F d d)** must first be configured, page [290](#).

**Note:** These assignments are reinitialized every time the macro configuration changes.

## Other configurations and settings

In addition to the assignment of inputs/outputs, other parameters are assigned **only in the Hoisting macro configuration**.

### Hoisting:

- **[Movement type]** (*b 5 t*) is set to **[Hoisting]** (*u E r*) page [206](#)
- **[Brake contact]** (*b C i*) is set to **[No]** (*n o*) page [206](#)
- **[Brake impulse]** (*b i P*) is set to **[Yes]** (*y E 5*) page [206](#)
- **[Brake release I FW]** (*i b r*) is set to 0 A page [206](#)
- **[Brake Release time]** (*b r t*) is set to 0 s page [206](#)
- **[Brake release freq]** (*b i r*) is set to **[Auto]** (*R u t o*) page [207](#)
- **[Brake engage freq]** (*b E n*) is set to **[Auto]** (*R u t o*) page [207](#)
- **[Brake engage time]** (*b E t*) is set to 0 s page [207](#)
- **[Engage at reversal]** (*b E d*) is set to **[No]** (*n o*) page [207](#)
- **[Jump at reversal]** (*J d C*) is set to **[Auto]** (*R u t o*) page [207](#)
- **[Time to restart]** (*t t r*) is set to 0 s page [208](#)
- **[Current ramp time]** (*b r r*) is set to 0 s page [210](#)
- **[Low speed]** (*L 5 P*) is set to Rated motor slip calculated by the drive, page [96](#)
- **[Output Phase Loss]** (*o P L*) is set to **[Yes]** (*y E 5*) page [270](#)  
No further modifications can be made to this parameter.
- **[Catch on the fly]** (*F L r*) is set to **[No]** (*n o*) page [267](#)  
No further modifications can be made to this parameter.

### Return to factory settings:


Returning to factory settings with **[Config. Source]** (*F C 5 i*) is set to **[Macro-Conf]** (*i n i*) page [89](#) will return the drive to the selected macro configuration. The **[Macro configuration]** (*C F G*) parameter does not change, although **[Customized macro]** (*C C F G*) disappears.

**Note:** The factory settings that appear in the parameter tables correspond to

**[Macro configuration]** (*C F G*) = **[Start/Stop]** (*5 t 5*). This is the macro configuration set at the factory.



## Example diagrams for use with the macro configurations

### **[Hoisting]** (*H 5 t*) diagram

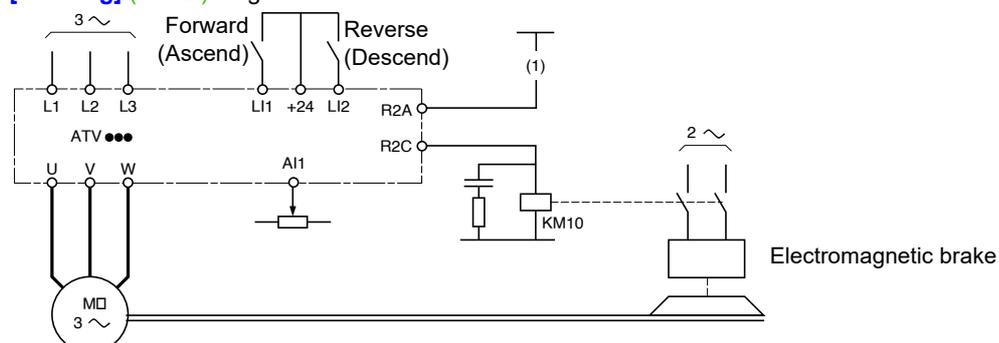

- (1) Without integrated safety function, a contact on the Preventa module must be inserted in the brake control circuit to engage it when the "Safe Torque Off" safety function is activated (see connection diagrams in the Installation manual).

**Full**

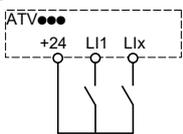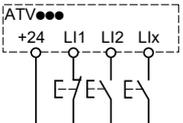Code	Name / Description	Adjustment range	Factory setting
<b>CONF</b>	<b>[1.3 CONFIGURATION]</b>		
<b>FULL</b>	<b>[FULL]</b>		
<b>5, Π -</b>	<b>[SIMPLY START]</b>		
<b>⚠ WARNING</b>			
<p><b>LOSS OF CONTROL</b></p> <ul style="list-style-type: none"> <li>Fully read and understand the manual of the connected motor.</li> <li>Verify that all motor parameters are correctly set by referring to the nameplate and the manual of the connected motor.</li> <li>If you modify the value of one or more motor parameters after having performed autotuning, the value of <b>[Tune Selection] 5 E U n</b> is reset to <b>[Default] E P b</b> and you must re-perform autotuning.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p>			
<b>E E E</b>	<b>[2/3 wire control]</b>		<b>[2 wire] (E E)</b>
 2 s	<b>⚠ WARNING</b>		
<p><b>UNANTICIPATED EQUIPMENT OPERATION</b></p> <p>If this parameter is changed, the parameters <b>[Reverse assign.] (r r 5)</b> and <b>[2 wire type] (E E E)</b> and the assignments of the digital inputs are reset to the factory setting. Verify that this change is compatible with the type of wiring used.</p> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p>			
<p>See <b>[2/3 wire control] (E E E)</b> page <a href="#">133</a>.</p>			
<b>E E</b>	<b>[2 wire] (E E)</b>		
<p><b>2-wire control (level commands):</b> This is the input state (0 or 1) or edge (0 to 1 or 1 to 0), which controls running or stopping.</p> <p>Example of "source" wiring:</p>  <p style="margin-left: 150px;">L1: forward Lix: reverse</p>			
<b>E E</b>	<b>[3 wire] (E E)</b>		
<p><b>3-wire control (pulse commands):</b> A "forward" or "reverse" pulse is sufficient to command starting, a "stop" pulse is sufficient to command stopping.</p> <p>Example of "source" wiring:</p>  <p style="margin-left: 150px;">L1: stop L2: forward Lix: reverse</p>			

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; SIM-

Code	Name / Description	Adjustment range	Factory setting
<b>C F G</b>	<b>[Macro configuration]</b>		<b>[Start/Stop] (S E S)</b>
★ ⌚ 2 s	 <b>WARNING</b> <b>UNANTICIPATED EQUIPMENT OPERATION</b> Verify that the selected macro configuration is compatible with the type of wiring used. <b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b>		
	See <b>[Macro configuration] (C F G)</b> page <b>90</b> .		
<b>S E S</b>	<b>[Start/Stop] (S E S)</b> : Start/stop		
<b>H d G</b>	<b>[M. handling] (H d G)</b> : Handling		
<b>H S E</b>	<b>[Hoisting] (H S E)</b> : Hoisting		
<b>G E n</b>	<b>[Gen. Use] (G E n)</b> : General use		
<b>P i d</b>	<b>[PID regul.] (P i d)</b> : PID regulation		
<b>n E E</b>	<b>[Network C.] (n E E)</b> : Communication bus		
<b>C C F G</b>	<b>[Customized macro]</b>		
★	Read-only parameter, only visible if at least one macro configuration parameter has been modified.		
<b>n o</b>	<b>[No] (n o)</b> : No		
<b>Y E S</b>	<b>[Yes] (Y E S)</b> : Yes		
<b>b F r</b>	<b>[Standard mot. freq]</b>		<b>[50Hz IEC] (S D)</b>
	This parameter modifies the presets of the following parameters: <b>[Rated motor volt.] (u n S)</b> below, <b>[High speed] (H S P)</b> page <b>96</b> , <b>[Freq. threshold] (F e d)</b> page <b>110</b> , <b>[Rated motor freq.] (F r S)</b> and <b>[Max frequency] (E F r)</b> .		
	<b>Note:</b> Modifying this parameter resets the motor tune parameters and, <b>[Tune Selection] (S E u n)</b> is reset to <b>[Default] (E A b)</b> . Autotuning will need to be performed again.		
<b>S D</b>	<b>[50Hz IEC] (S D)</b> : Drive 50 Hz		
<b>6 D</b>	<b>[60Hz NEMA] (6 D)</b> : Drive 60 Hz		
<b>i P L</b>	<b>[Input phase loss]</b>		Yes or No, according to drive rating
★	This parameter is only accessible in this menu on 3-phase drives. If one phase disappears, the drive switches to fault mode <b>[Input phase loss] (P H F)</b> , but if 2 or 3 phases disappear, the drive continues to operate until it trips on an undervoltage detected fault (the drive trips in <b>[Input phase loss] (P H F)</b> if there is an input phase loss and if this leads to performance decrease). See <b>[Input phase loss] (i P L)</b> page <b>270</b> .		
<b>n o</b>	<b>[Ignore] (n o)</b> : Detected fault ignored, to be used when the drive is supplied via a single-phase supply or by the DC bus		
<b>Y E S</b>	<b>[Freewheel] (Y E S)</b> : With freewheel stop		
<b>n P r</b>	<b>[Rated motor power]</b>		According to drive rating
★	Rated motor power given on the nameplate, in kW if <b>[Standard mot. freq] (b F r)</b> is set to <b>[50Hz IEC] (S D)</b> , in HP if <b>[Standard mot. freq] (b F r)</b> is set to <b>[60Hz NEMA] (6 D)</b> . See <b>[Rated motor power] (n P r)</b> page <b>115</b> . <b>Note:</b> Modifying this parameter resets the motor tune parameters and, <b>[Tune Selection] (S E u n)</b> is reset to <b>[Default] (E A b)</b> . Autotuning will need to be performed again.		
<b>u n S</b>	<b>[Rated motor volt.]</b>	100 to 480 V	According to drive rating
★	Rated motor voltage given on the nameplate. ATV320●●●M2●: 100 to 240 V – ATV320●●●N4●: 200 to 480 V. See <b>[Rated motor volt.] (u n S)</b> page <b>115</b> . <b>Note:</b> Modifying this parameter resets the motor tune parameters and, <b>[Tune Selection] (S E u n)</b> is reset to <b>[Default] (E A b)</b> . Autotuning will need to be performed again.		
<b>n C r</b>	<b>[Rated mot. current]</b>	0.25 to 1.5 In (1)	According to drive rating and <b>[Standard mot. freq] (b F r)</b>
★	Rated motor current given on the nameplate. See <b>[Rated mot. current] (n C r)</b> page <b>115</b> . <b>Note:</b> Modifying this parameter resets the motor tune parameters and, <b>[Tune Selection] (S E u n)</b> is reset to <b>[Default] (E A b)</b> . Autotuning will need to be performed again.		

Parameters described in this page can be accessed by: DRI- > CONF > FULL > SIM-

Code	Name / Description	Adjustment range	Factory setting
<i>F r 5</i>  ★	<b>[Rated motor freq.]</b>  Rated motor frequency given on the nameplate. The factory setting is 50 Hz, or preset to 60 Hz if <b>[Standard mot. freq.] (b F r)</b> is set to 60 Hz. This parameter is not visible if <b>[Motor control type] (C t t)</b> page 114 is set to <b>[Sync. mot.] (5 Y n)</b> . See <b>[Rated motor freq.] (F r 5)</b> page 115. <b>Note:</b> Modifying this parameter resets the motor tune parameters and, <b>[Tune Selection] (5 t u n)</b> is reset to <b>[Default] (t A b)</b> . Autotuning will need to be performed again.	10 to 800 Hz	50 Hz
<i>n 5 P</i>  ★	<b>[Rated motor speed]</b>  Rated motor speed given on the nameplate. This parameter is not visible if <b>[Motor control type] (C t t)</b> page 114 is set to <b>[Sync. mot.] (5 Y n)</b> . See <b>[Rated motor speed] (n 5 P)</b> page 115. 0 to 9,999 rpm then 10.00 to 60.00 krpm on the integrated display terminal. If, rather than the rated speed, the nameplate indicates the synchronous speed and the slip in Hz or as a %, calculate the rated speed as follows:  Nominal speed = Synchronous speed x $\frac{100 - \text{slip as a \%}}{100}$ or Nominal speed = Synchronous speed x $\frac{50 - \text{slip in Hz}}{50}$ (50 Hz motors) or Nominal speed = Synchronous speed x $\frac{60 - \text{slip in Hz}}{60}$ (60 Hz motors) <b>Note:</b> Modifying this parameter resets the motor tune parameters and, <b>[Tune Selection] (5 t u n)</b> is reset to <b>[Default] (t A b)</b> . Autotuning will need to be performed again.	0 to 65,535 rpm	According to drive rating
<i>t F r</i>	<b>[Max frequency]</b>  The factory setting is 60 Hz, or preset to 72 Hz if <b>[Standard mot. freq.] (b F r)</b> is set to 60 Hz. The maximum value is limited by the following conditions: It must not exceed 10 times the value of <b>[Rated motor freq.] (F r 5)</b> . To help prevent <b>[Overspeed] (5 o F)</b> error, it is recommended to have <b>[Max Frequency] (t F r)</b> equal to or higher than 110% of <b>[High Speed] (H 5 P)</b> . See <b>[Max frequency] (t F r)</b> page 113.	10 to 599 Hz	60 Hz
<i>t u n</i>  ⌚	<b>[Auto tuning]</b>  For asynchronous motors, see page 116. For synchronous motors, see page 121.		<b>[No action] (n o)</b>
<i>t u S</i>	<b>[Auto tuning state]</b>  This parameter is not saved at drive power off. It shows the Autotuning status since last power on. See <b>[Auto tuning state] (t u S)</b> page 116.		<b>[Not done] (t A b)</b>
<i>t A b</i> <i>P E n d</i> <i>P r o G</i> <i>F A i L</i> <i>d o n E</i>	<b>[Not done] (t A b):</b> Autotune is not done <b>[Pending] (P E n d):</b> Autotune has been requested but not yet performed <b>[In Progress] (P r o G):</b> Autotune is in progress <b>[Failed] (F A i L):</b> Autotune has detected a fault <b>[Done] (d o n E):</b> The stator resistance measured by the auto-tuning function is used to control the motor		
<i>5 t u n</i>	<b>[Tune selection]</b>  See <b>[Tune selection] (5 t u n)</b> page 116.		<b>[Default] (t A b)</b>
<i>t A b</i> <i>P E A S</i> <i>C u S</i>	<b>[Default] (t A b):</b> The default stator resistance value is used to control the motor <b>[Measure] (P E A S):</b> The stator resistance measured by the auto-tuning function is used to control the motor <b>[Custom] (C u S):</b> The stator resistance set manually is used to control the motor		
<i>i t H</i>  ⌚	<b>[Mot. therm. current]</b>  Motor thermal protection current, to be set to the rated current indicated on the motor nameplate. See <b>[Mot. therm. current] (i t H)</b> page 99.	0.2 to 1.5 In (1)	According to drive rating
<i>A C C</i>  ⌚	<b>[Acceleration]</b>  Time to accelerate from 0 to the <b>[Rated motor freq.] (F r 5)</b> (page 95). To have repeatability in ramps, the value of this parameter must be set according to the possibility of the application. See <b>[Acceleration] (A C C)</b> page 98.	0.00 to 6,000 s (2)	3.0 s

Code	Name / Description	Adjustment range	Factory setting
<b>d E C</b> 	<b>[Deceleration]</b> Time to decelerate from the <b>[Rated motor freq.] (F r 5)</b> (page 95) to 0. To have repeatability in ramps, the value of this parameter must be set according to the possibility of the application. See <b>[Deceleration] (d E C)</b> page 98.	0.00 to 6,000 s (2)	3.0 s
<b>L 5 P</b> 	<b>[Low speed]</b> Motor frequency at minimum reference, can be set between 0 and <b>[High speed] (H 5 P)</b> . See <b>[Low speed] (L 5 P)</b> page 98.	0 to 599 Hz	0
<b>H 5 P</b> 	<b>[High speed]</b> Motor frequency at maximum reference, can be set between <b>[Low speed] (L 5 P)</b> and <b>[Max frequency] (E F r)</b> . The factory setting changes to 60 Hz if <b>[Standard mot. freq] (b F r)</b> is set to <b>[60Hz NEMA] (E D)</b> . To help prevent <b>[Overspeed] (S o F)</b> error, it is recommended to have <b>[Max Frequency] (E F r)</b> equal to or higher than 110% of <b>[High Speed] (H 5 P)</b> . See <b>[High speed] (H 5 P)</b> page 98.	0 to 599 Hz	50 Hz

(1) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.

(2) Range 0.01 to 99.99 s or 0.1 to 999.9 s or 1 to 6,000 s according to **[Ramp increment] (i n r)** page 179.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.




To change the assignment of this parameter, press the ENT key for 2 s.

## Settings

### With integrated display terminal

It is recommended to stop the motor before modifying any of the settings.

From **ConF** menu

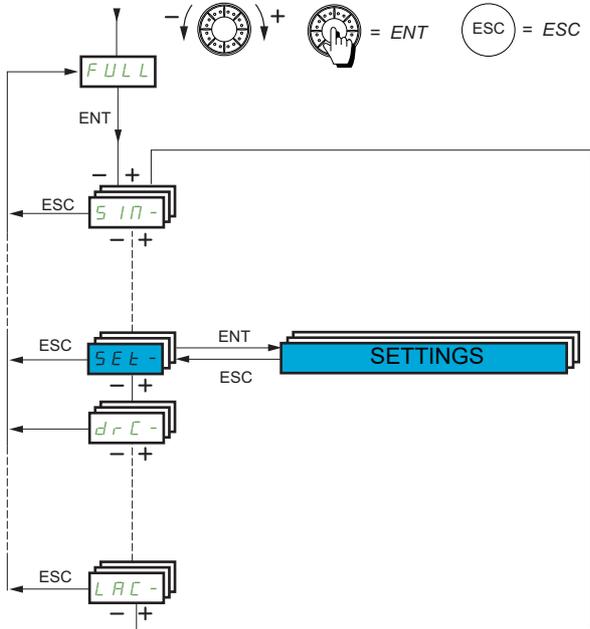

The adjustment parameters can be modified with the drive running or stopped.

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; SET-

Code	Name / Description	Adjustment range	Factory setting
<b>FULL</b>	<b>[FULL] (continued)</b>		
<b>SEt -</b>	<b>[SETTINGS]</b>		
<b>inr</b> (  <b>0.01</b> <b>0.1</b> <b>1</b>	<b>[Ramp increment]</b>  This parameter is valid for <b>[Acceleration] (ACC)</b> , <b>[Deceleration] (DEC)</b> , <b>[Acceleration 2] (AC2)</b> and <b>[Deceleration 2] (DE2)</b> . See <b>[Ramp increment] (inr)</b> page 179.  [0,01]: Ramp up to 99.99 seconds [0,1]: Ramp up to 999.9 seconds [1]: Ramp up to 6,000 seconds		0.1
<b>ACC</b> ( 	<b>[Acceleration]</b>  Time to accelerate from 0 to the <b>[Rated motor freq.] (Fr5)</b> page 95. To have repeatability in ramps, the value of this parameter must be set according to the possibility of the application. See <b>[Acceleration] (ACC)</b> page 179.	0.00 to 6,000 s (1)	3.0 s
<b>DEC</b> ( 	<b>[Deceleration]</b>  Time to decelerate from the <b>[Rated motor freq.] (Fr5)</b> page 95 to 0. To have repeatability in ramps, the value of this parameter must be set according to the possibility of the application. See <b>[Deceleration] (DEC)</b> page 179.	0.00 to 6,000 s (1)	3.0 s
<b>AC2</b> ★ ( 	<b>[Acceleration 2]</b>  Time to accelerate from 0 to the <b>[Rated motor freq.] (Fr5)</b> page 95. To have repeatability in ramps, the value of this parameter must be set according to the possibility of the application. See <b>[Acceleration 2] (AC2)</b> page 180.	0.00 to 6,000 s (1)	5 s
<b>DE2</b> ★ ( 	<b>[Deceleration 2]</b>  Time to decelerate from the <b>[Rated motor freq.] (Fr5)</b> page 95 to 0. To have repeatability in ramps, the value of this parameter must be set according to the possibility of the application. See <b>[Deceleration 2] (DE2)</b> page 180.	0.00 to 6,000 s (1)	5 s
<b>EA1</b> ★ ( 	<b>[Begin Acc round]</b>  Rounding of start of acceleration ramp as a % of the <b>[Acceleration] (ACC)</b> or <b>[Acceleration 2] (AC2)</b> ramp time. Visible if <b>[Ramp type] (rPE)</b> is set to <b>[Customized] (CU5)</b> . See <b>[Begin Acc round] (EA1)</b> page 179.	0 to 100%	10%
<b>EA2</b> ★ ( 	<b>[End Acc round]</b>  Rounding of end of acceleration ramp as a % of the <b>[Acceleration] (ACC)</b> or <b>[Acceleration 2] (AC2)</b> ramp time. Can be set between 0 and 100% - <b>[Begin Acc round] (EA1)</b> . Visible if <b>[Ramp type] (rPE)</b> is set to <b>[Customized] (CU5)</b> . See <b>[End Acc round] (EA2)</b> page 180.	0 to 100%	10%
<b>EA3</b> ★ ( 	<b>[Begin Dec round]</b>  Rounding of start of deceleration ramp as a % of the <b>[Deceleration] (DEC)</b> or <b>[Deceleration 2] (DE2)</b> ramp time. Visible if <b>[Ramp type] (rPE)</b> is set to <b>[Customized] (CU5)</b> . See <b>[Begin Dec round] (EA3)</b> page 180.	0 to 100%	10%
<b>EA4</b> ★ ( 	<b>[End Dec round]</b>  Rounding of end of deceleration ramp as a % of the <b>[Deceleration] (DEC)</b> or <b>[Deceleration 2] (DE2)</b> ramp time. Can be set between 0 and 100% - <b>[Begin Dec round] (EA3)</b> . Visible if <b>[Ramp type] (rPE)</b> is set to <b>[Customized] (CU5)</b> . See <b>[End Dec round] (EA4)</b> page 180.	0 to 100%	10%
<b>LSP</b> ( 	<b>[Low speed]</b>  Motor frequency at minimum reference, can be set between 0 and <b>[High speed] (HSP)</b> page 96. See <b>[Low speed] (LSP)</b> page 96.	0 to 599 Hz	0 Hz
<b>HSP</b> ( 	<b>[High speed]</b>  Motor frequency at maximum reference, can be set between <b>[Low speed] (LSP)</b> and <b>[Max frequency] (EFR)</b> . The factory setting changes to 60 Hz if <b>[Standard mot. freq.] (BFR)</b> is set to <b>[60Hz NEMA] (BD)</b> . See <b>[High speed] (HSP)</b> page 96. To help prevent <b>[Overspeed] (SOF)</b> error, it is recommended to have <b>[Max Frequency] (EFR)</b> equal to or higher than 110% of <b>[High Speed] (HSP)</b> .	0 to 599 Hz	50 Hz

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; SET-

Code	Name / Description	Adjustment range	Factory setting
<b>HSP2</b> ★ ( )	<b>[High speed 2]</b> Visible if <b>[2 High speed]</b> (SH2) is not set to <b>[No]</b> (n0). See <b>[High speed 2]</b> (HSP2) page 258.	0 to 599 Hz	50 Hz
<b>HSP3</b> ★ ( )	<b>[High speed 3]</b> Visible if <b>[4 High speed]</b> (SH4) is not set to <b>[No]</b> (n0). See <b>[High speed 3]</b> (HSP3) page 258.	0 to 599 Hz	50 Hz
<b>HSP4</b> ★ ( )	<b>[High speed 4]</b> Visible if <b>[4 High speed]</b> (SH4) is not set to <b>[No]</b> (n0). See <b>[High speed 4]</b> (HSP4) page 258.	0 to 599 Hz	50 Hz
<b>IEH</b> ( )	<b>[Mot. therm. current]</b> Motor thermal protection current, to be set to the rated current indicated on the motor nameplate. See <b>[Mot. therm. current]</b> (IEH) page 95.	0.2 to 1.5 In (2)	According to drive rating
<b>IFr</b> ( )	<b>[IR compensation]</b> IR compensation. See <b>[IR compensation]</b> (IFr) page 126.	0 to 200%	100%
<b>SLP</b> ★ ( )	<b>[Slip compensation]</b> Slip compensation. See <b>[Slip compensation]</b> (SLP) page 126.	0 to 300%	100%
<b>SFC</b> ★ ( )	<b>[K speed loop filter]</b> Speed filter coefficient. See <b>[K speed loop filter]</b> (SFC) page 126.	0 to 100	65
<b>SIE</b> ★ ( )	<b>[Speed time integral]</b> Speed loop integral time constant. See <b>[Speed time integral]</b> (SIE) page 126.	1 to 65,535 ms	63 ms
<b>SPG</b> ★ ( )	<b>[Speed prop. gain]</b> Speed loop proportional gain. See <b>[Speed prop. gain]</b> (SPG) page 126.	0 to 1,000%	40%
<b>SPGμ</b> ★ ( )	<b>[UF inertia comp.]</b> Inertia factor. See <b>[UF inertia comp.]</b> (SPGμ) page 126.	0 to 1,000%	40%

(1) Range 0.01 to 99.99 s or 0.1 to 999.9 s or 1 to 6,000 s according to **[Ramp increment]** (Inr) page 179.

(2) In corresponds to the rated drive current indicated in the Installation manual or on the drive nameplate.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > SET-


Parameter settings for **[K speed loop filter] (SFL)**, **[Speed prop. gain] (SPG)** and **[Speed time integral] (SIT)**

The following parameters can be accessed if **[Motor control type] (LTL)** page 114 is set to **[SVC V] (UVL)**, **[Sync. mot.] (SYN)** or **[Energy Sav.] (NLD)**.

**General Case: Setting for [K speed loop filter] (SFL) = 0**

The regulator is an "IP" type with filtering of the speed reference, for applications requiring flexibility and stability (hoisting or high inertia, for example).

- **[Speed prop. gain] (SPG)** affects excessive speed.
- **[Speed time integral] (SIT)** affects the passband and response time.

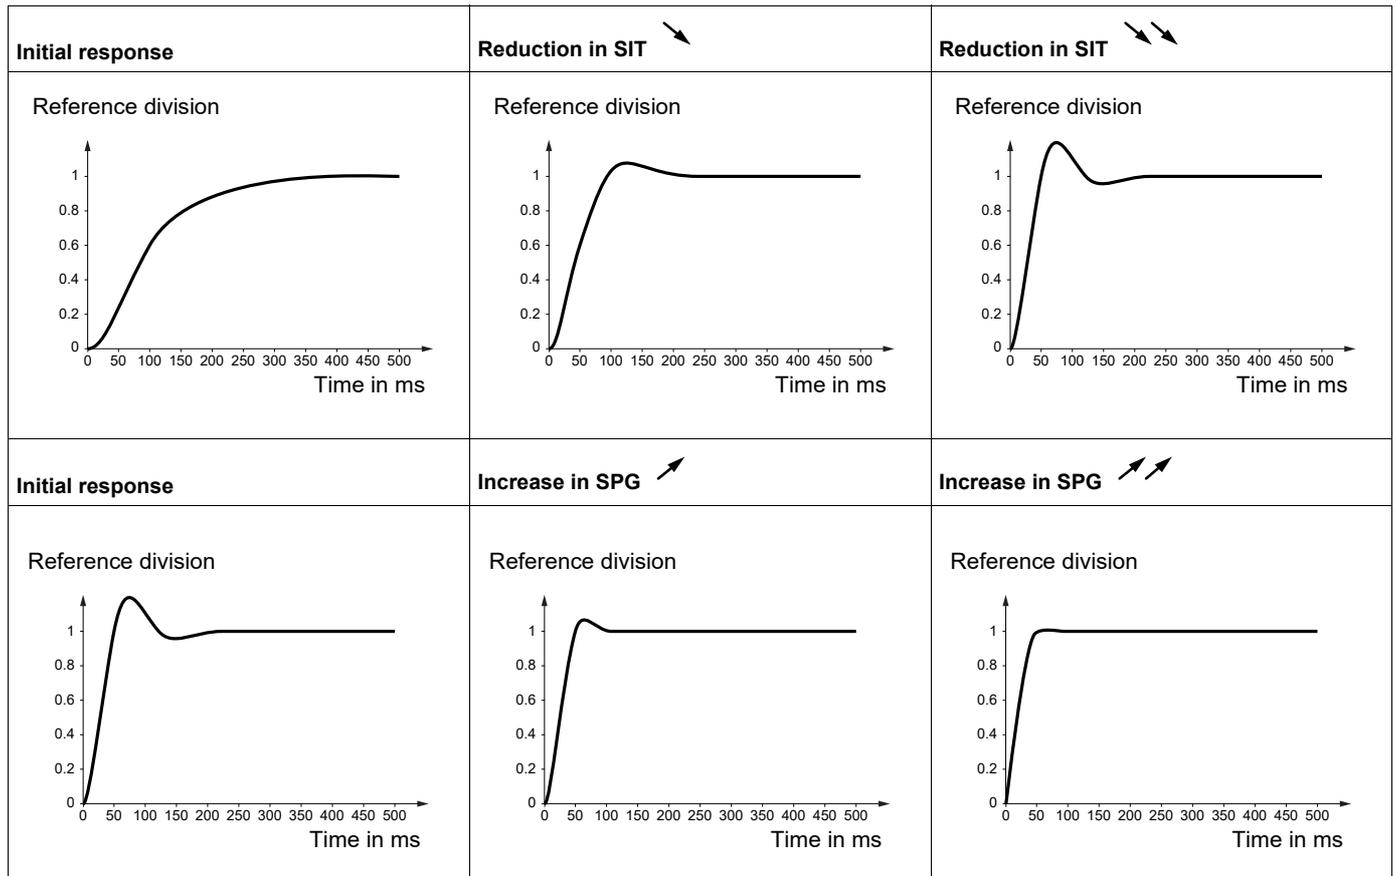


**Special case: Parameter [K speed loop filter] (SFC) is not 0**

This parameter must be reserved for specific applications that require a short response time (trajectory positioning or servo control).

- When set to 100 as described above, the regulator is a "PI" type, without filtering of the speed reference.
- Settings between 0 and 100 will obtain an intermediate function between the settings below and those on the previous page.

Example: Setting for [K speed loop filter] (SFC) = 100

- [Speed prop. gain] (SPG) affects the passband and response time.
- [Speed time integral] (SIT) affects excessive speed.

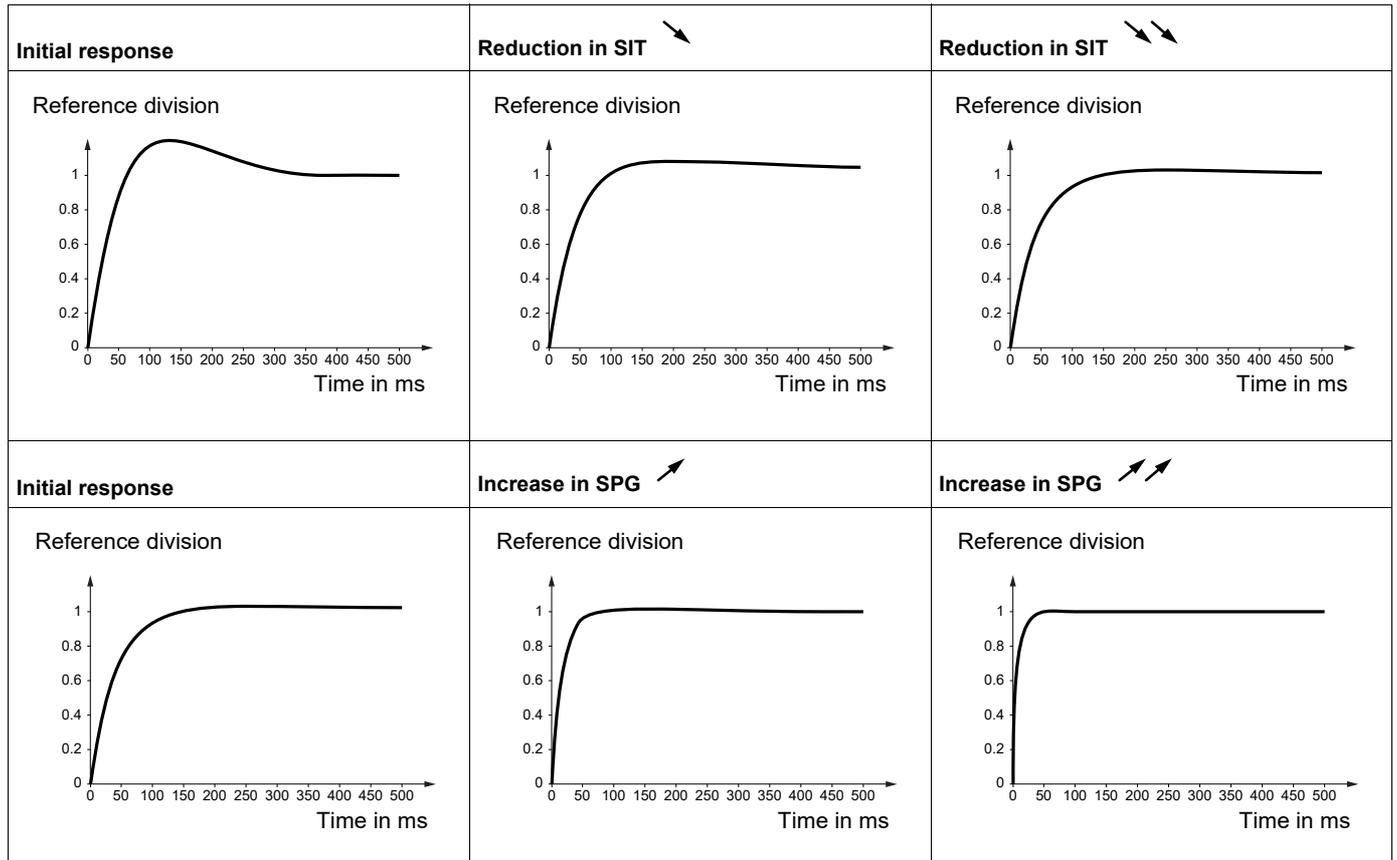

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; SET-

Code	Name / Description	Adjustment range	Factory setting
<b>d C F</b> ★ ( )	<b>[Ramp divider]</b> Deceleration ramp time reduction. See <b>[Ramp divider]</b> ( <b>d C F</b> ) page <a href="#">182</a> .	0 to 10	4
<b>i d C</b> ★ ( )	<b>[DC inject. level 1]</b> Level of DC injection braking current activated via logic input or selected as stop mode. See <b>[DC inject. level 1]</b> ( <b>i d C</b> ) page <a href="#">183</a> .	0.1 to 1.41 In (1)	0.64 In (1)
<b>t d i</b> ★ ( )	<b>[DC injection time 1]</b> Maximum current injection time <b>[DC inject. level 1]</b> ( <b>i d C</b> ). After this time, the injection current becomes <b>[DC inject. level 2]</b> ( <b>i d C 2</b> ). See <b>[DC injection time 1]</b> ( <b>t d i</b> ) page <a href="#">183</a> .	0.1 to 30 s	0.5 s
<b>i d C 2</b> ★ ( )	<b>[DC inject. level 2]</b> Injection current activated by logic input or selected as stop mode, once period of time <b>[DC injection time 1]</b> ( <b>t d i</b> ) has elapsed. See <b>[DC inject. level 2]</b> ( <b>i d C 2</b> ) page <a href="#">184</a> .	0.1 In to 1.41 In (1)	0.5 In (1)
<b>t d C</b> ★ ( )	<b>[DC injection time 2]</b> Maximum injection time <b>[DC inject. level 2]</b> ( <b>i d C 2</b> ) for injection selected as stop mode only. See <b>[DC injection time 2]</b> ( <b>t d C</b> ) page <a href="#">184</a> .	0.1 to 30 s	0.5 s
<b>S d C I</b> ★ ( )	<b>[Auto DC inj. level 1]</b>  <div style="border: 1px solid black; padding: 5px; text-align: center;"><b>NOTICE</b></div> <b>OVERHEATING</b> Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time. <b>Failure to follow these instructions can result in equipment damage.</b>	0 to 1.2 In (1)	0.7 In (1)
<b>t d C I</b> ★ ( )	<b>[Auto DC inj. time 1]</b>  <div style="border: 1px solid black; padding: 5px; text-align: center;"><b>NOTICE</b></div> <b>OVERHEATING</b> Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time. <b>Failure to follow these instructions can result in equipment damage.</b>	0.1 to 30 s	0.5 s
	Level of standstill DC injection current <b>[Auto DC injection]</b> ( <b>A d C</b> ) is not <b>[No]</b> ( <b>n o</b> ). See page <a href="#">185</a> .		
	Standstill injection time. This parameter can be accessed if <b>[Auto DC injection]</b> ( <b>A d C</b> ) is not set to <b>[No]</b> ( <b>n o</b> ). If <b>[Motor control type]</b> ( <b>C t t</b> ) page <a href="#">114</a> is set to <b>[Sync. mot.]</b> ( <b>S Y n</b> ), this time corresponds to the zero speed maintenance time. See page <a href="#">185</a> .		

Code	Name / Description	Adjustment range	Factory setting
<span style="color: green;">5 d C 2</span>  <span style="color: blue;">★</span> <span style="font-size: 2em;">⌚</span>	<span style="color: blue;">[Auto DC inj. level 2]</span>	0 to 1.2 In (1)	0.5 In (1)
<b>NOTICE</b>			
<b>OVERHEATING</b> Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time. <b>Failure to follow these instructions can result in equipment damage.</b>			
2nd level of standstill DC injection current. This parameter can be accessed if <span style="color: blue;">[Auto DC injection]</span> ( <span style="color: green;">A d C</span> ) is not <span style="color: blue;">[No]</span> ( <span style="color: green;">n o</span> ). See page <a href="#">186</a> .			
<span style="color: green;">t d C 2</span>  <span style="color: blue;">★</span> <span style="font-size: 2em;">⌚</span>	<span style="color: blue;">[Auto DC inj. time 2]</span>	0 to 30 s	0 s
<b>NOTICE</b>			
<b>OVERHEATING</b> Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time. <b>Failure to follow these instructions can result in equipment damage.</b>			
2nd standstill injection time. This parameter can be accessed if <span style="color: blue;">[Auto DC injection]</span> ( <span style="color: green;">A d C</span> ) is set to <span style="color: blue;">[Yes]</span> ( <span style="color: green;">Y E 5</span> ). See page <a href="#">186</a> .			
<span style="color: green;">S F r</span>  <span style="font-size: 2em;">⌚</span>	<span style="color: blue;">[Switching freq.]</span>	2 to 16 kHz	4.0 kHz
<b>NOTICE</b>			
<b>DAMAGE TO THE DRIVE</b> Verify that the switching frequency of the drive does not exceed 4 kHz if the EMC filter is disconnected for operation of the drive in an IT mains. <b>Failure to follow these instructions can result in equipment damage.</b>			
This applies to the following drive versions: ATV320●●●M2●			
Switching frequency setting. See page <a href="#">127</a> . <b>Adjustment range:</b> The maximum value is limited to 4 kHz if <span style="color: blue;">[Motor surge limit]</span> ( <span style="color: green;">S u L</span> ) parameter, page <a href="#">128</a> is configured. <b>Note:</b> In the event of excessive temperature rise, the drive will automatically reduce the switching frequency and reset it once the temperature returns to normal.			
<span style="color: green;">C L i</span>  <span style="color: blue;">★</span> <span style="font-size: 2em;">⌚</span>	<span style="color: blue;">[Current Limitation]</span>	0 to 1.5 In (1)	1.5 In (1)
<b>NOTICE</b>			
<b>OVERHEATING</b> <ul style="list-style-type: none"> <li>Verify that the motor is properly rated for the maximum current to be applied to the motor.</li> <li>Consider the duty cycle of the motor and all factors of your application including derating requirements in determining the current limit.</li> </ul> <b>Failure to follow these instructions can result in equipment damage.</b>			
Used to limit the motor current. See page <a href="#">230</a> . <b>Note:</b> If the setting is less than 0.25 In, the drive may lock in <span style="color: blue;">[Output Phase Loss]</span> ( <span style="color: green;">o P L</span> ) fault mode if this has been enabled (see page <a href="#">270</a> ). If it is less than the no-load motor current, the motor cannot run.			

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; SET-

Code	Name / Description	Adjustment range	Factory setting
<b>CL2</b>	<b>[I Limit. 2 value]</b>	0 to 1.5 In (1)	1.5 In (1)
★ ⌚	<b>NOTICE</b>		
	<b>OVERHEATING</b>		
	<ul style="list-style-type: none"> <li>Verify that the motor is properly rated for the maximum current to be applied to the motor.</li> <li>Consider the duty cycle of the motor and all factors of your application including derating requirements in determining the current limit.</li> </ul> <p><b>Failure to follow these instructions can result in equipment damage.</b></p>		
	See page <a href="#">230</a> .		
	<b>Note:</b> If the setting is less than 0.25 In, the drive may lock in <b>[Output Phase Loss] (oPL)</b> fault mode if this has been enabled (see page <a href="#">270</a> ). If it is less than the no-load motor current, the motor cannot run.		
<b>FLU</b>	<b>[Motor fluxing]</b>		<b>[No] (Fn0)</b>
★ ⌚	<b>⚠ ⚠ DANGER</b>		
	<b>HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH</b>		
	If the parameter <b>[Motor fluxing] (FLU)</b> is set to <b>[Continuous] (FCE)</b> , fluxing is always active, even if the motor does not run.		
	<ul style="list-style-type: none"> <li>Verify that using this setting does not result in unsafe conditions.</li> </ul> <p><b>Failure to follow these instructions will result in death or serious injury.</b></p>		
⌚ 2 s	<b>NOTICE</b>		
	<b>OVERHEATING</b>		
	Verify that the connected motor is properly rated for the flux current to be applied.		
	<b>Failure to follow these instructions can result in equipment damage.</b>		
	The parameter is visible if <b>[Motor control type] (CCE)</b> page <a href="#">114</a> is not set to <b>[Sync. mot.] (SYN)</b> .		
	In order to obtain rapid high torque on startup, magnetic flux needs to already have been established in the motor.		
	In <b>[Continuous] (FCE)</b> mode, the drive automatically builds up flux when it is powered up.		
	In <b>[Not cont.] (FNC)</b> mode, fluxing occurs when the motor starts up.		
	The flux current is greater than <b>[Rated mot. current] (nCr)</b> when the flux is established and is then adjusted to the motor magnetizing current. See page <a href="#">198</a> .		
	<b>FNC</b> <b>[Not cont.] (FNC)</b> : Non-continuous mode		
	<b>FCE</b> <b>[Continuous] (FCE)</b> : Continuous mode. This option is not possible if <b>[Auto DC injection] (AdC)</b> page <a href="#">185</a> is <b>[Yes] (YES)</b> or if <b>[Type of stop] (SEt)</b> page <a href="#">182</a> is <b>[Freewheel] (nSE)</b> .		
	<b>Fn0</b> <b>[No] (Fn0)</b> : Function inactive. This option is not possible if <b>[Brake assignment] (bLC)</b> page <a href="#">206</a> is not <b>[No] (n0)</b> .		
<b>ELS</b>	<b>[Low speed time out]</b>	0 to 999.9 s	0 s
⌚	Maximum operating time at <b>[Low speed] (LSP)</b> (see page <a href="#">96</a> ).		
	Following operation at LSP for a defined period, a motor stop is requested automatically. The motor will restart if the reference is greater than LSP and if a run command is still present. See page <a href="#">225</a> .		
	<b>Note:</b> A value of 0 indicates an unlimited period of time.		
	<b>Note:</b> If <b>[Low speed time out] (ELS)</b> is not 0, <b>[Type of stop] (SEt)</b> page <a href="#">182</a> is forced to <b>[Ramp stop] (rPP)</b> (only if a ramp stop can be configured).		
<b>JGF</b>	<b>[Jog frequency]</b>	0 to 10 Hz	10 Hz
★ ⌚	Reference in jog operation. See page <a href="#">187</a> .		
<b>JGE</b>	<b>[Jog delay]</b>	0 to 2.0 s	0.5 s
★ ⌚	Anti-repeat delay between 2 consecutive jog operations. See page <a href="#">188</a> .		

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; SET-

Code	Name / Description	Adjustment range	Factory setting
<b>5 P 2</b> ★ ( )	<b>[Preset speed 2]</b> Preset speed 2. See <a href="#">[Preset speed 2] (5 P 2)</a> page <a href="#">190</a> .	0 to 599 Hz	10 Hz
<b>5 P 3</b> ★ ( )	<b>[Preset speed 3]</b> Preset speed 3. See <a href="#">[Preset speed 3] (5 P 3)</a> page <a href="#">190</a> .	0 to 599 Hz	15 Hz
<b>5 P 4</b> ★ ( )	<b>[Preset speed 4]</b> Preset speed 4. See <a href="#">[Preset speed 4] (5 P 4)</a> page <a href="#">190</a> .	0 to 599 Hz	20 Hz
<b>5 P 5</b> ★ ( )	<b>[Preset speed 5]</b> Preset speed 5. See <a href="#">[Preset speed 5] (5 P 5)</a> page <a href="#">190</a> .	0 to 599 Hz	25 Hz
<b>5 P 6</b> ★ ( )	<b>[Preset speed 6]</b> Preset speed 6. See <a href="#">[Preset speed 6] (5 P 6)</a> page <a href="#">190</a> .	0 to 599 Hz	30 Hz
<b>5 P 7</b> ★ ( )	<b>[Preset speed 7]</b> Preset speed 7. See <a href="#">[Preset speed 7] (5 P 7)</a> page <a href="#">190</a> .	0 to 599 Hz	35 Hz
<b>5 P 8</b> ★ ( )	<b>[Preset speed 8]</b> Preset speed 8. See <a href="#">[Preset speed 8] (5 P 8)</a> page <a href="#">191</a> .	0 to 599 Hz	40 Hz
<b>5 P 9</b> ★ ( )	<b>[Preset speed 9]</b> Preset speed 9. See <a href="#">[Preset speed 9] (5 P 9)</a> page <a href="#">191</a> .	0 to 599 Hz	45 Hz
<b>5 P 10</b> ★ ( )	<b>[Preset speed 10]</b> Preset speed 10. See <a href="#">[Preset speed 10] (5 P 10)</a> page <a href="#">191</a> .	0 to 599 Hz	50 Hz
<b>5 P 11</b> ★ ( )	<b>[Preset speed 11]</b> Preset speed 11. See <a href="#">[Preset speed 11] (5 P 11)</a> page <a href="#">191</a> .	0 to 599 Hz	55 Hz
<b>5 P 12</b> ★ ( )	<b>[Preset speed 12]</b> Preset speed 12. See <a href="#">[Preset speed 12] (5 P 12)</a> page <a href="#">191</a> .	0 to 599 Hz	60 Hz

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; SET-

Code	Name / Description	Adjustment range	Factory setting
<b>SP13</b> ★ ( )	<b>[Preset speed 13]</b> Preset speed 13. See <a href="#">[Preset speed 13] (SP13)</a> page <a href="#">191</a> .	0 to 599 Hz	70 Hz
<b>SP14</b> ★ ( )	<b>[Preset speed 14]</b> Preset speed 14. See <a href="#">[Preset speed 14] (SP14)</a> page <a href="#">191</a> .	0 to 599 Hz	80 Hz
<b>SP15</b> ★ ( )	<b>[Preset speed 15]</b> Preset speed 15. See <a href="#">[Preset speed 15] (SP15)</a> page <a href="#">191</a> .	0 to 599 Hz	90 Hz
<b>SP16</b> ★ ( )	<b>[Preset speed 16]</b> Preset speed 16. See <a href="#">[Preset speed 16] (SP16)</a> page <a href="#">191</a> .	0 to 599 Hz	100 Hz
<b>MF r</b> ★ ( )	<b>[Multiplying coeff.]</b> Multiplying coefficient, can be accessed if <a href="#">[Multiplier ref.] (MR2, MR3)</a> page <a href="#">178</a> has been assigned to the graphic display terminal. See page <a href="#">54</a> .	0 to 100%	100%
<b>SRP</b> ★ ( )	<b>[+/-Speed limitation]</b> Limitation of +/- speed variation. See page <a href="#">196</a> .	0 to 50%	10%

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; SET-

Code	Name / Description	Adjustment range	Factory setting
<i>r P G</i> ★ ( )	<b>[PID prop. gain]</b> Proportional gain. See page <a href="#">223</a> .	0.01 to 100	1
<i>r I G</i> ★ ( )	<b>[PID integral gain]</b> Integral gain. See page <a href="#">223</a> .	0.01 to 100	1
<i>r d G</i> ★ ( )	<b>[PID derivative gain]</b> Derivative gain. See page <a href="#">223</a> .	0.00 to 100	0
<i>P r P</i> ★ ( )	<b>[PID ramp]</b> PID acceleration/deceleration ramp, defined to go from <b>[Min PID reference]</b> ( <i>P , P l</i> ) to <b>[Max PID reference]</b> ( <i>P , P 2</i> ) and vice versa. See page <a href="#">223</a> .	0 to 99.9 s	0 s
<i>P o L</i> ★ ( )	<b>[Min PID output]</b> Minimum value of regulator output in Hz. See page <a href="#">223</a> .	-599 to 599 Hz	0 Hz
<i>P o H</i> ★ ( )	<b>[Max PID output]</b> Maximum value of regulator output in Hz. See page <a href="#">223</a> .	0 to 599 Hz	60 Hz
<i>P R L</i> ★ ( )	<b>[Min fbk alarm]</b> Minimum monitoring threshold for regulator feedback. See page <a href="#">223</a> .	See page <a href="#">223</a> (2)	100
<i>P R H</i> ★ ( )	<b>[Max fbk alarm]</b> Maximum monitoring threshold for regulator feedback. See page <a href="#">224</a> .	See page <a href="#">224</a> (2)	1,000
<i>P E r</i> ★ ( )	<b>[PID error Alarm]</b> Regulator error monitoring threshold. See page <a href="#">224</a> .	0 to 65,535 (2)	100
<i>P S r</i> ★ ( )	<b>[Speed input %]</b> Multiplying coefficient for predictive speed input. See page <a href="#">224</a> .	1 to 100%	100%
<i>r P 2</i> ★ ( )	<b>[Preset ref. PID 2]</b> Preset PID reference. See page <a href="#">226</a> .	See page <a href="#">226</a> (2)	300

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; SET-

Code	Name / Description	Adjustment range	Factory setting
<span style="color: green;">r P 3</span> <span style="color: blue;">★</span> <span style="font-size: 2em;">()</span>	<b>[Preset ref. PID 3]</b> Preset PID reference. See page <a href="#">226</a> .	See page <a href="#">226</a> (2)	600
<span style="color: green;">r P 4</span> <span style="color: blue;">★</span> <span style="font-size: 2em;">()</span>	<b>[Preset ref. PID 4]</b> Preset PID reference. See page <a href="#">226</a> .	See page <a href="#">226</a> (2)	900

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; SET-

Code	Name / Description	Adjustment range	Factory setting
<i>i b r</i> ★ ( )	<b>[Brake release I FW]</b> Brake release current threshold for lifting or forward movement. See page <a href="#">206</a> .	0 to 1.36 In (1)	0.0 A
<i>i r d</i> ★ ( )	<b>[Brake release I Rev]</b> Brake release current threshold for lowering or reverse movement. See page <a href="#">206</a> .	0 to 1.36 In (1)	0.0 A
<i>b r t</i> ★ ( )	<b>[Brake Release time]</b> Brake release time delay. See page <a href="#">206</a> .	0 to 5.00 s	0 s
<i>b i r</i> ★ ( ) <i>A u t o</i>	<b>[Brake release freq]</b> See page <a href="#">207</a> . <b>[Auto] (Auto):</b> Nominal value	<b>[Auto] (Auto)</b> 0 to 10 Hz	<b>[Auto] (Auto)</b>
<i>b E n</i> ★ ( )	<b>[Brake engage freq]</b> Brake engage frequency threshold. See page <a href="#">207</a> .	<b>[Auto] (Auto)</b> 0 to 10 Hz	<b>[Auto] (Auto)</b>
<i>t b E</i> ★ ( )	<b>[Brake engage delay]</b> Time delay before request to engage brake. See page <a href="#">207</a> .	0 to 5.00 s	0 s
<i>b E t</i> ★ ( )	<b>[Brake engage time]</b> Brake engage time (brake response time). See page <a href="#">207</a> .	0 to 5.00 s	0 s
<i>J d C</i> ★ ( ) <i>A u t o</i>	<b>[Jump at reversal]</b> See page <a href="#">207</a> . <b>[Auto] (Auto):</b> Nominal value	<b>[Auto] (Auto)</b> 0 to 10 Hz	<b>[Auto] (Auto)</b>
<i>t E r</i> ★ ( )	<b>[Time to restart]</b> Time between the end of a brake engage sequence and the start of a brake release sequence. See page <a href="#">208</a> .	0.00 to 15.00 s	0.00 s
<i>t L i m</i> ★ ( )	<b>[Motoring torque lim]</b> Torque limitation in motor mode, as a % or in 0.1% increments of the rated torque in accordance with the <b>[Torque increment] (intP)</b> parameter, page <a href="#">228</a> . See page <a href="#">228</a> .	0 to 300%	100%

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; SET-

Code	Name / Description	Adjustment range	Factory setting
<b>TLIG</b> ★ ( )	<b>[Gen. torque lim]</b> Torque limitation in generator mode, as a % or in 0.1% increments of the rated torque in accordance with the <b>[Torque increment] (ITP)</b> parameter, page 228. See page 228.	0 to 300%	100%
<b>TrH</b> ★ ( )	<b>[Traverse freq. high]</b> Traverse high. See page 256.	0 to 10 Hz	4 Hz
<b>TrL</b> ★ ( )	<b>[Traverse freq. low]</b> Traverse low. See page 256.	0 to 10 Hz	4 Hz
<b>QSH</b> ★ ( )	<b>[Quick step High]</b> Quick step high. See page 256.	0 to <b>[Traverse freq. high] (TrH)</b>	0 Hz
<b>QSL</b> ★ ( )	<b>[Quick step Low]</b> Quick step low. See page 256.	0 to <b>[Traverse freq. low] (TrL)</b>	0 Hz
<b>CTd</b> ( )	<b>[Current threshold]</b> Current threshold for <b>[I attained] (CTA)</b> function assigned to a relay or a logic output (see page 146). See page 267.	0 to 1.5 In (1)	In (1)
<b>TEH</b> ( )	<b>[High torque thd.]</b> High torque threshold for <b>[High tq. att.] (TEHA)</b> function assigned to a relay or a logic output (see page 146), as a % of the rated motor torque. See page 267.	-300% to +300%	100%
<b>TEL</b> ( )	<b>[Low torque thd.]</b> Low torque threshold for <b>[Low tq. att.] (TELA)</b> function assigned to a relay or a logic output (see page 146), as a % of the rated motor torque. See page 267.	-300% to +300%	50%
<b>F9L</b> ★	<b>[Pulse warning thd.]</b> Speed threshold measured by the <b>[FREQUENCY METER] (F9F -)</b> function, page 280, assigned to a relay or a logic output (see page 146). See page 267.	0 Hz to 20,000 kHz	0 Hz
<b>FEd</b> ( )	<b>[Freq. threshold]</b> Motor frequency threshold for <b>[Freq.Th.att.] (FEA)</b> function assigned to a relay or a logic output (see page 146), or used by the <b>[PARAM. SET SWITCHING] (PLP -)</b> function, page 243. See page 267.	0.0 to 599 Hz	HSP
<b>F2d</b> ( )	<b>[Freq. threshold 2]</b> Motor frequency threshold for <b>[Freq.th.2 attained] (F2A)</b> function assigned to a relay or a logic output (see page 146), or used by the <b>[PARAM. SET SWITCHING] (PLP -)</b> function, page 243. See page 267.	0.0 to 599 Hz	HSP
<b>FFt</b> ★ ( )	<b>[Freewheel stop Thd]</b> Speed threshold below which the motor will switch to freewheel stop. This parameter supports switching from a ramp stop or a fast stop to a freewheel stop below a low speed threshold. It can be accessed if <b>[Type of stop] (Stt)</b> is set to <b>[Fast stop] (FSt)</b> or <b>[Ramp stop] (rRP)</b> and if <b>[Brake assignment] (BLC)</b> and <b>[Auto DC injection] (ADIC)</b> are not configured. See page 182.	0.2 to 599 Hz	0.2 Hz
<b>TEd</b> ( )	<b>[Motor therm. level]</b> Threshold for motor thermal alarm (logic output or relay). See page 269.	0 to 118%	100%
<b>JPF</b> ( )	<b>[Skip Frequency]</b> Skip frequency. This parameter helps to prevent prolonged operation within an adjustable range around the regulated frequency. This function can be used to help to prevent a speed, which would cause resonance, being reached. Setting the function to 0 renders it inactive. See page 192.	0 to 599 Hz	0 Hz

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; SET-

Code	Name / Description	Adjustment range	Factory setting
<b>J F 2</b> ( )	<b>[Skip Frequency 2]</b> 2nd skip frequency. This parameter helps to prevent prolonged operation within an adjustable range around the regulated frequency. This function can be used to help to prevent a speed, which would cause resonance, being reached. Setting the function to 0 renders it inactive. See page <a href="#">192</a> .	0 to 599 Hz	0 Hz
<b>J F 3</b> ( )	<b>[3rd Skip Frequency]</b> 3rd skip frequency. This parameter helps to prevent prolonged operation within an adjustable range around the regulated frequency. This function can be used to help to prevent a speed, which would cause resonance, being reached. Setting the function to 0 renders it inactive. See page <a href="#">192</a> .	0 to 599 Hz	0 Hz
<b>J F H</b> ★ ( )	<b>[Skip.Freq.Hysteresis]</b> Parameter visible if at least one skip frequency <b>[Skip Frequency]</b> ( <b>J P F</b> ), <b>[Skip Frequency 2]</b> ( <b>J F 2</b> ) or <b>[3rd Skip Frequency]</b> ( <b>J F 3</b> ) is different from 0. Skip frequency range: between ( <b>J P F</b> - <b>J F H</b> ) and ( <b>J P F</b> + <b>J F H</b> ) for example. This adjustment is common to the 3 frequencies ( <b>J P F</b> , <b>J F 2</b> , <b>J F 3</b> ). See page <a href="#">192</a> .	0.1 to 10 Hz	1 Hz
<b>L u n</b> ★ ( )	<b>[Unld.Thr.Nom.Speed]</b> Underload threshold at rated motor frequency ( <b>[Rated motor freq.]</b> ( <b>F r 5</b> ) page <a href="#">95</a> ), as a % of the rated motor torque. Visible only if <b>[Unld T. Del. Detect]</b> ( <b>u L t</b> ) page <a href="#">284</a> is not set to 0. See page <a href="#">284</a> .	20 to 100% of <b>[Rated mot. current]</b> ( <b>n C r</b> )	60%
<b>L u L</b> ★ ( )	<b>[Unld.Thr.0.Speed]</b> Underload threshold at zero frequency, as a % of the rated motor torque. Visible only if <b>[Unld T. Del. Detect]</b> ( <b>u L t</b> ) page <a href="#">284</a> is not set to 0. See page <a href="#">284</a> .	0 to <b>[Unld.Thr.Nom.Speed]</b> ( <b>L u n</b> )	0%
<b>r n u d</b> ★ ( )	<b>[Unld. Freq. Thr. Det.]</b> Underload detection minimum frequency threshold. See page <a href="#">284</a> .	0 to 599 Hz	0 Hz
<b>S r b</b> ★ ( )	<b>[Hysteresis Freq.Att.]</b> Maximum deviation between the frequency reference and the motor frequency, which defines steady state operation. See page <a href="#">285</a> .	0.3 to 599 Hz	0.3 Hz
<b>F t u</b> ★ ( )	<b>[Underload T.B.Rest.]</b> Minimum time permitted between an underload being detected and any automatic restart. In order for an automatic restart to be possible, the value of <b>[Max. restart time]</b> ( <b>t R r</b> ) page <a href="#">266</a> must exceed that of this parameter by at least one minute. See page <a href="#">285</a> .	0 to 6 min	0 min
<b>L o C</b> ★ ( )	<b>[Ovld Detection Thr.]</b> Overload detection threshold, as a % of the rated motor current <b>[Rated mot. current]</b> ( <b>n C r</b> ). This value must be less than the limit current in order for the function to work. See page <a href="#">286</a> . Visible only if <b>[Ovld Time Detect.]</b> ( <b>t o L</b> ) is not set to 0. This parameter is used to detect an "application overload". This is not a motor or drive thermal overload.	70% to 150% of <b>[Rated mot. current]</b> ( <b>n C r</b> )	110%
<b>F t o</b> ★ ( )	<b>[Overload T.B.Rest.]</b> Minimum time permitted between an overload being detected and any automatic restart. In order for an automatic restart to be possible, the value of <b>[Max. restart time]</b> ( <b>t R r</b> ) page <a href="#">266</a> must exceed that of this parameter by at least one minute. See page <a href="#">286</a> .	0 to 6 min	0 min
<b>L b C</b> ★ ( )	<b>[Load correction]</b> Rated correction in Hz. See <b>[Load correction]</b> ( <b>L b C</b> ) page <a href="#">130</a> .	0 to 599 Hz	0 Hz

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > SET-

Code	Name / Description	Adjustment range	Factory setting
<b>FFn</b>	<p><b>[Fan Mode]</b></p> <p>If <b>[Fan Mode]</b> (<b>FFn</b>) is set to <b>[Never]</b> (<b>SEp</b>), the fan of the drive is disabled. For ATV320●●●●W(S), this parameter is forced to <b>[Always]</b> (<b>run</b>).</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p><b>NOTICE</b></p> <p><b>OVERHEATING</b></p> <p>Verify that the ambient temperature does not exceed 40 °C (104° F) if the fan is disabled. <b>Failure to follow these instructions can result in equipment damage.</b></p> </div> <p><b>SEd</b> <b>[Standard]</b> (<b>SEd</b>): The fan starts and stops automatically according to the drive thermal state <b>run</b> <b>[Always]</b> (<b>run</b>): The fan is always activated <b>SEp</b> <b>[Never]</b> (<b>SEp</b>): The fan is disabled</p>		<b>[Standard]</b> ( <b>SEd</b> ) or <b>[Always]</b> ( <b>run</b> ) according to the drive.
<b>SDS</b>	<p><b>[Scale factor display]</b></p> <p>Used to display a value in proportion to the output frequency <b>[Output frequency]</b> (<b>rFr</b>): the machine speed, the motor speed, etc.</p> <p>The display will show</p> $[\text{Cust. output value}] (\text{SPd3}) = \frac{[\text{Scale factor display}] (\text{SDS}) \times [\text{Output frequency}] (\text{rFr})}{1000} \text{ to 2 decimal places}$ <ul style="list-style-type: none"> <li>If <b>[Scale factor display]</b> (<b>SDS</b>) ≤ 1, <b>[Cust. output value]</b> (<b>SPd1</b>) is displayed (possible definition = 0.01)</li> <li>If 1 &lt; <b>[Scale factor display]</b> (<b>SDS</b>) ≤ 10, <b>[Cust. output value]</b> (<b>SPd2</b>) is displayed (possible definition = 0.1)</li> <li>If <b>[Scale factor display]</b> (<b>SDS</b>) &gt; 10, <b>[Cust. output value]</b> (<b>SPd3</b>) is displayed (possible definition = 1)</li> <li>If <b>[Scale factor display]</b> (<b>SDS</b>) &gt; 10 and <b>[Scale factor display]</b> (<b>SDS</b>) × <b>[Output frequency]</b> (<b>rFr</b>) &gt; 9,999:</li> </ul> <p>example: for 24,223, display will show 24.22</p> <ul style="list-style-type: none"> <li>- If <b>[Scale factor display]</b> (<b>SDS</b>) &gt; 10 and <b>[Scale factor display]</b> (<b>SDS</b>) × <b>[Output frequency]</b> (<b>rFr</b>) &gt; 65,535, display locked at 65.54</li> </ul> <p>Example: Display motor speed for 4-pole motor, 1,500 rpm at 50 Hz (synchronous speed): <b>[Scale factor display]</b> (<b>SDS</b>) = 30 <b>[Cust. output value]</b> (<b>SPd3</b>) = 1,500 at <b>[Output frequency]</b> (<b>rFr</b>) = 50 Hz</p>	0.1 to 200	30

(1) In corresponds to the rated drive current indicated in the Installation manual or on the drive nameplate.

(2) If a graphic display terminal is not in use, values greater than 9,999 will be displayed on the 4-digit display with a period mark after the thousand digit, example: 15.65 for 15,650.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.

**Motor control**

The parameters in the **[MOTOR CONTROL]** (*d r C -*) menu can only be modified when the drive is stopped and no run command is present, with the following exceptions:

- **[Auto tuning]** (*t u n*) page 121, which may cause the motor to start up.
- Parameters containing the sign  in the code column, which can be modified with the drive running or stopped.

**Note:** We recommend to perform auto-tuning if one of the following parameters are modified from their factory setting.

** WARNING**

**LOSS OF CONTROL**

- Fully read and understand the manual of the connected motor.
- Verify that all motor parameters are correctly set by referring to the nameplate and the manual of the connected motor.
- If you modify the value of one or more motor parameters after having performed autotuning, the value of **[Tune Selection]** *S t u n* is reset to **[Default]** and you must re-perform autotuning.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

Code	Name / Description	Adjustment range	Factory setting
<i>F u L L</i>	<b>[FULL]</b> (continued)		
<i>d r C -</i>	<b>[MOTOR CONTROL]</b>		
<i>b F r</i>	<b>[Standard mot. freq]</b>		<b>[50 Hz IEC]</b> ( <i>S D</i> )
	This parameter modifies the presets of the following parameters: <b>[High speed]</b> ( <i>H S P</i> ) page 96, <b>[Freq. threshold]</b> ( <i>F t d</i> ) page 110, <b>[Rated motor volt.]</b> ( <i>u n S</i> ), <b>[Rated motor freq.]</b> ( <i>F r S</i> ) and <b>[Max frequency]</b> ( <i>t F r</i> ). <b>Note:</b> Modifying this parameter resets the motor tune parameters and, <b>[Tune Selection]</b> ( <i>S t u n</i> ) is reset to <b>[Default]</b> ( <i>t A b</i> ). Autotuning will need to be performed again.		
<i>S D</i>	<b>[50 Hz IEC]</b> ( <i>S D</i> ): IEC		
<i>6 D</i>	<b>[60 Hz NEMA]</b> ( <i>6 D</i> ): NEMA		
<i>t F r</i>	<b>[Max frequency]</b>	10 to 599 Hz	60 Hz
	The factory setting is 60 Hz, or preset to 72 Hz if <b>[Standard mot. freq]</b> ( <i>b F r</i> ) is set to 60 Hz. The maximum value is limited by the following conditions: It must not exceed 10 times the value of <b>[Rated motor freq.]</b> ( <i>F r S</i> ). To help prevent <b>[Overspeed]</b> ( <i>S o F</i> ) error, it is recommended to have <b>[Max Frequency]</b> ( <i>t F r</i> ) equal to or higher than 110% of <b>[High Speed]</b> ( <i>H S P</i> ).		

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > DRC-

Code	Name / Description	Adjustment range	Factory setting
<b>U E E</b>	<p><b>[Motor control type]</b></p> <p><b>Note:</b> Select law before entering parameter values.  <b>Note:</b> Modifying this parameter resets the motor tune parameters and, <b>[Tune Selection]</b> (<b>U E n</b>) is reset to <b>[Default]</b> (<b>E R b</b>). Autotuning will need to be performed again.</p>		<b>[Standard]</b> ( <b>U E d</b> )
<b>U U C</b>	<p><b>[SVC V]</b> (<b>U U C</b>): Sensorless vector control with internal speed loop based on voltage feedback calculation. For applications needing high performance during starting or operation.</p>		
<b>U E d</b>	<p><b>[Standard]</b> (<b>U E d</b>): Standard motor law. For simple applications that do not require high performance. Simple motor control law keeping a constant Voltage Frequency ratio, with a possible adjustment of the curve bottom. This law is generally used for motors connected in parallel. Some specific applications with motors in parallel and high performance levels may require <b>[SVC V]</b> (<b>U U C</b>).</p> <div style="text-align: center;"> </div> <p><b>Note:</b> U0 is the result of an internal calculation based on motor parameters and multiplied by UFr (%). U0 can be adjusted by modifying UFr value.</p>		
<b>U F 5</b>	<p><b>[V/F 5pts]</b> (<b>U F 5</b>): 5-segment V/F profile: As <b>[Standard]</b> (<b>U E d</b>) profile but also supports the avoidance of resonance (saturation).</p> <div style="text-align: center;"> </div> <p>The profile is defined by the values of parameters UnS, FrS, U0 to U5 and F1 to F5.</p> <p><math>FrS &gt; F5 &gt; F4 &gt; F3 &gt; F2 &gt; F1</math></p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>- U0 is the result of an internal calculation based on motor parameters and multiplied by UFr (%). U0 can be adjusted by modifying UFr value.</li> <li>- You must respect the constraint on the order of F1, F2, F3, F4, F5 and FrS otherwise an <b>[Invalid config.]</b> (<b>E F i</b>) error is triggered.</li> </ul>		
<b>U Y n</b>	<p><b>[Sync. mot.]</b> (<b>U Y n</b>): For synchronous permanent magnet motors with sinusoidal electromotive force (EMF) only. This selection makes the asynchronous motor parameters inaccessible, and the synchronous motor parameters accessible.</p>		
<b>U F 9</b>	<p><b>[V/F Quad.]</b> (<b>U F 9</b>): Variable torque. For pump and fan applications.</p>		
<b>n L d</b>	<p><b>[Energy Sav.]</b> (<b>n L d</b>): Energy saving. For applications that do not require high dynamics.</p>		

**Asynchronous motor parameters**

Code	Name / Description	Adjustment range	Factory setting
<b>ASY -</b>	<b>[ASYNC. MOTOR]</b> Only visible if <b>[Motor control type]</b> (C E E) page 114 is not set to <b>[Sync. mot.]</b> (S Y n).		
<b>n P r</b>	<b>[Rated motor power]</b> This parameter cannot be accessed if <b>[Motor control type]</b> (C E E) page 114 is set to <b>[Sync. mot.]</b> (S Y n). Rated motor power given on the nameplate, in kW if <b>[Standard mot. freq]</b> (b F r) is set to <b>[50Hz IEC]</b> (S D), in HP if <b>[Standard mot. freq]</b> (b F r) is set to <b>[60Hz NEMA]</b> (E D).  <b>Note:</b> Modifying this parameter resets the motor tune parameters and, <b>[Tune Selection]</b> (S E u n) is reset to <b>[Default]</b> (E A b). Autotuning will need to be performed again.	According to drive rating	According to drive rating
<b>C o S</b>	<b>[Motor 1 Cosinus Phi]</b> Nominal motor cos phi. This parameter can be accessed if <b>[Motor param choice]</b> (n P C) is set to <b>[Mot Cos]</b> (C o S).  <b>Note:</b> Modifying this parameter resets the motor tune parameters and, <b>[Tune Selection]</b> (S E u n) is reset to <b>[Default]</b> (E A b). Autotuning will need to be performed again.	0.5 to 1	According to drive rating
<b>u n S</b>	<b>[Rated motor volt.]</b> This parameter cannot be accessed if <b>[Motor control type]</b> (C E E) page 114 is set to <b>[Sync. mot.]</b> (S Y n). Rated motor voltage given on the nameplate.  <b>Note:</b> Modifying this parameter resets the motor tune parameters and, <b>[Tune Selection]</b> (S E u n) is reset to <b>[Default]</b> (E A b). Autotuning will need to be performed again.	100 to 480 V	According to drive rating and <b>[Standard mot. freq]</b> (b F r)
<b>n C r</b>	<b>[Rated mot. current]</b> This parameter cannot be accessed if <b>[Motor control type]</b> (C E E) page 114 is set to <b>[Sync. mot.]</b> (S Y n). Rated motor current given on the nameplate.  <b>Note:</b> Modifying this parameter resets the motor tune parameters and, <b>[Tune Selection]</b> (S E u n) is reset to <b>[Default]</b> (E A b). Autotuning will need to be performed again.	0.25 to 1.5 I <sub>n</sub> (1)	According to drive rating and <b>[Standard mot. freq]</b> (b F r)
<b>F r S</b>	<b>[Rated motor freq.]</b> This parameter cannot be accessed if <b>[Motor control type]</b> (C E E) page 114 is set to <b>[Sync. mot.]</b> (S Y n). Rated motor frequency given on the nameplate. The factory setting is 50 Hz, or preset to 60 Hz if <b>[Standard mot. freq]</b> (b F r) is set to 60 Hz.  <b>Note:</b> Modifying this parameter resets the motor tune parameters and, <b>[Tune Selection]</b> (S E u n) is reset to <b>[Default]</b> (E A b). Autotuning will need to be performed again.	10 to 800 Hz	50 Hz
<b>n S P</b>	<b>[Rated motor speed]</b> This parameter cannot be accessed if <b>[Motor control type]</b> (C E E) page 114 is set to <b>[Sync. mot.]</b> (S Y n). 0 to 9,999 rpm then 10.00 to 65.53 krpm on the integrated display terminal. If, rather than the rated speed, the nameplate indicates the synchronous speed and the slip in Hz or as a %, calculate the rated speed as follows:  Nominal speed = Synchronous speed x $\frac{100 - \text{slip as a \%}}{100}$ or Nominal speed = Synchronous speed x $\frac{50 - \text{slip in Hz}}{50}$ (50 Hz motors) or Nominal speed = Synchronous speed x $\frac{60 - \text{slip in Hz}}{60}$ (60 Hz motors).  <b>Note:</b> Modifying this parameter resets the motor tune parameters and, <b>[Tune Selection]</b> (S E u n) is reset to <b>[Default]</b> (E A b). Autotuning will need to be performed again.	0 to 65,535 rpm	According to drive rating

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; DRC- &gt; ASY-

Code	Name / Description	Adjustment range	Factory setting
<b>Auto tuning</b>			[No] (no)
 <b>WARNING</b> <b>LOSS OF CONTROL</b> <ul style="list-style-type: none"> <li>If you modify the value of one or more motor parameters after having performed autotuning, the value of <b>[Tune selection] Setun</b> is reset to <b>[Default] EAb</b> and you must re-perform autotuning.  <b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></li> </ul>			
	 <b>WARNING</b> <b>UNEXPECTED MOVEMENT</b> Autotuning moves the motor in order to tune the control loops. <ul style="list-style-type: none"> <li>Only start the system if there are no persons or obstructions in the zone of operation.  <b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></li> </ul> <p>During autotuning, noise development and oscillations of the system are normal.</p> <ul style="list-style-type: none"> <li>- Auto-tuning is only performed if no stop command has been activated. If a "freewheel stop" or "fast stop" function has been assigned to a logic input, this input must be set to 1 (active at 0).</li> <li>- Auto-tuning takes priority over any run or prefluxing commands, which will be taken into account after the auto-tuning sequence.</li> <li>- If auto-tuning detects a fault, the drive displays <b>[No action] (no)</b> and, depending on the configuration of <b>[Autotune fault mgt] (EnL)</b> page 282, may switch to <b>[Auto-tuning] (EnF)</b> fault mode.</li> <li>- Auto-tuning may last for 1 to 2 seconds. Do not interrupt the process. Wait for the display to change to <b>[No action] (no)</b>.</li> </ul> <p><b>Note:</b> Motor thermal state has a big influence on tune result. Make the tune with the motor stopped and cold. To redo a tune of the motor, wait that it is completely stopped and cold. Set first <b>[Auto tuning] (Auto)</b> to <b>[Erase tune] (ELr)</b>, then redo the motor tuning. The use of the motor tuning without doing a <b>[Erase tune] (ELr)</b> first is used to get the thermal state estimation of the motor. In any case, the motor has to be stopped before performing a tune operation. Cable length has an influence on the Tune result. If the cabling is modified, it is necessary to redo the tune operation.</p> <p><b>no</b> <b>[No action] (no)</b>: Auto-tuning not in progress  <b>YES</b> <b>[Do tune] (YES)</b>: Auto-tuning is performed immediately if possible, then the parameter automatically changes to <b>[No action] (no)</b>. If the drive state does not allow the tune operation immediately, the parameter changes to <b>[No] (no)</b> and the operation must be done again.  <b>ELr</b> <b>[Erase tune] (ELr)</b>: The motor parameters measured by the auto-tuning function are reseted. The default motor parameters values are used to control the motor. <b>[Auto tuning status] (AutS)</b> is set to <b>[Not done] (EAb)</b>.</p>		
<b>Auto tuning state</b>			[Not done] (EAb)
	(for information only, cannot be modified) This parameter is not saved at drive power off. It shows the Autotuning status since last power on.		
<b>EAb</b> <b>PEnd</b> <b>PrOG</b> <b>FRIL</b> <b>done</b>	<b>[Not done] (EAb)</b> : Autotune is not done <b>[Pending] (PEnd)</b> : Autotune has been requested but not yet performed <b>[In Progress] (PrOG)</b> : Autotune is in progress <b>[Failed] (FRIL)</b> : Autotune has detected a fault <b>[Done] (done)</b> : The motor parameters measured by the auto-tuning function are used to control the motor		
<b>Setun</b>			[Default] (EAb)
	(for information only, cannot be modified) <b>EAb</b> <b>[Default] (EAb)</b> : The default values are used to control the motor <b>NEAS</b> <b>[Measure] (NEAS)</b> : The values measured by the auto-tuning function are used to control the motor <b>cus</b> <b>[Custom] (cus)</b> : The values set manually are used to control the motor <b>Note:</b> Tune of the motor will increase significantly the performances.		

Code	Name / Description	Adjustment range	Factory setting
<p><b>TUNU</b></p> <p><b>no</b> <b>EN</b> <b>CE</b></p>	<p><b>[Auto tuning usage]</b></p> <p>On some application, such as hoisting application, that requires high torque at low speed, the temperature of the motor has a significant influence on the behavior and the capability to maintain the optimization of the performance resulting from the autotuning. In such case, setting the parameter <b>[Autotuning Usage] TUNU</b> to <b>[Therm mot] TM</b> helps to compensate the stator resistance according to the thermal state of the motor.</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p><b>⚠ WARNING</b></p> <p><b>LOSS OF CONTROL</b></p> <ul style="list-style-type: none"> <li>Set this parameter to <b>[Therm mot] EN</b> on hoisting application.</li> <li>For any setting of this parameter, perform a comprehensive commissioning test to verify correct operation of the application under maximum load and motor temperature conditions.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div> <p>This parameter shows the way used to modify the motor parameters according to its estimated thermal state.</p> <p><b>no</b> <b>[No] (no)</b>: No thermal state estimation  <b>EN</b> <b>[Therm Mot] (EN)</b>: Statoric thermal state estimation based on nominal current and current consumed by the motor  <b>CE</b> <b>[Cold tun] (CE)</b>: Statoric thermal state estimation based on statoric resistance measured at the first cold tune and tune done at each power up  <b>Note</b>: An autotuning must be performed before setting <b>[Auto tuning usage] (TUNU)</b> to <b>[Cold tun] (CE)</b> to get the references values of a cold tune.</p>		<p><b>[Therm Mot] (EN)</b></p>
<p><b>Aut</b></p> <p><b>( )</b></p> <p><b>⌚ 2 s</b></p> <p><b>no</b> <b>YES</b> <b>ONE</b></p>	<p><b>[Automatic autotune]</b></p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p><b>⚠ WARNING</b></p> <p><b>UNEXPECTED MOVEMENT</b></p> <p>If this function is activated, autotuning is performed each time the drive is switched on.</p> <ul style="list-style-type: none"> <li>Verify that activating this function does not result in unsafe conditions.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div> <p>The motor must be stopped when switching on the drive.  <b>[Automatic autotune] (Aut)</b> is forced to <b>[Yes] (YES)</b> if <b>[Auto tuning usage] (TUNU)</b> is set to <b>[Cold tun] (CE)</b>. The value of motor statoric resistance measured during the tune is used to estimate the thermal state of the motor at power up.</p> <p><b>no</b> <b>[No] (no)</b>: Function deactivated  <b>YES</b> <b>[Yes] (YES)</b>: A tune is automatically done at each power up  <b>ONE</b> <b>[One] (ONE)</b>: A tune is done at the first run order.</p>		<p><b>[No] (no)</b></p>
<p><b>FLU</b></p> <p><b>★</b></p> <p><b>( )</b></p> <p><b>(1)</b></p> <p><b>⌚ 2 s</b></p>	<p><b>[Motor fluxing]</b></p> <div style="background-color: black; color: white; padding: 5px; text-align: center;"> <p><b>⚡ ⚠ DANGER</b></p> <p><b>HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH</b></p> <p>If the parameter <b>[Motor fluxing] (FLU)</b> is set to <b>[Continuous] (FCE)</b>, fluxing is always active, even if the motor does not run.</p> <ul style="list-style-type: none"> <li>Verify that using this setting does not result in unsafe conditions.</li> </ul> <p><b>Failure to follow these instructions will result in death or serious injury.</b></p> </div> <div style="border: 1px solid black; padding: 5px; text-align: center; margin-top: 10px;"> <p><b>NOTICE</b></p> <p><b>OVERHEATING</b></p> <p>Verify that the connected motor is properly rated for the flux current to be applied.</p> <p><b>Failure to follow these instructions can result in equipment damage.</b></p> </div>		<p><b>[No] (Fno)</b></p>

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; DRC- &gt; ASY-

Code	Name / Description	Adjustment range	Factory setting
	<p>If <b>[Motor control type]</b> (C E E) page 114 is set to <b>[Sync. mot.]</b> (S Y n), the factory setting is replaced by <b>[Not cont.]</b> (F n C). In order to obtain rapid high torque on startup, magnetic flux needs to already have been established in the motor. In <b>[Continuous]</b> (F C E) mode, the drive automatically builds up flux when it is powered up. In <b>[Not cont.]</b> (F n C) mode, fluxing occurs when the motor starts up. The flux current is greater than <b>[Rated mot. current]</b> (n C r) (configured rated motor current) when the flux is established and is then adjusted to the motor magnetizing current.</p> <p><b>F n C</b> <b>[Not cont.]</b> (F n C): Non-continuous mode  <b>F C E</b> <b>[Continuous]</b> (F C E): Continuous mode. This option is not possible if <b>[Auto DC injection]</b> (A d C) page 185 is <b>[Yes]</b> (Y E S) or if <b>[Type of stop]</b> (S E E) page 182 is <b>[Freewheel]</b> (n S E).  <b>F n o</b> <b>[No]</b> (F n o): Function inactive. This option is not possible if <b>[Brake assignment]</b> (b L E) page 206 is not <b>[No]</b> (n o).</p> <p>If <b>[Motor control type]</b> (C E E) page 114 is set to <b>[Sync. mot.]</b> (S Y n), the <b>[Motor fluxing]</b> (F L u) parameter causes the alignment of the rotor and not the fluxing.  If <b>[Brake assignment]</b> (b L E) page 206 is not <b>[No]</b> (n o), the <b>[Motor fluxing]</b> (F L u) parameter has no effect.</p>		
<b>Π P C</b> ★	<b>[Motor param choice]</b>		<b>[Mot Power]</b> (n P r)
	<b>Note:</b> Modifying this parameter resets the motor tune parameters and, <b>[Tune Selection]</b> (S E u n) is reset to <b>[Default]</b> (E A b). Autotuning will need to be performed again.		
<b>n P r</b> <b>C o S</b>	<b>[Mot Power]</b> (n P r) <b>[Mot Cos]</b> (C o S)		

(1) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.

## Asynchronous motor parameters: Expert mode

Code	Name / Description	Adjustment range	Factory setting
<b>ASY -</b>	<b>[ASYNC. MOTOR]</b>		
<b>r s R</b> ★ (1)	<b>[Cust stator resist.]</b> Cold state stator resistance (per winding), modifiable value. The factory setting is replaced by the result of the auto-tuning operation, if it has been performed.	0 to 65,535 mOhm	0 mOhm
<b>L f R</b> ★	<b>[Lfw]</b> Cold state leakage inductance, modifiable value. The factory setting is replaced by the result of the auto-tuning operation, if it has been performed.	0 to 655.35 mH	0 mH
<b>i d R</b> ★	<b>[Idw]</b> Customer adjusted magnetizing current. The factory setting is replaced by the result of the auto-tuning operation, if it has been performed.	0 to 6,553.5 A	0 A
<b>t r R</b> ★	<b>[Cust. rotor t const.]</b> Customer adjusted rotor time constant. The factory setting is replaced by the result of the auto-tuning operation, if it has been performed.	0 to 65,535 ms	0 ms

(1) On the integrated display unit: 0 to 9,999 then 10.00 to 65.53 (10,000 to 65,535).



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; DRC- &gt; SYN-

## Synchronous motor parameters

These parameters can be accessed if **[Motor control type] (C L E)** page [114](#) is set to **[Sync. mot.] (S Y N)**. In this case, the asynchronous motor parameters cannot be accessed.

Once the drive is chosen:

### 1- Enter the motor nameplate.

### 2 - Perform the tune.

- Do an **[Auto tuning] (E U N)**
  - Check the state of the synchronous motor saliency (See page [121](#).)
- If **[Saliency mot. state] (S P O E)** displays **[Med salient] (M L S)** or **[High salient] (H L S)**
- follow the procedure below "3 - Improve the tune result" and
  - follow the the procedure below "4 - Adjust PHS"
- Or if **[Saliency mot. state] (S P O E)** displays **[Low salient] (L L S)**
- follow the the procedure below "4 - Adjust PHS"

### 3 - Improve the tune results.

## NOTICE

### OVERHEATING

- Verify that the motor is properly rated for the maximum current to be applied to the motor.
- Consider the duty cycle of the motor and all factors of your application including derating requirements in determining the current limit.

**Failure to follow these instructions can result in equipment damage.**

- Set **[PSI align curr. max] (P L C r)** conforming to the maximum motor current. The maximum value of **[PSI align curr. max] (P L C r)** is limited by **[Current Limitation] (C L i)**. Without information set **[PSI align curr. max] (P L C r)** to **[Auto] (A U T O)** (see page [124](#))
- Do a second **(E U N)** after the **(P L C r)** modification.

### 4 - Adjust PHS.

Adjust **[Syn. EMF constant] (P H S)** to have optimal behavior (See page [124](#).)

- Start the motor at minimal stable frequency available on the machine (without load).
- Check and Note the **[% error EMF sync] (r d R E)** value. (See page [125](#))
  - If the **[% error EMF sync] (r d R E)** value is lower than 0%, then **[Syn. EMF constant] (P H S)** may be increased.
  - If the **[% error EMF sync] (r d R E)** value is upper than 0%, then **[Syn. EMF constant] (P H S)** may be reduced.

**[% error EMF sync] (r d R E)** value should be closed to 0%.

- Stop the motor for modify **P H S** in accordance with the value of the **r d R E** (previously Noted).

### Advices:

The drive must be chosen to have enough current according to the need of behavior, but not too much, to have enough accuracy in the current measurement, especially with the high frequency signal injection (see **[HF inj. activation] (H F i)** page [124](#)).

Performances may be higher on high saliency motors by activating high frequency injection function (see **[HF inj. activation] (H F i)** page [124](#)).

Code	Name / Description	Adjustment range	Factory setting
<i>d r C -</i>	<b>[MOTOR CONTROL] (continued)</b>		
<i>S Y n -</i>	<b>[SYNCHRONOUS MOTOR]</b>		
<i>n C r S</i> ★	<b>[Nominal I sync.]</b> Rated synchronous motor current given on the nameplate. <b>Note:</b> Modifying this parameter resets the motor tune parameters and, <b>[Tune Selection] (S t u n)</b> is reset to <b>[Default] (t R b)</b> . Autotuning will need to be performed again.	0.25 to 1.5 In (1)	According to drive rating
<i>P P n S</i> ★	<b>[Pole pairs]</b> Number of pairs of poles on the synchronous motor. <b>Note:</b> Modifying this parameter resets the motor tune parameters and, <b>[Tune Selection] (S t u n)</b> is reset to <b>[Default] (t R b)</b> . Autotuning will need to be performed again.	1 to 50	According to drive rating
<i>n S P S</i> ★ (2)	<b>[Nom motor spdsync]</b> Rated motor speed given on the nameplate. <b>Note:</b> Modifying this parameter resets the motor tune parameters and, <b>[Tune Selection] (S t u n)</b> is reset to <b>[Default] (t R b)</b> . Autotuning will need to be performed again.	0 to 48,000 rpm	According to drive rating
<i>t q S</i> ★	<b>[Motor torque]</b> Rated motor torque given on the nameplate. <b>Note:</b> Modifying this parameter resets the motor tune parameters and, <b>[Tune Selection] (S t u n)</b> is reset to <b>[Default] (t R b)</b> . Autotuning will need to be performed again.	0.1 to 6,553.5 Nm	According to drive rating
<i>t u n</i> ⌚ 2 s	<b>[Auto tuning]</b>  <div style="text-align: center;"><b>⚠ WARNING</b></div> <b>UNEXPECTED MOVEMENT</b> Autotuning moves the motor in order to tune the control loops. • Only start the system if there are no persons or obstructions in the zone of operation. <b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b>		

**⚠ WARNING**

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > DRC- > SYN-

Code	Name / Description	Adjustment range	Factory setting
<b>£ u S</b>	<b>[Auto tuning state]</b> (for information only, cannot be modified) This parameter is not saved at drive power off. It shows the Autotuning status since last power on.		<b>[Not done] (£ R b)</b>
<b>£ R b</b> <b>P E n d</b> <b>P r o G</b> <b>F A i L</b> <b>d o n E</b>	<b>[Not done] (£ R b)</b> : Autotune is not done <b>[Pending] (P E n d)</b> : Autotune has been requested but not yet performed <b>[In Progress] (P r o G)</b> : Autotune is in progress <b>[Failed] (F A i L)</b> : Autotune has detected a fault <b>[Done] (d o n E)</b> : The motor parameters measured by the auto-tuning function are used to control the motor		
<b>S £ u n</b>	<b>[Tune selection]</b> (for information only, cannot be modified) <b>Note</b> : Tune of the motor will increase significantly the performances.		<b>[Default] (£ R b)</b>
<b>£ R b</b> <b>Π E R S</b> <b>£ u S</b>	<b>[Default] (£ R b)</b> : The default values are used to control the motor <b>[Measure] (Π E R S)</b> : The values measured by the auto-tuning function are used to control the motor <b>[Custom] (£ u S)</b> : The values set manually are used to control the motor		
<b>£ u n u</b>	<b>[Auto tuning usage]</b> This parameter shows the way used to modify the motor parameters according to its estimated thermal state.		<b>[Therm Mot] (£ Π)</b>
<b>n o</b> <b>£ Π</b> <b>£ £</b>	<b>[No] (n o)</b> : No thermal state estimation <b>[Therm Mot] (£ Π)</b> : Statoric thermal state estimation based on nominal current and current consumed by the motor <b>[Cold tun] (£ £)</b> : Statoric thermal state estimation based on statoric resistance measured at the first cold tune and tune done at each power up. <b>Note</b> : An autotuning must be performed before setting <b>[Auto tuning usage] (£ u n u)</b> to <b>[Cold tun] (£ £)</b> to get the references values of a cold tune.		
<b>R u £</b>	<b>[Automatic autotune]</b>		<b>[No] (n o)</b>
<b>( )</b>   2 s	<div style="border: 1px solid black; padding: 10px; text-align: center;"> <p><b>⚠ WARNING</b></p> <p><b>UNEXPECTED MOVEMENT</b></p> <p>If this function is activated, autotuning is performed each time the drive is switched on.</p> <ul style="list-style-type: none"> <li>Verify that activating this function does not result in unsafe conditions.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div> <p>The motor must be stopped when switching on the drive. <b>[Automatic autotune] (R u £)</b> is forced to <b>[Yes] (Y E S)</b> if <b>[Auto tuning usage] (£ u n u)</b> is set to <b>[Cold tun] (£ £)</b>. The value of motor statoric resistance measured during the tune is used to estimate the thermal state of the motor at power up.</p>		
<b>n o</b> <b>Y E S</b> <b>o n E</b>	<b>[No] (n o)</b> : Function deactivated <b>[Yes] (Y E S)</b> : A tune is automatically done at each power up <b>[One] (o n E)</b> : A tune is done at the first run order.		
<b>S Π o £</b>	<b>[Saliency mot. state]</b> (for information only, cannot be modified) Information on synchronous motor saliency. This parameter can be accessed if <b>[Tune selection] (S £ u n)</b> is set to <b>[Measure] (Π E R S)</b> . <b>Note</b> : In case of motor with low saliency, the standard control law is advised.		
<b>n o</b> <b>L L S</b> <b>Π L S</b> <b>H L S</b>	<b>[No] (n o)</b> : Tune not done <b>[Low salient] (L L S)</b> : Low saliency level (Recommended configuration: <b>[Angle setting type] (R S £)</b> = <b>[PSI align] (P S i)</b> or <b>[PSIO align] (P S i o)</b> and <b>[HF inj. activation] (H F i)</b> = <b>[No] (n o)</b> ). <b>[Med salient] (Π L S)</b> : Medium saliency level ( <b>[Angle setting type] (R S £)</b> = <b>[SPM align] (S P Π R)</b> is possible. <b>[HF inj. activation] (H F i)</b> = <b>[Yes] (Y E S)</b> could work). <b>[High salient] (H L S)</b> : High saliency level ( <b>[Angle setting type] (R S £)</b> = <b>[IPM align] (i P Π R)</b> is possible. <b>[HF inj. activation] (H F i)</b> = <b>[Yes] (Y E S)</b> is possible).		

Parameters described in this page can be accessed by: DRI- > CONF > FULL > DRC- > SYN-

Code	Name / Description	Adjustment range	Factory setting
<p><b>PSL</b></p> <p>★</p> <p>IPM</p> <p>SPM</p> <p>PSI</p> <p>PSIO</p> <p>no</p>	<p><b>[Angle setting type]</b></p> <p>Mode for measuring the phase-shift angle. Visible only if <b>[Motor control type]</b> (CLL) is set to <b>[Sync. mot.]</b> (SYN). <b>[PSI align]</b> (PSI) and <b>[PSIO align]</b> (PSIO) are working for all type of synchronous motors. <b>[SPM align]</b> (SPM) and <b>[IPM align]</b> (IPM) increase performances depending on the type of synchronous motor.</p> <p><b>[IPM align]</b> (IPM): Alignment for IPM motor. Alignment mode for Interior-buried Permanent Magnet motor (usually, this kind of motor has a high saliency level). It uses high frequency injection, which is less noisy than standard alignment mode.</p> <p><b>[SPM align]</b> (SPM): Alignment for SPM motor. Mode for Surface-mounted Permanent Magnet motor (usually, this kind of motor has a medium or low saliency level). It uses high frequency injection, which is less noisy than standard alignment mode.</p> <p><b>[PSI align]</b> (PSI): Pulse signal injection. Standard alignment mode by pulse signal injection.</p> <p><b>[PSIO align]</b> (PSIO): Pulse signal injection - Optimized. Standard optimized alignment mode by pulse signal injection. The phase shift angle measurement time is reduced after the first run order or tune operation, even if the drive has been turned off.</p> <p><b>[No align]</b> (no): No alignment</p>		<b>[PSIO align]</b> (PSIO)
<p>HF</p> <p>★</p> <p>no</p> <p>YES</p>	<p><b>[HF inj. activation]</b></p> <p>Activation of high frequency signal injection in RUN. This function allows to estimate the motor speed in a view to have torque at low speed without speed feedback.</p> <p><b>Note:</b> The more the saliency is high, the more the <b>[HF inj. activation]</b> (HF) function will be efficient. In order to ensure the performances, it could be necessary to adjust the speed loop parameters (<b>[K speed loop filter]</b> (SFL), <b>[Speed time integral]</b> (SIT) and <b>[Speed prop. gain]</b> (SPG), see page 126) and the speed estimation phase locked loop (Expert parameters <b>[HF pll bandwidth]</b> (SPB) and <b>[HF pll dump. factor]</b> (SPF), see page 124). High frequency injection is not efficient with low saliency motors (see <b>[Saliency mot. state]</b> (SPL) page 122). It is advised to have 4 kHz of pwm frequency (<b>[Switching freq.]</b> (SFR)). In case of instability with no load, it is advised to decrease <b>[Speed prop. gain]</b> (SPG) and <b>[HF pll bandwidth]</b> (SPB). Then, adjust the speed loop parameters to have the dynamic behavior and the PLL gains to have a good speed estimation at low speed. In case of instability with load, it could help to increase the <b>[Angle error Comp.]</b> (PEL) parameter (mainly for SPM motor).</p> <p><b>[No]</b> (no): Function deactivated</p> <p><b>[Yes]</b> (YES): High frequency injection is used for speed estimation</p>		<b>[No]</b> (no)

- (1) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.
- (2) On the integrated display unit: 0 to 9,999 then 10.00 to 65.53 (10,000 to 65,536).



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; DRC- &gt; SYN-

## Synchronous motor: Expert mode

Code	Name / Description	Adjustment range	Factory setting
<b>SYN -</b>	<b>[SYNCHRONOUS MOTOR]</b>		
<b>rSR5</b> ★ ( ) (1)	<b>[Cust. stator R syn]</b>  Cold state stator resistance (per winding). The factory setting is replaced by the result of the auto-tuning operation, if it has been performed. The value can be entered by the user, if he knows it.	0 to 65,535 mOhm	0 mOhm
<b>Ld5</b> ★	<b>[Autotune L d-axis]</b>  Axis "d" stator inductance in mH (per phase). On motors with smooth poles <b>[Autotune L d-axis] (Ld5) = [Autotune L q-axis] (Lq5) = Stator inductance L</b> . The factory setting is replaced by the result of the auto-tuning operation, if it has been performed.	0 to 655.35 mH	0 mH
<b>Lq5</b> ★	<b>[Autotune L q-axis]</b>  Axis "q" stator inductance in mH (per phase). On motors with smooth poles <b>[Autotune L d-axis] (Ld5) = [Autotune L q-axis] (Lq5) = Stator inductance L</b> . The factory setting is replaced by the result of the auto-tuning operation, if it has been performed.	0 to 655.35 mH	0 mH
<b>PHS</b> ★ (1)	<b>[Syn. EMF constant]</b>  Synchronous motor EMF constant, in mV per rpm (peak voltage per phase). PHS adjustment allows to reduce the current in operation without load.	0 to 6,553.5 mV/rpm	0 mV/rpm
<b>Frs5</b> ★ ( )	<b>[Nominal freq sync.]</b>  Nominal motor frequency for synchronous motor in Hz unit. Automatically updated according to <b>[Nom motor spdsync] (nSP5)</b> and <b>[Pole pairs] (PPn5)</b> data.  <b>Note:</b> Modifying this parameter resets the motor tune parameters and, <b>[Tune Selection] (Stun)</b> is reset to <b>[Default] (tAb)</b> . Autotuning will need to be performed again.	10 to 800 Hz	nSPS * PPnS / 60
<b>SPb</b> ★	<b>[HF pll bandwidth]</b>  Bandwidth of the stator frequency PII.	0 to 100 Hz	25 Hz
<b>SPF</b> ★	<b>[HF pll dump. factor]</b>  Dumping factor of the stator frequency PII.	0 to 200%	100%
<b>PEC</b> ★ <b>Rut0</b>	<b>[Angle error Comp.]</b>  Error compensation of the angle position in high frequency mode. It increases performances at low speed in generator and motor mode, particularly for SPM motors. <b>[Auto] (Rut0):</b> The drive takes a value equal to the rated slip of the motor, calculated using the drive parameters.	0 to 500%	0%
<b>Fri</b> ★	<b>[HF injection freq.]</b>  Frequency of the high frequency injection signal. It has an influence on the noise during angle shift measurement and speed estimation accuracy.	250 to 1,000 Hz	500 Hz
<b>Hir</b> ★	<b>[HF current level]</b>  Ratio for the current level of the high frequency injection signal. It has an influence on the noise during angle shift measurement and speed estimation accuracy.	0 to 200%	25%
<b>PIr</b> ★	<b>[PSI align curr. max]</b>  Current level in % of <b>[Nominal I sync.] (nCr5)</b> for <b>[PSI align] (P5i)</b> and <b>[PSIO align] (P5io)</b> angle shift measurement modes. This parameter has an impact on the inductor measurement. <b>[PSI align curr. max] (PIr)</b> is used for tune operation. This current must be equal or higher than the maximum current level of the application, otherwise instability may occur. If <b>[PSI align curr. max] (PIr)</b> is set to <b>[Auto] (Rut0)</b> , <b>[PSI align curr. max] (PIr) = 150%</b> of <b>[Nominal I sync.] (nCr5)</b> during the tune operation and 100% of <b>[Nominal I sync.] (nCr5)</b> during angle shift measurement in case of standard alignment ( <b>[PSI align] (P5i)</b> or <b>[PSIO align] (P5io)</b> ).	<b>[Auto] (Rut0)</b> to 300%	<b>[Auto] (Rut0)</b>
<b>iLr</b> ★	<b>[Injection level align]</b>  Current level in % of <b>[Nominal I sync.] (nCr5)</b> for high frequency phase-shift angle measurement IPMA type.	0 to 200%	50%

Parameters described in this page can be accessed by: DRI- > CONF > FULL > DRC- > SYN-

Code	Name / Description	Adjustment range	Factory setting
<i>S<sub>ir</sub></i> ★	<b>[Boost level align.]</b> Current level in % of <b>[Nominal I sync.]</b> ( <i>nCrS</i> ) for high frequency phase-shift angle measurement SPMA type.	0 to 200%	100%
<i>r dRE</i>	<b>[% error EMF sync]</b> Ratio D-Axis Current Use <i>r dRE</i> to adjust <b>[Syn. EMF constant]</b> ( <i>PHS</i> ), <i>r dRE</i> should be closed to 0. If the <b>[% error EMF sync]</b> ( <i>r dRE</i> ) value is lower than 0%, then <b>[Syn. EMF constant]</b> ( <i>PHS</i> ), may be increased. If the <b>[% error EMF sync]</b> ( <i>r dRE</i> ) value is upper than 0%, then <b>[Syn. EMF constant]</b> ( <i>PHS</i> ), may be reduced.	-3276.7 to 3275.8 %	-

(1) On the integrated display unit: 0 to 9,999 then 10.00 to 65.53 (10,000 to 65,536).



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; DRC-

Code	Name / Description	Adjustment range	Factory setting
<b>d r C -</b>	<b>[MOTOR CONTROL] (continued)</b>		
<b>S P G</b> ★ ( )	<b>[Speed prop. gain]</b> Speed loop proportional gain. Visible if <b>[Motor control type] (C E E)</b> is not set to <b>[Standard] (S E d)</b> , <b>[V/F 5pts] (u F 5)</b> or <b>[V/F Quad.] (u F 9)</b> .	0 to 1,000%	40%
<b>S P G u</b> ★ ( )	<b>[UF inertia comp.]</b> Inertia factor for following motor control laws. Visible if <b>[Motor control type] (C E E)</b> is set to <b>[Standard] (S E d)</b> , <b>[V/F 5pts] (u F 5)</b> or <b>[V/F Quad.] (u F 9)</b> .	0 to 1,000%	40%
<b>S i t</b> ★ ( )	<b>[Speed time integral]</b> Speed loop integral time constant. Visible if <b>[Motor control type] (C E E)</b> is not set to <b>[Standard] (S E d)</b> , <b>[V/F 5pts] (u F 5)</b> or <b>[V/F Quad.] (u F 9)</b> .	1 to 65,535 ms	63 ms
<b>S F C</b> ★ ( )	<b>[K speed loop filter]</b> Speed filter coefficient (0(IP) to 100(PI)).	0 to 100	65
<b>F F H</b> ★	<b>[Spd est. filter time]</b> Accessible in Expert mode only. Frequency to filter the estimated speed.	0 to 100 ms	6.4 ms
<b>C r t F</b> ★	<b>[Cur. ref. filter time]</b> Accessible in Expert mode only. Filter time of the current reference filter [of control law (if <b>[No] (n o)</b> : stator natural frequency)].	0 to 100 ms	3.2 ms
<b>u F r</b> ( )	<b>[IR compensation]</b> Used to optimize torque at very low speed, or to adapt to special cases (for example: for motors connected in parallel, decrease <b>[IR compensation] (u F r)</b> ). If there is insufficient torque at low speed, increase <b>[IR compensation] (u F r)</b> . A too high value can avoid the motor to start (locking) or change the current limiting mode.	0 to 200%	100%
<b>S L P</b> ★ ( )	<b>[Slip compensation]</b> This parameter cannot be accessed if <b>[Motor control type] (C E E)</b> is set to <b>[Sync. mot.] (S Y n)</b> . This parameter is written at 0% when <b>[Motor control type] (C E E)</b> is set to <b>[V/F Quad.] (u F 9)</b> . Adjusts the slip compensation around the value set by the rated motor speed. The speeds given on motor nameplates are not necessarily exact. If slip setting is lower than actual slip: The motor is not rotating at the correct speed in steady state, but at a speed lower than the reference. If slip setting is higher than actual slip: The motor is overcompensated and the speed is unstable.	0 to 300%	100%
<b>u I</b> ★	<b>[U1]</b> V/F profile setting. This parameter can be accessed if <b>[Motor control type] (C E E)</b> is set to <b>[V/F 5pts] (u F 5)</b> .	0 to 800 V according to rating	0 V
<b>F I</b> ★	<b>[F1]</b> V/F profile setting. This parameter can be accessed if <b>[Motor control type] (C E E)</b> is set to <b>[V/F 5pts] (u F 5)</b> .	0 to 599 Hz	0 Hz
<b>u 2</b> ★	<b>[U2]</b> V/F profile setting. This parameter can be accessed if <b>[Motor control type] (C E E)</b> is set to <b>[V/F 5pts] (u F 5)</b> .	0 to 800 V according to rating	0 V
<b>F 2</b> ★	<b>[F2]</b> V/F profile setting. This parameter can be accessed if <b>[Motor control type] (C E E)</b> is set to <b>[V/F 5pts] (u F 5)</b> .	0 to 599 Hz	0 Hz

Parameters described in this page can be accessed by: DRI- > CONF > FULL > DRC-

Code	Name / Description	Adjustment range	Factory setting
<span style="color: green;">U3</span> <span style="color: blue;">★</span>	<b>[U3]</b> V/F profile setting. This parameter can be accessed if <b>[Motor control type] (L L L)</b> is set to <b>[V/F 5pts] (U F 5)</b> .	0 to 800 V according to rating	0 V
<span style="color: green;">F3</span> <span style="color: blue;">★</span>	<b>[F3]</b> V/F profile setting. This parameter can be accessed if <b>[Motor control type] (L L L)</b> is set to <b>[V/F 5pts] (U F 5)</b> .	0 to 599 Hz	0 Hz
<span style="color: green;">U4</span> <span style="color: blue;">★</span>	<b>[U4]</b> V/F profile setting. This parameter can be accessed if <b>[Motor control type] (L L L)</b> is set to <b>[V/F 5pts] (U F 5)</b> .	0 to 800 V according to rating	0 V
<span style="color: green;">F4</span> <span style="color: blue;">★</span>	<b>[F4]</b> V/F profile setting. This parameter can be accessed if <b>[Motor control type] (L L L)</b> is set to <b>[V/F 5pts] (U F 5)</b> .	0 to 599 Hz	0 Hz
<span style="color: green;">U5</span> <span style="color: blue;">★</span>	<b>[U5]</b> V/F profile setting. This parameter can be accessed if <b>[Motor control type] (L L L)</b> is set to <b>[V/F 5pts] (U F 5)</b> .	0 to 800 V according to rating	0 V
<span style="color: green;">F5</span> <span style="color: blue;">★</span>	<b>[F5]</b> V/F profile setting. This parameter can be accessed if <b>[Motor control type] (L L L)</b> is set to <b>[V/F 5pts] (U F 5)</b> .	0 to 599 Hz	0 Hz
<span style="color: green;">CL</span> <span style="color: blue;">★</span> <span style="font-size: 1.2em;">()</span>	<b>[Current Limitation]</b>  <div style="border: 1px solid black; padding: 10px; text-align: center;"> <p><b>NOTICE</b></p> <p><b>OVERHEATING</b></p> <ul style="list-style-type: none"> <li>Verify that the motor is properly rated for the maximum current to be applied to the motor.</li> <li>Consider the duty cycle of the motor and all factors of your application including derating requirements in determining the current limit.</li> </ul> <p><b>Failure to follow these instructions can result in equipment damage.</b></p> </div> <p>First current limitation.  <b>Note:</b> If the setting is less than 0.25 In, the drive may lock in <b>[Output Phase Loss] (o P L)</b> fault mode if this has been enabled (see page 270). If it is less than the no-load motor current, the motor cannot run.</p>	0 to 1.5 In (1)	1.5 In (1)
<span style="color: green;">SFL</span> <span style="color: green;">HF1</span> <span style="color: green;">HF2</span>	<b>[Switch. freq type]</b> The motor switching frequency will be modified (reduced) when the internal temperature of the drive will be too high. <b>[SFR type 1] (HF 1):</b> Heating optimization Allows the system to adapt the switching frequency according to the motor frequency. <b>[SFR type 2] (HF 2):</b> Motor noise optimization (for high switching frequency) Allows the system to keep a constant chosen switching frequency <b>[Switching freq.] (S F r)</b> whatever the motor frequency <b>[Output frequency] (r F r)</b> . In the event of overheating, the drive automatically decreases the switching frequency. It is restored to its original value when the temperature returns to normal.		<b>[SFR type 1] (HF 1)</b>
<span style="color: green;">SFr</span> <span style="font-size: 1.2em;">()</span>	<b>[Switching freq.]</b>  <div style="border: 1px solid black; padding: 10px; text-align: center;"> <p><b>NOTICE</b></p> <p><b>DAMAGE TO THE DRIVE</b></p> <p>Verify that the switching frequency of the drive does not exceed 4 kHz if the EMC filter is disconnected for operation of the drive in an IT mains.</p> <p><b>Failure to follow these instructions can result in equipment damage.</b></p> </div> <p>This applies to the following drive versions: ATV320●●●M2●</p> <p>Switching frequency setting.                      Adjustment range: The maximum value is limited to 4 kHz if <b>[Motor surge limit] (S U L)</b> parameter page 128 is configured.  <b>Note:</b> In the event of excessive temperature rise, the drive will automatically reduce the switching frequency and reset it once the temperature returns to normal.                      In case of high speed motor, it is advised to increase the Pulse Width Modulation (PWM) frequency <b>[Switching freq.] (S F r)</b> at 8, 12 or 16 kHz.</p>	2 to 16 kHz	4 kHz

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > DRC-

Code	Name / Description	Adjustment range	Factory setting
<i>n r d</i>	<b>[Noise reduction]</b> Random frequency modulation helps to prevent any resonance, which may occur at a fixed frequency.		<b>[No]</b> ( <i>n o</i> )
<i>n o</i> <i>y e s</i>	<b>[No]</b> ( <i>n o</i> ): Fixed frequency <b>[Yes]</b> ( <i>y e s</i> ): Frequency with random modulation		
<i>b o R</i>	<b>[Boost activation]</b>		<b>[Dynamic]</b> ( <i>d y n a</i> )
<i>n o</i> <i>d y n a</i> <i>s t a t</i>	<b>[Inactive]</b> ( <i>n o</i> ): No boost <b>[Dynamic]</b> ( <i>d y n a</i> ): Dynamic boost <b>[Static]</b> ( <i>s t a t</i> ): Static boost		
<i>b o o</i>	<b>[Boost]</b> This parameter can be accessed if <b>[Boost activation]</b> ( <i>b o R</i> ) is not set to <b>[No]</b> ( <i>n o</i> ). Adjustment of the motor magnetizing current at low speed, as a % of the rated magnetizing current. This parameter is used to increase or reduce the time taken to establish the torque. It allows gradual adjustment up to the frequency set by <b>[Action Boost]</b> ( <i>F R b</i> ). Negative values apply particularly to tapered rotor motors.	-100 to 100%	0%
★			
<i>F R b</i>	<b>[Action Boost]</b> This parameter can be accessed if <b>[Boost activation]</b> ( <i>b o R</i> ) is not set to <b>[No]</b> ( <i>n o</i> ). Frequency above which the magnetizing current is no longer affected by <b>[Boost]</b> ( <i>b o o</i> ).	0 to 599 Hz	0 Hz
★			
<i>S u L</i>	<b>[Motor surge limit.]</b> This function limits motor overvoltages and is useful in the following applications: - NEMA motors - Japanese motors - Spindle motors - Rewound motors This parameter can remain set to <b>[No]</b> ( <i>n o</i> ) for 230/400 V motors used at 230 V, or if the length of cable between the drive and the motor does not exceed: - 4 m with unshielded cables - 10 m with shielded cables <b>Note:</b> When <b>[Motor surge limit.]</b> ( <i>S u L</i> ) is set to <b>[Yes]</b> ( <i>y e s</i> ), the maximum switching frequency <b>[Switching freq.]</b> ( <i>S F r</i> ) is modified, see page 128.		<b>[No]</b> ( <i>n o</i> )
<i>n o</i> <i>y e s</i>	<b>[No]</b> ( <i>n o</i> ): Function inactive <b>[Yes]</b> ( <i>y e s</i> ): Function active		
<i>S o P</i>	<b>[Volt surge limit. opt]</b> Optimization parameter for transient overvoltages at the motor terminals. This parameter can be accessed if <b>[Motor surge limit.]</b> ( <i>S u L</i> ) is set to <b>[Yes]</b> ( <i>y e s</i> ).  <i>6</i> <i>8</i> <i>10</i> Set to 6, 8 or 10 μs, according to the following table. <b>Note:</b> This parameter is useful for ATV320●●●N4● drives.		10 μs
★			

★ These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

( ) Parameter that can be modified during operation or when stopped.

The value of the **[Volt surge limit. opt] (5 ⚡ P)** parameter corresponds to the attenuation time of the cable used. It is defined to help to prevent the superimposition of voltage wave reflections resulting from long cable lengths. It limits overvoltages to twice the DC bus rated voltage.

The tables on the following page give examples of correspondence between the **[Volt surge limit. opt] (5 ⚡ P)** parameter and the length of the cable between the drive and the motor. For longer cable lengths, an output of the filter or a dV/dt protection filter must be used.

For motors in parallel, the sum of all the cable lengths must be taken into consideration. Compare the length given in the table row corresponding to the power for one motor with that corresponding to the total power, and select the shorter length.

Example: Two 7.5 kW (10 HP) motors

Take the lengths on the 15 kW (20 HP) table row, which are shorter than those on the 7.5 kW (10 HP) row, and divide by the number of motors to obtain the length per motor (with unshielded "GORSE" cable and SOP = 6, the result is 40/2 = 20 m maximum for each 7.5 kW (10 HP) motor).

In special cases (for example, different types of cable, different motor powers in parallel, different cable lengths in parallel, etc.), we recommend using an oscilloscope to check the overvoltage values obtained at the motor terminals.

To retain the overall drive performance, do not increase the SOP value unnecessarily.


**Tables giving the correspondence between the SOP parameter and the cable length, for 400 V supply mains**


Altivar 320 Reference	Motor Power		Cable cross-section (min)		Maximum cable length in meters								
	kW	HP	in mm <sup>2</sup>	AWG	Unshielded "GORSE" cable Type H07 RN-F 4Gxx			Shielded "GORSE" cable Type GVCSTV-LS/LH			Shielded "BELDEN" cable Type 2950x		
					SOP = 10	SOP = 8	SOP = 6	SOP = 10	SOP = 8	SOP = 6	SOP = 10	SOP = 8	SOP = 6
ATV320U04N4●	0.37	0.50	1.5	14	100 m	70 m	45 m	105 m	85 m	65 m	50 m	40 m	30 m
ATV320U06N4●	0.55	0.75	1.5	14	100 m	70 m	45 m	105 m	85 m	65 m	50 m	40 m	30 m
ATV320U07N4●	0.75	1	1.5	14	100 m	70 m	45 m	105 m	85 m	65 m	50 m	40 m	30 m
ATV320U11N4●	1.1	1.5	1.5	14	100 m	70 m	45 m	105 m	85 m	65 m	50 m	40 m	30 m
ATV320U15N4●	1.5	2	1.5	14	100 m	70 m	45 m	105 m	85 m	65 m	50 m	40 m	30 m
ATV320U22N4●	2.2	3	1.5	14	110 m	65 m	45 m	105 m	85 m	65 m	50 m	40 m	30 m
ATV320U30N4●	3	-	1.5	14	110 m	65 m	45 m	105 m	85 m	65 m	50 m	40 m	30 m
ATV320U40N4●	4	5	2.5	12	110 m	65 m	45 m	105 m	85 m	65 m	50 m	40 m	30 m
ATV320U55N4●	5.5	7.5	4	10	120 m	65 m	45 m	105 m	85 m	65m	50 m	40 m	30 m
ATV320U75N4●	7.5	10	6	8	120 m	65 m	45 m	105 m	85 m	65 m	50 m	40 m	30 m
ATV320D11N4●	11	15	10	8	115 m	60 m	45 m	100 m	75 m	55 m	50 m	40 m	30 m
ATV320D15N4●	15	20	16	6	105 m	60 m	40 m	100 m	70 m	50 m	50 m	40 m	30 m

For 230/400 V motors used at 230 V, the **[Motor surge limit.] (5 ⚡ L)** parameter can remain set to **[No] (n ⚡)**.

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > DRC-

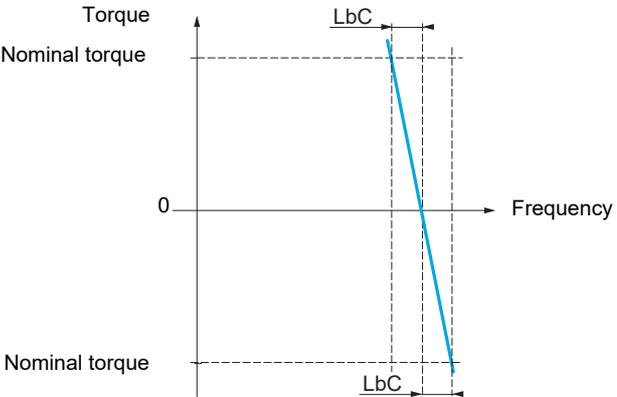Code	Name / Description	Adjustment range	Factory setting
u b r ( )	<b>[Braking level]</b> Braking transistor command level (See <b>[Braking level]</b> (u b r) page 261).	335 to 995 V	According to drive rating voltage
L b R ★	<b>[Load sharing]</b> When 2 motors are connected mechanically and therefore at the same speed, and each is controlled by a drive, this function can be used to improve torque distribution between the two motors. To do this, it varies the speed based on the torque. This parameter can only be accessed if <b>[Motor control type]</b> (L E E) page 114 is set to <b>[SVC V]</b> (u u L). n o <b>[No]</b> (n o): Function inactive y e s <b>[Yes]</b> (y e s): Function active		<b>[No]</b> (n o)
L b C ★ ( )	<b>[Load correction]</b> Rated correction in Hz. This parameter can be accessed if <b>[Load sharing]</b> (L b R) is set to <b>[Yes]</b> (y e s). 	0 to 599 Hz	0 Hz

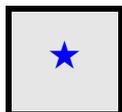


These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.





Parameter that can be modified during operation or when stopped.

**Load sharing, parameters that can be accessed at expert level**

Principle:

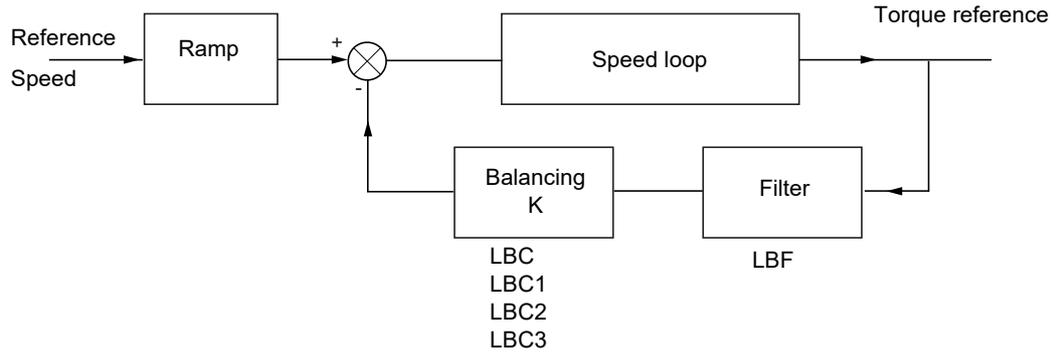

The load sharing factor K is determined by the torque and speed, with two factors K1 and K2 ( $K = K1 \times K2$ ).

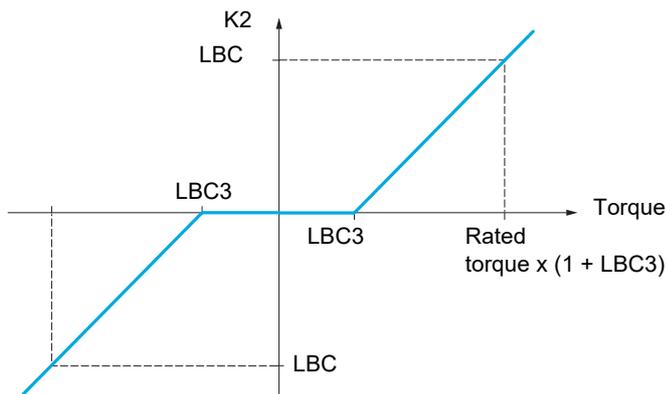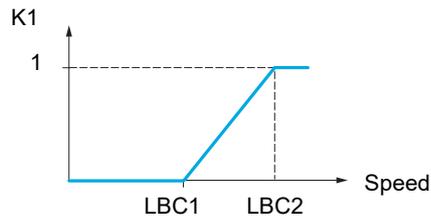

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; DRC-

Code	Name / Description	Adjustment range	Factory setting
<b>L b C 1</b> ★ ( )	<b>[Correction min spd]</b> This parameter can be accessed if <b>[Load sharing] (L b R)</b> is set to <b>[Yes] (Y E S)</b> . Minimum speed for load correction in Hz. Below this threshold, no corrections are made. Used to cancel correction at very low speed if this would hamper rotation of the motor.	0 to 598.9 Hz	0 Hz
<b>L b C 2</b> ★ ( )	<b>[Correction max spd]</b> This parameter can be accessed if <b>[Load sharing] (L b R)</b> is set to <b>[Yes] (Y E S)</b> . Speed threshold in Hz above which maximum load correction is applied.	<b>[Correction min spd] (L b C 1) + 0.1 at 599 Hz</b>	0.1 Hz
<b>L b C 3</b> ★ ( )	<b>[Torque offset]</b> This parameter can be accessed if <b>[Load sharing] (L b R)</b> is set to <b>[Yes] (Y E S)</b> . Minimum torque for load correction as a % of the rated torque. Below this threshold, no corrections are made. Used to avoid torque instabilities when the torque direction is not constant.	0 to 300%	0%
<b>L b F</b> ★ ( )	<b>[Sharing filter]</b> This parameter can be accessed if <b>[Load sharing] (L b R)</b> is set to <b>[Yes] (Y E S)</b> . Time constant (filter) for correction in ms. Used in the event of flexible mechanical coupling in order to avoid instabilities.	0 to 20 s	100 ms

 These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

 Parameter that can be modified during operation or when stopped.

### Inputs / outputs CFG

The parameters in the **[INPUTS / OUTPUTS CFG]** ( *i\_o\_c* ) menu can only be modified when the drive is stopped and no run command is present.

### Name of the Inputs/outputs of the drive



The name of the inputs and outputs may differ from a tool to the other:

- 4-digit 7-segment display,
- code displayed on the terminals (Control Block),
- labels displayed on ATV320 DTM,
- labels displayed on Graphic Display Terminal (VW3A1111), and
- labels displayed on Remote Graphic Terminal (VW3A1101).

The following list shows a sum up of the different name used:

- **LI1...LI6 or DI1...DI6**: for logic input 1...6 or digital input 1...6,
  - **LI5 or DI5** can be configured as a pulse input (PI or RP),
  - **LI6 or DI6** can be configured as a PTC (Positive Temperature Coefficient) using hardware switch SW2.
- **LO1 or DQ+/DQ-**: logic output or digital output,
- **AI1...AI3**: for analog inputs,
- **AQ1 or AO1**: for analog output,
- The analog output can be configured as a digital output (named **DO1 or DQ1**)
- **R1, R2**: for relay 1 and relay 2,
- **STO**: Safe Torque Off input.

For more information on the control terminals, refer to the installation manual (see page 14).

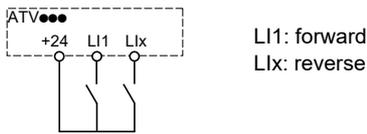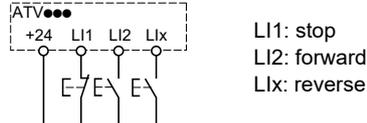Code	Name / Description	Adjustment range	Factory setting
<b>FULL</b>	<b>[FULL] (continued)</b>		
<b>i_o_c</b>	<b>[INPUTS / OUTPUTS CFG]</b>		
<b>lcl</b>	<b>[2/3 wire control]</b>		<b>[2 wire] (lcl)</b>
⌚ 2 s	<div style="border: 1px solid black; padding: 10px;"> <p style="text-align: center;"><b>⚠ WARNING</b></p> <p><b>UNANTICIPATED EQUIPMENT OPERATION</b></p> <p>If this parameter is changed, the parameters <b>[Reverse assign.] (rr5)</b> and <b>[2 wire type] (lcl)</b> and the assignments of the digital inputs are reset to the factory setting. Verify that this change is compatible with the type of wiring used.</p> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div>		
<b>lcl</b>	<p><b>[2 wire] (lcl)</b>  <b>2-wire control (level commands):</b> This is the input state (0 or 1) or edge (0 to 1 or 1 to 0) which controls running or stopping.</p> <p>Example of "source" wiring:</p> 		
<b>lcl</b>	<p><b>[3 wire] (lcl)</b>  <b>3-wire control (pulse commands):</b> A "forward" or "reverse" pulse is sufficient to command starting, a "stop" pulse is sufficient to command stopping.</p> <p>Example of "source" wiring:</p> 		

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > I\_O-

Code	Name / Description	Adjustment range	Factory setting
<p><i>EL E</i></p> <p>★</p> <p>⌚ 2 s</p> <p><i>LEL</i> [Level] (<i>LEL</i>): State 0 or 1 is taken into account for run (1) or stop (0)</p> <p><i>Ern</i> [Transition] (<i>Ern</i>): A change of state (transition or edge) is necessary to initiate operation, in order to avoid accidental restarts after a break in the power supply</p> <p><i>PFO</i> [Fwd priority] (<i>PFO</i>): State 0 or 1 is taken into account for run or stop, but the "forward" input takes priority over the "reverse" input</p>	<p><b>[2 wire type]</b></p> <div style="border: 1px solid black; padding: 10px; text-align: center;"> <p><b>⚠ WARNING</b></p> <p><b>UNANTICIPATED EQUIPMENT OPERATION</b></p> <p>Verify that the parameter setting is compatible with the type of wiring used.</p> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div>		<p>[Transition] (<i>Ern</i>)</p>
<p><i>run</i></p> <p>★</p> <p><i>L I I</i> [LI1] (<i>L I I</i>): Logical input LI1 if not in [I/O profile] (<i>io</i>)</p> <p><i>Cd00</i> [Cd00] (<i>Cd00</i>): In [I/O profile] (<i>io</i>), can be switched with possible logic inputs</p> <p><i>OL01</i> [OL01] (<i>OL01</i>): Function blocks: Logical Output 01</p> <p>...</p> <p><i>OL10</i> [OL10] (<i>OL10</i>): Function blocks: Logical Output 10</p>	<p><b>[Drive Running]</b></p> <p>Assignment of the stop command. Visible only if [2/3 wire control] (<i>EL E</i>) is set to [3 wire] (<i>EL</i>).</p>		<p>[No] (<i>no</i>)</p>
<p><i>Frd</i></p> <p><i>L I I</i> [LI1] (<i>L I I</i>): Logical input LI1 if not in [I/O profile] (<i>io</i>)</p> <p><i>Cd00</i> [Cd00] (<i>Cd00</i>): In [I/O profile] (<i>io</i>), can be switched with possible logic inputs</p> <p><i>OL01</i> [OL01] (<i>OL01</i>): Function blocks: Logical Output 01</p> <p>...</p> <p><i>OL10</i> [OL10] (<i>OL10</i>): Function blocks: Logical Output 10</p>	<p><b>[Forward]</b></p> <p>Assignment of the forward direction command.</p>		<p>[LI1] (<i>L I I</i>)</p>
<p><i>rr S</i></p> <p><i>no</i> [No] (<i>no</i>): Not assigned</p> <p><i>L I I</i> [LI1] (<i>L I I</i>): Logical input LI1</p> <p>... [..] (...): See the assignment conditions on page 162 (If [Profile] (CHCF) is set to [Not Separ.] (SIM) or [Separate] (SEP) then [CD11] (Cd11) up to [CD15] (Cd15), [C111] (C111) up to [C115] (C115), [C211] (C211) up to [C215] (C215) and [C311] (C311) up to [C315] (C315) are not available).</p>	<p><b>[Reverse assign.]</b></p> <p>Assignment of the reverse direction command.</p>		<p>[LI2] (<i>L I 2</i>)</p>

**Parameters described in this page can be accessed by:** DRI- > CONF > FULL > I\_O- > L1-

Code	Name / Description	Adjustment range	Factory setting
<b>L I -</b>	<b>[LI1 CONFIGURATION]</b>		
<b>L I A</b>	<b>[LI1 assignment]</b>		
	Read-only parameter, cannot be configured. It displays all the functions that are assigned to input LI1 in order to check for multiple assignments.		
<b>n o</b>	<b>[No] (n o):</b> Not assigned		
<b>r u n</b>	<b>[Run] (r u n):</b> Run Enable		
<b>f r d</b>	<b>[Forward] (f r d):</b> Forward operation		
<b>r r S</b>	<b>[Reverse] (r r S):</b> Reverse operation		
<b>r P S</b>	<b>[Ramp switching] (r P S):</b> Ramp switching		
<b>J o G</b>	<b>[Jog] (J o G):</b> Jog operation		
<b>u S P</b>	<b>[+Speed] (u S P):</b> + speed		
<b>d S P</b>	<b>[- speed] (d S P):</b> - speed		
<b>P S 2</b>	<b>[2 preset speeds] (P S 2):</b> 2 Preset speeds		
<b>P S 4</b>	<b>[4 preset speeds] (P S 4):</b> 4 Preset speeds		
<b>P S 8</b>	<b>[8 preset speeds] (P S 8):</b> 8 Preset speeds		
<b>r F C</b>	<b>[Ref. 2 switching] (r F C):</b> Reference switching		
<b>n S t</b>	<b>[Freewheel stop] (n S t):</b> Freewheel stop		
<b>d C i</b>	<b>[DC injection] (d C i):</b> Injection DC stop		
<b>F S t</b>	<b>[Fast stop] (F S t):</b> Fast stop		
<b>F L o</b>	<b>[Forced local] (F L o):</b> Forced local mode		
<b>r S F</b>	<b>[Fault reset] (r S F):</b> Fault reset		
<b>t u L</b>	<b>[Auto-tuning] (t u L):</b> Auto-tuning		
<b>S P n</b>	<b>[Ref. memo.] (S P n):</b> Save reference		
<b>F L i</b>	<b>[Pre Fluxing] (F L i):</b> Motor fluxing		
<b>P R u</b>	<b>[Auto / manual] (P R u):</b> PI(D) auto-manu		
<b>P i S</b>	<b>[PID integral reset] (P i S):</b> Integral shunting PI(D)		
<b>P r 2</b>	<b>[2 preset PID ref.] (P r 2):</b> 2 Preset PI(D) references		
<b>P r 4</b>	<b>[4 preset PID ref.] (P r 4):</b> 4 Preset PI(D) references		
<b>t L A</b>	<b>[Torque limitation] (t L A):</b> Permanent torque limitation		
<b>E t F</b>	<b>[External fault] (E t F):</b> External fault		
<b>r C A</b>	<b>[Output contact. fdbk] (r C A):</b> Downstream contactor feedback		
<b>C n F 1</b>	<b>[2 config. switching] (C n F 1):</b> Configuration switching 1		
<b>C n F 2</b>	<b>[3 config. switching] (C n F 2):</b> Configuration switching 2		
<b>C H A 1</b>	<b>[2 parameter sets] (C H A 1):</b> Parameter switching 1		
<b>C H A 2</b>	<b>[3 parameter sets] (C H A 2):</b> Parameter switching 2		
<b>t L C</b>	<b>[Activ. Analog torque limitation] (t L C):</b> Torque limitation: Activation (analog input) by a logic input		
<b>C C S</b>	<b>[Cmd switching] (C C S):</b> Command channel switching		
<b>i n H</b>	<b>[Fault inhibition] (i n H):</b> Fault inhibition		
<b>P S 16</b>	<b>[16 preset speeds] (P S 16):</b> 16 preset speeds		
<b>L C 2</b>	<b>[Current limit 2] (L C 2):</b> Current limitation switching		
<b>r C b</b>	<b>[Ref 1B switching] (r C b):</b> Reference channel switching (1 to 1B)		
<b>t r C</b>	<b>[Traverse control] (t r C):</b> Traverse control		
<b>b C i</b>	<b>[Brake contact] (b C i):</b> Brake logic input contact		
<b>S A F</b>	<b>[Stop FW limit sw.] (S A F):</b> Stop switch forward		
<b>S A r</b>	<b>[Stop RV limit sw.] (S A r):</b> Stop switch reverse		
<b>d A F</b>	<b>[Slowdown forward] (d A F):</b> Slowdown attained forward		
<b>d A r</b>	<b>[Slowdown reverse] (d A r):</b> Slowdown attained reverse		
<b>C L S</b>	<b>[Disable limit sw.] (C L S):</b> Limits switches clearing		
<b>L E S</b>	<b>[Drive lock (Line contact. ctrl)] (L E S):</b> Emergency stop		
<b>r t r</b>	<b>[Init. traverse ctrl.] (r t r):</b> Reload traverse control		
<b>S n C</b>	<b>[Counter wobble] (S n C):</b> Counter wobble synchronization		
<b>r P A</b>	<b>[Prod. reset] (r P A):</b> Reset Product		
<b>S H 2</b>	<b>[2 HSP] (S H 2):</b> High Speed 2		
<b>S H 4</b>	<b>[4 HSP] (S H 4):</b> High Speed 4		
<b>F P S 1</b>	<b>[Preset spd2] (F P S 1):</b> Function key preset speed 1 assignment		
<b>F P S 2</b>	<b>[Preset spd3] (F P S 2):</b> Function key preset speed 2 assignment		
<b>F P r 1</b>	<b>[PID ref. 2] (F P r 1):</b> Function key preset PI 1 assignment		
<b>F P r 2</b>	<b>[PID ref. 3] (F P r 2):</b> Function key preset PI 2 assignment		
<b>F u S P</b>	<b>[+Speed] (F u S P):</b> Function key faster assignment		
<b>F d S P</b>	<b>[-Speed] (F d S P):</b> Function key slower assignment		
<b>F t</b>	<b>[T/K] (F t):</b> Function key bumpless assignment		
<b>u S i</b>	<b>[+speed around ref.] (u S i):</b> + Speed around ref		
<b>d S i</b>	<b>[-speed around ref.] (d S i):</b> - Speed around ref		

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > I\_O- > L1-

Code	Name / Description	Adjustment range	Factory setting
<p> <i>u51</i> [<b>+speed around ref.</b>] (<i>u51</i>): + Speed around ref  <i>d51</i> [<b>-speed around ref.</b>] (<i>d51</i>): - Speed around ref  <i>IL01</i> [<b>IL01</b>] (<i>IL01</i>): Function blocks: Logical Input 1                      ...  <i>IL10</i> [<b>IL10</b>] (<i>IL10</i>): Function blocks: Logical Input 10  <i>Fbrn</i> [<b>FB start</b>] (<i>Fbrn</i>): Function blocks: Run mode  <i>SLS1</i> [<b>SLS ch.1</b>] (<i>SLS1</i>): SLS safety function Channel 1  <i>SLS2</i> [<b>SLS ch.2</b>] (<i>SLS2</i>): SLS safety function Channel 2  <i>SS11</i> [<b>SS1 ch.1</b>] (<i>SS11</i>): SS1 safety function Channel 1  <i>SS12</i> [<b>SS1 ch.2</b>] (<i>SS12</i>): SS1 safety function Channel 2  <i>STO1</i> [<b>STO ch.1</b>] (<i>STO1</i>): STO safety function Channel 1  <i>STO2</i> [<b>STO ch.2</b>] (<i>STO2</i>): STO safety function Channel 2  <i>SMS1</i> [<b>SMS ch.1</b>] (<i>SMS1</i>): SMS safety function Channel 1  <i>SMS2</i> [<b>SMS ch.2</b>] (<i>SMS2</i>): SMS safety function Channel 2                 </p> <p><b>Note:</b> Safety function channels are available for LI3-LI4 and LI5-LI6 only.</p>			
<i>L1d</i>	<p><b>[LI1 On Delay]</b></p> <p>This parameter is used to take account of the change of the logic input to state 1 with a delay that can be adjusted between 0 and 200 milliseconds, in order to filter out possible interference. The change to state 0 is taken into account without delay.</p>	0 to 200 ms	0 ms
<i>---</i>	<b>[INPUTS / OUTPUTS CFG] (continued)</b>		
<i>L2-</i> to <i>L6-</i>	<b>[Lix CONFIGURATION]</b> All the logic inputs available on the drive are processed as in the example for LI1 above, up to LI6.		
<i>L5-</i>	<b>[LI5 CONFIGURATION]</b> Specific parameters for LI5 used as a pulse input.		
<i>PIA</i>	<p><b>[RP assignment]</b></p> <p>Read-only parameter, cannot be configured. It displays all the functions associated with the Pulse input in order to check, for example, for compatibility problems.</p> <p>Identical to <b>[AI1 assignment]</b> (<i>AI1A</i>) page 141.</p>		
<i>PIl</i>	<b>[RP min value]</b>	0 to 20.00 kHz	0 kHz
	Pulse input scaling parameter of 0% in Hz * 10 unit.		
<i>PFr</i>	<b>[RP max value]</b>	0 to 20.00 kHz	20.00 kHz
	Pulse input scaling parameter of 100% in Hz * 10 unit.		
<i>PFi</i>	<b>[RP filter]</b>	0 to 1,000 ms	0 ms
	I/O ext Pulse input cutoff time of the low-filter.		
<i>LAI-</i> <i>LAI-</i>	<b>[LAX CONFIGURATION]</b> The 2 analog inputs AI1 and AI2 on the drive could be used as LI inputs and are processed as in the example for LI1 above.		



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.





To change the assignment of this parameter, press the ENT key for 2 s.

### Configuration of analog inputs and Pulse input

The minimum and maximum input values (in volts, mA, etc.) are converted to % in order to adapt the references to the application.

#### Minimum and maximum input values:



The minimum value corresponds to a reference of 0% and the maximum value to a reference of 100%. The minimum value may be greater than the maximum value:

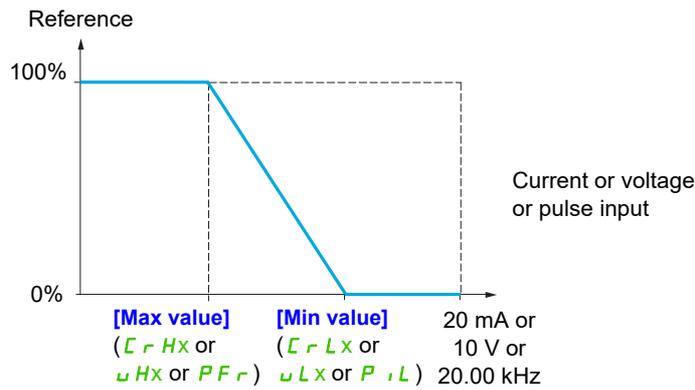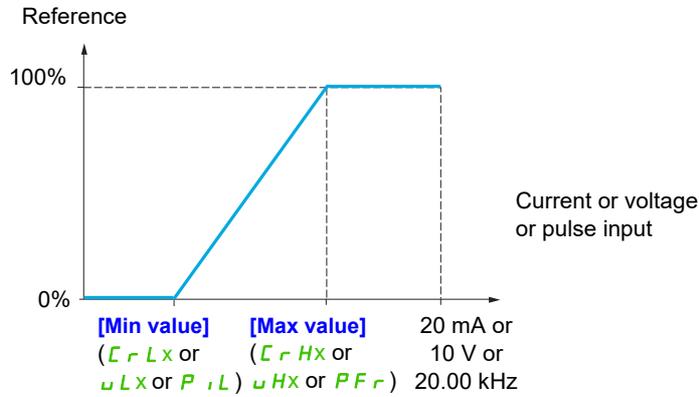

For +/- bidirectional inputs, the min. and max. are relative to the absolute value, for example +/- 2 to 8 V.

**Range (output values): For analog inputs only:**

This parameter is used to configure the reference range to [0% → 100%] or [-100% → +100%] in order to obtain a bidirectional output from a unidirectional input.

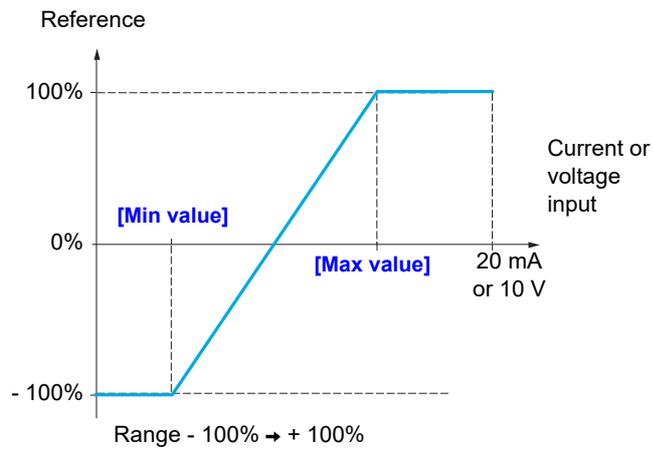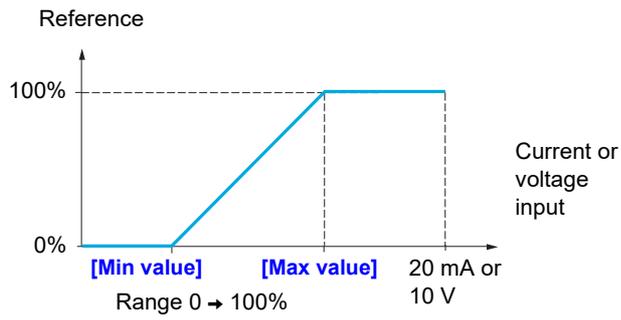

Code	Name / Description	Adjustment range	Factory setting
<b>I O -</b>	<b>[INPUTS / OUTPUTS CFG] (continued)</b>		
<b>b 5 P</b>	<b>[Reference template]</b>		<b>[Standard] (b 5 d)</b>
<b>b 5 d</b>	<b>[Standard] (b 5 d)</b>		
<b>( )</b>	<p>Frequency</p> <p>HSP</p> <p>LSP</p> <p>-100%</p> <p>0%</p> <p>+100%</p> <p>Reference</p> <p>At zero reference the frequency = LSP</p>		
<b>b L 5</b>	<b>[Pedestal] (b L 5)</b>		
	<p>Frequency</p> <p>HSP</p> <p>LSP</p> <p>-100%</p> <p>+100%</p> <p>Reference</p> <p>At reference = 0 to LSP the frequency = LSP</p>		
<b>b n 5</b>	<b>[Deadband] (b n 5)</b>		
	<p>Frequency</p> <p>HSP</p> <p>LSP</p> <p>-100%</p> <p>0</p> <p>+100%</p> <p>Reference</p> <p>At reference = 0 to LSP the frequency = 0</p>		
<b>b n 5 0</b>	<b>[Deadband 0] (b n 5 0)</b>		
	<p>Frequency</p> <p>HSP</p> <p>LSP</p> <p>-100%</p> <p>0%</p> <p>+100%</p> <p>Reference</p>		<p>This operation is the same as <b>[Standard] (b 5 d)</b>, except that in the following cases at zero reference, the frequency = 0:</p> <ul style="list-style-type: none"> <li>The signal is less than <b>[Min value]</b>, which is greater than 0 (example 1 V on a 2 - 10 V input)</li> <li>The signal is greater than <b>[Max value]</b> (example: 11 V on a 10 - 0 V input).</li> </ul> <p>If the input range is configured as "bidirectional", operation remains identical to <b>[Standard] (b 5 d)</b>.</p> <p>This parameter defines how the speed reference is taken into account, for analog inputs and Pulse input only. In the case of the PID regulator, this is the PID output reference.</p> <p>The limits are set by the <b>[Low speed] (L 5 P)</b> and <b>[High speed] (H 5 P)</b> parameters, page <a href="#">96</a>.</p>




Parameter that can be modified during operation or when stopped.

**Delinearization: For analog inputs only:**


The input can be delinearized by configuring an intermediate point on the input/output curve of this input:

For range 0 → 100%

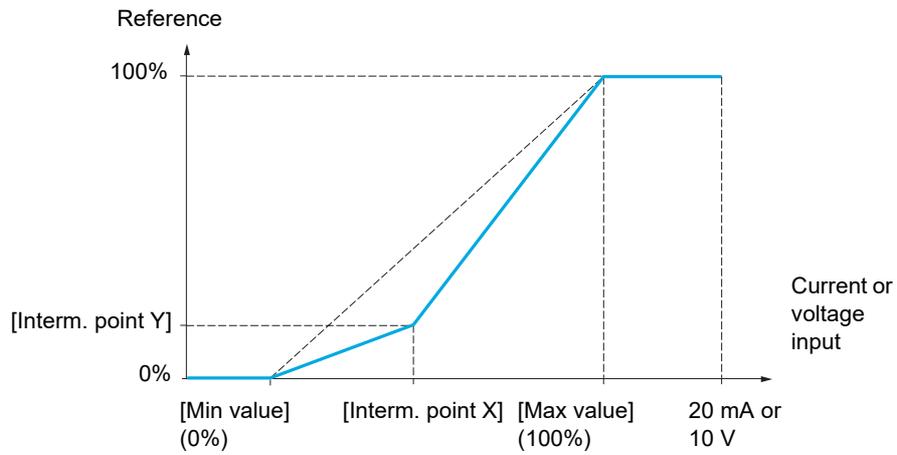

**Note:** For [Interm. point X], 0% corresponds to [Min value] and 100% to [Max value].

For range -100% → 100%

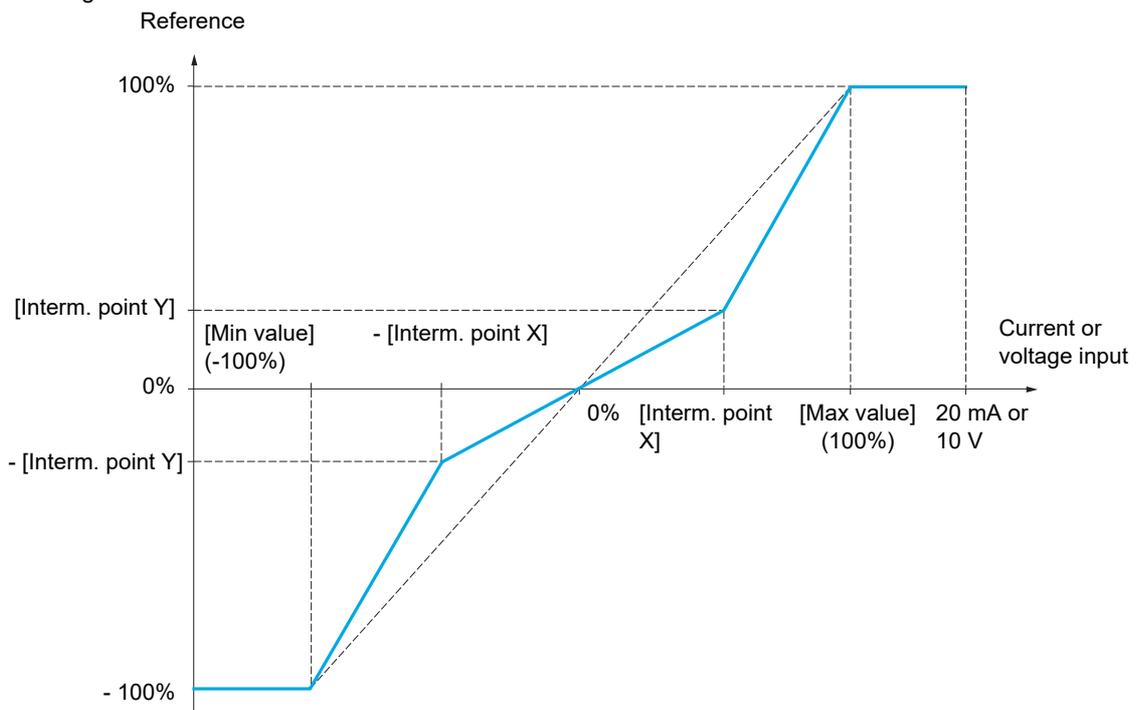

Code	Name / Description	Adjustment range	Factory setting
<b>A I 1 -</b>	<b>[AI1 CONFIGURATION]</b>		
<b>A I 1 A</b>	<b>[AI1 assignment]</b> Read-only parameter, cannot be configured. It displays all the functions associated with input AI1 in order to check, for example, for compatibility problems.		
<b>n o</b>	<b>[No]</b> ( <b>n o</b> ): Not assigned		
<b>A o 1</b>	<b>[AO1 assignment]</b> ( <b>A o 1</b> ): Analog output AO1		
<b>F r 1</b>	<b>[Ref.1 channel]</b> ( <b>F r 1</b> ): Reference source 1		
<b>F r 2</b>	<b>[Ref.2 channel]</b> ( <b>F r 2</b> ): Reference source 2		
<b>S R 2</b>	<b>[Summing ref. 2]</b> ( <b>S R 2</b> ): Summing reference 2		
<b>P , F</b>	<b>[PID feedback]</b> ( <b>P , F</b> ): PI feedback (PI control)		
<b>t A A</b>	<b>[Torque limitation]</b> ( <b>t A A</b> ): Torque limitation: Activation by an analog value		
<b>d R 2</b>	<b>[Subtract. ref. 2]</b> ( <b>d R 2</b> ): Subtracting reference 2		
<b>P , n</b>	<b>[Manual PID ref.]</b> ( <b>P , n</b> ): Manual speed reference of the PI(D) regulator (auto-man)		
<b>F P , i</b>	<b>[PID speed ref.]</b> ( <b>F P , i</b> ): Speed reference of the PI(D) regulator (predictive reference)		
<b>S R 3</b>	<b>[Summing ref. 3]</b> ( <b>S R 3</b> ): Summing reference 3		
<b>F r 1 b</b>	<b>[Ref.1B channel]</b> ( <b>F r 1 b</b> ): Reference source 1B		
<b>d R 3</b>	<b>[Subtract. ref. 3]</b> ( <b>d R 3</b> ): Subtracting reference 3		
<b>F L o C</b>	<b>[Forced local]</b> ( <b>F L o C</b> ): Forced local reference source		
<b>n A 2</b>	<b>[Ref.2 multiplier]</b> ( <b>n A 2</b> ): Multiplying reference 2		
<b>n A 3</b>	<b>[Ref. 3 multiplier]</b> ( <b>n A 3</b> ): Multiplying reference 3		
<b>P E S</b>	<b>[Weight input]</b> ( <b>P E S</b> ): Hoisting: External weight measurement function		
<b>, A 0 1</b>	<b>[IA01]</b> ( <b>, A 0 1</b> ): Function blocks: Analog Input 01		
...	...		
<b>, A 1 0</b>	<b>[IA10]</b> ( <b>, A 1 0</b> ): Function blocks: Analog Input 10		
<b>A I 1 t</b>	<b>[AI1 Type]</b>		<b>[Voltage]</b> ( <b>I O u</b> )
<b>I O u</b>	<b>[Voltage]</b> ( <b>I O u</b> ): Positive voltage input 0 - 10 V (negative values are interpreted as zero: the input is unidirectional)		
<b>u , L 1</b>	<b>[AI1 min value]</b>	0 to 10.0 V	0 V
	AI1 voltage scaling parameter of 0%.		
<b>u , H 1</b>	<b>[AI1 max value]</b>	0 to 10.0 V	10.0 V
	AI1 voltage scaling parameter of 100%.		
<b>A I 1 F</b>	<b>[AI1 filter]</b>	0 to 10.00 s	0 s
	Interference filtering.		
<b>A I 1 L</b>	<b>[AI1 range]</b>		<b>[0 - 100%]</b> ( <b>P o S</b> )
<b>P o S</b>	<b>[0 - 100%]</b> ( <b>P o S</b> ): Positive logical		
<b>n E G</b>	<b>[+/- 100%]</b> ( <b>n E G</b> ): Positive and negative logical		
<b>A I 1 E</b>	<b>[AI1 Interm. point X]</b>	0 to 100%	0%
	Input delinearization point coordinate. Percentage of the physical input signal. 0% corresponds to <b>[AI1 min value]</b> ( <b>u , L 1</b> ). 100% corresponds to <b>[AI1 max value]</b> ( <b>u , H 1</b> ).		
<b>A I 1 S</b>	<b>[AI1 Interm. point Y]</b>	0 to 100%	0%
	Output delinearization point coordinate (frequency reference). Percentage of the internal frequency reference corresponding to the <b>[AI1 Interm. point X]</b> ( <b>A I 1 E</b> ) percentage of physical input signal.		
<b>I _ O -</b>	<b>[INPUTS / OUTPUTS CFG] (continued)</b>		
<b>A I 2 -</b>	<b>[AI2 CONFIGURATION]</b>		
<b>A I 2 A</b>	<b>[AI2 assignment]</b> Identical to <b>[AI1 assignment]</b> ( <b>A I 1 A</b> ) page 141.		
<b>A I 2 t</b>	<b>[AI2 Type]</b>		<b>[Voltage +/-]</b> ( <b>n I O u</b> )
<b>I O u</b>	<b>[Voltage]</b> ( <b>I O u</b> ): Positive voltage input 0 - 10 V (negative values are interpreted as zero: the input is unidirectional)		
<b>n I O u</b>	<b>[Voltage +/-]</b> ( <b>n I O u</b> ): Positive and negative voltage input +/- 10 V (the input is bidirectional)		
<b>u , L 2</b>	<b>[AI2 min value]</b>	0 to 10.0 V	0 V
	AI2 voltage scaling parameter of 0%.		

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; I\_O- &gt; AI2-

Code	Name / Description	Adjustment range	Factory setting
<b>u , H 2</b>	<b>[AI2 max. value]</b> AI2 voltage scaling parameter of 100%.	0 to 10.0 V	10.0 V
<b>R , 2 F</b>	<b>[AI2 filter]</b> Interference filtering.	0 to 10.00 s	0 s
<b>R , 2 L</b>	<b>[AI2 range]</b> This parameter is forced to <b>[0 - 100%]</b> ( <b>P 0 5</b> ) and can not be accessed if <b>[AI2 Type]</b> ( <b>R , 2 E</b> ) (page 141) is set to <b>[Voltage +/-]</b> ( <b>n I 0 u</b> ).		<b>[0 - 100%]</b> ( <b>P 0 5</b> )
<b>P 0 5</b> <b>n E G</b>	<b>[0 - 100%]</b> ( <b>P 0 5</b> ): Positive logical <b>[+/- 100%]</b> ( <b>n E G</b> ): Positive and negative logical		
<b>R , 2 E</b>	<b>[AI2 Interm. point X]</b> Input delinearization point coordinate. Percentage of the physical input signal. 0% corresponds to <b>[Min value]</b> if the range is 0 → 100%.  0% corresponds to $\frac{[\text{Max value}] + [\text{Min value}]}{2}$ if the range is -100% → +100%. 100% corresponds to <b>[Max value]</b> .	0 to 100%	0%
<b>R , 2 S</b>	<b>[AI2 Interm. point Y]</b> Output delinearization point coordinate (frequency reference). Percentage of the internal frequency reference corresponding to the <b>[AI2 Interm. point X]</b> ( <b>R , 2 E</b> ) percentage of physical input signal.	0 to 100%	0%
<b>I , 0 -</b>	<b>[INPUTS / OUTPUTS CFG] (continued)</b>		
<b>R , 3 -</b>	<b>[AI3 CONFIGURATION]</b>		
<b>R , 3 A</b>	<b>[AI3 assignment]</b> Identical to <b>[AI1 assignment]</b> ( <b>R , 1 A</b> ) page 141.		
<b>R , 3 E</b> <b>0 A</b>	<b>[AI3 Type]</b> <b>[Current]</b> ( <b>0 A</b> ): Current input 0 - 20 mA		<b>[Current]</b> ( <b>0 A</b> )
<b>C , L 3</b>	<b>[AI3 min. value]</b> AI3 current scaling parameter of 0%.	0 to 20.0 mA	0 mA
<b>C , H 3</b>	<b>[AI3 max. value]</b> AI3 current scaling parameter of 100%.	0 to 20.0 mA	20.0 mA
<b>R , 3 F</b>	<b>[AI3 filter]</b> Interference filtering.	0 to 10.00 s	0 s
<b>R , 3 L</b> <b>P 0 5</b> <b>n E G</b>	<b>[AI3 range]</b> <b>[0 - 100%]</b> ( <b>P 0 5</b> ): Unidirectional input <b>[+/- 100%]</b> ( <b>n E G</b> ): Bidirectional input Example: On a 4 - 20 mA input. 4 mA corresponds to reference -100%. 12 mA corresponds to reference 0%. 20 mA corresponds to reference +100%. Since AI3 is, in physical terms, a bidirectional input, the <b>[+/- 100%]</b> ( <b>n E G</b> ) configuration must only be used if the signal applied is unidirectional. A bidirectional signal is not compatible with a bidirectional configuration.		<b>[0 - 100%]</b> ( <b>P 0 5</b> )
<b>R , 3 E</b>	<b>[AI3 Interm. point X]</b> Input delinearization point coordinate. Percentage of the physical input signal. 0% corresponds to <b>[Min value]</b> ( <b>C , L 3</b> ) if the range is 0 → 100%.  0% corresponds to $\frac{[\text{AI3 max. value}] (\text{C , H 3}) - [\text{AI3 min. value}] (\text{C , L 3})}{(\text{C , L 3})}$ if the range is -100% → +100%. 100% corresponds to <b>[AI3 max. value]</b> ( <b>C , H 3</b> ).	0 to 100%	0%

Parameters described in this page can be accessed by: DRI- > CONF > FULL > I\_O- > AI3-


Code	Name / Description	Adjustment range	Factory setting
<i>A I 3 5</i>	<b>[AI3 Interm. point Y]</b> Output delinearization point coordinate (frequency reference). Percentage of the internal frequency reference corresponding to the <b>[AI3 Interm. point X]</b> ( <i>A I 3 E</i> ) percentage of physical input signal.	0 to 100%	0%
<i>I O -</i>	<b>[INPUTS / OUTPUTS CFG] (continued)</b>		
<i>A U 1 -</i>	<b>[VIRTUAL AI1]</b>		
<i>A U 1 A</i>	<b>[AIV1 assignment]</b> Virtual analog input 1 via the jog dial available on the front side of the product. Identical to <b>[AI1 assignment]</b> ( <i>A I 1 A</i> ) page <b>141</b> .		
<i>A U 2 -</i>	<b>[VIRTUAL AI2]</b>		
<i>A U 2 A</i>	<b>[AIV2 assignment]</b> Possible assignments for <b>[AI virtual 2]</b> ( <i>A I U 2</i> ): Virtual analog input 2 via communication channel, to be configured with <b>[AI2 net. channel]</b> ( <i>A I C 2</i> ).  Identical to <b>[AIV1 assignment]</b> ( <i>A U 1 A</i> ) page <b>141</b> .		
<i>A I C 2</i>  ★  <i>n o</i> <i>M o d b</i> <i>C A N</i> <i>n E t</i>	<b>[AI2 net. Channel]</b> <b>[VIRTUAL AI2]</b> ( <i>A U 2 A</i> ) source channel. This parameter can also be accessed in the <b>[PID REGULATOR]</b> ( <i>P I d -</i> ) submenu page <b>222</b> . Scale: The value 8192 transmitted by this input is equivalent to 10 V on a 10 V input.  <i>n o</i> <b>[No]</b> ( <i>n o</i> ): Not assigned <i>M o d b</i> <b>[Modbus]</b> ( <i>M o d b</i> ): Integrated Modbus <i>C A N</i> <b>[CANopen]</b> ( <i>C A N</i> ): Integrated CANopen® <i>n E t</i> <b>[Com. card]</b> ( <i>n E t</i> ): Communication card (if inserted)		<b>[No]</b> ( <i>n o</i> )
<i>I E n -</i>	<b>[ENCODER CONFIGURATION]</b> Following parameters can be accessed if the speed monitoring card VW3A3620 has been inserted.		
<i>E n u</i>  <i>n o</i> <i>S E C</i>	<b>[Encoder usage]</b>  <i>n o</i> <b>[No]</b> ( <i>n o</i> ): Function inactive. <i>S E C</i> <b>[Fdbk monit.]</b> ( <i>S E C</i> ): The encoder provides speed feedback for monitoring.		<b>[No]</b> ( <i>n o</i> )
<i>E n 5</i>  ★  <i>A A b b</i> <i>A b</i>	<b>[Encoder type]</b> Encoder usage configuration.  Encoder usage configuration. To be configured in accordance with the type of encoder used.  <i>A A b b</i> <b>[AABB]</b> ( <i>A A b b</i> ): For signals A, /A, B, /B. <i>A b</i> <b>[AB]</b> ( <i>A b</i> ): For signals A, B.  Following parameters can be accessed if <b>[Encoder usage]</b> ( <i>E n u</i> ) is set to <b>[Fdbk monit.]</b> ( <i>S E C</i> ).		<b>[AABB]</b> ( <i>A A b b</i> )
<i>P C I</i>  ★	<b>[Number of pulses]</b> Encoder usage configuration.  Number of pulses per encoder revolution. Following parameters can be accessed if <b>[Encoder usage]</b> ( <i>E n u</i> ) is set to <b>[Fdbk monit.]</b> ( <i>S E C</i> ).	100 to 3600	1024

★ These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > I\_O- > IEn-

Load slip detection :

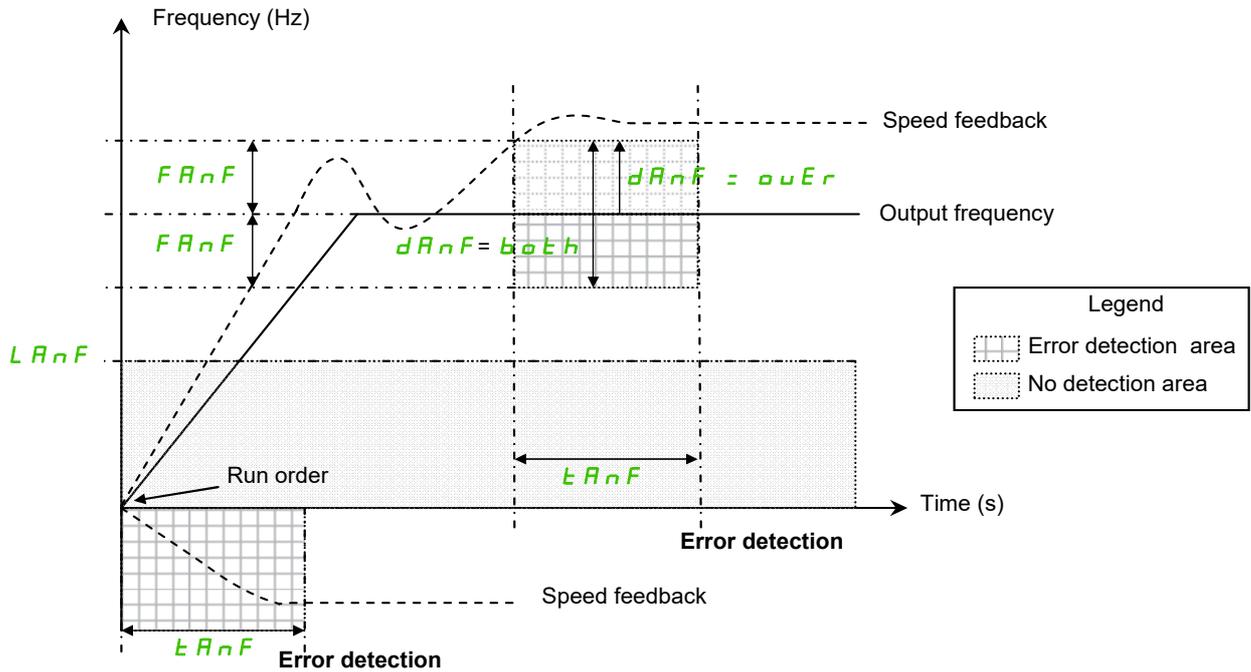

The drive will detect an error and display the error code [Load slipping] (RnF) in the following cases:

- As soon as the RUN order is received, if the sign of the output frequency and the speed feedback are in opposite way during [ANF Time Thd.] (tAnF).
- During operation:
  - if the speed feedback is in the same direction than the output frequency
  - and the speed feedback is over [ANF Detection level] (LAnF).
  - and,
    - "if [ANF Direction check] (dAnF) is set to [Over] (o v e r), the difference between the output frequency and the speed feedback is over [ANF Frequency Thd.] (FRnF) during [ANF Time Thd.] (TAnF) (Overspeed detection).
    - or,
    - "if [ANF Direction check] (dAnF) is set to [Both] (b o t h), the difference between the output frequency and the speed feedback is over [ANF Frequency Thd.] (FRnF) or below - [ANF Frequency Thd.] (FRnF) during [ANF Time Thd.] (tAnF) (Overspeed or underspeed detection).

Code	Name / Description	Adjustment range	Factory setting
I O -	<b>[INPUTS / OUTPUTS CFG] (continued)</b>		
I E n -	<b>[ENCODER CONFIGURATION] (continued)</b> Following parameters can be accessed if the speed monitoring card VW3A3620 has been inserted and if [Encoder usage] (Enu) is set to [Fdbk monit.] (SECL).		
FRnF ★	<b>[ANF Frequency Thd.]</b> Level of [Load slipping] (RnF) detected error.  The drive will not detect the error [Load slipping] (RnF) if the difference between the output frequency and the speed feedback is below than [ANF Frequency Thd.] (FRnF).	0.1 to 50 Hz	5.0 Hz
LAnF ★	<b>[ANF Detection level]</b> Level of ANF detected error.  The drive will not detect the error [Load slipping] (RnF) if the speed feedback is below [ANF Detection level] (LAnF).	0 to 10 Hz	0.0 Hz

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > I\_O- > IEn-

Code	Name / Description	Adjustment range	Factory setting
<i>dRnF</i>	<b>[ANF Direction check]</b>		<b>[Over] (<i>ouEr</i>)</b>
★ <i>ouEr</i> <i>both</i>	Available [Load slipping] ( <i>RnF</i> ) detection direction.  [Over] ( <i>ouEr</i> ): The drive will detect the error [Load slipping] ( <i>RnF</i> ) in case of overspeed. [Both] ( <i>both</i> ): The drive will detect the error [Load slipping] ( <i>RnF</i> ) in case of overspeed or underspeed.		
<i>tRnF</i>	<b>[ANF Time Thd.]</b>	0 to 10 s	0.10 s
★	Level of [Load slipping] ( <i>RnF</i> ) detected error.  The drive will detect the error [Load slipping] ( <i>RnF</i> ) if the conditions are present during [ANF Time Thd.] ( <i>RnF</i> ).		



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

Parameters described in this page can be accessed by:

DRI -> CONF > FULL > I\_O- > R1-

Code	Name / Description	Adjustment range	Factory setting
<b>I - O -</b>	<b>[INPUTS / OUTPUTS CFG] (continued)</b>		
<b>r I -</b>	<b>[R1 CONFIGURATION]</b>		
<b>r I</b>	<b>[R1 Assignment]</b>		<b>[No drive flt] (F L E)</b>
<b>no</b>	<b>[No] (no):</b> Not assigned. In this case, the output can be controlled via the internal parameter OL1R (refer to the communication parameter addresses file). By default, if an error (such as a communication interruption is detected), the output remains unchanged. Use the parameter <b>[Enable R1Fallback] (r IF)</b> to disable the output in case of error detection.		
<b>F L E</b>	<b>[No drive flt] (F L E):</b> Drive fault detection status (relay normally energized, and de-energized in the event of an error)		
<b>r un</b>	<b>[Drv running] (r un):</b> Drive running		
<b>F E A</b>	<b>[Freq. Th. attain.] (F E A):</b> Frequency threshold attained ( <b>[Freq. threshold] (F E d)</b> page 110)		
<b>F L A</b>	<b>[HSP attain.] (F L A):</b> High speed attained		
<b>C E A</b>	<b>[I attained] (C E A):</b> Current threshold attained ( <b>[Current threshold] (C E d)</b> page 110)		
<b>S r A</b>	<b>[Freq.ref.att] (S r A):</b> Frequency reference attained		
<b>t S A</b>	<b>[Th.mot. att.] (t S A):</b> Motor 1 thermal state attained		
<b>P E E</b>	<b>[PID error al] (P E E):</b> PID error alarm		
<b>P F A</b>	<b>[PID fdbk al] (P F A):</b> PID feedback alarm		
<b>F 2 A</b>	<b>[Freq. Th. 2 attained] (F 2 A):</b> Frequency threshold 2 attained ( <b>[Freq. threshold 2] (F 2 d)</b> page 110)		
<b>t A d</b>	<b>[Th. drv. att.] (t A d):</b> Drive thermal state attained		
<b>u L A</b>	<b>[Pro.Undload] (u L A):</b> Underload alarm		
<b>o L A</b>	<b>[Ovld.P.Alrm] (o L A):</b> Overload alarm		
<b>r S d A</b>	<b>[Rope slack] (r S d A):</b> Rope slack (see <b>[Rope slack config.] (r S d)</b> parameter page 217)		
<b>t t H A</b>	<b>[High tq. att.] (t t H A):</b> Motor torque overshooting high threshold <b>[High torque thd.] (t t H)</b> page 110		
<b>t t L A</b>	<b>[Low tq. att.] (t t L A):</b> Motor torque undershooting low threshold <b>[Low torque thd.] (t t L)</b> page 110		
<b>Π F r d</b>	<b>[Forward] (Π F r d):</b> Motor in forward rotation		
<b>Π r r S</b>	<b>[Reverse] (Π r r S):</b> Motor in reverse rotation		
<b>t S 2</b>	<b>[Th.mot2 att] (t S 2):</b> Motor 2 thermal threshold (TTD2) reached		
<b>t S 3</b>	<b>[Th.mot3 att] (t S 3):</b> Motor 3 thermal threshold (TTD3) reached		
<b>A t S</b>	<b>[Neg Torque] (A t S):</b> Negative torque (braking)		
<b>C n F 0</b>	<b>[Cnfg.0 act.] (C n F 0):</b> Configuration 0 active		
<b>C n F 1</b>	<b>[Cnfg.1 act.] (C n F 1):</b> Configuration 1 active		
<b>C n F 2</b>	<b>[Cnfg.2 act.] (C n F 2):</b> Configuration 2 active		
<b>C F P 1</b>	<b>[Set 1 active] (C F P 1):</b> Parameter set 1 active		
<b>C F P 2</b>	<b>[Set 2 active] (C F P 2):</b> Parameter set 2 active		
<b>C F P 3</b>	<b>[Set 3 active] (C F P 3):</b> Parameter set 3 active		
<b>d b L</b>	<b>[DC charged] (d b L):</b> DC bus charging		
<b>b r S</b>	<b>[In braking] (b r S):</b> Drive braking		
<b>P r Π</b>	<b>[P. removed] (P r Π):</b> Drive locked by "Safe Torque Off" input		
<b>F 9 L A</b>	<b>[Fr.met. alar.] (F 9 L A):</b> Measured speed threshold attained <b>[Pulse warning thd.] (F 9 L)</b> page 110		
<b>Π C P</b>	<b>[I present] (Π C P):</b> Motor current present		
<b>L S A</b>	<b>[Limit sw. att] (L S A):</b> Limit switch attained		
<b>d L d A</b>	<b>[Load alarm] (d L d A):</b> Load variation detection (see page 281)		
<b>A G 1</b>	<b>[Alarm Grp 1] (A G 1):</b> Alarm group 1		
<b>A G 2</b>	<b>[Alarm Grp 2] (A G 2):</b> Alarm group 2		
<b>A G 3</b>	<b>[Alarm Grp 3] (A G 3):</b> Alarm group 3		
<b>P L A</b>	<b>[LI6=PTC al.] (P L A):</b> LI6 = PTCL alarm		
<b>E F A</b>	<b>[Ext. fault al] (E F A):</b> External fault alarm		
<b>u S A</b>	<b>[Under V. al.] (u S A):</b> Undervoltage alarm		
<b>u P A</b>	<b>[Uvolt warn] (u P A):</b> Undervoltage threshold		
<b>t H A</b>	<b>[Al. °C drv] (t H A):</b> Drive overheating		
<b>S S A</b>	<b>[Lim T/I att.] (S S A):</b> Torque limit alarm		
<b>t J A</b>	<b>[IGBT al.] (t J A):</b> Thermal junction alarm		
<b>A P 3</b>	<b>[AI3 Al. 4-20] (A P 3):</b> AI3 4-20 mA loss alarm		
<b>r d Y</b>	<b>[Ready] (r d Y):</b> Ready to start		
<b>o L 0 1</b>	<b>[OL01] (o L 0 1):</b> Function blocks: Logical Output 01		
...	...		
<b>o L 1 0</b>	<b>[oL10] (o L 1 0):</b> Function blocks: Logical Output 10		
<b>r I -</b>	<b>[R1 CONFIGURATION] (continued)</b>		
<b>r I d</b> (1)	<b>[R1 Delay time]</b>	0 to 60,000 ms	0 ms
	The change in state only takes effect once the configured time has elapsed, when the information becomes true. The delay cannot be set for the <b>[No drive flt] (F L E)</b> assignment, and remains at 0.		

Code	Name / Description	Adjustment range	Factory setting
<i>r 1 S</i>  <i>P o S</i> <i>n E G</i>	<b>[R1 Active at]</b>  Configuration of the operating logic: <b>[1] (P o S)</b> : State 1 when the information is true <b>[0] (n E G)</b> : State 0 when the information is true Configuration <b>[1] (P o S)</b> cannot be modified for the <b>[No drive fit] (F L E)</b> assignment.		<b>[1] (P o S)</b>
<i>r 1 H</i>	<b>[R1 Holding time]</b>  The change in state only takes effect once the configured time has elapsed, when the information becomes false. The holding time cannot be set for the <b>[No drive fit] (F L E)</b> assignment, and remains at 0.	0 to 9,999 ms	0 ms
<i>r 1 F</i>  <i>Y E S</i> <i>n o</i>	<b>[Enable R1 fallback]</b>  If the output is controlled by fieldbus and has been enabled, transition to operating state Fault such as, but not limited to, communication interruption, will not disable the output if this parameter is set to <b>[No] (n o)</b> .  <div style="border: 1px solid black; padding: 5px; text-align: center;"><b>⚠ WARNING</b></div> <b>LOSS OF CONTROL</b> <ul style="list-style-type: none"> <li>Verify that using this default setting does not result in unsafe conditions including communication interruption.</li> <li>Set this parameter to <b>[YES] (Y E S)</b> to disable the output if an error is triggered.</li> </ul> <b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b>		<b>[No] (n o)</b>
	This parameter is forced to <b>[No] (n o)</b> if <b>[R1 Assignment] (r 1)</b> is set to a value different from <b>[No] (n o)</b> .  <i>Y E S</i> <b>[YES] (Y E S)</b> : Fallback feature enabled: The state of the relay can be controlled via a bit of OL1R (refer to the communication parameter addresses file). If an error is detected, the output is disabled. <b>Note:</b> If an error is detected, the process applied on the output (e.g. delays, active level) remains applied. <i>n o</i> <b>[No] (n o)</b> : Fallback feature disabled: When the output is assigned, the state of the output is defined according to its assignment. When the corresponding output is not assigned, the state of the output can be controlled via a bit of OL1R (refer to the communication parameter addresses file). If a error is detected, the output remains unchanged.		
<i>1 - o -</i>	<b>[INPUTS / OUTPUTS CFG] (continued)</b>		
<i>r 2 -</i>	<b>[R2 CONFIGURATION]</b>		
<i>r 2</i>  <i>b L C</i> <i>L L C</i> <i>o C C</i> <i>E b o</i> <i>t S Y</i>	<b>[R2 Assignment]</b>  Identical to <b>[R1 Assignment] (r 1)</b> page 146 with the addition of: <b>[Brk control] (b L C)</b> : Brake contactor control <b>[Input cont.] (L L C)</b> : Line contactor control <b>[Output cont.] (o C C)</b> : Output contactor control <b>[End reel] (E b o)</b> : End of reel (traverse control function) <b>[Sync. wobble] (t S Y)</b> : "Counter wobble" synchronization		<b>[No] (n o)</b>
<i>r 2 d</i> (1)	<b>[R2 Delay time]</b>  The delay cannot be set for the <b>[No drive fit] (F L E)</b> , <b>[Brk control] (b L C)</b> , <b>[Output cont.] (o C C)</b> and <b>[Input cont.] (L L C)</b> assignments, and remains at 0. The change in state only takes effect once the configured time has elapsed, when the information becomes true.	0 to 60,000 ms	0 ms
<i>r 2 S</i>  <i>P o S</i> <i>n E G</i>	<b>[R2 Active at]</b>  Configuration of the operating logic: <b>[1] (P o S)</b> : State 1 when the information is true <b>[0] (n E G)</b> : State 0 when the information is true The configuration <b>[1] (P o S)</b> cannot be modified for the <b>[No drive fit] (F L E)</b> , <b>[Brk control] (b L C)</b> , <b>[DC charging] (d C o)</b> , and <b>[Input cont.] (L L C)</b> assignments.		<b>[1] (P o S)</b>
<i>r 2 H</i>	<b>[R2 Holding time]</b>  The holding time cannot be set for the <b>[No drive fit] (F L E)</b> , <b>[Brk control] (b L C)</b> and <b>[Input cont.] (L L C)</b> assignments, and remains at 0. The change in state only takes effect once the configured time has elapsed, when the information becomes false.	0 to 9,999 ms	0 ms

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > I\_O- > LO1-

Code	Name / Description	Adjustment range	Factory setting
<i>r 2 F</i>	<p><b>[Enable R2 fallback]</b></p> <p>If the output is controlled by fieldbus and has been enabled, transition to operating state Fault such as, but not limited to, communication interruption, will not disable the output if this parameter is set to <b>[No] (no)</b>.</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p><b>⚠ WARNING</b></p> <p><b>LOSS OF CONTROL</b></p> <ul style="list-style-type: none"> <li>Verify that using this default setting does not result in unsafe conditions including communication interruption.</li> <li>Set this parameter to <b>[YES] (YES)</b> to disable the output if an error is triggered.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div> <p>This parameter is forced to <b>[No] (no)</b> if <b>[R2 Assignment] (r 2)</b> is set to a value different from <b>[No] (no)</b>.</p>		<b>[No] (no)</b>
<i>YES</i>	<b>[YES] (YES)</b> : Fallback feature enabled: The state of the relay can be controlled via a bit of OL1R (refer to the communication parameter addresses file). If an error is detected, the output is disabled.		
<i>no</i>	<b>[No] (no)</b> : Fallback feature disabled: When the output is assigned, the state of the output is defined according to its assignment. When the corresponding output is not assigned, the state of the output can be controlled via a bit of OL1R (refer to the communication parameter addresses file). If a error is detected, the output remains unchanged.		
<i>i_o-</i>	<b>[INPUTS / OUTPUTS CFG] (continued)</b>		
<i>LO1-</i>	<b>[LO1 CONFIGURATION]</b>		
<i>LO1</i>	<p><b>[LO1 assignment]</b></p> <p>Identical to <b>[R1 Assignment] (r 1)</b> page 146 with the addition of following parameter value (shown for information only as these selections can only be configured in the <b>[APPLICATION FUNCT.] (FUN-)</b> menu):</p> <p><i>brlc</i> <b>[Brk control] (brlc)</b>: Brake contactor control</p> <p><i>llc</i> <b>[Input cont.] (llc)</b>: Line contactor control</p> <p><i>olc</i> <b>[Output cont.] (olc)</b>: Output contactor control</p> <p><i>ebo</i> <b>[End reel] (ebo)</b>: End of reel(traverse control function)</p> <p><i>tsy</i> <b>[Sync. wobble] (tsy)</b>: "Counter wobble" synchronization</p> <p><i>gdl</i> <b>[GDL] (gdl)</b>: GDL safety function</p>		<b>[No] (no)</b>
<i>LO1d</i>	<p><b>[LO1 delay time]</b></p> <p>The delay cannot be set for the <b>[No drive fit] (FLt)</b>, <b>[Brk control] (brlc)</b>, <b>[Output cont.] (olc)</b> and <b>[Input cont.] (llc)</b> assignments, and remains at 0.</p> <p>The change in state only takes effect once the configured time has elapsed, when the information becomes true.</p> <p>(1) 0 to 9,999 ms then 10.00 to 60.00 s on the integrated display terminal.</p>	0 to 60,000 ms (1)	0 ms
<i>LO1S</i>	<p><b>[LO1 active at]</b></p> <p>Configuration of the operating logic:</p> <p><i>pos</i> <b>[1] (pos)</b>: State 1 when the information is true</p> <p><i>neg</i> <b>[0] (neg)</b>: State 0 when the information is true</p> <p>The configuration <b>[1] (pos)</b> cannot be modified for the <b>[No drive fit] (FLt)</b>, <b>[Brk control] (brlc)</b> and <b>[Input cont.] (llc)</b> assignments.</p>		<b>[1] (pos)</b>

Parameters described in this page can be accessed by: DRI- > CONF > FULL > I\_O- > LO1-

Code	Name / Description	Adjustment range	Factory setting
<b>L o I -</b>	<b>[LO1 CONFIGURATION] (continued)</b>		
<b>L o IH</b>	<b>[LO1 holding time]</b> The holding time cannot be set for the <b>[No drive fit] (F L E)</b> , <b>[Brk control] (b L E)</b> and <b>[Input cont] (L L E)</b> assignments, and remains at 0. The change in state only takes effect once the configured time has elapsed, when the information becomes false.	0 to 9,999 ms	0
<b>L o IF</b>	<b>[Enable DQ1 fallback]</b> If the output is controlled by fieldbus and has been enabled, transition to operating state Fault such as, but not limited to, communication interruption, will not disable the output if this parameter is set to <b>[No] (no)</b> .		<b>[No] (no)</b>
	<div style="border: 1px solid black; padding: 10px;"> <p><b>⚠ WARNING</b></p> <p><b>LOSS OF CONTROL</b></p> <ul style="list-style-type: none"> <li>Verify that using this default setting does not result in unsafe conditions including communication interruption.</li> <li>Set this parameter to <b>[YES] (Y E S)</b> to disable the output if an error is triggered.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div>		
	This parameter is forced to <b>[No] (no)</b> if <b>[LO1 Assignment] (L o I)</b> is set to a value different from <b>[No] (no)</b> .		
<b>Y E S</b>	<b>[YES] (Y E S)</b> : Fallback feature enabled: The state of the relay can be controlled via a bit of OL1R (refer to the communication parameter addresses file). If an error is detected, the output is disabled. <b>Note:</b> If an error is detected, the process applied on the output (e.g. delays, active level) remains applied.		
<b>n o</b>	<b>[No] (n o)</b> : Fallback feature disabled: When the output is assigned, the state of the output is defined according to its assignment. When the corresponding output is not assigned, the state of the output can be controlled via a bit of OL1R (refer to the communication parameter addresses file). If a error is detected, the output remains unchanged.		

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; I\_O- &gt; DO1-

**Use of analog output AO1 as a logic output**

Analog output AO1 can be used as a logic output, by assigning DO1. In this case, when set to 0, this output corresponds to the AO1 min. value (0 V, or 0 mA for example), and when set to 1 to the AO1 max. value (10 V, or 20 mA for example).

The electrical characteristics of this analog output remain unchanged. As these characteristics are different from logic output characteristics, check that it is still compatible with the intended application.



Code	Name / Description	Adjustment range	Factory setting
<b>I_O-</b>	<b>[INPUTS / OUTPUTS CFG] (continued)</b>		
<b>do1-</b>	<b>[DO1 CONFIGURATION]</b>		
<b>do1</b>	<b>[DO1 assignment]</b> Identical to <b>[R1 Assignment]</b> ( <b>r1</b> ) page 146 with the addition of the following parameter values (shown for information only as these selections can only be configured in the <b>[APPLICATION FUNCT.] (Fun-)</b> menu): <b>bLC</b> <b>[Brk control]</b> ( <b>bLC</b> ): Brake contactor control <b>LLC</b> <b>[Input cont.]</b> ( <b>LLC</b> ): Line contactor control <b>oCC</b> <b>[Output cont.]</b> ( <b>oCC</b> ): Output contactor control <b>Ebo</b> <b>[End reel]</b> ( <b>Ebo</b> ): End of reel(traverse control function) <b>tSY</b> <b>[Sync. wobble]</b> ( <b>tSY</b> ): "Counter wobble" synchronization		<b>[No]</b> ( <b>no</b> )
<b>do1d</b>	<b>[DO1 delay time]</b> The delay cannot be set for the <b>[No drive flt]</b> ( <b>FLt</b> ), <b>[Brk control]</b> ( <b>bLC</b> ), <b>[Output cont.]</b> ( <b>oCC</b> ) and <b>[Input cont.]</b> ( <b>LLC</b> ) assignments, and remains at 0. The change in state only takes effect once the configured time has elapsed, when the information becomes true.	0 to 60,000 ms (1)	0 ms
<b>do1S</b>	<b>[DO1 active at]</b> Configuration of the operating logic: <b>PoS</b> <b>[1]</b> ( <b>Pos</b> ): State 1 when the information is true <b>nEG</b> <b>[0]</b> ( <b>nEG</b> ): State 0 when the information is true The configuration <b>[1]</b> ( <b>Pos</b> ) cannot be modified for the <b>[No drive flt]</b> ( <b>FLt</b> ), <b>[Brk control]</b> ( <b>bLC</b> ) and <b>[Input cont.]</b> ( <b>LLC</b> ) assignments.		<b>[1]</b> ( <b>Pos</b> )
<b>do1H</b>	<b>[DO1 holding time]</b> The holding time cannot be set for the <b>[No drive flt]</b> ( <b>FLt</b> ), <b>[Brk control]</b> ( <b>bLC</b> ) and <b>[Input cont.]</b> ( <b>LLC</b> ) assignments, and remains at 0. The change in state only takes effect once the configured time has elapsed, when the information becomes false.	0 to 9,999 ms	0 ms

(1) 0 to 9,999 ms then 10.00 to 60.00 s on the integrated display terminal.

**Configuration of analog output**

**Minimum and maximum values (output values):**

The minimum output value, in volts, corresponds to the lower limit of the assigned parameter and the maximum value corresponds to its upper limit. The minimum value may be greater than the maximum value.

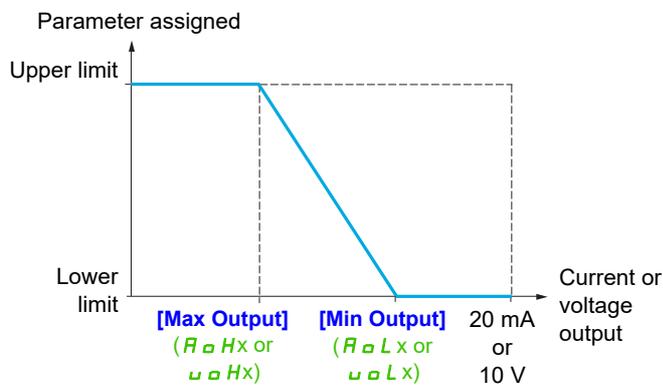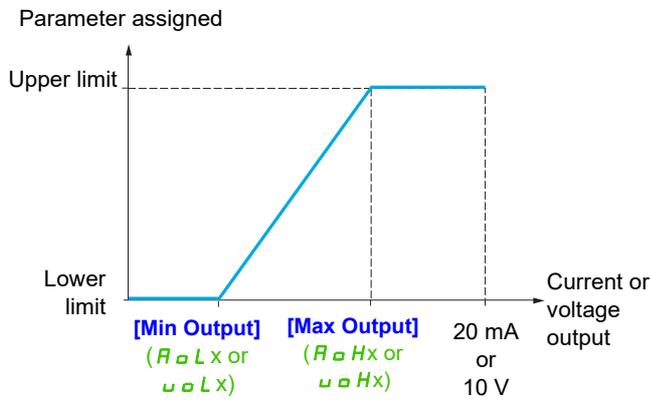


## Scaling of the assigned parameter

The scale of the assigned parameter can be adapted in accordance with requirements by modifying the values of the lower and upper limits by means of two parameters for each analog output.

These parameters are given in %. 100% corresponds to the total variation range of the configured parameter, so:  $100\% = \text{upper limit} - \text{lower limit}$ . For example, **[Sign. torque] (5 L 9)** which varies between -3 and +3 times the rated torque, 100% corresponds to 6 times the rated torque.

- The **[Scaling AOx min] (R 5 L x)** parameter modifies the lower limit:  $\text{new value} = \text{lower limit} + (\text{range} \times \text{ASLx})$ . The value 0% (factory setting) does not modify the lower limit.
- The **[Scaling AOx max] (R 5 H x)** parameter modifies the upper limit:  $\text{new value} = \text{lower limit} + (\text{range} \times \text{ASHx})$ . The value 100% (factory setting) does not modify the upper limit.
- **[Scaling AOx min] (R 5 L x)** must always be lower than **[Scaling AOx max] (R 5 H x)**.

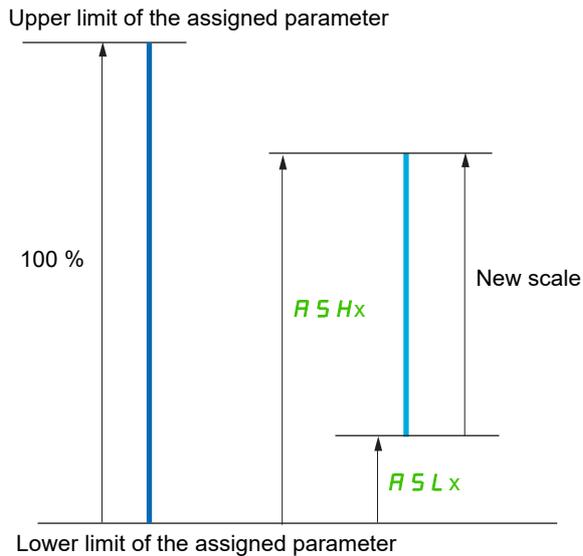

## Application example 2

The value of the motor current at the AO1 output is to be transferred with 0 - 20 mA, range 2 In motor, In motor being the equivalent of a 0.8 In drive.

The **[I motor] (a L r)** parameter varies between 0 and 2 times the rated drive current, or a range of 2.5 times the rated drive current.

**[Scaling AO1 min] (R 5 L I)** must not modify the lower limit, which therefore remains at its factory setting of 0%.

**[Scaling AO1 max] (R 5 H I)** must modify the upper limit by 0.5x the rated motor torque, or  $100 - 100/5 = 80\%$  (new value = lower limit + (range x ASH1)).

Code	Name / Description	Adjustment range	Factory setting
<b>I - O -</b>	<b>[INPUTS / OUTPUTS CFG] (continued)</b>		
<b>AO1-</b>	<b>[AO1 CONFIGURATION]</b>		
<b>AO1</b>	<b>[AO1 assignment]</b>		<b>[No] (no)</b>
no	<b>[No] (no):</b> Not assigned. In this case, the output can be controlled via the internal parameter AO1R (refer to the communication parameter addresses file). By default, if an error (such as a communication interruption) is detected, the output remains unchanged. Use the parameter <b>[Enable AQ1 fallback] (AOFI)</b> (see 153) to disable the output in case of error detection.		
ICR	<b>[I motor] (ICR):</b> Current in the motor, between 0 and 2 In (In = rated drive current indicated in the Installation manual and on the drive nameplate)		
OFr	<b>[Motor freq.] (OFr):</b> Output frequency, from 0 to <b>[Max frequency] (EFR)</b>		
OF5	<b>[Sig. o/p frq.] (OF5):</b> Signed output frequency, between - <b>[Max frequency] (EFR)</b> and + <b>[Max frequency] (EFR)</b>		
ORP	<b>[Ramp out.] (ORP):</b> From 0 to <b>[Max frequency] (EFR)</b>		
Er9	<b>[Motor torq.] (Er9):</b> Motor torque, between 0 and 3 times the rated motor torque		
5Er9	<b>[Sign. torque] (5Er9):</b> Signed motor torque, between -3 and +3 times the rated motor torque. The + sign corresponds to the motor mode and the - sign to the generator mode (braking).		
OR5	<b>[sign ramp] (OR5):</b> Signed ramp output, between - <b>[Max frequency] (EFR)</b> and + <b>[Max frequency] (EFR)</b> .		
OPS	<b>[PID ref.] (OPS):</b> PID regulator reference between <b>[Min PID reference] (PPI)</b> and <b>[Max PID reference] (PP2)</b> .		
OPF	<b>[PID feedbk] (OPF):</b> PID regulator feedback between <b>[Min PID feedback] (PFI)</b> and <b>[Max PID feedback] (PF2)</b>		
PE	<b>[PID error] (PE):</b> PID regulator error between- 5 % and + 5 % of ( <b>[Max PID feedback] (PF2)</b> - <b>[Min PID feedback] (PFI)</b> )		
OPi	<b>[PID output] (OPi):</b> PID regulator output between <b>[Low speed] (LSP)</b> and <b>[High speed] (HSP)</b>		
OPr	<b>[Mot. power] (OPr):</b> Motor power, between 0 and 2.5 times <b>[Rated motor power] (nPr)</b>		
uop	<b>[Motor volt.] (uop):</b> Voltage applied to the motor, between 0 and <b>[Rated motor volt.] (un5)</b>		
EHr	<b>[Mot thermal] (EHr):</b> Motor thermal state, between 0 and 200% of the rated thermal state		
EHr2	<b>[Mot therm2] (EHr2):</b> Motor thermal state 2, between 0 and 200 % of the rated thermal state		
EHr3	<b>[Mot thermal3] (EHr3):</b> Motor thermal state 3, between 0 and 200% of the rated thermal state		
EHd	<b>[Drv thermal] (EHd):</b> Drive thermal state, between 0 and 200% of the rated thermal state		
Er9L	<b>[Torque lim.] (Er9L):</b> Torque limit, between 0 and 3 times the rated motor torque		
DO1	<b>[dO1] (DO1):</b> Assignment to a logic output. This assignment can only appear if <b>[DO1 assignment] (DO1)</b> has been assigned. This is the only possible choice in this case, and is only displayed for informational purposes.		
Er9NS	<b>[Torque 4Q] (Er9NS):</b> Signed motor torque, between -3 and +3 times the rated motor torque. The + sign and the - sign correspond to the physical direction of the torque, regardless of mode (motor or generator).		
AO1	<b>[OA01] (AO1):</b> Function blocks: Analog Output 01		
...	...		
AO10	<b>[OA10] (AO10):</b> Function blocks: Analog Output 10		
<b>AO1E</b>	<b>[AO1 Type]</b>		<b>[Current] (OR)</b>
IDu	<b>[Voltage] (IDu):</b> Voltage output		
OR	<b>[Current] (OR):</b> Current output		
<b>AO1L</b>	<b>[AO1 min Output]</b>	0 to 20.0 mA	0 mA
★	This parameter can be accessed if <b>[AO1 Type] (AO1E)</b> is set to <b>[Current] (OR)</b> .		
<b>AO1H</b>	<b>[AO1 max Output]</b>	0 to 20.0 mA	20.0 mA
★	This parameter can be accessed if <b>[AO1 Type] (AO1E)</b> is set to <b>[Current] (OR)</b> .		
<b>uOL</b>	<b>[AO1 min Output]</b>	0 to 10.0 V	0 V
★	This parameter can be accessed if <b>[AO1 Type] (AO1E)</b> is set to <b>[Voltage] (IDu)</b> .		
<b>uOH</b>	<b>[AO1 max Output]</b>	0 to 10.0 V	10.0 V
★	This parameter can be accessed if <b>[AO1 Type] (AO1E)</b> is set to <b>[Voltage] (IDu)</b> .		
<b>ASL</b>	<b>[Scaling AO1 min]</b>	0 to 100.0%	0%
	Scaling of the lower limit of the assigned parameter, as a % of the maximum possible variation.		
<b>ASH</b>	<b>[Scaling AO1 max]</b>	0 to 100.0%	100.0%
	Scaling of the upper limit of the assigned parameter, as a % of the maximum possible variation.		
<b>AO1F</b>	<b>[AO1 Filter]</b>	0 to 10.00 s	0 s
	Interference filtering. This parameter is forced to 0 if <b>[AO1 assignment] (AO1)</b> is set to <b>[dO1] (DO1)</b> .		

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > I\_O- > AO1-

Code	Name / Description	Adjustment range	Factory setting
<b>AQ1</b>	<b>[Enable AQ1 fallback]</b> If the output is controlled by fieldbus and has been enabled, transition to operating state Fault such as, but not limited to, communication interruption, will not disable the output if this parameter is set to <b>[No] (no)</b> .		<b>[No] (no)</b>
	<b>⚠ WARNING</b>		
	<b>LOSS OF CONTROL</b>		
	<ul style="list-style-type: none"> <li>Verify that using this default setting does not result in unsafe conditions including communication interruption.</li> <li>Set this parameter to <b>[YES] (YES)</b> to disable the output if an error is triggered.</li> </ul> <b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b>		
	This parameter is forced to <b>[No] (no)</b> if <b>[AO1 Assignment] (AO1)</b> is set to a value different from <b>[No] (no)</b> .		
<b>YES</b>	<b>[YES] (YES)</b> : Fallback feature enabled: The state of the relay can be controlled via a bit of AO1R (refer to the communication parameter addresses file). If an error is detected, the output is disabled.		
	<b>Note:</b> If an error is detected, the process applied on the output (e.g. delays, active level) remains applied.		
<b>no</b>	<b>[No] (no)</b> : Fallback feature disabled: When the output is assigned, the state of the output is defined according to its assignment. When the corresponding output is not assigned, the state of the output can be controlled via a bit of AO1R (refer to the communication parameter addresses file). If a error is detected, the output remains unchanged.		

The following submenus group the alarms into 1 to 3 groups, each of which can be assigned to a relay or a logic output for remote signaling. These groups can also be displayed on the graphic display terminal (see **[3.3 MONITORING CONFIG.] (MCF -)** menu page **299**) and viewed via the **[1.2 MONITORING] (MON -)** menu page **55**.

When one or a number of alarms selected in a group occurs, this alarm group is activated.

Code	Name / Description
<b>I_O-</b>	<b>[INPUTS / OUTPUTS CFG] (continued)</b>
<b>AIC-</b>	<b>[ALARM GRP1 DEFINITION]</b>
	Selection to be made from the following list:
<b>PLA</b>	<b>[LI6=PTC al.] (PLA)</b> : LI6 = PTCL alarm
<b>EFA</b>	<b>[Ext. fault al.] (EFA)</b> : External fault alarm
<b>USA</b>	<b>[Under V. al.] (USA)</b> : Undervoltage alarm
<b>CTA</b>	<b>[I attained] (CTA)</b> : Current threshold attained ( <b>[Current threshold] (CTd)</b> page <b>110</b> )
<b>FtA</b>	<b>[Freq.Th.att.] (FtA)</b> : Frequency threshold attained ( <b>[Freq. threshold] (Ftd)</b> page <b>110</b> )
<b>F2A</b>	<b>[Freq. th.2 attained] (F2A)</b> : Frequency threshold 2 attained ( <b>[Freq. threshold 2] (F2d)</b> page <b>110</b> )
<b>SrA</b>	<b>[Freq.ref.att.] (SrA)</b> : Frequency reference attained
<b>t5A</b>	<b>[Th.mot. att.] (t5A)</b> : Motor 1 thermal state attained
<b>t52</b>	<b>[Th.mot2 att] (t52)</b> : Motor 2 thermal state attained
<b>t53</b>	<b>[Th.mot3 att] (t53)</b> : Motor 3 thermal state attained
<b>UPA</b>	<b>[Uvolt warn] (UPA)</b> : Undervoltage threshold
<b>FLA</b>	<b>[HSP attain.] (FLA)</b> : High speed attained
<b>tHA</b>	<b>[Al. °C drv] (tHA)</b> : Drive overheating
<b>PEE</b>	<b>[PID error al] (PEE)</b> : PID error alarm
<b>PFA</b>	<b>[PID fdbk al.] (PFA)</b> : PID feedback alarm
<b>APA3</b>	<b>[AI3 Al. 4-20] (APA3)</b> : Alarm indicating absence of 4-20 mA signal on input AI3
<b>SSA</b>	<b>[Lim T/I att.] (SSA)</b> : Torque limit alarm
<b>tAd</b>	<b>[Th. drv. att.] (tAd)</b> : Drive thermal state attained
<b>tJA</b>	<b>[IGBT alarm] (tJA)</b> : IGBT alarm
<b>ULA</b>	<b>[Underload. Proc. Al.] (ULA)</b> : Underload alarm
<b>OLA</b>	<b>[Overload. Proc. Al.] (OLA)</b> : Overload alarm
<b>r5dA</b>	<b>[Rope slack alarm] (r5dA)</b> : Rope slack (see <b>[Rope slack config.] (r5d)</b> parameter page <b>217</b> )
<b>tHHA</b>	<b>[High torque alarm] (tHHA)</b> : Motor torque overshooting high threshold <b>[High torque thd.] (tHL)</b> page <b>110</b> .
<b>tLLA</b>	<b>[Low torque alarm] (tLLA)</b> : Motor torque undershooting low threshold <b>[Low torque thd.] (tLL)</b> page <b>110</b> .
<b>F9LA</b>	<b>[Freq. meter Alarm] (F9LA)</b> : Measured speed threshold attained: <b>[Pulse warning thd.] (F9L)</b> page <b>110</b> .
<b>dLdA</b>	<b>[Dynamic load alarm] (dLdA)</b> : Load variation detection (see <b>[DYNAMIC LOAD DETECT.] (dLd -)</b> page <b>281</b> ). See the multiple selection procedure on page <b>38</b> for the integrated display terminal, and page <b>26</b> for the graphic display terminal.
<b>A2C-</b>	<b>[ALARM GRP2 DEFINITION]</b>
	Identical to <b>[ALARM GRP1 DEFINITION] (AIC -)</b> page <b>154</b> .
<b>A3C-</b>	<b>[ALARM GRP3 DEFINITION]</b>
	Identical to <b>[ALARM GRP1 DEFINITION] (AIC -)</b> page <b>154</b> .

## Command

The parameters in the **[COMMAND]** (C E L -) menu can only be modified when the drive is stopped and no run command is present.

## Command and reference channels

Run commands (forward, reverse, stop, etc.) and references can be sent using the following channels:

Command	Reference
Terminals: logic inputs LI or analog inputs used as logic inputs LA	Terminals: analog inputs AI, pulse input
Function blocks	Function blocks
Remote display terminal	Remote display terminal
Graphic display terminal	Graphic display terminal
Integrated Modbus	Integrated Modbus
Integrated CANopen®	Integrated CANopen®
Communication card	Communication card
	+/- speed via the terminals
	+/- speed via the graphic display terminal

If analog inputs are configured as digital inputs, the original configuration as analog inputs is not automatically removed.

## ⚠ WARNING

### UNANTICIPATED EQUIPMENT OPERATION

Verify that the configuration of an input as analog input is removed before configuring the affected input as a digital input.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

**Note:** **[LA1]** (L R 1) and **[LA2]** (L R 2) can be used as 2 logic inputs in source mode only.

- + 24 V power supply (max. 30 V)
- State 0 if < 7.5 V, state 1 if > 8.5 V.

**Note:** The stop keys on the graphic display terminal or remote display can be programmed as non-priority keys. A stop key can only have priority if the **[Stop Key priority]** (P 5 E) parameter in the **[COMMAND]** (C E L -) menu, page 163 is set to **[Yes]** (Y E 5).

The behavior of the Altivar 320 can be adapted according to requirements:


- **[Not separ.]** (S , N): Command and reference are sent via the same channel.
- **[Separate]** (S E P): Command and reference may be sent via different channels.

In these configurations, control via the communication bus is performed in accordance with the DRIVECOM standard with only 5 freely-assignable bits (see Communication Parameters Manual). The application functions cannot be accessed via the communication interface.

- **[I/O profile]** ( , a): The command and the reference can come from different channels. This configuration both simplifies and extends use via the communication interface. Commands may be sent via the logic inputs on the terminals or via the communication bus. When commands are sent via a bus, they are available on a word, which acts as virtual terminals containing only logic inputs. Application functions can be assigned to the bits in this word. More than one function can be assigned to the same bit.

**Note:** Stop commands from the graphic display terminal or remote display terminal remain active even if the terminals are not the active command channel.

Reference channel for [Not separ.] (5, n), [Separate] (SEP) and [I/O profile] (io) configurations, PID not configured

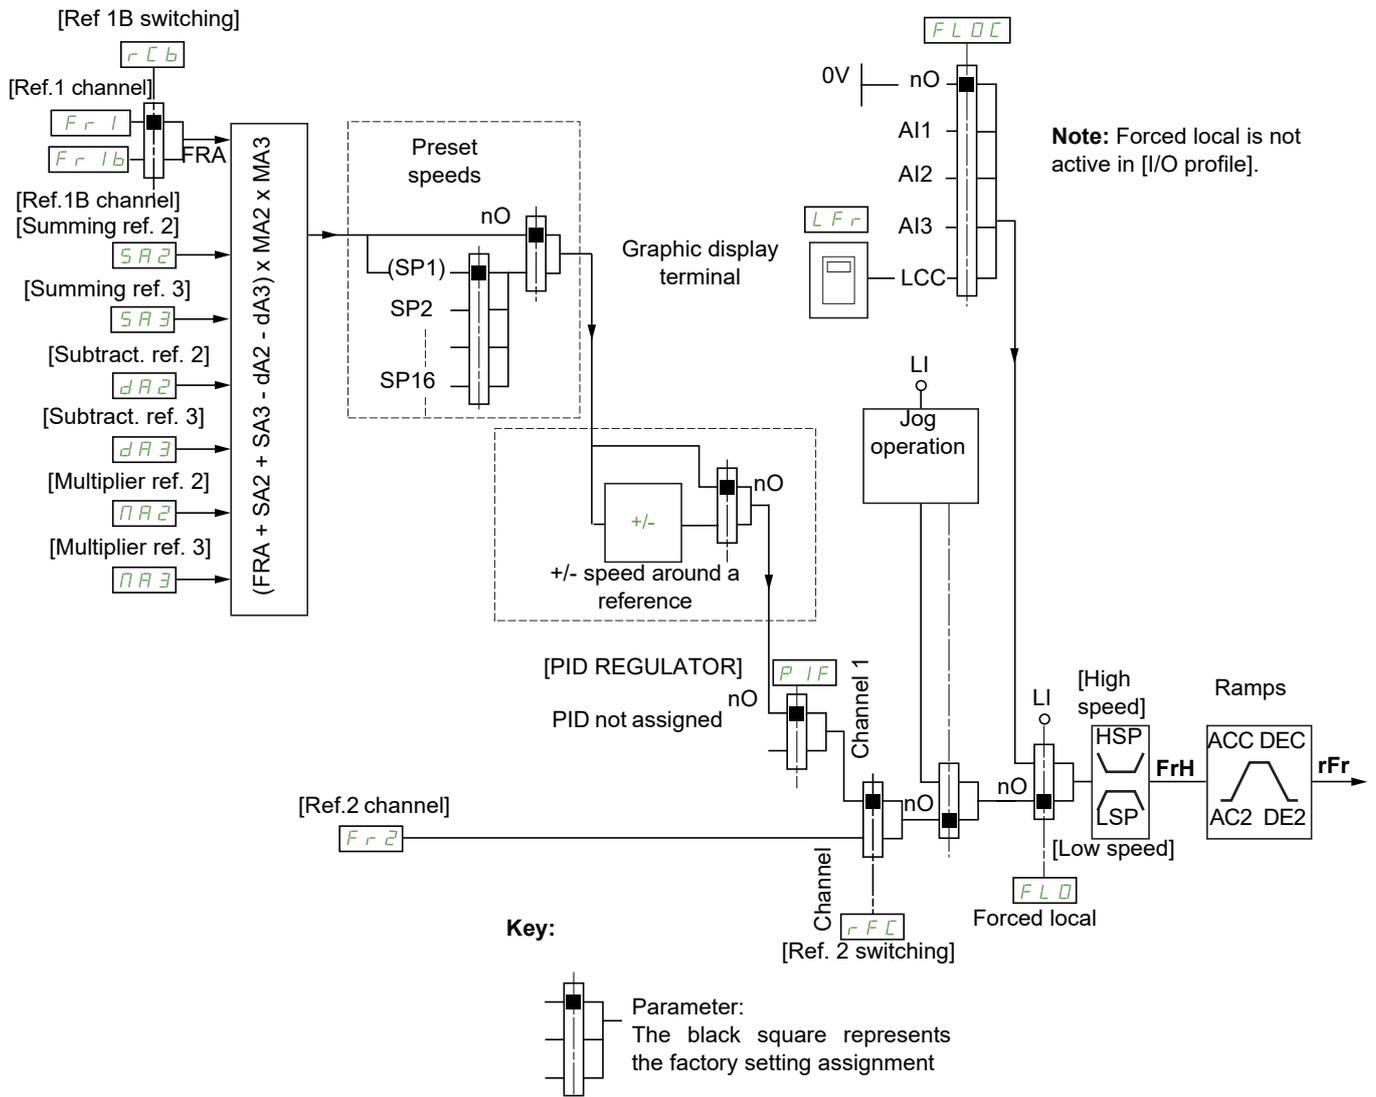

*Fr 1, SA2, SA3, dA2, dA3, nA2, nA3:*

- Terminals, graphic display terminal, integrated Modbus, integrated CANopen®, communication card

*Fr 1b*, for SEP and io:

- Terminals, graphic display terminal, integrated Modbus, integrated CANopen®, communication card

*Fr 1b*, for S, n:


- Terminals, only accessible if *Fr 1* = terminals

*Fr 2:*

- Terminals, graphic display terminal, integrated Modbus, integrated CANopen®, communication card, and +/- speed

**Note:** [Ref.1B channel] (*Fr 1b*) and [Ref 1B switching] (*rCb*) must be configured in the [APPLICATION FUNCT.] (*Fun-*) menu.

Reference channel for [Not separ.] (S, n), [Separate] (SEP) and [I/O profile] (io) configurations, PID configured with PID references at the terminals

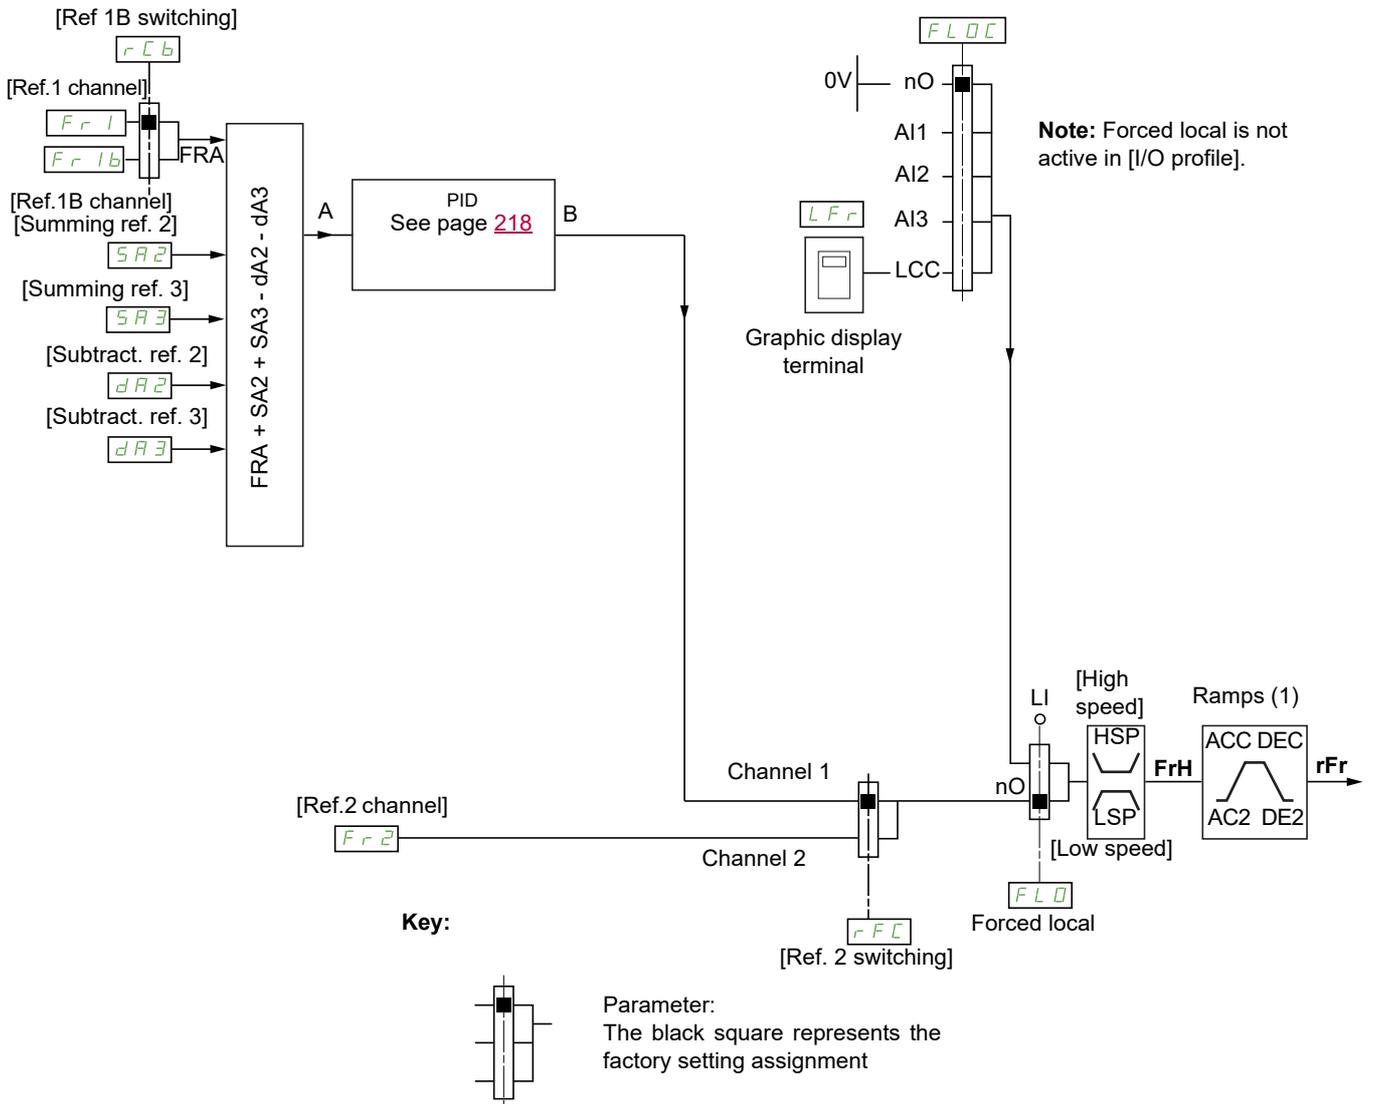

(1) Ramps not active if the PID function is active in automatic mode.

**Fr 1:**

- Terminals, graphic display terminal, integrated Modbus, integrated CANopen®, communication card

**Fr 1b, for SEP and io:**

- Terminals, graphic display terminal, integrated Modbus, integrated CANopen®, communication card

**Fr 1b, for S, n:**

- Terminals, only accessible if Fr 1 = terminals

**SA2, SA3, dA2, dA3:**

- Terminals only

**Fr 2:**

- Terminals, graphic display terminal, integrated Modbus, integrated CANopen®, communication card, **and +/- speed**


**Note:** [Ref.1B channel] (Fr 1b) and [Ref 1B switching] (rCb) must be configured in the [APPLICATION FUNCT.] (Fun-) menu.

**Command channel for [Not separ.] (5, 7) configuration**


Reference and command, not separate

The command channel is determined by the reference channel. Parameters  $F_{r1}$ ,  $F_{r2}$ ,  $rFC$ ,  $FLo$  and  $FLoC$  are common to reference and command.

Example: If the reference is  $F_{r1} = R, I$  (analog input at the terminals), control is via  $L, I$  (logic input at the terminals).

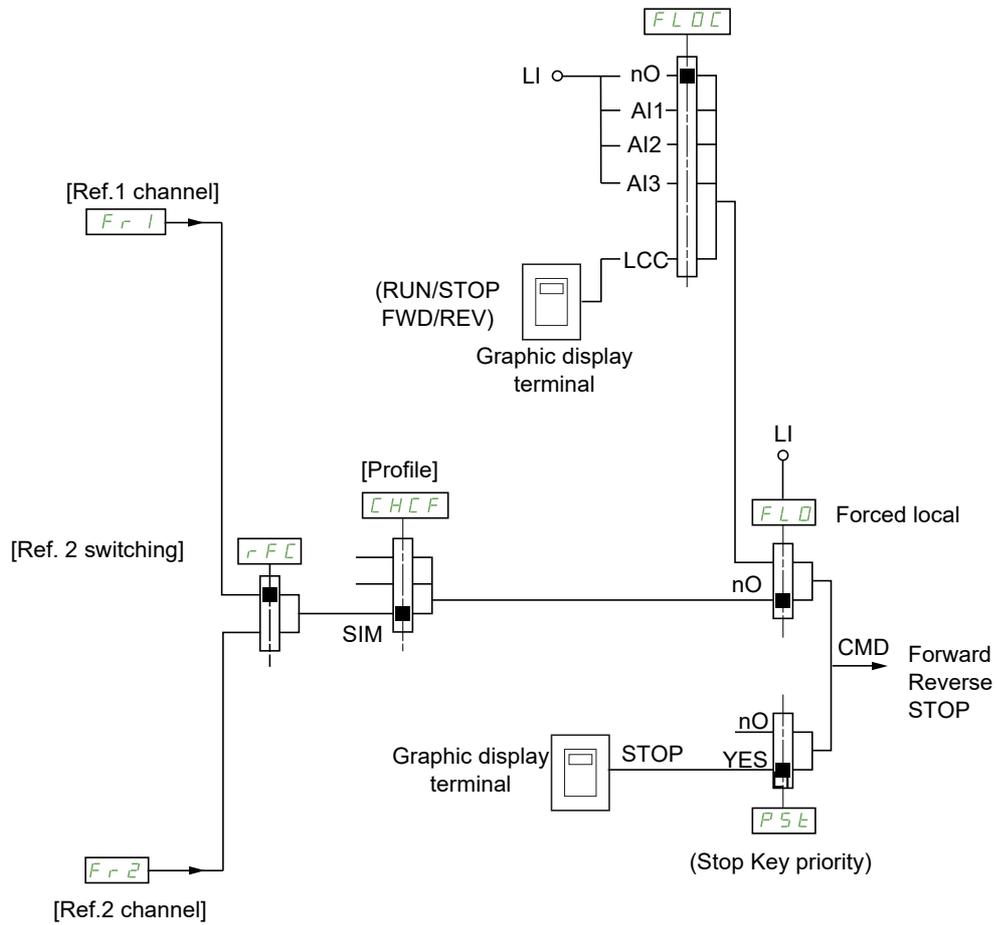

**Key:**

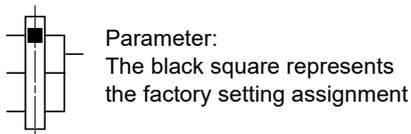





**Command channel for [I/O profile] ( , ) configuration**

Separate reference and command, as in [Separate] (SEP) configuration

The command channels Cd1 and Cd2 are independent of the reference channels Fr1, Fr1b and Fr2.

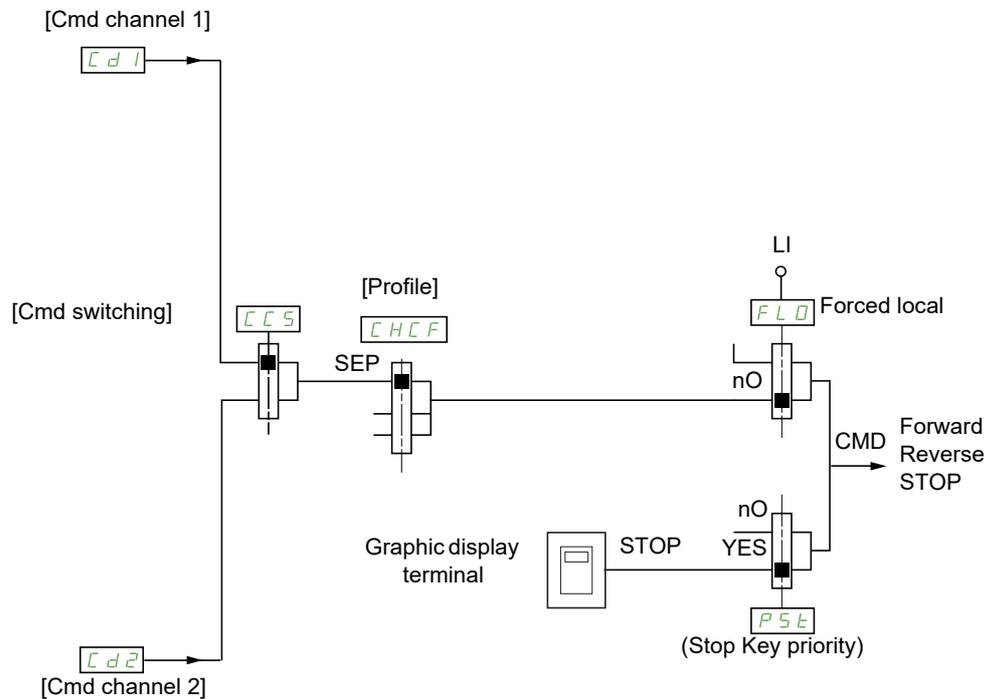

**Key:**

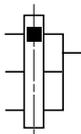

Parameter:  
The black square represents the factory setting assignment, except for [Profile].

**Cd1, Cd2:**

- Terminals, graphic display terminal, integrated Modbus, integrated CANopen®, communication card

A command or an action can be assigned:

- To a fixed channel by selecting an L , input or a Cxxx bit:
  - By selecting, for example, L , 3, this action will be triggered by L , 3 regardless of which command channel is switched.
  - By selecting, for example, C2 14, this action will be triggered by integrated CANopen® with bit 14 regardless of which command channel is switched.
- To a switchable channel by selecting a CDxx bit:
  - By selecting, for example, Cd 1 1, this action will be triggered by:
    - L , 12 if the terminals channel is active
    - C 1 1 1 if the integrated Modbus channel is active
    - C 2 1 1 if the integrated CANopen® channel is active
    - C 3 1 1 if the communication card channel is active

If the active channel is the graphic display terminal, the functions and commands assigned to CDxx switchable internal bits are inactive.

**Note:** Cd06 to Cd13 can only be used for switching between 2 networks. They do not have equivalent logic inputs.

Terminals	Integrated Modbus	Integrated CANopen®	Communication card	Internal bit, can be switched
				CD00
LI2 (1)	C101 (1)	C201 (1)	C301 (1)	CD01
LI3	C102	C202	C302	CD02
LI4	C103	C203	C303	CD03
LI5	C104	C204	C304	CD04
LI6	C105	C205	C305	CD05
-	C106	C206	C306	CD06
-	C107	C207	C307	CD07
-	C108	C208	C308	CD08
-	C109	C209	C309	CD09
-	C110	C210	C310	CD10
-	C111	C211	C311	CD11
-	C112	C212	C312	CD12
LAI1	C113	C213	C313	CD13
LAI2	C114	C214	C314	CD14
-	C115	C215	C315	CD15
OL01 to OL10				

(1) If [2/3 wire control] (ECC) page 93 is set to [3 wire] (EC), L12, C101, C201 and C301 cannot be accessed.

### Assignment conditions for logic inputs and control bits

The following elements are available for every command or function that can be assigned to a logic input or a control bit:

[L11] (L , 1) to [L16] (L , 6)	Logical inputs
[LAI1] (L R , 1) to [LAI2] (L R , 2)	Virtual logic input
[C101] (C 10 1) to [C110] (C 1 10)	With integrated <b>Modbus</b> in [I/O profile] ( , 0) configuration
[C111] (C 1 1 1) to [C115] (C 1 1 5)	With integrated <b>Modbus</b> regardless of configuration
[C201] (C 2 0 1) to [C210] (C 2 1 0)	With integrated <b>CANopen®</b> in [I/O profile] ( , 0) configuration
[C211] (C 2 1 1) to [C215] (C 2 1 5)	With integrated <b>CANopen®</b> regardless of configuration
[C301] (C 3 0 1) to [C310] (C 3 1 0)	With a <b>communication card</b> in [I/O profile] ( , 0) configuration
[C311] (C 3 1 1) to [C315] (C 3 1 5)	With a <b>communication card</b> regardless of configuration
[CD00] (C d 0 0) to [CD10] (C d 1 0)	In [I/O profile] ( , 0) configuration
[CD11] (C d 1 1) to [CD15] (C d 1 5)	Regardless of configuration
[OL01] (0 L 0 1) to [OL10] (0 L 1 0)	Regardless of configuration

**Note:** In [I/O profile] ( , 0) configuration, L , 1 cannot be accessed and if [2/3 wire control] (E C C) page 93 is set to [3 wire] (3 C), L , 2, C 10 1, C 20 1 and C 30 1 cannot be accessed either.

Code	Name / Description	Adjustment range	Factory setting
<b>FULL</b>	<b>[FULL] (continued)</b>		
<b>CTL -</b>	<b>[COMMAND]</b>		
<b>Fr I</b>	<b>[Ref.1 channel]</b>		<b>[AI1] (R I I)</b>
<b>A I 1</b>	<b>[AI1] (R I I):</b> Analog input A1		
<b>A I 2</b>	<b>[AI2] (R I 2):</b> Analog input A2		
<b>A I 3</b>	<b>[AI3] (R I 3):</b> Analog input A3		
<b>L C C</b>	<b>[HMI] (L C C):</b> Graphic display terminal or remote display terminal source		
<b>Π d b</b>	<b>[Modbus] (Π d b):</b> Integrated Modbus		
<b>C A n</b>	<b>[CANopen] (C A n):</b> Integrated CANopen®		
<b>n E t</b>	<b>[Com. card] (n E t):</b> Communication card (if inserted)		
<b>P i</b>	<b>[RP] (P i):</b> Pulse input		
<b>A i u I</b>	<b>[AI virtual 1] (A i u I):</b> Virtual analog input 1 with the jog dial (only available if <b>[Profile] (C H C F)</b> is not set to <b>[Not separ.] (S , Π)</b> )		
<b>O A 0 1</b>	<b>[OA01] (O A 0 1):</b> Function blocks: Analog Output 01		
...	...		
<b>O A 1 0</b>	<b>[OA10] (O A 1 0):</b> Function blocks: Analog Output 10		
<b>r i n</b>	<b>[RV Inhibition]</b>		<b>[No] (n o)</b>
	Inhibition of movement in reverse direction, does not apply to direction requests sent by logic inputs. Reverse direction requests sent by logic inputs are taken into account. Reverse direction requests sent by the graphic display terminal are not taken into account. Reverse direction requests sent by the fieldbus are not taken into account. Any reverse speed reference originating from the PID, summing input, etc., is interpreted as a zero reference (0 Hz).		
<b>n o</b>	<b>[No] (n o)</b>		
<b>Y E S</b>	<b>[Yes] (Y E S)</b>		
<b>P S t</b>	<b>[Stop Key priority]</b>		<b>[Yes] (Y E S)</b>
 2 s	<div style="border: 1px solid black; padding: 10px;"> <p style="text-align: center;"><b>⚠ WARNING</b></p> <p><b>LOSS OF CONTROL</b></p> <p>Setting this function to <b>[NO] (n o)</b> disables the Stop keys of the Remote Display Terminal if the setting of the parameter <b>[Command channel] (C Π d C)</b> is not <b>[HMI] (H Π i)</b>.</p> <p>Only set this parameter to <b>[No] (n o)</b> if you have implemented appropriate alternative stop functions.</p> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div> <p>This will be a freewheel stop. If the active command channel is the graphic display terminal, the stop will be performed according to the <b>[Type of stop] (S t t)</b> page <a href="#">182</a> irrespective of the configuration of <b>[Stop Key priority] (P S t)</b>.</p>		
<b>n o</b>	<b>[No] (n o)</b>		
<b>Y E S</b>	<b>[Yes] (Y E S):</b> Gives priority to the STOP key on the graphic display terminal when the graphic display terminal is not enabled as the command channel.		
<b>C H C F</b>	<b>[Profile]</b>		<b>[Not separ.] (S , Π)</b>
 2 s	<div style="border: 1px solid black; padding: 10px;"> <p style="text-align: center;"><b>⚠ WARNING</b></p> <p><b>UNANTICIPATED EQUIPMENT OPERATION</b></p> <p>Disabling <b>[I/O profile] ( i o)</b> resets the drive to the factory settings.</p> <ul style="list-style-type: none"> <li>Verify that restoring the factory settings is compatible with the type of wiring used.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div>		
<b>S , Π</b>	<b>[Not separ.] (S , Π):</b> Reference and command, not separate		
<b>S E P</b>	<b>[Separate] (S E P):</b> Separate reference and command. This assignment cannot be accessed in <b>[I/O profile] ( i o)</b> .		
<b>i o</b>	<b>[I/O profile] ( i o):</b> I/O profile		

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > CTL-

Code	Name / Description	Adjustment range	Factory setting
<p><b>CC5</b></p> <p>★</p> <p><b>CD1</b> [ch1 active] (CD1): [Cmd channel 1] (CD1) active (no switching)</p> <p><b>CD2</b> [ch2 active] (CD2): [Cmd channel 2] (CD2) active (no switching)</p> <p><b>LI1</b> (LI1): Logical input LI1</p> <p>... [..] (...): See the assignment conditions on page 162 (not CDD0 to CD15)</p>	<p><b>[Cmd switching]</b></p> <div style="border: 1px solid black; padding: 10px; text-align: center;"> <p><b>⚠ WARNING</b></p> <p><b>UNANTICIPATED EQUIPMENT OPERATION</b></p> <p>This parameter can cause unintended movements, for example, inversion of the direction of rotation of the motor, sudden acceleration or stops.</p> <ul style="list-style-type: none"> <li>• Verify that the setting of this parameter does not cause unintended movements.</li> <li>• Verify that the setting of this parameter does not result in unsafe conditions.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div> <p>This parameter can be accessed if <b>[Profile] (CHF)</b> is set to <b>[Separate] (SEP)</b> or <b>[I/O profile] (IO)</b>.                      If the assigned input or bit is at 0, channel <b>[Cmd channel 1] (CD1)</b> is active.                      If the assigned input or bit is at 1, channel <b>[Cmd channel 2] (CD2)</b> is active.                      If <b>[Profile] (CHF)</b> is set to <b>[Not separ.] (S, N)</b>, only <b>[Cmd channel 1] (CD1)</b> setting value is possible.</p>		<p><b>[ch1 active] (CD1)</b></p>
<p><b>CD1</b></p> <p>★</p> <p><b>TER</b> [Terminals] (TER): Terminals</p> <p><b>LCC</b> [HMI] (LCC): Graphic display terminal or remote display terminal</p> <p><b>MOD</b> [Modbus] (MOD): Integrated Modbus</p> <p><b>CAN</b> [CANopen] (CAN): Integrated CANopen®</p> <p><b>NET</b> [Com. card] (NET): Communication card (if inserted)</p>	<p><b>[Cmd channel 1]</b></p> <p>This parameter can be accessed if <b>[Profile] (CHF)</b> is set to <b>[Separate] (SEP)</b> or <b>[I/O profile] (IO)</b>.</p>		<p><b>[Terminals] (TER)</b></p>
<p><b>CD2</b></p> <p>★</p> <p><b>TER</b> [Terminals] (TER): Terminals</p> <p><b>LCC</b> [HMI] (LCC): Graphic display terminal or remote display terminal</p> <p><b>MOD</b> [Modbus] (MOD): Integrated Modbus</p> <p><b>CAN</b> [CANopen] (CAN): Integrated CANopen®</p> <p><b>NET</b> [Com. card] (NET): Communication card (if inserted)</p>	<p><b>[Cmd channel 2]</b></p> <p>This parameter can be accessed if <b>[Profile] (CHF)</b> is set to <b>[Separate] (SEP)</b> or <b>[I/O profile] (IO)</b>.</p>		<p><b>[Modbus] (MOD)</b></p>
<p><b>RF1</b></p> <p><b>RF2</b> [Ref. 1 channel] (RF1): [Cmd channel 1] (CD1) active (no switching)</p> <p><b>RF2</b> [Ref. 2 channel] (RF2): [Cmd channel 2] (CD2) active (no switching)</p> <p><b>LI1</b> (LI1): Logical input LI1</p> <p>... [..] (...): See the assignment conditions on page 162 (not CDD0 to CD15)</p>	<p><b>[Ref. 2 switching]</b></p> <div style="border: 1px solid black; padding: 10px; text-align: center;"> <p><b>⚠ WARNING</b></p> <p><b>UNANTICIPATED EQUIPMENT OPERATION</b></p> <p>This parameter can cause unintended movements, for example, inversion of the direction of rotation of the motor, sudden acceleration or stops.</p> <ul style="list-style-type: none"> <li>• Verify that the setting of this parameter does not cause unintended movements.</li> <li>• Verify that the setting of this parameter does not result in unsafe conditions.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div> <p>If the assigned input or bit is at 0, channel <b>[Cmd channel 1] (CD1)</b> is active.                      If the assigned input or bit is at 1, channel <b>[Cmd channel 2] (CD2)</b> is active.</p>		<p><b>[Ref.1 channel] (RF1)</b></p>

Parameters described in this page can be accessed by: DRI- > CONF > FULL > CTL-

Code	Name / Description	Adjustment range	Factory setting
<b>Fr2</b>	<b>[Ref.2 channel]</b>		<b>[No] (no)</b>
no	[No] (no): Not assigned. If [Profile] (CHF) is set to [Not separ.] (SN), the command is at the terminals with a zero reference. If [Profile] (CHF) is set to [Separate] (SEP) or [I/O profile] (IO), the reference is zero.		
R11	[AI1] (R11): Analog input A1		
R12	[AI2] (R12): Analog input A2		
R13	[AI3] (R13): Analog input A3		
uPdt	[+/-Speed] (uPdt): +/- speed command		
LCC	[HMI] (LCC): Graphic display terminal or remote display terminal		
Modb	[Modbus] (Modb): Integrated Modbus		
CAN	[CANopen] (CAN): Integrated CANopen®		
NEt	[Com. card] (NEt): Communication card (if inserted)		
Pi	[RP] (Pi): Pulse input		
Rv1	[AI virtual 1] (Rv1): Virtual analog input 1 with the jog dial		
OAD1	[OA01] (OAD1): Function blocks: Analog Output 01		
...	...		
ORA10	[OA10] (ORA10): Function blocks: Analog Output 10		
<b>COP</b>	<b>[Copy channel 1 &lt;&gt; 2]</b>		<b>[No] (no)</b>
 2 s	<div style="border: 1px solid black; padding: 10px;"> <p style="text-align: center;"><b>⚠ WARNING</b></p> <p><b>UNANTICIPATED EQUIPMENT OPERATION</b></p> <p>This parameter can cause unintended movements, for example, inversion of the direction of rotation of the motor, sudden acceleration or stops.</p> <ul style="list-style-type: none"> <li>• Verify that the setting of this parameter does not cause unintended movements.</li> <li>• Verify that the setting of this parameter does not result in unsafe conditions</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div>		
	<p>Can be used to copy the current reference and/or the command by means of switching, in order to avoid speed surges, for example.</p> <p>If [Profile] (CHF) page 163 is set to [Not separ.] (SN) or [Separate] (SEP), copying will only be possible from channel 1 to channel 2.</p> <p>If [Profile] (CHF) is set to [I/O profile] (IO), copying will be possible in both directions.</p> <p>A reference or a command cannot be copied to a channel on the terminals.</p> <p>The reference copied is [Frequency ref.] (FRH) (before ramp) unless the destination channel reference is set via +/- speed. In this case, the reference copied is [Output frequency] (RFR) (after ramp).</p>		
no	[No] (no): No copy		
SP	[Reference] (SP): Copy reference		
Cd	[Command] (Cd): Copy command		
ALL	[Cmd + ref.] (ALL): Copy command and reference		

 These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

 2 s To change the assignment of this parameter, press the ENT key for 2 s.

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > CTL-

As the graphic display terminal may be selected as the command and/or reference channel, its action modes can be configured.

The parameters on this page can only be accessed on the graphic display terminal, and not on the integrated display terminal.

Comments:

- The display terminal command/reference is only active if the command and/or reference channels from the terminal are active with the exception of **[T/K] (F E)** (command via the display terminal), which takes priority over these channels. Press **[T/K] (F E)** (command via the display terminal) again to revert control to the selected channel.
- Command and reference via the display terminal are impossible if the latter is connected to more than one drive.
- The JOG, preset speed and +/- speed functions can only be accessed if **[Profile] (C H C F)** is set to **[Not separ.] (5 , Π)**.
- The preset PID reference functions can only be accessed if **[Profile] (C H C F)** is set to **[Not separ.] (5 , Π)** or **[Separate] (5 E P)**.
- The **[T/K] (F E)** (command via the display terminal) can be accessed regardless of the **[Profile] (C H C F)**.

Code	Name / Description	Adjustment range	Factory setting
<b>F n 1</b>	<b>[F1 key assignment]</b>		<b>[No] (n o)</b>
<b>n o</b>	<b>[No] (n o)</b> : Not assigned		
<b>F J o G</b>	<b>[Jog] (F J o G)</b> : JOG operation		
<b>F P S 1</b>	<b>[Preset spd2] (F P S 1)</b> : Press the key to run the drive at the 2nd preset speed <b>[Preset speed 2] (5 P 2)</b> page 105. Press STOP to stop the drive.		
<b>F P S 2</b>	<b>[Preset spd3] (F P S 2)</b> : Press the key to run the drive at the 3rd preset speed <b>[Preset speed 3] (5 P 3)</b> page 105. Press STOP to stop the drive.		
<b>F P r 1</b>	<b>[PID ref. 2] (F P r 1)</b> : Sets a PID reference equal to the 2nd preset PID reference <b>[Preset ref. PID 2] (r P 2)</b> page 107, without sending a run command. Only operates if <b>[Ref.1 channel] (F r 1)</b> is set to <b>[HMI] (L C C)</b> . Does not operate with the <b>[T/K] (F E)</b> function.		
<b>F P r 2</b>	<b>[PID ref. 3] (F P r 2)</b> : Sets a PID reference equal to the 3rd preset PID reference <b>[Preset ref. PID 3] (r P 3)</b> page 108, without sending a run command. Only operates if <b>[Ref.1 channel] (F r 1)</b> is set to <b>[HMI] (L C C)</b> . Does not operate with the <b>[T/K] (F E)</b> function.		
<b>F u S P</b>	<b>[+speed] (F u S P)</b> : Faster, only operates if <b>[Ref.2 channel] (F r 2)</b> is set to <b>[HMI] (L C C)</b> . Press the key to run the drive and increase the speed. Press STOP to stop the drive.		
<b>F d S P</b>	<b>[- speed] (F d S P)</b> : Slower, only operates if <b>[Ref.2 channel] (F r 2)</b> is set to <b>[HMI] (L C C)</b> and if a different key has been assigned to <b>[+ speed]</b> . Press the key to run the drive and decrease the speed. Press STOP to stop the drive.		
<b>F E</b>	<b>[T/K] (F E)</b> : Command via the display terminal: Takes priority over <b>[Cmd switching] (C C 5)</b> and over <b>[Ref. 2 switching] (r F C)</b> .		
<b>F n 2</b>	<b>[F2 key assignment]</b>		<b>[No] (n o)</b>
	Identical to <b>[F1 key assignment] (F n 1)</b> page 166.		
<b>F n 3</b>	<b>[F3 key assignment]</b>		<b>[No] (n o)</b>
	Identical to <b>[F1 key assignment] (F n 1)</b> page 166.		
<b>F n 4</b>	<b>[F4 key assignment]</b>		<b>[No] (n o)</b>
	Identical to <b>[F1 key assignment] (F n 1)</b> page 166.		
<b>b Π P</b>	<b>[HMI cmd.]</b>		<b>[Stop] (5 E o P)</b>
★	When the <b>[T/K] (F E)</b> function is assigned to a key and that function is active, this parameter defines the behavior at the moment when control returns to the graphic display terminal or remote display terminal.		
<b>5 E o P</b>	<b>[Stop] (5 E o P)</b> : Stops the drive (although the controlled direction of operation and reference of the previous channel are copied (to be taken into account on the next RUN command)).		
<b>b u Π F</b>	<b>[Bumpless] (b u Π F)</b> : Does not stop the drive (the controlled direction of operation and the reference of the previous channel are copied)		



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

**Function Block Management**

Code	Name / Description	Adjustment range	Factory setting
<b>FULL</b>	<b>[FULL] (continued)</b>		
<b>FbΠ-</b>	<b>[FUNCTION BLOCKS]</b>		
<b>ΠFb-</b>	<b>[MONIT. FUN. BLOCKS]</b> <b>Note:</b> This section shows only what is possible to do with local or remote display on the drive. For advanced configuration using PC software, please refer to the dedicated Function blocks manual.		
<b>FbSt</b>	<b>[FB Status]</b> <b>idle</b> <b>[Idle] (idle):</b> No binary file in the target, the FB is waiting for a download <b>CHEC</b> <b>[Check prog.] (CHEC):</b> Check the program downloaded <b>StoP</b> <b>[Stop] (StoP):</b> The Function blocks application is stopped <b>init</b> <b>[Init] (init):</b> Check coherency between ATVLogic program and Function blocks parameters <b>run</b> <b>[Run] (run):</b> The Function blocks application is running <b>Err</b> <b>[Error] (Err):</b> An internal error has been detected. The Function blocks application is in fault state mode.		
<b>FbFt</b>	<b>[FB Fault]</b> <b>no</b> <b>[No] (no):</b> No detected fault <b>int</b> <b>[Internal] (int):</b> Internal detected error <b>bin</b> <b>[Binary file] (bin):</b> Binary file corrupted <b>inP</b> <b>[Intern Para.] (inP):</b> Internal parameter detected error <b>PAR</b> <b>[Para. RW] (PAR):</b> Parameter access detected error <b>CAL</b> <b>[Calculation] (CAL):</b> Calculation detected error <b>toAUX</b> <b>[TO AUX] (toAUX):</b> TimeOut AUX task <b>toPP</b> <b>[TO synch] (toPP):</b> TimeOut in PRE/POST task <b>ADL</b> <b>[Bad ADLC] (ADL):</b> ADLC with bad parameter <b>in</b> <b>[Input assig.] (in):</b> Input not configured		
<b>FbI-</b>	<b>[FB IDENTIFICATION]</b>		
<b>buEr</b> ★	<b>[Program version]</b> Program user version.	0 to 255	-
<b>bnS</b> ★	<b>[Program size]</b> Program file size.	0 to 65,535	-
<b>bnv</b>	<b>[Prg. format version]</b> Binary format version of the drive.	0 to 255	-
<b>Ctu</b>	<b>[Catalog version]</b> Catalog version of the drive.	0 to 65,535	-
<b>FbΠ-</b>	<b>[FUNCTION BLOCKS] (continued)</b>		
<b>FbCd</b> ( )	<b>[FB Command]</b> Allows to start and stop the function blocks manually.  <b>[FB Command] (FbCd)</b> is forced to <b>[Stop] (StoP)</b> if there is no valid function blocks application in the drive memory. <b>[FB Command] (FbCd)</b> is set to <b>[Start] (StErT)</b> when the function blocks application switch to Run according to <b>[FB start mode] (FbrΠ)</b> configuration. <b>Note:</b> As soon as the function blocks are started, the drive is considered as in running state and the modification of configuration parameters is no longer possible.  <b>StoP</b> <b>[Stop] (StoP):</b> Function blocks application Stop command <b>StErT</b> <b>[Start] (StErT):</b> Function blocks application Start command		




Code	Name / Description	Adjustment range	Factory setting
<b>IA01</b>	<b>[Analog input 1 assignment]</b> Function blocks analog input 1 assignment Possible assignment for the Function block analog input.  no [No] (no): Not assigned AI1 [AI1] (AI1): Analog input A1 AI2 [AI2] (AI2): Analog input A2 AI3 [AI3] (AI3): Analog input A3 I [I motor] (I): Motor current Fr [Motor freq.] (Fr): Motor speed rP [Ramp. out] (rP): Ramp output tQ [Motor torq.] (tQ): Motor torque StQ [Sign torque] (StQ): Signed motor torque rS [Sign ramp] (rS): Signed ramp output P5 [PID ref.] (P5): PI(D) reference PF [PID feedbk] (PF): PI(D) feedback PE [PID error] (PE): PI(D) error Pi [PID output] (Pi): PI(D) integral Pr [Mot. power] (Pr): Motor power Hr [Mot. thermal] (Hr): Motor thermal state Hd [Drv thermal] (Hd): Drive thermal state 4Q [Torque 4Q] (4Q): Signed motor torque F5 [Sig. o/p frq.] (F5): Signed output frequency Hr2 [Mot therm2] (Hr2): Motor 2 thermal state Hr3 [Mot therm3] (Hr3): Motor 3 thermal state vP [Motor volt.] (vP): Motor voltage P [RP] (P): Pulse input AI1 [AI virtual 1] (AI1): Virtual analog input 1 with the jog dial DO1 [DO1] (DO1): Analog/logical output DO1 AI2 [AI virtual 2] (AI2): Virtual analog input 2 by the communication bus OA01 [OA01] (OA01): Function blocks: Analog Output 01 ... OA10 [OA10] (OA10): Function blocks: Analog Output 10		[No] (no)
<b>IA--</b>	<b>[Analog input x assignment]</b> Function blocks analog input x assignment All the Function blocks analog inputs available on the drive are processed as in the example for [IA01] (IA01) above, up to [IA10] (IA10).		[No] (no)
<b>FBP-</b>	<b>[FUNCTION BLOCKS] (continued)</b>		
<b>FAd-</b>	<b>[ADL CONTAINERS]</b> ADL containers contain Modbus logical address of internal parameters of the drive. If the chosen address is valid, the display shows the parameter name instead of the address.		
<b>LA01</b>	ADL Container 01	3,015 to 64,299	0
<b>LA02</b>	ADL Container 02	3,015 to 64,299	0
<b>LA03</b>	ADL Container 03	3,015 to 64,299	0
<b>LA04</b>	ADL Container 04	3,015 to 64,299	0
<b>LA05</b>	ADL Container 05	3,015 to 64,299	0
<b>LA06</b>	ADL Container 06	3,015 to 64,299	0
<b>LA07</b>	ADL Container 07	3,015 to 64,299	0
<b>LA08</b>	ADL Container 08	3,015 to 64,299	0

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FBM- &gt; FBP-

Code	Name / Description	Adjustment range	Factory setting
<b>F b P -</b>	<b>[FUNCTION BLOCKS] (continued)</b>		
<b>F b P -</b>	<b>[FB PARAMETERS]</b> Internal parameters available for the user program.		
<b>n 0 0 1</b> (1) 	<b>[ ]</b> Function blocks M001 assignment M001 Parameter saved in EEprom.	0 to 65,535	0
<b>n 0 0 2</b> (1) 	<b>[ ]</b> Function blocks M002 assignment M002 Parameter saved in EEprom	0 to 65,535	0
<b>n 0 0 3</b> (1) 	<b>[ ]</b> Function blocks M003 assignment M003 Parameter saved in EEprom	0 to 65,535	0
<b>n 0 0 4</b> (1) 	<b>[ ]</b> Function blocks M004assignment M004 Parameter saved in EEprom	0 to 65,535	0
<b>n 0 0 5</b> (1) 	<b>[ ]</b> Function blocks M005 assignment M005 Parameter written in RAM	0 to 65,535	0
<b>n 0 0 6</b> (1) 	<b>[ ]</b> Function blocks M006 assignment M006 Parameter written in RAM	0 to 65,535	0
<b>n 0 0 7</b> (1) 	<b>[ ]</b> Function blocks M007 assignment M007 Parameter written in RAM	0 to 65,535	0
<b>n 0 0 8</b> (1) 	<b>[ ]</b> Function blocks M008 assignment M008 Parameter written in RAM	0 to 65,535	0

(1) If a graphic display terminal is not in use, values greater than 9,999 will be displayed on the 4-digit display with a period mark after the thousand digit, for example, 15.65 for 15,650.

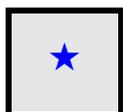

These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.

**[APPLICATION FUNCT.] (Funct.)**

Summary of functions:

Code	Name	Page
(rEF-)	[REFERENCE SWITCH.]	<a href="#">176</a>
(oRi-)	[REF. OPERATIONS]	<a href="#">177</a>
(rPt-)	[RAMP]	<a href="#">179</a>
(Stt-)	[STOP CONFIGURATION]	<a href="#">182</a>
(AdC-)	[AUTO DC INJECTION]	<a href="#">185</a>
(Jog-)	[JOG]	<a href="#">187</a>
(PSS-)	[PRESET SPEEDS]	<a href="#">190</a>
(uPd)	[+/- SPEED]	<a href="#">194</a>
(SrE-)	[+/-SPEED AROUND REF.]	<a href="#">196</a>
(SPN-)	[MEMO REFERENCE]	<a href="#">197</a>
(FLi-)	[FLUXING BY LI]	<a href="#">198</a>
(bLC-)	[BRAKE LOGIC CONTROL]	<a href="#">206</a>
(ELN-)	[EXTERNAL WEIGHT MEAS.]	<a href="#">212</a>
(HSH-)	[HIGH SPEED HOISTING]	<a href="#">216</a>
(Pid-)	[PID REGULATOR]	<a href="#">222</a>
(PrI-)	[PID PRESET REFERENCES]	<a href="#">226</a>
(tOL-)	[TORQUE LIMITATION]	<a href="#">228</a>
(CLi-)	[2nd CURRENT LIMIT.]	<a href="#">230</a>
(i2t-)	[DYN CURRENT LIMIT]	<a href="#">231</a>
(LLC-)	[LINE CONTACTOR COMMAND]	<a href="#">233</a>
(oCC-)	[OUTPUT CONTACTOR CMD]	<a href="#">235</a>
(LPo-)	[POSITIONING BY SENSORS]	<a href="#">239</a>
(nLP-)	[PARAM. SET SWITCHING]	<a href="#">243</a>
(nnc-)	[MULTIMOTORS/CONFIG.]	<a href="#">248</a>
(tNL-)	[AUTO TUNING BY LI]	<a href="#">249</a>
(tro-)	[TRAVERSE CONTROL]	<a href="#">250</a>
(CHS-)	[HSP SWITCHING]	<a href="#">258</a>
(dCC-)	[DC BUS]	<a href="#">259</a>

The parameters in the **[APPLICATION FUNCT.] (Funct.)** menu can only be modified when the drive is stopped and there is no run command, except for parameters with a  symbol in the code column, which can be modified with the drive running or stopped.

**Note:** Compatibility of functions

The choice of application functions may be limited by the number of I/O and by the fact that some functions are incompatible with others. Functions that are not listed in the table below are fully compatible.

If there is an incompatibility between functions, the first function configured will help to prevent the others being configured.

Each of the functions on the following pages can be assigned to one of the inputs or outputs.

**⚠ WARNING****UNANTICIPATED EQUIPMENT OPERATION**

Multiple functions can be assigned to and simultaneously activated via a single input.

- Verify that assigning multiple functions to a single input does not result in unsafe conditions.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

It is only possible to assign one input to several functions at **[Advanced]** (*A d v*) and **[Expert]** (*E P r*) levels. Before assigning a command, reference or function to an input or output, the user must check that this input or output has not already been assigned and that another input or output has not been assigned to an incompatible function.

The drive factory setting or macro configurations automatically configure functions, **which may help to prevent other functions being assigned.**

**In some case, it is necessary to unconfigure one or more functions in order to be able to enable another.** Check the compatibility table below.

Stop functions have priority over run commands.

Speed references via logic command have priority over analog references.

**Note:** This compatibility table does not affect commands that can be assigned to the keys of the graphic display terminal (see page [26](#)).

Compatibility table

	Reference operations (page 177)	+/- speed (3) (page 194)	Preset speeds (page 189)	PID regulator (page 222)	Traverse control (page 256)	JOG operation (page 187)	Reference switching (page 176)	Skip frequency (page 192)	Brake logic control (page 206)	Auto DC injection (page 185)	Catch on the fly (page 267)	Output contactor command (page 235)	DC injection stop (page 182)	Fast stop (page 182)	Freewheel stop (page 182)	+/- speed around a reference (page 196)	High speed hoisting (page 216)	Load sharing (page 130)	Positioning by sensors (page 239)
Reference operations (page 177)			↑	● (2)		↑	↑	↑											
+/- speed (3) (page 194)					●	●	↑	↑											
Preset speeds (page 189)	←					↑	↑	↑											
PID regulator (page 222)	● (2)				●	●	↑	↑	●							●	●	●	●
Traverse control (page 256)		●		●		●	↑	↑								●	●		
JOG operation (page 187)	←	●	←	●	●			↑	●	←						●	●		
Reference switching (page 176)	←	←	←	↑	←			↑								↑			
Skip frequency (page 192)	←	←	←	↑	←	←	←									←			
Brake logic control (page 206)				●		●					●	●	●						
Auto DC injection (page 185)						↑							↑		↑				
Catch on the fly (page 267)									●										
Output contactor command (page 235)									●										
DC injection stop (page 182)									●	←				● (1)	↑				
Fast stop (page 182)													● (1)		↑				
Freewheel stop (page 182)										←			←	←					
+/- speed around a reference (page 196)				●	●	●	←	↑											
High speed hoisting (page 216)				●	●	●													
Load sharing (page 130)				●															
Positioning by sensors (page 239)				●															

(1) Priority is given to the first of these two stop modes to be activated.

(2) Only the multiplier reference is incompatible with the PID regulator.

● Incompatible functions      □ Compatible functions      ■ Not applicable

Priority functions (functions which cannot be active at the same time):

← ↑ The function indicated by the arrow has priority over the other.

### Incompatible Functions

The following function will be inaccessible or deactivated after an Automatic restart.

This is only possible for control type if **[2/3 wire control]** (**Ɛ Ɛ Ɛ**) is set to **[2 wire]** (**Ɛ Ɛ**) and if **[2 wire type]** (**Ɛ Ɛ Ɛ**) is set to **[Level]** (**Ɛ Ɛ Ɛ**) or **[Fwd priority]** (**Ɛ Ɛ Ɛ**). See **[2/3 wire control]** (**Ɛ Ɛ Ɛ**) page [93](#).

The **[1.2 MONITORING]** (**Ɛ Ɛ Ɛ -**) menu page [55](#) can be used to display the functions assigned to each input in order to check their compatibility.

When a function is assigned, a ✓ appears on the graphic display terminal, as illustrated in the example below:

RDY	Term	0.0Hz	0A
APPLICATION FUNCT.			
REFERENCE SWITCH.			
REF. OPERATIONS			
RAMP			
STOP CONFIGURATION			
AUTO DC INJECTION			
Code	<<	>>	Quick

If you attempt to assign a function that is incompatible with another function that has already been assigned, an alarm message will appear:

- With the graphic display terminal:

RDY	Term	+0.0 Hz	0.0 A
INCOMPATIBILITY			
The function can't be assigned because an incompatible function is already selected. See programming book.			
ENT or ESC to continue			

- With the integrated display terminal and the remote display terminal:  
COMP flashes until ENT or ESC is pressed.

When you assign a logic input, an analog input, a reference channel or a bit to a function, pressing the HELP key will display the functions that may already have been activated by this input, bit or channel.

When a logic input, an analog input, a reference channel or a bit that has already been assigned is assigned to another function, the following screens appear:

- With the graphic display terminal:

RUN	Term	0.0 Hz	0.0 A
WARNING - ASSIGNED TO			
Forward			
ENT-Valid.		ESC-Abort	

If the access level permits this new assignment, pressing ENT confirms the assignment.

If the access level does not permit this new assignment, pressing ENT results in the following display:

RUN	Term	0.0 Hz	0.0 A
ASSIGNMENT FORBIDDEN			
Un-assign the present functions, or select "Advanced" access level			

- With the integrated display terminal:

The code for the first function, which is already assigned, is displayed flashing.

If the access level permits this new assignment, pressing ENT confirms the assignment.

If the access level does not permit this new assignment, pressing ENT has no effect, and the message continues to flash. It is only possible to exit by pressing ESC.

Parameters described in this page can be accessed by:


DRI- > CONF > FULL > FUN- > REF

## REFERENCE SWITCHING

Code	Name / Description	Adjustment range	Factory setting
<i>F u n -</i>	<b>[APPLICATION FUNCT.]</b>		
<i>r E F -</i>	<b>[REFERENCE SWITCH.]</b>		
<i>r C b</i>	<b>[Ref 1B switching]</b>		<b>[ch1 active] (F r I)</b>
	<div style="border: 1px solid black; padding: 10px; margin: 10px auto; width: 80%;"> <p style="text-align: center;"><b>⚠ WARNING</b></p> <p><b>UNANTICIPATED EQUIPMENT OPERATION</b></p> <p>This parameter can cause unintended movements, for example, inversion of the direction of rotation of the motor, sudden acceleration or stops.</p> <ul style="list-style-type: none"> <li>• Verify that the setting of this parameter does not cause unintended movements.</li> <li>• Verify that the setting of this parameter does not result in unsafe conditions.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div>		
	<p>See the diagrams on pages <a href="#">156</a> and <a href="#">157</a>.</p> <p>If the assigned input or bit is at 0, <b>[Ref.1 channel] (F r I)</b> is active (see <b>[Ref.1 channel] (F r I)</b> page <a href="#">163</a>).</p> <p>If the assigned input or bit is at 1, <b>[Ref.1B channel] (F r I b)</b> is active.</p> <p><b>[Ref 1B switching] (r C b)</b> is forced to <b>[ch1 active] (F r I)</b> if <b>[Profile] (C H C F)</b> is set to <b>[Not separ.] (S , n)</b> with <b>[Ref.1 channel] (F r I)</b> assigned via the terminals (analog inputs, pulse input). See <b>[Ref.1 channel] (F r I)</b> page <a href="#">163</a>.</p> <p><i>F r I</i> <b>[ch1 active] (F r I)</b>: No switching, <b>[Ref.1 channel] (F r I)</b> active</p> <p><i>F r I b</i> <b>[ch1B active] (F r I b)</b>: No switching, <b>[Ref.1B channel] (F r I b)</b> active</p> <p><i>L i I</i> <b>[LI1] (L i I)</b>: Logical input LI1</p> <p>... <b>[...] (...)</b>: See the assignment conditions on page <a href="#">162</a> (not <b>[Cd00] (C d o o)</b> to <b>[Cd15] (C d I 5)</b>).</p>		
<i>F r I b</i>	<b>[Ref.1B channel]</b>		<b>[No] (n o)</b>
<i>n o</i>	<b>[No] (n o)</b> : Not assigned		
<i>A I 1</i>	<b>[AI1] (A I 1)</b> : Analog input A1		
<i>A I 2</i>	<b>[AI2] (A I 2)</b> : Analog input A2		
<i>A I 3</i>	<b>[AI3] (A I 3)</b> : Analog input A3		
<i>L C C</i>	<b>[HMI] (L C C)</b> : Graphic display terminal or remote display terminal source		
<i>n d b</i>	<b>[Modbus] (n d b)</b> : Integrated Modbus		
<i>C A n</i>	<b>[CANopen] (C A n)</b> : Integrated CANopen®		
<i>n E t</i>	<b>[Com. card] (n E t)</b> : Communication option board source		
<i>P i</i>	<b>[RP] (P i)</b> : Pulse input		
<i>A i v I</i>	<b>[AI virtual 1] (A i v I)</b> : Virtual analog input 1 with the jog dial (only available if <b>[Profile] (C H C F)</b> is not set to <b>[Not separ.] (S , n)</b> )		
<i>o A O 1</i>	<b>[OA01] (o A O 1)</b> : Function blocks: Analog Output 01		
...	...		
<i>o A I 0</i>	<b>[OA10] (o A I 0)</b> : Function blocks: Analog Output 10		

## REFERENCE OPERATIONS

### Summing input / Subtracting input / Multiplier

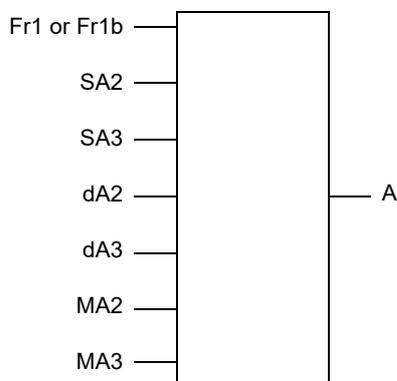

$$A = (Fr1 \text{ or } Fr1b + SA2 + SA3 - dA2 - dA3) \times MA2 \times MA3$$

- If *SA2*, *SA3*, *dA2*, *dA3* are not assigned, they are set to 0.
- If *MA2*, *MA3* are not assigned, they are set to 1.
- A is limited by the minimum *LSP* and maximum *HSP* parameters.
- For multiplication, the signal on *MA2* or *MA3* is interpreted as a %. 100% corresponds to the maximum value of the corresponding input. If *MA2* or *MA3* is sent via the communication bus or graphic display terminal, an *MP* multiplication variable, page 299 must be sent via the bus or graphic display terminal.
- Reversal of the direction of operation in the event of a negative result can be inhibited (see [\[RV Inhibition\]](#) (*SV*) page 163).

Code	Name / Description	Adjustment range	Factory setting
<i>FUN-</i>	<b>[APPLICATION FUNCT.] (continued)</b>		
<i>OAI-</i>	<b>[REF. OPERATIONS]</b> Reference = (Fr1 or Fr1b + SA2 + SA3 - dA2 - dA3) x MA2 x MA3. See the diagrams on pages 156 and 157. <b>Note:</b> This function cannot be used with certain other functions. Follow the instructions on page 172.		
<i>SA2</i>	<b>[Summing ref. 2]</b> Selection of a reference to be added to <b>[Ref.1 channel]</b> ( <i>Fr I</i> ) or <b>[Ref.1B channel]</b> ( <i>Fr Ib</i> ).		<b>[No]</b> ( <i>no</i> )
<i>no</i>	<b>[No]</b> ( <i>no</i> ): Not assigned		
<i>AI1</i>	<b>[AI1]</b> ( <i>AI1</i> ): Analog input A1		
<i>AI2</i>	<b>[AI2]</b> ( <i>AI2</i> ): Analog input A2		
<i>AI3</i>	<b>[AI3]</b> ( <i>AI3</i> ): Analog input A3		
<i>LCC</i>	<b>[HMI]</b> ( <i>LCC</i> ): Graphic display terminal or remote display terminal source		
<i>Modb</i>	<b>[Modbus]</b> ( <i>Modb</i> ): Integrated Modbus		
<i>CAN</i>	<b>[CANopen]</b> ( <i>CAN</i> ): Integrated CANopen®		
<i>NEE</i>	<b>[Com. card]</b> ( <i>NEE</i> ): Communication option board source		
<i>RP</i>	<b>[RP]</b> ( <i>RP</i> ): Motor voltage		
<i>AIv1</i>	<b>[AI virtual 1]</b> ( <i>AIv1</i> ): Virtual analog input 1 with the jog dial		
<i>AIv2</i>	<b>[AI virtual 2]</b> ( <i>AIv2</i> ): Virtual analog input 2 by the communication bus		
<i>OAO1</i>	<b>[OAO1]</b> ( <i>OAO1</i> ): Function blocks: Analog Output 01		
...	...		
<i>OAI0</i>	<b>[OAI0]</b> ( <i>OAI0</i> ): Function blocks: Analog Output 10		
<i>SA3</i>	<b>[Summing ref. 3]</b> Selection of a reference to be added to <b>[Ref.1 channel]</b> ( <i>Fr I</i> ) or <b>[Ref.1B channel]</b> ( <i>Fr Ib</i> ). Identical to <b>[Summing ref. 2]</b> ( <i>SA2</i> ) page 177.		<b>[No]</b> ( <i>no</i> )
<i>dA2</i>	<b>[Subtract. ref. 2]</b> Selection of a reference to be subtracted from <b>[Ref.1 channel]</b> ( <i>Fr I</i> ) or <b>[Ref.1B channel]</b> ( <i>Fr Ib</i> ). Identical to <b>[Summing ref. 2]</b> ( <i>SA2</i> ) page 177.		<b>[No]</b> ( <i>no</i> )

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FUN- &gt; OAI-

Code	Name / Description	Adjustment range	Factory setting
дРЭ	<b>[Subtract. ref. 3]</b> Selection of a reference to be subtracted from <b>[Ref.1 channel]</b> (Fr I) or <b>[Ref.1B channel]</b> (Fr Ib). Identical to <b>[Summing ref. 2]</b> (SR2) page 177.		<b>[No]</b> (no)
ПРЭ	<b>[Multiplier ref. 2]</b> Selection of a multiplier reference <b>[Ref.1 channel]</b> (Fr I) or <b>[Ref.1B channel]</b> (Fr Ib). Identical to <b>[Summing ref. 2]</b> (SR2) page 177. This parameter is incompatible with the PID regulator, <b>[No]</b> (no) is the only setting possible		<b>[No]</b> (no)
ПРЭ	<b>[Multiplier ref. 3]</b> Selection of a multiplier reference <b>[Ref.1 channel]</b> (Fr I) or <b>[Ref.1B channel]</b> (Fr Ib). Identical to <b>[Summing ref. 2]</b> (SR2) page 177. This parameter is incompatible with the PID regulator, <b>[No]</b> (no) is the only setting possible		<b>[No]</b> (no)

## RAMP

Code	Name / Description	Adjustment range	Factory setting
<b>F u n -</b>	<b>[APPLICATION FUNCT.] (continued)</b>		
<b>r P t -</b>	<b>[RAMP]</b>		
<b>r P t</b>	<b>[Ramp type]</b>		<b>[Linear] (L i n)</b>
<b>L i n</b>	<b>[Linear] (L i n)</b>		
<b>S</b>	<b>[S ramp] (S)</b>		
<b>u</b>	<b>[U ramp] (u)</b>		
<b>C u s</b>	<b>[Customized] (C u s)</b>		
<b>(C)</b>	<p><b>S ramps</b></p> <p>The rounding coefficient is fixed,  t1 = 0.6 set ramp time (linear)  t2 = 0.4 set ramp time (round)  t3 = 1.4 set ramp time</p> <p><b>U ramps</b></p> <p>The rounding coefficient is fixed,  t1 = 0.5 set ramp time (linear)  t2 = 1.0 set ramp time (round)  t3 = 1.5 set ramp time</p> <p><b>Customized ramps</b></p> <p>tA1: adjustable from 0 to 100%  tA2: adjustable from 0 to (100% - tA1)  tA3: adjustable from 0 to 100%  tA4: adjustable from 0 to (100% - tA3)</p> <p>t12 = ACC * (tA1(%) / 100 + tA2(%) / 100 + 1)  t34 = DEC * (tA3(%) / 100 + tA4(%) / 100 + 1)</p>		
<b>i n c</b>	<b>[Ramp increment]</b>		<b>[0,1] (0. 1)</b>
<b>(C)</b>	This parameter is valid for <b>[Acceleration] (A C C)</b> , <b>[Deceleration] (d E C)</b> , <b>[Acceleration 2] (A C 2)</b> and <b>[Deceleration 2] (d E 2)</b> .		
<b>(1)</b>			
<b>0.0 1</b>	<b>[0,01]:</b> Ramp up to 99.99 seconds		
<b>0. 1</b>	<b>[0,1]:</b> Ramp up to 999.9 seconds		
<b>1</b>	<b>[1]:</b> Ramp up to 6,000 seconds		
<b>A C C</b>	<b>[Acceleration]</b>	0.00 to 6,000 s (2)	3.0 s
<b>(C)</b>	Time to accelerate from 0 to the <b>[Rated motor freq.] (F r 5)</b> (page 95). To have repeatability in ramps, the value of this parameter must be set according to the possibility of the application.		
<b>(1)</b>			
<b>d E C</b>	<b>[Deceleration]</b>	0.00 to 6,000 s (2)	3.0 s
<b>(C)</b>	Time to decelerate from the <b>[Rated motor freq.] (F r 5)</b> (page 95) to 0. To have repeatability in ramps, the value of this parameter must be set according to the possibility of the application.		
<b>(1)</b>			
<b>t A 1</b>	<b>[Begin Acc round]</b>	0 to 100%	10%
<b>(C)</b>	Rounding of start of acceleration ramp as a % of the <b>[Acceleration] (A C C)</b> or <b>[Acceleration 2] (A C 2)</b> ramp time. Can be set between 0 and 100%. This parameter can be accessed if the <b>[Ramp type] (r P t)</b> is <b>[Customized] (C u s)</b> .		
<b>(1)</b>			

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FUN- &gt; RPT-

Code	Name / Description	Adjustment range	Factory setting															
<p><b>ER2</b></p> <p>★</p> <p>( )</p> <p>(1)</p>	<p><b>[End Acc round]</b></p> <p>Rounding of end of acceleration ramp as a % of the <b>[Acceleration]</b> (<b>REL</b>) or <b>[Acceleration 2]</b> (<b>RE2</b>) ramp time. Can be set between 0 and (100% - <b>[Begin Acc round]</b> (<b>ER1</b>)). This parameter can be accessed if the <b>[Ramp type]</b> (<b>RE</b>) is <b>[Customized]</b> (<b>CU5</b>).</p>	0 to 100%	10%															
<p><b>ER3</b></p> <p>★</p> <p>( )</p> <p>(1)</p>	<p><b>[Begin Dec round]</b></p> <p>Rounding of start of deceleration ramp as a % of the <b>[Deceleration]</b> (<b>DEL</b>) or <b>[Deceleration 2]</b> (<b>DE2</b>) ramp time. Can be set between 0 and 100%. This parameter can be accessed if the <b>[Ramp type]</b> (<b>RE</b>) is <b>[Customized]</b> (<b>CU5</b>).</p>	0 to 100%	10%															
<p><b>ER4</b></p> <p>★</p> <p>( )</p> <p>(1)</p>	<p><b>[End Dec round]</b></p> <p>Rounding of end of deceleration ramp as a % of the <b>[Deceleration]</b> (<b>DEL</b>) or <b>[Deceleration 2]</b> (<b>DE2</b>) ramp time. Can be set between 0 and (100% - <b>[Begin Dec round]</b> (<b>ER3</b>)). This parameter can be accessed if the <b>[Ramp type]</b> (<b>RE</b>) is <b>[Customized]</b> (<b>CU5</b>).</p>	0 to 100%	10%															
<p><b>FRt</b></p>	<p><b>[Ramp 2 threshold]</b></p> <p>Ramp switching threshold The 2nd ramp is switched if the value of <b>[Ramp 2 threshold]</b> (<b>FRt</b>) is not 0 (0 deactivates the function) and the output frequency is greater than <b>[Ramp 2 threshold]</b> (<b>FRt</b>). Threshold ramp switching can be combined with <b>[Ramp switch ass.]</b> (<b>RP5</b>) switching as follows:</p> <table border="1"> <thead> <tr> <th>LI or bit</th> <th>Frequency</th> <th>Ramp</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>&lt; Frt</td> <td>ACC, dEC</td> </tr> <tr> <td>0</td> <td>&gt; Frt</td> <td>AC2, dE2</td> </tr> <tr> <td>1</td> <td>&lt; Frt</td> <td>AC2, dE2</td> </tr> <tr> <td>1</td> <td>&gt; Frt</td> <td>AC2, dE2</td> </tr> </tbody> </table>	LI or bit	Frequency	Ramp	0	< Frt	ACC, dEC	0	> Frt	AC2, dE2	1	< Frt	AC2, dE2	1	> Frt	AC2, dE2	0 to 599 Hz according to rating	0 Hz
LI or bit	Frequency	Ramp																
0	< Frt	ACC, dEC																
0	> Frt	AC2, dE2																
1	< Frt	AC2, dE2																
1	> Frt	AC2, dE2																
<p><b>RP5</b></p> <p>no</p> <p>L11</p> <p>...</p>	<p><b>[Ramp switch ass.]</b></p> <p><b>[No]</b> (<b>no</b>): Function not assigned <b>[L11]</b> (<b>L11</b>): Logical input L11 <b>[...]</b> (...): See the assignment conditions on page <a href="#">162</a></p>		<b>[No]</b> ( <b>no</b> )															
<p><b>RE2</b></p> <p>★</p> <p>( )</p> <p>(1)</p>	<p><b>[Acceleration 2]</b></p> <p>Time to accelerate from 0 to the <b>[Rated motor freq.]</b> (<b>FR5</b>). To have repeatability in ramps, the value of this parameter must be set according to the possibility of the application. This parameter can be accessed if <b>[Ramp 2 threshold]</b> (<b>FRt</b>) is greater than 0 or if <b>[Ramp switch ass.]</b> (<b>RP5</b>) is assigned.</p>	0.00 to 6,000 s (2)	5.0 s															
<p><b>DE2</b></p> <p>★</p> <p>( )</p> <p>(1)</p>	<p><b>[Deceleration 2]</b></p> <p>Time to decelerate from <b>[Rated motor freq.]</b> (<b>FR5</b>) to 0. To have repeatability in ramps, the value of this parameter must be set according to the possibility of the application. This parameter can be accessed if <b>[Ramp 2 threshold]</b> (<b>FRt</b>) is greater than 0 or if <b>[Ramp switch ass.]</b> (<b>RP5</b>) is assigned.</p>	0.00 to 6,000 s (2)	5.0 s															

Parameters described in this page can be accessed by: DRI- > CONF > FULL > FUN- > RPT-

Code	Name / Description	Adjustment range	Factory setting
<i>brA</i>	<b>[Dec ramp adapt.]</b>		<b>[Yes] (YES)</b>
<b>NOTICE</b>			
<p><b>DAMAGE TO THE MOTOR</b></p> <ul style="list-style-type: none"> <li>Only set this parameter to <b>[Yes] (YES)</b> or <b>[No] (NO)</b> if the connected motor is a permanent magnet synchronous motor. Other settings demagnetize permanent magnet synchronous motors.</li> </ul> <p><b>Failure to follow these instructions can result in equipment damage.</b></p> <p>Activating this function automatically adapts the deceleration ramp, if this has been set at a too low value according to the inertia of the load, which can cause an overvoltage detected fault.</p> <p><b>[Dec ramp adapt.] (brA)</b> is forced to <b>[No] (NO)</b> if the brake logic control <b>[Brake assignment] (BLC)</b> is assigned (page 206). The function is incompatible with applications requiring:</p> <ul style="list-style-type: none"> <li>- Positioning on a ramp.</li> <li>- The use of a braking resistor (the resistor would not operate correctly).</li> </ul> <p><i>no</i> <b>[No] (NO)</b>: Function inactive</p> <p><i>YES</i> <b>[Yes] (YES)</b>: Function active, for applications that do not require strong deceleration</p> <p>The following selections appear depending on the rating of the drive and <b>[Motor control type] (LTL)</b> page 114. They enable stronger deceleration to be obtained than with <b>[Yes] (YES)</b>. Use comparative testing to determine your selection.</p> <p><i>dYnA</i> <b>[High torq. A] (dYnA)</b>: Addition of a constant current flow component.</p> <p>When <b>[Dec ramp adapt.] (brA)</b> is configured on <b>[High torq. x] (dYnX)</b>, the dynamic performances for braking are improved by the addition of a current flow component. The aim is to increase the iron loss and magnetic energy stored in the motor.</p>			

- (1) The parameter can also be accessed in the **[SETTINGS] (SEt-)** menu.
- (2) Range 0.01 to 99.99 s or 0.1 to 999.9 s or 1 to 6,000 s according to **[Ramp increment] (irr)** page 179.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > FUN- > STT-

## STOP CONFIGURATION

Code	Name / Description	Adjustment range	Factory setting
<b>F u n -</b>	<b>[APPLICATION FUNCT.] (continued)</b>		
<b>5 t t -</b>	<b>[STOP CONFIGURATION]</b>		
	<b>Note:</b> Some types of stops cannot be used with all other functions. Follow the instructions on page <a href="#">172</a> .		
<b>5 t t</b>	<b>[Type of stop]</b>		<b>[Ramp stop] (r n P)</b>
	<p>Stop mode on disappearance of the run command or appearance of a stop command.</p> <p><b>Note:</b> If the "brake logic" function on page <a href="#">206</a> has been enabled, or if <b>[Low speed time out] (t L 5)</b> page <a href="#">104</a> or <a href="#">225</a> is not 0, only ramp type stops may be configured.</p>		
<b>r n P</b>	<b>[Ramp stop] (r n P):</b> Stop on ramp		
<b>F 5 t</b>	<b>[Fast stop] (F 5 t):</b> Fast stop		
<b>n 5 t</b>	<b>[Freewheel] (n 5 t):</b> Freewheel stop		
<b>d C i</b>	<b>[DC injection] (d C i):</b> DC injection stop. Available only if <b>[Motor control type] (t t t)</b> page <a href="#">114</a> is not set to <b>[Sync. mot.] (5 Y n)</b> .		
<b>F F t</b>	<b>[Freewheel stop Thd.]</b>	0.2 to 599 Hz	0.2 Hz
★ (1)	<p>Speed threshold below which the motor will switch to freewheel stop.</p> <p>This parameter supports switching from a ramp stop or a fast stop to a freewheel stop below a low speed threshold.</p> <p>This parameter can be accessed if <b>[Type of stop] (5 t t)</b> is set to <b>[Fast stop] (F 5 t)</b> or <b>[Ramp stop] (r n P)</b> and if <b>[Brake assignment] (b L t)</b> and <b>[Auto DC injection] (A d C)</b> are not configured.</p>		
<b>n 5 t</b>	<b>[Freewheel stop ass.]</b>		<b>[No] (n o)</b>
	<p>The stop is activated when the input or the bit changes to 0. If the input returns to state 1 and the run command is still active, the motor will only restart if <b>[2/3 wire control] (t t t)</b> page <a href="#">93</a> is set to <b>[2 wire] (t t)</b> and if <b>[2 wire type] (t t t)</b> is set to <b>[Level] (L E L)</b> or <b>[Fwd priority] (P F o)</b>. If not, a new run command must be sent.</p>		
<b>n o</b>	<b>[No] (n o):</b> Not assigned		
<b>L i I</b>	<b>[LI1] (L i I):</b> Logical input LI1		
...	<b>[...] (...):</b> See the assignment conditions on page <a href="#">162</a>		
<b>F 5 t</b>	<b>[Fast stop assign.]</b>		<b>[No] (n o)</b>
	<p>The stop is activated when the input changes to 0 or the bit changes to 1 (bit in <b>[I/O profile] (i o)</b> at 0).</p> <p>If the input returns to state 1 and the run command is still active, the motor will only restart if <b>[2/3 wire control] (t t t)</b> page <a href="#">93</a> is set to <b>[2 wire] (t t)</b> and if <b>[2 wire type] (t t t)</b> is set to <b>[Level] (L E L)</b> or <b>[Fwd priority] (P F o)</b>. If not, a new run command must be sent.</p> <p><b>Note:</b> This function cannot be used with certain other functions. Follow the instructions on page <a href="#">172</a>.</p>		
<b>n o</b>	<b>[No] (n o):</b> Not assigned		
<b>L i I</b>	<b>[LI1] (L i I):</b> Logical input LI1		
...	<b>[...] (...):</b> See the assignment conditions on page <a href="#">162</a>		
	(If <b>[Profile] (CHCF)</b> is set to <b>[Not Separ.] (SIM)</b> or <b>[Separate] (SEP)</b> then <b>[CD11] (Cd11)</b> up to <b>[CD15] (Cd15)</b> , <b>[C111] (C111)</b> up to <b>[C115] (C115)</b> , <b>[C211] (C211)</b> up to <b>[C215] (C215)</b> and <b>[C311] (C311)</b> up to <b>[C315] (C315)</b> are not available).		
<b>d C F</b>	<b>[Ramp divider]</b>	0 to 10	4
★ (1)	<p>This parameter can be accessed if <b>[Type of stop] (5 t t)</b> is set to <b>[Fast stop] (F 5 t)</b> and if <b>[Fast stop assign.] (F 5 t)</b> is not <b>[No] (n o)</b> and if <b>[Stop type] (P A S)</b> is set to <b>[Fast stop] (F 5 t)</b>.</p> <p>The ramp that is enabled (<b>[Deceleration] (d E t)</b> or <b>[Deceleration 2] (d E 2)</b>) is then divided by this coefficient when stop requests are sent.</p> <p>Value 0 corresponds to a minimum ramp time.</p>		

Parameters described in this page can be accessed by: DRI- > CONF > FULL > FUN- > STT-


Code	Name / Description	Adjustment range	Factory setting
<p><i>d C ,</i></p>	<p><b>[DC injection assign.]</b></p> <div style="border: 1px solid black; padding: 10px; text-align: center;"> <p><b>⚠ WARNING</b></p> <p><b>UNINTENDED MOVEMENT</b></p> <ul style="list-style-type: none"> <li>Do not use DC injection to generate holding torque when the motor is at a standstill.</li> <li>Use a holding brake to keep the motor in the standstill position.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div> <p>DC injection braking is initiated when the assigned input or bit changes to state 1.                      If the input returns to state 0 and the run command is still active, the motor will only restart if <b>[2/3 wire control]</b> (<i>L C C</i>) page <b>93</b> is set to <b>[2 wire]</b> (<i>C C</i>) and if <b>[2 wire type]</b> (<i>L C L</i>) is set to <b>[Level]</b> (<i>L E L</i>) or <b>[Fwd priority]</b> (<i>P F a</i>). If not, a new run command must be sent.  <b>Note:</b> This function cannot be used with certain other functions. Follow the instructions on page <b>172</b>.</p> <p><i>n a</i> <b>[No]</b> (<i>n a</i>): Not assigned  <i>L , I</i> <b>[LI1]</b> (<i>L , I</i>): Logical input LI1                      ... <b>[...]</b> (...): See the assignment conditions on page <b>162</b></p>		<p><b>[No]</b> (<i>n a</i>)</p>
<p><i>i d C</i></p> <p>★</p> <p>⌚</p> <p>(1) (3)</p>	<p><b>[DC inject. level 1]</b></p> <div style="border: 1px solid black; padding: 10px; text-align: center;"> <p><b>NOTICE</b></p> <p><b>OVERHEATING</b></p> <p>Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time.</p> <p><b>Failure to follow these instructions can result in equipment damage.</b></p> </div> <p>Level of DC injection braking current activated via logic input or selected as stop mode.                      This parameter can be accessed if <b>[Type of stop]</b> (<i>S E E</i>) is set to <b>[DC injection]</b> (<i>d C ,</i>) or if <b>[DC injection assign.]</b> (<i>d C ,</i>) is not <b>[No]</b> (<i>n a</i>).</p>	<p>0.1 to 1.41 In (2)</p>	<p>0.64 In (2)</p>
<p><i>L d ,</i></p> <p>★</p> <p>⌚</p> <p>(1) (3)</p>	<p><b>[DC injection time 1]</b></p> <div style="border: 1px solid black; padding: 10px; text-align: center;"> <p><b>NOTICE</b></p> <p><b>OVERHEATING</b></p> <p>Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time.</p> <p><b>Failure to follow these instructions can result in equipment damage.</b></p> </div> <p>Maximum current injection time <b>[DC inject. level 1]</b> (<i>i d C</i>). After this time, the injection current becomes <b>[DC inject. level 2]</b> (<i>i d C 2</i>).                      This parameter can be accessed if <b>[Type of stop]</b> (<i>S E E</i>) is set to <b>[DC injection]</b> (<i>d C ,</i>) or if <b>[DC injection assign.]</b> (<i>d C ,</i>) is not set to <b>[No]</b> (<i>n a</i>).</p>	<p>0.1 to 30 s</p>	<p>0.5 s</p>

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > FUN- > STT-

Code	Name / Description	Adjustment range	Factory setting
  (1) (3)	<b>[DC inject. level 2]</b>  Injection current activated by logic input or selected as stop mode, once period of time <b>[DC injection time 1]</b> ( <i>Edi</i> ) has elapsed. This parameter can be accessed if <b>[Type of stop]</b> ( <i>SEt</i> ) is set to <b>[DC injection]</b> ( <i>dLi</i> ) or if <b>[DC injection assign.]</b> ( <i>dLi</i> ) is not set to <b>[No]</b> ( <i>na</i> ).	0.1 In (2) to <b>[DC inject. level 1]</b> ( <i>dLi</i> )	0.5 In (2)
	<b>NOTICE</b>  <b>OVERHEATING</b> Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time. <b>Failure to follow these instructions can result in equipment damage.</b>		
  (1) (3)	<b>[DC injection time 2]</b>  Maximum injection time <b>[DC inject. level 2]</b> ( <i>dLi2</i> ) for injection, selected as stop mode only. This parameter can be accessed if <b>[Stop type]</b> ( <i>SEt</i> ) is set to <b>[DC injection]</b> ( <i>dLi</i> ).	0.1 to 30 s	0.5 s
	<b>NOTICE</b>  <b>OVERHEATING</b> Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time. <b>Failure to follow these instructions can result in equipment damage.</b>		
<b>[Dis. operat opt code]</b> Disable operation stop mode.			<b>[Ramp stop]</b> ( <i>rPP</i> )
<i>nSE</i> <b>[Freewheel]</b> ( <i>nSE</i> ): Disable drive function <i>rPP</i> <b>[Ramp stop]</b> ( <i>rPP</i> ): Ramp stop then disable drive function			

- (1) The parameter can also be accessed in the **[SETTINGS]** (*SEt -*) menu.
- (2) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.
- (3) These settings are independent of the **[AUTO DC INJECTION]** (*RdL -*) function.

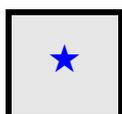

These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

## AUTO DC INJECTION

Code	Name / Description	Adjustment range	Factory setting
<i>F u n -</i>	<b>[APPLICATION FUNCT.] (continued)</b>		
<i>R d C -</i>	<b>[AUTO DC INJECTION]</b>		
<i>R d C</i>	<b>[Auto DC injection]</b>		<b>[Yes] (Y E 5)</b>
   2 s	<div style="background-color: black; color: white; padding: 5px; font-weight: bold; font-size: 1.2em;"> <span style="font-size: 1.5em;">⚠</span> <b>DANGER</b> </div> <p><b>HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH</b>                      If the parameter <b>[Auto DC injection] (R d C)</b> is set to <b>[Continuous] (C E)</b>, DC injection is always active, even if the motor does not run.</p> <ul style="list-style-type: none"> <li>Verify that using this setting does not result in unsafe conditions.</li> </ul> <p><b>Failure to follow these instructions will result in death or serious injury.</b></p>		
	<div style="background-color: #f0f0f0; padding: 10px; font-weight: bold; font-size: 1.2em;"> <span style="font-size: 1.5em;">⚠</span> <b>WARNING</b> </div> <p><b>UNINTENDED MOVEMENT</b></p> <ul style="list-style-type: none"> <li>Do not use DC injection to generate holding torque when the motor is at a standstill.</li> <li>Use a holding brake to keep the motor in the standstill position.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> <p>Automatic current injection on stopping (at the end of the ramp).  <b>Note:</b> There is an interlock between this function and <b>[Motor fluxing] (F L u)</b> page 104. If <b>[Motor fluxing] (F L u)</b> is set to <b>[Continuous] (F C E)</b>, <b>[Auto DC injection] (R d C)</b> must be <b>[No] (n o)</b>.  <b>Note:</b> <b>[Auto DC injection] (R d C)</b> is set to <b>[No] (n o)</b> when <b>[Motor control type] (C E E)</b> page 114 is set to <b>[Sync. mot.] (S Y n)</b>.  <b>[Auto DC injection] (R d C)</b> is forced to <b>[No] (n o)</b> when <b>[Brake assignment] (b L E)</b> page 206 is not set to <b>[No] (n o)</b>.                      This parameter gives rise to the injection of current even if a run command has not been sent. It can be accessed with the drive running.</p> <p><i>n o</i> <b>[No] (n o)</b>: No injection  <i>Y E 5</i> <b>[Yes] (Y E 5)</b>: Adjustable injection time  <i>C E</i> <b>[Continuous] (C E)</b>: Continuous standstill injection</p>		
<i>S d C I</i>	<b>[Auto DC inj. level 1]</b>	0 to 1.2 I <sub>n</sub> (2)	0.7 I <sub>n</sub> (2)
  (1)	<div style="background-color: #f0f0f0; padding: 10px; font-weight: bold; font-size: 1.2em;"> <b>NOTICE</b> </div> <p><b>OVERHEATING</b>                      Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time.  <b>Failure to follow these instructions can result in equipment damage.</b></p> <p>Level of standstill DC injection current <b>[Auto DC injection] (R d C)</b> is not <b>[No] (n o)</b>.</p>		
	<i>t d C I</i>	<b>[Auto DC inj. time 1]</b>	0.1 to 30 s
  (1)	<div style="background-color: #f0f0f0; padding: 10px; font-weight: bold; font-size: 1.2em;"> <b>NOTICE</b> </div> <p><b>OVERHEATING</b>                      Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time.  <b>Failure to follow these instructions can result in equipment damage.</b></p> <p>Standstill injection time. This parameter can be accessed if <b>[Auto DC injection] (R d C)</b> is not set to <b>[No] (n o)</b>.                      If <b>[Motor control type] (C E E)</b> page 114 is set to <b>[Sync. mot.] (S Y n)</b>, this time corresponds to the zero speed maintenance time.</p>		

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > FUN- > ADC-

Code	Name / Description	Adjustment range	Factory setting																		
<p><b>5 d C 2</b></p> <p>★</p> <p>(1)</p>	<p><b>[Auto DC inj. level 2]</b></p> <p><b>NOTICE</b></p> <p><b>OVERHEATING</b> Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time. <b>Failure to follow these instructions can result in equipment damage.</b></p> <p>2nd level of standstill DC injection current. This parameter can be accessed if <b>[Auto DC injection] (A d C)</b> is not <b>[No] (n o)</b>.</p>	0 to 1.2 In (2)	0.5 In (2)																		
<p><b>6 d C 2</b></p> <p>★</p> <p>(1)</p>	<p><b>[Auto DC inj. time 2]</b></p> <p><b>NOTICE</b></p> <p><b>OVERHEATING</b> Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time. <b>Failure to follow these instructions can result in equipment damage.</b></p> <p>2nd standstill injection time. This parameter can be accessed if <b>[Auto DC injection] (A d C)</b> is set to <b>[Yes] (Y E S)</b>.</p> <table border="1"> <thead> <tr> <th>AdC</th> <th>SdC2</th> <th>Operation</th> </tr> </thead> <tbody> <tr> <td>YES</td> <td>x</td> <td></td> </tr> <tr> <td>Ct</td> <td>≠ 0</td> <td></td> </tr> <tr> <td>Ct</td> <td>= 0</td> <td></td> </tr> <tr> <td>Run command</td> <td></td> <td></td> </tr> <tr> <td>Speed</td> <td></td> <td></td> </tr> </tbody> </table>	AdC	SdC2	Operation	YES	x		Ct	≠ 0		Ct	= 0		Run command			Speed			0 to 30 s	0 s
AdC	SdC2	Operation																			
YES	x																				
Ct	≠ 0																				
Ct	= 0																				
Run command																					
Speed																					

(1) The parameter can also be accessed in the **[SETTINGS] (5 E E -)** menu.

(2) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.

JOG

Code	Name / Description	Adjustment range	Factory setting
<b>F u n -</b>	<b>[APPLICATION FUNCT.] (continued)</b>		
<b>J o g -</b>	<b>[JOG]</b> <b>Note:</b> This function cannot be used with certain other functions. Follow the instructions on page 172.		
<b>J o g</b>	<p><b>[JOG]</b></p> <p>Pulse operation. The JOG function is only active if the command channel and the reference channels are on the terminals. The function is active when the assigned input or bit is at 1. Example: 2-wire control operation (tCC = 2C).</p> <p>The diagram shows the relationship between several signals during JOG operation. The top signal is Motor frequency, which ramps up from 0 to a peak, then ramps down. The Reference signal follows a similar pattern but with a 'Ramp forced to 0.1 s' section. The JGF reference signal is a pulse that occurs during the ramping. The LI (JOG) signal is a square wave that is high during the JOG operation. The Forward and Reverse signals are also square waves, indicating the direction of the JOG movement.</p>		[LI3] (L, 3)
<b>n a</b> <b>L, I</b> <b>...</b>	<p><b>[No] (na):</b> Not assigned <b>[LI1] (L, I):</b> Logical input LI1 <b>[...] (...):</b> See the assignment conditions on page 162 . (If <b>[Profile] (CHCF)</b> is set to <b>[Not Separ.] (SIM)</b> or <b>[Separate] (SEP)</b> then <b>[CD11] (Cd11)</b> up to <b>[CD15] (Cd15)</b>, <b>[C111] (C111)</b> up to <b>[C115] (C115)</b>, <b>[C211] (C211)</b> up to <b>[C215] (C215)</b> and <b>[C311] (C311)</b> up to <b>[C315] (C315)</b> are not available).</p>		
<b>J G F</b> <b>★</b> <b>(C)</b> <b>(1)</b>	<p><b>[Jog frequency]</b></p> <p>Reference in jog operation. This parameter can be accessed if <b>[JOG] (J o g)</b> is not set to <b>[No] (na)</b>.</p>	0 to 10 Hz	10 Hz

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > FUN- > JOG-

Code	Name / Description	Adjustment range	Factory setting
J G E	<b>[Jog delay]</b>	0 to 2.0 s	0.5 s
★	Anti-repeat delay between 2 consecutive jog operations.		
↻	This parameter can be accessed if <b>[JOG]</b> (J G E) is not set to <b>[No]</b> (n o).		
(1)			

(1) The parameter can also be accessed in the **[SETTINGS]** (S E E -) menu.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.

## PRESET SPEEDS

2, 4, 8 or 16 speeds can be preset, requiring 1, 2, 3 or 4 logic inputs respectively.

### Note:

You must configure 2 and 4 speeds in order to obtain 4 speeds.

You must configure 2, 4 and 8 speeds in order to obtain 8 speeds.

You must configure 2, 4, 8, and 16 speeds in order to obtain 16 speeds.

Combination table for preset speed inputs

16 speeds LI (PS16)	8 speeds LI (PS8)	4 speeds LI (PS4)	2 speeds LI (PS2)	Speed reference
0	0	0	0	Reference (1)
0	0	0	1	SP2
0	0	1	0	SP3
0	0	1	1	SP4
0	1	0	0	SP5
0	1	0	1	SP6
0	1	1	0	SP7
0	1	1	1	SP8
1	0	0	0	SP9
1	0	0	1	SP10
1	0	1	0	SP11
1	0	1	1	SP12
1	1	0	0	SP13
1	1	0	1	SP14
1	1	1	0	SP15
1	1	1	1	SP16

(1) See the diagram on page [156](#): Reference 1 = (SP1).

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FUN- &gt; PSS-

Code	Name / Description	Adjustment range	Factory setting
<i>F u n -</i>	<b>[APPLICATION FUNCT.] (continued)</b>		
<i>P S S -</i>	<b>[PRESET SPEEDS]</b> <b>Note:</b> This function cannot be used with certain other functions. Follow the instructions on page <a href="#">172</a> ..		
<i>P S 2</i> <i>n o</i> <i>L I 1</i> <i>...</i>	<b>[2 preset speeds]</b> [No] ( <i>n o</i> ): Not assigned [LI1] ( <i>L I 1</i> ): Logical input LI1 [...] (...): See the assignment conditions on page <a href="#">162</a>		[No] ( <i>n o</i> )
<i>P S 4</i>	<b>[4 preset speeds]</b> Identical to <b>[2 preset speeds]</b> ( <i>P S 2</i> ) page <a href="#">190</a> . To obtain 4 speeds, you must also configure 2 speeds.		[No] ( <i>n o</i> )
<i>P S 8</i>	<b>[8 preset speeds]</b> Identical to <b>[2 preset speeds]</b> ( <i>P S 2</i> ) page <a href="#">190</a> . To obtain 8 speeds, you must also configure 2 and 4 speeds.		[No] ( <i>n o</i> )
<i>P S 16</i>	<b>[16 preset speeds]</b> Identical to <b>[2 preset speeds]</b> ( <i>P S 2</i> ) page <a href="#">190</a> . To obtain 16 speeds, you must also configure 2, 4 and 8 speeds.		[No] ( <i>n o</i> )
<i>S P 2</i> ★ ⌚ (1)	<b>[Preset speed 2]</b> Preset speed 2. See the Combination table for preset PID references page <a href="#">218</a> .	0 to 599 Hz	10 Hz
<i>S P 3</i> ★ ⌚ (1)	<b>[Preset speed 3]</b> Preset speed 3. See the Combination table for preset PID references page <a href="#">218</a> .	0 to 599 Hz	15 Hz
<i>S P 4</i> ★ ⌚ (1)	<b>[Preset speed 4]</b> Preset speed 4. See the Combination table for preset PID references page <a href="#">218</a> .	0 to 599 Hz	20 Hz
<i>S P 5</i> ★ ⌚ (1)	<b>[Preset speed 5]</b> Preset speed 5. See the Combination table for preset PID references page <a href="#">218</a> .	0 to 599 Hz	25 Hz
<i>S P 6</i> ★ ⌚ (1)	<b>[Preset speed 6]</b> Preset speed 6. See the Combination table for preset PID references page <a href="#">218</a> .	0 to 599 Hz	30 Hz
<i>S P 7</i> ★ ⌚ (1)	<b>[Preset speed 7]</b> Preset speed 7. See the Combination table for preset PID references page <a href="#">218</a> .	0 to 599 Hz	35 Hz

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FUN- &gt; PSS-

Code	Name / Description	Adjustment range	Factory setting
<b>SP8</b> ★ ⌚ (1)	<b>[Preset speed 8]</b> Preset speed 8. See the Combination table for preset PID references page <a href="#">218</a> .	0 to 599 Hz	40 Hz
<b>SP9</b> ★ ⌚ (1)	<b>[Preset speed 9]</b> Preset speed 9. See the Combination table for preset PID references page <a href="#">218</a> .	0 to 599 Hz	45 Hz
<b>SP10</b> ★ ⌚ (1)	<b>[Preset speed 10]</b> Preset speed 10. See the Combination table for preset PID references page <a href="#">218</a> .	0 to 599 Hz	50 Hz
<b>SP11</b> ★ ⌚ (1)	<b>[Preset speed 11]</b> Preset speed 11. See the Combination table for preset PID references page <a href="#">218</a> .	0 to 599 Hz	55 Hz
<b>SP12</b> ★ ⌚ (1)	<b>[Preset speed 12]</b> Preset speed 12. See the Combination table for preset PID references page <a href="#">218</a> .	0 to 599 Hz	60 Hz
<b>SP13</b> ★ ⌚ (1)	<b>[Preset speed 13]</b> Preset speed 13. See the Combination table for preset PID references page <a href="#">218</a> .	0 to 599 Hz	70 Hz
<b>SP14</b> ★ ⌚ (1)	<b>[Preset speed 14]</b> Preset speed 14. See the Combination table for preset PID references page <a href="#">218</a> .	0 to 599 Hz	80 Hz
<b>SP15</b> ★ ⌚ (1)	<b>[Preset speed 15]</b> Preset speed 15. See the Combination table for preset PID references page <a href="#">218</a> .	0 to 599 Hz	90 Hz
<b>SP16</b> ★ ⌚ (1)	<b>[Preset speed 16]</b> Preset speed 16. The appearance of these <b>[Preset speed x] (SPx)</b> parameters is determined by the number of speeds configured. See the Combination table for preset PID references page <a href="#">218</a> .	0 to 599 Hz	100 Hz

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FUN- &gt; PSS-

Code	Name / Description	Adjustment range	Factory setting
<i>JPF</i> 	<b>[Skip Frequency]</b> Skip frequency. This parameter helps to prevent prolonged operation within an adjustable range around the regulated frequency. This function can be used to help to prevent a critical speed, which would cause resonance, being reached. Setting the function to 0 renders it inactive.	0 to 599 Hz	0 Hz
<i>JF2</i> 	<b>[Skip Frequency 2]</b> 2nd skip frequency. This parameter helps to prevent prolonged operation within an adjustable range around the regulated frequency. This function can be used to help to prevent a critical speed, which would cause resonance, being reached. Setting the function to 0 renders it inactive.	0 to 599 Hz	0 Hz
<i>JF3</i> 	<b>[3rd Skip Frequency]</b> 3rd skip frequency. This parameter helps to prevent prolonged operation within an adjustable range around the regulated frequency. This function can be used to help to prevent a critical speed, which would cause resonance, being reached. Setting the function to 0 renders it inactive.	0 to 599 Hz	0 Hz
<i>JFH</i>  	<b>[Skip.Freq.Hysteresis]</b> This parameter is visible if at least one skip frequency <b>[Skip Frequency]</b> ( <i>JPF</i> ), <b>[Skip Frequency 2]</b> ( <i>JF2</i> ) or <b>[3rd Skip Frequency]</b> ( <i>JF3</i> ) is different from 0. Skip frequency range: between ( $JPF - JFH$ ) and ( $JPF + JFH$ ), for example. This adjustment is common to the 3 frequencies ( <i>JPF</i> , <i>JF2</i> , <i>JF3</i> ).	0.1 to 10 Hz	1 Hz

(1) The parameter can also be accessed in the **[SETTINGS]** (*SELE*) menu.

These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

## +/- SPEED

Two types of operations are available:



- **Use of single action keys:** Two logic inputs are required in addition to the operating direction(s).  
The input assigned to the “+ speed” command increases the speed, the input assigned to the “- speed” command decreases the speed.
- **Use of double action keys:** Only one logic input assigned to “+ speed” is required.

+/- speed with double-press buttons:

Description: 1 button pressed twice (2 steps) for each direction of rotation. A contact closes each time the button is pressed.

	Released (- speed)	1st press (speed maintained)	2nd press (faster)
<b>Forward button</b>	–	a	a and b
<b>Reverse button</b>	–	c	c and d

Example of wiring:

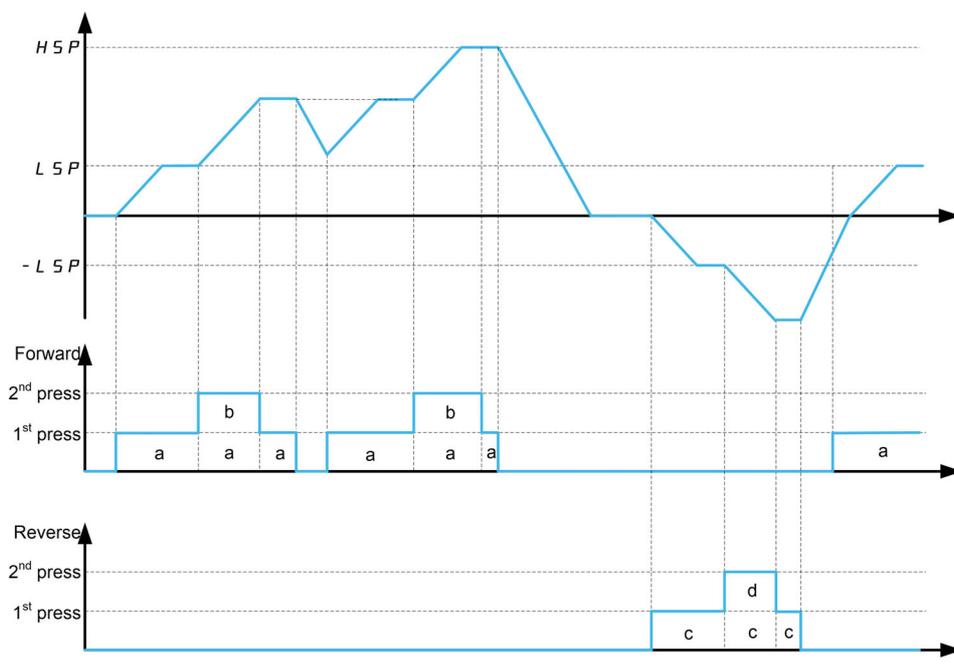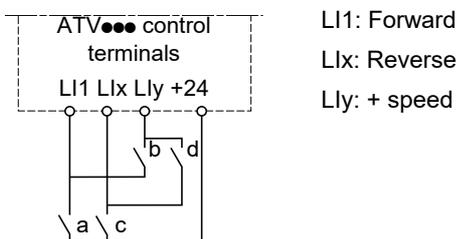

Do not use this +/-speed type with 3-wire control.

Whichever type of operation is selected, the max. speed is set by **[High speed] (H5P)** (see page 96).

**Note:**

If the reference is switched via **[Ref. 2 switching] (rFL)** (see page 164) from any one reference channel to another reference channel with "+/- speed", the value of reference **[Output frequency] (rFr)** (after ramp) may be copied at the same time in accordance with the **[Copy channel 1 --> 2] (LoP)** parameter (see page 165).

If the reference is switched via **[Ref. 2 switching] (rFL)** (see page 164) from one reference channel to any other reference channel with "+/- speed", the value of reference **[Output frequency] (rFr)** (after ramp) is copied at the same time.

This helps to prevent the speed being incorrectly reset to zero when switching takes place.

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > FUN- > UPD-

Code	Name / Description	Adjustment range	Factory setting
<b>F u n -</b>	<b>[APPLICATION FUNCT.] (continued)</b>		
<b>u P d -</b>	<b>[+/- SPEED]</b> This function can be accessed if reference channel <b>[Ref.2 channel] (F r 2)</b> is set to <b>[+/-Speed] (u P d t)</b> , see page <a href="#">165</a> . <b>Note:</b> This function cannot be used with certain other functions. Follow the instructions on page <a href="#">172</a> .		
<b>u 5 P</b>	<b>[+ speed assignment]</b> Function active if the assigned input or bit is at 1.		<b>[No] (n o)</b>
<b>n o</b> <b>L I 1</b> ...	<b>[No] (n o)</b> : Not assigned <b>[LI1] (L I 1)</b> : Logical input LI1 <b>[...] (...)</b> : See the assignment conditions on page <a href="#">162</a> (If <b>[Profile] (CHCF)</b> is set to <b>[Not Separ.] (SIM)</b> or <b>[Separate] (SEP)</b> then <b>[CD11] (Cd11)</b> up to <b>[CD15] (Cd15)</b> , <b>[C111] (C111)</b> up to <b>[C115] (C115)</b> , <b>[C211] (C211)</b> up to <b>[C215] (C215)</b> and <b>[C311] (C311)</b> up to <b>[C315] (C315)</b> are not available).		
<b>d 5 P</b>	<b>[-Speed assignment]</b> Assignment identical to <b>[+ speed assignment] (u 5 P)</b> . Function active if the assigned input or bit is at 1.		<b>[No] (n o)</b>
<b>5 t r</b>  ★	<b>[Reference saved]</b> Associated with the "+/- speed" function, this parameter can be used to save the reference: - When the run commands disappear (saved to RAM). - When the supply mains or the run commands disappear (saved to EEPROM). Therefore, the next time the drive starts up, the speed reference is the last reference saved.		<b>[No] (n o)</b>
<b>n o</b> <b>r A M</b> <b>E E P</b>	<b>[No] (n o)</b> : No save (the next time the drive starts up, the speed reference is <b>[Low speed] (L 5 P)</b> , see page <a href="#">96</a> ) <b>[RAM] (r A M)</b> : Saved in RAM <b>[EEProm] (E E P)</b> : Saved in EEPROM		




These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

## +/- SPEED AROUND A REFERENCE

The reference is given by **[Ref.1 channel] (Fr 1)** or **[Ref.1B channel] (Fr 1b)** with summing/subtraction/multiplication functions and preset speeds if relevant (see the diagram on page 156). For improved clarity, we will call this reference A. The action of the +speed and -speed keys can be set as a % of this reference A. On stopping, the reference (A +/- speed) is not saved, so the drive restarts with reference A+ only.

The maximum total reference is limited by **[High speed] (HSP)** and the minimum reference by **[Low speed] (LSP)**, see page 96.

Example of 2-wire control:

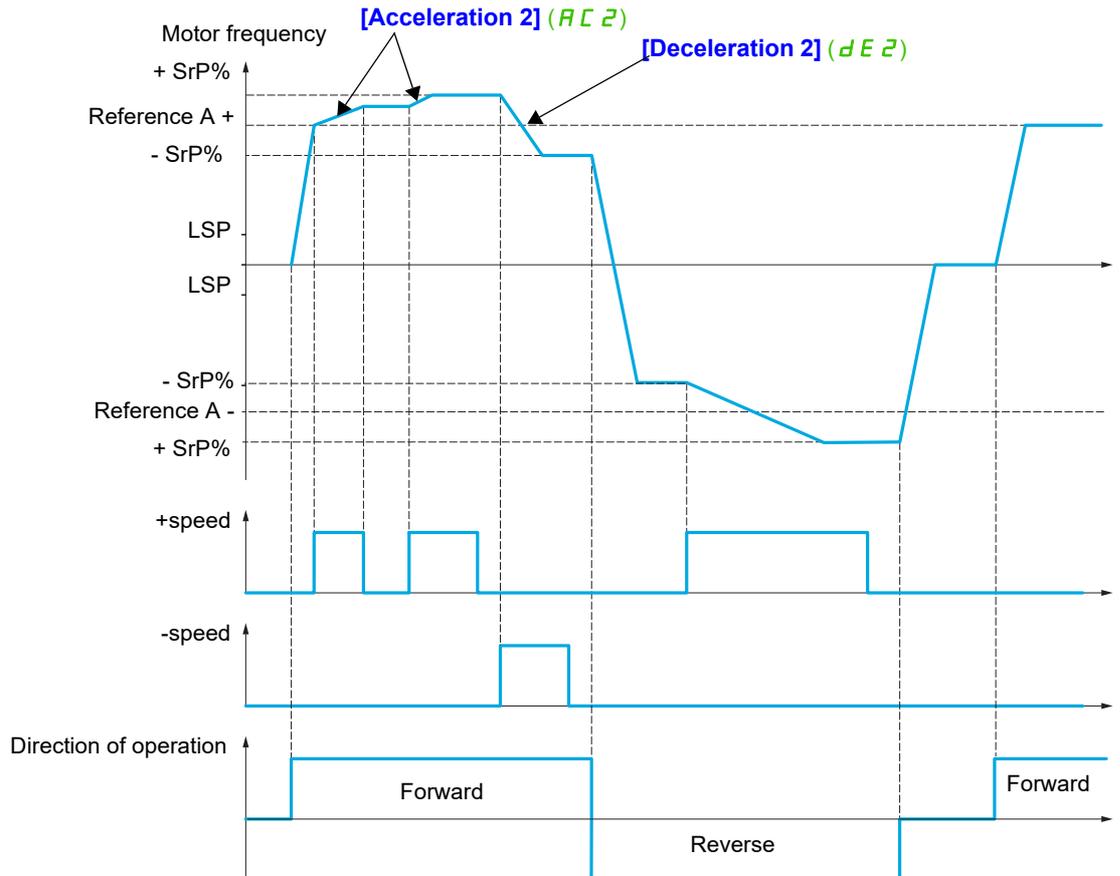

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FUN- &gt; SRE-

Code	Name / Description	Adjustment range	Factory setting
<i>F u n -</i>	<b>[APPLICATION FUNCT.] (continued)</b>		
<i>S r E -</i>	<b>[+/-SPEED AROUND REF.]</b> The function can be accessed for reference channel <b>[Ref.1 channel] (F r I)</b> . <b>Note:</b> This function cannot be used with certain other functions. Follow the instructions on page <a href="#">175</a> .		
<i>u S i</i> <i>n o</i> <i>L i I</i> ...	<b>[+ speed assignment]</b> <b>No] (n o)</b> : Not assigned <b>[LI1] (L i I)</b> : Logical input LI1 <b>[...] (...)</b> : See the assignment conditions on page <a href="#">162</a>		<b>[No] (n o)</b>
<i>d S i</i>	<b>[-Speed assignment]</b> See the assignment conditions on page <a href="#">162</a> Assignment identical to <b>[+ speed assignment] (u S i)</b> .  Function active if the assigned input or bit is at 1.		<b>[No] (n o)</b>
<i>S r P</i> ★ ( )	<b>[+/-Speed limitation]</b> This parameter limits the variation range with +/- speed as a % of the reference. The ramps used in this function are <b>[Acceleration 2] (A C 2)</b> and <b>[Deceleration 2] (d E 2)</b> . This parameter can be accessed if +/- speed is assigned.	0 to 50%	10%
<i>A C 2</i> ★ ( ) (1)	<b>[Acceleration 2]</b> Time to accelerate from 0 to the <b>[Rated motor freq.] (F r 5)</b> . To have repeatability in ramps, the value of this parameter must be set according to the possibility of the application. This parameter can be accessed if <b>[+/- speed] (t u d)</b> is assigned.	0.00 to 6,000 s (2)	5.00 s
<i>d E 2</i> ★ ( ) (1)	<b>[Deceleration 2]</b> Time to decelerate from the <b>[Rated motor freq.] (F r 5)</b> to 0. To have repeatability in ramps, the value of this parameter must be set according to the possibility of the application. This parameter can be accessed if <b>[+/- speed] (t u d)</b> is assigned.	0.00 to 6,000 s (2)	5.00 s

(1) The parameter can also be accessed in the **[SETTINGS] (S E t -)** menu.(2) Range 0.01 to 99.99 s or 0.1 to 999.9 s or 1 to 6,000 s according to **[Ramp increment] (i n r)** page [179](#).

These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.




Parameter that can be modified during operation or when stopped.

## REFERENCE MEMORIZING

Saving a speed reference value using a logic input command lasting longer than 0.1 s.

- This function is used to control the speed of several drives alternately via a single analog reference and one logic input for each drive.
- It is also used to confirm a line reference (communication bus or network) on several drives via a logic input. This allows movements to be synchronized by getting rid of variations when the reference is set.
- The reference is acquired 100 ms after the rising edge of the request. A new reference is not then acquired until a new request is made.

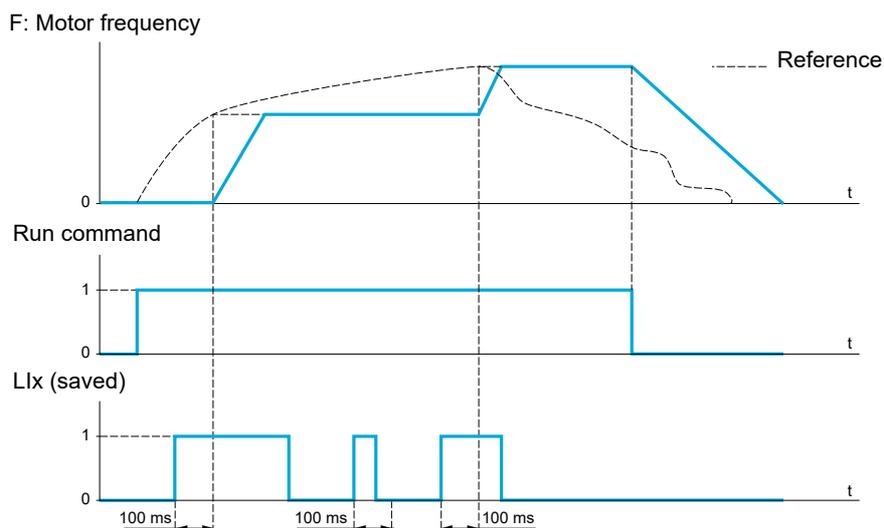

Code	Name / Description	Adjustment range	Factory setting
<b>F u n -</b>	<b>[APPLICATION FUNCT.] (continued)</b>		
<b>S P M -</b>	<b>[MEMO REFERENCE]</b>		
<b>S P M</b>	<b>[Ref. memo ass.]</b> Assignment to a logic input. Function active if the assigned input is at active state.		<b>[No] (n o)</b>
n o	[No] (n o): Function inactive		
L i 1	[LI1] (L i 1): Logical input LI1		
...	...		
L i 6	[LI6] (L i 6): Logical input LI6		
L A i 1	[LAI1] (L A i 1): Logical input AI1		
L A i 2	[LAI2] (L A i 2): Logical input AI2		
o L O 1	[OLO1] (o L O 1): Function blocks: Logical Output 01		
...	...		
o L I 0	[OLI0] (o L I 0): Function blocks: Logical Output 10		

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > FUN- > FLI-

## FLUXING BY LOGIC INPUT


Code	Name / Description	Adjustment range	Factory setting
<i>F u n -</i>	<b>[APPLICATION FUNCT.] (continued)</b>		
<i>F L i -</i>	<b>[FLUXING BY LI]</b>		
<i>F L u</i>	<b>[Motor fluxing]</b>		<b>[No] (F n o)</b>
  (1)   2 s	  <b>DANGER</b>		
	<p><b>HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH</b></p> <p>If the parameter <b>[Motor fluxing]</b> (<i>F L u</i>) is set to <b>[Continuous]</b> (<i>F C t</i>), fluxing is always active, even if the motor does not run.</p> <ul style="list-style-type: none"> <li>Verify that using this setting does not result in unsafe conditions.</li> </ul> <p><b>Failure to follow these instructions will result in death or serious injury.</b></p>		
<p><b>NOTICE</b></p>			
<p><b>OVERHEATING</b></p> <p>Verify that the connected motor is properly rated for the flux current to be applied.</p> <p><b>Failure to follow these instructions can result in equipment damage.</b></p>			
<i>F n c</i>	<b>[Not cont.] (F n c)</b> : Non-continuous mode		
<i>F C t</i>	<b>[Continuous] (F C t)</b> : Continuous mode.		
	This option is not possible if <b>[Auto DC injection] (A d c)</b> page 185 is <b>[Yes] (Y E S)</b> or if <b>[Type of stop] (S t t)</b> page 182 is <b>[Freewheel] (n S t)</b> .		
<i>F n o</i>	<b>[No] (F n o)</b> : Function inactive		
<p>In order to obtain rapid high torque on startup, magnetic flux needs to already have been established in the motor.</p> <p>In <b>[Continuous] (F C t)</b> mode, the drive automatically builds up flux when it is powered up.</p> <p>In <b>[Not cont.] (F n c)</b> mode, fluxing occurs when the motor starts up.</p> <p>The flux current is greater than <b>[Rated mot. current] (n C r)</b> (configured rated motor current) when the flux is established and is then adjusted to the motor magnetizing current.</p> <p>If <b>[Motor control type] (C t t)</b> page 114 is set to <b>[Sync. mot.] (S y n)</b>, the <b>[Motor fluxing] (F L u)</b> parameter causes the alignment of the rotor and not the fluxing.</p> <p>If <b>[Brake assignment] (b L c)</b> page 206 is not <b>[No] (n o)</b>, the <b>[Motor fluxing] (F L u)</b> parameter has no effect.</p>			
<i>F L i</i>	<b>[Fluxing assignment]</b>		<b>[No] (n o)</b>
	<p><b>NOTICE</b></p>		
	<p><b>OVERHEATING AND DAMAGE TO THE MOTOR</b></p> <p>Verify that the connected motor is properly rated for the flux current to be applied.</p> <p><b>Failure to follow these instructions can result in equipment damage.</b></p>		
<p>Assignment is only possible if <b>[Motor fluxing] (F L u)</b> is set to <b>[Not cont.] (F n c)</b>.</p> <p>If an LI or a bit is assigned to the motor fluxing command, flux is built up when the assigned input or bit is at 1.</p> <p>If an LI or a bit has not been assigned, or if the assigned LI or bit is at 0 when a run command is sent, fluxing occurs when the motor starts.</p>			
<i>n o</i>	<b>[No] (n o)</b> : Not assigned		
<i>L i i</i>	<b>[LI1] (L i i)</b> : Logical input LI1		
...	<b>[...] (...)</b> : See the assignment conditions on page 162		

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > FUN- > FLI-

Code	Name / Description	Adjustment range	Factory setting
<b>FLI</b>	<b>[Angle setting type]</b>		<b>[PSIO align.] (PSIO)</b>
★	Mode for measuring the phase-shift angle. Visible only if <b>[Motor control type] (CLT)</b> is set to <b>[Sync. mot.] (SYN)</b> . <b>[PSI align] (PSI)</b> and <b>[PSIO align] (PSIO)</b> are working for all type of synchronous motors. <b>[SPM align] (SPM)</b> and <b>[IPM align] (IPM)</b> increase performances depending on the type of synchronous motor.		
IPM SPM	<b>[IPM align] (IPM)</b> : Alignment for IPM motor. Alignment mode for Interior-buried Permanent Magnet motor (usually, this kind of motor has a high saliency level). It uses high frequency injection, which is less noisy than standard alignment mode. <b>[SPM align] (SPM)</b> : Alignment for SPM motor. Mode for Surface-mounted Permanent Magnet motor (usually, this kind of motor has a medium or low saliency level). It uses high frequency injection, which is less noisy than standard alignment mode.		
PSI	<b>[PSI align] (PSI)</b> : Pulse signal injection. Standard alignment mode by pulse signal injection.		
PSIO	<b>[PSIO align] (PSIO)</b> : Pulse signal injection - Optimized. Standard optimized alignment mode by pulse signal injection. The phase-shift angle measurement time is reduced after the first run order or tune operation, even if the drive has been turned off.		
NO	<b>[No align] (NO)</b> : No alignment		

(1) The parameter can also be accessed in the **[SETTINGS] (SET-)** menu.

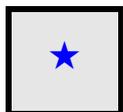

These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.

## BRAKE LOGIC CONTROL

Used to control one or several electromagnetic brake(s) via a single output of the drive, for horizontal and vertical hoisting applications, and for unbalanced machines.

For vertical movements, the objective is to maintain motor torque in the lifting direction during the release and the application of the brake, in order to hold the load. Start smoothly when the brake is released and stop smoothly when the brake is applied.

For horizontal movements, the objective is to synchronize during the beginning of the movement the release of the brake with the built-up of torque and during stopping the application of the brake with the zero speed, in order to help prevent jerking.

### Instructions for brake logic control for a vertical hoisting application:

Your application consists of a whole range of different interrelated mechanical, electrical, and electronic components, the drive being just one part of the application. The drive by itself is neither intended to nor capable of providing the entire functionality to meet all safety-related requirements that apply to your application. Depending on the application and the corresponding risk assessment to be conducted by you, a whole variety of additional equipment is required such as, but not limited to, external encoders, external brakes, external monitoring devices, guards, etc.

As a designer/manufacture of machines, you must be familiar with and observe all standards that apply to your machine. You must conduct a risk assessment and determine the appropriate Performance Level (PL) and/or Safety Integrity Level (SIL) and design and build your machine in compliance with all applicable standards. In doing so, you must consider the interrelation of all components of the machine. In addition, you must provide instructions for use that enable the user of your machine to perform any type of work on and with the machine such as operation and maintenance in a safe manner.

The present document assumes that you are fully aware of all normative standards and requirements that apply to your application. Since the drive cannot provide all safety-related functionality for your entire application, you must ensure that the required Performance Level and/or Safety Integrity Level is reached by installing all necessary additional equipment.

## WARNING

### INSUFFICIENT PERFORMANCE LEVEL/SAFETY INTEGRITY LEVEL AND/OR UNINTENDED EQUIPMENT OPERATION

- Conduct a risk assessment according to EN ISO 12100 and all other standards that apply to your application.
- Use redundant components and/or control paths for all critical control functions identified in your risk assessment.
- Implement all monitoring functions required to avoid any type of hazard identified in your risk assessment, for example, slipping or falling loads.
- Verify that the service life of all individual components used in your application is sufficient for the intended service life of your overall application.
- Perform extensive commissioning tests for all potential error situations to verify the effectiveness of the safety-related functions and monitoring functions implemented, for example, but not limited to, speed monitoring by means of encoders, short circuit monitoring for all connected equipment, correct operation of brakes and guards.
- Perform extensive commissioning tests for all potential error situations to verify that the load can be brought to a safe stop under all conditions.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

A specific application note [NHA80973](#) is available on hoisting machines and can be downloaded on [se.com](#).

## ⚠ WARNING

### FALLING LOAD

- Verify that the parameters are correctly set in the sequence indicated in the table.
- Verify that the settings of the parameters do not cause unintended movements.
- Verify that the settings of the parameters do not result in unsafe conditions.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

When the drive transitions to operating state Fault, the mains contactor and the brake contactor must be deenergized.

## ⚠ WARNING

### UNANTICIPATED EQUIPMENT OPERATION

- Assign **[Operating state fault]** (*FLt*) to output relay R1.
- Connect the coil of the mains contactor to output relay R1.
- Connect the brake contactor downstream of the mains contactor.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

Step	Action
1	Enter the motor nameplate parameters.
2	Set <b>[Motor protect. type]</b> ( <i>HE</i> ) according to the cooling mode.
3	Verify <b>[Autotuning Usage]</b> ( <i>Aut</i> ) is set to <b>[Therm mot]</b> ( <i>TP</i> ) or set it, then perform a motor autotuning ( <b>[Autotuning]</b> ( <i>Aut</i> ) to <b>[Apply Autotuning]</b> ( <i>YES</i> )). <b>Note:</b> The autotuning must be performed with a cold motor.
4	Assign <b>[Brake assignment]</b> ( <i>BLC</i> ). It activates the function and the assigned output controls the command to release/apply the brake.
5	Verify <b>[Movement type]</b> ( <i>BE</i> ) is set to <b>[Hoisting]</b> ( <i>VER</i> ).
6	Set <b>[Brake Impulse]</b> ( <i>BP</i> ) to <b>[Yes]</b> ( <i>YES</i> ). Ensure that the direction of rotation forward (i.e. forward digital input with positive reference frequency) corresponds to the lift of the load. For applications in which the load being lowered is very different from the load being lifted, set <b>[Brake Impulse]</b> ( <i>BP</i> ) = <b>[2 IBR]</b> ( <i>2IBR</i> ) (e.g., ascent always with a load and descent always without a load).
7	Assign <b>[Brake contact]</b> ( <i>BCI</i> ) to handle the brake contact feedback. <b>Note:</b> An external filter can be used to help prevent the noise consideration. Otherwise, the monitoring of the brake contact can be deactivated in steady state by setting <b>[BRH b1]</b> ( <i>Brh1</i> ) to <b>[1]</b> ( <i>1</i> ).
8	Brake release current <b>[Brake release I FW]</b> ( <i>IBR</i> ) and <b>[Brake release I Rev]</b> ( <i>IBRd</i> ) if <b>[Brake Impulse]</b> ( <i>BP</i> ) = <b>[2 IBR]</b> ( <i>2IBR</i> ): adjust the brake release current to the rated current indicated on the motor. During testing, adjust the brake release current in order to hold the load smoothly.
9	Acceleration time: for hoisting applications it is advisable to set the acceleration ramps to more than 0.5 seconds. Ensure that the drive does not exceed the current limit. The same recommendation applies for deceleration. <b>Reminder:</b> for a hoisting movement, a braking resistor should be used.
10	<b>[Brake Release time]</b> ( <i>brt</i> ): set according to the type of brake. It is the time required for the mechanical brake to release.
11	<b>[Brake release freq]</b> ( <i>brf</i> ), in open-loop mode only: Leave in <b>[Auto]</b> ( <i>Auto</i> ), adjust if necessary.
12	<b>[Brake engage freq]</b> ( <i>ben</i> ): leave in <b>[Auto]</b> ( <i>Auto</i> ), adjust if necessary.
13	<b>[Brake engage time]</b> ( <i>bet</i> ): set according to the type of brake. It is the time required for the mechanical brake to engage.

**Instructions for brake logic control for a horizontal hoisting application:**

Your application consists of a whole range of different interrelated mechanical, electrical, and electronic components, the drive being just one part of the application. The drive by itself is neither intended to nor capable of providing the entire functionality to meet all safety-related requirements that apply to your application. Depending on the application and the corresponding risk assessment to be conducted by you, a whole variety of additional equipment is required such as, but not limited to, external encoders, external brakes, external monitoring devices, guards, etc.

As a designer/manufacture of machines, you must be familiar with and observe all standards that apply to your machine. You must conduct a risk assessment and determine the appropriate Performance Level (PL) and/or Safety Integrity Level (SIL) and design and build your machine in compliance with all applicable standards. In doing so, you must consider the interrelation of all components of the machine. In addition, you must provide instructions for use that enable the user of your machine to perform any type of work on and with the machine such as operation and maintenance in a safe manner.

The present document assumes that you are fully aware of all normative standards and requirements that apply to your application. Since the drive cannot provide all safety-related functionality for your entire application, you must ensure that the required Performance Level and/or Safety Integrity Level is reached by installing all necessary additional equipment.

## **WARNING**

### **INSUFFICIENT PERFORMANCE LEVEL/SAFETY INTEGRITY LEVEL AND/OR UNINTENDED EQUIPMENT OPERATION**

- Conduct a risk assessment according to EN ISO 12100 and all other standards that apply to your application.
- Use redundant components and/or control paths for all critical control functions identified in your risk assessment.
- Implement all monitoring functions required to avoid any type of hazard identified in your risk assessment, for example, slipping or falling loads.
- Verify that the service life of all individual components used in your application is sufficient for the intended service life of your overall application.
- Perform extensive commissioning tests for all potential error situations to verify the effectiveness of the safety-related functions and monitoring functions implemented, for example, but not limited to, speed monitoring by means of encoders, short circuit monitoring for all connected equipment, correct operation of brakes and guards.
- Perform extensive commissioning tests for all potential error situations to verify that the load can be brought to a safe stop under all conditions.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

A specific application note [NHA80973](#) is available on hoisting machines and can be downloaded on [se.com](#).

When the drive transitions to operating state Fault, the mains contactor and the brake contactor must be deenergized.

## **WARNING**


### **UNANTICIPATED EQUIPMENT OPERATION**

- Assign **[Operating state fault] (F L E)** to output relay R1.
- Connect the coil of the mains contactor to output relay R1.
- Connect the brake contactor downstream of the mains contactor.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

Step	Action
1	Enter the motor nameplate parameters.
2	Set <b>[Motor protect. type]</b> (EHE) according to the cooling mode.
3	Verify <b>[Autotuning Usage]</b> (EUNU) is set to <b>[Therm mot]</b> (EN) or set it, then perform a motor autotuning ( <b>[Autotuning]</b> (EUN) to <b>[Apply Autotuning]</b> (YES)). <b>Note:</b> The autotuning must be performed with a cold motor.
4	Assign <b>[Brake assignment]</b> (BLE). It activates the function and the assigned output controls the command to release/apply the brake.
5	Verify <b>[Movement type]</b> (BSE) is set to <b>[Traveling]</b> (HOR).
6	Set <b>[Brake Impulse]</b> (BIP) to <b>[No]</b> (NO)
7	Assign <b>[Brake contact]</b> (BCI) to handle the brake contact feedback. <b>Note:</b> An external filter can be used to help prevent the noise consideration. Otherwise, the monitoring of the brake contact can be deactivated in steady state by setting <b>[BRH b1]</b> (BRH b1) to <b>[1]</b> (1).
8	<b>[Brake release I FW]</b> (IBR): set to 0.
9	<b>[Brake Release time]</b> (BRE): set according to the type of brake. It is the time required for the mechanical brake to release.
10	<b>[Brake engage freq]</b> (BEN), in open-loop mode only: leave in <b>[Auto]</b> (AUTO), adjust if necessary.
11	<b>[Brake engage time]</b> (BET): set according to the type of brake. It is the time required for the mechanical brake to engage.


Brake logic control, horizontal movement in open-loop mode

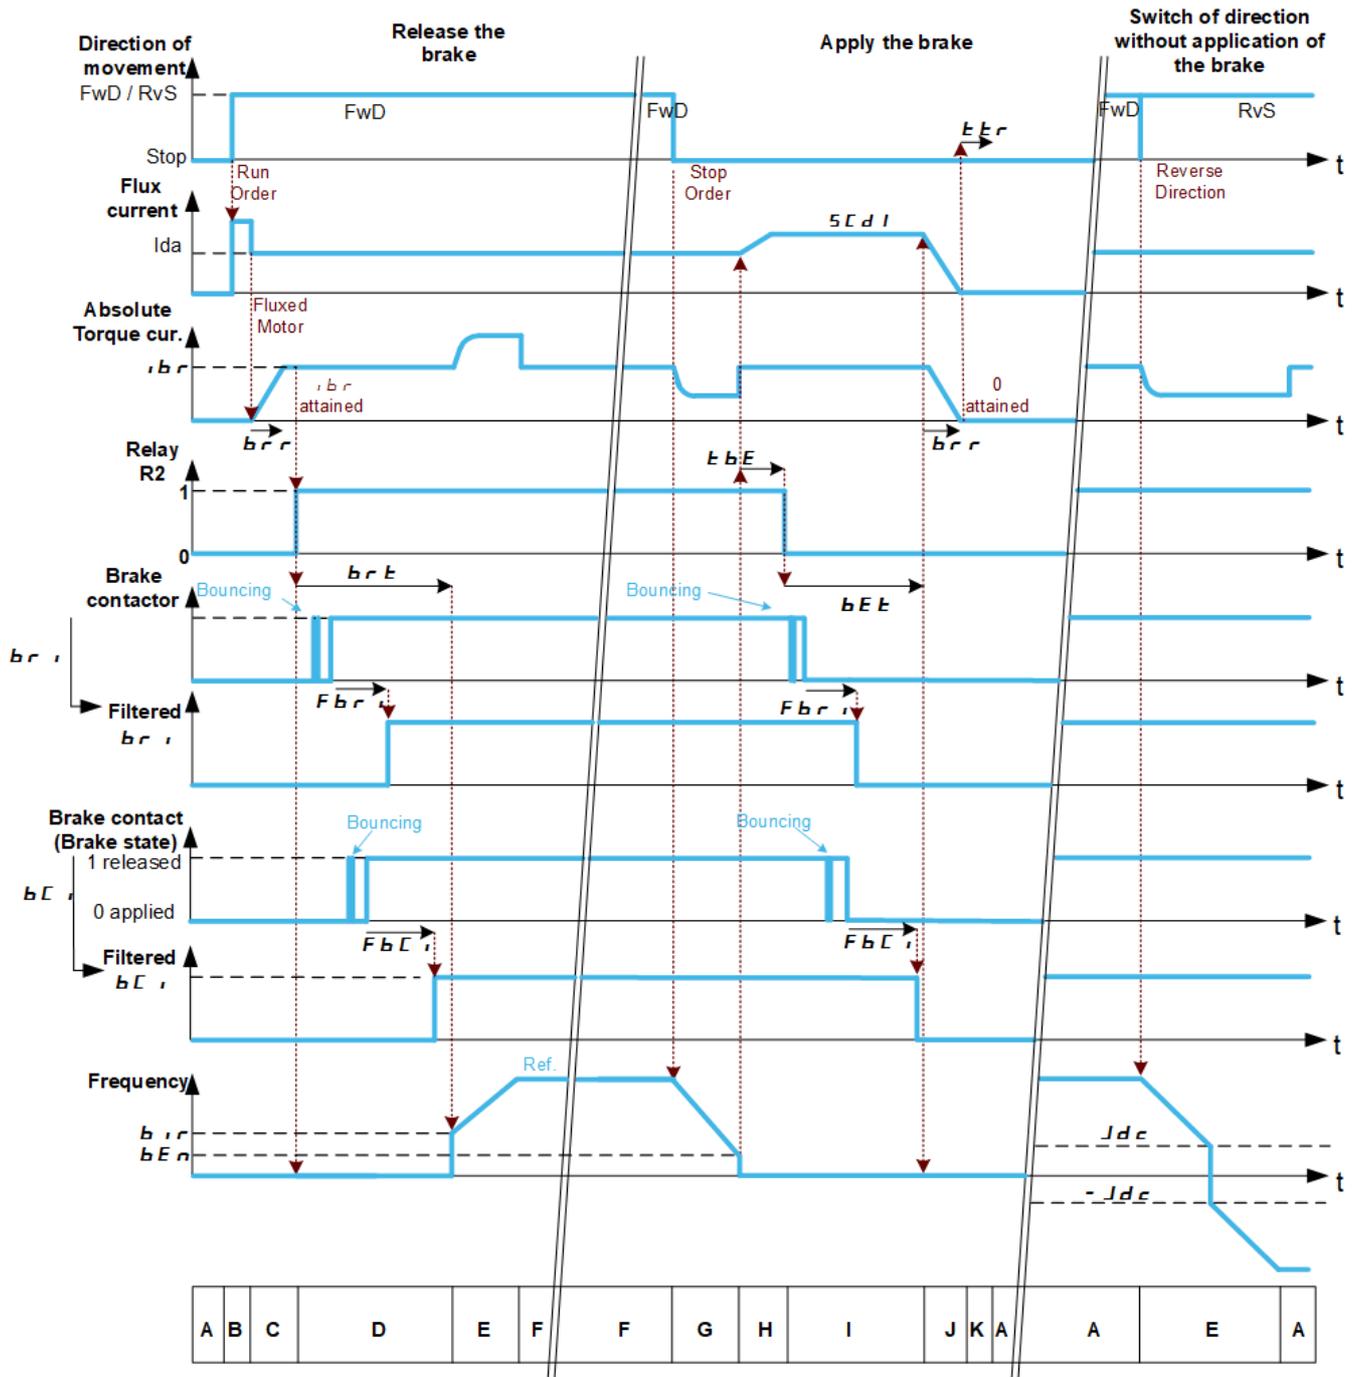

Key:

- A: Waiting for run command
- B: Motor fluxing
- C: Injection of the torque-generating current
- D: Release of the brake
- E: Acceleration/deceleration
- F: Reference value attained
- G: Deceleration due to stop command
- H: Delay before command to apply the brake
- I: Application of the brake
- J: Removal of current
- K: Restart delay

Brake logic control, vertical movement in open-loop mode

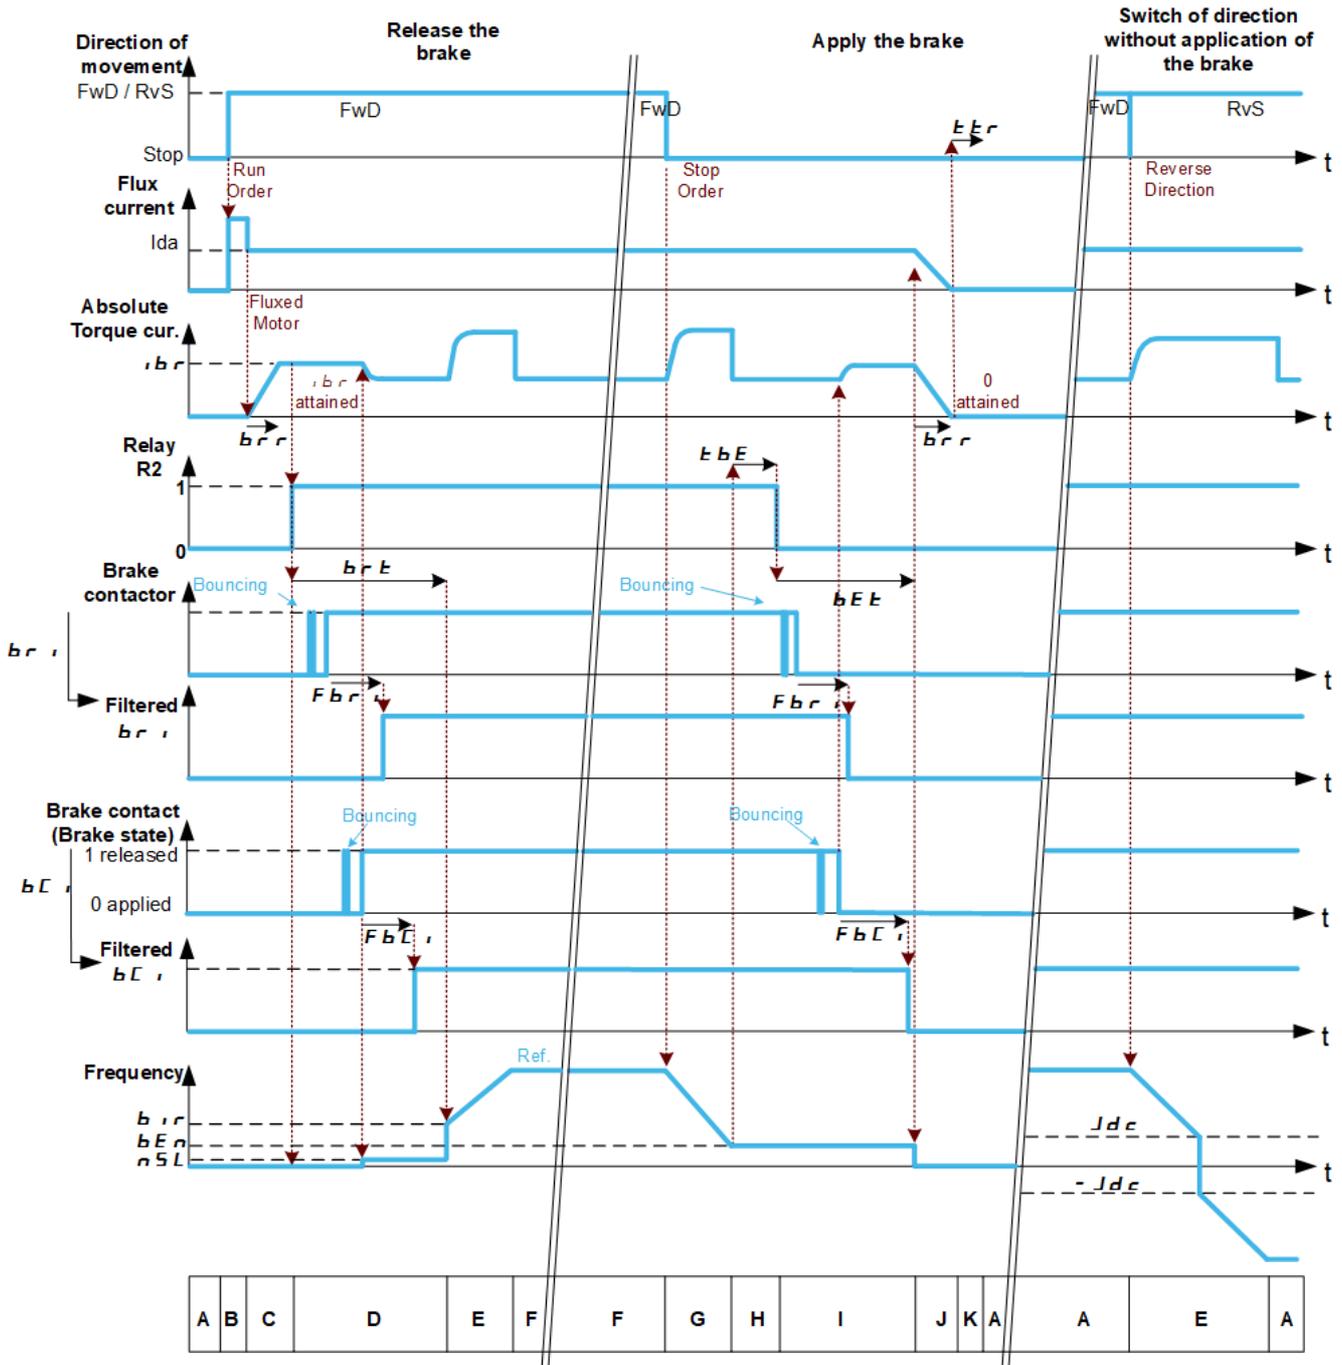

Key:

- A: Waiting for run command
- B: Motor fluxing
- C: Injection of the torque-generating current
- D: Release of the brake
- E: Acceleration/deceleration
- F: Reference value attained
- G: Deceleration due to stop command
- H: Delay before command to apply the brake
- I: Application of the brake
- J: Removal of current
- K: Restart delay

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FUN- &gt; BLC-

Code	Name / Description	Adjustment range	Factory setting
<i>F u n -</i>	<b>[APPLICATION FUNCT.] (continued)</b>		
<i>b L C -</i>	<b>[BRAKE LOGIC CONTROL]</b> <b>Note:</b> This function cannot be used with certain other functions. Follow the instructions on page <a href="#">172</a> .		
<i>b L C</i>	<b>[Brake assignment]</b> Logic output or control relay. <b>Note:</b> If the brake is assigned, only a ramp stop is possible. Check the <b>[Type of stop] (5 E E)</b> page <a href="#">182</a> . Brake logic control can only be assigned if <b>[Motor control type] (C E E)</b> is not set to <b>[Standard] (5 E d)</b> , <b>[V/F 5pts] (u F 5)</b> , <b>[V/F Quad.] (u F 9)</b> or <b>[Sync. mot] (5 Y n)</b> . See Compatibility table page <a href="#">174</a> to see the compatible functions.  <i>n o</i> <b>[No] (n o)</b> : Function not assigned (in this case, none of the function parameters can be accessed) <i>r 2</i> <b>[R2] (r 2)</b> : Relay <i>L o 1</i> <b>[LO1] (L o 1)</b> : Logic output <i>d o 1</i> <b>[dO1] (d o 1)</b> : Analog output AO1 functioning as a logic output. Selection can be made if <b>[AO1 assignment] (A o 1)</b> page <a href="#">153</a> is set to <b>[No] (n o)</b>		<b>[No] (n o)</b>
<i>b 5 E</i> ★	<b>[Movement type]</b> This parameter can be accessed if <b>[Brake assignment] (b L C)</b> is set to a value different from <b>[No] (n o)</b> .  <i>H o r</i> <b>[Traveling] (H o r)</b> : Resistive-load movement (translational motion of overhead crane, for example) <b>Note:</b> If <b>[Motor control type] (C E E)</b> is set to <b>[Standard] (5 E d)</b> or <b>[V/F 5pts] (u F 5)</b> , <b>[Movement type] (b 5 E)</b> is forced to <b>[Traveling] (H o r)</b> . <i>u E r</i> <b>[Hoisting] (u E r)</b> : Driving-load movement (hoisting winch, for example) <b>Note:</b> If <b>[Weight sensor ass.] (P E 5)</b> page <a href="#">212</a> is not <b>[No] (n o)</b> , <b>[Movement type] (b 5 E)</b> is forced to <b>[Hoisting] (u E r)</b> .		<b>[Hoisting] (u E r)</b>
<i>b C i</i> ★	<b>[Brake contact]</b> If the brake has a monitoring contact (closed for released brake). This parameter can be accessed if <b>[Brake assignment] (b L C)</b> is set to a value different from <b>[No] (n o)</b> .  <i>n o</i> <b>[No] (n o)</b> : Not assigned <i>L i 1</i> <b>[LI1] (L i 1)</b> : Logical input LI1 ... <b>[...] (...)</b> : See the assignment conditions on page <a href="#">162</a>		<b>[No] (n o)</b>
<i>b i P</i> ★ ( )	<b>[Brake impulse]</b> Brake impulse. This parameter can be accessed if <b>[Movement type] (b 5 E)</b> is set to <b>[Hoisting] (u E r)</b> and <b>[Weight sensor ass.] (P E 5)</b> is set to <b>[No] (n o)</b> (see page <a href="#">212</a> ). This parameter is forced to <b>[No] (n o)</b> if <b>[Movement type] (b 5 E)</b> is set to <b>[Traveling] (H o r)</b> . This parameter is forced to <b>[Yes] (Y E 5)</b> if <b>[Weight sensor ass.] (P E 5)</b> is set to a value different from <b>[No] (n o)</b> .  <i>n o</i> <b>[No] (n o)</b> : The motor torque is given in the required operating direction, at current <b>[Brake release I FW] (i b r)</b> <i>Y E 5</i> <b>[Yes] (Y E 5)</b> : The motor torque is in forward direction (check that this direction corresponds to ascending), at current <b>[Brake release I FW] (i b r)</b> <i>2 i b r</i> <b>[2 IBR] (2 i b r)</b> : The torque is in the required direction, at current <b>[Brake release I FW] (i b r)</b> for Forward and <b>[Brake release I Rev] (i r d)</b> for Reverse, for certain specific applications		<b>[Yes] (Y E 5)</b>
<i>i b r</i> ★ ( ) (1)	<b>[Brake release I FW]</b> Brake release current threshold for ascending or forward movement. This parameter can be accessed if <b>[Weight sensor ass.] (P E 5)</b> is set to <b>[No] (n o)</b> page <a href="#">212</a> .	0 to 1.36 ln (2)	0 A
<i>i r d</i> ★ ( )	<b>[Brake release I Rev]</b> Brake release current threshold for descending or reverse movement. This parameter can be accessed if <b>[Brake assignment] (b L C)</b> is set to a value different from <b>[NO] (n o)</b> and <b>[Brake impulse] (b i P)</b> is set to <b>[2IBR] (2 i b r)</b> and <b>[Weight sensor ass.] (P E 5)</b> is set to <b>[NO] (n o)</b> .	0 to 1.36 ln (2)	0 A
<i>b r t</i> ★ ( ) (1)	<b>[Brake Release time]</b> Brake release time delay.	0 to 5.00 s	0 s

**Parameters described in this page can be accessed by:** DRI- > CONF > FULL > FUN- > BLC-

Code	Name / Description	Adjustment range	Factory setting
<p><i>b r</i></p> <p>★</p> <p>↻</p> <p>(1)</p> <p><i>Auto</i></p>	<p><b>[Brake release freq]</b></p> <p>Brake release frequency threshold (initialization of acceleration ramp). This parameter can be accessed if <b>[Movement type]</b> (<i>b S E</i>) page 206 is set to <b>[Hoisting]</b> (<i>u E r</i>).</p> <p><b>[Auto]</b> (<i>Auto</i>): The drive takes a value equal to the rated slip of the motor, calculated using the drive parameters <b>0 to 10 Hz:</b> Manual control.</p>	<b>[Auto]</b> ( <i>Auto</i> ) to 10 Hz	<b>[Auto]</b> ( <i>Auto</i> )
<p><i>b E n</i></p> <p>★</p> <p>↻</p> <p>(1)</p> <p><i>Auto</i></p>	<p><b>[Brake engage freq]</b></p> <p>Brake engage frequency threshold. <b>Note:</b> <b>[Brake engage freq]</b> (<i>b E n</i>) cannot be higher than <b>[Low speed]</b> (<i>L S P</i>).</p> <p><b>[Auto]</b> (<i>Auto</i>): The drive takes a value equal to the rated slip of the motor, calculated using the drive parameters <b>0 to 10 Hz:</b> Manual control.</p>	<b>[Auto]</b> ( <i>Auto</i> ) 0 to 10 Hz	<b>[Auto]</b> ( <i>Auto</i> )
<p><i>t b E</i></p> <p>★</p> <p>↻</p> <p>(1)</p>	<p><b>[Brake engage delay]</b></p> <p>Time delay before request to engage brake.</p>	0 to 5.00 s	0 s
<p><i>b E t</i></p> <p>★</p> <p>↻</p> <p>(1)</p>	<p><b>[Brake engage time]</b></p> <p>Brake engage time (brake response time).</p>	0 to 5.00 s	0 s
<p><i>S d C I</i></p> <p>★</p> <p>↻</p> <p>(1)</p>	<p><b>[Auto DC inj. level 1]</b></p> <div style="border: 1px solid black; padding: 10px; margin: 10px 0;"> <p style="text-align: center;"><b>NOTICE</b></p> <p><b>OVERHEATING</b> Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time. <b>Failure to follow these instructions can result in equipment damage.</b></p> </div> <p>Level of standstill DC injection current. <b>Note:</b> This parameter can be accessed if <b>[Movement type]</b> (<i>b S E</i>) page 206 is set to <b>[Traveling]</b> (<i>H o r</i>).</p>	0 to 1.2 In (2)	0.7 In (2)
<p><i>b E d</i></p> <p>★</p> <p>↻</p> <p><i>no</i> <i>YES</i></p>	<p><b>[Engage at reversal]</b></p> <p>Can be used to select whether or not the brake engages on transition to zero speed when the operating direction is reversed.</p> <p><b>[No]</b> (<i>no</i>): The brake does not engage <b>[Yes]</b> (<i>YES</i>): The brake engages</p>		<b>[No]</b> ( <i>no</i> )
<p><i>J d C</i></p> <p>★</p> <p>↻</p> <p>(1)</p> <p><i>Auto</i></p>	<p><b>[Jump at reversal]</b></p> <p>This parameter can be accessed if <b>[Movement type]</b> (<i>b S E</i>) page 206 is set to <b>[Hoisting]</b> (<i>u E r</i>).</p> <p><b>[Auto]</b> (<i>Auto</i>): The drive takes a value equal to the rated slip of the motor, calculated using the drive parameters <b>0 to 10 Hz:</b> Manual control</p> <p>When the reference direction is reversed, this parameter can be used to avoid loss of torque (and consequential release of load) on transition to zero speed. Parameter is not applicable if <b>[Engage at reversal]</b> (<i>b E d</i>) = <b>[Yes]</b> (<i>YES</i>).</p>	<b>[Auto]</b> ( <i>Auto</i> ) to 10 Hz	<b>[Auto]</b> ( <i>Auto</i> )

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FUN- &gt; BLC-

Code	Name / Description	Adjustment range	Factory setting
<span style="color: green;">E E r</span> <span style="color: blue;">★</span> <span style="border: 1px solid black; border-radius: 50%; padding: 2px;">↻</span> (1)	<b>[Time to restart]</b> Time between the end of a brake engage sequence and the start of a brake release sequence.	0.00 to 15.00 s	0 s

(1) The parameter can also be accessed in the **[SETTINGS] (S E E -)** menu.

(2) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

### Brake control logic expert parameters

Following parameters for brake logic sequence are accessible in expert mode only.

Code	Name / Description	Adjustment range	Factory setting
<p><i>brH0</i></p> <p>★</p> <p>0 (0): The engage/release sequence is completely executed</p> <p>1 (1): The brake is released immediately</p> <p>A run command may be requested during the brake engagement phase. Whether or not the brake release sequence is executed depends on the value selected for <b>[BRH b0] (brH0)</b>.</p> <div style="text-align: center;"> </div> <p><b>Note:</b> If a run command is requested during the "tr" phase, the complete brake control sequence is initialized.</p>	<p><b>[BRH b0]</b></p>		0
<p><i>brH1</i></p> <p>★</p> <p>0 (0): The brake contact in steady state fault is active (fault state if the contact is open during operation). The <b>[Brake feedback] (brF)</b> brake contact fault is monitored in all operating phases.</p> <p>1 (1): The brake contact in steady state fault is inactive. The <b>[Brake feedback] (brF)</b> brake contact fault is only monitored during the brake release and engage phases.</p>	<p><b>[BRH b1]</b></p>		0

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > FUN- > BLC-

Code	Name / Description	Adjustment range	Factory setting
<p><i>brH2</i></p> <p>★</p> <p>0 (0): The brake contact is not taken into account</p> <p>1 (1): The brake contact is taken into account</p> <p>If a logic input is assigned to the brake contact:</p> <ul style="list-style-type: none"> <li>- <b>[BRH b2] (brH2) = 0</b>: During the brake release sequence, the reference is enabled at the end of the time <b>[Brake Release time] (brt)</b>. During the brake engage sequence, the current changes to 0 according to the ramp <b>[Current ramp time] (brr)</b> at the end of the <b>[Brake engage time] (bEt)</b>.</li> <li>- <b>[BRH b2] (brH2) = 1</b>: When the brake is released, the reference is enabled when the logic input changes to 1. When the brake is engaged, the current changes to 0 according to the ramp <b>[Current ramp time] (brr)</b> when the logic input changes to 0.</li> </ul>			0
<p><i>brr</i></p> <p>★</p> <p>(↻)</p>	<p><b>[Current ramp time]</b></p> <p>Torque current ramp time (increase and decrease) for a current variation equal to <b>[Brake release I FW] (ibr)</b>.</p>	0 to 5.00 s	0 s

★ These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

(↻) Parameter that can be modified during operation or when stopped.

## EXTERNAL WEIGHT MEASUREMENT

### Load measurement

#### ⚠ WARNING

##### LOSS OF CONTROL


Perform a comprehensive commissioning test to verify correct operation of the weight sensor under all operating and error conditions.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

This function uses the information supplied by a weight sensor to adapt the current **[Brake release I FW] (ibr)** of the **[BRAKE LOGIC CONTROL] (BLC-)** function. The signal from the weight sensor can be assigned to an analog input (usually a 4 - 20 mA signal) or to the pulse-in input, according to the type of weight sensor.

#### Example: Measurement of the total weight of a hoisting winch and its load

The current **[Brake release I FW] (ibr)** is adapted in accordance with the curve below.

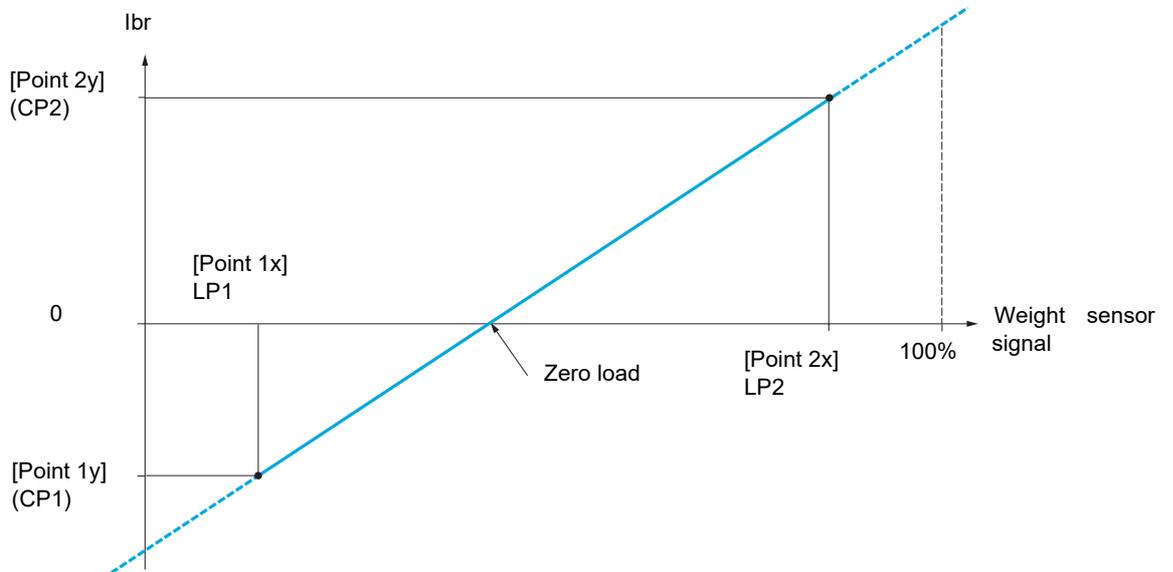


Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FUN- &gt; ELM-

Code	Name / Description	Adjustment range	Factory setting
<i>F u n -</i>	<b>[APPLICATION FUNCT.] (continued)</b>		
<i>E L M -</i>	<b>[EXTERNAL WEIGHT MEAS.]</b>		
<i>P E S</i>	<b>[Weight sensor ass.]</b>		[No] (no)
	This parameter can be configured if <b>[BRAKE LOGIC CONTROL] (b L C -)</b> page 206 is not set to [No] (no).		
<i>n o</i>	[No] (no): Not assigned		
<i>A I 1</i>	[AI1] (A I 1): Analog input A1		
<i>A I 2</i>	[AI2] (A I 2): Analog input A2		
<i>A I 3</i>	[AI3] (A I 3): Analog input A3		
<i>P i</i>	[RP] (P i): Pulse input		
<i>A i u 1</i>	[AI virtual 1] (A i u 1): Virtual analog input 1 with the jog dial		
<i>A i u 2</i>	[AI virtual 2] (A i u 2): Virtual analog input 2 by the communication bus		
<i>o A 0 1</i>	[OA01] (o A 0 1): Function blocks: Analog Output 01		
...	...		
<i>o A 1 0</i>	[OA10] (o A 1 0): Function blocks: Analog Output 10		
<i>L P 1</i>	<b>[Point 1 X]</b>	0 to LP2-0.01%	0%
★	0 to 99.99% of signal on assigned input. [Point 1x] (L P 1) must be less than [Point 2x] (L P 2). This parameter can be accessed if <b>[Weight sensor ass.] (P E S)</b> is assigned.		
<i>L P 1</i>	<b>[Point 1Y]</b>	-1.36 In to 1.36 In (1)	-In (1)
★	Current corresponding to load <b>[Point 1 X] (L P 1)</b> , in A. This parameter can be accessed if <b>[Weight sensor ass.] (P E S)</b> is assigned.		
<i>L P 2</i>	<b>[Point 2X]</b>	LP1+0.01% to 100%	50%
★	0.01 to 100% of signal on assigned input. [Point 2x] (L P 2) must be greater than [Point 1x] (L P 1). This parameter can be accessed if <b>[Weight sensor ass.] (P E S)</b> is assigned.		
<i>L P 2</i>	<b>[Point 2Y]</b>	-1.36 In to 1.36 In (1)	0 A
★	Current corresponding to load <b>[Point 2x] (L P 2)</b> , in A. This parameter can be accessed if <b>[Weight sensor ass.] (P E S)</b> is assigned.		
<i>i b r A</i>	<b>[ibr 4-20 mA loss]</b>	0 to 1.36 In (1)	0
★	Brake release current in the event of the loss of the weight sensor information. This parameter can be accessed if the weight sensor is assigned to an analog current input and the 4-20 mA loss is deactivated. Recommended settings: Rated motor current for a hoisting application.		
(↻)			

(1) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.

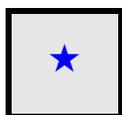

These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.


## HIGH SPEED HOISTING

This function can be used to optimize the cycle times for hoisting movements for zero or lightweight loads. It authorizes operation at "constant power" in order to reach a speed greater than the rated speed without exceeding the rated motor current.

The speed remains limited by the **[High speed] (H 5 P)** parameter page [96](#).

The function acts on the speed reference pedestal and not on the reference itself.


Principle:

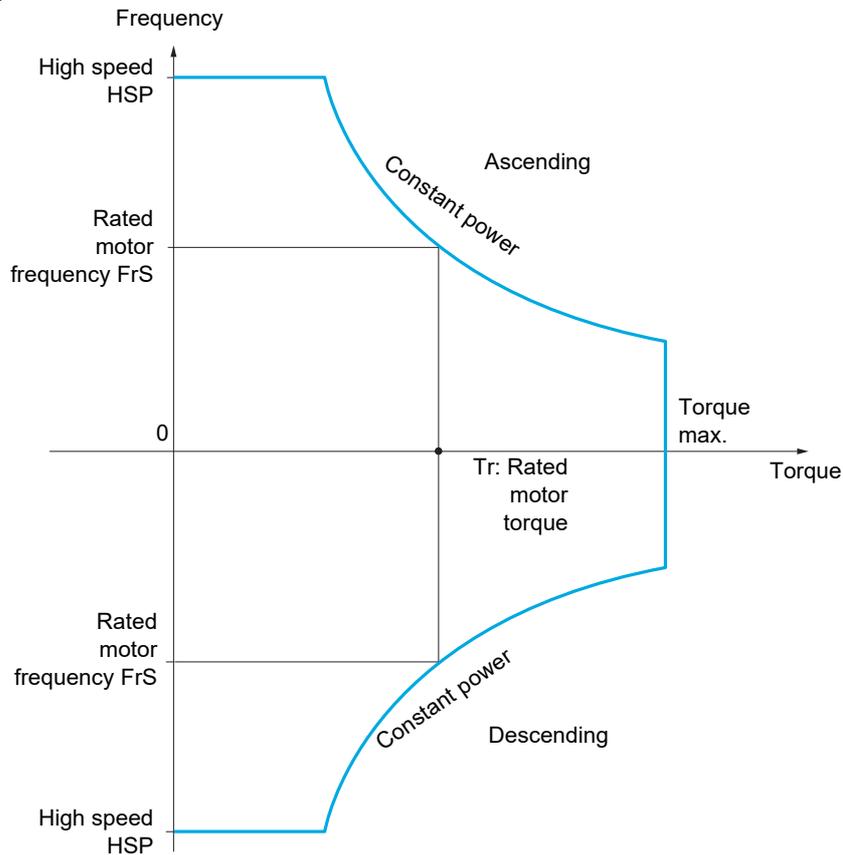

There are 2 possible operating modes:

- Speed reference mode: The maximum permissible speed is calculated by the drive during a speed step that is set so that the drive can measure the load.
- Current limitation mode: The maximum permissible speed is the speed that supports current limitation in motor mode, in the "ascending" direction only. For the "descending" direction, operation is in Speed reference mode.

## Speed reference mode

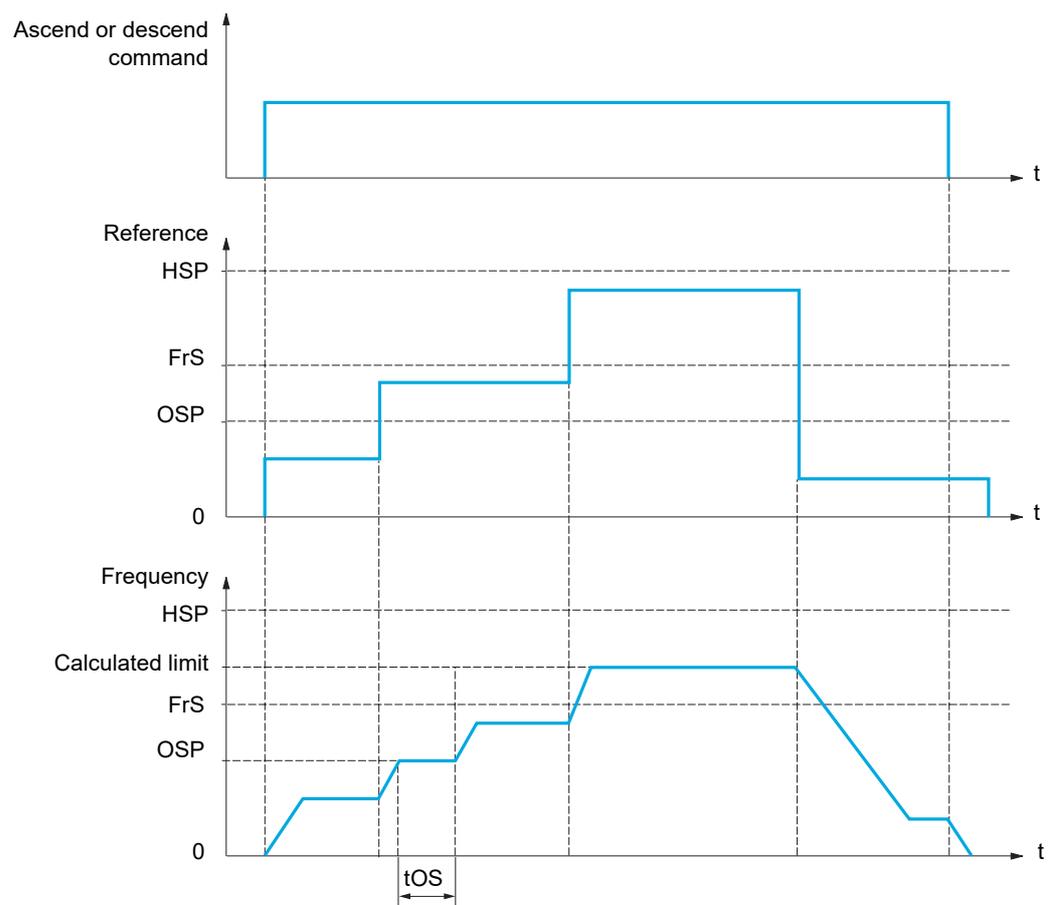


OSP: Adjustable speed step for load measurement

tOS: Load measuring time

Two parameters are used to reduce the speed calculated by the drive, for ascending and descending.

**Current limiting mode**

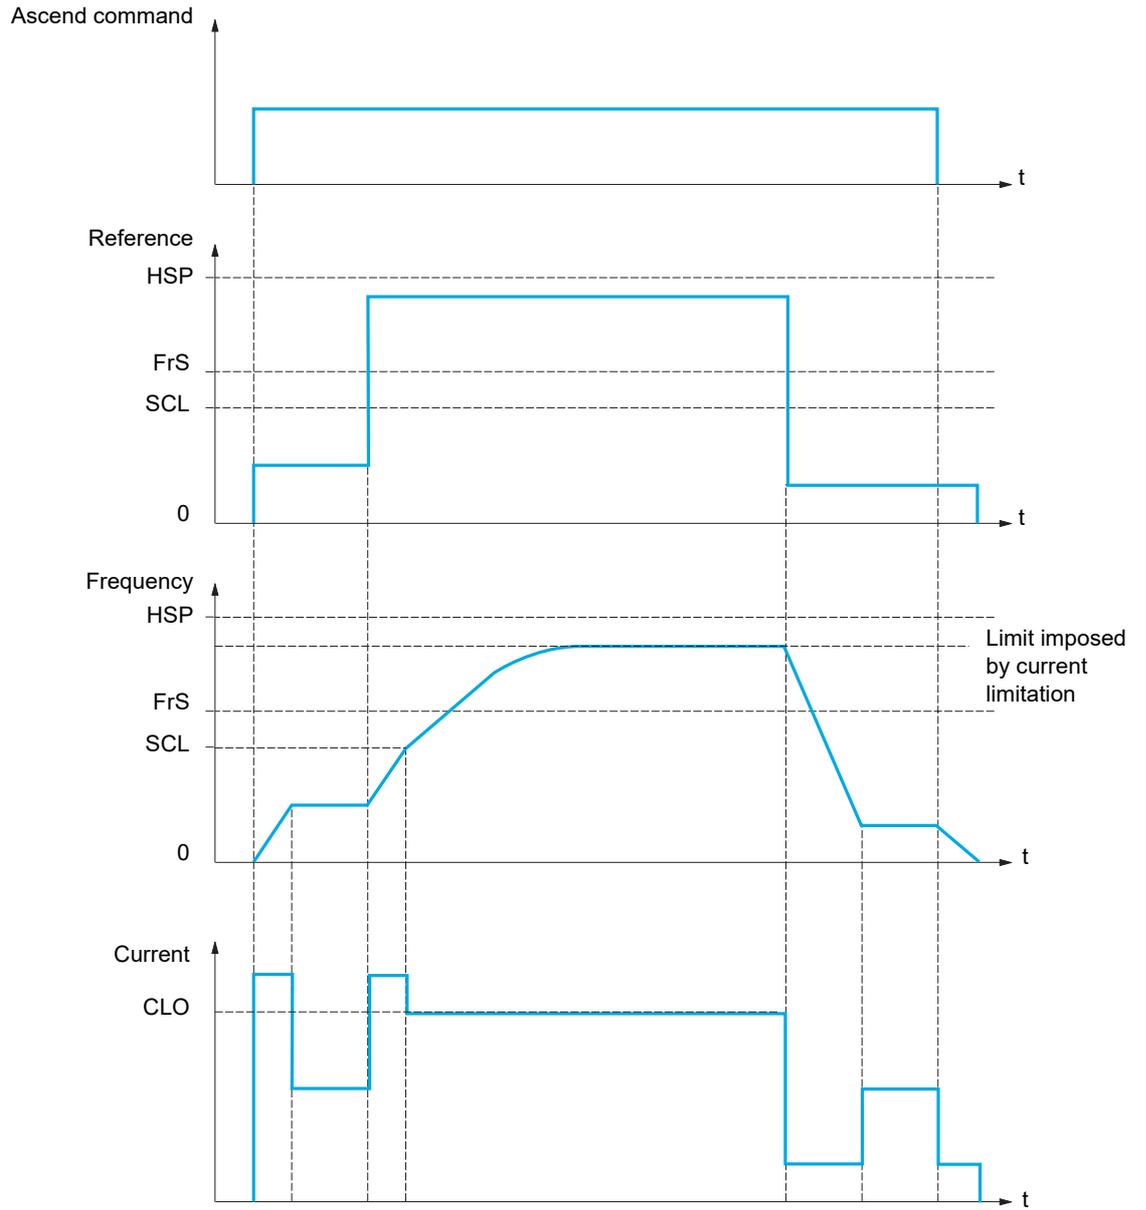



SCL: Adjustable speed threshold, above which current limitation is active

CLO: Current limitation for high-speed function

**Note:** The speed reached for a specific current will be lower in case of network undervoltage in comparison with nominal network voltage.

### Rope slack

The Rope slack function can be used to help to prevent starting up at high speed when a load has been set down ready for lifting but the rope is still slack (as illustrated below).

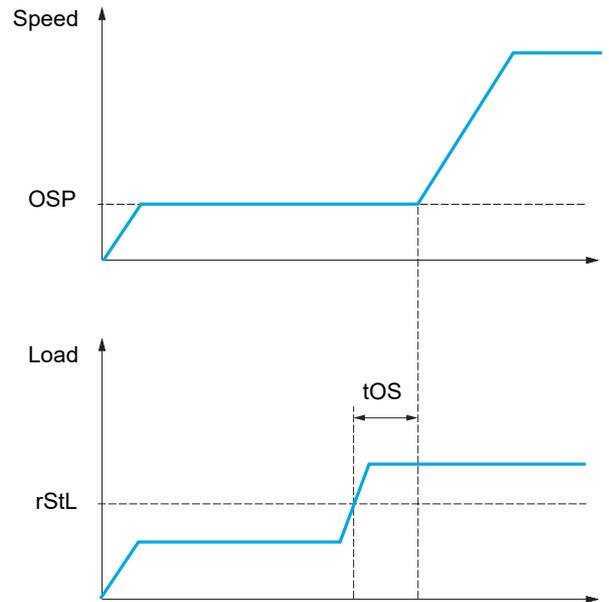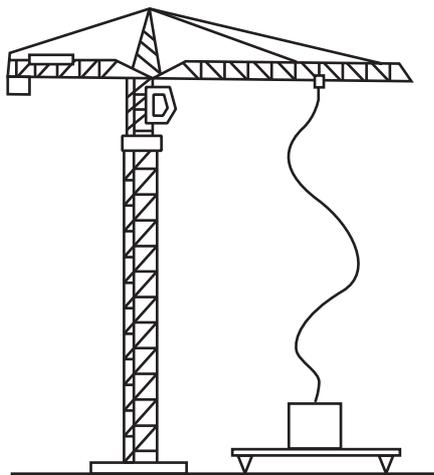

The speed step (OSP parameters) described on page 214 is used to measure the load. The effective measurement cycle will not be triggered until the load reaches the adjustable threshold **[Rope slack trq level] (rStL)**, which corresponds to the weight of the hook.

A logic output or a relay can be assigned to the indication of the rope slack state in the **[INPUTS / OUTPUTS CFG] (i\_o\_)** menu.

Code	Name / Description	Adjustment range	Factory setting
<b>F u n -</b>	<b>[APPLICATION FUNCT.] (continued)</b>		
<b>H 5 H -</b>	<b>[HIGH SPEED HOISTING]</b> <b>Note:</b> This function cannot be used with certain other functions. Follow the instructions on page 172.		
<b>H 5 o</b>	<b>[High speed hoisting]</b>		<b>[No] (n o)</b>
<b>n o</b>	<b>[No] (n o):</b> Function inactive		
<b>5 5 o</b>	<b>[Speed ref] (5 5 o):</b> Speed reference mode		
<b>L 5 o</b>	<b>[I Limit] (L 5 o):</b> Current limitation mode		
<b>L o F</b>	<b>[Motor speed coeff.]</b>	0 to 100%	100%
★ ( )	Speed reduction coefficient calculated by the drive for Ascending direction. This parameter can be accessed if <b>[High speed hoisting] (H 5 o)</b> is set to <b>[Speed ref] (5 5 o)</b> .		
<b>L o r</b>	<b>[Gen. speed coeff]</b>	0 to 100%	50%
★ ( )	Speed reduction coefficient calculated by the drive for Descending direction. This parameter can be accessed if <b>[High speed hoisting] (H 5 o)</b> is not set to <b>[No] (n o)</b> .		
<b>t o S</b>	<b>[Load measuring tm.]</b>	0.1 s to 65 s	0.5 s
★ ( )	Duration of speed step for measurement. This parameter can be accessed if <b>[High speed hoisting] (H 5 o)</b> is not set to <b>[No] (n o)</b> .		

Parameters described in this page can be accessed by: DRI- > CONF > FULL > FUN- > HSH-

Code	Name / Description	Adjustment range	Factory setting
<p><b>o5P</b></p> <p>★</p> <p>( )</p>	<p><b>[Measurement spd]</b></p> <p>Speed stabilized for measurement. This parameter can be accessed if <b>[High speed hoisting] (H5o)</b> is not set to <b>[No] (no)</b>.</p>	0 to <b>[Rated motor freq.] (Fr5)</b>	40 Hz
<p><b>CLo</b></p> <p>★</p> <p>( )</p>	<p><b>[High speed I Limit]</b></p> <p>Current limitation at high speed. This parameter can be accessed if <b>[High speed hoisting] (H5o)</b> is set to <b>[I Limit] (L5o)</b>. <b>Note:</b> If the setting is less than 0.25 In, the drive may lock in <b>[Output Phase Loss] (oPL)</b> fault mode if this has been enabled (see page 270).</p>	0 to 1.5 In (1)	In (1)
<p><b>5CL</b></p> <p>★</p> <p>( )</p>	<p><b>[I Limit. frequency]</b></p> <p>Frequency threshold, above which the high-speed limitation current is active. This parameter can be accessed if <b>[High speed hoisting] (H5o)</b> is set to <b>[I Limit] (L5o)</b>.</p>	0 to 599 Hz according to rating	40 Hz
<p><b>r5d</b></p> <p>★</p> <p>no</p> <p>dr i</p> <p>PES</p>	<p><b>[Rope slack config.]</b></p> <p>Rope slack function. This parameter can be accessed if <b>[High speed hoisting] (H5o)</b> is not set to <b>[No] (no)</b>.</p> <p><b>[No] (no):</b> Function inactive <b>[Drive estim.] (dr i):</b> Measurement of the load by estimating the torque generated by the drive <b>[Ext. sensor] (PES):</b> Measurement of the load using a weight sensor, can only be assigned if <b>[Weight sensor ass.] (PES)</b> page 212 is not <b>[No] (no)</b></p>		<b>[No] (no)</b>
<p><b>r5tL</b></p> <p>★</p>	<p><b>[Rope slack trq level]</b></p> <p>Adjustment threshold corresponding to a load weighing slightly less than the hook when off-load, as a % of the rated load. This parameter can be accessed if <b>[Rope slack trq level] (r5d)</b> has been assigned.</p>	0 to 100%	0%

(1) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.




Parameter that can be modified during operation or when stopped.

## PID REGULATOR

### Block diagram

The function is activated by assigning an analog input to the PID feedback (measurement).

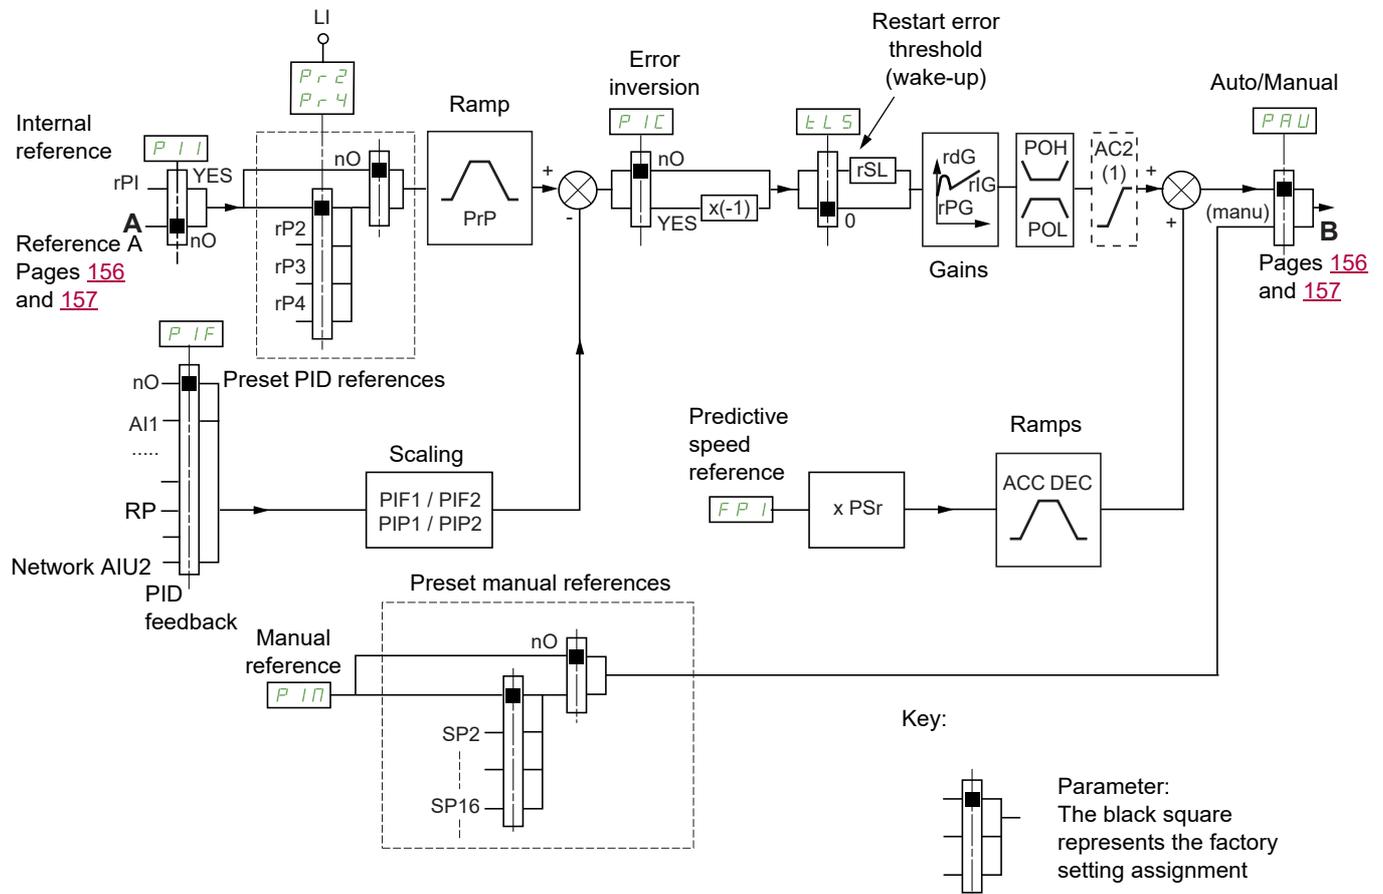

(1) Ramp AC2 is only active when the PID function starts up and during PID "wake-ups".

### PID feedback:

The PID feedback must be assigned to one of the analog inputs AI1 to AI3, to the pulse input, according to whether any extension cards have been inserted.

### PID reference:

The PID reference must be assigned to the following parameters: Preset references via logic inputs ( $rP2$ ,  $rP3$ ,  $rP4$ )

In accordance with the configuration of [Act. internal PID ref.] ( $Pi$ ) page 222:

Internal reference ( $rPi$ ) or

Reference A ([Ref.1 channel] ( $FrI$ ) or [Ref.1B channel] ( $FrIb$ ), see page 163).

### Combination table for preset PID references:

LI ( $rP4$ )	LI ( $rP2$ )	$rP2 = nO$	Reference
			rPI or A
0	0		rPI or A
0	1		rP2
1	0		rP3
1	1		rP4

A predictive speed reference can be used to initialize the speed on restarting the process.

**Scaling of feedback and references:**


- **[Min PID feedback]** ( $P, F 1$ ), **[Max PID feedback]** ( $P, F 2$ ) parameters can be used to scale the PID feedback (sensor range). **This scale MUST be maintained for all other parameters.**
- **[Min PID reference]** ( $P, P 1$ ), **[Max PID reference]** ( $P, P 2$ ) parameters can be used to scale the adjustment range, for example the reference. **The adjustment range MUST remain within the sensor range.**

The maximum value of the scaling parameters is 32,767. To facilitate installation, we recommend using values as close as possible to this maximum level, while retaining powers of 10 in relation to the actual values.

**Example** (see graph below): Adjustment of the volume in a tank, between 6 m<sup>3</sup> and 15 m<sup>3</sup>.

- Sensor used 4-20 mA, 4.5 m<sup>3</sup> for 4 mA and 20 m<sup>3</sup> for 20 mA, with the result that  $P, F 1 = 4,500$  and  $P, F 2 = 20,000$ .
- Adjustment range 6 to 15 m<sup>3</sup>, with the result that  $P, P 1 = 6,000$  (min. reference) and  $P, P 2 = 15,000$  (max. reference).
- Example references:
  - rP1 (internal reference) = 9,500
  - rP2 (preset reference) = 6,500
  - rP3 (preset reference) = 8,000
  - rP4 (preset reference) = 11,200

The **[3.4 DISPLAY CONFIG.]** menu can be used to customize the name of the unit displayed and its format.

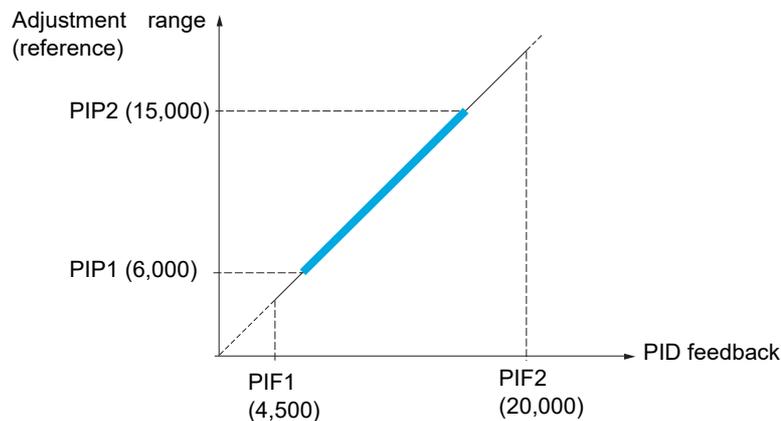

**Other parameters:**

- **[PID wake up thresh.]** ( $r 5 L$ ) parameter: Can be used to set the PID error threshold, above which the PID regulator will be reactivated (wake-up) after a stop due to the max. time threshold being exceeded at low speed **[Low speed time out]** ( $t L 5$ ).
- Reversal of the direction of correction **[PID correct. reverse]** ( $P, C$ ): If **[PID correct. reverse]** ( $P, C$ ) is set to **[No]** ( $n o$ ), the speed of the motor will increase when the error is positive (for example: pressure control with a compressor). If **[PID correct. reverse]** ( $P, C$ ) is set to **[Yes]** ( $y e s$ ), the speed of the motor will decrease when the error is positive (for example: temperature control using a cooling fan).
- The integral gain may be short-circuited by a logic input.
- An alarm on the PID feedback may be configured and indicated by a logic output.
- An alarm on the PID error may be configured and indicated by a logic output.

## "Manual - Automatic" Operation with PID

This function combines the PID regulator, the preset speeds and a manual reference. Depending on the state of the logic input, the speed reference is given by the preset speeds or by a manual reference input via the PID function.

### Manual reference [Manual reference] (P, Π):

- Analog inputs AI1 to AI3
- Pulse input

### Predictive speed reference [Speed ref. assign.] (F P, I):

- [AI1] (A, 1): Analog input
- [AI2] (A, 2): Analog input
- [AI3] (A, 3): Analog input
- [RP] (P, I): Pulse input
- [HMI] (L, C, C): Graphic display terminal or remote display terminal
- [Modbus] (Π, d, b): Integrated Modbus
- [CANopen] (C, A, n): Integrated CANopen®
- [Com. card] (n, E, E): Communication card (if inserted)

## Setting up the PID regulator

### 1. Configuration in PID mode.


See the diagram on page [218](#).

### 2. Perform a test in factory settings mode.

To optimize the drive, adjust [PID prop. gain] (r P G) or [PID integral gain] (r, I G) gradually and independently, and observe the effect on the PID feedback in relation to the reference.

### 3. If the factory settings are unstable or the reference is incorrect.

- Perform a test with a speed reference in Manual mode (without PID regulator) and with the drive on load for the speed range of the system:
  - In steady state, the speed must be stable and comply with the reference, and the PID feedback signal must be stable.
  - In transient state, the speed must follow the ramp and stabilize quickly, and the PID feedback must follow the speed. If this is not the case, see the settings for the drive and/or sensor signal and wiring.
- Switch to PID mode.
- Set [Dec ramp adapt.] (b r A) to [No] (n o) (no auto-adaptation of the ramp).
- Set [PID ramp] (P r P) to the minimum permitted by the mechanism without triggering an [Overbraking] (o b F).
- Set the integral gain [PID integral gain] (r, I G) to minimum.
- Leave the derivative gain [PID derivative gain] (r d G) at 0.
- Observe the PID feedback and the reference.
- Switch the drive ON/OFF a number of times or vary the load or reference rapidly a number of times.
- Set the proportional gain [PID prop. gain] (r P G) in order to ascertain the compromise between response time and stability in transient phases (slight overshoot and 1 to 2 oscillations before stabilizing).
- If the reference varies from the preset value in steady state, gradually increase the integral gain [PID integral gain] (r, I G), reduce the proportional gain [PID prop. gain] (r P G) in the event of instability (pump applications), find a compromise between response time and static precision (see diagram).
- Lastly, the derivative gain may permit the overshoot to be reduced and the response time to be improved, although this will be more difficult to obtain a compromise in terms of stability, as it depends on 3 gains.
- Perform in-production tests over the whole reference range.

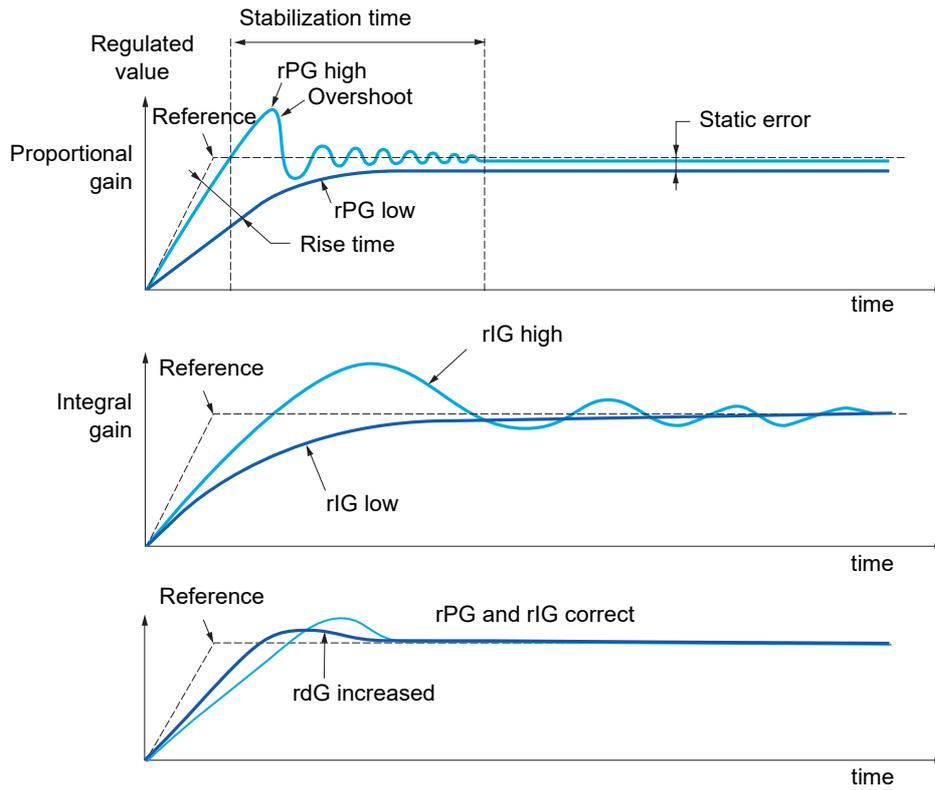

The oscillation frequency depends on the system kinematics.

Parameter	Rise time	Overshoot	Stabilization time	Static error
rPG ↗	↘ ↘	↗	=	↘
rIG ↗	↘	↗ ↗	↗	↘ ↘
rdG ↗	=	↘	↘	=

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > FUN- > PID-

Code	Name / Description	Adjustment range	Factory setting
<i>F u n -</i>	<b>[APPLICATION FUNCT.] (continued)</b>		
<i>P i d -</i>	<b>[PID REGULATOR]</b> <b>Note:</b> This function cannot be used with certain other functions. Follow the instructions on page <a href="#">172</a> .		
<i>P , F</i>	<b>[PID feedback ass.]</b> <i>n o</i> [No] ( <i>n o</i> ): Not assigned <i>A I 1</i> [AI1] ( <i>A I 1</i> ): Analog input A1 <i>A I 2</i> [AI2] ( <i>A I 2</i> ): Analog input A2 <i>A I 3</i> [AI3] ( <i>A I 3</i> ): Analog input A3 <i>P ,</i> [RP] ( <i>P ,</i> ): Pulse input <i>A i u 1</i> [AI virtual 1] ( <i>A i u 1</i> ): Virtual analog input 1 by the communication bus <i>A i u 2</i> [AI virtual 2] ( <i>A i u 2</i> ): Virtual analog input 2 by the communication bus <i>o A O 1</i> [OA01] ( <i>o A O 1</i> ): Function blocks: Analog Output 01 ... <i>o A 10</i> [OA10] ( <i>o A 10</i> ): Function blocks: Analog Output 10		[No] ( <i>n o</i> )
<i>A , C 2</i>  ★	<b>[AI2 net. channel]</b>  This parameter can be accessed if <b>[PID feedback ass.]</b> ( <i>P , F</i> ) is set to <b>[AI virtual 2]</b> ( <i>A i u 2</i> ). This parameter can also be accessed in the <b>[INPUTS / OUTPUTS CFG]</b> ( <i>i _ o -</i> ) menu.  <i>n o</i> [No] ( <i>n o</i> ): Not assigned <i>M o d b</i> [Modbus] ( <i>M o d b</i> ): Integrated Modbus <i>C A N</i> [CANopen] ( <i>C A N</i> ): Integrated CANopen® <i>n E t</i> [Com. card] ( <i>n E t</i> ): Communication card (if inserted)		[No] ( <i>n o</i> )
<i>P , F 1</i>  ★  ⌚ (1)	<b>[Min PID feedback]</b>  Value for minimum feedback.	0 to <b>[Max PID feedback]</b> ( <i>P , F 2</i> ) (2)	100
<i>P , F 2</i>  ★  ⌚ (1)	<b>[Max PID feedback]</b>  Value for maximum feedback.	<b>[Min PID feedback]</b> ( <i>P , F 1</i> ) to 32,767 (2)	1,000
<i>P , P 1</i>  ★  ⌚ (1)	<b>[Min PID reference]</b>  Minimum process value.	<b>[Min PID feedback]</b> ( <i>P , F 1</i> ) to <b>[Max PID reference]</b> ( <i>P , P 2</i> ) (2)	150
<i>P , P 2</i>  ★  ⌚ (1)	<b>[Max PID reference]</b>  Maximum process value.	<b>[Min PID reference]</b> ( <i>P , P 1</i> ) to <b>[Max PID feedback]</b> ( <i>P , F 2</i> ) (2)	900
<i>P , i</i>  ★	<b>[Act. internal PID ref.]</b>  Internal PID regulator reference.		[No] ( <i>n o</i> )
<i>n o</i>  <i>Y E 5</i>	<i>n o</i> [No] ( <i>n o</i> ): The PID regulator reference is given by <b>[Ref.1 channel]</b> ( <i>F r 1</i> ) or <b>[Ref.1B channel]</b> ( <i>F r 1 b</i> ) with summing/subtraction/multiplication functions (see the diagram on page <a href="#">218</a> ). <i>Y E 5</i> [Yes] ( <i>Y E 5</i> ): The PID regulator reference is internal via <b>[Internal PID ref.]</b> ( <i>r P i</i> ).		

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FUN- &gt; PID-

Code	Name / Description	Adjustment range	Factory setting
<b>r P I</b> ★ ( )	<b>[Internal PID ref.]</b> Internal PID regulator reference. This parameter can also be accessed in the <b>[1.2 MONITORING]</b> (P o n -) menu.	<b>[Min PID reference]</b> (P , P I) to <b>[Max PID reference]</b> (P , P 2)	150
<b>r P G</b> ★ ( )	<b>[PID prop. gain]</b> Proportional gain.	0.01 to 100	1
<b>r I G</b> ★ ( )	<b>[PID integral gain]</b> Integral gain.	0.01 to 100	1
<b>r d G</b> ★ ( )	<b>[PID derivative gain]</b> Derivative gain.	0.00 to 100	0
<b>P r P</b> ★ ( ) (1)	<b>[PID ramp]</b> PID acceleration/deceleration ramp, defined to go from <b>[Min PID reference]</b> (P , P I) to <b>[Max PID reference]</b> (P , P 2) and vice versa.	0 to 99.9 s	0 s
<b>P , C</b> ★  n o Y E S	<b>[PID correct. reverse]</b> Reversal of the direction of correction <b>[PID correct. reverse]</b> (P , C): If <b>[PID correct. reverse]</b> (P , C) is set to <b>[No]</b> (n o), the speed of the motor will increase when the error is positive (example: pressure control with a compressor) If <b>[PID correct. reverse]</b> (P , C) is set to <b>[Yes]</b> (Y E S), the speed of the motor will decrease when the error is positive (example: temperature control using a cooling fan).		<b>[No]</b> (n o)
<b>P o L</b> ★ ( ) (1)	<b>[Min PID output]</b> Minimum value of regulator output in Hz.	- 599 to 599 Hz	0 Hz
<b>P o H</b> ★ ( ) (1)	<b>[Max PID output]</b> Maximum value of regulator output in Hz.	0 to 599 Hz	60 Hz
<b>P F L</b> ★ ( ) (1)	<b>[Min fbk alarm]</b> Minimum monitoring threshold for regulator feedback.	<b>[Min PID feedback]</b> (P , F I) to <b>[Max PID feedback]</b> (P , F 2) (2)	100

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FUN- &gt; PID-

Code	Name / Description	Adjustment range	Factory setting
<b>P F H</b> ★ (1)	<b>[Max fbk alarm]</b>  Maximum monitoring threshold for regulator feedback.	<b>[Min PID feedback]</b> ( <i>P , F 1</i> ) to <b>[Max PID feedback]</b> ( <i>P , F 2</i> ) (2)	1,000
<b>P E r</b> ★ (1)	<b>[PID error Alarm]</b>  Regulator error monitoring threshold.	0 to 65,535 (2)	100
<b>P , S</b> ★	<b>[PID integral reset]</b>  If the assigned input or bit is at 0, the function is inactive (the PID integral is enabled). If the assigned input or bit is at 1, the function is active (the PID integral is disabled).		<b>[No]</b> ( <i>n o</i> )
<i>n o</i> <i>L , I 1</i> ...	<b>[No]</b> ( <i>n o</i> ): Not assigned <b>[L11]</b> ( <i>L , I 1</i> ): Logical input L11 <b>[...]</b> (...): See the assignment conditions on page <a href="#">162</a>		
<b>F P ,</b> ★	<b>[Speed ref. assign.]</b>  PID regulator predictive speed input.		<b>[No]</b> ( <i>n o</i> )
<i>n o</i> <i>A , I 1</i> <i>A , I 2</i> <i>A , I 3</i> <i>L C C</i> <i>M o d b</i> <i>C A N o p e n</i> <i>n E t</i> <i>P ,</i> <i>A , v 1</i> <i>o A O 1</i> ... <i>o A I O</i>	<b>[No]</b> ( <i>n o</i> ): Not assigned <b>[A11]</b> ( <i>A , I 1</i> ): Analog input A1 <b>[A12]</b> ( <i>A , I 2</i> ): Analog input A2 <b>[A13]</b> ( <i>A , I 3</i> ): Analog input A3 <b>[HMI]</b> ( <i>L C C</i> ): Graphic display terminal or remote display terminal source <b>[Modbus]</b> ( <i>M o d b</i> ): Integrated Modbus <b>[CANopen]</b> ( <i>C A N o p e n</i> ): Integrated CANopen® <b>[Com. card]</b> ( <i>n E t</i> ): Communication option board source <b>[RP]</b> ( <i>P ,</i> ): Pulse input <b>[AI virtual 1]</b> ( <i>A , v 1</i> ): Virtual analog input 1 with the jog dial <b>[OA01]</b> ( <i>o A O 1</i> ): Function blocks: Analog Output 01 ... <b>[OA10]</b> ( <i>o A I O</i> ): Function blocks: Analog Output 10		
<b>P S r</b> ★ (1)	<b>[Speed input %]</b>  Multiplying coefficient for predictive speed input. This parameter cannot be accessed if <b>[Speed ref. assign.]</b> ( <i>F P ,</i> ) is set to <b>[No]</b> ( <i>n o</i> ).	1 to 100%	100%
<b>P R u</b> ★	<b>[Auto/Manual assign.]</b>  If the assigned input or bit is at 0, the PID is active. If the assigned input or bit is at 1, manual operation is active.		<b>[No]</b> ( <i>n o</i> )
<i>n o</i> <i>L , I 1</i> ...	<b>[No]</b> ( <i>n o</i> ): Not assigned <b>[L11]</b> ( <i>L , I 1</i> ): Logical input L11 <b>[...]</b> (...): See the assignment conditions on page <a href="#">162</a>		
<b>A C 2</b> ★ (1)	<b>[Acceleration 2]</b>  Time to accelerate from 0 to the <b>[Rated motor freq.]</b> ( <i>F r 5</i> ). To have repeatability in ramps, the value of this parameter must be set according to the possibility of the application. Ramp AC2 is only active when the PID function starts up and during PID "wake-ups".	0.00 to 6,000 s (3)	5 s

Code	Name / Description	Adjustment range	Factory setting
<p><i>P, Π</i></p> <p>★</p> <p><i>no</i> [No] (<i>no</i>): Not assigned  <i>A, 1</i> [AI1] (<i>A, 1</i>): Analog input A1  <i>A, 2</i> [AI2] (<i>A, 2</i>): Analog input A2  <i>A, 3</i> [AI3] (<i>A, 3</i>): Analog input A3  <i>P, 1</i> [RP] (<i>P, 1</i>): Pulse input  <i>A, 1, 1</i> [AI virtual 1] (<i>A, 1, 1</i>): Virtual analog input 1 with the jog dial  <i>OA 0 1</i> [<i>OA 0 1</i>] (<i>OA 0 1</i>): Function blocks: Analog Output 01                      ...  <i>OA 1 0</i> [<i>OA 1 0</i>] (<i>OA 1 0</i>): Function blocks: Analog Output 10</p>	<p><b>[Manual reference]</b></p> <p>Manual speed input. This parameter can be accessed if <b>[Auto/Manual assign.]</b> (<i>P, A, u</i>) is not set to <b>[No]</b> (<i>no</i>). The preset speeds are active on the manual reference if they have been configured.</p>		<b>[No]</b> ( <i>no</i> )
<p><i>EL 5</i></p> <p>(1)</p>	<p><b>[Low speed time out]</b></p> <p>Maximum operating time at <b>[Low speed]</b> (<i>L 5 P</i>) (see <b>[Low speed]</b> (<i>L 5 P</i>) page 96). Following operation at <b>[Low speed]</b> (<i>L 5 P</i>) for a defined period, a motor stop is requested automatically. The motor will restart if the reference is greater than <b>[Low speed]</b> (<i>L 5 P</i>) and if a run command is still present.  <b>Note:</b> A value of 0 indicates an unlimited period of time.                      If <b>[Low speed time out]</b> (<i>EL 5</i>) is not 0, <b>[Type of stop]</b> (<i>5 E E</i>) page 182 is forced to <b>[Ramp stop]</b> (<i>r Π P</i>) (only if a ramp stop can be configured).</p>	0 to 999.9 s	0 s
<p><i>r 5 L</i></p> <p>★</p> <p>⌚ 2 s</p>	<p><b>[PID wake up thresh.]</b></p> <div style="border: 1px solid black; padding: 10px; text-align: center;"> <p><b>⚠ WARNING</b></p> <p><b>UNANTICIPATED EQUIPMENT OPERATION</b></p> <p>Verify that activating this function does not result in unsafe conditions.</p> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div> <p>If the "PID" and "Low speed operating time" <b>[Low speed time out]</b> (<i>EL 5</i>) functions are configured at the same time, the PID regulator may attempt to set a speed lower than <b>[Low speed]</b> (<i>L 5 P</i>). This results in unsatisfactory operation, which consists of starting, operating at low speed then stopping, and so on... Parameter <b>[PID wake up thresh.]</b> (<i>r 5 L</i>) (restart error threshold) can be used to set a minimum PID error threshold for restarting after a stop at prolonged <b>[Low speed]</b> (<i>L 5 P</i>). <b>[PID wake up thresh.]</b> (<i>r 5 L</i>) is a percentage of the PID error (value depends on <b>[Min PID feedback]</b> (<i>P, i, F 1</i>) and <b>[Max PID feedback]</b> (<i>P, i, F 2</i>), see <b>[Min PID feedback]</b> (<i>P, i, F 1</i>) page 222). The function is inactive if <b>[Low speed time out]</b> (<i>EL 5</i>) = 0 or if <b>[PID wake up thresh.]</b> (<i>r 5 L</i>) = 0.</p>	0.0 to 100.0	0

- (1) The parameter can also be accessed in the **[SETTINGS]** (*5 E E -*) menu.
- (2) If a graphic display terminal is not in use, values greater than 9,999 will be displayed on the 4-digit display with a period mark after the thousand digit, for example, 15.65 for 15,650.
- (3) Range 0.01 to 99.99 s or 0.1 to 999.9 s or 1 to 6,000 s according to **[Ramp increment]** (*i, n, r*) page 179.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FUN- &gt; PRI-

## PID PRESET REFERENCES

Code	Name / Description	Adjustment range	Factory setting
<i>F u n -</i>	<b>[APPLICATION FUNCT.] (continued)</b>		
<i>P r 1 -</i>	<b>[PID PRESET REFERENCES]</b> Function can be accessed if <b>[PID feedback ass.] (P , F)</b> page <a href="#">222</a> is assigned.		
<i>P r 2</i>	<b>[2 preset PID ref.]</b> If the assigned input or bit is at 0, the function is inactive. If the assigned input or bit is at 1, the function is active.  <i>no</i> <b>[No] (no)</b> : Not assigned <i>L I 1</i> <b>[L1] (L , I)</b> : Logical input L11 <i>...</i> <b>[...] (...)</b> : See the assignment conditions on page <a href="#">162</a>		<b>[No] (no)</b>
<i>P r 4</i>	<b>[4 preset PID ref.]</b> Check that <b>[2 preset PID ref.] (P r 2)</b> has been assigned before assigning this function. Identical to <b>[2 preset PID ref.] (P r 2)</b> page <a href="#">224</a> . If the assigned input or bit is at 0, the function is inactive. If the assigned input or bit is at 1, the function is active.		<b>[No] (no)</b>
<i>r P 2</i>  ★ ↻ (1)	<b>[Preset ref. PID 2]</b>  This parameter can be accessed if <b>[2 preset PID ref.2] (P r 2)</b> is assigned.	<b>[Min PID reference] (P , P 1)</b> to <b>[Max PID reference] (P , P 2)</b> (2)	300
<i>r P 3</i>  ★ ↻ (1)	<b>[Preset ref. PID 3]</b>  This parameter can be accessed if <b>[3 preset PID ref.] (P r 3)</b> is assigned.	<b>[Min PID reference] (P , P 1)</b> to <b>[Max PID reference] (P , P 2)</b> (2)	600
<i>r P 4</i>  ★ ↻ (1)	<b>[Preset ref. PID 4]</b>  This parameter can be accessed if <b>[4 preset PID ref.] (P r 4)</b> is assigned.	<b>[Min PID reference] (P , P 1)</b> to <b>[Max PID reference] (P , P 2)</b> (2)	900

(1) The parameter can also be accessed in the **[SETTINGS] (S E T -)** menu.

(2) If a graphic display terminal is not in use, values greater than 9,999 will be displayed on the 4-digit display with a period mark after the thousand digit, for example, 15.65 for 15,650.

★ These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.


↻ Parameter that can be modified during operation or when stopped.

## TORQUE LIMITATION

There are two types of torque limitation:

- With a value that is fixed by a parameter
- With a value that is set by an analog input (AI or pulse)

If both types are enabled, the lowest value is taken into account. The two types of limitation can be configured or switched remotely using a logic input or via the communication bus.

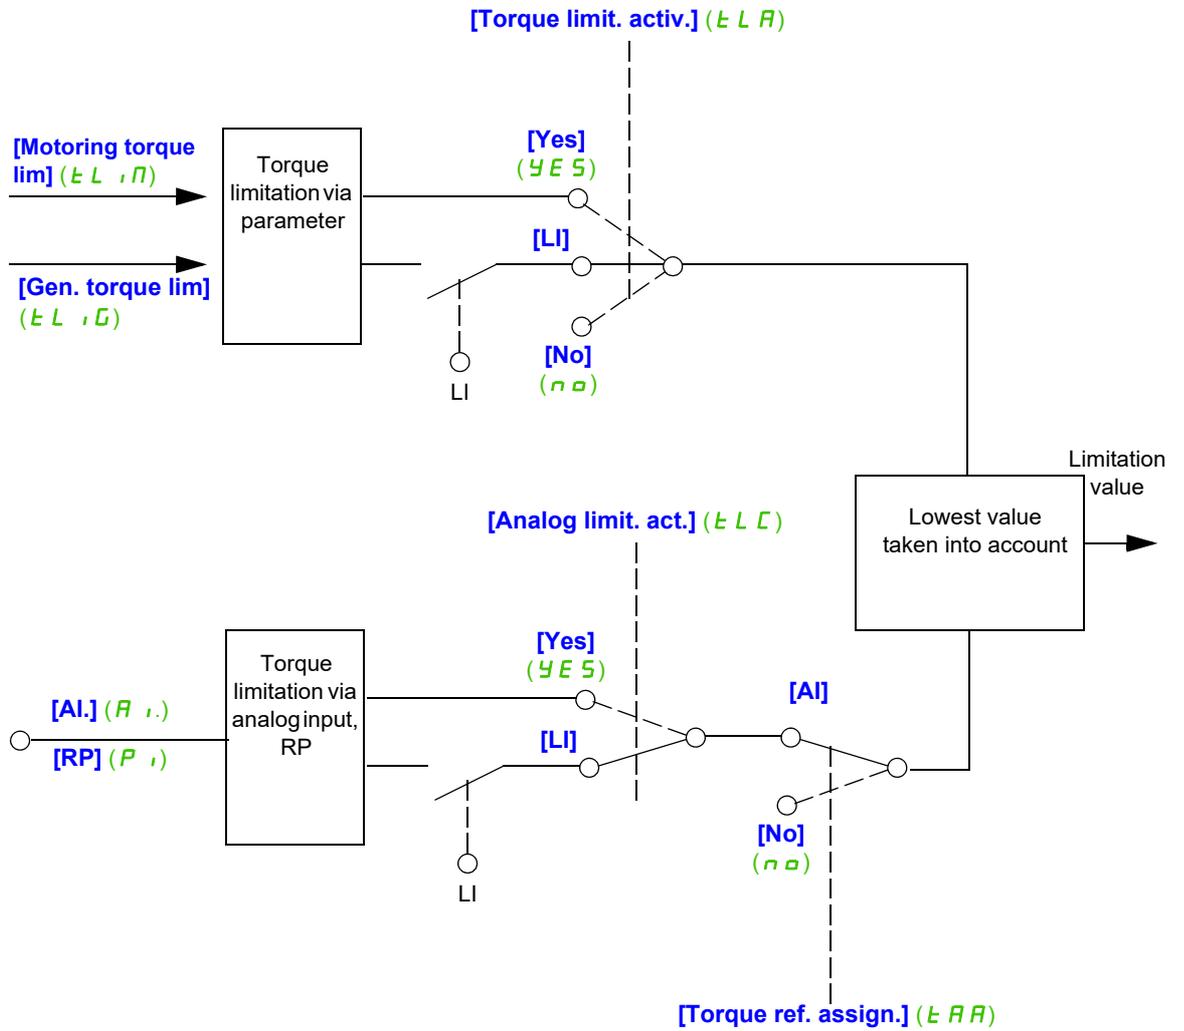

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FUN- &gt; TOL-

Code	Name / Description	Adjustment range	Factory setting
<b>F u n -</b>	<b>[APPLICATION FUNCT.] (continued)</b>		
<b>t o l -</b>	<b>[TORQUE LIMITATION]</b>		
<b>t L A</b>	<b>[Torque limit. activ.]</b> If the assigned input or bit is at 0, the function is inactive. If the assigned input or bit is at 1, the function is active.  <b>n o</b> [No] (n o): Function inactive <b>Y E S</b> [Yes] (Y E S): Function always active <b>L I 1</b> [L1] (L , I): Logical input LI1 ... [...] (...): See the assignment conditions on page <a href="#">162</a>		[No] (n o)
<b>i n t P</b>  ★	<b>[Torque increment]</b> This parameter cannot be accessed if [Torque limit. activ.] (t L A) is set to [No] (n o). Selection of units for the [Motoring torque lim] (t L , n) and [Gen. torque lim] (t L , G) parameters.  <b>0. 1</b> [0,1%] (0. 1): Unit 0.1% <b>1</b> [1%] ( 1): Unit 1%		[1%] ( 1)
<b>t L , n</b>  ★  ⌚  (1)	<b>[Motoring torque lim]</b> This parameter cannot be accessed if [Torque limit. activ.] (t L A) is set to [No] (n o). Torque limitation in motor mode, as a % or in 0.1% increments of the rated torque in accordance with the [Torque increment] ( i n t P) parameter.	0 to 300%	100%
<b>t L , G</b>  ★  ⌚  (1)	<b>[Gen. torque lim]</b> This parameter cannot be accessed if [Torque limit. activ.] (t L A) is set to [No] (n o). Torque limitation in generator mode, as a % or in 0.1% increments of the rated torque in accordance with the [Torque increment] ( i n t P) parameter.	0 to 300%	100%
<b>t A A</b>	<b>[Torque ref. assign.]</b> If the function is assigned, the limitation varies between 0% and 300% of the rated torque on the basis of the 0% to 100% signal applied to the assigned input. Examples: 12 mA on a 4-20 mA input results in limitation to 150% of the rated torque. 2.5 V on a 10 V input results in 75% of the rated torque.  <b>n o</b> [No] (n o): Not assigned (function inactive) <b>A , 1</b> [AI1] (A , I): Analog input <b>A , 2</b> [AI2] (A , 2): Analog input <b>A , 3</b> [AI3] (A , 3): Analog input <b>P ,</b> [RP] (P ,): Pulse input <b>A , u 1</b> [AI Virtual 1] (A , u 1): Virtual analog input 1 with the jog dial <b>A , u 2</b> [AI Virtual 2] (A , u 2): Virtual input via communication bus, to be configured via [AI2 net. channel] (A , C 2) page <a href="#">143</a> . <b>o A 0 1</b> [OA01] (o A 0 1): Function blocks: Analog Output 01 ... <b>o A 1 0</b> [OA10] (o A 1 0): Function blocks: Analog Output 10		[No] (n o)

Parameters described in this page can be accessed by: DRI- > CONF > FULL > FUN- > TOL-

Code	Name / Description	Adjustment range	Factory setting
E L C	<p><b>[Analog limit. act.]</b></p> <p>This parameter cannot be accessed if <b>[Torque limit. activ.]</b> (E L A) is set to <b>[No]</b> (n o).</p> <p>Identical to <b>[Torque limit. activ.]</b> (E L A) page 228.</p> <p>If the assigned input or bit is at 0:                      The limitation is specified by the <b>[Motoring torque lim.]</b> (E L , n) and <b>[Gen. torque lim.]</b> (E L , G) parameters if <b>[Torque limit. activ.]</b> (E L A) is not <b>[No]</b> (n o).                      No limitation if <b>[Torque limit. activ.]</b> (E L A) is set to <b>[No]</b> (n o).                      If the assigned input or bit is at 1:                      The limitation depends on the input assigned by <b>[Torque ref. assign.]</b> (E A A).  <b>Note:</b> If <b>[Torque limitation]</b> (E L A) and <b>[Torque ref. assign.]</b> (E A A) are enabled at the same time, the lowest value will be taken into account.</p>		<b>[Yes]</b> (Y E S)

(1) The parameter can also be accessed in the **[SETTINGS]** (S E E -) menu.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > FUN- > CLI-

## 2ND CURRENT LIMITATION

Code	Name / Description	Adjustment range	Factory setting
<i>F u n -</i>	<b>[APPLICATION FUNCT.] (continued)</b>		
<i>C L 1 -</i>	<b>[2nd CURRENT LIMIT.]</b>		
<i>L C 2</i>	<b>[Current limit 2]</b> If the assigned input or bit is at 0, the first current limitation is active. If the assigned input or bit is at 1, the second current limitation is active.  <i>no</i> [No] ( <i>no</i> ): Function inactive <i>L 1 1</i> [L1] ( <i>L 1 1</i> ): Logical input LI1 ... [...] (...): See the assignment conditions on page 162		[No] ( <i>no</i> )
<i>C L 2</i>	<b>[I Limit. 2 value]</b>	0 to 1.5 In (1)	1.5 In (1)
★ ( )	<b>NOTICE</b> <b>OVERHEATING</b> <ul style="list-style-type: none"> <li>Verify that the motor is properly rated for the maximum current to be applied to the motor.</li> <li>Consider the duty cycle of the motor and all factors of your application including derating requirements in determining the current limit.</li> </ul> <b>Failure to follow these instructions can result in equipment damage.</b>		
	Second current limitation. This parameter can be accessed if <b>[Current limit 2]</b> ( <i>L C 2</i> ) is not set to <b>[No]</b> ( <i>no</i> ). The adjustment range is limited to 1.5 In. <b>Note:</b> If the setting is less than 0.25 In, the drive may lock in <b>[Output Phase Loss]</b> ( <i>o P L</i> ) fault mode if this has been enabled (see <b>[Output Phase Loss]</b> ( <i>o P L</i> ) page 270). If it is less than the no-load motor current, the motor cannot run.		
<i>C L 1</i>	<b>[Current limitation]</b>	0 to 1.5 In (1)	1.5 In (1)
★ ( )	<b>NOTICE</b> <b>OVERHEATING</b> <ul style="list-style-type: none"> <li>Verify that the motor is properly rated for the maximum current to be applied to the motor.</li> <li>Consider the duty cycle of the motor and all factors of your application including derating requirements in determining the current limit.</li> </ul> <b>Failure to follow these instructions can result in equipment damage.</b>		
	First current limitation. This parameter can be accessed if <b>[Current limit 2]</b> ( <i>L C 2</i> ) is not set to <b>[No]</b> ( <i>no</i> ). The adjustment range is limited to 1.5 In. <b>Note:</b> If the setting is less than 0.25 In, the drive may lock in <b>[Output Phase Loss]</b> ( <i>o P L</i> ) fault mode if this has been enabled (see <b>[Output Phase Loss]</b> ( <i>o P L</i> ) page 270). If it is less than the no-load motor current, the motor cannot run.		

(1) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.




Parameter that can be modified during operation or when stopped.

## DYN CURRENT LIMIT

Inside SoMove and with ATV320 DTM, if **BMP** motors is selected this function is automatically configured.

**Note:** The function remains configurable irrespective of **[Motor Control Type]** **CLL** setting value.

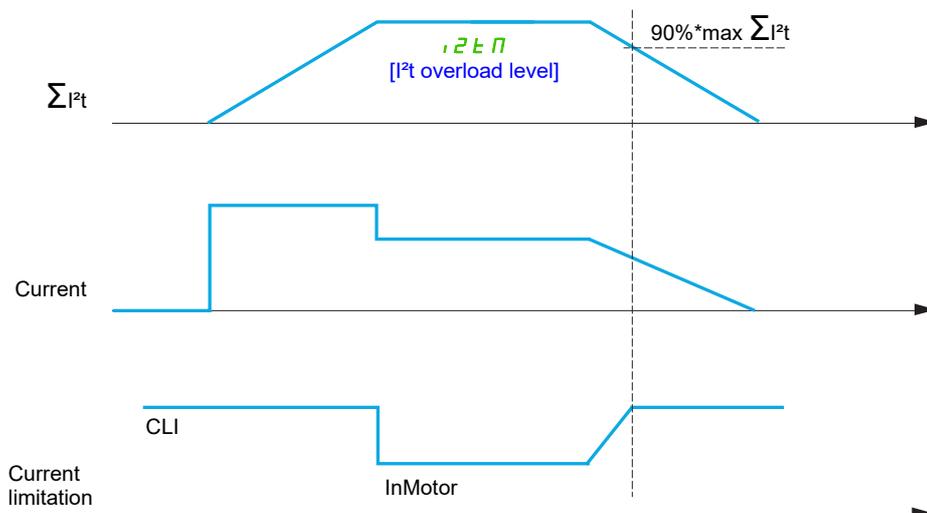

Code	Name / Description	Adjustment range	Factory setting
<b>Fun -</b>	<b>[APPLICATION FUNCT.] (continued)</b>		
<b>I²t -</b>	<b>[DYN CURRENT LIMIT]</b>		
<b>I²tA</b> ★  no YES	<b>[I²t model activation]</b>  I²t model activation for current limitation  [No] (no): [Yes] (YES):  when $i^2t \geq \text{Max} \sum i^2t$ , <b>[I²t overload level]</b> ( <b>I²tA</b> ) = 100 and current limitation is set to InMotor when $i^2t \leq \text{Max} \sum i^2t * 90\%$ , <b>[I²t overload level]</b> ( <b>I²tA</b> ) $\leq 90$ and the current limitation is set to CLI  This parameter can be accessed if <b>[max time of I²t]</b> ( <b>I²tE</b> ) is not set to <b>[0.00]</b> ( <b>0.00</b> )		<b>[No]</b> (no)
<b>I²tI</b>	<b>[max current of I²t]</b>  Maximum current of I²t model.		1.5 In +1 (1)
<b>I²tE</b>	<b>[max time of I²t]</b>  Maximum time of I²t model.	0.00 to 655.35	<b>[0.00]</b> ( <b>0.00</b> )

(1) In corresponds to the rated drive current indicated in the Installation manual or on the drive nameplate.




These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

## LINE CONTACTOR COMMAND

The line contactor closes every time a run command (forward or reverse) is sent and opens after every stop, as soon as the drive is locked. For example, if the stop mode is stop on ramp, the contactor will open when the motor reaches zero speed.

**Note:** The drive control power supply must be provided via an external 24 V source.

Example circuit:

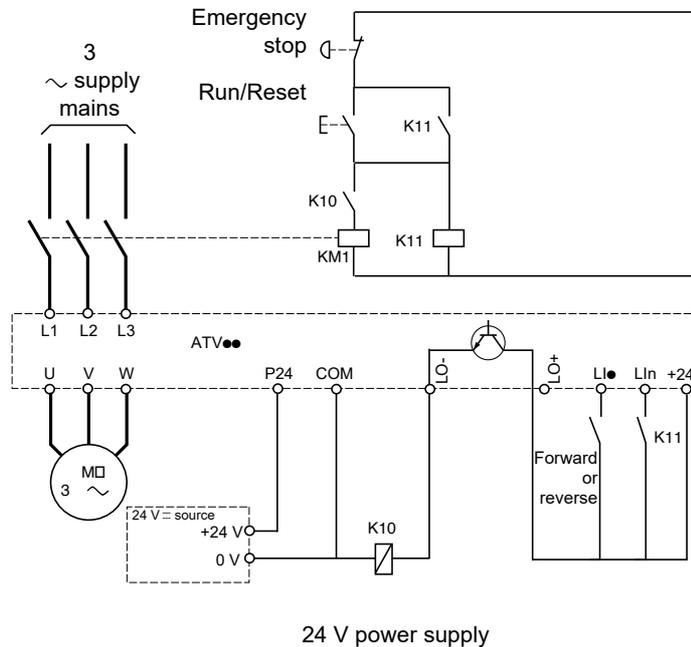

**Note:** The "Run/Reset" key must be pressed once the "Emergency stop" key has been released.

Ll● = Run command **[Forward]** (F r d) or **[Reverse]** (r r 5)

LO-/LO+ = **[Line contactor ass.]** (L L C)

Lln = **[Drive lock]** (L E 5)

### NOTICE

#### DAMAGE TO THE DRIVE

Do not use this function at intervals of less than 60 s.

**Failure to follow these instructions can result in equipment damage.**

Code	Name / Description	Adjustment range	Factory setting
<b>F u n -</b>	<b>[APPLICATION FUNCT.] (continued)</b>		
<b>L L C -</b>	<b>[LINE CONTACTOR COMMAND]</b>		
<b>L L C</b>	<b>[Line contactor ass.]</b> Logic output or control relay.		<b>[No] (n o)</b>
n o	<b>[No] (n o)</b> : Function not assigned (in this case, none of the function parameters can be accessed)		
L o 1	<b>[LO1] (L o 1)</b> : Logical output LO1		
r 2	<b>[R2] (r 2)</b> : Relay r2		
d o 1	<b>[d01] (d o 1)</b> : Analog output AO1 functioning as a logic output. Selection can be made if <b>[AO1 assignment] (A o 1)</b> page <a href="#">153</a> is set to <b>[No] (n o)</b>		
<b>L E S</b>	<b>[Drive lock]</b>		<b>[No] (n o)</b>
★	This parameter can be accessed if <b>[Line contactor ass.] (L L C)</b> is not set to <b>[No] (n o)</b> . The drive locks when the assigned input or bit changes to 0.		
n o	<b>[No] (n o)</b> : Function inactive		
L i 1	<b>[LI1] (L i 1)</b> : Logical input LI1		
...	<b>[...] (...)</b> : See the assignment conditions on page <a href="#">162</a>		
<b>L C t</b>	<b>[Mains V. time out]</b>	5 to 999 s	5 s
★	Monitoring time for closing of line contactor. If, once this time has elapsed, there is no voltage on the drive power circuit, the drive will lock with a <b>[Line contactor] (L C F)</b> detected fault.		

★ These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

## OUTPUT CONTACTOR COMMAND

This allows the drive to control a contactor located between the drive and the motor. The contactor is closed when a run command is applied. The contactor is opened when there is no longer any current in the motor.

**Note:** If the DC injection braking function is used, the output contactor does not close as long as DC injection braking is active


### Output contactor feedback

The corresponding logic input should be at 1 when there is no run command and at 0 during operation.

In the event of an inconsistency, the drive trips in FCF2 if the output contactor fails to close (LIx at 1) and in FCF1 if it is stuck (LIx at 0).

The **[Delay to motor run]** (**d b 5**) parameter can be used to delay tripping in fault mode when a run command is sent and the **[Delay to open cont.]** (**d R 5**) parameter delays the detected fault when a stop command is set.

**Note:** FCF2 (contactor failing to close) can be reset by the run command changing state from 1 to 0 (0 --> 1 -> 0 in 3-wire control).

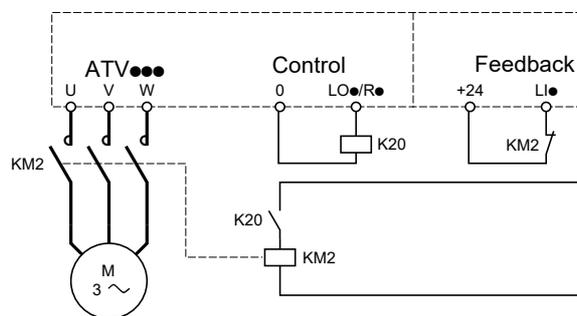

The **[Out. contactor ass.]** (**o C C**) and **[Output contact. fdbk]** (**r C R**) functions can be used individually or together.

Code	Name / Description	Adjustment range	Factory setting
<b>F u n -</b>	<b>[APPLICATION FUNCT.] (continued)</b>		
<b>o c c -</b>	<b>[OUTPUT CONTACTOR CMD]</b>		
<b>o c c</b>	<b>[Out. contactor ass.]</b> Logic output or control relay.  n o [No] (n o): Function not assigned (in this case, none of the function parameters can be accessed) L o 1 [LO1] (L o 1): Logical output LO1 r 2 [R2] (r 2): Relay r2 d o 1 [dO1] (d o 1): Analog output AO1 functioning as a logic output. Selection can be made if <b>[AO1 assignment] (P o 1)</b> page <a href="#">153</a> is set to <b>[No] (n o)</b>		<b>[No] (n o)</b>
<b>r c R</b>	<b>[Output contact. fdbk]</b> The motor starts up when the assigned input or bit changes to 0.  n o [No] (n o): Function inactive L i 1 [LI1] (L i 1): Logical input LI1 ... [...] (...): See the assignment conditions on page <a href="#">162</a>		<b>[No] (n o)</b>
<b>d b S</b>	<b>[Delay to motor run]</b> Time delay for: ★ Motor control following the sending of a run command ( ) Output contactor state monitoring, if the feedback is assigned. If the contactor fails to close at the end of the set time, the drive will lock in FCF2 mode. This parameter can be accessed if <b>[Out. contactor ass.] (o c c)</b> is assigned or if <b>[Output contact. fdbk] (r c R)</b> is assigned. The time delay must be greater than the closing time of the output contactor.	0.05 to 60 s	0.15 s
<b>d R S</b>	<b>[Delay to open cont.]</b> ★ Time delay for output contactor opening command following motor stop. ( ) This parameter can be accessed if <b>[Output contact. fdbk] (r c R)</b> is assigned. The time delay must be greater than the opening time of the output contactor. If it is set to 0, the detected fault will not be monitored. If the contactor fails to open at the end of the set time, the drive will lock in FCF1 fault mode.	0 to 5.00 s	0.10 s

 These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.


 Parameter that can be modified during operation or when stopped.

## POSITIONING BY SENSORS

This function is used for managing positioning using position sensors or limit switches linked to logic inputs or using control word bits:

- Slowing down
- Stopping

The activation level for the inputs and bits can be configured on a rising edge (change from 0 to 1) or a falling edge (change from 1 to 0). The example below has been configured on a falling edge:

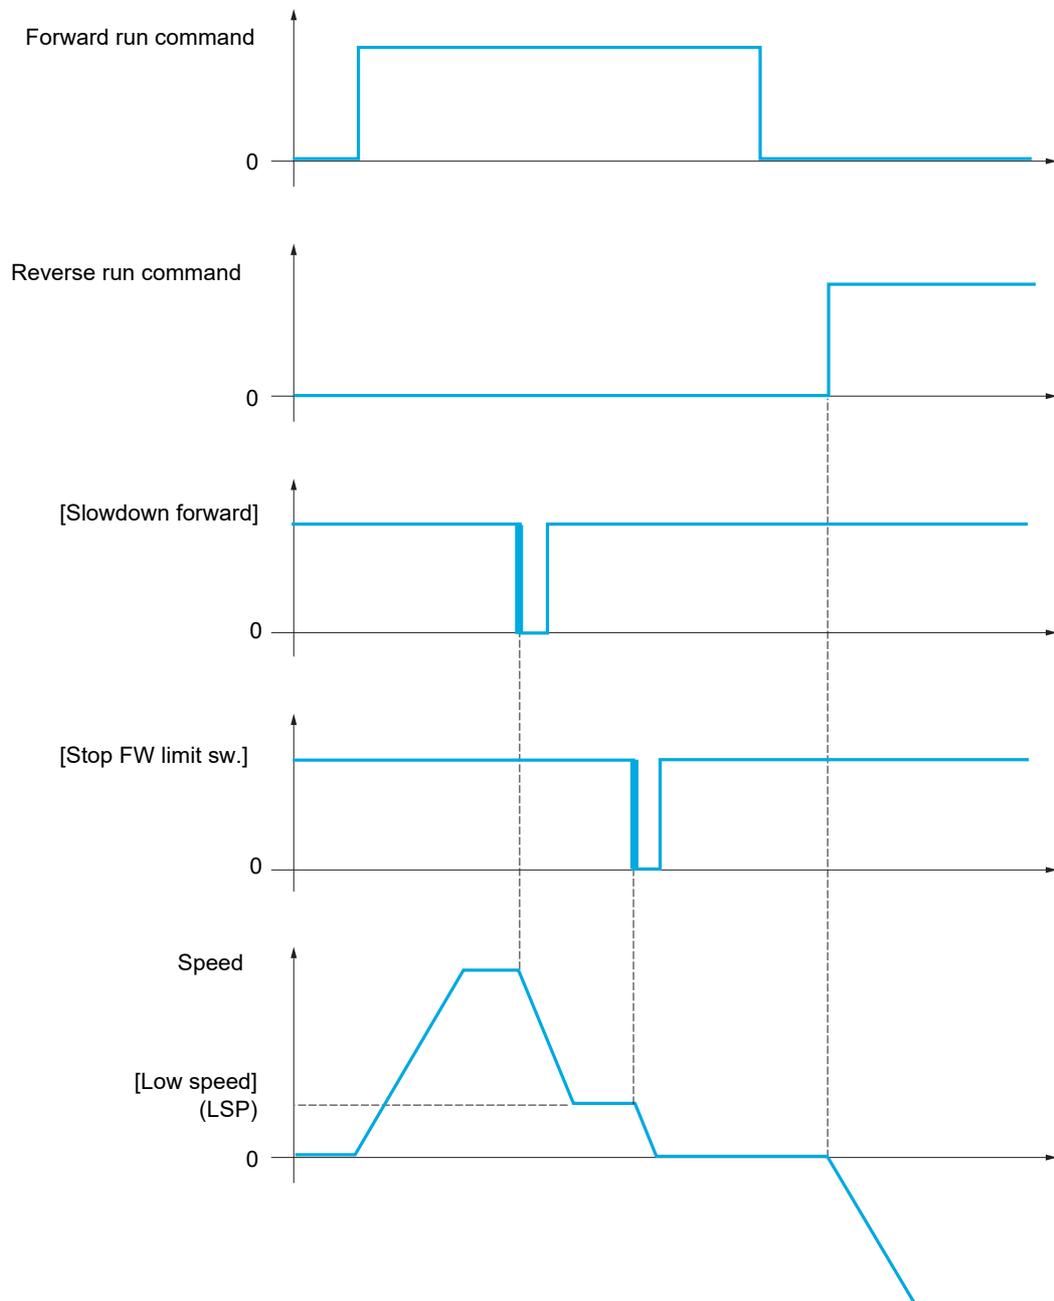


The slowdown mode and stop mode can be configured.

The operation is identical for both directions of operation. Slowdown and stopping operate according to the same logic, described below.

**Example: Forward slowdown, on falling edge**

- The forward slowdown takes place on a falling edge (switch from 1 to 0) of the input assigned to forward slowdown if it occurs in forward direction. The reference frequency value is limited to **[Low Speed] LSP**.
- In the forward slowdown area, the movement in the opposite direction is authorized at high speed.
- The slowdown command is deleted on a rising edge (switch from 0 to 1) of the input assigned to forward slowdown if it occurs in reverse direction.
- A forward slowdown is stored, even in the event of a power outage.

**Example: Positioning on a limit switch, on falling edge**

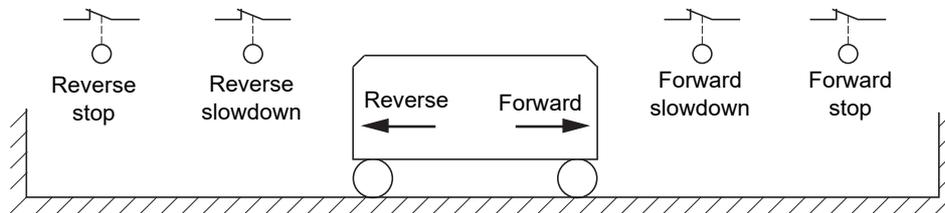

**⚠ WARNING**

**LOSS OF CONTROL**

- Verify correct connection of the limit switches.
- Verify the correct installation of the limit switches. The limit switches must be mounted in a position far enough away from the mechanical stop to allow for an adequate stopping distance.
- You must release the limit switches before you can use them.
- Verify the correct function of the limit switches

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

**Operation with short cams:**

After the switches have been configured, the drive does not yet have a valid position.

**⚠ WARNING**

**LOSS OF CONTROL**

- Verify that the drive is between the reverse deceleration switch and the forward deceleration switch before you enable the drive for the first time if you have configured deceleration switches and stop switches.
- Verify that the drive is between the reverse stop switch and the forward stop switch before you enable the drive for the first time if you have configured stop switches, but no deceleration switches.
- If you have configured switches, verify that the drive is within the permissible movement range before you use the function for the first time.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**


**⚠ WARNING**

**LOSS OF CONTROL**

When the drive is switched off, it stores the range which it is currently in. If the system is moved manually while the drive is off, you must restore the original position before switching it on again.


**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

In this instance, when operating for the first time or after restoring the factory settings, the drive must initially be started outside the slowdown and stop zones in order to initialize the function.

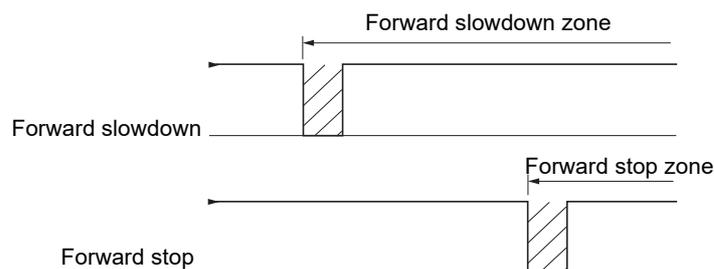

**Operation with long cams:**

In this instance, there is no restriction, which means that the function is initialized across the whole trajectory.

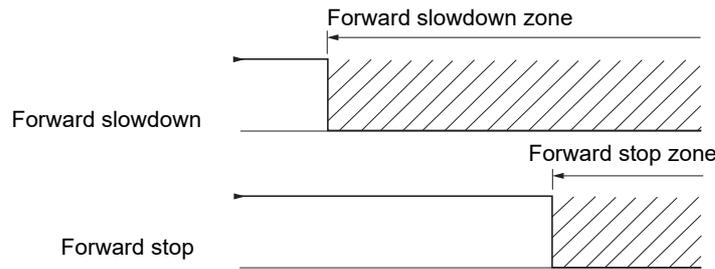


**Stop at distance calculated after deceleration limit switch**

This function can be used to control the stopping of the moving part automatically once a preset distance has been traveled after the slowdown limit switch.

On the basis of the rated linear speed and the speed estimated by the drive when the slowdown limit switch is tripped, the drive will induce the stop at the configured distance.

This function is useful in applications where one manual-reset overtravel limit switch is common to both directions. It will then only respond to help management if the distance is exceeded. The stop limit switch retains priority in respect of the function.

The **[Deceleration type] (d5F)** parameter can be configured to obtain either of the functions described below:

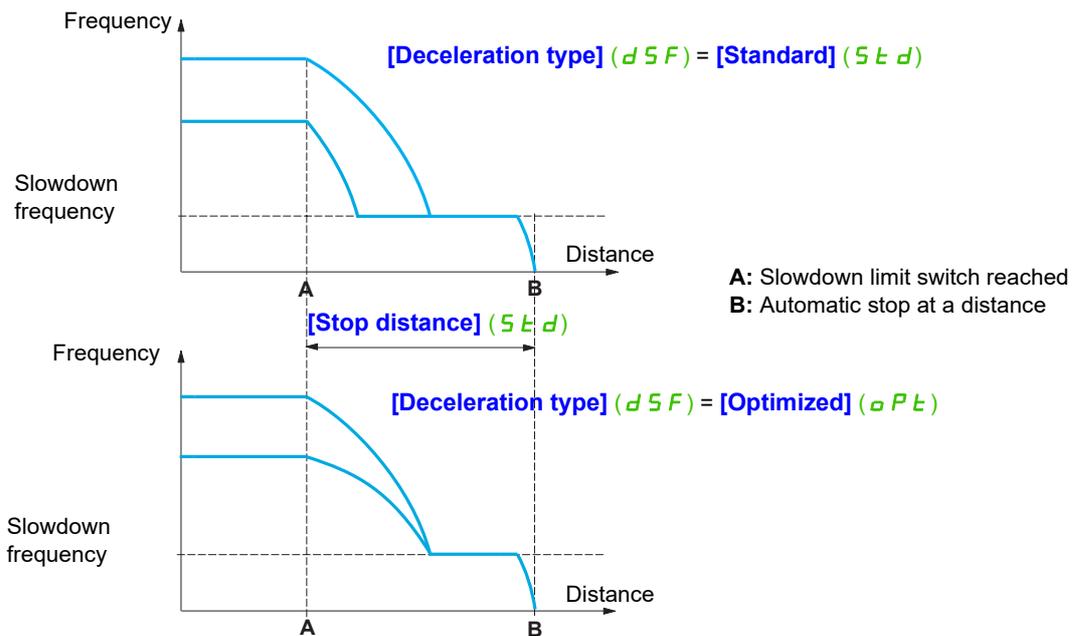

**Note:**

- If the deceleration ramp is modified while stopping at a distance is in progress, this distance will not be observed.
- If the direction is modified while stopping at a distance is in progress, this distance will not be observed.

**⚠ WARNING**

**LOSS OF CONTROL**

Verify that the configured distance is actually possible.  
 This function does not replace the limit switch.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

Code	Name / Description	Adjustment range	Factory setting
<i>F u n -</i>	<b>[APPLICATION FUNCT.] (continued)</b>		
<i>L P o -</i>	<b>[POSITIONING BY SENSORS]</b> <b>Note:</b> This function cannot be used with certain other functions. Follow the instructions on page 172.		
<i>S R F</i>	<b>[Stop FW limit sw.]</b> Stop switch forward.		<b>[No]</b> ( <i>n o</i> )
<i>n o</i> <i>L i I</i> ...	<p><b>[No]</b> (<i>n o</i>): Not assigned  <b>[LI1]</b> (<i>L i I</i>): Logical input LI1                      [...] (...): See the assignment conditions on page 162                      (If <b>[Profile]</b> (<i>CHCF</i>) is set to <b>[Not Separ.]</b> (<i>SIM</i>) or <b>[Separate]</b> (<i>SEP</i>) then <b>[CD11]</b> (<i>Cd11</i>) up to <b>[CD15]</b> (<i>Cd15</i>), <b>[C111]</b> (<i>C111</i>) up to <b>[C115]</b> (<i>C115</i>), <b>[C211]</b> (<i>C211</i>) up to <b>[C215]</b> (<i>C215</i>) and <b>[C311]</b> (<i>C311</i>) up to <b>[C315]</b> (<i>C315</i>) are not available).</p>		
<i>S R r</i>	<b>[Stop RV limit sw.]</b> Stop switch reverse. Identical to <b>[Stop FW limit sw.]</b> ( <i>S R F</i> ) above.		<b>[No]</b> ( <i>n o</i> )
<i>S R L</i>	<b>[Stop limit config.]</b> If the parameter <b>[Stop limit config.]</b> ( <i>S R L</i> ) is set to <b>[Active high]</b> ( <i>H i G</i> ), the signal for stopping is triggered with a rising edge. If the signal cable to the switch is interrupted or if the switch becomes inoperative, no stop command is triggered.		<b>[Active low]</b> ( <i>L o</i> )
★	<div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 80%;"> <p><b>⚠ WARNING</b></p> <p><b>LOSS OF CONTROL</b>                              In your risk assessment, take into account all potential consequences of triggering a signal with a rising edge.  <b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div>		
<i>L o</i> <i>H i G</i>	<p>Stop switch activation level.                      This parameter can be accessed if at least one limit switch or one stop sensor has been assigned.  <b>[Active low]</b> (<i>L o</i>): Stop triggered by on a falling edge (change from 1 to 0) of the assigned bits or inputs.  <b>[Active high]</b> (<i>H i G</i>): Stop triggered by on a rising edge (change from 0 to 1) of the assigned bits or inputs.</p>		
<i>d R F</i>	<b>[Slowdown forward]</b> Slowdown attained forward. Identical to <b>[Stop FW limit sw.]</b> ( <i>S R F</i> ) above.		<b>[No]</b> ( <i>n o</i> )
<i>d R r</i>	<b>[Slowdown reverse]</b> Slowdown attained reverse. Identical to <b>[Stop FW limit sw.]</b> ( <i>S R F</i> ) above.		<b>[No]</b> ( <i>n o</i> )
<i>d R L</i>	<b>[Slowdown limit cfg.]</b> If the parameter <b>[Slowdown limit cfg.]</b> ( <i>d R L</i> ) is set to <b>[Active high]</b> ( <i>H i G</i> ), the signal for deceleration is triggered with a rising edge. If the signal cable to the switch is interrupted or if the switch becomes inoperative, no deceleration command is triggered.		<b>[Active low]</b> ( <i>L o</i> )
★	<div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 80%;"> <p><b>⚠ WARNING</b></p> <p><b>LOSS OF CONTROL</b>                              In your risk assessment, take into account all potential consequences of triggering a signal with a rising edge.  <b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div>		
<i>L o</i> <i>H i G</i>	<p>This parameter can be accessed if at least one limit switch or one slowdown sensor has been assigned.  <b>[Active low]</b> (<i>L o</i>): Deceleration triggered by on a falling edge (change from 1 to 0) of the assigned bits or inputs  <b>[Active high]</b> (<i>H i G</i>): Deceleration triggered by on a rising edge (change from 0 to 1) of the assigned bits or inputs</p>		

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FUN- &gt; LPO-

Code	Name / Description	Adjustment range	Factory setting
<b>CL5</b>  ★	<b>[Disable limit sw.]</b>  <div style="border: 1px solid black; padding: 10px; text-align: center;"><b>⚠ WARNING</b></div> <b>LOSS OF CONTROL</b> If <b>[Disable limit sw.] (CL5)</b> is set to an input and activated, the limit switch management will be disabled. Verify that activating this function does not result in unsafe conditions. <b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b>		<b>[No] (no)</b>
	This parameter can be accessed if at least one limit switch or one sensor has been assigned. The action of the limit switches is disabled when the assigned bit or input is at 1. If, at this time, the drive is stopped or being slowed down by limit switches, it will restart up to its speed reference.		
no LI1 ...	[No] (no): Function inactive [LI1] (LI1): Logical input LI1 [...]: See the assignment conditions on page 162		
<b>PAS</b>  ★	<b>[Stop type]</b>  This parameter can be accessed if at least one limit switch or one sensor has been assigned.		<b>[Ramp stop] (rPP)</b>
rPP FSt nSt	[Ramp stop] (rPP): Follow ramp [Fast stop] (FSt): Fast stop (ramp time reduced by <b>[Ramp divider] (dCF)</b> , see <b>[Ramp divider] (dCF)</b> page 102) [Freewheel] (nSt): Freewheel stop		
<b>dSF</b>  ★	<b>[Deceleration type]</b>  This parameter can be accessed if at least one limit switch or one sensor has been assigned.		<b>[Standard] (Std)</b>
Std oPt	[Standard] (Std): Uses the <b>[Deceleration] (dEC)</b> or <b>[Deceleration 2] (dE2)</b> ramp (depending on which has been enabled) [Optimized] (oPt): The ramp time is calculated on the basis of the actual speed when the slowdown contact switches, in order to limit the operating time at low speed (optimization of the cycle time: the slowdown time is constant regardless of the initial speed).		
<b>Std</b>  ★	<b>[Stop distance]</b>  This parameter can be accessed if at least one limit switch or one sensor has been assigned. Activation and adjustment of the "Stop at distance calculated after the slowdown limit switch" function.		<b>[No] (no)</b>
no -	[No] (no): Function inactive (the next two parameters will, therefore, be inaccessible) <b>0.01 to 10.00</b> : Stop distance range in meters		
<b>nLS</b>  ★	<b>[Rated linear speed]</b>  This parameter can be accessed if at least one limit switch or one sensor has been assigned and <b>[Stop distance] (Std)</b> is not set to <b>[No] (no)</b> . Rated linear speed in meters/second.	0.20 to 5.00 m/s	1.00 m/s
<b>SFd</b>  ★	<b>[Stop corrector]</b>  This parameter can be accessed if at least one limit switch or one sensor has been assigned and <b>[Stop distance] (Std)</b> is not set to <b>[No] (no)</b> . Scaling factor applied to the stop distance to compensate, for example, a non-linear ramp.	50 to 200%	100%
<b>nStP</b>  ★	<b>[Memo Stop]</b>  This parameter can be accessed if at least one limit switch or one sensor has been assigned. With or without memorisation stop switch		<b>[Yes] (YES)</b>
no YES	[No] (no): No memorisation of limit switch [YES] (YES): Memorisation of limit switch		
<b>PrSt</b>  ★	<b>[Priority restart]</b>  This parameter can be accessed if at least one limit switch or one sensor has been assigned. Priority given to the starting even if switch stop is activated.		<b>[No] (no)</b>
no YES	[No] (no): No priority restart if stop switch is activated [YES] (YES): Priority to restart even if stop switch is activated		
	This parameter is forced to <b>[No] (no)</b> if <b>[Memo Stop] (nStP)</b> is set to <b>[YES] (YES)</b> .		

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > FUN- > LPO-

Code	Name / Description	Adjustment range	Factory setting
<p><b>Π 5 L 0</b></p> <p>★</p> <p><b>no</b></p> <p><b>YES</b></p>	<p><b>[Memo Slowdown]</b></p> <p>Slowdown switch memorization. This parameter can be accessed if at least one limit switch or one sensor has been assigned.</p> <p><b>[No] (no)</b>: No memorization of the slowdown switch. <b>[YES] (YES)</b>: Memorization of the slowdown switch.</p> <p>This parameter is forced to <b>[No] (no)</b> if <b>[Memo Stop] (Π 5 L P)</b> is set to <b>[YES] (YES)</b>.</p>		<b>[Yes] (YES)</b>



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

## PARAMETER SET SWITCHING

A set of 1 to 15 parameters from the **[SETTINGS] (5 E L -)** menu on page 98 can be selected and 2 or 3 different values assigned. These 2 or 3 sets of values can then be switched using 1 or 2 logic inputs or control word bits. This switching can be performed during operation (motor running).

It can also be controlled on the basis of 1 or 2 frequency thresholds, whereby each threshold acts as a logic input (0 = threshold not reached, 1 = threshold reached).

	Values 1	Values 2	Values 3
Parameter 1	Parameter 1	Parameter 1	Parameter 1
Parameter 2	Parameter 2	Parameter 2	Parameter 2
Parameter 3	Parameter 3	Parameter 3	Parameter 3
Parameter 4	Parameter 4	Parameter 4	Parameter 4
Parameter 5	Parameter 5	Parameter 5	Parameter 5
Parameter 6	Parameter 6	Parameter 6	Parameter 6
Parameter 7	Parameter 7	Parameter 7	Parameter 7
Parameter 8	Parameter 8	Parameter 8	Parameter 8
Parameter 9	Parameter 9	Parameter 9	Parameter 9
Parameter 10	Parameter 10	Parameter 10	Parameter 10
Parameter 11	Parameter 11	Parameter 11	Parameter 11
Parameter 12	Parameter 12	Parameter 12	Parameter 12
Parameter 13	Parameter 13	Parameter 13	Parameter 13
Parameter 14	Parameter 14	Parameter 14	Parameter 14
Parameter 15	Parameter 15	Parameter 15	Parameter 15
Input LI or bit or frequency threshold 2 values	0	1	0 or 1
Input LI or bit or frequency threshold 3 values	0	0	1

**Note:** Do not modify the parameters in the **[SETTINGS] (5 E L -)** menu, because any modifications made in this menu (**[SETTINGS] (5 E L -)**) will be lost on the next power-up. The parameters can be adjusted during operation in the **[PARAM. SET SWITCHING] (P L P -)** menu, on the active configuration.

**Note:** Parameter set switching cannot be configured from the integrated display terminal.

Parameters can only be adjusted on the integrated display terminal if the function has been configured previously via the graphic display terminal, by PC Software or via the bus or communication network. If the function has not been configured, the **[PARAM. SET SWITCHING] (P L P -)** menu and the **[SET 1] (P 5 1 -)**, **[SET 2] (P 5 2 -)**, **[SET 3] (P 5 3 -)** submenus will not appear.

Code	Name / Description	Adjustment range	Factory setting																																																				
<b>F u n -</b>	<b>[APPLICATION FUNCT.] (continued)</b>																																																						
<b>Π L P -</b>	<b>[PARAM. SET SWITCHING]</b>																																																						
<b>C H R 1</b>	<b>[2 parameter sets]</b> Switching 2 parameter sets.		<b>[No] (n o)</b>																																																				
<b>n o</b>	<b>[No] (n o)</b> : Not assigned																																																						
<b>F t r</b>	<b>[Freq. Th.att.] (F t r)</b> : Switching via <b>[Freq. threshold] (F t d)</b> page 267																																																						
<b>F 2 r</b>	<b>[Freq. Th. 2 attained] (F 2 r)</b> : Switching via <b>[Freq. threshold 2] (F 2 d)</b> page 267																																																						
<b>L i 1</b>	<b>[LI1] (L i 1)</b> : Logical input LI1																																																						
<b>...</b>	<b>[...] (...)</b> : See the assignment conditions on page 162																																																						
<b>C H R 2</b>	<b>[3 parameter sets]</b> Identical to <b>[2 parameter sets] (C H R 1)</b> page 243.  Switching 3 parameter sets. <b>Note:</b> In order to obtain 3 parameter sets, <b>[2 parameter sets] (C H R 1)</b> must also be configured.		<b>[No] (n o)</b>																																																				
<b>S P S</b>	<b>[PARAMETER SELECTION]</b>  This parameter can only be accessed on the graphic display terminal if <b>[2 parameter sets] (C H R 1)</b> is not set to <b>[No] (n o)</b> . Making an entry in this parameter opens a window containing all the adjustment parameters that can be accessed.  Select 1 to 15 parameters using ENT (a ✓ then appears next to the parameter). Parameter(s) can also be deselected using ENT.  Example:  <table border="1" style="margin-left: 20px;"> <thead> <tr> <th colspan="2">PARAMETER SELECTION</th> </tr> <tr> <th colspan="2">SETTINGS</th> </tr> </thead> <tbody> <tr> <td>Ramp increment</td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>-----</td> <td><input type="checkbox"/></td> </tr> <tr> <td>-----</td> <td><input type="checkbox"/></td> </tr> <tr> <td>-----</td> <td><input checked="" type="checkbox"/></td> </tr> </tbody> </table>			PARAMETER SELECTION		SETTINGS		Ramp increment	<input checked="" type="checkbox"/>	-----	<input type="checkbox"/>	-----	<input type="checkbox"/>	-----	<input checked="" type="checkbox"/>																																								
PARAMETER SELECTION																																																							
SETTINGS																																																							
Ramp increment	<input checked="" type="checkbox"/>																																																						
-----	<input type="checkbox"/>																																																						
-----	<input type="checkbox"/>																																																						
-----	<input checked="" type="checkbox"/>																																																						
<b>Π L P -</b>	<b>[PARAM. SET SWITCHING] (continued)</b>																																																						
<b>P S 1 -</b>	<b>[SET 1]</b>  This parameter can be accessed if at least 1 parameter has been selected in <b>[PARAMETER SELECTION]</b> . Making an entry in this parameter opens a settings window containing the selected parameters in the order in which they were selected.  With the graphic display terminal:  <div style="display: flex; align-items: center; margin-left: 20px;"> <table border="1" style="margin-right: 10px;"> <thead> <tr> <th>RDY</th> <th>Term</th> <th>+0.0 Hz</th> <th>0.0 A</th> </tr> </thead> <tbody> <tr> <td colspan="4" style="text-align: center;">SET1</td> </tr> <tr> <td>Acceleration :</td> <td></td> <td>9.51 s</td> <td>ENT</td> </tr> <tr> <td>Deceleration :</td> <td></td> <td>9.67 s</td> <td></td> </tr> <tr> <td>Acceleration 2 :</td> <td></td> <td>12.58 s</td> <td></td> </tr> <tr> <td>Deceleration 2 :</td> <td></td> <td>13.45 s</td> <td></td> </tr> <tr> <td>Begin Acc round:</td> <td></td> <td>2.3 s</td> <td></td> </tr> <tr> <td>Code</td> <td></td> <td>Quick</td> <td></td> </tr> </tbody> </table> <table border="1" style="margin-left: 10px;"> <thead> <tr> <th>RDY</th> <th>Term</th> <th>+0.0 Hz</th> <th>0.0 A</th> </tr> </thead> <tbody> <tr> <td colspan="4" style="text-align: center;">Acceleration</td> </tr> <tr> <td colspan="4" style="text-align: center; font-size: 2em;">9.51 s</td> </tr> <tr> <td>Min = 0.1</td> <td></td> <td>Max = 999.9</td> <td></td> </tr> <tr> <td>&lt;&lt;</td> <td></td> <td>&gt;&gt;</td> <td>Quick</td> </tr> </tbody> </table> </div>			RDY	Term	+0.0 Hz	0.0 A	SET1				Acceleration :		9.51 s	ENT	Deceleration :		9.67 s		Acceleration 2 :		12.58 s		Deceleration 2 :		13.45 s		Begin Acc round:		2.3 s		Code		Quick		RDY	Term	+0.0 Hz	0.0 A	Acceleration				9.51 s				Min = 0.1		Max = 999.9		<<		>>	Quick
RDY	Term	+0.0 Hz	0.0 A																																																				
SET1																																																							
Acceleration :		9.51 s	ENT																																																				
Deceleration :		9.67 s																																																					
Acceleration 2 :		12.58 s																																																					
Deceleration 2 :		13.45 s																																																					
Begin Acc round:		2.3 s																																																					
Code		Quick																																																					
RDY	Term	+0.0 Hz	0.0 A																																																				
Acceleration																																																							
9.51 s																																																							
Min = 0.1		Max = 999.9																																																					
<<		>>	Quick																																																				
<b>★</b> <b>( )</b> <b>5 1 0 1</b> <b>...</b> <b>5 1 1 5</b>	<p>With the integrated display terminal: Proceed as in the Settings menu using the parameters that appear.</p>																																																						
<b>Π L P -</b>	<b>[PARAM. SET SWITCHING] (continued)</b>																																																						
<b>P S 2 -</b>	<b>[SET 2]</b>  This parameter can be accessed if at least 1 parameter has been selected in <b>[PARAMETER SELECTION]</b> .  Identical to <b>[SET 1] (P S 1 -)</b> page 243.  <div style="margin-left: 20px;"> <b>★</b> <b>( )</b> <b>5 2 0 1</b> <b>...</b> <b>5 2 1 5</b> </div>																																																						

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FUN- &gt; MLP-

Code	Name / Description	Adjustment range	Factory setting
<i>MLP -</i>	<b>[PARAM. SET SWITCHING] (continued)</b>		
<i>P53 -</i>	<b>[SET 3]</b>		
★ ( ) <i>5301</i> ... <i>5315</i>	<p>This parameter can be accessed if <b>[3 parameter sets] (CHP)</b> is not <b>[No] (n o)</b> and if at least 1 parameter has been selected in <b>[PARAMETER SELECTION]</b>.</p> <p>Identical to <b>[SET 1] (P51-)</b> page <a href="#">243</a>.</p>		

★ These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

( ) Parameter that can be modified during operation or when stopped.

**Note:** We recommend that a parameter set switching test is carried out while stopped and a check is made to verify that it has been performed correctly.

Some parameters are interdependent and in this case may be restricted at the time of switching.

Interdependencies between parameters must be respected, **even between different sets**.

Example: The highest **[Low speed] (L5P)** must be below the lowest **[High speed] (H5P)**.

## MULTIMOTORS / MULTICONFIGURATIONS

### Motor or configuration switching [MULTIMOTORS/CONFIG.] (P P L -)

The drive may contain up to 3 configurations, which can be saved using the

[FACTORY SETTINGS] (F L 5 -) menu, page [89](#).

Each of these configurations can be activated remotely, enabling adaptation to:

- 2 or 3 different motors or mechanisms (multimotor mode)
- 2 or 3 different configurations for a single motor (multiconfiguration mode)

The two switching modes cannot be combined.

**Note:** The following conditions MUST be observed:

- Switching may only take place when stopped (drive locked). If a switching request is sent during operation, it will not be executed until the next stop.
- In the event of motor switching, the following additional conditions apply:
  - When the motors are switched, the power and control terminals concerned must also be switched as appropriate.
  - The maximum power of the drive must not be exceeded by any of the motors.
- All the configurations to be switched must be set and saved in advance in the same hardware configuration, this being the definitive configuration (option and communication cards). Failure to follow this instruction can cause the drive to lock on an [Incorrect config.] (L F F) state.

### Menus and parameters switched in multimotor mode

- [SETTINGS] (S E L -)
- [MOTOR CONTROL] (d r L -)
- [INPUTS / OUTPUTS CFG] ( i - o -)
- [COMMAND] (L L L -)
- [APPLICATION FUNCT.] (F u n -) with the exception of the [MULTIMOTORS/CONFIG.] function (to be configured once only)
- [FAULT MANAGEMENT] (F L L)
- [MY MENU]
- [USER CONFIG.]: The name of the configuration specified by the user in the [FACTORY SETTINGS] (F L 5 -) menu

### Menus and parameters switched in multiconfiguration mode

As in multimotor mode, except for the motor parameters that are common to the 3 configurations:


- Rated current
- Thermal current
- Rated voltage
- Rated frequency
- Rated speed
- Rated power
- IR compensation
- Slip compensation
- Synchronous motor parameters
- Type of thermal protection
- Thermal state
- The auto-tuning parameters and motor parameters that can be accessed in expert mode
- Type of motor control

**Note:** No other menus or parameters can be switched.

## Transfer of a drive configuration to another one, with graphic display terminal, when the drive uses [MULTIMOTORS/CONFIG.] (PFC-) function

- Let A be the source drive and B the drive addressed. In this example, switching is controlled by logic input.
1. Connect graphic display terminal to the drive A.
  2. Put logic input LI ([2 Configurations] (CnF1)) and LI ([3 Configurations] (CnF2)) to 0.
  3. Download configuration 0 in a file of graphic display terminal (example: file 1 of the graphic display terminal).
  4. Put logic input LI ([2 Configurations] (CnF1)) to 1 and leave logic input LI ([3 Configurations] (CnF2)) to 0.
  5. Download configuration 1 in a file of graphic display terminal (example: file 2 of the graphic display terminal).
  6. Put logic input LI ([3 Configurations] (CnF2)) to 1 and leave logic input LI ([2 Configurations] (CnF1)) to 1.
  7. Download configuration 2 in a file of graphic display terminal (example: file 3 of the graphic display terminal).
  8. Connect graphic display terminal to the drive B.
  9. Put logic input LI ([2 Configurations] (CnF1)) and LI ([3 Configurations] (CnF2)) to 0.
  10. Make a factory setting of the drive B.
  11. Download the configuration file 0 in the drive (file 1 of graphic display terminal in this example).
  12. Put logic input LI ([2 Configurations] (CnF1)) to 1 and leave logic input LI ([3 Configurations] (CnF2)) to 0.
  13. Download the configuration file 1 in the drive (file 2 of graphic display terminal in this example).
  14. Put logic input LI ([3 Configurations] (CnF2)) to 1 and leave logic input LI ([2 Configurations] (CnF1)) to 1.
  15. Download the configuration file 2 in the drive (file 3 of graphic display terminal in this example).

**Note:** Steps 6, 7, 14 et 15 are necessary only if [MULTIMOTORS/CONFIG.] (PFC-) function is used with 3 configurations or 3 motors.

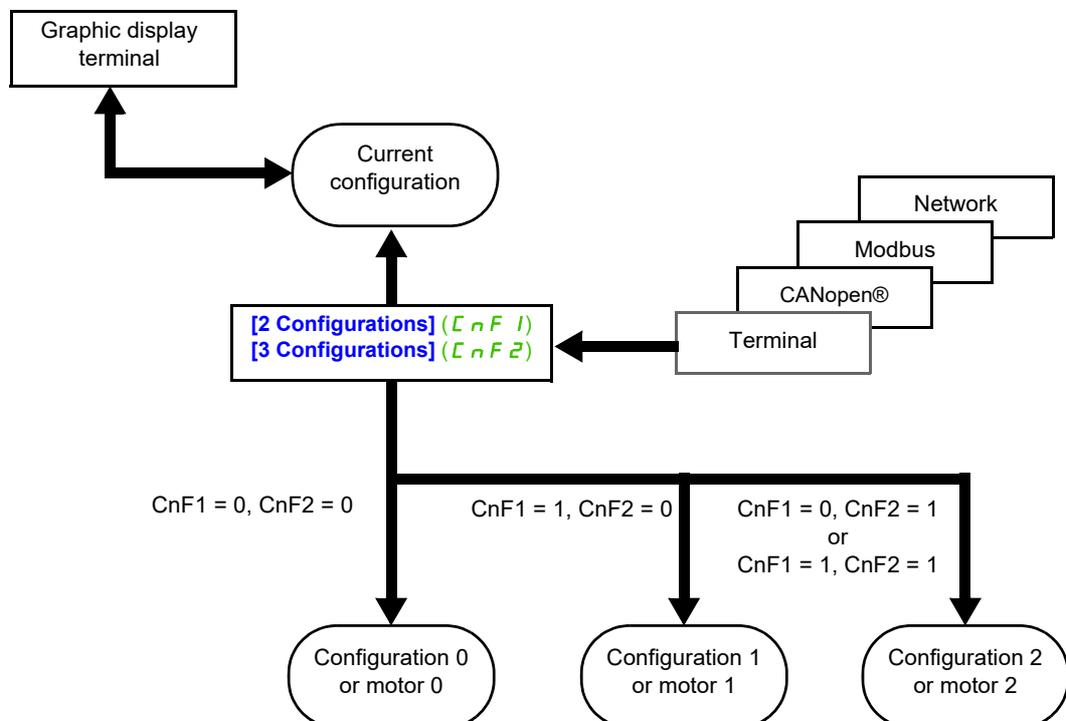


### Switching command

Depending on the number of motors or selected configurations (2 or 3), the switching command is sent using one or two logic inputs. The table below lists the possible combinations.

LI 2 motors or configurations	LI 3 motors or configurations	Number of configurations or active motors
0	0	0
1	0	1
0	1	2
1	1	2

**Schematic diagram for multimotor mode**

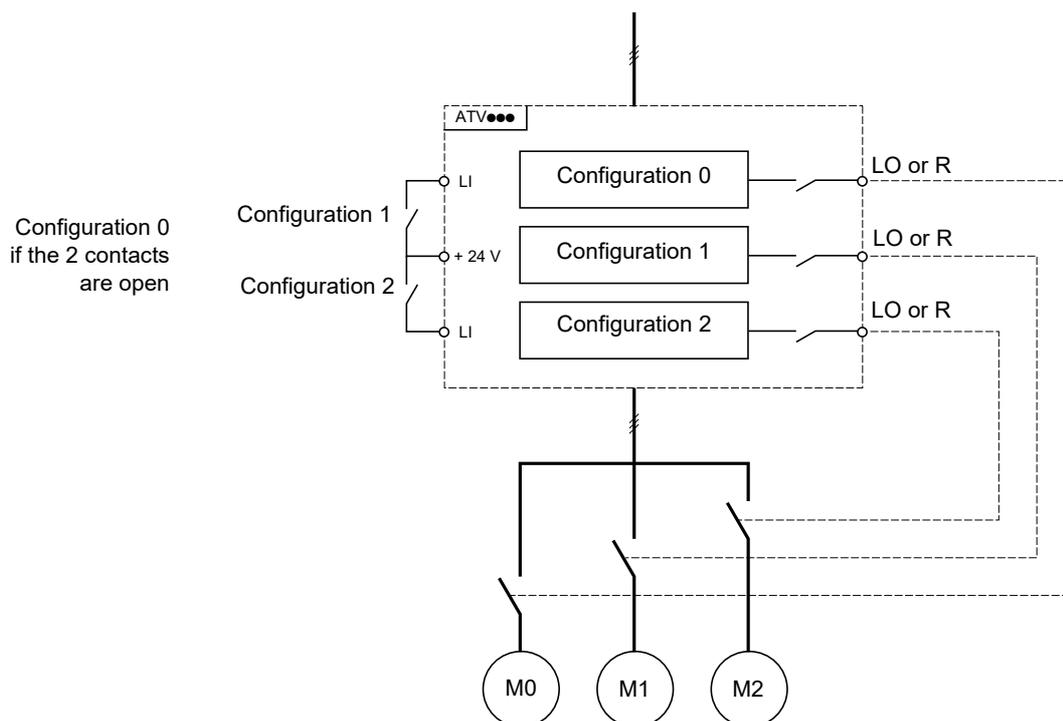

**Auto-tuning in multimotor mode**

On Multi-Motor mode, autotuning parameters for each motor are handled and stored. However, it is necessary to firstly perform autotuning on each motor.

This auto-tuning can be performed:

- Manually using a Digital input when the motor changes.
- Automatically on the selected motor at drive power-up if the **[Automatic autotune] (AUE)** (page 117) on is set to **[Yes] (YES)**.

**Motor thermal states in multimotor mode:**

The drive helps to protect the three motors individually. Each thermal state takes into account all stop times, if the drive power is not switched off.

**NOTICE**

**MOTOR OVERHEATING**

When the drive is switched off, the thermal states of the connected motors are not saved. When the drive is switched on again, the drive is not aware of the thermal states of the connected motors.

- Use separate temperature sensors for each connected motor for thermal monitoring.

**Failure to follow these instructions can result in equipment damage.**

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FUN- &gt; MMC-

**Configuration information output**

In the **[INPUTS / OUTPUTS CFG] ( i \_ o - )** menu, a logic output can be assigned to each configuration or motor (2 or 3) for remote information transmission.

**Note:** As the **[INPUTS / OUTPUTS CFG] ( i \_ o - )** menu is switched, these outputs must be assigned in all configurations in which information is required.


Code	Name / Description	Adjustment range	Factory setting
<b>F u n -</b>	<b>[APPLICATION FUNCT.] (continued)</b>		
<b>П П С -</b>	<b>[MULTIMOTORS/CONFIG.]</b>		
<b>С Н П</b>	<b>[Multimotors]</b>		<b>[No] ( n o )</b>
	<p><b>NOTICE</b></p> <p><b>MOTOR OVERHEATING</b></p> <p>When the drive is switched off, the thermal states of the connected motors are not saved. When the drive is switched on again, the drive is not aware of the thermal states of the connected motors.</p> <ul style="list-style-type: none"> <li>Use separate temperature sensors for each connected motor for thermal monitoring.</li> </ul> <p><b>Failure to follow these instructions can result in equipment damage.</b></p>		
<b>n o</b> <b>Y E S</b>	<p><b>[No] ( n o ):</b> Multiconfiguration possible  <b>[Yes] ( Y E S ):</b> Multimotor possible</p>		
<b>С н F 1</b>	<b>[2 Configurations]</b>		<b>[No] ( n o )</b>
	Switching of 2 motors or 2 configurations.		
<b>n o</b> <b>L I 1</b> <b>...</b>	<p><b>[No] ( n o ):</b> No switching  <b>[LI1] ( L I 1 ):</b> Logical input LI1  <b>[...] (...):</b> See the assignment conditions on page <a href="#">162</a></p> <p>(<b>[CD00] ( C D 0 0 )</b> up to <b>[CD15] ( C D 1 5 )</b>, <b>[C101] ( C 1 0 1 )</b> up to <b>[C110] ( C 1 1 0 )</b>, <b>[C201] ( C 2 0 1 )</b> up to <b>[C210] ( C 2 1 0 )</b> and <b>[C301] ( C 3 0 1 )</b> up to <b>[C310] ( C 3 1 0 )</b> are not available).</p>		
<b>С н F 2</b>	<b>[3 Configurations]</b>		<b>[No] ( n o )</b>
	Switching of 3 motors or 3 configurations.		
	Identical to <b>[2 Configurations] ( С н F 1 )</b> page <a href="#">248</a> .		
	<b>Note:</b> In order to obtain 3 motors or 3 configurations, <b>[2 Configurations] ( С н F 1 )</b> must also be configured.		

## AUTO TUNING BY LOGIC INPUT


Code	Name / Description	Adjustment range	Factory setting
<i>F u n -</i>	<b>[APPLICATION FUNCT.] (continued)</b>		
<i>t n L -</i>	<b>[AUTO TUNING BY LI]</b>		
<i>t u L</i>	<b>[Auto-tune assign.]</b> Auto-tuning is performed when the assigned input or bit changes to 1. <b>Note:</b> Auto-tuning causes the motor to start up.		<b>[No]</b> ( <i>n o</i> )
<i>n o</i>	<b>[No]</b> ( <i>n o</i> ): Not assigned		
<i>L i l</i>	<b>[LI1]</b> ( <i>L i l</i> ): Logical input LI1		
<i>...</i>	<b>[...]</b> (...): See the assignment conditions on page <a href="#">162</a>		

## TRAVERSE CONTROL

Function for winding reels of yarn (in textile applications):

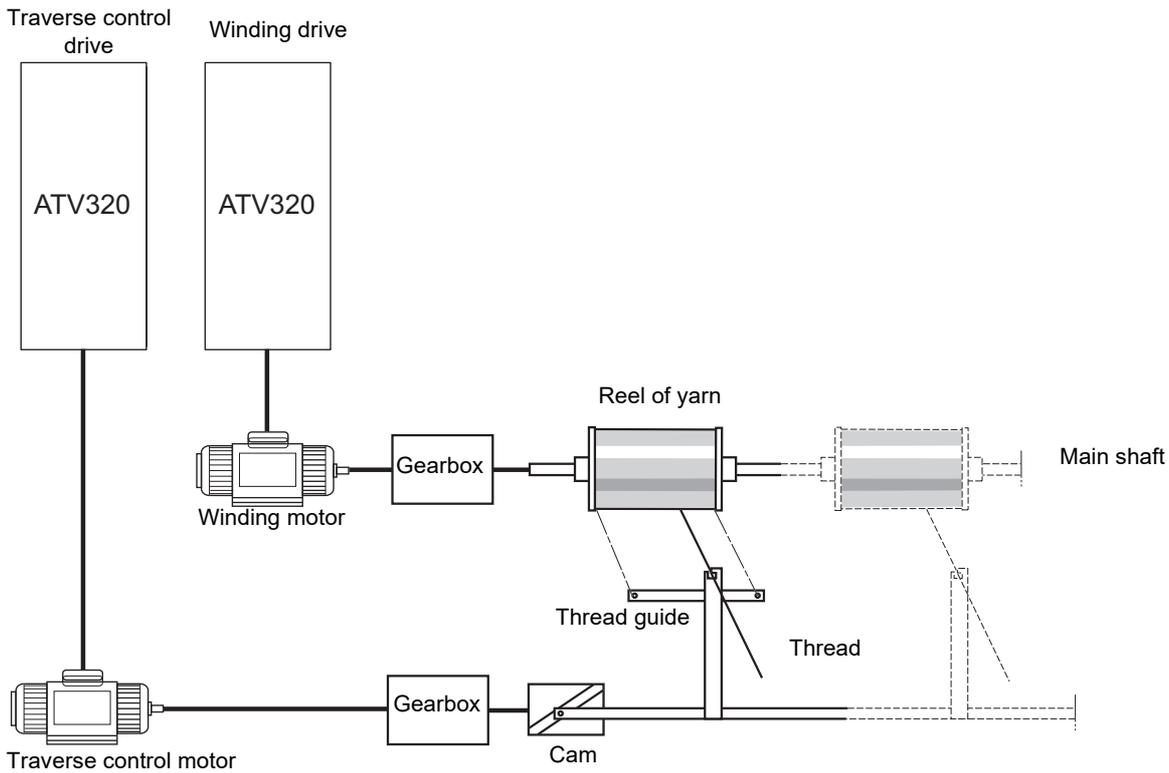

The speed of rotation of the cam must follow a precise profile to ensure that the reel is steady, compact and linear:

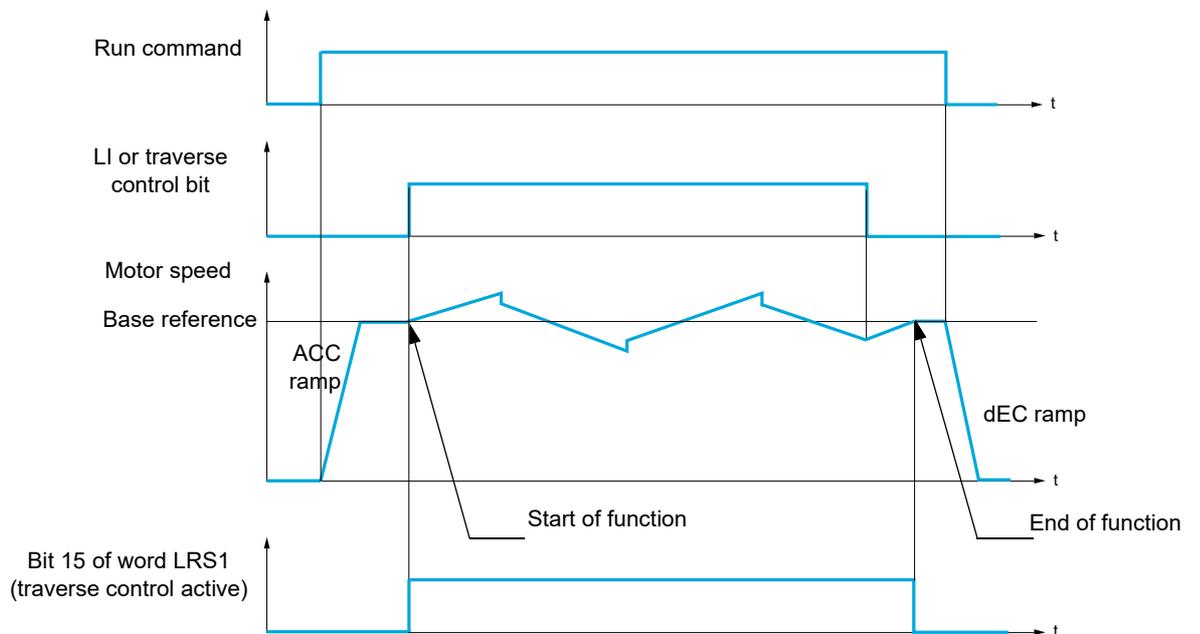


The function starts when the drive has reached its base reference and the traverse control command has been enabled.

When the traverse control command is disabled, the drive returns to its base reference, following the ramp determined by the traverse control function. The function then stops, as soon as it has returned to this reference.

Bit 15 of word LRS1 is at 1 while the function is active.


### Function parameters

These define the cycle of frequency variations around the base reference, as shown in the diagram below:

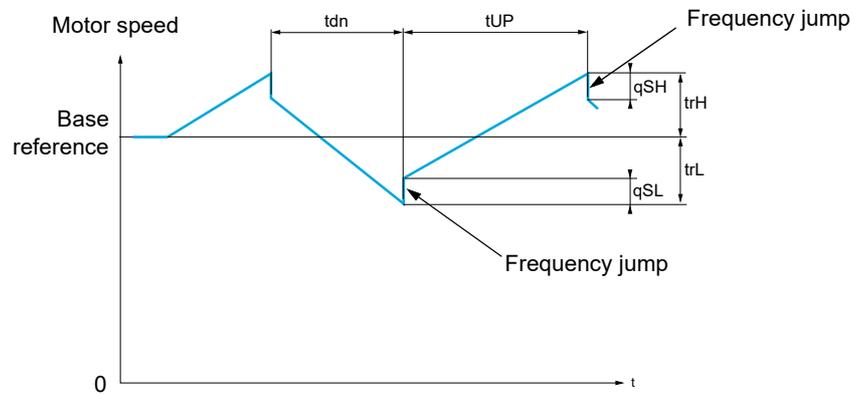

<b>ErC</b>	<b>[Yarn control] (ErC)</b> : Assignment of the traverse control command to a logic input or to a communication bus control word bit
<b>ErH</b>	<b>[Traverse freq. high] (ErH)</b> : in Hertz
<b>ErL</b>	<b>[Traverse Freq. Low] (ErL)</b> : in Hertz
<b>qSH</b>	<b>[Quick step High] (qSH)</b> : in Hertz
<b>qSL</b>	<b>[Quick step Low] (qSL)</b> : in Hertz
<b>tUP</b>	<b>[Traverse ctrl. accel.] (tUP)</b> : time, in seconds
<b>tdn</b>	<b>[Traverse ctrl. decel] (tdn)</b> : time, in seconds


## Reel parameters:

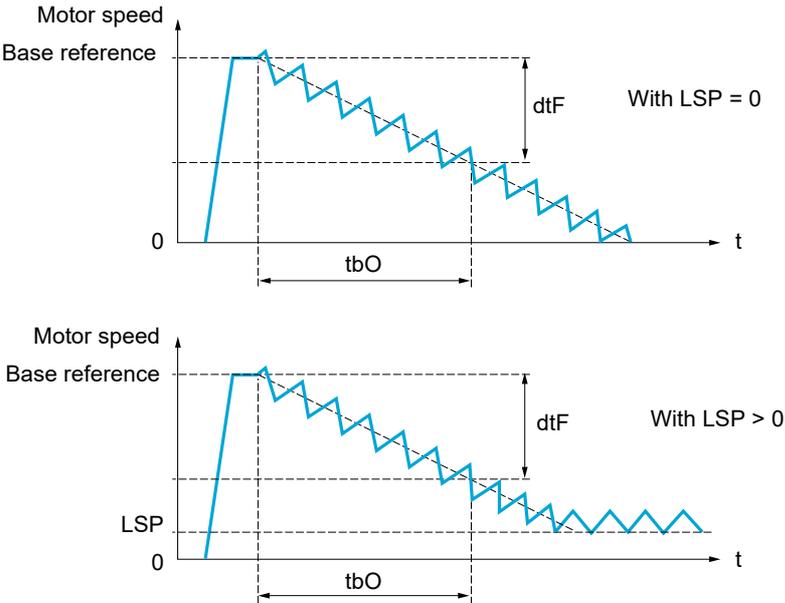
$t_{b0}$	<p><b>[Reel time] (<math>t_{b0}</math>):</b> Time taken to make a reel, in minutes.</p> <p>This parameter is intended to signal the end of winding. When the traverse control operating time since command <b>[Yarn control] (<math>t_{rc}</math>)</b> reaches the value of <b>[Reel time] (<math>t_{b0}</math>)</b>, the logic output or one of the relays changes to state 1, if the corresponding function <b>[End reel] (<math>E_{b0}</math>)</b> has been assigned.</p> <p>The traverse control operating time <math>E_{b0}t</math> can be monitored online by a communication bus.</p>
$dtF$	<p><b>[Decrease ref. speed] (<math>dtF</math>):</b> Decrease in the base reference.</p> <p>In certain cases, the base reference has to be reduced as the reel increases in size. The <b>[Decrease ref. speed] (<math>dtF</math>)</b> value corresponds to time <b>[Reel time] (<math>t_{b0}</math>)</b>. Once this time has elapsed, the reference continues to fall, following the same ramp. If low speed <b>[Low speed] (<math>LSP</math>)</b> is at 0, the speed reaches 0 Hz, the drive stops and must be reset by a new run command.</p> <p>If low speed <b>[Low speed] (<math>LSP</math>)</b> is not 0, the traverse control function continues to operate above <b>[Low speed] (<math>LSP</math>)</b>.</p> <div style="text-align: center;">  </div>

**rtr**

**[Init. traverse ctrl]** Reinitialize traverse control.

This command can be assigned to a logic input or to a communication bus control word bit. It resets the **Ebo** alarm and the **EboE** operating time to 0 and reinitializes the reference to the base reference. As long as **rtr** remains at 1, the traverse control function is disabled and the speed remains the same as the base reference. This command is used primarily when changing reels.

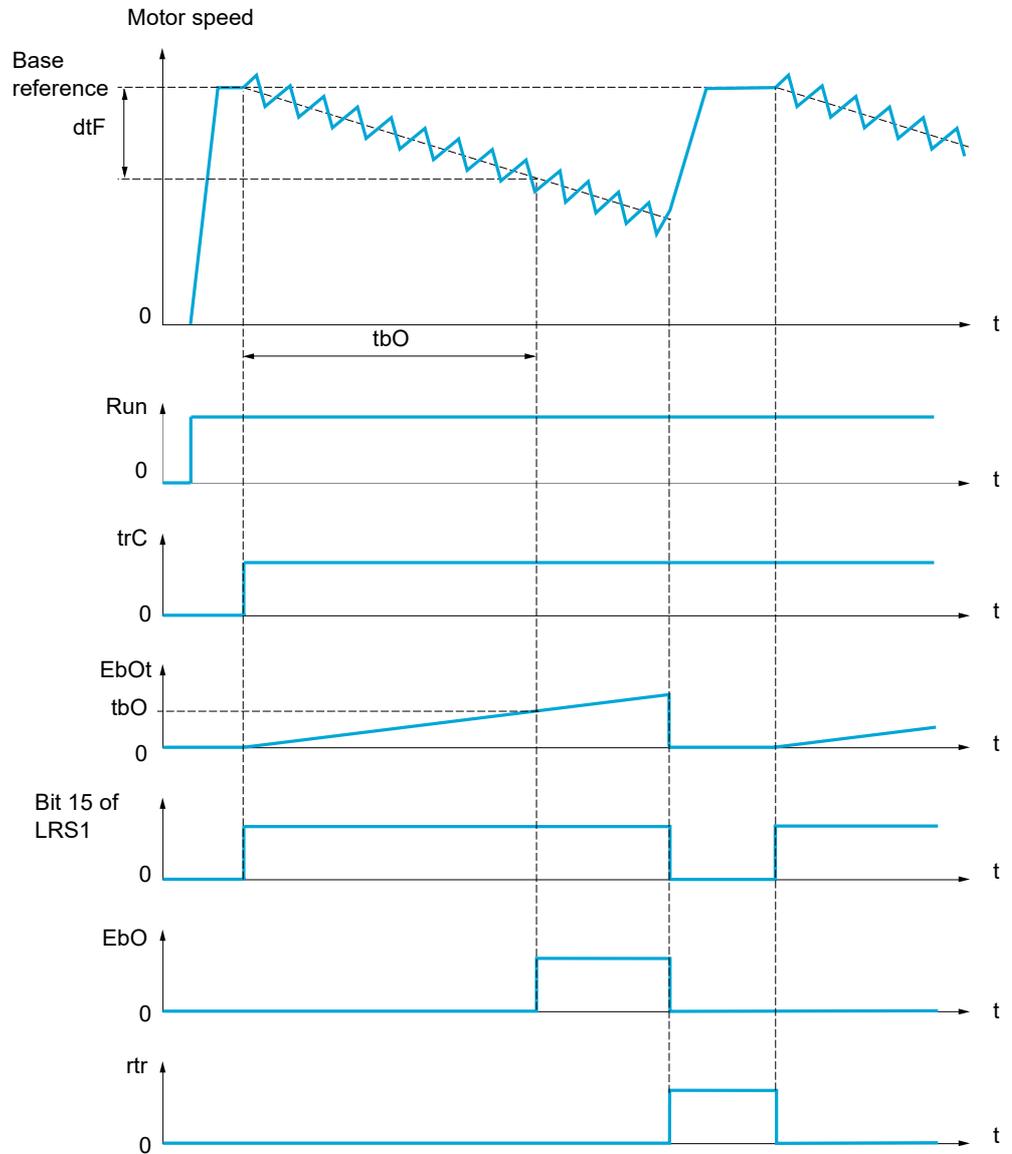


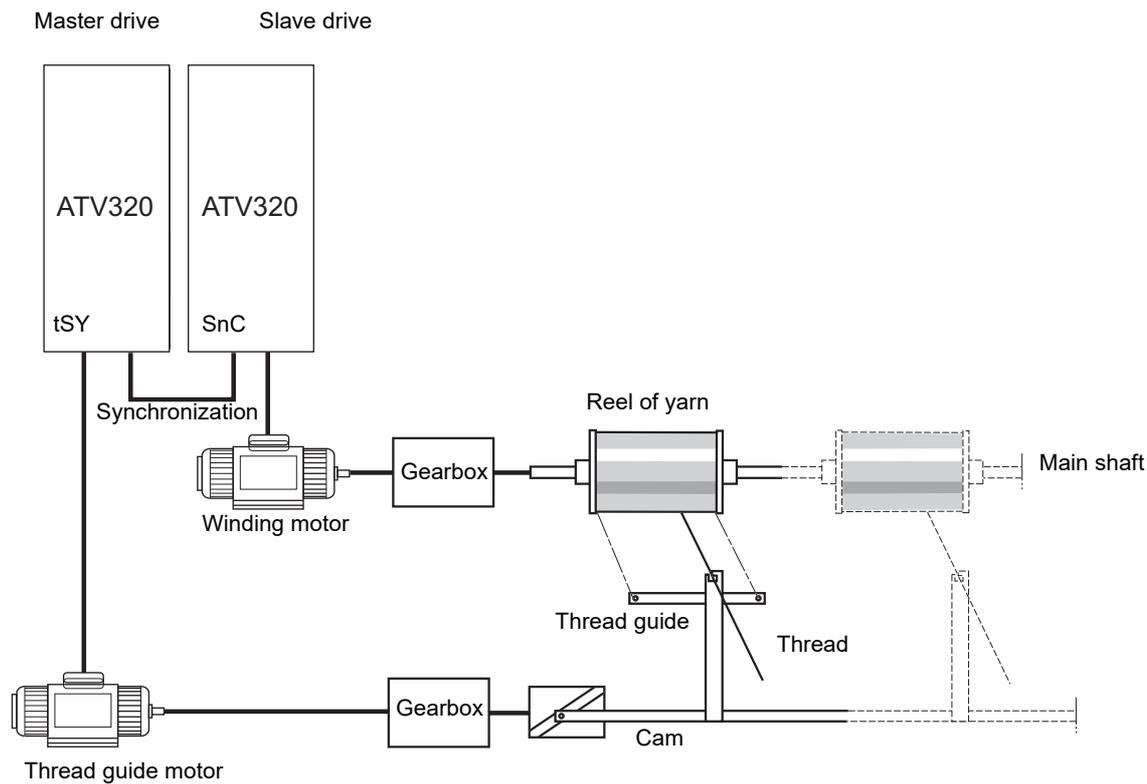**Counter wobble**


The Counter wobble function is used in certain applications to obtain a constant yarn tension when the Traverse control function is producing considerable variations in speed on the yarn guide motor ([\[Traverse freq. high\] \(E r H\)](#) and [\[Traverse Freq. low\] \(E r L\)](#), see [\[Traverse freq. high\] \(E r H\)](#) page [256](#)).

Two motors must be used (one master and one slave).

The master controls the speed of the yarn guide, the slave controls the winding speed. The function assigns the slave a speed profile, which is in antiphase to that of the master. This means that synchronization is required, using one of the master's logic outputs and one of the slave's logic inputs.

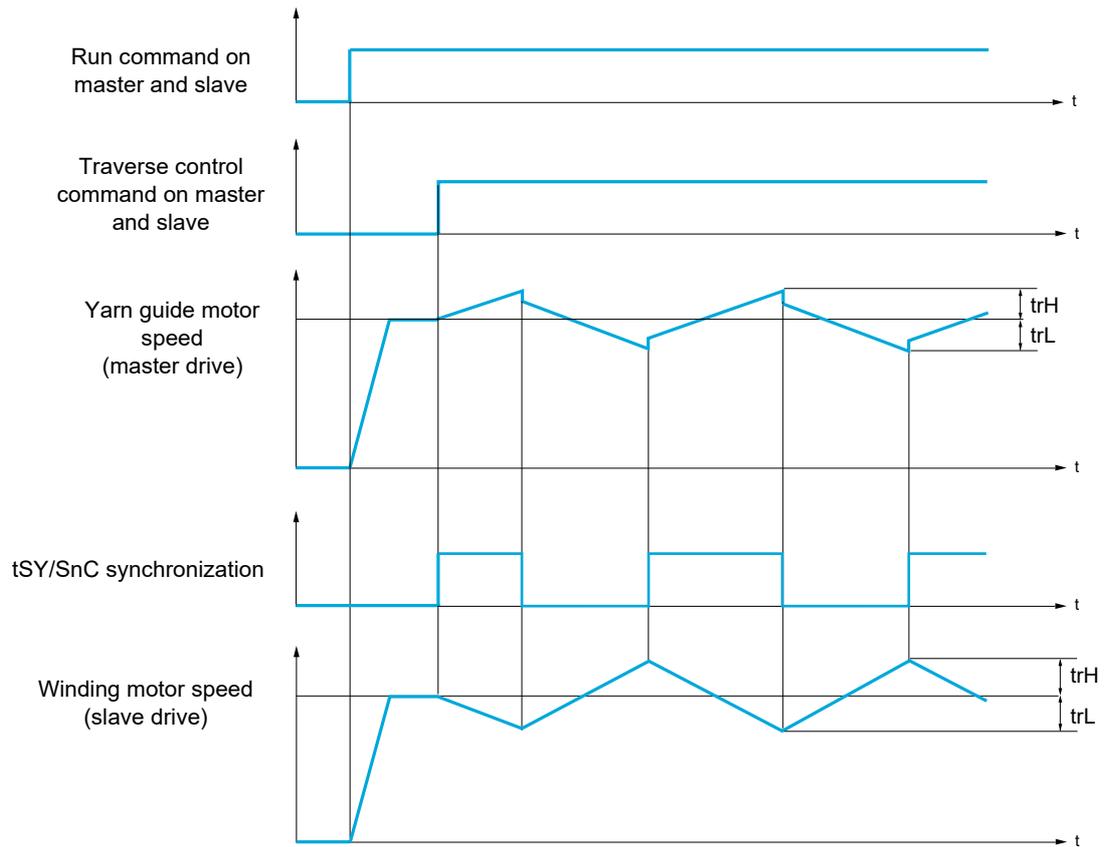

### Connection of synchronization I/O

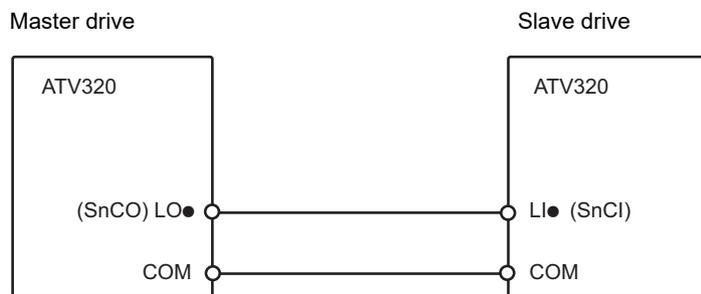

The starting conditions for the function are:

- Base speeds reached on both drives
- **[Yarn control] (ErL)** input activated
- Synchronization signal present

**Note:** The **[Quick step High] (q5H)** and **[Quick step Low] (q5L)** parameters should generally be kept at 0.

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FLT- &gt; TRO-

Code	Name / Description	Adjustment range	Factory setting
<b>F u n -</b>	<b>[APPLICATION FUNCT.] (continued)</b>		
<b>t r D -</b>	<b>[TRAVERSE CONTROL]</b> <b>Note:</b> This function cannot be used with certain other functions. Follow the instructions on page <a href="#">172</a> .		
<b>t r C</b>	<b>[Yarn control]</b> The Traverse control cycle starts when the assigned input or bit changes to 1 and stops when it changes to 0.  <b>[No] (n o)</b> <b>[No] (n o)</b> : Function inactive, thereby helping to prevent access to other parameters <b>[LI1] (L i I)</b> : Logical input LI1 <b>[...] (...)</b> : See the assignment conditions on page <a href="#">162</a>		<b>[No] (n o)</b>
<b>t r H</b> ★ (1)	<b>[Traverse freq. high]</b> Traverse frequency high.	0 to 10 Hz	4 Hz
<b>t r L</b> ★ (1)	<b>[Traverse Freq. Low]</b> Traverse frequency low.	0 to 10 Hz	4 Hz
<b>q s H</b> ★ (1)	<b>[Quick step High]</b> Quick step high.	0 to <b>[Traverse freq. high] (t r H)</b>	0 Hz
<b>q s L</b> ★ (1)	<b>[Quick step Low]</b> Quick step low.	0 to <b>[Traverse Freq. Low] (t r L)</b>	0 Hz
<b>t u P</b> ★ (1)	<b>[Traverse ctrl. accel.]</b> Acceleration traverse control.	0.1 to 999.9 s	4 s
<b>t d n</b> ★ (1)	<b>[Traverse ctrl. decel.]</b> Deceleration traverse control.	0.1 to 999.9 s	4 s
<b>t b o</b> ★ (1)	<b>[Reel time]</b> Reel execution time.	0 to 9,999 min	0 min
<b>E b o</b> ★	<b>[End reel]</b> The assigned output or relay changes to state 1 when the traverse control operating time reaches the <b>[Reel time] (t b o)</b> .  <b>[No] (n o)</b> : Not assigned <b>[LO1] (L o I)</b> : Logical output LO1 <b>[R2] (r 2)</b> : Relay R2 <b>[dO1] (d o I)</b> : Analog output AO1 functioning as a logic output. Selection can be made if <b>[AO1 assignment] (R o I)</b> page <a href="#">153</a> is set to <b>[No] (n o)</b> .		<b>[No] (n o)</b>

**Parameters described in this page can be accessed by:** DRI- > CONF > FULL > FLT-> TRO-

Code	Name / Description	Adjustment range	Factory setting
<p><b>5 n C</b></p> <p>★</p> <p>n o</p> <p>L i l</p> <p>...</p>	<p><b>[Counter wobble]</b></p> <p>Synchronization input. To be configured on the winding drive (slave) only.</p> <p>[No] (n o): Function inactive, thereby helping to prevent access to other parameters [LI1] (L i l): Logical input LI1 [... ] (...): See the assignment conditions on page 162</p>		[No] (n o)
<p><b>ε 5 Y</b></p> <p>★</p> <p>n o</p> <p>L o l</p> <p>r 2</p> <p>d o l</p>	<p><b>[Sync. wobble]</b></p> <p>Synchronization output. To be configured on the yarn guide drive (master) only.</p> <p>[No] (n o): Function not assigned [LO1] (L o l) [R2] (r 2) [dO1] (d o l): Analog output AO1 functioning as a logic output. Selection can be made if [AO1 assignment] (R o l) page 153 is set to [No] (n o).</p>		[No] (n o)
<p><b>d ε F</b></p> <p>★</p> <p>( )</p>	<p><b>[Decrease ref. speed]</b></p> <p>Decrease in the base reference during the traverse control cycle.</p>	0 to 599 Hz	0 Hz
<p><b>r ε r</b></p> <p>★</p> <p>n o</p> <p>L i l</p> <p>...</p>	<p><b>[Init. traverse ctrl]</b></p> <p>When the state of the assigned input or bit changes to 1, the traverse control operating time is reset to 0, along with [Decrease ref. speed] (d ε F).</p> <p>[No] (n o): Function not assigned [LI1] (L i l): Logical input LI1 [... ] (...): See the assignment conditions on page 162</p>		[No] (n o)

(1) The parameter can also be accessed in the [SETTINGS] (5 E ε -) menu.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FLT- &gt; CHS-

## HIGH SPEED SWITCHING

Code	Name / Description	Adjustment range	Factory setting
<i>F u n -</i>	<b>[APPLICATION FUNCT.] (continued)</b>		
<i>C H S -</i>	<b>[HSP SWITCHING]</b>		
<i>S H 2</i>	<b>[2 High speed]</b> High Speed Switching.  <i>n o</i> [No] ( <i>n o</i> ): Function not assigned <i>F t R</i> [Freq. Th. attain.] ( <i>F t R</i> ): Frequency threshold attained <i>F 2 R</i> [Freq. Th. 2 attained] ( <i>F 2 R</i> ): Frequency threshold 2 attained <i>L 1 I</i> [L1] ( <i>L 1 I</i> ): Logical input LI1 ... [...] (...): See the assignment conditions on page <a href="#">162</a>		[No] ( <i>n o</i> )
<i>S H 4</i>	<b>[4 High speed]</b> High Speed Switching. <b>Note:</b> In order to obtain 4 High speed, <b>[2 High speed]</b> ( <i>S H 2</i> ) must also be configured.  Identical to <b>[2 High speed]</b> ( <i>S H 2</i> ) page <a href="#">258</a> .		[No] ( <i>n o</i> )
<i>H S P</i> ( )	<b>[High speed]</b> Motor frequency at maximum reference, can be set between <b>[Low speed]</b> ( <i>L S P</i> ) and <b>[Max frequency]</b> ( <i>t F r</i> ). The factory setting changes to 60 Hz if <b>[Standard mot. freq]</b> ( <i>b F r</i> ) is set to <b>[60Hz NEMA]</b> ( <i>B D</i> ). To help prevent <b>[Overspeed]</b> ( <i>S o F</i> ) error, it is recommended to have <b>[Max Frequency]</b> ( <i>t F r</i> ) equal to or higher than 110% of <b>[High Speed]</b> ( <i>H S P</i> ).	0 to 599 Hz	50 Hz
<i>H S P 2</i> ★ ( )	<b>[High speed 2]</b> Visible if <b>[2 High speed]</b> ( <i>S H 2</i> ) is not set to <b>[No]</b> ( <i>n o</i> ).  Identical to <b>[High speed]</b> ( <i>H S P</i> ) page <a href="#">258</a> .	0 to 599 Hz	50 Hz
<i>H S P 3</i> ★ ( )	<b>[High speed 3]</b> Visible if <b>[4 High speed]</b> ( <i>S H 4</i> ) is not set to <b>[No]</b> ( <i>n o</i> ).  Identical to <b>[High speed]</b> ( <i>H S P</i> ) page <a href="#">258</a> .	0 to 599 Hz	50 Hz
<i>H S P 4</i> ★ ( )	<b>[High speed 4]</b> Visible if <b>[4 High speed]</b> ( <i>S H 4</i> ) is not set to <b>[No]</b> ( <i>n o</i> ).  Identical to <b>[High speed]</b> ( <i>H S P</i> ) page <a href="#">258</a> .	0 to 599 Hz	50 Hz

 These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

 Parameter that can be modified during operation or when stopped.

### DC Bus

Code	Name / Description	Adjustment range	Factory setting
<i>F u n -</i>	<b>[APPLICATION FUNCT.]</b>		
<i>d C C -</i>	<b>[DC Bus]</b>		
<i>d C C n</i>  <i>n o</i> <i>n a i n</i> <i>b u s</i>	<b>[DC-Bus chaining]</b> DC Bus chaining configuration  <i>n o</i> <b>[No] (n o)</b> : Not assigned <i>n a i n</i> <b>[Bus &amp; Main] (n a i n)</b> : The drive is supplied by both DC Bus and supply mains. <i>b u s</i> <b>[Only Bus] (b u s)</b> : The drive is supplied by DC Bus only.		<b>[No] (n o)</b>
<div style="background-color: black; color: white; padding: 5px; font-weight: bold; font-size: 1.2em;">⚡ ⚠ DANGER</div> <div style="border: 1px solid black; padding: 10px;"> <p><b>GROUND FAULT MONITORING DISABLED, NO ERROR DETECTION</b></p> <p>Setting this parameter to <b>[Bus &amp; Main] (n a i n)</b> deactivates ground fault monitoring.</p> <ul style="list-style-type: none"> <li>• Only use this parameter after a thorough risk assessment in compliance with all regulations and standards that apply to the device and to the application.</li> <li>• Implement alternative ground fault monitoring functions that do not trigger automatic error responses of the drive, but allow for adequate, equivalent responses by other means in compliance with all applicable regulations and standards as well as the risk assessment.</li> <li>• Commission and test the system with ground fault monitoring enabled.</li> <li>• During commissioning, verify that the drive and the system operate as intended by performing tests and simulations in a controlled environment under controlled conditions.</li> </ul> <p><b>Failure to follow these instructions will result in death or serious injury.</b></p> </div>			
<i>d C C C</i>  <i>A l t i v a r</i> <i>L e x i u m</i>	<b>[DC-Bus compat.]</b> DC Bus chaining compatibility  Visible if <b>[DC-Bus chaining] (d C C n)</b> above is not set to <b>[No] (n o)</b> .  <i>A l t i v a r</i> <b>[Altivar] (A l t i v a r)</b> : Only Altivar 320 drives are on the DC Bus chain. <i>L e x i u m</i> <b>[Lexium] (L e x i u m)</b> : At least one Lexium 32 drive is on the DC Bus chain.		<b>[Altivar] (A l t i v a r)</b>
<i>i P L</i>  ★	<b>[Input phase loss]</b> Drive behaviour in case of input phase loss detected fault.  Cannot be accessed if drive rating is ATV●●●M2. Visible if <b>[3.1 ACCESS LEVEL] (L A C)</b> is set to <b>[Expert] (E P r)</b> and <b>[DC-Bus chaining] (d C C n)</b> above is set to <b>[No] (n o)</b> .  <i>n o</i> <b>[Ignore] (n o)</b> : Detected fault ignored <i>y e s</i> <b>[Freewheel] (y e s)</b> : Detected fault with freewheel stop		According to drive rating.
<p><b>[Input phase loss] (i P L)</b> is forced to <b>[Ignore] (n o)</b> if <b>[DC-Bus chaining] (d C C n)</b> above is set to <b>[Only Bus] (b u s)</b>. See <b>[Input phase loss] (i P L)</b> in the Programming Manual (DRI- &gt; CONF &gt; FULL &gt; FLT- &gt; IPL-).</p>			

Parameters described in this page can be accessed by: DRI- > CONF > FULL > FLT- > DCC-

<p><b>5 C L 3</b></p> <p style="text-align: right;"><b>[Freewheel] (Y E 5)</b></p>	<p><b>[Ground short circuit]</b></p> <p>Direct ground short-circuit fault detection behaviour</p> <p>Can be accessed for drives rating ATV320U55... D15...</p> <p>Visible if <b>[3.1 ACCESS LEVEL] (L R C)</b> is set to <b>[Expert] (E P r)</b> and <b>[DC-Bus chaining] (d C C n)</b> above is set to <b>[No] (n o)</b>.</p> <p><b>n o</b> <b>[Ignore] (n o)</b>: Detected fault ignored</p> <p><b>Y E 5</b> <b>[Freewheel] (Y E 5)</b>: Detected fault with freewheel stop</p> <p><b>[Ground short circuit] (5 C L 3)</b> is forced to <b>[Ignore] (n o)</b> for ATV320U55... D15... drives if <b>[DC-Bus chaining] (d C C n)</b> above is set to <b>[Bus &amp; Main] (n A , n)</b>.</p> <p><b>Note:</b> If <b>[Ground short circuit] (5 C L 3)</b> is set to <b>[Ignore] (n o)</b>, integrated safety functions (except Safe Torque Off) for ATV320U55... D15... drives cannot be used, otherwise the drive will trigger in <b>[Safe function fault] (5 F F F)</b> state.</p>			
<p>★</p>	<div style="background-color: black; color: white; padding: 5px; margin-bottom: 5px;"> <p><b>⚡ ⚠ DANGER</b></p> </div> <p><b>GROUND FAULT MONITORING DISABLED, NO ERROR DETECTION</b></p> <p>Setting this parameter to <b>[Ignore] (n o)</b> deactivates ground fault monitoring.</p> <ul style="list-style-type: none"> <li>Only use this parameter after a thorough risk assessment in compliance with all regulations and standards that apply to the device and to the application.</li> <li>Implement alternative ground fault monitoring functions that do not trigger automatic error responses of the drive, but allow for adequate, equivalent responses by other means in compliance with all applicable regulations and standards as well as the risk assessment.</li> <li>Commission and test the system with ground fault monitoring enabled.</li> <li>During commissioning, verify that the drive and the system operate as intended by performing tests and simulations in a controlled environment under controlled conditions.</li> </ul> <p><b>Failure to follow these instructions will result in death or serious injury.</b></p>			
<p><b>u r E 5</b></p> <p>★</p>	<p><b>[Mains Voltage]</b></p> <p>Rated voltage of the supply mains in Vac.</p> <p>Visible if <b>[3.1 ACCESS LEVEL] (L R C)</b> is set to <b>[Expert] (E P r)</b> and <b>[DC-Bus chaining] (d C C n)</b> above is set to <b>[No] (n o)</b>.</p> <p>For ATV320...M2 or ATV320...M3:</p> <p><b>2 0 0</b> <b>[200V ac] (2 0 0)</b>: 200 Volts AC</p> <p><b>2 2 0</b> <b>[220V ac] (2 2 0)</b>: 220 Volts AC</p> <p><b>2 3 0</b> <b>[230V ac] (2 3 0)</b>: 230 Volts AC</p> <p><b>2 4 0</b> <b>[240V ac] (2 4 0)</b>: 240 Volts AC (factory setting)</p> <p><b>L H n</b> <b>[Lexium] (L H n)</b>: <b>[Mains voltage] (u r E 5)</b>, <b>[Undervoltage level] (u 5 L)</b>, <b>[Braking level] (u b r)</b> are forced to their default value.</p> <p>For ATV320...N4:</p> <p><b>3 8 0</b> <b>[380V ac] (3 8 0)</b>: 380 Volts AC</p> <p><b>4 0 0</b> <b>[400V ac] (4 0 0)</b>: 400 Volts AC</p> <p><b>4 4 0</b> <b>[440V ac] (4 4 0)</b>: 440 Volts AC</p> <p><b>4 6 0</b> <b>[460V ac] (4 6 0)</b>: 460 Volts AC</p> <p><b>5 0 0</b> <b>[500V ac] (5 0 0)</b>: 500 Volts AC (factory setting)</p> <p><b>L H n</b> <b>[Lexium] (L H n)</b>: <b>[Mains voltage] (u r E 5)</b>, <b>[Undervoltage level] (u 5 L)</b> are forced to their default value, <b>[Braking level] (u b r)</b> is forced to 780 Vdc and the drive will trigger in <b>[Overbraking] (o b F)</b> at a DC Bus level of 820 Vdc instead of 880 Vdc.</p> <p>For ATV320...S6:</p> <p><b>5 2 5</b> <b>[525V ac] (5 2 5)</b>: 525 Volts AC</p> <p><b>6 0 0</b> <b>[600V ac] (6 0 0)</b>: 600 Volts AC (Factory setting)</p> <p><b>L H n</b> <b>[Lexium] (L H n)</b>: <b>[Mains voltage] (u r E 5)</b>, <b>[Undervoltage level] (u 5 L)</b>, <b>[Braking level] (u b r)</b> are forced to their default value.</p>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; text-align: center;">According to drive voltage rating</td> <td style="width: 50%; text-align: center;">According to drive voltage rating</td> </tr> </table>	According to drive voltage rating	According to drive voltage rating
According to drive voltage rating	According to drive voltage rating			

u 5 L  ★	<p><b>[Undervoltage level]</b> Undervoltage fault level setting in Volts.</p> <p>Visible if <b>[3.1 ACCESS LEVEL] (LHC)</b> is set to <b>[Expert] (EPr)</b>.</p> <p>The factory setting is the maximal value of the adjustment range (see the table below). The adjustment range is determined by the the following table:</p> <table border="1" style="width: 100%; border-collapse: collapse; margin: 10px 0;"> <thead> <tr> <th rowspan="3">Drive voltage rating</th> <th rowspan="3">[Mains voltage] (urES)</th> <th colspan="2">Adjustement range</th> <th rowspan="3">Maximum value</th> </tr> <tr> <th colspan="2">Minimum Value</th> </tr> <tr> <th>[DC-Bus chaining] (dCCM) = [No] (nO)</th> <th>[DC-Bus chaining] (dCCM) = [MAin](Bus &amp; Main) or [buS] (Only Bus)</th> </tr> </thead> <tbody> <tr> <td rowspan="4">ATV320●●●M2● ATV320●●●M3●</td> <td>[200V ac] (200)</td> <td>100 Vac</td> <td rowspan="4">100 Vac</td> <td rowspan="4">141 Vac</td> </tr> <tr> <td>[220V ac] (220)</td> <td>120 Vac</td> </tr> <tr> <td>[230V ac] (230)</td> <td>131 Vac</td> </tr> <tr> <td>[240V ac] (240) or [Lexium] (LHM)</td> <td>141 Vac</td> </tr> <tr> <td rowspan="4">ATV320●●●N4●</td> <td>[380V ac] (380)</td> <td>190 Vac</td> <td rowspan="4">190 Vac</td> <td rowspan="4">276 Vac</td> </tr> <tr> <td>[400V ac] (400)</td> <td>204 Vac</td> </tr> <tr> <td>[440V ac] (440)</td> <td>233 Vac</td> </tr> <tr> <td>[460V ac] (460)</td> <td>247 Vac</td> </tr> <tr> <td rowspan="2">ATV320●●●S6●</td> <td>[525V ac] (525)</td> <td>266 Vac</td> <td rowspan="2">266 Vac</td> <td rowspan="2">304 Vac</td> </tr> <tr> <td>[600V ac] (600) or [Lexium] (LHM)</td> <td>304 Vac</td> </tr> </tbody> </table>	Drive voltage rating	[Mains voltage] (urES)	Adjustement range		Maximum value	Minimum Value		[DC-Bus chaining] (dCCM) = [No] (nO)	[DC-Bus chaining] (dCCM) = [MAin](Bus & Main) or [buS] (Only Bus)	ATV320●●●M2● ATV320●●●M3●	[200V ac] (200)	100 Vac	100 Vac	141 Vac	[220V ac] (220)	120 Vac	[230V ac] (230)	131 Vac	[240V ac] (240) or [Lexium] (LHM)	141 Vac	ATV320●●●N4●	[380V ac] (380)	190 Vac	190 Vac	276 Vac	[400V ac] (400)	204 Vac	[440V ac] (440)	233 Vac	[460V ac] (460)	247 Vac	ATV320●●●S6●	[525V ac] (525)	266 Vac	266 Vac	304 Vac	[600V ac] (600) or [Lexium] (LHM)	304 Vac	100 to 304 Vac	According to drive rating
Drive voltage rating	[Mains voltage] (urES)			Adjustement range			Maximum value																																		
				Minimum Value																																					
		[DC-Bus chaining] (dCCM) = [No] (nO)	[DC-Bus chaining] (dCCM) = [MAin](Bus & Main) or [buS] (Only Bus)																																						
ATV320●●●M2● ATV320●●●M3●	[200V ac] (200)	100 Vac	100 Vac	141 Vac																																					
	[220V ac] (220)	120 Vac																																							
	[230V ac] (230)	131 Vac																																							
	[240V ac] (240) or [Lexium] (LHM)	141 Vac																																							
ATV320●●●N4●	[380V ac] (380)	190 Vac	190 Vac	276 Vac																																					
	[400V ac] (400)	204 Vac																																							
	[440V ac] (440)	233 Vac																																							
	[460V ac] (460)	247 Vac																																							
ATV320●●●S6●	[525V ac] (525)	266 Vac	266 Vac	304 Vac																																					
	[600V ac] (600) or [Lexium] (LHM)	304 Vac																																							
This parameter is also visible in (DRI- > CONF > FULL > FLT- > USB-).																																									
u b r  ★  ( )	<p><b>[Braking level]</b> Braking transistor command level.</p> <p>Visible if <b>[3.1 ACCESS LEVEL] (LHC)</b> is set to <b>[Expert] (EPr)</b>.</p> <p>The factory setting is determined by the drive voltage rating :</p> <ul style="list-style-type: none"> <li>- For ATV320●●●M2● : 395 Vdc</li> <li>- For ATV320●●●M3● : 395 Vdc</li> <li>- For ATV320●●●N4● : 820 Vdc</li> <li>- For ATV320●●●S6● : 995 Vdc</li> </ul> <p>The adjustment range is determined by the the following table:</p> <table border="1" style="width: 100%; border-collapse: collapse; margin: 10px 0;"> <thead> <tr> <th rowspan="2">Drive voltage rating</th> <th rowspan="2">[Mains voltage](urES)</th> <th colspan="2">Adjustement range</th> </tr> <tr> <th>minimum value</th> <th>maximal value</th> </tr> </thead> <tbody> <tr> <td rowspan="4">ATV320●●●M2● ATV320●●●M3●</td> <td>[200V ac](200)</td> <td>335 Vdc</td> <td rowspan="4">395 Vdc</td> </tr> <tr> <td>[220V ac](220)</td> <td>365 Vdc</td> </tr> <tr> <td>[230V ac](230)</td> <td>380 Vdc</td> </tr> <tr> <td>[240V ac](240) or [Lexium](LHM)</td> <td>395 Vdc</td> </tr> <tr> <td rowspan="5">ATV320●●●N4●</td> <td>[380V ac](380)</td> <td>698 Vdc</td> <td rowspan="5">820 Vdc</td> </tr> <tr> <td>[400V ac](400)</td> <td>718 Vdc</td> </tr> <tr> <td>[440V ac](440)</td> <td>759 Vdc</td> </tr> <tr> <td>[460V ac](460)</td> <td>779 Vdc</td> </tr> <tr> <td>[500V ac](500)</td> <td>820 Vdc</td> </tr> <tr> <td rowspan="3">ATV320●●●S6●</td> <td>[Lexium](LHM)</td> <td>780 Vdc</td> <td>780 Vdc</td> </tr> <tr> <td>[525V ac](525)</td> <td>941 Vdc</td> <td rowspan="2">995 Vdc</td> </tr> <tr> <td>[600V ac](600) or [Lexium](LHM)</td> <td>995 Vdc</td> </tr> </tbody> </table>	Drive voltage rating	[Mains voltage](urES)	Adjustement range		minimum value	maximal value	ATV320●●●M2● ATV320●●●M3●	[200V ac](200)	335 Vdc	395 Vdc	[220V ac](220)	365 Vdc	[230V ac](230)	380 Vdc	[240V ac](240) or [Lexium](LHM)	395 Vdc	ATV320●●●N4●	[380V ac](380)	698 Vdc	820 Vdc	[400V ac](400)	718 Vdc	[440V ac](440)	759 Vdc	[460V ac](460)	779 Vdc	[500V ac](500)	820 Vdc	ATV320●●●S6●	[Lexium](LHM)	780 Vdc	780 Vdc	[525V ac](525)	941 Vdc	995 Vdc	[600V ac](600) or [Lexium](LHM)	995 Vdc	335 to 995 Vdc	According to drive rating	
Drive voltage rating	[Mains voltage](urES)			Adjustement range																																					
		minimum value	maximal value																																						
ATV320●●●M2● ATV320●●●M3●	[200V ac](200)	335 Vdc	395 Vdc																																						
	[220V ac](220)	365 Vdc																																							
	[230V ac](230)	380 Vdc																																							
	[240V ac](240) or [Lexium](LHM)	395 Vdc																																							
ATV320●●●N4●	[380V ac](380)	698 Vdc	820 Vdc																																						
	[400V ac](400)	718 Vdc																																							
	[440V ac](440)	759 Vdc																																							
	[460V ac](460)	779 Vdc																																							
	[500V ac](500)	820 Vdc																																							
ATV320●●●S6●	[Lexium](LHM)	780 Vdc	780 Vdc																																						
	[525V ac](525)	941 Vdc	995 Vdc																																						
	[600V ac](600) or [Lexium](LHM)	995 Vdc																																							
This parameter is also visible in (DRI- > CONF > FULL > DRC-).																																									

Parameter that can be modified during operation or when stopped.

These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.


## Fault Management

### With integrated display terminal:

Summary of functions:

Code	Name	Page
<i>P t C</i>	[PTC MANAGEMENT]	<a href="#">264</a>
<i>r S t</i>	[FAULT RESET]	<a href="#">265</a>
<i>R t r</i>	[AUTOMATIC RESTART]	<a href="#">266</a>
<i>A L S</i>	[ALARMS SETTING]	<a href="#">267</a>
<i>F L r</i>	[CATCH ON THE FLY]	<a href="#">267</a>
<i>t H t</i>	[MOTOR THERMAL PROT.]	<a href="#">269</a>
<i>o P L</i>	[OUTPUT PHASE LOSS]	<a href="#">270</a>
<i>i P L</i>	[INPUT PHASE LOSS]	<a href="#">270</a>
<i>o H L</i>	[DRIVE OVERHEAT]	<a href="#">271</a>
<i>S A t</i>	[THERMAL ALARM STOP]	<a href="#">272</a>
<i>E t F</i>	[EXTERNAL FAULT]	<a href="#">272</a>
<i>u S b</i>	[UNDERVOLTAGE MGT]	<a href="#">273</a>
<i>t i t</i>	[IGBT TESTS]	<a href="#">274</a>
<i>L F L</i>	[4-20mA LOSS]	<a href="#">274</a>
<i>i n H</i>	[FAULT INHIBITION]	<a href="#">275</a>
<i>C L L</i>	[COM. FAULT MANAGEMENT]	<a href="#">275</a>
<i>S d d</i>	[ENCODER FAULT]	<a href="#">277</a>
<i>t i d</i>	[TORQUE OR I LIM. DETECT]	<a href="#">278</a>
<i>F q F</i>	[FREQUENCY METER]	<a href="#">280</a>
<i>d L d</i>	[DYNAMIC LOAD DETECT.]	<a href="#">281</a>
<i>t n F</i>	[AUTO TUNING FAULT]	<a href="#">282</a>
<i>P P i</i>	[CARDS PAIRING]	<a href="#">283</a>
<i>u L d</i>	[PROCESS UNDERLOAD]	<a href="#">284</a>
<i>o L d</i>	[PROCESS OVERLOAD]	<a href="#">286</a>
<i>L F F</i>	[FALLBACK SPEED]	<a href="#">286</a>
<i>F S t</i>	[RAMP DIVIDER]	<a href="#">286</a>
<i>d C i</i>	[DC INJECTION]	<a href="#">287</a>

From **ConF** menu

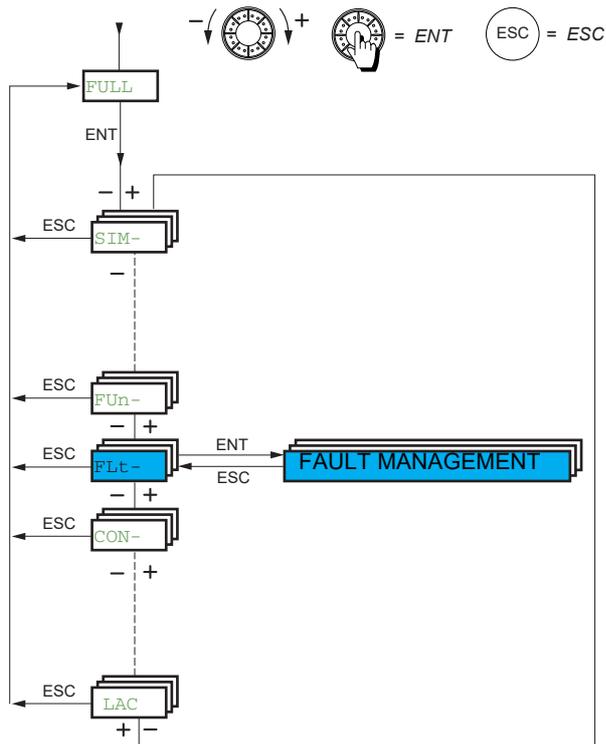

The parameters in the **[FAULT MANAGEMENT]** (**FLt-**) menu can only be modified when the drive is stopped and there is no run command, except for parameters with a **(C)** symbol in the code column, which can be modified with the drive running or stopped.

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > FLT- > PTC-

**PTC probe**


1 set of PTC probe can be managed by the drive in order to help to protect the motor: on logic input LI6 converted for this use by switch SW2 on the control block.

The PTC probe is monitored for the following detected faults:


- Motor overheating
- Sensor break
- Sensor short-circuit

Protection via PTC probe does not disable protection via I<sup>2</sup>t calculation performed by the drive (the two types of protection can be combined).

**ATV320●●●●●●B**

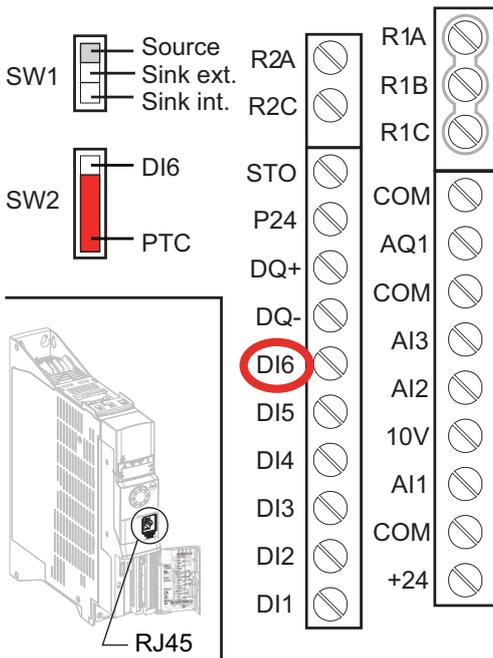

**ATV320●●●●●●C**

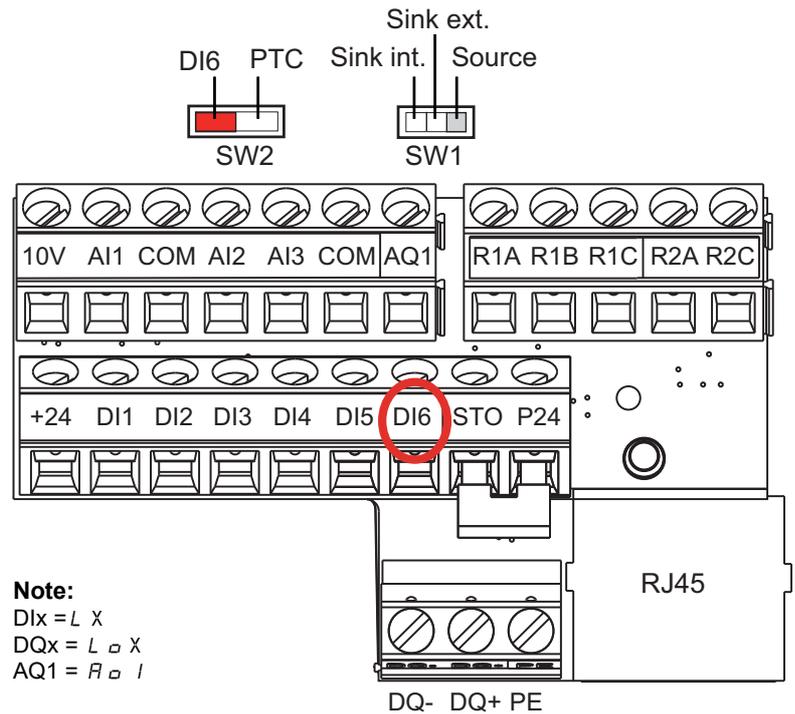

**Note:**  
 DIx = L X  
 DQx = L o X  
 AQ1 = R o I

Code	Name / Description	Adjustment range	Factory setting
<b>FULL</b>	<b>[FULL] (continued)</b>		
<b>FLT-</b>	<b>[FAULT MANAGEMENT]</b>		
<b>PTC-</b>	<b>[PTC MANAGEMENT]</b>		
<b>PTCL</b>	<b>[LI6 = PTC probe]</b>		<b>[No] (no)</b>
	Check first that the switch SW2 on the control block is set to PTC.		
<b>no</b>	<b>[No] (no):</b> Not used		
<b>AS</b>	<b>[Always] (AS):</b> PTC probe are monitored permanently, even if the power supply is not connected (as long as the control remains connected to the power supply)		
<b>rd5</b>	<b>[Power ON] (rd5):</b> PTC probe are monitored while the drive power supply is connected		
<b>rs</b>	<b>[Motor ON] (rs):</b> PTC probe are monitored while the motor power supply is connected		

Code	Name / Description	Adjustment range	Factory setting
<b>FLt-</b>	<b>[FAULT MANAGEMENT] (continued)</b>		
<b>rSt-</b>	<b>[FAULT RESET]</b>		
<b>rSF</b>	<p><b>[Fault reset]</b></p> <p>Detected faults are cleared manually when the assigned input or bit changes to 1, if the cause of the detected fault has disappeared. The STOP/RESET key on the graphic display terminal performs the same function. Following detected faults can be cleared manually : <i>RSF, brF, CnF, CoF, dLF, EPF1, EPF2, FbES, FCF2, inF9, inFA, inFb, LCF, LFF3, obF, oHF, oLC, oLF, oPF1, oPF2, oSF, oEFL, PHF, PkFL, SCF4, SCF5, SLF1, SLF2, SLF3, SoF, SPP, SSS, tJF, tNF</i> and <i>uLF</i>.</p> <p><b>Note:</b> If <b>[Reset restricted fault configuration] (HrFC)</b> is set to <b>[Yes] (YES)</b>, the additional following detected fault can be cleared manually: <i>oCF, SCF1, SCF3</i>. See page <a href="#">266</a></p> <p><b>[No] (no):</b> Function inactive <b>[LI1] (LI1):</b> Logical input LI1 ... <b>[...] (...):</b> See the assignment conditions on page <a href="#">162</a> (If <b>[Profile] (CHCF)</b> is set to <b>[Not Separ.] (SIM)</b> or <b>[Separate] (SEP)</b> then <b>[CD11] (Cd11)</b> up to <b>[CD15] (Cd15)</b>, <b>[C111] (C111)</b> up to <b>[C115] (C115)</b>, <b>[C211] (C211)</b> up to <b>[C215] (C215)</b> and <b>[C311] (C311)</b> up to <b>[C315] (C315)</b> are not available).</p>		<b>[No] (no)</b>
<b>rPR</b>	<p><b>[Product reset assig.]</b></p> <p>The Restart function performs a Fault Reset and then restarts the drive. During this Restart procedure, the drive goes through the same steps as if it had been switched off and on again. Depending on the wiring and the configuration of the drive, this may result in immediate and unanticipated operation. The Restart function can be assigned to a digital input.</p> <div style="border: 1px solid black; padding: 10px; text-align: center;"> <p><b>⚠ WARNING</b></p> <p><b>UNANTICIPATED EQUIPMENT OPERATION</b></p> <p>The Restart function performs a Fault Reset and restarts the drive.</p> <ul style="list-style-type: none"> <li>Verify that activating this function does not result in unsafe conditions.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage</b></p> </div> <p>This parameter can only be modified if <b>[3.1 ACCESS LEVEL] (LAL)</b> is set to <b>[Expert] (EPr)</b> mode. Drive reinitialization via logic input. Can be used to reset all detected faults without having to disconnect the drive from the power supply. The drive is reinitialized on a rising edge (change from 0 to 1) of the assigned input. The drive can only be reinitialized when locked. To assign reinitialization, press and hold down the ENT key for 2 s.</p> <p><b>[No] (no):</b> Function inactive <b>[LI1] (LI1):</b> Logical input LI1 ... <b>[LI6] (LI6):</b> Logical input LI6 <b>[LA11] (LA11):</b> Logical input AI1 <b>[LA12] (LA12):</b> Logical input AI2 <b>[OL01] (OL01):</b> Function blocks: Logical Output 01 ... <b>[OL10] (OL10):</b> Function blocks: Logical Output 10</p>		<b>[No] (no)</b>
<b>rP</b>	<p><b>[Product reset]</b></p> <p>The Restart function performs a Fault Reset and then restarts the drive. During this Restart procedure, the drive goes through the same steps as if it had been switched off and on again. Depending on the wiring and the configuration of the drive, this may result in immediate and unanticipated operation.</p> <div style="border: 1px solid black; padding: 10px; text-align: center;"> <p><b>⚠ WARNING</b></p> <p><b>UNANTICIPATED EQUIPMENT OPERATION</b></p> <p>The Restart function performs a Fault Reset and restarts the drive.</p> <ul style="list-style-type: none"> <li>Verify that activating this function does not result in unsafe conditions.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage</b></p> </div> <p>This parameter can only be accessed if <b>[3.1 ACCESS LEVEL] (LAL)</b> is set to <b>[Expert] (EPr)</b> mode. Drive reinitialization. Can be used to reset all detected faults without having to disconnect the drive from the power supply.</p> <p><b>[No] (no):</b> Function inactive <b>[YES] (YES):</b> Reinitialization. Press and hold down the ENT key for 2 s. The parameter changes back to <b>[No] (no)</b> automatically as soon as the operation is complete. The drive can only be reinitialized when locked.</p>		<b>[No] (no)</b>

Parameters described in this page can be accessed by:


DRI- > CONF > FULL > FLT- > ATR-

Code	Name / Description	Adjustment range	Factory setting
<i>H r F C</i>	<b>[Reset restricted fault configuration]</b>		<b>[No] (n o)</b>
	<p><b>NOTICE</b></p> <p><b>INOPERATIVE DRIVE</b></p> <ul style="list-style-type: none"> <li>• Verify that enabling this parameter does not result in equipment damage.</li> <li>• Before resetting the detected error, identify and correct the cause of the error.</li> </ul> <p><b>Failure to follow these instructions can result in equipment damage.</b></p>		
	<p>This parameter can only be accessed if <b>[3.1 ACCESS LEVEL] (L A C)</b> is set to <b>[Expert] (E P r)</b> mode.</p> <p>Can be used to select the access level of <b>[Fault reset] (r 5 F)</b> to reset detected faults without having to disconnect the drive from the power supply. see page <a href="#">265</a></p> <p><b>Note:</b> If <b>[Reset restricted fault configuration] (H r F C)</b> is set to <b>[Yes] (Y E 5)</b>, the additional following detected fault can be cleared manually: <b>o C F</b>, <b>5 C F 1</b>, <b>5 C F 3</b>.</p> <p><b>n o</b> <b>[No] (n o):</b> Function inactive  <b>Y E 5</b> <b>[Yes] (Y E 5):</b> Function active</p>		
★			
<i>F L t -</i>	<b>[FAULT MANAGEMENT] (continued)</b>		
<i>A t r -</i>	<b>[AUTOMATIC RESTART]</b>		
<i>A t r</i>	<b>[Automatic restart]</b>		<b>[No] (n o)</b>
 2 s	<p>This function can be used to automatically perform individual or multiple Fault Resets.</p> <p>If the cause of the error that has triggered the transition to the operating state Fault disappears while this function is active, the drive resumes normal operation. While the Fault Reset attempts are performed automatically, the output signal "Operating state Fault" is not available.</p> <p>If the attempts to perform the Fault Reset are not successful, the drive remains in the operating state Fault and the output signal "Operating state Fault" becomes active.</p>		
	<p><b>⚠ WARNING</b></p> <p><b>UNANTICIPATED EQUIPMENT OPERATION</b></p> <ul style="list-style-type: none"> <li>• Verify that activating this function does not result in unsafe conditions.</li> <li>• Verify that the fact that the output signal "Operating state Fault" is not available while this function is active does not result in unsafe conditions.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage</b></p>		
	<p>The error relay remains activated if this function is active. The speed reference and the operating direction must be maintained. Use 2-wire control (<b>[2/3 wire control] (t C C)</b> is set to <b>[2 wire] (2 C)</b> and <b>[2 wire type] (t C t)</b> is set to <b>[Level] (L E L)</b>, see <b>[2/3 wire control] (t C C)</b> page <a href="#">93</a>).</p> <p>If the restart has not taken place once the configurable time <b>t A r</b> has elapsed, the procedure is aborted and the drive remains locked until it is turned off and then on again.</p> <p>The error codes, which permit this function, are listed on page <a href="#">326</a>.</p> <p><b>n o</b> <b>[No] (n o):</b> Function inactive  <b>Y E 5</b> <b>[Yes] (Y E 5):</b> Automatic restart, after locking in fault state, if the detected fault has disappeared and the other operating conditions permit the restart. The restart is performed by a series of automatic attempts separated by increasingly longer waiting periods: 1 s, 5 s, 10 s, then 1 minute for the following attempts.</p>		
<i>t A r</i>	<b>[Max. restart time]</b>		<b>[5 minutes] (5)</b>
★	<p>This parameter appears if <b>[Automatic restart] (A t r)</b> is set to <b>[Yes] (Y E 5)</b>. It can be used to limit the number of consecutive restarts on a recurrent detected fault.</p> <p><b>5</b> <b>[5 min] (5):</b> 5 minutes  <b>10</b> <b>[10 minutes] (10):</b> 10 minutes  <b>30</b> <b>[30 minutes] (30):</b> 30 minutes  <b>1 h</b> <b>[1 hour] (1 h):</b> 1 hour  <b>2 h</b> <b>[2 hours] (2 h):</b> 2 hours  <b>3 h</b> <b>[3 hours] (3 h):</b> 3 hours  <b>C t</b> <b>[Unlimited] (C t):</b> Unlimited</p>		

Parameters described in this page can be accessed by: DRI- > CONF > FULL > FLT- > FLR-

Code	Name / Description	Adjustment range	Factory setting
<b>FLt-</b>	<b>[FAULT MANAGEMENT] (continued)</b>		
<b>ALs-</b>	<b>[ALARM SETTING]</b>		
<b>Ctd</b>  (1)	<b>[Current threshold]</b> Motor current threshold.	0 to 1.5 In (1)	INV
<b>Ftd</b> 	<b>[Freq. threshold]</b> Motor frequency threshold.	0 to 599 Hz	50 Hz
<b>F2d</b> 	<b>[Freq. threshold 2]</b> Motor frequency threshold.	0 to 599 Hz	50 Hz
<b>tth</b> 	<b>[High torque thd.]</b> High torque frequency threshold.	-300 to 300%	100%
<b>ttL</b> 	<b>[Low torque thd.]</b> Low torque frequency threshold.	-300 to 300%	50%
<b>F9L</b> 	<b>[Pulse warning thd.]</b> Frequency level. Visible if <b>[Frequency meter] (F9F)</b> is not <b>[No] (no)</b> .	0 to 20,000 Hz	0 Hz
<b>FLt-</b>	<b>[FAULT MANAGEMENT] (continued)</b>		
<b>FLr-</b>	<b>[CATCH ON THE FLY]</b> <b>Note:</b> This function cannot be used with certain other functions. Follow the instructions on page 171.		
<b>FLr</b>	<b>[Catch on the fly]</b> Used to enable a smooth restart if the run command is maintained after the following events: - Loss of supply mains or disconnection. - Clearance of current detected fault or automatic restart. - Freewheel stop. The speed given by the drive resumes from the estimated speed of the motor at the time of the restart, then follows the ramp to the reference speed. This function requires 2-wire level control. When the function is operational, it activates at each run command, resulting in a slight delay of the current (0.5 s max). <b>[Catch on the fly] (FLr)</b> is forced to <b>[No] (no)</b> if brake logic control <b>[Brake assignment] (bLc)</b> is assigned (page 206) or if <b>[Auto DC injection] (AdC)</b> is set to <b>[Continuous] (cL)</b> page 185 .  If the speed of the motor drops to zero before increasing to reference speed after a catch on the fly use, slightly increasing <b>[Cur. ref. filter time] (CrLF)</b> (page 126) allows the drive to restart at it's current speed.  <b>no</b> <b>[No] (no)</b> : Function inactive <b>YES</b> <b>[Yes] (YES)</b> : Function active		<b>[No] (no)</b>

(1) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.

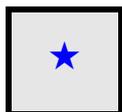

These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.



To change the assignment of this parameter, press the ENT key for 2 s.

## Motor thermal protection


### Function

Thermal protection by calculating the  $I^2t$ .


**Note:** The motor thermal state is not saved when the drive is switched off.

- Self-cooled motors: The tripping curves depend on the motor frequency.
- Force-cooled motors: Only the 50 Hz tripping curve needs to be considered, regardless of the motor frequency.

The following curves represent the triggering time in seconds: (50Hz)

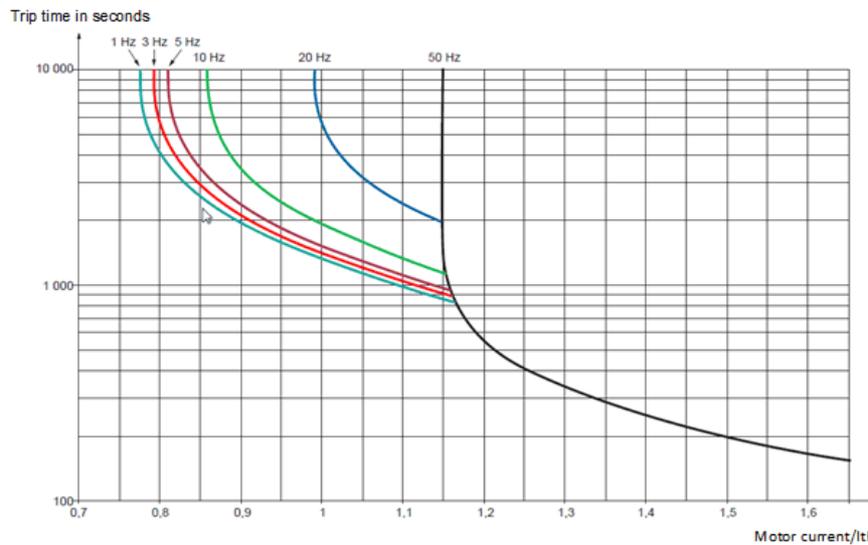

The following curves represent the triggering time in seconds: (60Hz)

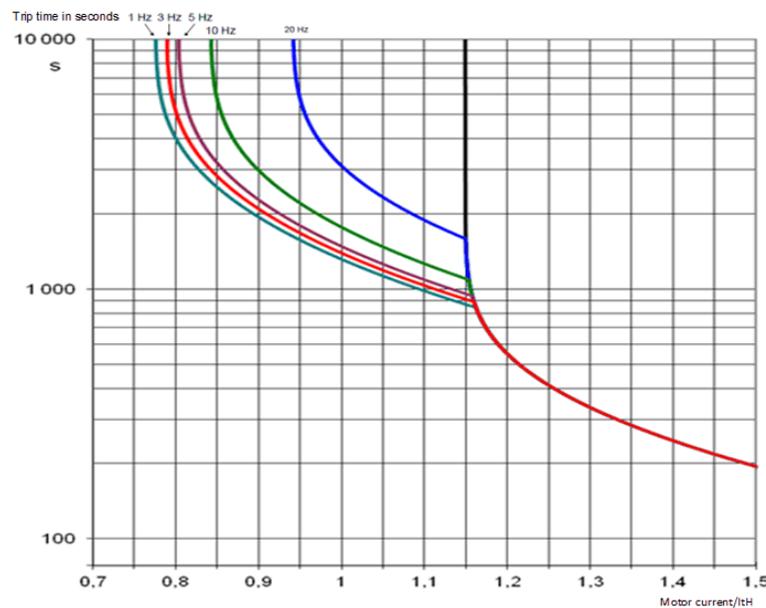

## NOTICE

### MOTOR OVERHEATING

Install external thermal monitoring equipment under the following conditions:

- If a motor with a nominal current of less than 20% of the nominal current of the drive is connected.
- If you use the function Motor Switching

**Failure to follow these instructions can result in equipment damage.**

Code	Name / Description	Adjustment range	Factory setting
<b>FLT-</b>	<b>[FAULT MANAGEMENT] (continued)</b>		
<b>THE-</b>	<b>[MOTOR THERMAL PROT.]</b>		
<b>THE</b>	<p><b>[Motor protect. type]</b></p> <p><b>Note:</b> .An error will occur when the thermal state reaches 118% of the rated state and reactivation will occur when the state falls back below 100%.</p> <p><b>no</b> [No] (<b>no</b>): No protection  <b>ACL</b> [Self cooled] (<b>ACL</b>): For self-cooled motors  <b>FCL</b> [Force-cool] (<b>FCL</b>): For force-cooled motors</p>		[Self cooled] ( <b>ACL</b> )
<b>TEd</b> (1)	<p><b>[Motor therm. level]</b></p> <p>Threshold for motor thermal alarm (logic output or relay).</p>	0 to 118%	100%
<b>TEd2</b> (1)	<p><b>[Motor2 therm. level]</b></p> <p>Threshold for motor 2 thermal alarm (logic output or relay).</p>	0 to 118%	100%
<b>TEd3</b> (1)	<p><b>[Motor3 therm. level]</b></p> <p>Threshold for motor 3 thermal alarm (logic output or relay).</p>	0 to 118%	100%
<b>OLL</b>	<p><b>[Overload fault mgt]</b></p> <div style="border: 1px solid black; padding: 10px; text-align: center;"> <p><b>NOTICE</b></p> <p><b>OVERHEATING</b></p> <p>Depending on the settings of this parameter, the error response to detected errors is disabled or the transition to the operating state Fault is suppressed if an error is detected.</p> <ul style="list-style-type: none"> <li>• Verify that the settings of this parameter do not result in equipment damage.</li> <li>• Implement alternative, equivalent monitoring functions for disabled monitoring functions.</li> </ul> <p><b>Failure to follow these instructions can result in equipment damage.</b></p> </div> <p>Type of stop in the event of a motor thermal error.</p> <p><b>no</b> [Ignore] (<b>no</b>): Detected fault ignored  <b>YES</b> [Freewheel] (<b>YES</b>): Freewheel stop  <b>SET</b> [Per STT] (<b>SET</b>): Stop according to configuration of [Type of stop] (<b>SET</b>) page 182, without tripping. In this case, the fault relay does not open and the drive is ready to restart as soon as the detected fault disappears, according to the restart conditions of the active command channel (for example, according to [2/3 wire control] (<b>TECL</b>) and [2 wire type] (<b>TELE</b>) page 134 if control is via the terminals). Configuring an alarm for this detected fault is recommended (assigned to a logic output, for example) in order to indicate the cause of the stop.  <b>FFF</b> [fallback spd] (<b>FFF</b>): Change to fallback speed, maintained as long as the detected fault persists and the run command has not been removed (2)  <b>RLS</b> [Spd maint.] (<b>RLS</b>): The drive maintains the speed being applied when the detected fault occurred, as long as the detected fault is present and the run command has not been removed (2)  <b>RPP</b> [Ramp stop] (<b>RPP</b>): Stop on ramp  <b>FSE</b> [Fast stop] (<b>FSE</b>): Fast stop  <b>DCI</b> [DC injection] (<b>DCI</b>): DC injection stop. This type of stop cannot be used with certain other functions. See table on page 174</p>		[Freewheel] ( <b>YES</b> )
<b>TEP</b>	<p><b>[Mot THR memo]</b></p> <p>Motor thermal state memorization.</p> <p><b>no</b> [No] (<b>no</b>): Motor thermal state is not stored at power off  <b>YES</b> [Yes] (<b>YES</b>): Motor thermal state is stored at power off</p>		[No] ( <b>no</b> )

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FLT- &gt; OPL-

Code	Name / Description	Adjustment range	Factory setting
<i>FLt -</i>	<b>[FAULT MANAGEMENT] (continued)</b>		
<i>oPL -</i>	<b>[OUTPUT PHASE LOSS]</b>		
<i>oPL</i>  2 s	<b>[Output Phase Loss]</b>  <div style="border: 1px solid black; padding: 5px; text-align: center;">  <b>DANGER</b> </div> <p><b>HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH</b> If output phase monitoring is disabled, phase loss and, by implication, accidental disconnection of cables, are not detected.</p> <ul style="list-style-type: none"> <li>Verify that the setting of this parameter does not result in unsafe conditions.</li> </ul> <p><b>Failure to follow these instructions will result in death or serious injury.</b></p> <p><b>Note:</b> <b>[Output phase loss]</b> (<i>oPL</i>) is set to <b>[No]</b> (<i>no</i>) when <b>[Motor control type]</b> (<i>LEt</i>) page 114 is set to <b>[Sync. mot.]</b> (<i>Syn</i>). For other <b>[Motor control type]</b> (<i>LEt</i>) configurations, <b>[Output phase loss]</b> (<i>oPL</i>) is forced to <b>[Yes]</b> (<i>YES</i>) if brake logic control is configured.</p> <p><i>no</i> <b>[No]</b> (<i>no</i>): Function inactive  <i>YES</i> <b>[Yes]</b> (<i>YES</i>): Tripping on <b>[Output phase loss]</b> (<i>oPL</i>) with freewheel stop  <i>oRC</i> <b>[Output cut]</b> (<i>oRC</i>): No fault triggered, but management of the output voltage in order to avoid an overcurrent when the link with the motor is re-established and catch on the fly performed (even if this function has not been configured). The drive switches to <b>[Output cut]</b> (<i>SoC</i>) state after <b>[OutPh time detect]</b> (<i>oDt</i>) time. Catch on fly is possible as soon as the drive is in Stand by output cut <b>[Output cut]</b> (<i>SoC</i>) state.</p>		<b>[Yes]</b> ( <i>YES</i> )
<i>oDt</i> 	<b>[OutPh time detect]</b> Time delay for taking the <b>[Output Phase Loss]</b> ( <i>oPL</i> ) detected fault into account.	0.5 to 10 s	0.5 s
<i>FLt -</i>	<b>[FAULT MANAGEMENT] (continued)</b>		
<i>iPL -</i>	<b>[INPUT PHASE LOSS]</b>		
<i>iPL</i>   2 s	<b>[Input phase loss]</b>  Cannot be accessed if drive rating is ATV●●●M2. In this case, no factory settings value. Factory setting : <b>[Freewheel]</b> ( <i>YES</i> ) for drive rating ATV320●●●N4●. If 1 phase disappears and if this leads to performance decrease, the drive switches to fault mode <b>[Input phase loss]</b> ( <i>PHF</i> ). If 2 or 3 phases disappear, the drive trips in <b>[Input phase loss]</b> ( <i>PHF</i> ).  <i>no</i> <b>[Ignore]</b> ( <i>no</i> ): Detected fault ignored <i>YES</i> <b>[Freewheel]</b> ( <i>YES</i> ): Detected fault with freewheel stop		According to drive rating

Parameters described in this page can be accessed by: DRI- > CONF > FULL > FLT- > OHL-

Code	Name / Description	Adjustment range	Factory setting
<b>FLt-</b>	<b>[FAULT MANAGEMENT] (continued)</b>		
<b>oHL-</b>	<b>[DRIVE OVERHEAT]</b>		
<b>oHL</b>	<b>[Overtemp fault mgt]</b>		<b>[Freewheel] (yE5)</b>
	<b>NOTICE</b>		
	<p><b>OVERHEATING</b>                      Depending on the settings of this parameter, the error response to detected errors is disabled or the transition to the operating state Fault is suppressed if an error is detected.</p> <ul style="list-style-type: none"> <li>Verify that the settings of this parameter do not result in equipment damage.</li> </ul> <p><b>Failure to follow these instructions can result in equipment damage.</b></p>		
	<p>Behavior in the event of the drive overheating.  <b>Note:</b> An error will occur when the thermal state reaches 118% of the rated state and reactivation will occur when the state falls back below 90%.</p>		
<b>no</b>	<b>[Ignore] (no)</b> : Detected fault ignored		
<b>yE5</b>	<b>[Freewheel] (yE5)</b> : Freewheel stop		
<b>Stt</b>	<b>[Per STT] (Stt)</b> : Stop according to configuration of <b>[Type of stop] (Stt)</b> page 182, without tripping. In this case, the fault relay does not open and the drive is ready to restart as soon as the detected fault disappears, according to the restart conditions of the active command channel (for example, according to <b>[2/3 wire control] (tct)</b> and <b>[2 wire type] (tct)</b> page 134 if control is via the terminals). Configuring an alarm for this detected fault is recommended (assigned to a logic output, for example) in order to indicate the cause of the stop.		
<b>LFf</b>	<b>[fallback spd] (LFf)</b> : Change to fallback speed, maintained as long as the detected fault persists and the run command has not been removed (2)		
<b>rL5</b>	<b>[Spd maint.] (rL5)</b> : The drive maintains the speed being applied when the detected fault occurred, as long as the detected fault is present and the run command has not been removed (2)		
<b>rPP</b>	<b>[Ramp stop] (rPP)</b> : Stop on ramp		
<b>F5t</b>	<b>[Fast stop] (F5t)</b> : Fast stop		
<b>dC i</b>	<b>[DC injection] (dC i)</b> : DC injection stop. This type of stop cannot be used with certain other functions. See table on page 172		
<b>tHR</b>	<b>[Drv therm. state al]</b>	0 to 118%	100%
	Threshold for drive thermal alarm (logic output or relay).		

- (1) The parameter can also be accessed in the **[SETTINGS] (Stt-)** menu.
- (2) Because, in this case, the detected fault does not trigger a stop, it is recommended to assign a relay or logic output to its indication.

 These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

 Parameter that can be modified during operation or when stopped.

 2 s To change the assignment of this parameter, press the ENT key for 2 s.

**Deferred stop on thermal alarm**

This function helps to prevent the drive stopping between two steps of the process if the drive or motor overheats, by authorizing operation until the next stop. At the next stop, the drive is locked until the thermal state falls back to a value, which undershoots the set threshold by 20%. Example: A threshold set at 80% enables reactivation at 60%.

One thermal state threshold must be defined for the drive, and one thermal state threshold for the motor(s), which will trigger the deferred stop.

Code	Name / Description	Adjustment range	Factory setting
<b>FLT -</b>	<b>[FAULT MANAGEMENT] (continued)</b>		
<b>SAT -</b>	<b>[THERMAL ALARM STOP]</b>		
<b>SAT</b>	<b>[Thermal alarm stop]</b> Thermal alarm stop function allow to set a custom alarm thermal level for the drive or the motor. When one of these levels is reached, the drive trips in freewheel stop.  [No] (no) [Yes] (YES): Freewheel stop on drive or motor thermal alarm		[No] (no)
<b>EHF</b> ( )	<b>[Drv therm. state al]</b> Thermal state threshold of the drive tripping the deferred stop.	0 to 118%	100%
<b>EE d</b> ( )	<b>[Motor therm. level]</b> Thermal state threshold of the motor tripping the deferred stop.	0 to 118%	100%
<b>EE d 2</b> ( )	<b>[Motor2 therm. level]</b> Thermal state threshold of the motor 2 tripping the deferred stop.	0 to 118%	100%
<b>EE d 3</b> ( )	<b>[Motor3 therm. level]</b> Thermal state threshold of the motor 3 tripping the deferred stop.	0 to 118%	100%
<b>FLT -</b>	<b>[FAULT MANAGEMENT] (continued)</b>		
<b>EEF -</b>	<b>[EXTERNAL FAULT]</b>		
<b>EEF</b>	<b>[External fault ass.]</b> If the assigned bit is at 0, there is no external fault. If the assigned bit is at 1, there is an external fault. Logic can be configured via <b>[External fault config] (LEE)</b> if a logic input has been assigned.  [No] (no): Function inactive [LI] (L I): Logical input LI1 [...] (...): See the assignment conditions on page <a href="#">162</a>		[No] (no)
<b>LEE</b> ★	<b>[External fault config]</b> Parameter can be accessed if the external fault has been assigned to a logic input. It defines the positive or negative logic of the input assigned to the detected fault.  [Active low] (L): Triggering on falling edge (change from 1 to 0) of the assigned input [Active high] (H, G): Triggering on rising edge (change from 0 to 1) of the assigned input		[Active high] (H, G)

Parameters described in this page can be accessed by: DRI- > CONF > FULL > FLT-> USB-

Code	Name / Description	Adjustment range	Factory setting
<b>E P L</b>	<b>[External fault mgt]</b> Type of stop in the event of an external fault.		<b>[Freewheel] (Y E 5)</b>
<b>n o</b>	<b>[Ignore] (n o)</b> : External fault ignored		
<b>Y E 5</b>	<b>[Freewheel] (Y E 5)</b> : Freewheel stop		
<b>S E E</b>	<b>[Per STT] (S E E)</b> : Stop according to configuration of <b>[Type of stop] (S E E)</b> page 182, without tripping. In this case, the fault relay does not open and the drive is ready to restart as soon as the detected fault disappears, according to the restart conditions of the active command channel (for example, according to <b>[2/3 wire control] (E C C)</b> and <b>[2 wire type] (E C E)</b> page 134 if control is via the terminals). Configuring an alarm for this detected fault is recommended (assigned to a logic output, for example) in order to indicate the cause of the stop.		
<b>L F F</b>	<b>[fallback spd] (L F F)</b> : Change to fallback speed, maintained as long as the detected fault persists and the run command has not been removed (1)		
<b>r L S</b>	<b>[Spd maint.] (r L S)</b> : The drive maintains the speed being applied when the detected fault occurred, as long as the detected fault is present and the run command has not been removed (1)		
<b>r P P</b>	<b>[Ramp stop] (r P P)</b> : Stop on ramp		
<b>F S E</b>	<b>[Fast stop] (F S E)</b> : Fast stop		
<b>d C i</b>	<b>[DC injection] (d C i)</b> : DC injection stop. This type of stop cannot be used with certain other functions. See table on page 174		
<b>F L E -</b>	<b>[FAULT MANAGEMENT] (continued)</b>		
<b>u S b -</b>	<b>[UNDERVOLTAGE MGT]</b>		
<b>u S b</b>	<b>[UnderV. fault mgt]</b> Behavior of the drive in the event of an undervoltage.		<b>[Std fault] (0)</b>
<b>0</b>	<b>[Std fault] (0)</b> : The drive trips and the external fault signal is triggered (the fault relay assigned to <b>[No drive flt] (F L E)</b> will be opened)		
<b>1</b>	<b>[Flt wo relay] (1)</b> : The drive trips but the external fault signal is not triggered (the fault relay assigned to <b>[No drive flt] (F L E)</b> remains closed)		
<b>2</b>	<b>[Alarm] (2)</b> : Alarm and fault relay remain closed. The alarm can be assigned to a logic output or a relay		
<b>u r E 5</b>	<b>[Mains voltage]</b> Rated voltage of the supply mains in V. See <b>[Mains voltage] (u r E 5)</b> page 260	According to drive voltage rating	According to drive voltage rating
<b>u S L</b>	<b>[Undervoltage level]</b> Undervoltage fault level setting in Volts. The factory setting is determined by the drive voltage rating. See <b>[Undervoltage level] (u S L)</b> page 261	100 to 304 V	According to drive rating
<b>u S E</b>	<b>[Undervolt. time out]</b> Time delay for taking undervoltage detected fault into account.	0.2 s to 999.9 s	0.2 s
<b>S E P</b>	<b>[UnderV. prevention]</b> Behavior in the event of the undervoltage prevention level being reached.		<b>[No] (n o)</b>
<b>n o</b>	<b>[No] (n o)</b> : No action		
<b>n n 5</b>	<b>[DC Maintain] (n n 5)</b> : This stop mode uses the inertia to maintain the DC bus voltage as long as possible		
<b>r P P</b>	<b>[Ramp stop] (r P P)</b> : Stop following an adjustable ramp <b>[Max stop time] (S E P)</b>		
<b>L n F</b>	<b>[Lock-out] (L n F)</b> : Lock (freewheel stop) without error		
<b>E S P</b>	<b>[UnderV. restart tm]</b> Time delay before authorizing the restart after a complete stop for <b>[UnderV. prevention] (S E P)</b> = <b>[Ramp stop] (r P P)</b> , if the voltage has returned to normal.	1.0 s to 999.9 s	1.0 s
★ ( )			
<b>u P L</b>	<b>[Prevention level]</b> Undervoltage prevention level setting in Volts, which can be accessed if <b>[UnderV. prevention] (S E P)</b> is not <b>[No] (n o)</b> . The adjustment range and factory setting are determined by the drive voltage rating and the <b>[Mains voltage] (u r E 5)</b> value.	141 to 368 V	According to drive rating
★			
<b>S E P</b>	<b>[Max stop time]</b> Ramp time if <b>[UnderV. prevention] (S E P)</b> is set to <b>[Ramp stop] (r P P)</b> .	0.01 to 60.00 s	1.00 s
★ ( )			

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > FLT- > FLT-

Code	Name / Description	Adjustment range	Factory setting
5 b 5 ★ (↻)	<b>[DC bus maintain tm]</b> DC bus maintain time if <b>[UnderV. prevention]</b> (5 E P) is set to <b>[DC Maintain]</b> (P P 5).	1 to 9,999 s	9,999 s
FLT -	<b>[FAULT MANAGEMENT] (continued)</b>		
5 , 5 -	<b>[IGBT TESTS]</b>		
5 E r E n o Y E 5	<b>[IGBT test]</b> <b>[No] (n o)</b> : No test <b>[Yes] (Y E 5)</b> : The IGBTs are tested on power up and every time a run command is sent. These tests cause a slight delay (a few ms). In the event of a detected fault, the drive will lock. The following faults can be detected: - Drive output short-circuit (terminals U-V-W): SCF display. - IGBT inoperable: xtF, where x indicates the number of the IGBT concerned. - IGBT short-circuited: x2F, where x indicates the number of the IGBT concerned.		<b>[No] (n o)</b>
FLT -	<b>[FAULT MANAGEMENT] (continued)</b>		
LFL -	<b>[4-20mA LOSS]</b>		
LFL 3 n o Y E 5 5 E E L F F r L 5 r P P F 5 E d C i	<b>[AI3 4-20mA loss]</b> <b>[Ignore] (n o)</b> : Detected fault ignored. This is the only possible configuration if <b>[AI3 min. value]</b> (C r L 3) page 142 is not greater than 3 mA <b>[Freewheel] (Y E 5)</b> : Freewheel stop <b>[Per STT] (5 E E)</b> : Stop according to configuration of <b>[Type of stop]</b> (5 E E) page 182, without fault tripping. In this case, the fault relay does not open and the drive is ready to restart as soon as the detected fault disappears, according to the restart conditions of the active command channel (for example, according to <b>[2/3 wire control]</b> (E C E) and <b>[2 wire type]</b> (E C E) page 134 if control is via the terminals). Configuring an alarm for this detected fault is recommended (assigned to a logic output, for example) in order to indicate the cause of the stop <b>[Fallback spd] (L F F)</b> : Change to fallback speed, maintained as long as the detected fault persists and the run command has not been removed (1) <b>[Spd maint.] (r L 5)</b> : The drive maintains the speed being applied when the detected fault occurred, as long as the detected fault is present and the run command has not been removed (1) <b>[Ramp stop] (r P P)</b> : Stop on ramp <b>[Fast stop] (F 5 E)</b> : Fast stop <b>[DC injection] (d C i)</b> : DC injection stop. This type of stop cannot be used with certain other functions. See table on page 172		<b>[Ignore] (n o)</b>

(1) Because, in this case, the detected fault does not trigger a stop, it is recommended to assign a relay or logic output to its indication.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

Parameter can be accessed in **[Expert]** mode

Code	Name / Description	Adjustment range	Factory setting
<b>FLt -</b>	<b>[FAULT MANAGEMENT] (continued)</b>		
<b>INH -</b>	<b>[FAULT INHIBITION]</b>		
<b>INH</b>	<b>[Fault inhibit assign.]</b>		<b>[No] (no)</b>
  2 s	<p>In rare cases, the monitoring functions of the drive may be unwanted because they impede the purpose of the application. A typical example is a smoke extractor fan operating as a part of a fire protection system. If a fire occurs, the smoke extractor fan should operate as long as possible, even if, for example, the permissible ambient temperature of the drive is exceeded. In such applications, damage to or destruction of the device may be acceptable as collateral damage, for example, to keep other damage from occurring whose hazard potential is assessed to be more severe.</p> <p>A parameter is provided to disable certain monitoring functions in such applications so that automatic error detection and automatic error responses of the device are no longer active. You must implement alternative monitoring functions for disabled monitoring functions that allow operators and/or master control systems to adequately respond to conditions which correspond to detected errors.</p> <p>For example, if overtemperature monitoring of the drive is disabled, the drive of a smoke extractor fan may itself cause a fire if errors go undetected. An overtemperature condition can be, for example, signaled in a control room without the drive being stopped immediately and automatically by its internal monitoring functions.</p>		
	<div style="background-color: black; color: white; text-align: center; padding: 5px;"><b>⚠ DANGER</b></div> <p><b>MONITORING FUNCTIONS DISABLED, NO ERROR DETECTION</b></p> <ul style="list-style-type: none"> <li>• Only use this parameter after a thorough risk assessment in compliance with all regulations and standards that apply to the device and to the application.</li> <li>• Implement alternative monitoring functions for disabled monitoring functions that do not trigger automatic error responses of the drive, but allow for adequate, equivalent responses by other means in compliance with all applicable regulations and standards as well as the risk assessment.</li> <li>• Commission and test the system with the monitoring functions enabled.</li> <li>• During commissioning, verify that the drive and the system operate as intended by performing tests and simulations in a controlled environment under controlled conditions.</li> </ul> <p><b>Failure to follow these instructions will result in death or serious injury.</b></p>		
	<p>If the assigned input or bit is at 0, detected fault monitoring is active. If the assigned input or bit is at 1, fault monitoring is inactive. Active detected faults are cleared on a rising edge (change from 0 to 1) of the assigned input or bit.</p> <p><b>Note:</b> The Safe Torque Off function and any detected faults that help to prevent any form of operation are not affected by this function.</p> <p>Following faults can be inhibited:  <i>RnF, CnF, CoF, CrF I, dLF, EnF, EPF I, EPF2, FCF2, InFA, InFb, LFF3, obF, oHF, oLC, oLF, oPF I, oPF2, oSF, oEFL, PHF, PEF, SLF I, SLF2, SLF3, SoF, SPF, SSF, tJF, t nF</i> and <i>uLF</i>.</p> <p><b>no</b> [No] (no): Function inactive  <b>L I I</b> [LI1] (L I I): Logical input LI1                      ... [...] (...): See the assignment conditions on page <a href="#">162</a></p>		
<b>FLt -</b>	<b>[FAULT MANAGEMENT] (continued)</b>		
<b>CLL -</b>	<b>[COM. FAULT MANAGEMENT]</b>		
<b>CLL</b>	<b>[Network fault mgt]</b>		<b>[Freewheel] (YE5)</b>
	<div style="background-color: black; color: white; text-align: center; padding: 5px;"><b>⚠ WARNING</b></div> <p><b>LOSS OF CONTROL</b></p> <p>If this parameter is set to <b>[Ignore] (no)</b>, fieldbus module communication monitoring is disabled.</p> <ul style="list-style-type: none"> <li>• Only use this setting after a thorough risk assessment in compliance with all regulations and standards that apply to the device and to the application.</li> <li>• Only use this setting for tests during commissioning.</li> <li>• Verify that communication monitoring has been re-enabled before completing the commissioning procedure and performing the final commissioning test.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p>		

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > FLT- > CLL-

Code	Name / Description	Adjustment range	Factory setting
	Behavior of the drive in the event of a communication interruption with a communication card.		
<i>n o</i>	<b>[Ignore]</b> ( <i>n o</i> ): Detected fault ignored		
<i>y e s</i>	<b>[Freewheel]</b> ( <i>y e s</i> ): Freewheel stop		
<i>s t t</i>	<b>[Per STT]</b> ( <i>s t t</i> ): Stop according to configuration of <b>[Type of stop]</b> ( <i>s t t</i> ) page 182, without fault tripping. In this case, the fault relay does not open and the drive is ready to restart as soon as the detected fault disappears, according to the restart conditions of the active command channel (for example, according to <b>[2/3 wire control]</b> ( <i>t t t</i> ) and <b>[2 wire type]</b> ( <i>t t t</i> ) page 134 if control is via the terminals). Configuring an alarm for this detected fault is recommended (assigned to a logic output, for example) in order to indicate the cause of the stop		
<i>l f f</i>	<b>[Fallback spd]</b> ( <i>l f f</i> ): Change to fallback speed, maintained as long as the detected fault persists and the run command has not been removed (1)		
<i>r l s</i>	<b>[Spd maint.]</b> ( <i>r l s</i> ): The drive maintains the speed being applied when the detected fault occurred, as long as the detected fault is present and the run command has not been removed (1)		
<i>r n p</i>	<b>[Ramp stop]</b> ( <i>r n p</i> ): Stop on ramp		
<i>f s t</i>	<b>[Fast stop]</b> ( <i>f s t</i> ): Fast stop		
<i>d c i</i>	<b>[DC injection]</b> ( <i>d c i</i> ): DC injection stop. This type of stop cannot be used with certain other functions. See table on page 172		
<i>l o l</i>	<b>[CANopen fault mgt]</b>		<b>[Freewheel]</b> ( <i>y e s</i> )
<div style="border: 1px solid black; padding: 10px;"> <h2 style="margin: 0;">⚠ WARNING</h2> <p><b>LOSS OF CONTROL</b></p> <p>If this parameter is set to <b>[Ignore]</b> (<i>n o</i>), CANopen communication monitoring is disabled.</p> <ul style="list-style-type: none"> <li>Only use this setting after a thorough risk assessment in compliance with all regulations and standards that apply to the device and to the application.</li> <li>Only use this setting for tests during commissioning.</li> <li>Verify that communication monitoring has been re-enabled before completing the commissioning procedure and performing the final commissioning test.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div>			
	Behavior of the drive in the event of a communication interruption with integrated CANopen®.		
<i>n o</i>	<b>[Ignore]</b> ( <i>n o</i> ): Detected fault ignored		
<i>y e s</i>	<b>[Freewheel]</b> ( <i>y e s</i> ): Freewheel stop		
<i>s t t</i>	<b>[Per STT]</b> ( <i>s t t</i> ): Stop according to configuration of <b>[Type of stop]</b> ( <i>s t t</i> ) page 182, without fault tripping. In this case, the fault relay does not open and the drive is ready to restart as soon as the detected fault disappears, according to the restart conditions of the active command channel (for example, according to <b>[2/3 wire control]</b> ( <i>t t t</i> ) and <b>[2 wire type]</b> ( <i>t t t</i> ) page 134 if control is via the terminals). Configuring an alarm for this detected fault is recommended (assigned to a logic output, for example) in order to indicate the cause of the stop.		
<i>l f f</i>	<b>[fallback spd]</b> ( <i>l f f</i> ): Change to fallback speed, maintained as long as the detected fault persists and the run command has not been removed (1)		
<i>r l s</i>	<b>[Spd maint.]</b> ( <i>r l s</i> ): The drive maintains the speed being applied when the detected fault occurred, as long as the detected fault is present and the run command has not been removed (1)		
<i>r n p</i>	<b>[Ramp stop]</b> ( <i>r n p</i> ): Stop on ramp		
<i>f s t</i>	<b>[Fast stop]</b> ( <i>f s t</i> ): Fast stop		
<i>d c i</i>	<b>[DC injection]</b> ( <i>d c i</i> ): DC injection stop. This type of stop cannot be used with certain other functions. See table on page 174.		
<i>s l l</i>	<b>[Modbus fault mgt]</b>		<b>[Freewheel]</b> ( <i>y e s</i> )
<div style="border: 1px solid black; padding: 10px;"> <h2 style="margin: 0;">⚠ WARNING</h2> <p><b>LOSS OF CONTROL</b></p> <p>If this parameter is set to <b>[Ignore]</b> (<i>n o</i>), Modbus communication monitoring is disabled.</p> <ul style="list-style-type: none"> <li>Only use this setting after a thorough risk assessment in compliance with all regulations and standards that apply to the device and to the application.</li> <li>Only use this setting for tests during commissioning.</li> <li>Verify that communication monitoring has been re-enabled before completing the commissioning procedure and performing the final commissioning test.</li> </ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> </div>			

**Parameters described in this page can be accessed by:** DRI- > CONF > FULL > FLT- > SDD-

Code	Name / Description	Adjustment range	Factory setting
	Behavior of the drive in the event of a communication interruption with integrated Modbus.		
<i>no</i>	<b>[Ignore]</b> ( <i>no</i> ): Detected fault ignored		
<i>YES</i>	<b>[Freewheel]</b> ( <i>YES</i> ): Freewheel stop		
<i>STT</i>	<b>[Per STT]</b> ( <i>STT</i> ): Stop according to configuration of <b>[Type of stop]</b> ( <i>STT</i> ) page 182, without fault tripping. In this case, the fault relay does not open and the drive is ready to restart as soon as the detected fault disappears, according to the restart conditions of the active command channel (for example, according to <b>[2/3 wire control]</b> ( <i>2/3</i> ) and <b>[2 wire type]</b> ( <i>2</i> ) page 134 if control is via the terminals). Configuring an alarm for this detected fault is recommended (assigned to a logic output, for example) in order to indicate the cause of the stop.		
<i>LF</i>	<b>[fallback spd]</b> ( <i>LF</i> ): Change to fallback speed, maintained as long as the detected fault persists and the run command has not been removed (1)		
<i>RLS</i>	<b>[Spd maint.]</b> ( <i>RLS</i> ): The drive maintains the speed being applied when the detected fault occurred, as long as the detected fault is present and the run command has not been removed (1)		
<i>RPP</i>	<b>[Ramp stop]</b> ( <i>RPP</i> ): Stop on ramp		
<i>FST</i>	<b>[Fast stop]</b> ( <i>FST</i> ): Fast stop		
<i>DCI</i>	<b>[DC injection]</b> ( <i>DCI</i> ): DC injection stop. This type of stop cannot be used with certain other functions. See table on page 174.		
<b>FLT -</b>	<b>[FAULT MANAGEMENT] (continued)</b>		
<b>SDD -</b>	<b>[ENCODER FAULT]</b>		
<i>SDD</i>	<b>[Load slip detection]</b>		<b>[Yes]</b> ( <i>YES</i> )
	Load slip detection activation		
<i>no</i>	<b>[No]</b> ( <i>no</i> ): Detected fault ignored		
<i>YES</i>	<b>[Yes]</b> ( <i>YES</i> ): Freewheel stop		
	The event is triggered by comparison with the output frequency and the speed feedback according to the related parameters configuration <i>FRNF</i> , <i>LRNF</i> , <i>DRNF</i> and <i>TRNF</i> . The event is also triggered as soon as a RUN order is received, if the sign of the output frequency and the speed feedback are in opposite way during <i>TRNF</i> . In case of a detected fault, the drive switch to a freewheel stop, and if the brake logic control function has been configured, the brake command will be set to 0.		
<i>FRNF</i>	<b>[ANF Frequency Thd.]</b>		-
★	Visible if <b>[Encoder usage]</b> ( <i>ENU</i> ) is set to <b>[Fdbk monit.]</b> ( <i>SE</i> ). See page 144		
<i>LRNF</i>	<b>[ANF Detection level]</b>		-
★	Visible if <b>[Encoder usage]</b> ( <i>ENU</i> ) is set to <b>[Fdbk monit.]</b> ( <i>SE</i> ). See page 144		
<i>DRNF</i>	<b>[ANF Direction check]</b>		-
★	Visible if <b>[Encoder usage]</b> ( <i>ENU</i> ) is set to <b>[Fdbk monit.]</b> ( <i>SE</i> ). See page 145		
<i>TRNF</i>	<b>[ANF Time Thd.]</b>		-
★	Visible if <b>[Encoder usage]</b> ( <i>ENU</i> ) is set to <b>[Fdbk monit.]</b> ( <i>SE</i> ). See page 145		

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > FLT- > TID-

Code	Name / Description	Adjustment range	Factory setting
<b>τ, d -</b>	<b>[TORQUE OR I LIM. DETECT]</b>		
<b>SSb</b>	<b>[Trq/I limit. stop]</b> Behavior in the event of switching to torque or current limitation.		<b>[Ignore] (no)</b>
<b>no</b>	<b>[Ignore] (no)</b> : Detected fault ignored		
<b>YES</b>	<b>[Freewheel] (YES)</b> : Freewheel stop		
<b>Stt</b>	<b>[Per STT] (Stt)</b> : Stop according to configuration of <b>[Type of stop] (Stt)</b> page 182, without fault tripping. In this case, the fault relay does not open and the drive is ready to restart as soon as the detected fault disappears, according to the restart conditions of the active command channel (for example, according to <b>[2/3 wire control] (tct)</b> and <b>[2 wire type] (tct)</b> page 134 if control is via the terminals). Configuring an alarm for this detected fault is recommended (assigned to a logic output, for example) in order to indicate the cause of the stop		
<b>LFf</b>	<b>[fallback spd] (LFf)</b> : Change to fallback speed, maintained as long as the detected fault persists and the run command has not been removed (1)		
<b>rL5</b>	<b>[Spd maint.] (rL5)</b> : The drive maintains the speed being applied when the detected fault occurred, as long as the detected fault is present and the run command has not been removed (1)		
<b>rPP</b>	<b>[Ramp stop] (rPP)</b> : Stop on ramp		
<b>FSt</b>	<b>[Fast stop] (FSt)</b> : Fast stop		
<b>dC, i</b>	<b>[DC injection] (dC, i)</b> : DC injection stop. This type of stop cannot be used with certain other functions. See table on page 174		
<b>Sto</b>	<b>[Trq/I limit. time out]</b> (If <b>[Trq/I limit. stop] (SSb)</b> has been configured) Time delay for taking SSF limitation into account.	0 to 9,999 ms	1,000 ms

(1) Because, in this case, the detected fault does not trigger a stop, it is recommended to assign a relay or logic output to its indication.



Parameter that can be modified during operation or when stopped.




To change the assignment of this parameter, press the ENT key for 2 s.

### Use of the "Pulse input" input to measure the speed of rotation of the motor

This function uses the "Pulse input" input and can only be used if the "Pulse input" input is not being used for another function.

#### Example of use

An indexed disk driven by the motor and connected to a proximity sensor can be used to generate a frequency signal that is proportional to the speed of rotation of the motor.

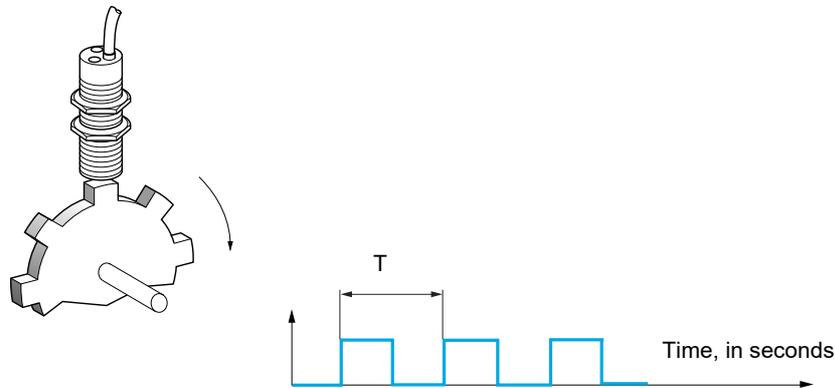

When applied to the "Pulse input" input, this signal supports:

- Measurement and display of the motor speed: signal frequency =  $1/T$ . This frequency is displayed by means of the **[Pulse in. work. freq.] (F 95)** parameter, page [58](#).
- Overspeed detection (if the measured speed exceeds a preset threshold, the drive will trigger an error).
- Brake failure detection, if brake logic control has been configured: If the speed does not drop sufficiently quickly following a command to engage the brake, the drive will trigger an error. This function can be used to detect worn brake linings.
- Detection of a speed threshold that can be adjusted using **[Pulse warning thd.] (F 9L)** page [110](#) and is assignable to a relay or logic output, see page [146](#).

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FLT- &gt; FQF-

Code	Name / Description	Adjustment range	Factory setting
<b>F L E -</b>	<b>[FAULT MANAGEMENT] (continued)</b>		
<b>F Q F -</b>	<b>[FREQUENCY METER]</b>		
<b>F Q F</b>	<b>[Frequency meter]</b> Activation of the speed measurement function.		<b>[No] (no)</b>
<b>no</b> <b>YES</b>	<b>[No] (no)</b> : Function inactive. In this case, none of the function parameters can be accessed <b>[Yes] (YES)</b> : Function active, assignment only possible if no other functions have been assigned to the "Pulse input" input		
<b>F Q C</b> <b>( )</b>	<b>[Pulse scal. divisor]</b> Scaling factor for the "Pulse input" input (divisor). The frequency measured is displayed by means of the <b>[Pulse in. work. freq.] (F Q S)</b> parameter, page <b>58</b> .	1.0 to 100.0	1.0
<b>F Q R</b>	<b>[Overspd. pulse thd.]</b> Activation and adjustment of overspeed monitoring: <b>[Overspeed] (S o F)</b> .		<b>[No] (no)</b>
<b>no</b> <b>-</b>	<b>[No] (no)</b> : No overspeed monitoring <b>1 Hz to 20.00 kHz</b> : Adjustment of the frequency tripping threshold on the "Pulse input" input divided by <b>[Pulse scal. divisor] (F Q C)</b> .		
<b>E d S</b>	<b>[Pulse overspd delay]</b> Time delay for taking overspeed detected fault into account.	0.0 s to 10.0 s	0.0 s
<b>F d E</b>	<b>[Level fr. pulse ctrl]</b> Activation and adjustment of monitoring for the Pulse input (speed feedback): <b>[Speed fdbck loss] (S P F)</b> .		<b>[No] (no)</b>
<b>no</b> <b>-</b>	<b>[No] (no)</b> : No monitoring of speed feedback <b>0.1 Hz to 599 Hz</b> : Adjustment of the motor frequency threshold for tripping a speed feedback detected fault (difference between the estimated frequency and the measured speed).		
<b>F Q E</b>	<b>[Pulse thd. wo Run]</b> Activation and adjustment of brake monitoring: <b>[Brake feedback] (b r F)</b> . If brake logic control <b>[Brake assignment] (b L C)</b> page <b>206</b> is not configured, this parameter is forced to <b>[No] (no)</b> .		<b>[No] (no)</b>
<b>no</b> <b>-</b>	<b>[No] (no)</b> : No brake monitoring <b>1 Hz to 1,000 Hz</b> : Adjustment of the motor frequency threshold.		
<b>E Q b</b>	<b>[Pulse wo Run delay]</b> Time delay for taking brake monitoring into account.	0.0 s to 10.0 s	0.0 s

**Load variation detection**

This detection is only possible with the High-speed hoisting function. It can be used to detect if an obstacle has been reached, triggering a sudden (upward) increase or (downward) decrease in the load.

Load variation detection triggers a **[Dynamic load fault] (dLF)**. The **[Dyn. load Mgt.] (dLb)** parameter can be used to configure the response of the drive in the event of this detected fault.

Load variation detection can also be assigned to a relay or a logic output.

There are two possible detection modes, depending on the configuration of high-speed hoisting:

- Speed reference mode  
**[High speed hoisting] (H5o)** page 216 is set to **[Speed ref] (55o)**.  
 Torque variation detection.  
 During high-speed operation, the load is compared to that measured during the speed step. The permissible load variation and its duration can be configured. If exceeded, the drive switches to fault mode.
- Current limitation mode  
**[High speed hoisting] (H5o)** page 216 is set to **[Current Limit] (C5o)**.  
 On ascend, during high-speed operation, an increase in load will result in a drop in speed. Even if high-speed operation has been activated, if the motor frequency drops below the **[I Limit Frequency] (5CL)** threshold page 217, the drive will switch to fault mode. The detection is realised only for a positive variation of the load and only in the high speed area (area upper to **[I Limit Frequency] (5CL)**).  
 On descend, operation takes the form of Speed reference mode.

Code	Name / Description	Adjustment range	Factory setting
<b>FLt-</b>	<b>[FAULT MANAGEMENT] (continued)</b>		
<b>dLd-</b>	<b>[DYNAMIC LOAD DETECT.]</b> Load variation detection. This can be accessed if <b>[High speed hoisting] (H5o)</b> page 216 is not <b>[No] (no)</b> .		
<b>tLd</b>	<b>[Dynamic load time]</b> Activation of load variation detection and adjustment of time delay for taking load variation detected fault <b>[Dynamic load fault] (dLF)</b> into account.		<b>[No] (no)</b>
<b>no</b> <b>-</b>	<b>[No] (no)</b> : No load variation detection <b>0.00 s to 10.00 s</b> : Adjustment of the time delay for taking detected fault into account. The time delay considered by the drive is multiplied by 2.		
<b>dLd</b>	<b>[Dynamic load threshold]</b> Adjustment of the threshold for load variation detection, as a % of the load measured during the speed step.	1 to 100%	100%
<b>dLb</b>	<b>[Dyn. load Mgt.]</b> Behavior of the drive in the event of a load variation detected fault.		<b>[Freewheel] (Y E 5)</b>
<b>no</b>	<b>[Ignore] (no)</b> : Detected fault ignored		
<b>Y E 5</b>	<b>[Freewheel] (Y E 5)</b> : Freewheel stop		
<b>5 t t</b>	<b>[Per STT] (5 t t)</b> : Stop according to configuration of <b>[Type of stop] (5 t t)</b> page 182, without tripping. In this case, the fault relay does not open and the drive is ready to restart as soon as the detected fault disappears, according to the restart conditions of the active command channel, (for example, according to <b>[2/3 wire control] (t t t)</b> and <b>[2 wire type] (t t t)</b> page 134 if control is via the terminals). Configuring an alarm for this detected fault is recommended (assigned to a logic output, for example) in order to indicate the cause of the stop		
<b>L F F</b>	<b>[Fallback spd.] (L F F)</b> : Change to fallback speed, maintained as long as the detected fault persists and the run command has not been removed (1)		
<b>r L 5</b>	<b>[Spd maint.] (r L 5)</b> : The drive maintains the speed at the time the detected fault occurred, as long as the detected fault persists and the run command has not been removed (1)		
<b>r P P</b>	<b>[Ramp stop] (r P P)</b> : Stop on ramp		
<b>F 5 t</b>	<b>[Fast stop] (F 5 t)</b> : Fast stop		

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FLT- &gt; TNF-

Code	Name / Description	Adjustment range	Factory setting
<i>FLt-</i>	<b>[FAULT MANAGEMENT] (continued)</b>		
<i>t n F -</i>	<b>[AUTO TUNING FAULT]</b>		
<i>t n L</i>	<b>[Autotune fault mgt]</b>		<b>[Freewheel] (YES)</b>
	<i>no</i> <b>[Ignore] (no)</b> : Detected fault ignored		
	<i>YES</i> <b>[Freewheel] (YES)</b> : Freewheel stop		

(1) Because, in this case, the detected fault does not trigger a stop, it is recommended to assign a relay or logic output to its indication.



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

**Card pairing**

Function can only be accessed in **[Expert] (E P r)** mode.

This function is used to detect whenever a card has been replaced or the software has been modified in any way.

When a pairing password is entered, the parameters of the card currently inserted are stored. On every subsequent power-up, these parameters are verified and, in the event of a discrepancy, the drive locks in HCF fault mode. Before the drive can be restarted, you must revert to the original situation or re-enter the pairing password.

The following parameters are verified:

- The type of card for: all cards.
- The software version for: the control block, the communication cards.
- The serial number for: the control block.

Code	Name / Description	Adjustment range	Factory setting
<i>FLt -</i>	<b>[FAULT MANAGEMENT] (continued)</b>		
<i>PP i -</i>	<b>[CARDS PAIRING]</b>		
<i>PP i</i> ★	<b>[Pairing password]</b>	<b>[OFF] (o F F)</b> to 9,999	<b>[OFF] (o F F)</b>
<i>o F F</i> -	The <b>[OFF] (o F F)</b> value signifies that the card pairing function is inactive The <b>[ON] (o n)</b> value signifies that card pairing is active and that an access code must be entered in order to start the drive in the event of a card pairing detected fault As soon as the code has been entered, the drive is unlocked and the code changes to <b>[ON] (o n)</b> . The PPI code is an unlock code known only to Schneider Electric Product Support.		

★

These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

Parameters described in this page can be accessed by:


DRI- > CONF > FULL > COMM- > ULD-

**Process underload detected fault**

A process underload is detected when the next event occurs and remains pending for a minimum time [Unld T. Del. Detect] (uL t), which is configurable:

- The motor is in steady state and the torque is below the set underload limit ([Unld. Thr. 0. Speed.] (L u L), [Unld. Thr. Nom. Speed.] (L u n), [Unld. Freq. Thr. Det.] (r n u d) parameters).
- The motor is in steady state when the offset between the frequency reference and motor frequency falls below the configurable threshold [Hysteresis Freq. Att.] (S r b).

Torque as a % of the rated torque

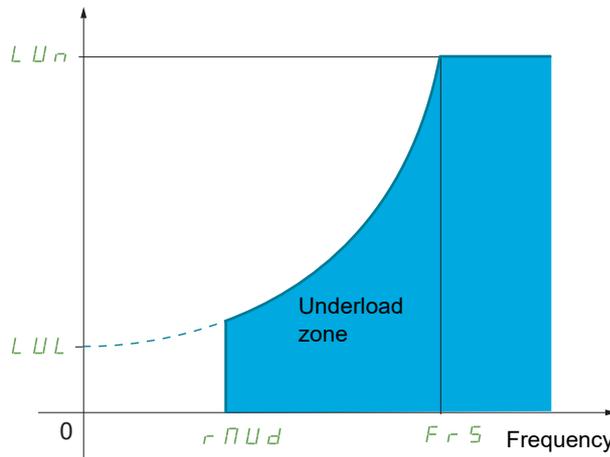

Between zero frequency and the rated frequency, the curve reflects the following equation:

$$\text{torque} = L u L + \frac{(L u n - L u L) \times (\text{frequency})^2}{(\text{rated frequency})^2}$$

The underload function is not active for frequencies below [Unld. Freq. Thr. Det.] (r n u d).

A relay or a logic output can be assigned to the signaling of this detected fault in the [INPUTS / OUTPUTS CFG] (i - o -) menu.

Code	Name / Description	Adjustment range	Factory setting
<b>FL t -</b>	<b>[FAULT MANAGEMENT] (continued)</b>		
<b>uL d -</b>	<b>[PROCESS UNDERLOAD]</b>		
<b>uL t</b>	<b>[Unld T. Del. Detect.]</b> Underload detection time delay. A value of 0 deactivates the function and makes the other parameters inaccessible.	0 to 100 s	0 s
<b>L u n</b> ★ ( )	<b>[Unld. Thr. Nom. Speed.]</b> Underload threshold at rated motor frequency ([Rated motor freq.] (F r 5) page 95), as a % of the rated motor torque.	20 to 100%	60%
<b>L u L</b> ★ ( )	<b>[Unld. Thr. 0. Speed.]</b> Underload threshold at zero frequency, as a % of the rated motor torque.	0 to [Unld.Thr.Nom.Speed] (L u n)	0%
<b>r n u d</b> ★ ( )	<b>[Unld. Freq. Thr. Det.]</b> Minimum frequency underload detection threshold.	0 to 599 Hz	0 Hz

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > FLT- > ULD-

Code	Name / Description	Adjustment range	Factory setting
<p><i>S r b</i></p> <p>★</p> <p>(↻)</p>	<p><b>[Hysteresis Freq. Att.]</b></p> <p>Maximum deviation between the frequency reference and the motor frequency, which defines steady state operation.</p>	0.3 to 599 Hz	0.3 Hz
<p><i>u d L</i></p> <p>★</p> <p><i>n o</i></p> <p><i>Y E S</i></p> <p><i>r P P</i></p> <p><i>F S t</i></p>	<p><b>[Underload Managmt.]</b></p> <p>Behavior on switching to underload detection.</p> <p><b>[Ignore] (n o)</b>: Detected fault ignored</p> <p><b>[Freewheel] (Y E S)</b>: Freewheel stop</p> <p><b>[Ramp stop] (r P P)</b>: Stop on ramp</p> <p><b>[Fast stop] (F S t)</b>: Fast stop</p>		<b>[Freewheel] (Y E S)</b>
<p><i>F t u</i></p> <p>★</p> <p>(↻)</p>	<p><b>[Underload T.B. Rest.]</b></p> <p>This parameter cannot be accessed if <b>[Underload Mangmt.] (u d L)</b> is set to <b>[Ignore] (n o)</b>.</p> <p>Minimum time permitted between an underload being detected and any automatic restart.</p> <p>In order to allow an automatic restart, the value of <b>[Max. restart time] (t P r)</b> page 266 must exceed this parameter by at least one minute.</p>	0 to 6 min	0 min

★ These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

(↻) Parameter that can be modified during operation or when stopped.

Parameters described in this page can be accessed by:

DRI- > CONF > FULL > FLT- > OLD-

**Process overload detected fault**

A process overload is detected when the next event occurs and remains pending for a minimum time **[Ovld Time Detect.] (t o L)**, which is configurable:

- The drive is in current limitation mode.
- The motor is in steady state and the current is above the set overload threshold **[Ovld Detection Thr.] (L o C)**.

The motor is in steady state when the offset between the frequency reference and motor frequency falls below the configurable threshold **[Hysteresis Freq. Att.] (S r b)**.

A relay or a logic output can be assigned to the signaling of this detected fault in the **[INPUTS / OUTPUTS CFG] (i - o-)** menu.

Code	Name / Description	Adjustment range	Factory setting
<b>FLt -</b>	<b>[FAULT MANAGEMENT] (continued)</b>		
<b>o L d -</b>	<b>[PROCESS OVERLOAD]</b>		
<b>t o L</b>	<b>[Ovld Time Detect.]</b> Overload detection time delay. A value of 0 deactivates the function and makes the other parameters inaccessible.	0 to 100 s	0 s
<b>L o C</b> ★ (1)	<b>[Ovld Detection Thr.]</b> Overload detection threshold, as a % of the rated motor current <b>[Rated mot. current] (n C r)</b> page 94. This value must be less than the limit current in order for the function to work.	70 to 150%	110%
<b>S r b</b> ★ (1)	<b>[Hysteresis Freq.Att.]</b> Maximum deviation between the frequency reference and the motor frequency, which defines steady state operation.	0 to 599 Hz	0.3 Hz
<b>o d L</b> ★	<b>[Ovld.Proces.Mngmt]</b> Behavior on switching to overload detection.  no <b>[Ignore] (no)</b> : Detected fault ignored y E S <b>[Freewheel] (y E S)</b> : Freewheel stop r P P <b>[Ramp stop] (r P P)</b> : Stop on ramp F S t <b>[Fast stop] (F S t)</b> : Fast stop		<b>[Freewheel] (y E S)</b>
<b>F t o</b> ★ (1)	<b>[Overload T.B.Rest.]</b> This parameter cannot be accessed if <b>[Ovld.Proces.Mngmt] (o d L)</b> is set to <b>[Ignore] (no)</b> . Minimum time permitted between an overload being detected and any automatic restart. In order to allow an automatic restart, the value of <b>[Max. restart time] (t R r)</b> page 266 must exceed this parameter by at least one minute.	0 to 6 min	0 min
<b>FLt -</b>	<b>[FAULT MANAGEMENT] (continued)</b>		
<b>L F F -</b>	<b>[FALLBACK SPEED]</b>		
<b>L F F</b>	<b>[Fallback speed]</b> Selection of the fallback speed.	0 to 599 Hz	0 Hz
<b>FLt -</b>	<b>[FAULT MANAGEMENT] (continued)</b>		
<b>F S t -</b>	<b>[RAMP DIVIDER]</b>		
<b>d C F</b> ★ (1)	<b>[Ramp divider]</b> The ramp that is enabled ( <b>[Deceleration] (d E C)</b> or <b>[Deceleration 2] (d E 2)</b> ) is then divided by this coefficient when stop requests are sent. Value 0 corresponds to a minimum ramp time.	0 to 10	4

Code	Name / Description	Adjustment range	Factory setting
<i>FLt-</i>	<b>[FAULT MANAGEMENT]</b> (continued)		
<i>dCi-</i>	<b>[DC INJECTION]</b>		
<i>i d C</i>	<b>[DC inject. level 1]</b>	0.1 to 1.41 ln (2)	0.64 ln (2)
  (1) (3)	<b>NOTICE</b>		
	<p><b>OVERHEATING</b>                      Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time.  <b>Failure to follow these instructions can result in equipment damage.</b></p>		
Level of DC injection braking current activated via logic input or selected as stop mode.			
<i>t d i</i>	<b>[DC injection time 1]</b>	0.1 to 30 s	0.5 s
  (1) (3)	<b>NOTICE</b>		
	<p><b>OVERHEATING</b>                      Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time.  <b>Failure to follow these instructions can result in equipment damage.</b></p>		
Maximum current injection time <b>[DC inject. level 1]</b> ( <i>i d C</i> ). After this time, the injection current becomes <b>[DC inject. level 2]</b> ( <i>i d C 2</i> ).			
<i>i d C 2</i>	<b>[DC inject. level 2]</b>	0.1 ln (2) to <b>[DC inject. level 1]</b> ( <i>i d C</i> )	0.5 ln (2)
  (1) (3)	<b>NOTICE</b>		
	<p><b>OVERHEATING</b>                      Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time.  <b>Failure to follow these instructions can result in equipment damage.</b></p>		
Injection current activated by logic input or selected as stop mode, once period of time <b>[DC injection time 1]</b> ( <i>t d i</i> ) has elapsed.			

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FLT- &gt; DCI-

Code	Name / Description	Adjustment range	Factory setting
<i>EdC</i>	<b>[DC injection time 2]</b>	0.1 to 30 s	0.5 s
★ ↻ (1) (3)	<div style="border: 1px solid black; padding: 10px;"> <p style="text-align: center;"><b>NOTICE</b></p> <p><b>OVERHEATING</b> Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time. <b>Failure to follow these instructions can result in equipment damage.</b></p> <p>Maximum injection time <b>[DC inject. level 2]</b> (<i>i d C 2</i>) for injection, selected as stop mode only. This parameter can be accessed if <b>[Type of stop]</b> (<i>S E E</i>) is set to <b>[DC injection]</b> (<i>d C i</i>).</p> </div>		

(1) The parameter can also be accessed in the **[SETTINGS]** (*S E E -*) and **[APPLICATION FUNCT.]** (*F u n -*) menus.

(2) In corresponds to the rated drive current indicated in the Installation manual and on the drive nameplate.

(3) These settings are independent of the **[AUTO DC INJECTION]** (*A d C -*) function.




These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.



Parameter that can be modified during operation or when stopped.

**Communication**

**With integrated display terminal:**

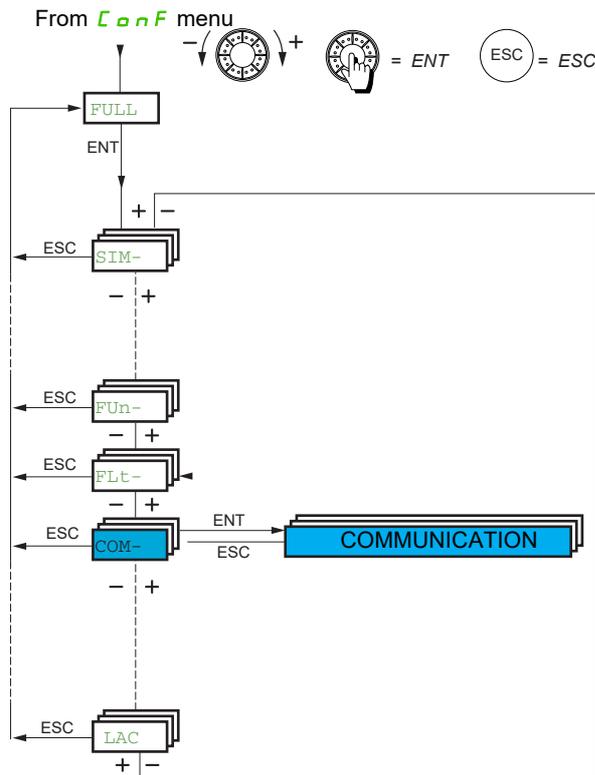

Code	Name / Description	Adjustment range	Factory setting
<b>F u L L</b>	<b>[FULL] (continued)</b>		
<b>C o m -</b>	<b>[COMMUNICATION]</b>		
<b>, C S -</b>	<b>[COM. SCANNER INPUT]</b> [Scan. IN1 address] ( <b>n P A 1</b> ) to [Scan. IN4 address] ( <b>n P A 4</b> ) could be used for Fast Task of the communication scanner (see Modbus & CANopen® communication manual).		
<b>n P A 1</b>	<b>[Scan. IN1 address]</b> Address of the 1st input word.		3,201
<b>n P A 2</b>	<b>[Scan. IN2 address]</b> Address of the 2nd input word.		8,604
<b>n P A 3</b>	<b>[Scan. IN3 address]</b> Address of the 3rd input word.		0
<b>n P A 4</b>	<b>[Scan. IN4 address]</b> Address of the 4th input word.		0
<b>n P A 5</b>	<b>[Scan. IN5 address]</b> Address of the 5th input word.		0
<b>n P A 6</b>	<b>[Scan. IN6 address]</b> Address of the 6th input word.		0
<b>n P A 7</b>	<b>[Scan. IN7 address]</b> Address of the 7th input word.		0
<b>n P A 8</b>	<b>[Scan. IN8 address]</b> Address of the 8th input word.		0

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FLT- &gt; OCS-

Code	Name / Description	Adjustment range	Factory setting
<b>C 0 1 -</b>	<b>[COMMUNICATION] (continued)</b>		
<b>0 C 5 -</b>	<b>[COM. SCANNER OUTPUT]</b> [Scan. Out1 address] (n C A 1) to [Scan. Out4 address] (n C A 4) could be used for Fast Task of the communication scanner (see Modbus & CANopen® communication manual).		
n C A 1	<b>[Scan.Out1 address]</b> Address of the 1st output word.		8,501
n C A 2	<b>[Scan.Out2 address]</b> Address of the 2nd output word.		8,602
n C A 3	<b>[Scan.Out3 address]</b> Address of the 3rd output word.		0
n C A 4	<b>[Scan.Out4 address]</b> Address of the 4th output word.		0
n C A 5	<b>[Scan.Out5 address]</b> Address of the 5th output word.		0
n C A 6	<b>[Scan.Out6 address]</b> Address of the 6th output word.		0
n C A 7	<b>[Scan.Out7 address]</b> Address of the 7th output word.		0
n C A 8	<b>[Scan.Out8 address]</b> Address of the 8th output word.		0
<b>C 0 1 -</b>	<b>[COMMUNICATION] (continued)</b>		
<b>1 d 1 -</b>	<b>[MODBUS NETWORK]</b>		
A d d 0 F F -	<b>[Modbus Address]</b> [OFF] (0 F F) 1 to 247	[OFF] (0 F F) to 247	[OFF] (0 F F)
A 1 0 C ★ 0 F F -	<b>[Modbus add Com. C.]</b> [OFF] (0 F F) 1 to 247	[OFF] (0 F F) to 247	[OFF] (0 F F)
b b r	<b>[Modbus baud rate]</b> 4 8 - 9 6 - 19 2 - 38 4 kbps on the integrated display terminal. 4800, 9600, 19200 or 38400 bauds on the graphic display terminal.		[19.2 Kbps] ( 1 9 2 )
b F 0	<b>[Modbus format]</b> 8O1 - 8E1 - 8n1, 8n2		[8-E-1] ( 8 E 1 )
b t 0	<b>[Modbus time out]</b> 0.1 to 30 s	0.1 to 30 s	10.0 s
<b>C 0 1 1</b>  r 0 t 0 r 0 t 1 r 1 t 0 r 1 t 1	<b>[Mdb com stat]</b>  [r0t0] (r 0 t 0): Modbus no reception, no transmission = communication idle [r0t1] (r 0 t 1): Modbus no reception, transmission [r1t0] (r 1 t 0): Modbus reception, no transmission [r1t1] (r 1 t 1): Modbus reception and transmission		



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

Code	Name / Description	Adjustment range	Factory setting
<b>C o n -</b>	<b>[COMMUNICATION] (continued)</b>		
<b>C n o -</b>	<b>[CANopen]</b>		
<b>A d C o</b> <b>o F F</b> <b>-</b>	<b>[CANopen address]</b>  [OFF] (o F F): OFF 1 to 127	[OFF] (o F F) to 127	[OFF] (o F F)
<b>b d C o</b> <b>5 0</b> <b>1 2 5</b> <b>2 5 0</b> <b>5 0 0</b> <b>1 0</b>	<b>[CANopen bit rate]</b>  [50 kbps] (5 0): 50,000 Bauds [125 kbps] (1 2 5): 125,000 Bauds [250 kbps] (2 5 0): 250,000 Bauds [500 kbps] (5 0 0): 500,000 Bauds [1 Mbps] (1 0): 1 MBauds		[250 kbps] (2 5 0)
<b>E r C o</b>	<b>[Error code]</b>  Read-only parameter, cannot be modified.	0 to 5	-
<b>C o n -</b>	<b>[COMMUNICATION] (continued)</b>		
<b>C b d -</b>	<b>[COMMUNICATION CARD]</b> See the specific documentation for the card used.		
<b>L C F -</b>	<b>[FORCED LOCAL]</b>		
<b>F L o</b>  <b>n o</b> <b>L , 1</b> <b>...</b> <b>L , 6</b> <b>L A , 1</b> <b>L A , 2</b> <b>o L O , 1</b> <b>...</b> <b>o L , 1 0</b>	<b>[Forced local assign.]</b>  Forced local assignment. Forced local mode is active when the input is at state 1. <b>[Forced local assign.] (F L o)</b> is forced to <b>[No] (n o)</b> if <b>[Profile] (C H C F)</b> is set to <b>[I/O profile] ( , o)</b> page <b>163</b> .  [No] (n o): Function inactive [L1] (L , 1): Logical input LI1 ... [LI6] (L , 6): Logical input LI6 [LA1] (L A , 1): Logical input AI1 [LA2] (L A , 2): Logical input AI2 [OL01] (o L O , 1): Function blocks: Logical Output 01 ... [OL10] (o L , 1 0): Function blocks: Logical Output 10		[No] (n o)
<b>F L o C</b>  <b>n o</b> <b>A , 1</b> <b>A , 2</b> <b>A , 3</b> <b>L C C</b>  <b>P ,</b> <b>o A O , 1</b> <b>...</b> <b>o A , 1 0</b>	<b>[Forced local Ref.]</b>  Forced local reference source assignment.  [No] (n o): Not assigned (control via the terminals with zero reference) [AI1] (A , 1): Analog input [AI2] (A , 2): Analog input [AI3] (A , 3): Analog input [HMI] (L C C): Assignment of the reference and command to the graphic display terminal or remote display terminal. Reference: <b>[HMI Frequency ref.] (L F r)</b> page <b>58</b> . Command: RUN/STOP/FWD/REV keys. [RP] (P , ): Pulse input [OA01] (o A O , 1): Function blocks: Analog Output 01 ... [OA10] (o A , 1 0): Function blocks: Analog Output 10		[No] (n o)
<b>F L o t</b>  ★	<b>[Time-out forc. local]</b>  0.1 to 30 s. This parameter can be accessed if <b>[Forced local assign.] (F L o)</b> is not set to <b>[No] (n o)</b> . Time delay before communication monitoring is resumed on leaving forced local mode.	0.1 to 30 s	10.0 s

Parameters described in this page can be accessed by:

DRI- &gt; CONF &gt; FULL &gt; FLT- &gt; COM-

Code	Name / Description	Adjustment range	Factory setting
<a href="#">C</a> <a href="#">a</a> <a href="#">P</a> -	<b>[COMMUNICATION] (continued)</b>		
<a href="#">n</a> <a href="#">b</a> <a href="#">i</a> <a href="#">d</a>	<b>[Fieldbus Identifier Sel]</b>		-
	<ul style="list-style-type: none"> <li>This parameter allows to the ATV320 drive to be identified as an ATV320 or an ATV32 drive by the network.</li> <li>The modification of the setting value is effective when you restart the drive.</li> <li>This parameter is not part of a drive configuration. This parameter cannot be transferred.</li> <li>A factory setting does not modify the setting value of this parameter.</li> </ul>		
<a href="#">320</a>	<a href="#">[ATV320]</a> ( <a href="#">320</a> ): Network identifies the drive as an ATV320.		
<a href="#">32</a>	<a href="#">[ATV32]</a> ( <a href="#">32</a> ): Network identifies the drive as an ATV32.		



These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

### Access Level

See [\[3.1 Access Level\]](#) ([L](#) [P](#) [C](#)) page [295](#).



# Interface (ItF)

6

---

## What's in this Chapter?

This chapter contains the following topics:


Topic	Page
Access Level (LAC)	<a href="#">295</a>
Language (LnG)	<a href="#">297</a>
Monitoring Configuration (MCF)	<a href="#">298</a>
Display configuration (dCF)	<a href="#">302</a>

Parameters described in this page can be accessed by:

ITF-

## Access Level (LAC)

With integrated display terminal:

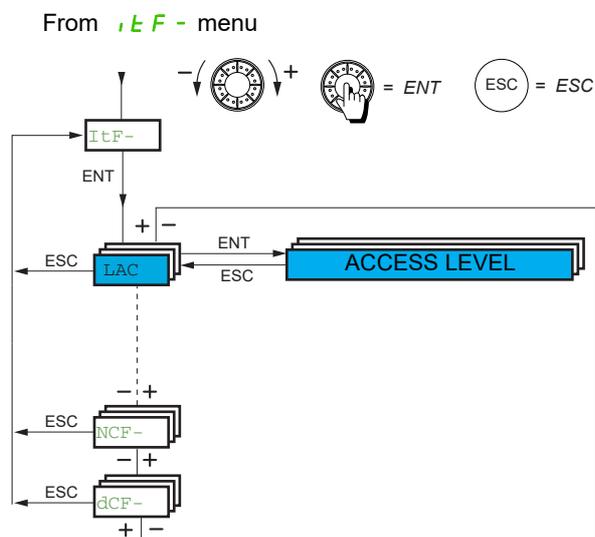

Code	Name / Description	Factory setting
<b>ITF-</b>	<b>[3 INTERFACE]</b>	
<b>LAC</b>	<b>[3.1 ACCESS LEVEL]</b>	<b>[Standard] (5Ed)</b>
<b>(C)</b>	<p><b>bAs</b> <b>[Basic] (bAs)</b>: Limited access to <b>[SIMPLY START] (5, n-)</b>, <b>[1.2 MONITORING] (Mon-)</b>, <b>[SETTINGS] (5Et-)</b>, <b>[FACTORY SETTINGS] (FCS-)</b>, <b>[5 PASSWORD] (Ed)</b> and <b>[3.1 ACCESS LEVEL] (LAC-)</b> menus. Only one function can be assigned to each input.</p> <p><b>5Ed</b> <b>[Standard] (5Ed)</b>: Access to all menus on the integrated display terminal. Only one function can be assigned to each input.</p> <p><b>Adv</b> <b>[Advanced] (Adv)</b>: Access to all menus on the integrated display terminal. Several functions can be assigned to each input.</p> <p><b>EP</b> <b>[Expert] (EP)</b>: Access to all menus on the integrated display terminal and access to additional parameters. Several functions can be assigned to each input.</p>	



Parameter that can be modified during operation or when stopped.

Comparison of the menus that can be accessed on the graphic display terminal/integrated display terminal

		Access level		
<b>[1 DRIVE MENU] (dr i-)</b>		Basic <b>BR5</b>		
	<b>[1.1 SPEED REFERENCE] (rEF-)</b>			
	<b>[1.2 MONITORING] (Ποπ-)</b>			
				ΠΠο - (Monitoring motor)
				ιοΠ - (I/O MAP)
				SΑF - (Monitoring Safety)
				ΠFb - (Monitoring Function Blocks)
				ΕΠΠ - (Communication Map)
				ΠP i- (Monitoring PI)
				PEE - (Monitoring Power time)
				ALr - (Alarms) (1)
				SSe - (Other state) (1)
				CoD - (Password)
	<b>[1.3 CONFIGURATION] (ΕοπF)</b>			
				ΠYΠπ - (My Menu)
		FLS - (Factory Settings)		
		FULL (Full)		
			S iΠ - (Simply Start)	
			SEe - (Settings)	
			FbΠ - (Function Blocks)	
<b>[2 IDENTIFICATION] (ο id-) (1)</b>		Standard <b>SEB</b>		
<b>[3 INTERFACE] ( iEF-) (1)</b>				
	<b>[3.1 ACCESS LEVEL] (LAC)</b>			
	<b>[3.2 LANGUAGE] (LNG)</b>			
<b>[4 OPEN / SAVE AS] (εrA-) (1)</b>				
<b>[5 PASSWORD] (CoD-) (1)</b>				
A single function can be assigned to each input.				
<b>[1 DRIVE MENU] (dr i-)</b>	<b>[1.2 MONITORING] (Ποπ-)</b>			dGε - (Diagnostics)
	<b>[1.3 CONFIGURATION] (ΕοπF)</b>			FULL (Full)
				drC - (Motor Control)
				ιοο - (Inputs / Outputs Configuration)
				εεL - (Command)
				Fυπ - (Application function)
				FLε - (Fault Management)
				CoΠ - (Communication)
<b>[3 INTERFACE] ( iEF-) (1)</b>	<b>[3.3 MONITORING CONFIG.] (ΠCF-)</b>			
A single function can be assigned to each input.				
	<b>[3.4 DISPLAY CONFIG.] (dCF-) (1)</b>			
Several functions can be assigned to each input.				
<b>Expert parameters</b>		Advanced <b>ADU</b>	Expert <b>EPF</b>	
Several functions can be assigned to each input.				

(1) Can be accessed only with graphic display terminal.

Parameters described in this page can be accessed by:

ITF-

## Language (LnG)

RDY	Term	+0.0 Hz	0.0 A
3.2 LANGUAGE			
English			
Français ✓			
Deutsch			
Español			
Italiano			
<<		>>	
Quick			
Chinese			
Русский			
Türkçe			

When only one selection is possible, the selection made is indicated by ✓

Example: Only one language can be chosen.


Code	Name / Description	Factory setting
<b>LnG</b>	<b>[3.2 LANGUAGE]</b>	<b>[Language 0] (LnG 0)</b>
<b>( )</b>	Current language index.	
<b>LnG 0</b>	<b>[Language 0] (LnG 0)</b>	
...	...	
<b>LnG 9</b>	<b>[Language 9] (LnG 9)</b>	




Parameter that can be modified during operation or when stopped.

## Monitoring Configuration (MCF)

This menu can only be accessed with the graphic display terminal.

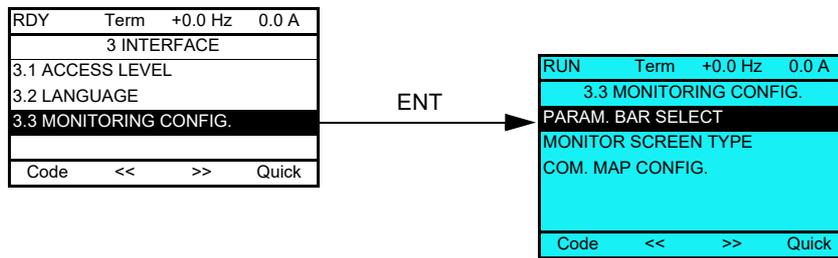

This can be used to configure the information displayed on the graphic display screen during operation.

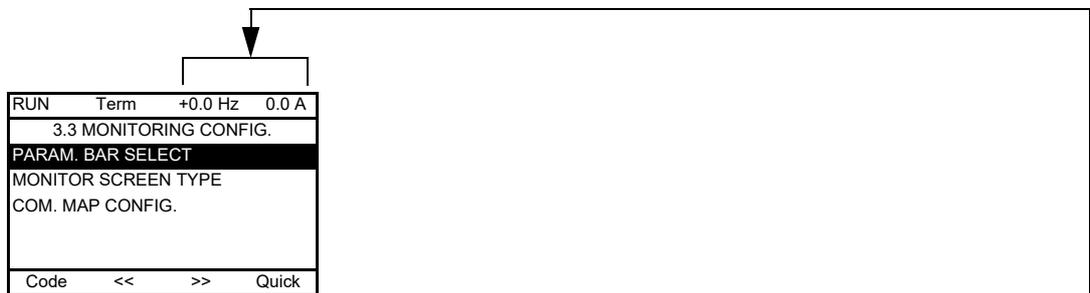

**[PARAM. BAR SELECT]:** Selection of 1 to 2 parameters displayed on the top line (the first 2 cannot be modified).

**[MONITOR SCREEN TYPE]:** Selection of parameters displayed in the centre of the screen and the display mode (digital values or bar graph format).

**[COM. MAP CONFIG.]:** Selection of the words displayed and their format.

Parameters described in this page can be accessed by:

ITF- &gt; MCF-

Code	Name / Description
<b>ΠCF -</b>	<b>[3.3 MONITORING CONFIG]</b>

Code	Name / Description																																																						
<b>Pb5 -</b>	<b>[PARAM. BAR SELECT]</b>																																																						
	<table border="0"> <tr> <td>[AI1]</td> <td>in V</td> </tr> <tr> <td>[AI2]</td> <td>in V</td> </tr> <tr> <td>[AI3]</td> <td>in mA</td> </tr> <tr> <td>[AO1]</td> <td>in V</td> </tr> <tr> <td>[ETA state world]</td> <td></td> </tr> <tr> <td>[Alarm groups]</td> <td></td> </tr> <tr> <td>[Frequency ref.]</td> <td>in Hz: parameter displayed in factory configuration</td> </tr> <tr> <td>[Output frequency]</td> <td>in Hz</td> </tr> <tr> <td>[Motor current]</td> <td>in A: parameter displayed in factory configuration</td> </tr> <tr> <td>[Motor speed]</td> <td>in rpm</td> </tr> <tr> <td>[Motor voltage]</td> <td>in V</td> </tr> <tr> <td>[Motor power]</td> <td>in W</td> </tr> <tr> <td>[Motor torque]</td> <td>as a %</td> </tr> <tr> <td>[Mains voltage]</td> <td>in V</td> </tr> <tr> <td>[Motor thermal state]</td> <td>as a %</td> </tr> <tr> <td>[Drv. thermal state]</td> <td>as a %</td> </tr> <tr> <td>[Consumption]</td> <td>in Wh or kWh depending on drive rating</td> </tr> <tr> <td>[Run time]</td> <td>in hours (length of time the motor has been switched on)</td> </tr> <tr> <td>[Power on time]</td> <td>in hours (length of time the drive has been switched on)</td> </tr> <tr> <td>[IGBT alarm counter]</td> <td>in seconds (total time of IGBT overheating alarms)</td> </tr> <tr> <td>[Min. freq time]</td> <td>in seconds</td> </tr> <tr> <td>[PID reference]</td> <td>as a %</td> </tr> <tr> <td>[PID feedback]</td> <td>as a %</td> </tr> <tr> <td>[PID error]</td> <td>as a %</td> </tr> <tr> <td>[PID Output]</td> <td>in Hz</td> </tr> <tr> <td>[Config. active]</td> <td>CNF0, 1 or 2 (see page <a href="#">245</a>)</td> </tr> <tr> <td>[Utilised param. set]</td> <td>SET1, 2 or 3 (see page <a href="#">243</a>)</td> </tr> </table>	[AI1]	in V	[AI2]	in V	[AI3]	in mA	[AO1]	in V	[ETA state world]		[Alarm groups]		[Frequency ref.]	in Hz: parameter displayed in factory configuration	[Output frequency]	in Hz	[Motor current]	in A: parameter displayed in factory configuration	[Motor speed]	in rpm	[Motor voltage]	in V	[Motor power]	in W	[Motor torque]	as a %	[Mains voltage]	in V	[Motor thermal state]	as a %	[Drv. thermal state]	as a %	[Consumption]	in Wh or kWh depending on drive rating	[Run time]	in hours (length of time the motor has been switched on)	[Power on time]	in hours (length of time the drive has been switched on)	[IGBT alarm counter]	in seconds (total time of IGBT overheating alarms)	[Min. freq time]	in seconds	[PID reference]	as a %	[PID feedback]	as a %	[PID error]	as a %	[PID Output]	in Hz	[Config. active]	CNF0, 1 or 2 (see page <a href="#">245</a> )	[Utilised param. set]	SET1, 2 or 3 (see page <a href="#">243</a> )
[AI1]	in V																																																						
[AI2]	in V																																																						
[AI3]	in mA																																																						
[AO1]	in V																																																						
[ETA state world]																																																							
[Alarm groups]																																																							
[Frequency ref.]	in Hz: parameter displayed in factory configuration																																																						
[Output frequency]	in Hz																																																						
[Motor current]	in A: parameter displayed in factory configuration																																																						
[Motor speed]	in rpm																																																						
[Motor voltage]	in V																																																						
[Motor power]	in W																																																						
[Motor torque]	as a %																																																						
[Mains voltage]	in V																																																						
[Motor thermal state]	as a %																																																						
[Drv. thermal state]	as a %																																																						
[Consumption]	in Wh or kWh depending on drive rating																																																						
[Run time]	in hours (length of time the motor has been switched on)																																																						
[Power on time]	in hours (length of time the drive has been switched on)																																																						
[IGBT alarm counter]	in seconds (total time of IGBT overheating alarms)																																																						
[Min. freq time]	in seconds																																																						
[PID reference]	as a %																																																						
[PID feedback]	as a %																																																						
[PID error]	as a %																																																						
[PID Output]	in Hz																																																						
[Config. active]	CNF0, 1 or 2 (see page <a href="#">245</a> )																																																						
[Utilised param. set]	SET1, 2 or 3 (see page <a href="#">243</a> )																																																						
	<p>Select the parameter using ENT (a <input checked="" type="checkbox"/> then appears next to the parameter). Parameter(s) can also be deselected using ENT. 1 or 2 parameters can be selected.</p> <p>Example:</p> <table border="1"> <thead> <tr> <th colspan="2">PARAM. BAR SELECT</th> </tr> <tr> <th colspan="2">MONITORING</th> </tr> </thead> <tbody> <tr> <td>-----</td> <td><input checked="" type="checkbox"/></td> </tr> <tr> <td>-----</td> <td><input type="checkbox"/></td> </tr> <tr> <td>-----</td> <td><input type="checkbox"/></td> </tr> <tr> <td>-----</td> <td><input checked="" type="checkbox"/></td> </tr> </tbody> </table>	PARAM. BAR SELECT		MONITORING		-----	<input checked="" type="checkbox"/>	-----	<input type="checkbox"/>	-----	<input type="checkbox"/>	-----	<input checked="" type="checkbox"/>																																										
PARAM. BAR SELECT																																																							
MONITORING																																																							
-----	<input checked="" type="checkbox"/>																																																						
-----	<input type="checkbox"/>																																																						
-----	<input type="checkbox"/>																																																						
-----	<input checked="" type="checkbox"/>																																																						

Monitor screen type

Code	Name / Description	Factory setting																																																																																																				
<b>Π 5 C -</b>	<b>[MONITOR SCREEN TYPE]</b>																																																																																																					
<b>Π d E</b>	<b>[Display value type]</b>	<b>[Digital] (d E C)</b>																																																																																																				
<b>( )</b>	<b>[Digital] (d E C)</b> <b>[Bar graph] (b A r)</b> <b>[List] (L i S t)</b>																																																																																																					
<b>Π P C</b>	<b>[PARAMETER SELECTION]</b>																																																																																																					
	<ul style="list-style-type: none"> <li>[AI1] in V</li> <li>[AI2] in V</li> <li>[AI3] in mA</li> <li>[AO1] in V</li> <li>[ETA state world]</li> <li>[Alarm groups]</li> <li>[Frequency ref.] in Hz: parameter displayed in factory configuration</li> <li>[Output frequency] in Hz</li> <li>[Pulse in. work. freq.] in A: parameter displayed in factory configuration</li> <li>[Motor current] in Hz</li> <li>[Motor speed] in rpm</li> <li>[Motor voltage] in V</li> <li>[Motor power] in W</li> <li>[Motor torque] as a %</li> <li>[Mains voltage] in V</li> <li>[Motor thermal state] as a %</li> <li>[Drv. thermal state] as a %</li> <li>[Consumption] in Wh or kWh depending on drive rating</li> <li>[Run time] in hours (length of time the motor has been switched on)</li> <li>[Power on time] in hours (length of time the drive has been switched on)</li> <li>[IGBT alarm counter] in seconds (total time of IGBT overheating alarms)</li> <li>[Min. freq time] in seconds</li> <li>[PID reference] as a %</li> <li>[PID feedback] as a %</li> <li>[PID error] as a %</li> <li>[PID Output] in Hz</li> </ul>																																																																																																					
★	<p>Select the parameter(s) using ENT (a ✓ then appears next to the parameter). Parameter(s) can also be deselected using ENT.</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th colspan="2">PARAMETER SELECTION</th> </tr> <tr> <th colspan="2">MONITORING</th> </tr> </thead> <tbody> <tr> <td>-----</td> <td style="text-align: right;">✓</td> </tr> <tr> <td>-----</td> <td></td> </tr> <tr> <td>-----</td> <td></td> </tr> <tr> <td>-----</td> <td style="text-align: right;">✓</td> </tr> </tbody> </table> <p>Examples include:</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Display of 2 digital values</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>RUN</th> <th>Term</th> <th>+35.0 Hz</th> <th>80.0 A</th> </tr> </thead> <tbody> <tr> <td colspan="4" style="text-align: center;">Motor speed</td> </tr> <tr> <td colspan="4" style="text-align: center; font-size: 1.2em;">1250 rpm</td> </tr> <tr> <td colspan="4" style="text-align: center;">Motor current</td> </tr> <tr> <td colspan="4" style="text-align: center; font-size: 1.2em;">80 A</td> </tr> <tr> <td colspan="4" style="text-align: right;">Quick</td> </tr> </tbody> </table> </div> <div style="text-align: center;"> <p>Display of 2 bar graphs</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>RUN</th> <th>Term</th> <th>+35.0 Hz</th> <th>80.0 A</th> </tr> </thead> <tbody> <tr> <td>Min</td> <td>Motor speed</td> <td colspan="2">max</td> </tr> <tr> <td>0</td> <td>1250 rpm</td> <td colspan="2">1500</td> </tr> <tr> <td colspan="4" style="text-align: center;"> </td> </tr> <tr> <td>Min</td> <td>Motor current</td> <td colspan="2">max</td> </tr> <tr> <td>0</td> <td>80 A</td> <td colspan="2">150</td> </tr> <tr> <td colspan="4" style="text-align: center;"> </td> </tr> <tr> <td colspan="4" style="text-align: right;">Quick</td> </tr> </tbody> </table> </div> <div style="text-align: center;"> <p>Display of a list of 5 values</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>RUN</th> <th>Term</th> <th>+35.0 Hz</th> <th>80.0 A</th> </tr> </thead> <tbody> <tr> <td colspan="4" style="text-align: center;">1.2 MONITORING</td> </tr> <tr> <td>Frequency ref.</td> <td>:</td> <td colspan="2">50.1Hz</td> </tr> <tr> <td>Motor current:</td> <td colspan="3">80 A</td> </tr> <tr> <td>Motor speed:</td> <td colspan="3">1250 rpm</td> </tr> <tr> <td>Motor thermal state:</td> <td colspan="3">80%</td> </tr> <tr> <td>Drv thermal state</td> <td>:</td> <td colspan="2">80%</td> </tr> <tr> <td colspan="4" style="text-align: right;">Quick</td> </tr> </tbody> </table> </div> </div>	PARAMETER SELECTION		MONITORING		-----	✓	-----		-----		-----	✓	RUN	Term	+35.0 Hz	80.0 A	Motor speed				1250 rpm				Motor current				80 A				Quick				RUN	Term	+35.0 Hz	80.0 A	Min	Motor speed	max		0	1250 rpm	1500						Min	Motor current	max		0	80 A	150						Quick				RUN	Term	+35.0 Hz	80.0 A	1.2 MONITORING				Frequency ref.	:	50.1Hz		Motor current:	80 A			Motor speed:	1250 rpm			Motor thermal state:	80%			Drv thermal state	:	80%		Quick				
PARAMETER SELECTION																																																																																																						
MONITORING																																																																																																						
-----	✓																																																																																																					
-----																																																																																																						
-----																																																																																																						
-----	✓																																																																																																					
RUN	Term	+35.0 Hz	80.0 A																																																																																																			
Motor speed																																																																																																						
1250 rpm																																																																																																						
Motor current																																																																																																						
80 A																																																																																																						
Quick																																																																																																						
RUN	Term	+35.0 Hz	80.0 A																																																																																																			
Min	Motor speed	max																																																																																																				
0	1250 rpm	1500																																																																																																				
Min	Motor current	max																																																																																																				
0	80 A	150																																																																																																				
Quick																																																																																																						
RUN	Term	+35.0 Hz	80.0 A																																																																																																			
1.2 MONITORING																																																																																																						
Frequency ref.	:	50.1Hz																																																																																																				
Motor current:	80 A																																																																																																					
Motor speed:	1250 rpm																																																																																																					
Motor thermal state:	80%																																																																																																					
Drv thermal state	:	80%																																																																																																				
Quick																																																																																																						

★ These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.

( ) Parameter that can be modified during operation or when stopped.

Parameters described in this page can be accessed by:

ITF- &gt; MCF- &gt; ADL-

## Communication map configuration


Code	Name / Description	Factory setting																								
<b>ADL -</b>	<b>[COM. MAP CONFIG.]</b>																									
<b>AD1</b> 	<b>[Word 1 add. select.]</b> Select the address of the word to be displayed by pressing the << and >> (F2 and F3) keys and rotating the jog dial.	0																								
<b>FAD1</b> 	<b>[Format word 1]</b> Format of word 1.  HE [Hex] (HE ) S,G [Signed] (S,G) nSG [Unsigned] (nSG)	[Hex] (HE )																								
<b>AD2</b> 	<b>[Word 2 add. select.]</b> Select the address of the word to be displayed by pressing the << and >> (F2 and F3) keys and rotating the jog dial.	0																								
<b>FAD2</b> 	<b>[Format word 2]</b> Format of word 2.  HE [Hex] (HE ) S,G [Signed] (S,G) nSG [Unsigned] (nSG)	[Hex] (HE )																								
<b>AD3</b> 	<b>[Word 3 add. select.]</b> Select the address of the word to be displayed by pressing the << and >> (F2 and F3) keys and rotating the jog dial.	0																								
<b>FAD3</b> 	<b>[Format word 3]</b> Format of word 3.  HE [Hex] (HE ) S,G [Signed] (S,G) nSG [Unsigned] (nSG)	[Hex] (HE )																								
<b>AD4</b> 	<b>[Word 4 add. select.]</b> Select the address of the word to be displayed by pressing the << and >> (F2 and F3) keys and rotating the jog dial.	0																								
<b>FAD4</b> 	<b>[Format word 4]</b> Format of word 4.  HE [Hex] (HE ) S,G [Signed] (S,G) nSG [Unsigned] (nSG)  Then, it will be possible to view the selected words in the <b>[COMMUNICATION MAP]</b> submenu of the <b>[1.2 MONITORING]</b> menu. Example:  <table border="1" data-bbox="247 1668 558 1870"> <tr> <td>RUN</td> <td>Term</td> <td>+35.0 Hz</td> <td>80.0 A</td> </tr> <tr> <td colspan="4" style="text-align: center;">COMMUNICATION MAP</td> </tr> <tr> <td colspan="4" style="text-align: center;">-----</td> </tr> <tr> <td colspan="4" style="text-align: center;">-----</td> </tr> <tr> <td>W3141:</td> <td>F230</td> <td>Hex</td> <td></td> </tr> <tr> <td colspan="4" style="text-align: center;">&lt;&lt; &gt;&gt; Quick</td> </tr> </table>	RUN	Term	+35.0 Hz	80.0 A	COMMUNICATION MAP				-----				-----				W3141:	F230	Hex		<< >> Quick				[Hex] (HE )
RUN	Term	+35.0 Hz	80.0 A																							
COMMUNICATION MAP																										
-----																										
-----																										
W3141:	F230	Hex																								
<< >> Quick																										



Parameter that can be modified during operation or when stopped.

## Display configuration (dCF)

This menu can only be accessed with the graphic display terminal. It can be used to customize parameters of a menu and to access parameters.

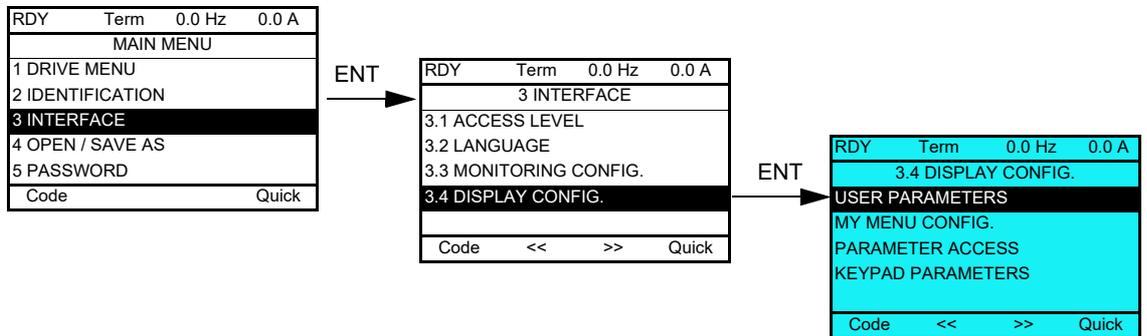


- USER PARAMETERS: Customization of 1 to 15 parameters.
- MY MENU: Creation of a customized menu.
- PARAMETER ACCESS: Customization of the visibility and protection mechanisms of menus and parameters.
- KEYPAD PARAMETERS: Adjustment of the contrast and stand-by mode of the graphic display terminal (parameters stored in the terminal rather than in the drive).

Code	Name / Description
dCF -	[3.4 DISPLAY CONFIG]

### User parameters

If **[Return std name]** is set to **[Yes]**, the display reverts to standard but the custom settings remain stored.

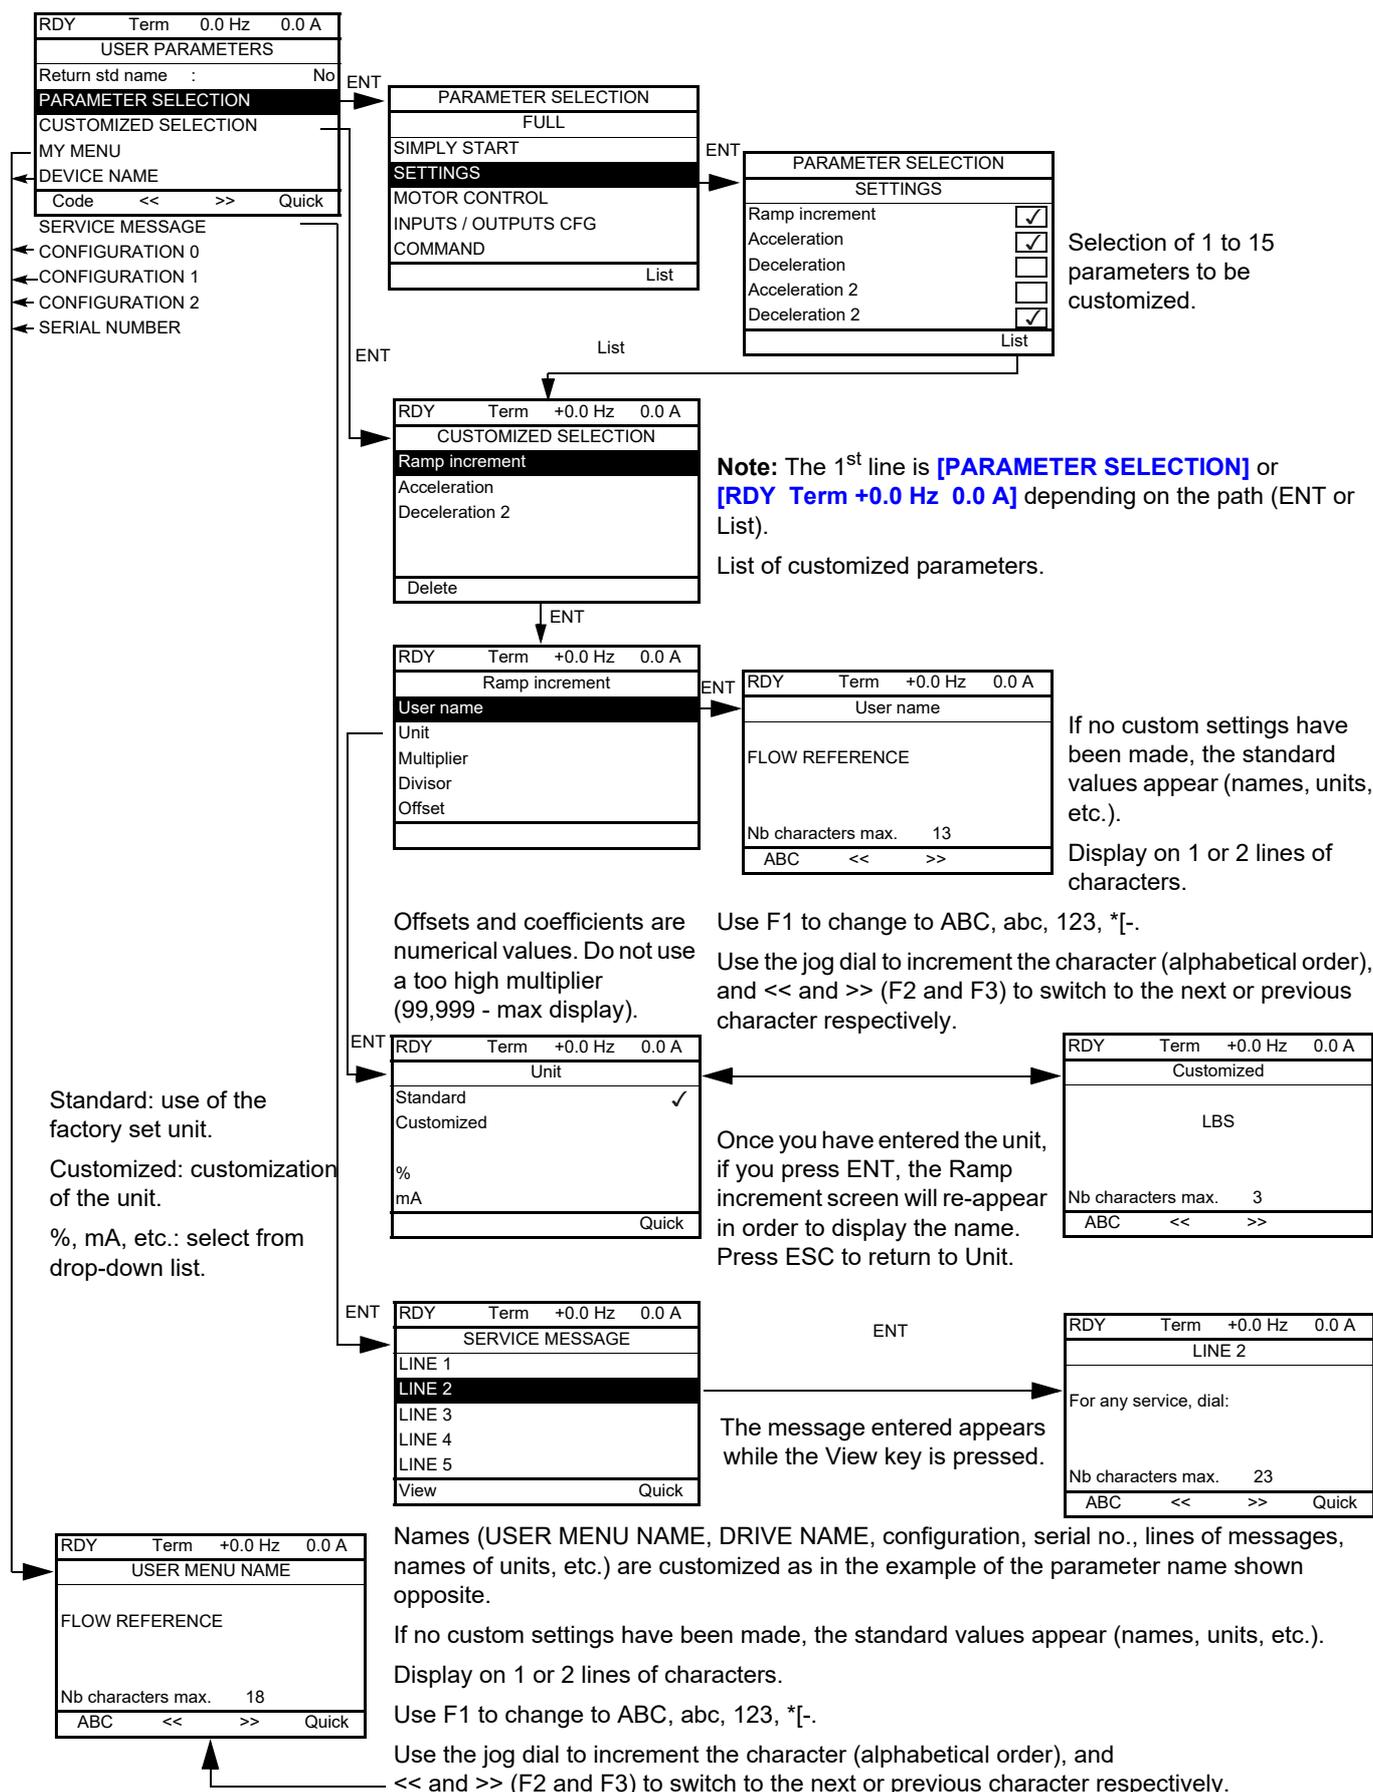

Parameters described in this page can be accessed by:


ITF- &gt; DCF- &gt; CUP-

Code	Name / Description	Factory setting
<b>CUP -</b>	<b>[USER PARAMETERS]</b>	
<b>GSP</b> 	<b>[Return std name]</b> Display standard parameters instead of customised ones.	<b>[No] (no)</b>
<b>no</b> <b>YES</b>	<b>[No] (no)</b> <b>[Yes] (YES)</b>	
<b>MYMN</b>	<b>[MY MENU]</b>	
<b>PAN</b>	<b>[DEVICE NAME]</b>	
<b>SER -</b>	<b>[SERVICE MESSAGE]</b>	
<b>SND01</b>	<b>[LINE 1]</b>	
<b>SND02</b>	<b>[LINE 2]</b>	
<b>SND03</b>	<b>[LINE 3]</b>	
<b>SND04</b>	<b>[LINE 4]</b>	
<b>SND05</b>	<b>[LINE 5]</b>	
<b>CF01</b>	<b>[CONFIGURATION 0]</b>	
<b>CF02</b>	<b>[CONFIGURATION 1]</b>	
<b>CF03</b>	<b>[CONFIGURATION 2]</b>	
<b>PSN</b>	<b>[SERIAL NUMBER]</b>	



Parameter that can be modified during operation or when stopped.

**My Menu config.**

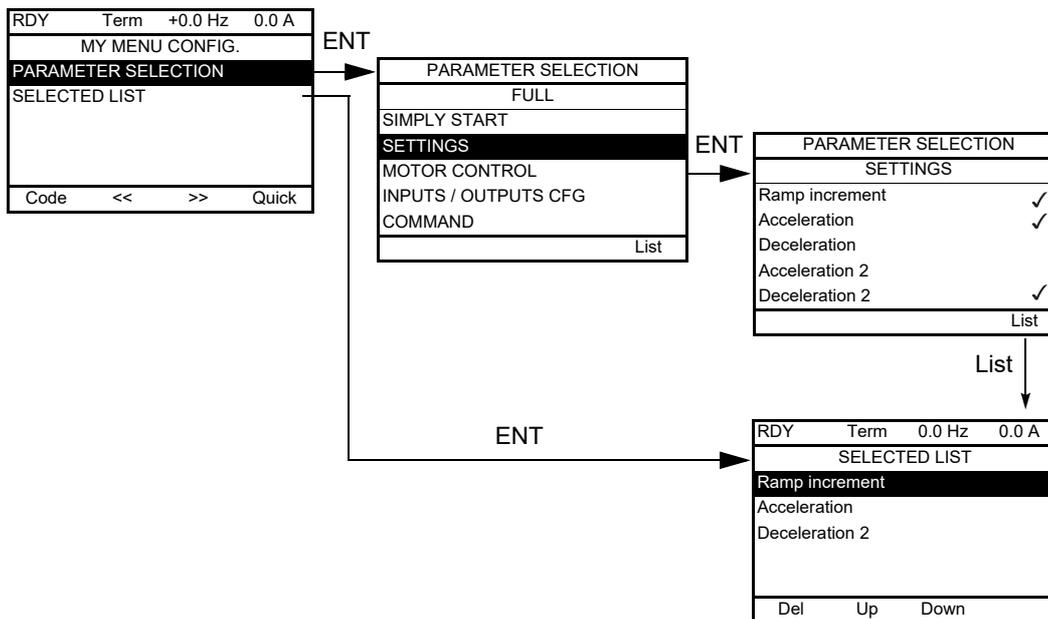

Selection of parameters included in the user menu.

**Note:** The 1st line is [PARAMETER SELECTION] or [RDY Term +0.0 Hz 0.0 A] depending on the path (ENT or List).


Parameter list making up the user menu.

Use the F2 and F3 keys to arrange the parameters in the list (example below using F3).

RDY	Term	+0.0 Hz	0.0 A
SELECTED LIST			
Acceleration			
Ramp increment			
Speed prop. gain			
Del	Up	Down	

Code	Name / Description
NYC -	[MY MENU CONFIG.]

**Parameter access**

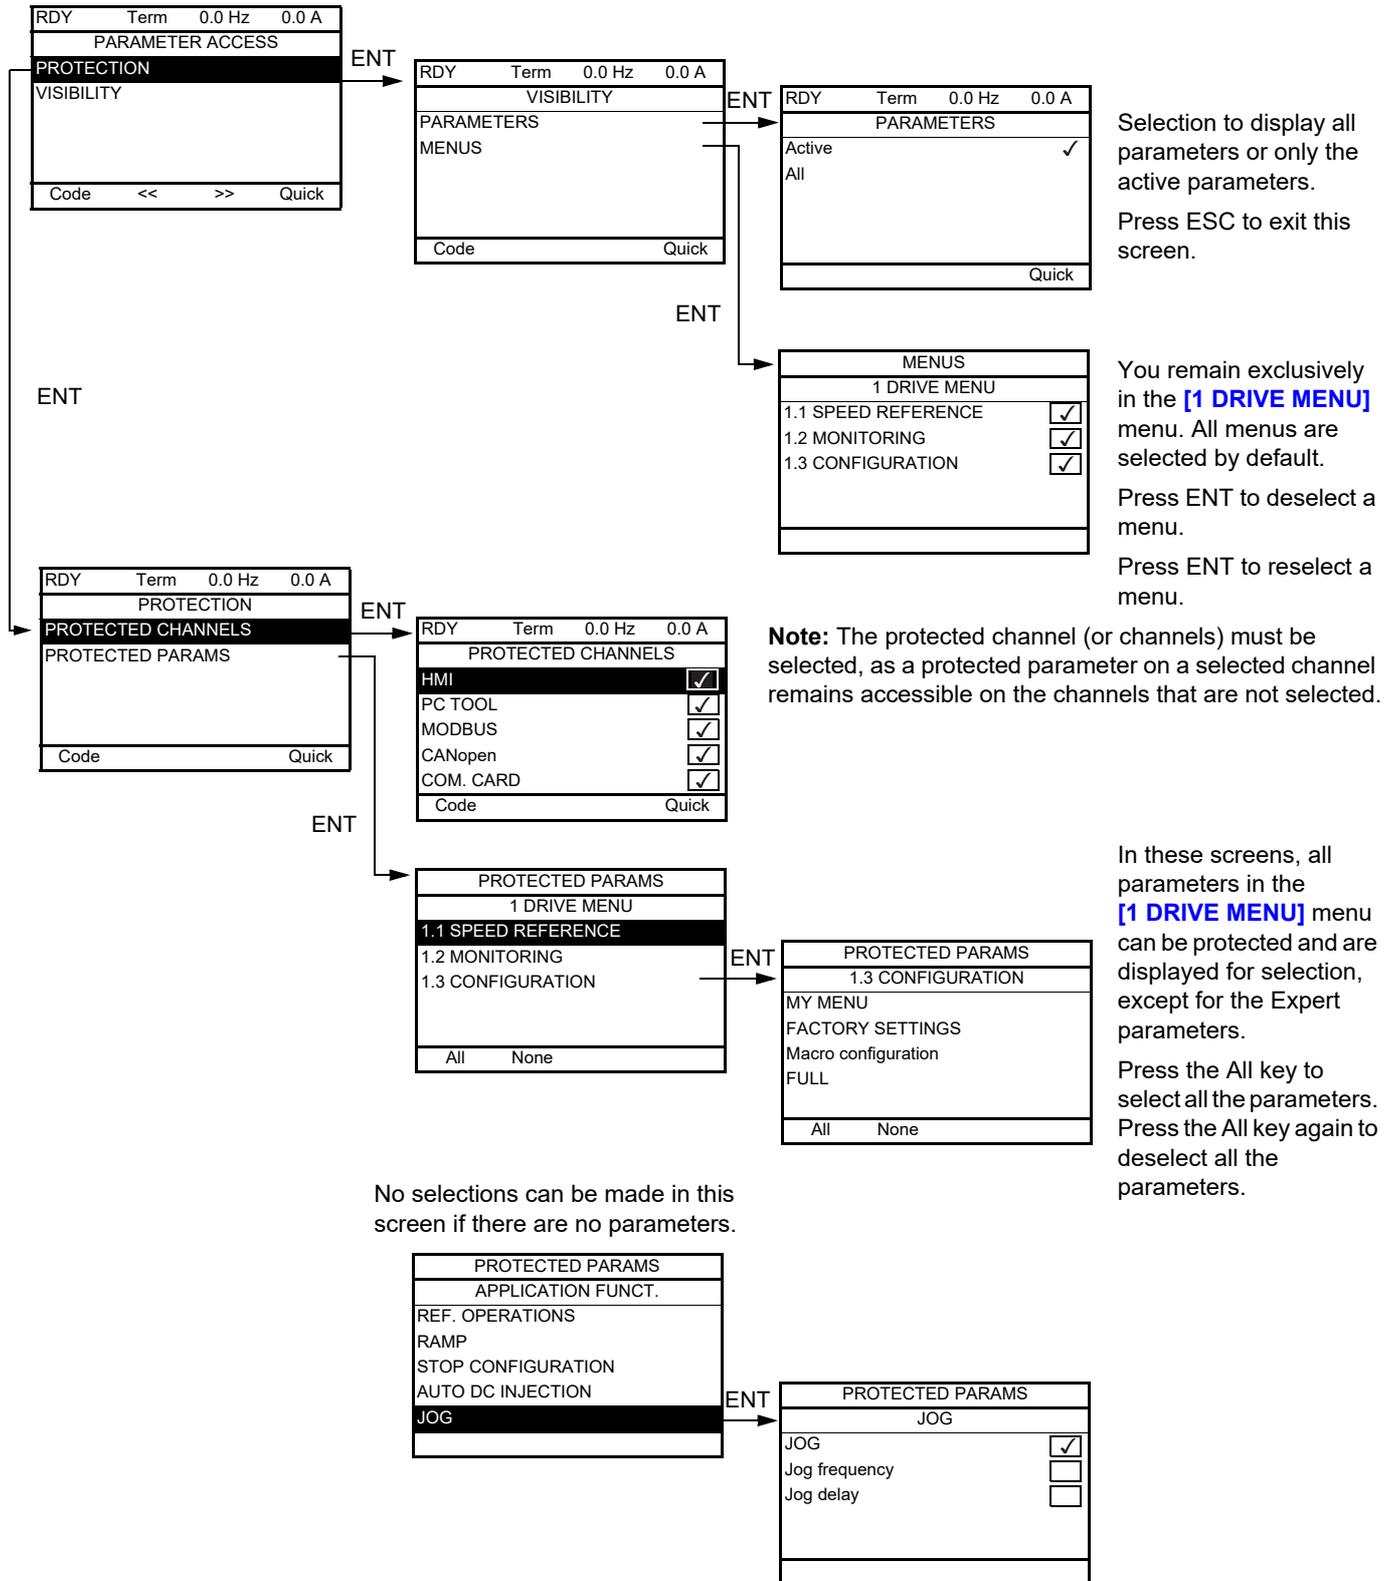

**Note:** The protected parameters are no longer accessible and are not, therefore, displayed for the selected channels.

Parameters described in this page can be accessed by:

ITF- &gt; DCF- &gt; PAC- &gt; PRO- &gt; PCD-

Code	Name / Description	Factory setting
<i>PAC -</i>	<b>[PARAMETER ACCESS]</b>	
<i>PRO -</i>	<b>[PROTECTION]</b>	
<i>PCD -</i>	<b>[PROTECTED CHANNELS]</b>	
<i>Con</i> <i>PS</i> <i>Modb</i> <i>CAN</i> <i>nEk</i>	<b>[HMI]</b> ( <i>Con</i> ): Graphic display terminal or remote display terminal <b>[PC Tool]</b> ( <i>PS</i> ): PC Software <b>[Modbus]</b> ( <i>Modb</i> ): Integrated Modbus <b>[CANopen]</b> ( <i>CAN</i> ): Integrated CANopen® <b>[Com. card]</b> ( <i>nEk</i> ): Communication card (if inserted)	
<i>VIS -</i>	<b>[VISIBILITY]</b>	
<i>PVIS</i> 	<b>[PARAMETERS]</b> Parameter visibility: only active ones, or all parameters.	<b>[Active]</b> ( <i>ACE</i> )
<i>ACE</i> <i>ALL</i>	<b>[Active]</b> ( <i>ACE</i> ) <b>[All]</b> ( <i>ALL</i> )	



Parameter that can be modified during operation or when stopped.

Parameters described in this page can be accessed by:

ITF- &gt; DCF- &gt; CNL-

## Keypad parameters

RDY	Term	0.0 Hz	0.0 A
KEYPAD PARAMETERS			
Keypad contrast	:		50%
Keypad stand-by	:		5 min
Code	<<	>>	Quick

Code	Name / Description	Adjustment range	Factory setting
<b>[CNL-]</b>	<b>[KEYPAD PARAMETERS]</b>		
<b>[CrSt]</b> ( )	<b>[Keypad contrast]</b> Contrast of the keypad.	0 to 100%	50%
<b>[Sby]</b> ( ) no	<b>[Keypad stand-by]</b> Graphic keypad standby delay. <b>[No] (no):</b> No	<b>[No] (no)</b> to 10 min	5 min




Parameter that can be modified during operation or when stopped.



## Open / Save as (trA)


7

This menu can only be accessed with the graphic display terminal.

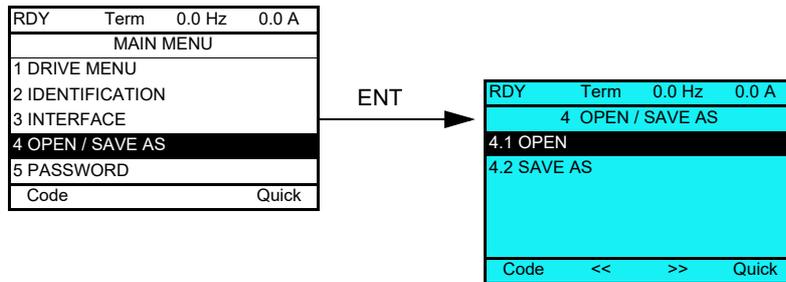

**[4.1 OPEN]:** To download one of the 4 files from the graphic display terminal to the drive.

**[4.2 SAVE AS]:** To download the current drive configuration to the graphic display terminal.

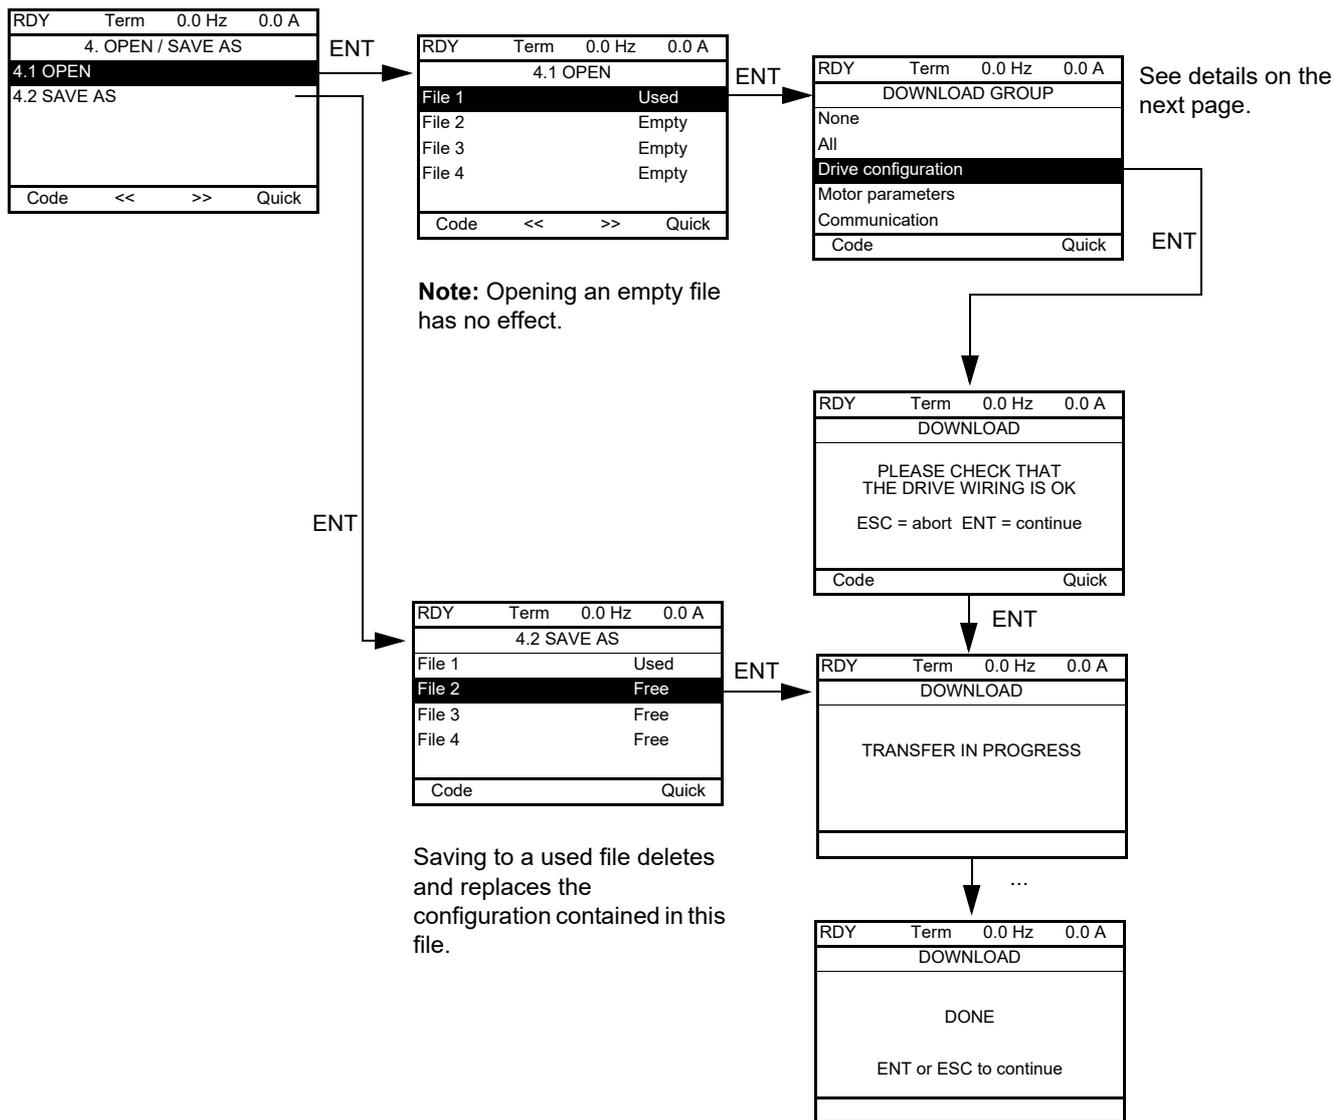

Various messages may appear when the download is requested:

- **[TRANSFER IN PROGRESS]**
- **[DONE]**
- Error messages if download not possible
- **[Motor parameters are NOT COMPATIBLE. Do you want to continue?]:** In this case, the download is possible, but the parameters will be restricted.

## DOWNLOAD GROUP


[None]:		No parameters
[All]:		All parameters in all menus
[Drive configuration]:		The entire [1 DRIVE MENU] without [COMMUNICATION]
[Motor parameters]:	[Rated motor volt.] ( $\omega n 5$ )	In the [MOTOR CONTROL] ( $d r C -$ ) menu
	[Rated motor freq.] ( $F r 5$ )	
	[PSI align curr. max] ( $n C r$ )	
	[Rated motor speed] ( $n 5 P$ )	
	[Motor 1 Cosinus phi] ( $C o 5$ )	
	[Rated motor power] ( $n P r$ )	
	[Motor param choice] ( $n P C$ )	
	[Tune selection] ( $5 t \omega n$ )	
	[Mot. therm. current] ( $i t H$ )	
	[IR compensation] ( $\omega F r$ )	
	[Slip compensation] ( $5 L P$ )	
	[Cust stator resist.] ( $r 5 R$ )	
	[Lfw] ( $L F R$ )	
	[Cust. rotor t const.] ( $t r R$ )	
	[Nominal I sync.] ( $n C r 5$ )	
	[Nom motor spdsync] ( $n 5 P 5$ )	
	[Pole pairs] ( $P P n 5$ )	
	[Syn. EMF constant] ( $P H 5$ )	
	[Autotune L d-axis] ( $L d 5$ )	
	[Autotune L q-axis] ( $L q 5$ )	
	[Nominal freq sync.] ( $F r 5 5$ )	
	[Cust. stator R syn] ( $r 5 R 5$ )	
	[Motor torque] ( $t q 5$ )	
	[U1] ( $\omega 1$ )	
	[F1] ( $F 1$ )	
	[U2] ( $\omega 2$ )	
	[F2] ( $F 2$ )	
	[U3] ( $\omega 3$ )	
	[F3] ( $F 3$ )	
	[U4] ( $\omega 4$ )	
	[F4] ( $F 4$ )	
	[U5] ( $\omega 5$ )	
	[F5] ( $F 5$ )	
	The motor parameters that can be accessed in [Expert] ( $E P r$ ) mode, page 275.	
	[Mot. therm. current] ( $i t H$ )	In the [SETTINGS] ( $5 E t -$ ) menu
[Communication] :		All the parameters in the [COMMUNICATION] menu




# Password (COd)



## With graphic display terminal

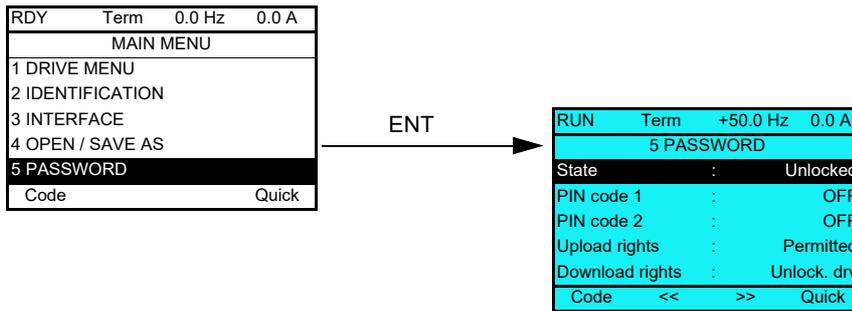


## With integrated display terminal

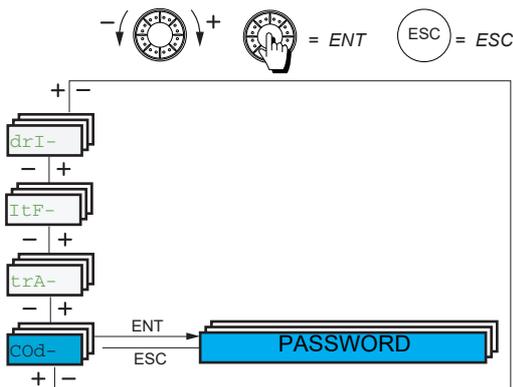

Enables the configuration to be protected with an access code or a password to be entered in order to access a protected configuration.

Example with graphic display terminal:

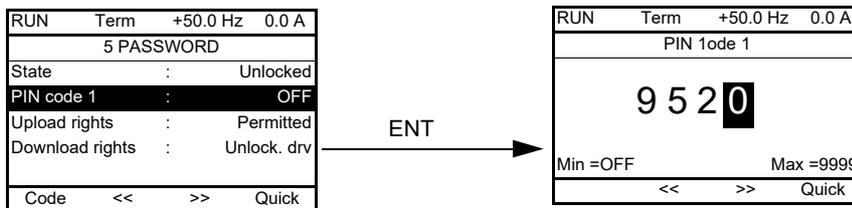

- The drive is unlocked when the PIN codes are set to **[Unlocked] (OFF)** (no password) or when the correct code has been entered. All menus are visible.
- Before protecting the configuration with an access code, you must:
  - Define the **[Upload rights] (ULr)** and **[Download rights] (dLr)**.
  - Make a careful note of the code and keep it in a place where you will be able to find it.

- The drive has 2 access codes, enabling 2 access levels to be set up:
  - PIN code 1 is a public unlock code: 6969.
  - PIN code 2 is an unlock code known only to Schneider Electric Product Support. It can only be accessed in **[Expert] (EPr)** mode.
  - Only one PIN1 or PIN2 code can be used, the other must remain set to **[OFF] (oFF)**.

**Note:** When the unlock code is entered, the user access code appears.

The following items are access-protected:

- Return to factory settings (**[FACTORY SETTINGS] (FL5-)** menu).
- The channels and parameters protected by the **[MY MENU] (Mn-)** as well as the menu itself.
- The custom display settings (**[3.4 DISPLAY CONFIG.] (dCF-)** menu).

Code	Name / Description	Adjustment range	Factory setting
<b>Co d -</b>	<b>[5 PASSWORD]</b>		
<b>CS t</b>	<b>[State]</b> Information parameter, cannot be modified.		<b>[Unlocked] (uLl)</b>
<b>LL</b> <b>uLL</b>	<b>[Locked] (LL):</b> The drive is locked by a password <b>[Unlocked] (uLL):</b> The drive is not locked by a password		
<b>Co d</b>	<b>[PIN code 1]</b> 1st access code. The value <b>[OFF] (oFF)</b> indicates that no password has been set <b>[Unlocked] (uLl)</b> . The value <b>[ON] (oN)</b> indicates that the drive is protected and an access code must be entered in order to unlock it. Once the correct code has been entered, it remains on the display and the drive is unlocked until the next time the power supply is disconnected. PIN code 1 is a public unlock code: 6969.	<b>[OFF] (oFF)</b> to 9,999	<b>[OFF] (oFF)</b>
<b>Co d 2</b>	<b>[PIN code 2]</b> This parameter can only be accessed in <b>[Expert] (EPr)</b> mode. 2nd access code. The value <b>[OFF] (oFF)</b> indicates that no password has been set <b>[Unlocked] (uLl)</b> . The value <b>[ON] (oN)</b> indicates that the drive is protected and an access code must be entered in order to unlock it. Once the correct code has been entered, it remains on the display and the drive is unlocked until the next time the power supply is disconnected. PIN code 2 is an unlock code known only to Schneider Electric Product Support.  When <b>[PIN code 2] (Co d 2)</b> is not set to <b>[OFF] (oFF)</b> , the <b>[1.2 MONITORING] (Mn-)</b> menu is the only one visible. Then if <b>[PIN code 2] (Co d 2)</b> is set to <b>[OFF] (oFF)</b> (drive unlocked), all menus are visible.  If the display settings are modified in <b>[3.4 DISPLAY CONFIG.] (dCF-)</b> menu, and if <b>[PIN code 2] (Co d 2)</b> is not set to <b>[OFF] (oFF)</b> , the visibility configured is kept. Then if <b>[PIN code 2] (Co d 2)</b> is set to OFF (drive unlocked), the visibility configured in <b>[3.4 DISPLAY CONFIG.] (dCF-)</b> menu is kept.	<b>[OFF] (oFF)</b> to 9,999	<b>[OFF] (oFF)</b>
<b>uL r</b>	<b>[Upload rights]</b> Reads or copies the current configuration to the drive.		<b>[Permitted] (uLrD)</b>
<b>uLrD</b> <b>uLrI</b>	<b>[Permitted] (uLrD):</b> The current drive configuration can be uploaded to the graphic display terminal or PC Software. <b>[Not allowed] (uLrI):</b> The current drive configuration can only be uploaded to the graphic display terminal or PC Software if the drive is not protected by an access code or if the correct code has been entered.		
<b>dL r</b>	<b>[Download rights]</b> Writes the current configuration to the drive or downloads a configuration to the drive.		<b>[Unlock. drv] (dLrI)</b>
<b>dLrD</b> <b>dLrI</b> <b>dLr2</b> <b>dLr3</b>	<b>[Locked drv] (dLrD):</b> A configuration file can only be downloaded to the drive if the drive is protected by an access code, which is the same as the access code for the configuration to be downloaded. <b>[Unlock. drv] (dLrI):</b> A configuration file can be downloaded to the drive or a configuration in the drive can be modified if the drive is unlocked (access code entered) or is not protected by an access code. <b>[Not allowed] (dLr2):</b> Download not authorized. <b>[Lock/unlock] (dLr3):</b> Combination of <b>[Locked drv.] (dLrD)</b> and <b>[Unlock. drv] (dLrI)</b> .		


# Multipoint Screen



## Multipoint Screen

Communication is possible between a graphic display terminal and a number of drives connected on the same bus. The addresses of the drives must be configured in advance in the **[COMMUNICATION] (C o n -)** menu using the **[Modbus Address] (R d d)** parameter, page 290.

When a number of drives are connected to the same graphic display terminal, it automatically displays the following screens:

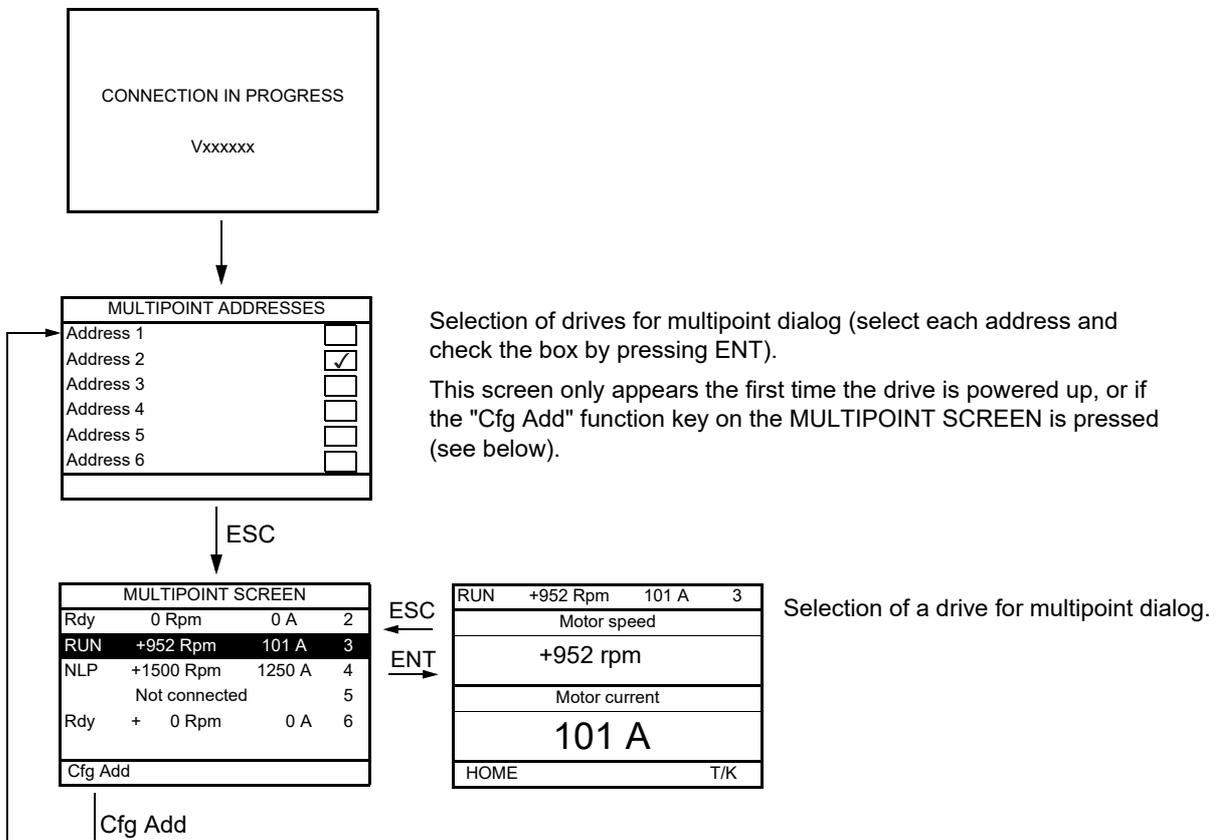

Selection of drives for multipoint dialog (select each address and check the box by pressing ENT).

This screen only appears the first time the drive is powered up, or if the "Cfg Add" function key on the MULTIPOINT SCREEN is pressed (see below).

Selection of a drive for multipoint dialog.

In multipoint mode, the command channel is not displayed. From left to right, the state, then the 2 selected parameters, and finally the drive address appear.

All menus can be accessed in multipoint mode. Only drive control via the graphic display terminal is not authorized, apart from the Stop key, which locks all the drives.

If there is an error on a drive, this drive is displayed.



---

# Maintenance and Diagnostics



---

## What's in this Part?

This part contains the following chapters:

Chapter	Chapter Name	Page
10	Maintenance	<a href="#">320</a>
11	Diagnostics and Troubleshooting	<a href="#">322</a>



# Maintenance

# 10

## Limitation of Warranty

The warranty does not apply if the product has been opened, except by Schneider Electric services.

## Servicing

### **DANGER**

#### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

Read and understand the instructions in Safety Information chapter before performing any procedure in this chapter.

**Failure to follow these instructions will result in death or serious injury.**

The temperature of the products described in this manual may exceed 80 °C (176 °F) during operation.

### **WARNING**

#### **HOT SURFACES**

- Ensure that any contact with hot surfaces is avoided.
- Do not allow flammable or heat-sensitive parts in the immediate vicinity of hot surfaces.
- Verify that the product has sufficiently cooled down before handling it.
- Verify that the heat dissipation is sufficient by performing a test run under maximum load conditions.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### **WARNING**

#### **INSUFFICIENT MAINTENANCE**

- Verify that the maintenance activities described below are performed at the specified intervals.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

Adherence to the environmental conditions must be ensured during operation of the drive. In addition, during maintenance, verify and, if appropriate, correct all factors that may have an impact on the environmental conditions.

It is recommended to do the following in order to optimize continuity of operation.

Environment	Part concerned	Action	Interval (1)
Knock on the product	Housing - control block (led - display)	Perform a visual inspection	At least every year
Corrosion	Terminals - connector - screws - EMC plate	Inspect and clean if required	
Dust	Terminals - fans - blowholes		
Temperature	Around the product	Check and correct if required	
Cooling	Fan	Check the fan operation	After 3 to 5 years, depending on the operating conditions
		Replace the fan	
Vibration	Terminal connections	Check tightening at recommended torque	At least every year

(1): Maximum maintenance intervals from the date of commissioning. Reduce the intervals between maintenance to adapt maintenance to the environmental conditions, the operating conditions of the drive, and to any other factor that may influence the operation and/ or maintenance requirements of the drive.

**Note:** The fan operation depends on the drive thermal state. The drive may be running and the fan not.

### Spares and repairs

Serviceable product. Please refer to your Customer Care Centre.

### Long time storage

If the drive was not connected to mains for an extended period of time, the capacitors must be restored to their full performance before the motor is started. See page [45](#).

### Fan replacement

It is possible to order a new fan for the ATV320 maintenance, see the commercial references on [www.schneider-electric.com](http://www.schneider-electric.com).

Fans may continue to run for a certain period of time even after power to the product has been disconnected.

## CAUTION

### **RUNNING FANS**

Verify that fans have come to a complete standstill before handling them.

**Failure to follow these instructions can result in equipment damage.**

# Diagnostics and Troubleshooting

# 11

## What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Error code	<a href="#">323</a>
Clearing the detected fault	<a href="#">323</a>
Fault detection codes which require a power reset after the detected fault is cleared	<a href="#">324</a>
Fault detection codes that can be cleared with the automatic restart function after the cause has disappeared	<a href="#">326</a>
Fault detection codes that are cleared as soon as their cause disappears	<a href="#">329</a>
Option card changed or removed	<a href="#">329</a>
Control block changed	<a href="#">329</a>
Fault detection codes displayed on the remote display terminal	<a href="#">330</a>

## **DANGER**

### **HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH**

Read and understand the instructions in "Safety Information" chapter before performing any procedure in this chapter.

**Failure to follow these instructions will result in death or serious injury.**

## Error code

- If the display does not light up, check the power supply to the drive.
- The assignment of the Fast stop or Freewheel functions will help to prevent the drive starting if the corresponding logic inputs are not powered up. The ATV320 then displays **[Freewheel]** (n 5 E) in freewheel stop and **[Fast stop]** (F 5 E) in fast stop. This is normal since these functions are active at zero so that the drive will be stopped if there is a wire break.
- Check that the run command input is activated in accordance with the selected control mode (**[2/3 wire control]** (E C C) and **[2 wire type]** (E C E) parameters, page 93).
- If an input is assigned to the limit switch function and this input is at zero, the drive can only be started up by sending a command for the opposite direction (see page 236).
- If the reference channel or command channel is assigned to a communication bus, when the power supply is connected, the drive will display **[Freewheel]** (n 5 E) and remain in stop mode until the communication bus sends a command.

Code	Name / Description
d G E -	<b>[DIAGNOSTICS]</b> This menu can only be accessed with the graphic display terminal. It displays detected faults and their cause in plain text and can be used to carry out tests, see page 72.

## Clearing the detected fault

In the event of a non resettable detected fault:

- Disconnect all power, including external control power that may be present.
- Lock all power disconnects in the open position.
- Wait 15 minutes to allow the DC bus capacitors to discharge (the drive LEDs are not indicators of the absence of DC bus voltage).
- Measure the voltage of the DC bus between the PA/+ and PC/- terminals to ensure that the voltage is less than 42 Vdc.
- If the DC bus capacitors do not discharge completely, contact your local Schneider Electric representative. Do not repair or operate the drive.
- Find and correct the detected fault.
- Restore power to the drive to confirm the detected fault has been rectified.

In the event of a resettable detected fault, the drive can be reset after the cause is cleared:

- By switching off the drive until the display disappears completely, then switching on again.
- Automatically in the scenarios described for the **[AUTOMATIC RESTART]** (F E r -) function, page 266.
- By means of a logic input or control bit assigned to the **[FAULT RESET]** (r 5 E -) function, page 265.
- By pressing the STOP/RESET key on the graphic display keypad if the active channel command is the HMI (see **[Cmd channel 1]** (C d I) page 164).

## Fault detection codes which require a power reset after the detected fault is cleared

The cause of the detected fault must be removed before resetting by turning off and then back on.

*RSF*, *brF*, *Sof*, *SPF* and *EnF* detected faults can also be cleared remotely by means of a logic input or control bit (**[Fault reset]** (*rSF*) parameter, page 265).

Detected Fault	Name	Probable cause	Remedy
<i>EnF</i>	<b>[Load slipping]</b>	<ul style="list-style-type: none"> <li>The difference between the output frequency and the speed feedback is not correct.</li> </ul>	<ul style="list-style-type: none"> <li>Check the motor, gain and stability parameters.</li> <li>Add a braking resistor.</li> <li>Check the size of the motor/drive/load.</li> <li>Check the encoder's mechanical coupling and its wiring.</li> <li>Check the setting of parameters</li> </ul>
<i>RSF</i>	<b>[Angle Error]</b>	<ul style="list-style-type: none"> <li>This occurs during the phase-shift angle measurement, if the motor phase is disconnected or if the motor inductance is too high.</li> </ul>	<ul style="list-style-type: none"> <li>Check the motor phases and the maximum current allowed by the drive.</li> </ul>
<i>brF</i>	<b>[Brake control]</b>	<ul style="list-style-type: none"> <li>Brake release current not reached.</li> <li>Brake engage frequency threshold <b>[Brake engage freq]</b> (<i>ben</i>) only regulated when brake logic control is assigned.</li> </ul>	<ul style="list-style-type: none"> <li>Check the drive/motor connection.</li> <li>Check the motor windings.</li> <li>Check the <b>[Brake release I FW]</b> (<i>ibr</i>) and <b>[Brake release I Rev]</b> (<i>ird</i>) settings page 206.</li> <li>Apply the recommended settings for <b>[Brake engage freq]</b> (<i>ben</i>).</li> </ul>
<i>brF</i>	<b>[Brake feedback]</b>	<ul style="list-style-type: none"> <li>The brake feedback contact does not match the brake logic control.</li> <li>The brake does not stop the motor quickly enough (detected by measuring the speed on the "Pulse input" input).</li> </ul>	<ul style="list-style-type: none"> <li>Check the feedback circuit and the brake logic control circuit.</li> <li>Check the mechanical state of the brake.</li> <li>Check the brake linings.</li> </ul>
<i>CrFI</i>	<b>[Precharge]</b>	<ul style="list-style-type: none"> <li>Charging relay control detected fault or charging resistor damaged.</li> </ul>	<ul style="list-style-type: none"> <li>Turn the drive off and then turn on again.</li> <li>Check the internal connections.</li> <li>Contact Schneider Electric Product Support.</li> </ul>
<i>EEF1</i>	<b>[Control Eeprom]</b>	<ul style="list-style-type: none"> <li>Internal memory detected fault, control block.</li> </ul>	<ul style="list-style-type: none"> <li>Check the environment (electromagnetic compatibility).</li> <li>Turn off, reset, return to factory settings.</li> </ul>
<i>EEF2</i>	<b>[Power Eeprom]</b>	<ul style="list-style-type: none"> <li>Internal memory detected fault, power card.</li> </ul>	<ul style="list-style-type: none"> <li>Contact Schneider Electric Product Support.</li> </ul>
<i>FCFI</i>	<b>[Out. contact. stuck]</b>	<ul style="list-style-type: none"> <li>The output contactor remains closed although the opening conditions have been met.</li> </ul>	<ul style="list-style-type: none"> <li>Check the contactor and its wiring.</li> <li>Check the feedback circuit.</li> </ul>
<i>HdF</i>	<b>[IGBT desaturation]</b>	<ul style="list-style-type: none"> <li>Short-circuit or grounding at the drive output.</li> </ul>	<ul style="list-style-type: none"> <li>Check the cables connecting the drive to the motor, and the motor insulation.</li> </ul>
<i>ILF</i>	<b>[internal com. link]</b>	<ul style="list-style-type: none"> <li>Communication interruption between option card and drive.</li> </ul>	<ul style="list-style-type: none"> <li>Check the environment (electromagnetic compatibility).</li> <li>Check the connections.</li> <li>Replace the option card.</li> <li>Contact Schneider Electric Product Support.</li> </ul>
<i>inF1</i>	<b>[Rating error]</b>	<ul style="list-style-type: none"> <li>The power card is different from the card stored.</li> </ul>	<ul style="list-style-type: none"> <li>Check the reference of the power card.</li> </ul>
<i>inF2</i>	<b>[Incompatible PB]</b>	<ul style="list-style-type: none"> <li>The power card is incompatible with the control block.</li> </ul>	<ul style="list-style-type: none"> <li>Check the reference of the power card and its compatibility.</li> </ul>
<i>inF3</i>	<b>[Internal serial link]</b>	<ul style="list-style-type: none"> <li>Communication interruption between the internal cards.</li> </ul>	<ul style="list-style-type: none"> <li>Check the internal connections.</li> <li>Contact Schneider Electric Product Support.</li> </ul>
<i>inF4</i>	<b>[Internal-mftg zone]</b>	<ul style="list-style-type: none"> <li>Internal data inconsistent.</li> </ul>	<ul style="list-style-type: none"> <li>Recalibrate the drive (performed by Schneider Electric Product Support).</li> </ul>
<i>inF6</i>	<b>[Internal - fault option]</b>	<ul style="list-style-type: none"> <li>The option installed in the drive is not recognized.</li> </ul>	<ul style="list-style-type: none"> <li>Check the reference and compatibility of the option.</li> <li>Check that the option is well inserted into the ATV320.</li> </ul>
<i>inF9</i>	<b>[Internal- I measure]</b>	<ul style="list-style-type: none"> <li>The current measurements are incorrect.</li> </ul>	<ul style="list-style-type: none"> <li>Replace the current sensors or the power card.</li> <li>Contact Schneider Electric Product Support.</li> </ul>
<i>inFA</i>	<b>[Internal-mains circuit]</b>	<ul style="list-style-type: none"> <li>The input stage is not operating correctly.</li> </ul>	<ul style="list-style-type: none"> <li>Contact Schneider Electric Product Support.</li> </ul>
<i>inFb</i>	<b>[Internal- th. sensor]</b>	<ul style="list-style-type: none"> <li>The drive temperature sensor is not operating correctly.</li> </ul>	<ul style="list-style-type: none"> <li>Replace the drive temperature sensor.</li> <li>Contact Schneider Electric Product Support.</li> </ul>

Detected Fault	Name	Probable cause	Remedy
<b>inFE</b>	<b>[internal- CPU ]</b>	<ul style="list-style-type: none"> <li>Internal microprocessor detected fault.</li> </ul>	<ul style="list-style-type: none"> <li>Turn off and reset.</li> <li>Contact Schneider Electric Product Support.</li> </ul>
<b>SFFF</b>	<b>[Safety fault]</b>	<ul style="list-style-type: none"> <li>Debounce time exceeded.</li> <li>SS1 threshold exceeded.</li> <li>Wrong configuration.</li> <li>SLS type overspeed detected.</li> </ul>	<ul style="list-style-type: none"> <li>Check the safety functions configuration.</li> <li>Check the ATV320 Integrated safety Functions manual</li> <li>Contact Schneider Electric Product Support.</li> </ul>
<b>SoF</b>	<b>[Overspeed]</b>	<ul style="list-style-type: none"> <li>Instability or driving load too high.</li> <li>If a downstream contactor is used, the contacts between the motor and the drive have not been closed before applying a Run command.</li> <li>The overspeed threshold (corresponding to 110 % of <b>[Max frequency] (EFr)</b>) has been reached.</li> </ul>	<ul style="list-style-type: none"> <li>Check the motor, gain and stability parameters.</li> <li>Add a braking resistor.</li> <li>Check the size of the motor/drive/load.</li> <li>Check the parameters settings for the <b>[FREQUENCY METER] (F9F -)</b> function page 280, if it is configured.</li> <li>Verify and close the contacts between the motor and the drive before applying a Run command.</li> <li>Verify the consistency between <b>[Max frequency] (EFr)</b> and <b>[High Speed] (HSP)</b>. It is recommended to have at least <b>[Max frequency] (EFr) ≥ 110% * [High Speed] (HSP)</b>.</li> </ul>
<b>SPF</b>	<b>[Speed fdback loss]</b>	<ul style="list-style-type: none"> <li>Signal on "Pulse input" missing, if the input is used for speed measurement.</li> <li>Encoder feedback signal missing</li> </ul>	<ul style="list-style-type: none"> <li>Check the wiring of the input cable and the detector used.</li> <li>Check the configuration parameters of the encoder.</li> <li>Check the wiring between the encoder and the drive.</li> <li>Check the encoder.</li> </ul>

## Fault detection codes that can be cleared with the automatic restart function after the cause has disappeared

These detected faults can also be cleared by turning on and off or by means of a logic input or control bit (**[Fault reset]** (*r 5 F*) parameter page [265](#)).

Detected Fault	Name	Probable cause	Remedy
<i>C n F</i>	<b>[Com. network]</b>	<ul style="list-style-type: none"> <li>Communication interruption on communication card.</li> </ul>	<ul style="list-style-type: none"> <li>Check the environment (electromagnetic compatibility).</li> <li>Check the wiring.</li> <li>Check the time-out.</li> <li>Replace the option card.</li> <li>Contact Schneider Electric Product Support.</li> </ul>
<i>C o F</i>	<b>[CANopen com.]</b>	<ul style="list-style-type: none"> <li>Communication interruption on the CANopen® bus.</li> </ul>	<ul style="list-style-type: none"> <li>Check the communication bus.</li> <li>Check the time-out.</li> <li>Refer to the CANopen® User's manual.</li> </ul>
<i>E P F 1</i>	<b>[External flt-L/Bit]</b>	<ul style="list-style-type: none"> <li>Event triggered by an external device, depending on user.</li> </ul>	<ul style="list-style-type: none"> <li>Check the device which caused the triggering and reset.</li> </ul>
<i>E P F 2</i>	<b>[External fault com.]</b>	<ul style="list-style-type: none"> <li>Event triggered by a communication network.</li> </ul>	<ul style="list-style-type: none"> <li>Check for the cause of the triggering and reset.</li> </ul>
<i>F b E 5</i>	<b>[FB stop flt.]</b>	<ul style="list-style-type: none"> <li>Function blocks have been stopped while motor was running.</li> </ul>	<ul style="list-style-type: none"> <li>Check <b>[Stop FB Stop motor]</b> (<i>F b 5 n</i>) configuration.</li> </ul>
<i>F C F 2</i>	<b>[Out. contact. open.]</b>	<ul style="list-style-type: none"> <li>The output contactor remains open although the closing conditions have been met.</li> </ul>	<ul style="list-style-type: none"> <li>Check the contactor and its wiring.</li> <li>Check the feedback circuit.</li> </ul>
<i>L C F</i>	<b>[input contactor]</b>	<ul style="list-style-type: none"> <li>The drive is not turned on even though <b>[Mains V. time out]</b> (<i>L C E</i>) has elapsed.</li> </ul>	<ul style="list-style-type: none"> <li>Check the contactor and its wiring.</li> <li>Check the time-out.</li> <li>Check the supply mains/contactor/drive connection.</li> </ul>
<i>L F F 3</i>	<b>[AI3 4-20mA loss]</b>	<ul style="list-style-type: none"> <li>Loss of the 4-20 mA reference on analog input AI3.</li> </ul>	<ul style="list-style-type: none"> <li>Check the connection on the analog inputs.</li> </ul>
<i>o b F</i>	<b>[Overbraking]</b>	<ul style="list-style-type: none"> <li>Braking too sudden or driving load.</li> <li>Supply voltage too high.</li> </ul>	<ul style="list-style-type: none"> <li>Increase the deceleration time.</li> <li>Install a braking resistor if necessary.</li> <li>Activate the <b>[Dec ramp adapt.]</b> (<i>b r A</i>) function page <a href="#">181</a>, if it is compatible with the application.</li> <li>Check the supply voltage.</li> </ul>
<i>o C F</i>	<b>[Overcurrent]</b>	<ul style="list-style-type: none"> <li>Parameters in the <b>[SETTINGS]</b> (<i>S E E -</i>) and <b>[MOTOR CONTROL]</b> (<i>d r C -</i>) menus are not correct.</li> <li>Inertia or load too high.</li> <li>Mechanical locking.</li> </ul>	<ul style="list-style-type: none"> <li>Check the parameters.</li> <li>Check the size of the motor/drive/load.</li> <li>Check the state of the mechanism.</li> <li>Decrease <b>[Current limitation]</b> (<i>C L i</i>).</li> <li>Increase the switching frequency.</li> </ul>
<i>o H F</i>	<b>[Drive overheat]</b>	<ul style="list-style-type: none"> <li>Drive temperature too high.</li> </ul>	<ul style="list-style-type: none"> <li>Check the motor load, the drive ventilation and the ambient temperature. Wait for the drive to cool down before restarting.</li> </ul>
<i>o L C</i>	<b>[Proc. overload flt]</b>	<ul style="list-style-type: none"> <li>Process overload.</li> </ul>	<ul style="list-style-type: none"> <li>Check and remove the cause of the overload.</li> <li>Check the parameters of the <b>[PROCESS OVERLOAD]</b> (<i>o L d -</i>) function, page <a href="#">286</a>.</li> </ul>
<i>o L F</i>	<b>[Motor overload]</b>	<ul style="list-style-type: none"> <li>Triggered by excessive motor current.</li> </ul>	<ul style="list-style-type: none"> <li>Check the setting of the motor thermal protection, check the motor load. Wait for the motor to cool down before restarting.</li> </ul>
<i>o P F 1</i>	<b>[1 output phase loss]</b>	<ul style="list-style-type: none"> <li>Loss of one phase at drive output.</li> </ul>	<ul style="list-style-type: none"> <li>Check the connections from the drive to the motor.</li> </ul>

Detected Fault	Name	Probable cause	Remedy
<b>o P F 2</b>	<b>[3 motor phase loss]</b>	<ul style="list-style-type: none"> <li>Motor not connected or motor power too low.</li> <li>Output contactor open.</li> <li>Instantaneous instability in the motor current.</li> </ul>	<ul style="list-style-type: none"> <li>Check the connections from the drive to the motor.</li> <li>If an output contactor is being used, set <b>[Output Phase Loss] (o P L)</b> to <b>[Output cut] (o R C)</b>, page 270.</li> <li>Test on a low power motor or without a motor: In factory settings mode, motor phase loss detection is active <b>[Output Phase Loss] (o P L) = [Yes] (Y E 5)</b>. To check the drive in a test or maintenance environment, without having to use a motor with the same rating as the drive (in particular for high power drives), deactivate motor phase loss detection <b>[Output Phase Loss] (o P L) = [No] (n o)</b>, see instructions given page 270.</li> <li>Check and optimize the following parameters: <b>[IR compensation] (u F r)</b> page 99, <b>[Rated motor volt.] (u n 5)</b> and <b>[Rated mot. current] (n C r)</b> page 94 and perform <b>[Auto tuning] (t u n)</b> page 95.</li> </ul>
<b>o 5 F</b>	<b>[Mains overvoltage]</b>	<ul style="list-style-type: none"> <li>Supply voltage too high.</li> <li>Disturbed mains supply.</li> </ul>	<ul style="list-style-type: none"> <li>Check the supply voltage.</li> </ul>
<b>o t F L</b>	<b>[LI6=PTC overheat]</b>	<ul style="list-style-type: none"> <li>Overheating of PTC probes detected on input LI6.</li> </ul>	<ul style="list-style-type: none"> <li>Check the motor load and motor size.</li> <li>Check the motor ventilation.</li> <li>Wait for the motor to cool before restarting.</li> <li>Check the type and state of the PTC probes.</li> </ul>
<b>P t F L</b>	<b>[LI6=PTC probe]</b>	<ul style="list-style-type: none"> <li>PTC probe on input LI6 open or short-circuited.</li> </ul>	<ul style="list-style-type: none"> <li>Check the PTC probe and the wiring between it and the motor/drive.</li> </ul>
<b>5 C F 1</b>	<b>[Motor short circuit]</b>	<ul style="list-style-type: none"> <li>Short-circuit or grounding at the drive output.</li> </ul>	<ul style="list-style-type: none"> <li>Check the cables connecting the drive to the motor, and the motor insulation.</li> <li>Reduce the switching frequency.</li> <li>Connect chokes in series with the motor.</li> <li>Check the adjustment of speed loop and brake.</li> <li>Increase the <b>[Time to restart] (t t r)</b>, page 109.</li> <li>Increase the switching frequency.</li> </ul>
<b>5 C F 3</b>	<b>[Ground short circuit]</b>	<ul style="list-style-type: none"> <li>Significant earth leakage current at the drive output if several motors are connected in parallel.</li> </ul>	<ul style="list-style-type: none"> <li>Check the cables connecting the drive to the motor, and the motor insulation.</li> <li>Reduce the switching frequency.</li> <li>Connect chokes in series with the motor.</li> <li>Check the adjustment of speed loop and brake.</li> <li>Increase the <b>[Time to restart] (t t r)</b>, page 109.</li> <li>Reduce the switching frequency.</li> </ul>
<b>5 C F 4</b>	<b>[IGBT short circuit]</b>	<ul style="list-style-type: none"> <li>Power component detected fault.</li> </ul>	<ul style="list-style-type: none"> <li>Contact Schneider Electric Product Support.</li> </ul>
<b>5 C F 5</b>	<b>[Motor short circuit]</b>	<ul style="list-style-type: none"> <li>Short-circuit at drive output.</li> </ul>	<ul style="list-style-type: none"> <li>Check the cables connecting the drive to the motor, and the motor's insulation.</li> <li>Contact Schneider Electric Product Support.</li> </ul>
<b>5 L F 1</b>	<b>[Modbus com.]</b>	<ul style="list-style-type: none"> <li>Communication interruption on the Modbus bus.</li> </ul>	<ul style="list-style-type: none"> <li>Check the communication bus.</li> <li>Check the time-out.</li> <li>Refer to the Modbus User's manual.</li> </ul>
<b>5 L F 2</b>	<b>[PC com.]</b>	<ul style="list-style-type: none"> <li>Communication interruption with PC Software.</li> </ul>	<ul style="list-style-type: none"> <li>Check the PC Software connecting cable.</li> <li>Check the time-out.</li> </ul>
<b>5 L F 3</b>	<b>[HMI com.]</b>	<ul style="list-style-type: none"> <li>Communication interruption with the graphic display terminal or remote display terminal.</li> </ul>	<ul style="list-style-type: none"> <li>Check the terminal connection</li> <li>Check the time-out.</li> </ul>
<b>5 5 F</b>	<b>[Torque/current lim]</b>	<ul style="list-style-type: none"> <li>Switch to torque or current limitation.</li> </ul>	<ul style="list-style-type: none"> <li>Check if there are any mechanical problems.</li> <li>Check the parameters of <b>[TORQUE LIMITATION] (t o L -)</b> page 228 and the parameters of the <b>[TORQUE OR I LIM. DETECT.] (t i d -)</b>, page 278.</li> </ul>
<b>t J F</b>	<b>[IGBT overheat]</b>	<ul style="list-style-type: none"> <li>Drive overheated.</li> </ul>	<ul style="list-style-type: none"> <li>Check the size of the load/motor/drive.</li> <li>Reduce the switching frequency.</li> <li>Wait for the motor to cool before restarting.</li> </ul>

Detected Fault	Name	Probable cause	Remedy
<b>ENF</b>	<b>[Auto-tuning]</b>	<ul style="list-style-type: none"><li>• Special motor or motor whose power is not suitable for the drive.</li><li>• Motor not connected to the drive.</li> <li>• Motor not stopped</li></ul>	<ul style="list-style-type: none"><li>• Check that the motor/drive are compatible.</li><li>• Check that the motor is present during auto-tuning.</li><li>• If an output contactor is being used, close it during auto-tuning.</li><li>• Check that the motor is stopped during tune operation.</li></ul>
<b>ULF</b>	<b>[Proc. underload Flt]</b>	<ul style="list-style-type: none"><li>• Process underload.</li></ul>	<ul style="list-style-type: none"><li>• Check and remove the cause of the underload.</li><li>• Check the parameters of the <b>[PROCESS UNDERLOAD] (ULd-)</b> function, page <a href="#">284</a>.</li></ul>

## Fault detection codes that are cleared as soon as their cause disappears

Detected Fault	Name	Probable cause	Remedy
<b>CFF</b>	<b>[Incorrect config.]</b>	<ul style="list-style-type: none"> <li>Option card changed or removed.</li> <li>Control block replaced by a control block configured on a drive with a different rating.</li> <li>The current configuration is inconsistent.</li> </ul>	<ul style="list-style-type: none"> <li>Check that there are no card errors.</li> <li>In the event of the option card being changed/removed deliberately, see the remarks below.</li> <li>Check that there are no card errors.</li> <li>In the event of the control block being changed deliberately, see the remarks below.</li> <li>Return to factory settings or retrieve the backup configuration, if it is valid (see page 89).</li> </ul>
<b>CF1</b> <b>CF12</b>	<b>[Invalid config.]</b>	<ul style="list-style-type: none"> <li>Invalid configuration. The configuration loaded in the drive via the bus or communication network is inconsistent.</li> </ul>	<ul style="list-style-type: none"> <li>Check the configuration loaded previously.</li> <li>Load a compatible configuration.</li> </ul>
<b>CSF</b>	<b>[Ch. Sw. fault]</b>	<ul style="list-style-type: none"> <li>Switch to not valid channels.</li> </ul>	<ul style="list-style-type: none"> <li>Check the function parameters.</li> </ul>
<b>dLF</b>	<b>[Dynamic load fault]</b>	<ul style="list-style-type: none"> <li>Abnormal load variation.</li> </ul>	<ul style="list-style-type: none"> <li>Check that the load is not blocked by an obstacle.</li> <li>Removal of a run command causes a reset.</li> </ul>
<b>FbE</b>	<b>[FB fault]</b>	<ul style="list-style-type: none"> <li>Function blocks error.</li> </ul>	<ul style="list-style-type: none"> <li>See <b>[FB Fault] (FbFE)</b> for more details.</li> </ul>
<b>HCF</b>	<b>[Cards pairing]</b>	<ul style="list-style-type: none"> <li>The <b>[CARDS PAIRING] (PP1-)</b> function page 283 has been configured and a drive card has been changed.</li> </ul>	<ul style="list-style-type: none"> <li>In the event of a card error, reinsert the original card.</li> <li>Confirm the configuration by entering the <b>[Pairing password] (PP1)</b> if the card was changed deliberately.</li> </ul>
<b>PHF</b>	<b>[Input phase loss]</b>	<ul style="list-style-type: none"> <li>Drive incorrectly supplied or a fuse blown.</li> <li>One phase missing.</li> <li>3-phase ATV320 used on a single-phase supply mains.</li> <li>Unbalanced load.</li> <li>This protection only operates with the drive on load.</li> </ul>	<ul style="list-style-type: none"> <li>Check the power connection and the fuses.</li> <li>Use a 3-phase supply mains.</li> <li>Disable the detected fault by <b>[Input phase loss] (1PL) = [No] (na)</b> page 94.</li> </ul>
<b>u5F</b>	<b>[Undervoltage]</b>	<ul style="list-style-type: none"> <li>Supply mains too low.</li> <li>Transient voltage dip.</li> </ul>	<ul style="list-style-type: none"> <li>Check the voltage and the parameters of <b>[UNDERVOLTAGE MGT] (u5b-)</b>, page 273.</li> </ul>

### Option card changed or removed

When an option card is removed or replaced by another, the drive locks in **[Incorrect config.] (CFF)** fault mode on power-up. If the card has been deliberately changed or removed, the detected fault can be cleared by pressing the ENT key twice, which causes the factory settings to be restored (see page 89) for the parameter groups affected by the card. These are as follows:

#### Card replaced by a card of the same type

- Communication cards: only the parameters that are specific to communication cards

### Control block changed

When a control block is replaced by a control block configured on a drive with a different rating, the drive locks in **[Incorrect config.] (CFF)** fault mode on power-up. If the control block has been deliberately changed, the detected fault can be cleared by pressing the ENT key twice, which **causes all the factory settings to be restored.**

**Fault detection codes displayed on the remote display terminal**

Code	Name	Description
<b>и и к</b>	<b>[Initialization in progress]</b>	The microcontroller is initializing. Search underway for communication configuration.
<b>С о П.Е</b> (1)	<b>[Communication error]</b>	Time out detected fault (50 ms). This message is displayed after 20 attempts at communication.
<b>А - 11</b> (1)	<b>[Alarm button]</b>	A key has been held down for more than 10 seconds. The keypad is disconnected. The keypad wakes up when a key is pressed.
<b>С L r</b> (1)	<b>[Confirmation of detected fault reset]</b>	This is displayed when the STOP key is pressed once if the active command channel is the remote display terminal.
<b>д Е у.Е</b> (1)	<b>[Drive disparity]</b>	The drive brand does not match that of the remote display terminal.
<b>р о П.Е</b> (1)	<b>[ROM anomaly]</b>	The remote display terminal detects a ROM anomaly on the basis of checksum calculation.
<b>р Р П.Е</b> (1)	<b>[RAM anomaly]</b>	The remote display terminal detects a RAM anomaly.
<b>С Р у.Е</b> (1)	<b>[Other detected faults]</b>	Other detected faults.

(1) Flashing



---

# Annex



# IV

---

## What's in this Part?

This part contains the following chapters:

Chapter	Chapter Name	Page
12	Index of Functions	<a href="#">334</a>
13	Index of Parameter Codes	<a href="#">336</a>



# Index of Functions

The following table represents the parameter codes:

Function	Page
[2 wire] (2C)	<a href="#">93</a>
[2nd CURRENT LIMIT.]	<a href="#">230</a>
[3 wire] (3C)	<a href="#">93</a>
[+/- SPEED]	<a href="#">194</a>
[+/-SPEED AROUND REF.]	<a href="#">196</a>
[AUTO DC INJECTION]	<a href="#">185</a>
[AUTOMATIC RESTART]	<a href="#">266</a>
[Auto tuning]	<a href="#">95</a>
[AUTO TUNING BY LI]	<a href="#">249</a>
DC Bus	<a href="#">259</a>
[BRAKE LOGIC CONTROL]	<a href="#">206</a>
[CATCH ON THE FLY]	<a href="#">267</a>
Command and reference channels	<a href="#">155</a>
Deferred stop on thermal alarm	<a href="#">272</a>
[DRIVE OVERHEAT]	<a href="#">271</a>
[ENCODER FAULT]	<a href="#">277</a>
[ENCODER CONFIGURATION]	<a href="#">143</a>
[FACTORY SETTINGS]	<a href="#">89</a>
[Fault reset]	<a href="#">265</a>
[FLUXING BY LI]	<a href="#">198</a>
[HIGH SPEED HOISTING]	<a href="#">216</a>
[DYN CURRENT LIMIT]	<a href="#">231</a>
[JOG]	<a href="#">187</a>
LINE CONTACTOR COMMAND	<a href="#">232</a>
Load measurement	<a href="#">211</a>
[Load sharing]	<a href="#">130</a>
Load variation detection	<a href="#">281</a>
Motor or configuration switching [MULTIMOTORS/CONFIG.] (P P C -)	<a href="#">245</a>
Motor thermal protection	<a href="#">268</a>
[Noise reduction]	<a href="#">128</a>
[OUTPUT CONTACTOR CMD]	<a href="#">235</a>
[Ovld.Proces.Mngmt]	<a href="#">286</a>
[PARAM. SET SWITCHING]	<a href="#">243</a>
[5 PASSWORD]	<a href="#">315</a>
[PID REGULATOR]	<a href="#">222</a>
POSITIONING BY SENSORS	<a href="#">236</a>
PRESET SPEEDS	<a href="#">189</a>
PTC probe	<a href="#">264</a>
[RAMP]	<a href="#">179</a>
[REFERENCE SWITCH.]	<a href="#">176</a>
Rope slack	<a href="#">216</a>

<b>Function</b>	<b>Page</b>
[RP assignment]	<a href="#">136</a>
REFERENCE MEMORIZING	<a href="#">197</a>
[STOP CONFIGURATION]	<a href="#">182</a>
Stop at distance calculated after deceleration limit switch	<a href="#">238</a>
Summing input / Subtracting input / Multiplier	<a href="#">177</a>
Synchronous motor parameters	<a href="#">120</a>
TORQUE LIMITATION	<a href="#">227</a>
TRAVERSE CONTROL	<a href="#">250</a>
[Underload Managmt.]	<a href="#">285</a>
Use of the "Pulse input" input to measure the speed of rotation of the motor	<a href="#">279</a>

# Index of Parameter Codes



The following table represents the parameter codes:

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (rEF-)	[1.2 MONITORING] (Mon-)	[FACTORY SETTINGS] (FLS-)	[Macro configuration] (CFG)	[SIMPLY START] (S,Π-)	[SETTINGS] (SEL-)	[MOTOR CONTROL] (MCL-)	[INPUTS / OUTPUTS CFG] (I, O-)	[COMMAND] (CLL-)	[FUNCTION BLOCKS] (FBΠ-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (FLM-)	[COMMUNICATION] (COP-)	[3 INTERFACE] (IEF-)	
<i>ACC</i>						<u>98</u>					<u>180</u> <u>196</u> <u>224</u>				
<i>ACC</i>					<u>95</u>	<u>98</u>					<u>179</u>				
<i>AdC</i>											<u>185</u>				
<i>AdCo</i>													<u>291</u>		
<i>Add</i>													<u>290</u>		
<i>A,IA</i>		<u>60</u>						<u>141</u>							
<i>A,IC</i>		<u>60</u>													
<i>A,IE</i>								<u>142</u>							
<i>A,IF</i>		<u>60</u>						<u>142</u>							
<i>A,IS</i>								<u>141</u>							
<i>A,IE</i>								<u>141</u>							
<i>A,IA</i>		<u>60</u>						<u>141</u>							
<i>A,IC</i>		<u>60</u>													
<i>A,IE</i>								<u>142</u>							
<i>A,IF</i>		<u>60</u>						<u>142</u>							
<i>A,IS</i>								<u>142</u>							
<i>A,IE</i>								<u>141</u>							
<i>A,IA</i>		<u>61</u>						<u>142</u>							
<i>A,IC</i>		<u>61</u>													
<i>A,IE</i>								<u>142</u>							
<i>A,IF</i>		<u>61</u>						<u>142</u>							
<i>A,IS</i>								<u>143</u>							
<i>A,IE</i>								<u>142</u>							
<i>A,IC</i>								<u>143</u>			<u>222</u>				
<i>A,IA</i>	<u>54</u>	<u>58</u>													
<i>ALGr</i>		<u>71</u>													
<i>ANoC</i>													<u>290</u>		
<i>AOI</i>		<u>61</u>						<u>153</u>							
<i>AOIC</i>		<u>61</u>													
<i>AOIF</i>		<u>61</u>						<u>153</u>							

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (rEF-)	[1.2 MONITORING] (Mon-)	[FACTORY SETTINGS] (FLS-)	[Macro configuration] (CFG)	[SIMPLY START] (S,Π-)	[SETTINGS] (SEt-)	[MOTOR CONTROL] (MCL-)	[INPUTS / OUTPUTS CFG] (I, O-)	[COMMAND] (CLL-)	[FUNCTION BLOCKS] (FbΠ-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (FLt-)	[COMMUNICATION] (CoΠ-)	[3 INTERFACE] (IEF-)	
<i>RoIt</i>								<u>153</u>							
<i>RoFl</i>								<u>153</u>							
<i>RoHl</i>		<u>61</u>						<u>153</u>							
<i>RoLl</i>		<u>61</u>						<u>153</u>							
<i>APH</i>		<u>70</u>													
<i>ASHl</i>		<u>61</u>						<u>153</u>							
<i>ASLl</i>		<u>61</u>						<u>153</u>							
<i>ASt</i>							<u>123</u>				<u>199</u>				
<i>AEr</i>												<u>266</u>			
<i>AuE</i>							<u>117</u> <u>122</u>								
<i>Au1A</i>								<u>143</u>							
<i>Au2A</i>								<u>143</u>							
<i>bCl</i>											<u>206</u>				
<i>bdCo</i>													<u>291</u>		
<i>bEd</i>											<u>207</u>				
<i>bEn</i>						<u>109</u>					<u>207</u>				
<i>bEt</i>						<u>109</u>					<u>207</u>				
<i>bFr</i>					<u>94</u>		<u>113</u>								
<i>bIP</i>											<u>206</u>				
<i>bIr</i>						<u>109</u>					<u>207</u>				
<i>bLC</i>											<u>206</u>				
<i>bNP</i>									<u>166</u>						
<i>bns</i>		<u>63</u>									<u>167</u>				
<i>bnu</i>		<u>64</u>									<u>167</u>				
<i>boA</i>							<u>128</u>								
<i>boO</i>							<u>128</u>								
<i>brA</i>											<u>181</u>				
<i>brHD</i>											<u>209</u>				
<i>brHl</i>											<u>209</u>				
<i>brH2</i>											<u>210</u>				
<i>brr</i>											<u>210</u>				
<i>brt</i>						<u>109</u>					<u>206</u>				
<i>bSP</i>								<u>139</u>							
<i>bSt</i>											<u>206</u>				
<i>buEr</i>		<u>63</u>								<u>167</u>					
<i>CCFG</i>					<u>94</u>										
<i>CCS</i>									<u>164</u>						
<i>Cd1</i>									<u>164</u>						
<i>Cd2</i>									<u>164</u>						
<i>CFG</i>				<u>90</u>	<u>94</u>										
<i>CFPS</i>		<u>70</u>													
<i>CHARl</i>											<u>243</u>				

Code	[1.1 SPEED REFERENCE] ( <i>rEF-</i> )	[1.2 MONITORING] ( <i>Mon-</i> )	[FACTORY SETTINGS] ( <i>FLS-</i> )	[Macro configuration] ( <i>CFG</i> )	[SIMPLY START] ( <i>S,Π-</i> )	[SETTINGS] ( <i>SEt-</i> )	[MOTOR CONTROL] ( <i>drL-</i> )	[INPUTS / OUTPUTS CFG] ( <i>i-o-</i> )	[COMMAND] ( <i>CLL-</i> )	[FUNCTION BLOCKS] ( <i>FbΠ-</i> )	[APPLICATION FUNCT.] ( <i>Fun-</i> )	[FAULT MANAGEMENT] ( <i>FLt-</i> )	[COMMUNICATION] ( <i>CoΠ-</i> )	[3 INTERFACE] ( <i>iEF-</i> )	CUSTOMER SETTING
<i>CHAP</i>											<u>243</u>				
<i>CHCF</i>									<u>163</u>						
<i>CHΠ</i>											<u>248</u>				
<i>CLP</i>						<u>104</u>					<u>230</u>				
<i>CL,</i>						<u>103</u>	<u>127</u>				<u>230</u>				
<i>LLL</i>												<u>275</u>			
<i>CLo</i>											<u>217</u>				
<i>CLS</i>											<u>240</u>				
<i>CndC</i>		<u>64</u>													
<i>CnFI</i>											<u>248</u>				
<i>CnFP</i>											<u>248</u>				
<i>CnFS</i>		<u>70</u>													
<i>Co d</i>		<u>83</u>													
<i>Co dP</i>		<u>83</u>													
<i>CoF</i>											<u>216</u>				
<i>CoL</i>												<u>276</u>			
<i>CoP</i>									<u>165</u>						
<i>Co r</i>											<u>216</u>				
<i>CoS</i>							<u>115</u>								
<i>CP1</i>											<u>212</u>				
<i>CP2</i>											<u>212</u>				
<i>CrH3</i>		<u>61</u>						<u>142</u>							
<i>CrL3</i>		<u>61</u>						<u>142</u>							
<i>CrSt</i>														<u>308</u>	
<i>Cr tF</i>							<u>126</u>								
<i>CSbY</i>														<u>308</u>	
<i>CS t</i>		<u>83</u>												<u>315</u>	
<i>Ct d</i>						<u>110</u>						<u>267</u>			
<i>Ct t</i>							<u>114</u>								
<i>Ct u</i>		<u>64</u>								<u>167</u>					
<i>dAP</i>											<u>177</u>				
<i>dA3</i>											<u>178</u>				
<i>dAF</i>											<u>239</u>				
<i>dAL</i>											<u>239</u>				
<i>dAnF</i>								<u>145</u>				<u>277</u>			
<i>dAr</i>											<u>239</u>				
<i>dAS</i>											<u>235</u>				
<i>dbS</i>											<u>235</u>				
<i>dCCC</i>											<u>259</u>				
<i>dCCΠ</i>											<u>259</u>				
<i>dCC1</i>		<u>74</u>													
<i>dCC2</i>		<u>75</u>													

Code																		CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (rEF-)	[1.2 MONITORING] (non-)	[FACTORY SETTINGS] (FLS-)	[Macro configuration] (CFG)	[SIMPLY START] (S,Π-)	[SETTINGS] (SEt-)	[MOTOR CONTROL] (drl-)	[INPUTS / OUTPUTS CFG] (i-o-)	[COMMAND] (CLL-)	[FUNCTION BLOCKS] (FBΠ-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (FLt-)	[COMMUNICATION] (CoΠ-)	[3 INTERFACE] (IEF-)				
dCC3		<u>75</u>																
dCC4		<u>75</u>																
dCC5		<u>75</u>																
dCC6		<u>75</u>																
dCC7		<u>75</u>																
dCC8		<u>75</u>																
dCF						<u>102</u>					<u>182</u>	<u>286</u>						
dC,											<u>183</u>							
dE2						<u>98</u>					<u>180</u> <u>196</u>							
dEC					<u>96</u>	<u>98</u>					<u>179</u>							
dLb												<u>281</u>						
dLd												<u>281</u>						
dLr		<u>83</u>															<u>315</u>	
daI								<u>150</u>										
daId								<u>150</u>										
daIH								<u>150</u>										
daIS								<u>150</u>										
dP1		<u>72</u>																
dP2		<u>75</u>																
dP3		<u>75</u>																
dP4		<u>75</u>																
dP5		<u>75</u>																
dP6		<u>75</u>																
dP7		<u>75</u>																
dP8		<u>75</u>																
drc1		<u>74</u>																
drc2		<u>74</u>																
drc3		<u>74</u>																
drc4		<u>74</u>																
drc5		<u>74</u>																
drc6		<u>74</u>																
drc7		<u>74</u>																
drc8		<u>74</u>																
d5F											<u>240</u>							
d5,											<u>196</u>							
d5P											<u>196</u>							
dEF											<u>257</u>							
Ebo											<u>256</u>							
EPL												<u>273</u>						
Enu								<u>143</u>										
EnS								<u>143</u>										
ErCo													<u>291</u>					

Code																		CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (rEF-)	[1.2 MONITORING] (non-)	[FACTORY SETTINGS] (FLS-)	[Macro configuration] (CFG)	[SIMPLY START] (S,Π-)	[SETTINGS] (SEt-)	[MOTOR CONTROL] (drl-)	[INPUTS / OUTPUTS CFG] (i-o-)	[COMMAND] (CLL-)	[FUNCTION BLOCKS] (FBΠ-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (FLt-)	[COMMUNICATION] (CoΠ-)	[3 INTERFACE] (iEF-)				
E t F												272						
F 1							126											
F 2							126											
F 2d							110											
F 3							127											
F 4							127											
F 5							127											
F A b							128											
F A d 1																		301
F A d 2																		301
F A d 3																		301
F A d 4																		301
F A n F								144				277						
F b C d										167								
F b d F										168								
F b F t		63								167								
F b r Π										168								
F b S n										168								
F b S t		63								167								
F C S 1			89															
F d t												280						
F F H							126											
F F Π						112												
F F t						110					182							
F L 1											198							
F L o													291					
F L o C													291					
F L o t													291					
F L r												267						
F L u						104	117				198							
F n 1										166								
F n 2										166								
F n 3										166								
F n 4										166								
F P 1												224						
F 9 A													280					
F 9 C													280					
F 9 F													280					
F 9 L						110							267					
F 9 S		58																
F 9 t													280					
F r 1										163								

Code														CUSTOMER SETTING	
	[1.1 SPEED REFERENCE] (rFF-)	[1.2 MONITORING] (non-)	[FACTORY SETTINGS] (FLS-)	[Macro configuration] (CFG)	[SIMPLY START] (S,Π-)	[SETTINGS] (SEt-)	[MOTOR CONTROL] (MCL-)	[INPUTS / OUTPUTS CFG] (IOP-)	[COMMAND] (CLL-)	[FUNCTION BLOCKS] (FbΠ-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (FLt-)	[COMMUNICATION] (CoΠ-)	[3 INTERFACE] (IEF-)	
Fr1b											176				
Fr2									165						
FrH	58	58 65													
Fr1							124								
Fr5					95		115								
Fr55							124								
Fr6											180				
F5t											182				
F6d						110						267			
F6o						111						286			
F6u						111						285			
F6Y			89												
GFS			89												
GSP														304	
HFI							124								
Hlr							124								
HrFC												266			
H5o											216				
H5P					96	98					258				
H5P2						99					258				
H5P3						99					258				
H5P4						99					258				
I2tA											231				
I2tΠ		59													
I2t1											231				
I2t6											231				
IAD1										169					
IAD2										169					
IAD3										169					
IAD4										169					
IAD5										169					
IAD6										169					
IAD7										169					
IAD8										169					
IAD9										169					
IAD10										169					
IAd1														301	
IAd2														301	
IAd3														301	
IAd4														301	
Ibr						109					206				
IbrA											212				

Code	[1.1 SPEED REFERENCE] (rEF-)	[1.2 MONITORING] (Mon-)	[FACTORY SETTINGS] (FLS-)	[Macro configuration] (CFG)	[SIMPLY START] (S,Π-)	[SETTINGS] (SE-)	[MOTOR CONTROL] (MCL-)	[INPUTS / OUTPUTS CFG] (I-O-)	[COMMAND] (CLL-)	[FUNCTION BLOCKS] (FBΠ-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (FL-)	[COMMUNICATION] (CoΠ-)	[3 INTERFACE] (IEF-)	CUSTOMER SETTING
LdA							119								
LdC						102					183	287			
LdC2						102					184	287			
LdO1										168					
LdO2										168					
LdO3										168					
LdO4										168					
LdO5										168					
LdO6										168					
LdO7										168					
LdO8										168					
LdO9										168					
LdO10										168					
Lr							124								
LnH												275			
LnC						98					179				
LnEP											228				
LPL					94						259	270			
Lrd						109					206				
LtH					95	99									
JdC						109					207				
JF2						111					192				
JF3						111					192				
JFH						111					192				
JGF						104					187				
JGt						104					188				
JoG											187				
JPF						110					192				
L1A		59						135							
L1d								136							
L2A		59						136							
L2d								136							
L3A		59						135							
L3d								136							
L4A		59						136							
L4d								136							
L5A		59						135							
L5d								136							
L6A		59						136							
L6d								136							
LAD1										169					
LAD2										169					

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (rEF-)	[1.2 MONITORING] (non-)	[FACTORY SETTINGS] (FLS-)	[Macro configuration] (CFG)	[SIMPLY START] (S,Π-)	[SETTINGS] (SEt-)	[MOTOR CONTROL] (drl-)	[INPUTS / OUTPUTS CFG] (i-o-)	[COMMAND] (CLL-)	[FUNCTION BLOCKS] (FBΠ-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (FLt-)	[COMMUNICATION] (CoΠ-)	[3 INTERFACE] (iEF-)	
LAD3										169					
LAD4										169					
LAD5										169					
LAD6										169					
LAD7										169					
LAD8										169					
LA1A		59						136							
LA1d								136							
LA2A		59						136							
LA2d								136							
LANF								144				277			
LAC														295	
LbA							130								
LbC						111	130								
LbC1							132								
LbC2							132								
LbC3							132								
LbF							132								
Lc2											230				
Lcr		59													
Lct											233				
Ld5							124								
LE5											233				
LEt												272			
LFA							119								
FFF												286			
LFL3												274			
LFr	54	58													
LFr1		67													
LFr2		67													
LFr3		67													
L151		59													
L152		59													
LLC											233				
LnG														297	
Lo1									148						
Lo1d									148						
Lo1F									149						
Lo1H									149						
Lo1S									148						
LoC						111						286			
LPI											212				

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (rFF-)	[1.2 MONITORING] (non-)	[FACTORY SETTINGS] (FLS-)	[Macro configuration] (CFG)	[SIMPLY START] (S, n-)	[SETTINGS] (SEt-)	[MOTOR CONTROL] (MCL-)	[INPUTS / OUTPUTS CFG] (i-o-)	[COMMAND] (CLL-)	[FUNCTION BLOCKS] (FBn-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (FLt-)	[COMMUNICATION] (CoM-)	[3 INTERFACE] (iEF-)	
LP2											212				
L95							124								
L5P					96	98									
LUL						111						284			
LUn						111						284			
n001										170					
n002										170					
n003										170					
n004										170					
n005										170					
n006										170					
n007										170					
n008										170					
nICt		66													
nIEC		66													
nSLo											241				
nStP											240				
nA2												178			
nA3												178			
nCr							124								
nDt														300	
nFr	54	58				106									
nPF		58													
nPC							118								
nEN												269			
nbrP		69													
nbtP		69													
nC1		66													
nC2		66													
nC3		66													
nC4		66													
nC5		66													
nC6		67													
nC7		67													
nC8		67													
nCA1														290	
nCA2														290	
nCA3														290	
nCA4														290	
nCA5														290	
nCA6														290	
nCA7														290	

Code																CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (rFF-)	[1.2 MONITORING] (non-)	[FACTORY SETTINGS] (FLS-)	[Macro configuration] (CFG)	[SIMPLY START] (S, n-)	[SETTINGS] (SEt-)	[MOTOR CONTROL] (MCL-)	[INPUTS / OUTPUTS CFG] (i-o-)	[COMMAND] (CLL-)	[FUNCTION BLOCKS] (Fb n-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (FLt-)	[COMMUNICATION] (Co n-)	[3 INTERFACE] (iEF-)		
nLAB													290			
nLr					94		115									
nLr5							121									
nL5											240					
n n 1		66														
n n 2		66														
n n 3		66														
n n 4		66														
n n 5		66														
n n 6		66														
n n 7		66														
n n 8		66														
n n A 1													289			
n n A 2													289			
n n A 3													289			
n n A 4													289			
n n A 5													289			
n n A 6													289			
n n A 7													289			
n n A 8													289			
n n E 5		69														
n Pr					94		115									
n r d							128									
n 5 P					95		115									
n 5 P 5							121									
n 5 t											182					
n t i d													292			
n t J		82														
o C C											235					
o d L												286				
o d t												270				
o H L												271				
o L L												269				
o P L												270				
o Pr		58														
o 5 P											217					
o t r		58														
PAH							107				224					
PAL							107				223					
PAS											240					
PAu											224					
PCd														307		

Code																CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (rEF-)	[1.2 MONITORING] (Mon-)	[FACTORY SETTINGS] (FLS-)	[Macro configuration] (CFG)	[SIMPLY START] (S,Π-)	[SETTINGS] (SEt-)	[MOTOR CONTROL] (MCL-)	[INPUTS / OUTPUTS CFG] (I-O-)	[COMMAND] (CLL-)	[FUNCTION BLOCKS] (FBΠ-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (FLt-)	[COMMUNICATION] (CoΠ-)	[3 INTERFACE] (IEF-)		
PEr						107					224					
PE5											212					
PF1		62						136								
PFr		62						136								
PG1								143								
PH5							124									
PiR		62						136								
PiC											223					
PiF											222					
PiF1											222					
PiF2											222					
Pi1											222					
PiL		62						136								
PiΠ											225					
PiP1											222					
PiP2											222					
Pi5											224					
POH						107					223					
POL						107					223					
PP1												283				
PPn5							121									
Pr2											226					
Pr4											226					
Pr5t											240					
PrP						107					223					
PS16											190					
PS2											190					
PS4											190					
PS8											190					
PSr						107					224					
PSt									163							
PtCL												264				
PtH		70														
Pu15														307		
q5H						110					256					
q5L						110					256					
r1								146								
r1d								146								
r1F								147								
r2F								148								
r1H								147								
r15								147								

Code															CUSTOMER SETTING
	[1.1 SPEED REFERENCE] ( <i>rEF-</i> )	[1.2 MONITORING] ( <i>Mon-</i> )	[FACTORY SETTINGS] ( <i>FLS-</i> )	[Macro configuration] ( <i>CFG</i> )	[SIMPLY START] ( <i>S,Π-</i> )	[SETTINGS] ( <i>SEt-</i> )	[MOTOR CONTROL] ( <i>drL-</i> )	[INPUTS / OUTPUTS CFG] ( <i>i-o-</i> )	[COMMAND] ( <i>CLL-</i> )	[FUNCTION BLOCKS] ( <i>FbΠ-</i> )	[APPLICATION FUNCT.] ( <i>Fun-</i> )	[FAULT MANAGEMENT] ( <i>FLt-</i> )	[COMMUNICATION] ( <i>CoΠ-</i> )	[3 INTERFACE] ( <i>iEF-</i> )	
<i>r 2</i>								<u>147</u>							
<i>r 2d</i>								<u>147</u>							
<i>r 2H</i>								<u>147</u>							
<i>r 2S</i>								<u>147</u>							
<i>r CA</i>											<u>235</u>				
<i>r Cb</i>											<u>176</u>				
<i>r dAE</i>							<u>125</u>								
<i>r dG</i>						<u>107</u>					<u>223</u>				
<i>r EC 1</i>		<u>69</u>													
<i>r FC</i>								<u>164</u>							
<i>r FCC</i>		<u>64</u>													
<i>r FLt</i>		<u>82</u>													
<i>r Fr</i>		<u>58</u>													
<i>r iG</i>						<u>107</u>					<u>223</u>				
<i>r in</i>								<u>163</u>							
<i>r Mod</i>						<u>111</u>						<u>284</u>			
<i>r P</i>												<u>265</u>			
<i>r P 1 1</i>		<u>67</u>													
<i>r P 1 2</i>		<u>67</u>													
<i>r P 1 3</i>		<u>67</u>													
<i>r P 1 4</i>		<u>67</u>													
<i>r P 2</i>						<u>107</u>					<u>226</u>				
<i>r P 2 1</i>		<u>68</u>													
<i>r P 2 2</i>		<u>68</u>													
<i>r P 2 3</i>		<u>68</u>													
<i>r P 2 4</i>		<u>68</u>													
<i>r P 3</i>						<u>108</u>					<u>226</u>				
<i>r P 3 1</i>		<u>68</u>													
<i>r P 3 2</i>		<u>68</u>													
<i>r P 3 3</i>		<u>68</u>													
<i>r P 3 4</i>		<u>68</u>													
<i>r P 4</i>						<u>108</u>					<u>226</u>				
<i>r PA</i>												<u>265</u>			
<i>r PC</i>	<u>54</u>	<u>70</u>													
<i>r PE</i>		<u>70</u>													
<i>r PF</i>		<u>70</u>													
<i>r PG</i>						<u>107</u>					<u>223</u>				
<i>r P i</i>	<u>54</u>	<u>70</u>									<u>223</u>				
<i>r P o</i>		<u>70</u>													
<i>r P r</i>		<u>70</u>													
<i>r P S</i>											<u>180</u>				
<i>r P t</i>											<u>179</u>				

Code	[1.1 SPEED REFERENCE] (rEF-)	[1.2 MONITORING] (Mon-)	[FACTORY SETTINGS] (FLS-)	[Macro configuration] (CFG)	[SIMPLY START] (S,Π-)	[SETTINGS] (SEt-)	[MOTOR CONTROL] (MCL-)	[INPUTS / OUTPUTS CFG] (I-O-)	[COMMAND] (CLL-)	[FUNCTION BLOCKS] (FBΠ-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (FLt-)	[COMMUNICATION] (CoΠ-)	[3 INTERFACE] (IEF-)	CUSTOMER SETTING
r r 5								134							
r 5A							119								
r 5A5							124								
r 5d											217				
r 5F												265			
r 5L											225				
r 5tL											217				
r tH		70													
r t r											257				
r un								134							
S 10 1											243				
S 10 2											243				
S 10 3											243				
S 10 4											243				
S 10 5											243				
S 10 6											243				
S 10 7											243				
S 10 8											243				
S 10 9											243				
S 11 0											243				
S 11 1											243				
S 11 2											243				
S 11 3											243				
S 11 4											243				
S 11 5											243				
S 20 1											243				
S 20 2											243				
S 20 3											243				
S 20 4											243				
S 20 5											243				
S 20 6											243				
S 20 7											243				
S 20 8											243				
S 20 9											243				
S 2 10											243				
S 2 11											243				
S 2 12											243				
S 2 13											243				
S 2 14											243				
S 2 15											243				
S 30 1											244				
S 30 2											244				

Code																CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (rFF-)	[1.2 MONITORING] (Mon-)	[FACTORY SETTINGS] (FLS-)	[Macro configuration] (CFG)	[SIMPLY START] (S,Π-)	[SETTINGS] (SEt-)	[MOTOR CONTROL] (MCL-)	[INPUTS / OUTPUTS CFG] (IOP-)	[COMMAND] (CLL-)	[FUNCTION BLOCKS] (FBΠ-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (FLt-)	[COMMUNICATION] (CoΠ-)	[3 INTERFACE] (IEF-)		
S303											244					
S304											244					
S305											244					
S306											244					
S307											244					
S308											244					
S309											244					
S310											244					
S311											244					
S312											244					
S313											244					
S314											244					
S315											244					
SA2											177					
SA3											177					
SAF1		77														
SAF2		78														
SAL											239					
SAr											239					
SAE												272				
SCL											217					
SCL3											260					
SCL5			89													
SdC1						102					185 207					
SdC2						103					186					
Sdd												277				
Sd,F		58														
Sd5						112										
SFD0		78														
SFD1		78														
SFD2		79														
SFD3		79														
SFD4		79														
SFD5		80														
SFD6		80														
SFD7		80														
SFD8		81														
SFD9		81														
SFD10		81														
SFD11		82														
SFC						99	126									
SFd											240					

Code	[1.1 SPEED REFERENCE] (rFF-)	[1.2 MONITORING] (non-)	[FACTORY SETTINGS] (FLS-)	[Macro configuration] (CFG)	[SIMPLY START] (S,Π-)	[SETTINGS] (SE-)	[MOTOR CONTROL] (MCL-)	[INPUTS / OUTPUTS CFG] (IOP-)	[COMMAND] (CLL-)	[FUNCTION BLOCKS] (FBΠ-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (FL-)	[COMMUNICATION] (COP-)	[3 INTERFACE] (IEF-)	CUSTOMER SETTING
SFFE		<u>63</u> <u>77</u>													
SFr						<u>103</u>	<u>127</u>								
SFt							<u>127</u>								
SH2											<u>258</u>				
SH4											<u>258</u>				
Sir							<u>125</u>								
Sit						<u>99</u>	<u>126</u>								
SLL												<u>276</u>			
SLP						<u>99</u>	<u>126</u>								
SLSS		<u>62</u>													
SΠot							<u>122</u>								
SπC											<u>257</u>				
SOP							<u>128</u>								
SP10						<u>105</u>					<u>191</u>				
SP11						<u>105</u>					<u>191</u>				
SP12						<u>105</u>					<u>191</u>				
SP13						<u>106</u>					<u>191</u>				
SP14						<u>106</u>					<u>191</u>				
SP15						<u>106</u>					<u>191</u>				
SP16						<u>106</u>					<u>191</u>				
SP2						<u>105</u>					<u>190</u>				
SP3						<u>105</u>					<u>190</u>				
SP4						<u>105</u>					<u>190</u>				
SP5						<u>105</u>					<u>190</u>				
SP6						<u>105</u>					<u>190</u>				
SP7						<u>105</u>					<u>190</u>				
SP8						<u>105</u>					<u>191</u>				
SP9						<u>105</u>					<u>191</u>				
SPb							<u>124</u>								
SPd1		<u>71</u>													
SPd2		<u>71</u>													
SPd3		<u>71</u>													
SPF							<u>124</u>								
SPG						<u>99</u>	<u>126</u>								
SPGu						<u>99</u>	<u>126</u>								
SΠn											<u>197</u>				
Sr11		<u>72</u>													
Sr12 to Sr18		<u>75</u>													
Sr21		<u>72</u>													

Code																CUSTOMER SETTING
	[1.1 SPEED REFERENCE] (rEF-)	[1.2 MONITORING] (Mon-)	[FACTORY SETTINGS] (FLS-)	[Macro configuration] (CFG)	[SIMPLY START] (S,Π-)	[SETTINGS] (SE-)	[MOTOR CONTROL] (MCL-)	[INPUTS / OUTPUTS CFG] (IOP-)	[COMMAND] (CL-)	[FUNCTION BLOCKS] (FBΠ-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (FL-)	[COMMUNICATION] (COP-)	[3 INTERFACE] (IEF-)		
Sr22 to Sr2B		75														
SrA1		72														
SrA2 to SrAB		75														
Srb1		72														
Srb2 to SrbB		75														
SrC1		72														
SrC2 to SrCB		75														
Srd1		72														
Srd2 to SrdB		75														
SrE1		72														
SrE2 to SrEB		75														
SrF1		72														
SrF2 to SrFB		75														
SrG1		72														
SrG2 to SrGB		75														
SrH1		72														
SrH2 to SrHB		75														
SrI1		72														
SrI2 to SrIB		75														
SrJ1		72														
SrJ2 to SrJB		75														
SrK1		72														
SrK2 to SrKB		75														
SrL1		72														

Code	[1.1 SPEED REFERENCE] (rEF-)	[1.2 MONITORING] (Mon-)	[FACTORY SETTINGS] (FLS-)	[Macro configuration] (CFG)	[SIMPLY START] (S,Π-)	[SETTINGS] (SEt-)	[MOTOR CONTROL] (drl-)	[INPUTS / OUTPUTS CFG] (i-o-)	[COMMAND] (CLL-)	[FUNCTION BLOCKS] (FBΠ-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (FLt-)	[COMMUNICATION] (CoΠ-)	[3 INTERFACE] (iEF-)	CUSTOMER SETTING
SrL2 to SrLB		75													
Srb						111						285 286			
SrP						106					196				
SS, S		62													
SSb												278			
Std											240				
StFr		58													
StΠ												273			
Sto												278			
StoS		62													
StP												273			
Str											194				
Strt												274			
Stt											182				
Stun					95		116 122								
SuL							128								
tA1						98					179				
tA2						98					180				
tA3						98					180				
tA4						98					180				
tAA											228				
tAC		82													
tAC2		82													
tAnF								144				277			
tAr												266			
tBE						109					207				
tBo											256				
tBr													290		
tBS												274			
tCC					93			133							
tCt								134							
tDC						102					184	288			
tDC1						102					185				
tDC2						103					186				
tDi						102					183	287			
tDn											256				
tDS												280			
tEC1		69													
tFo													290		

Code	[1.1 SPEED REFERENCE] (rFF-)	[1.2 MONITORING] (non-)	[FACTORY SETTINGS] (FLS-)	[Macro configuration] (CFG)	[SIMPLY START] (S,Π-)	[SETTINGS] (SE-)	[MOTOR CONTROL] (MCL-)	[INPUTS / OUTPUTS CFG] (I, O-)	[COMMAND] (CLL-)	[FUNCTION BLOCKS] (FBΠ-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (FL-)	[COMMUNICATION] (CΠΠ-)	[3 INTERFACE] (IF-)	CUSTOMER SETTING
tFr					95			113							
tHA												271 272			
tHd		58													
tHr		58													
tHt												269			
tLA											228				
tLC											229				
tLd												281			
tLIG						110					228				
tLIP						109					228				
tLS						104					225				
tNL												282			
tOL												286			
tOS											216				
tP11		67													
tP12		68													
tP13		68													
tP14		68													
tP21		68													
tP22		68													
tP23		68													
tP24		68													
tP31		69													
tP32		69													
tP33		69													
tP34		69													
t9b												280			
t95							121								
tRA							119								
tRC											256				
tRH						110					256				
tRL						110					256				
t5Π												273			
t5Y											257				
ttd						110						269 272			
ttd2												269 272			
ttd3												269 272			
tEH						110						267			
tEL						110						267			

Code	[1.1 SPEED REFERENCE] (rEF-)	[1.2 MONITORING] (Mon-)	[FACTORY SETTINGS] (FLS-)	[Macro configuration] (CFG)	[SIMPLY START] (S,Π-)	[SETTINGS] (SEt-)	[MOTOR CONTROL] (MCL-)	[INPUTS / OUTPUTS CFG] (I-O-)	[COMMAND] (CLL-)	[FUNCTION BLOCKS] (FBΠ-)	[APPLICATION FUNCT.] (Fun-)	[FAULT MANAGEMENT] (FLt-)	[COMMUNICATION] (CoΠ-)	[3 INTERFACE] (IEF-)	CUSTOMER SETTING
tt0												290			
tte						109				208					
tUL										249					
tun					95		116 121								
tunu							117 122								
tUP										256					
tU5					95		116 122								
u1							126								
u2							126								
u3							127								
u4							127								
u5							127								
ubr											261		130		
udL												285			
uFr						99	126								
uH1		60						141							
uH2		60						142							
uL1		60						141							
uL2		60						141							
uLn		58													
uLr		83													
uLt												284			
un5					94		115								
uOH1		61						153							
uOL1		61						153							
uOP		58													
uPL												273			
urE5											260	273			
u5b												273			
u5i											196				
u5L											261	273			
u5P											194				
u5t												273			



# Glossary

14

## D

### Display terminal

The display terminal menus are shown in square brackets.  
For example: **[Communication]**  
The codes are shown in round brackets.  
For example: *⌈ □ Π -*  
Parameter names are displayed on the display terminal in square brackets.  
For example: **[Fallback Speed]**  
Parameter codes are displayed in round brackets.  
For example: *L F F*

## E

### Error

Discrepancy between a detected (computed, measured, or signaled) value or condition and the specified or theoretically correct value or condition.

## F

### Factory setting

Factory settings when the product is shipped

### Fault

Fault is an operating state. If the monitoring functions detect an error, a transition to this operating state is triggered, depending on the error class. A "Fault reset" is required to exit this operating state after the cause of the detected error has been removed. Further information can be found in the pertinent standards such as IEC 61800-7, ODVA Common Industrial Protocol (CIP).

### Fault Reset

A function used to restore the drive to an operational state after a detected error is cleared by removing the cause of the error so that the error is no longer active.

## M

### Monitoring function

Monitoring functions acquire a value continuously or cyclically (for example, by measuring) in order to check whether it is within permissible limits. Monitoring functions are used for error detection.  
Glossary

## P

### Parameter

Device data and values that can be read and set (to a certain extent) by the user.

**PELV**

Protective Extra Low Voltage, low voltage with isolation. For more information: IEC 60364-4-41

**PLC**

Programmable logic controller

**Power stage**

The power stage controls the motor. The power stage generates current for controlling the motor.

**W****Warning**

If the term is used outside the context of safety instructions, a warning alerts to a potential problem that was detected by a monitoring function. A warning does not cause a transition of the operating state.

