


CHS2 Inverter Quick Installation Guide

The installation of this device must be operated by safety certified professionals, see the user manual for detailed information.


1. Installation Method and Position

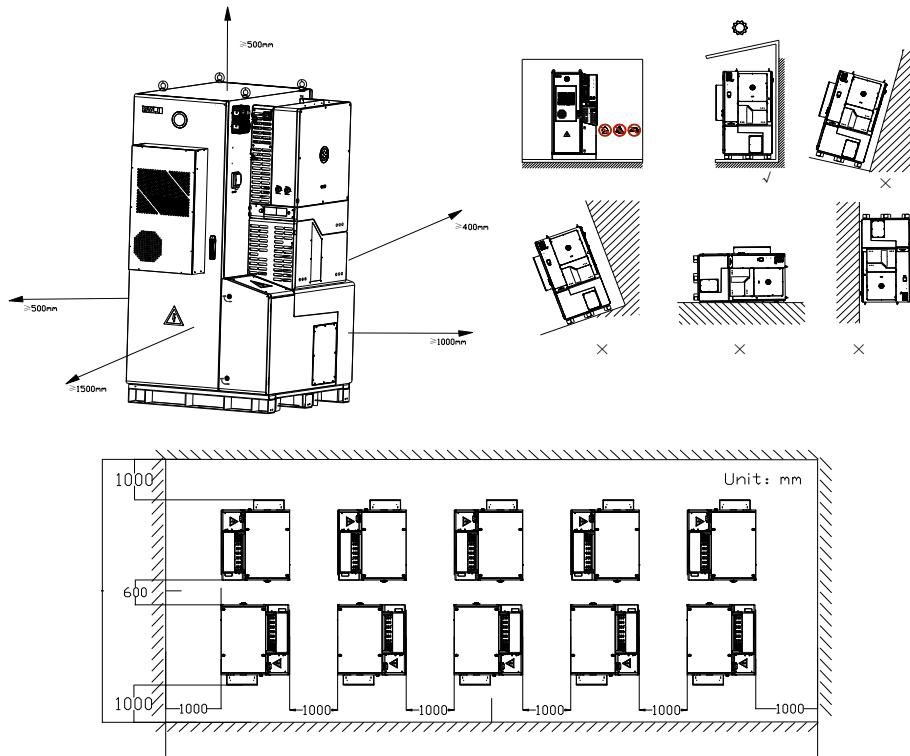

2. Installing the Inverter

1. Place the cardboard flat on the floor, mark the location of the holes with a marker, then remove the cardboard. Drill the holes by using an electric drill (18mm in diameter, 80-90mm in depth). Disassemble the M12*80 expansion screws and put the screws sleeves into the holes.

Note: The ground should be flat and no inclination.

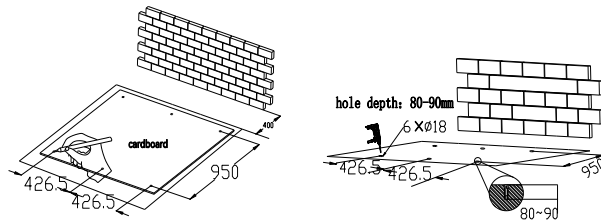

2. Install the cabinet to the designated location

By using a crane:

As shown in the following figure, lift the cabinet, align the holes at the cabinet bottom with the drilled holes, and place it onto the floor. A force greater than 2t is required to move this device, the height between the sling and the top surface must be greater than or equal to 1.5M.

By using a forklift:


As shown in the following figure, move the cabinet, align the holes at the cabinet bottom with the drilled holes, and place it onto the floor.

To choose a right forklift, refer to the following requirements:


- Load capacity must be greater than 2 tons.
- The length of the metal forks must be greater than 1.2 meter. Use fork extensions if needed.
- The forks can slide under the cabinet bottom without damaging the cabinet.

To use the forklift, make sure that:

- The forks should be extend out of the cabinet.
- Adjust the distance between the two forks to ensure load stability.

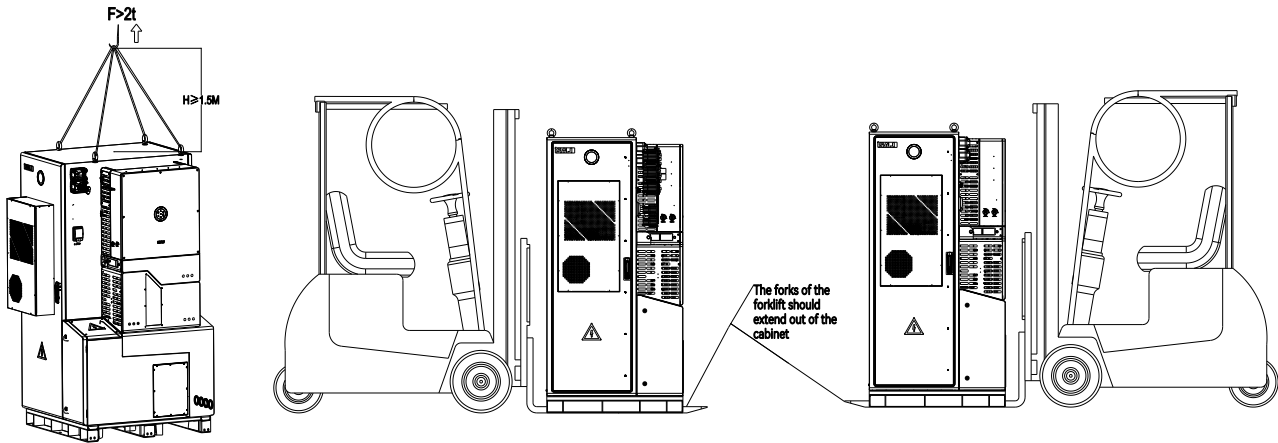


3. Install the M12*80 screw bolt at the bottom of the cabinet and secure them by using a wrench.

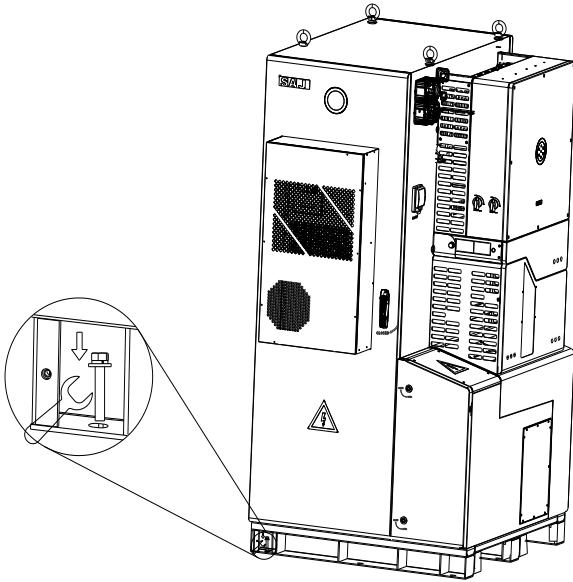


☐ 3. Grounding Connection

Note: A 6 mm² conductor cross-sectional area of cable is recommended for additional grounding cable.

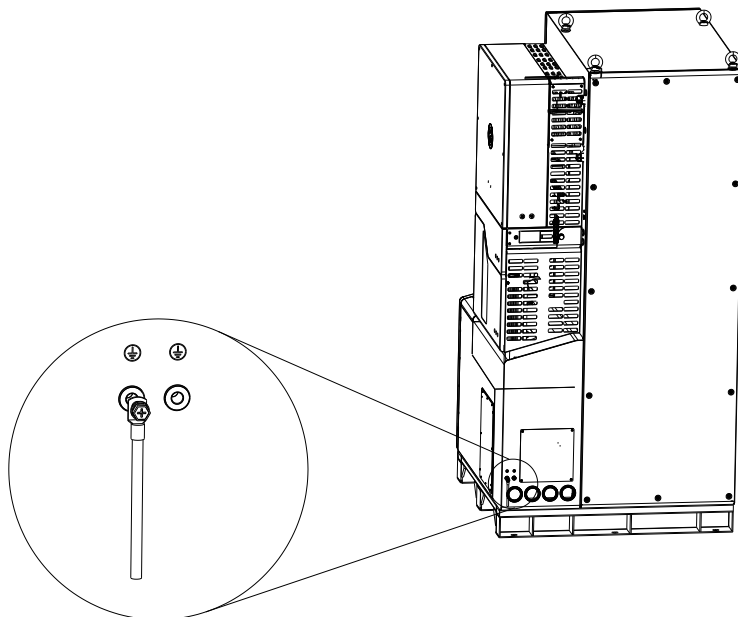


4. Preparation Before Installation

Note: When the machine is wired to the outside, these cables need to pass through the hole in the lower right corner of the machine.

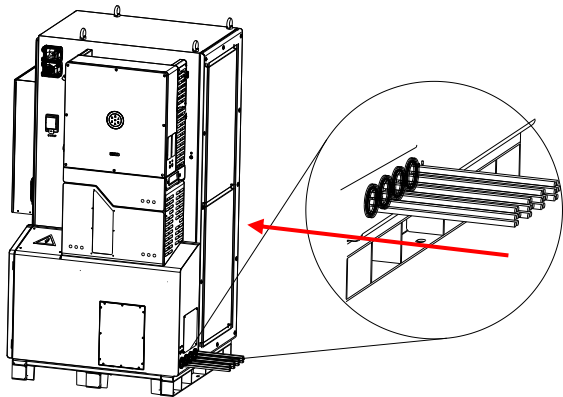

1. Disassemble the metal plate above the outlet hole to facilitate wiring operations.
2. Use a knife to cut the end of the cable sleeve at the cable outlet hole.
3. Remove the decorative panel of the inverter.
4. Remove the AC cover.
5. Loosen the beam suspended in the middle of the inverter.
6. Remove the baffle under the inverter.

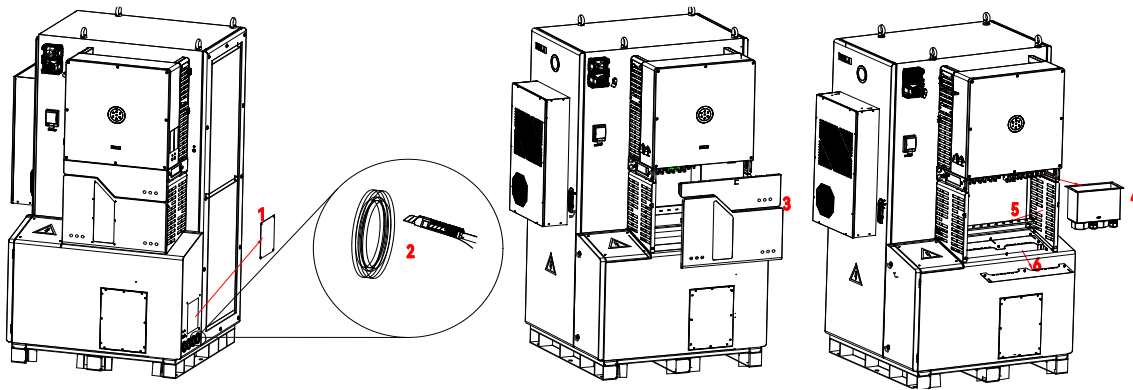

5. Connecting the AC Cable

Recommended specifications of GRID cables:


Type	Cable cross-sectional area (mm ²)		Conductor material
	Range	Recommend	
CHS2-(29.9K-63K)-(T4, T5, T6)-X	35 - 70	50	Copper
Grounding cable cross-sectional area (mm ²): 25			

Recommended specifications of GEN and Back-up cables:


Type	Cable cross-sectional area (mm ²)		Conductor material
	Range	Recommend	
CHS2-(29.9K-63K)-(T4, T5, T6)-X	16 - 25	25	Copper
Grounding cable cross-sectional area (mm ²): 25			

Note: If the grid-connection distance is too far, please select an AC cable with larger diameter as per the actual condition.

1. Pass the cables to be connected through the corresponding waterproof holes.

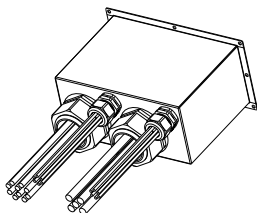

- Connect the communication cables to the appropriate ports. Fix the inner core wires of the GRID, GEN, and backup cables to the terminals marked L1, L2, L3, N, and PE on the machine.

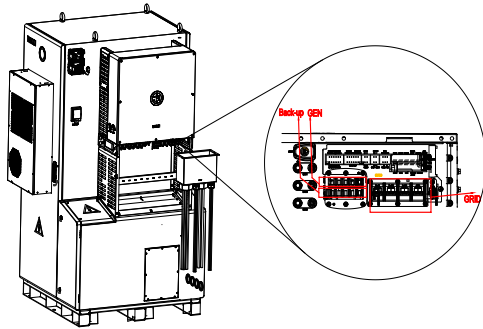


6. PV Side Connection


Recommended specifications of DC cable

Conductor cross-sectional area of cables (mm ²)		Conductor material
Scope	Recommended value	Outdoor multi-core copper wire cable, complying with 1000 V DC
4.0 - 6.0	4.0	


- Loosen the lock screws on positive and negative connector.
- Strip the insulation of the positive and negative cables with 8-10mm length.

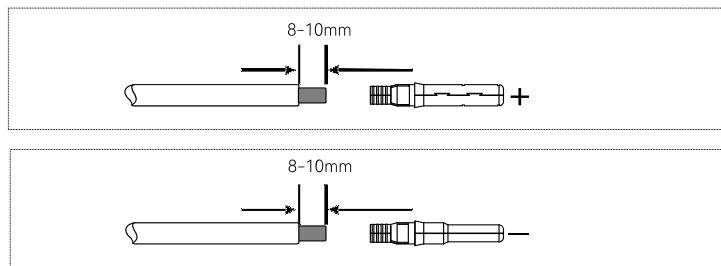


- Assembly the positive and negative cables with corresponding crimping pliers.

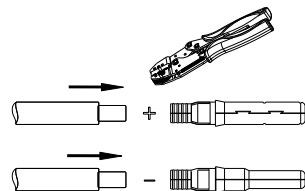


- Insert the positive and negative cable into positive and negative connector. Gently pull the cables backward to ensure firm connection.

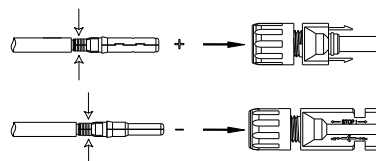


- Fasten the lock screws on positive and negative connectors.

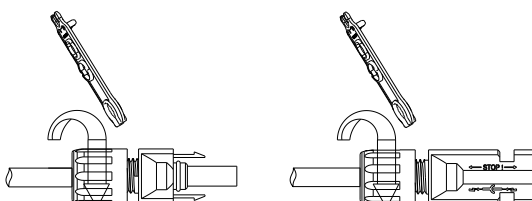


6. Make sure the DC switch is at OFF position.

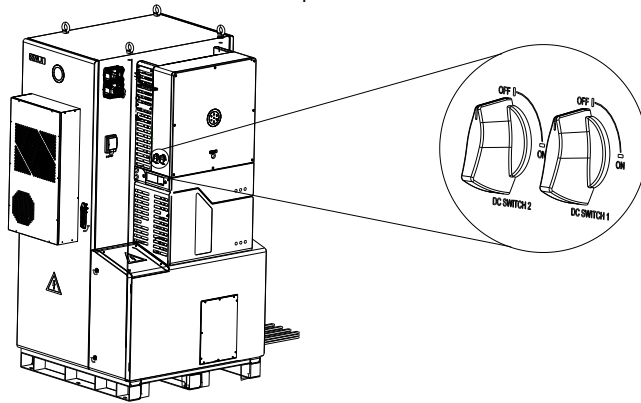

7. Connect the positive and negative connectors into positive and negative DC input terminals of the inverter, a “click” should be heard or felt when the contact cable assembly is seated correctly.

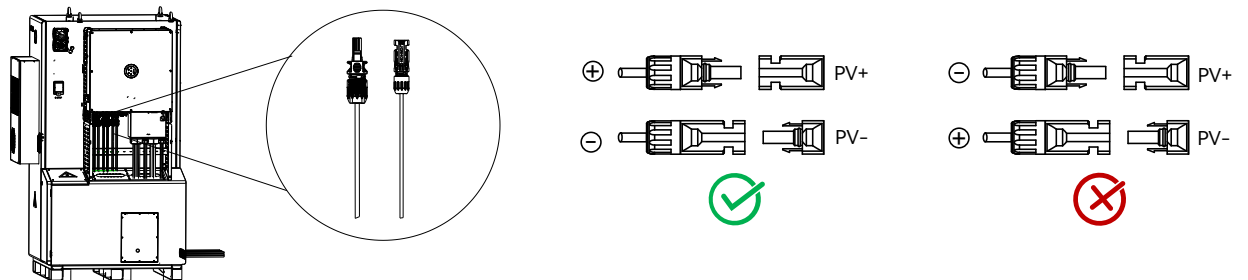


☐ 7. Communication Connection

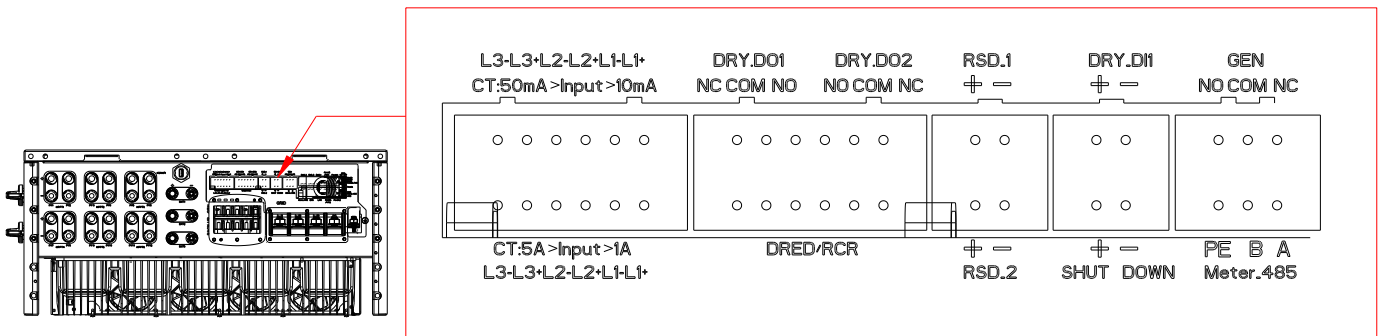


- ## 1. Export Limit Setting


The meter communication cable can be connected to the Meter_485 of the Phoenix terminal of the inverter and the METER interface of the RS485.

Note: The electric meter needs to be CHINT's DTSU666 electric meter.

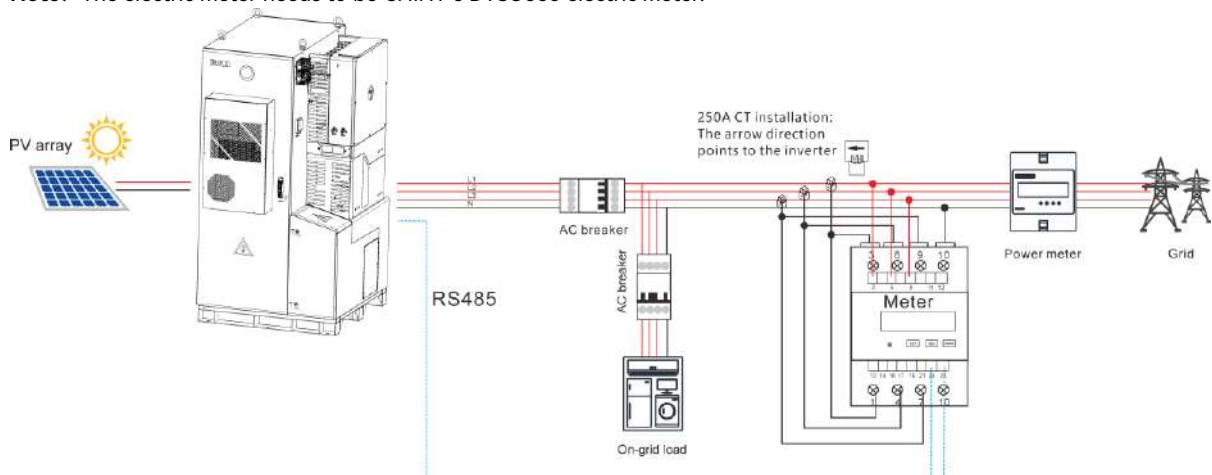


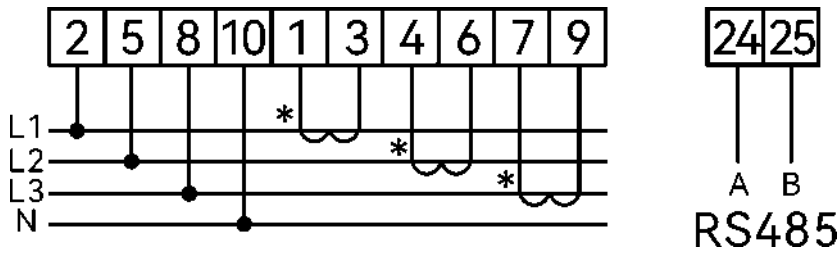

If two meters are used, set the address of the inverter-side meter to 2. Do NOT change the default address 1 of the grid-side meter.
The CT arrow direction points to the CHS2 inverter.

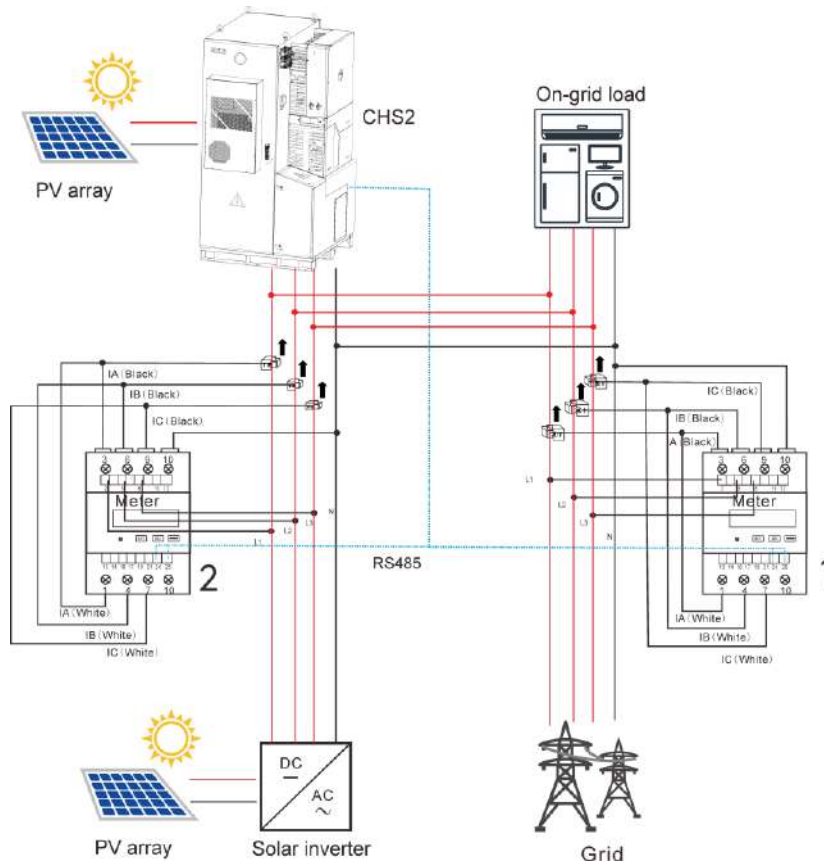


To set a three-phase meter, perform the following operations:

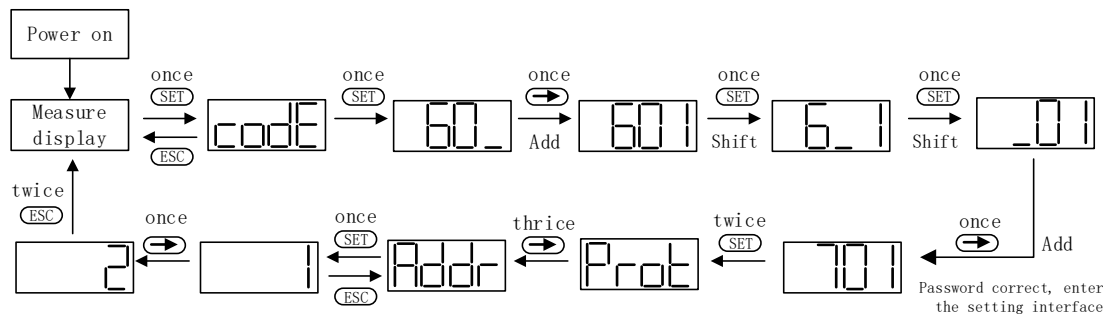


- Power on the meter and enter the “Measure display” interface, and then press **SET** twice to enter the password 701.
- Press **→** once to adjust the value of the first digit. One increment per button pressing.
- Pressing **SET** once to shift to the second digit and adjust the third digit in the same way. Set the default password to 701.
- When the password is entered correctly, press **SET** twice to enter the port interface and press **→** for three times to enter the address page. Then, press **SET** once to start to set the meter address.
- Press **→** to adjust the value of the address. One increment per button pressing.
- After the address is set successfully, press **ESC** twice to exit to the Measure display interface to get the meter work.

2. Dry Contact Connection

Reserved output dry contact:

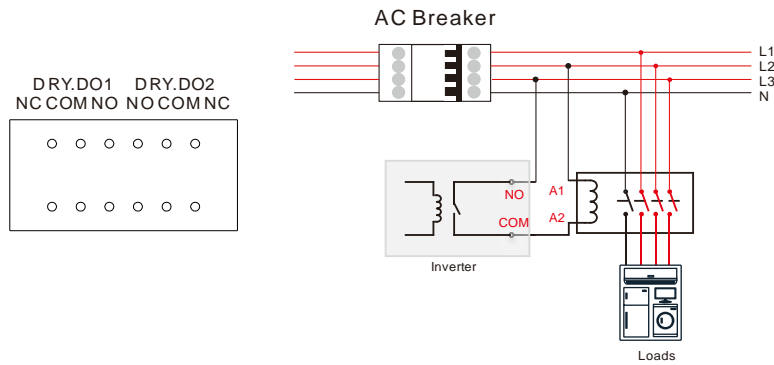


Generator start and stop control signal:

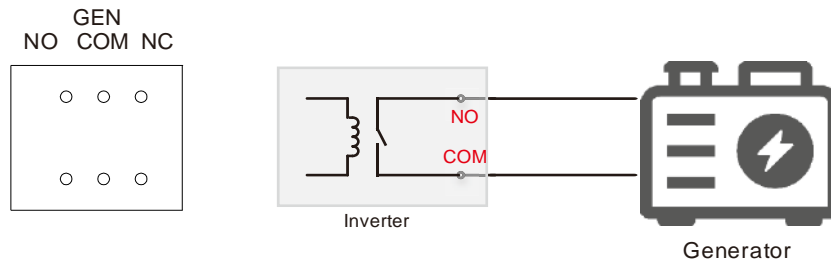


3. RCR Connection

RCR provides RCR signal control ports to meet the power grid dispatching requirements in Germany and other regions.

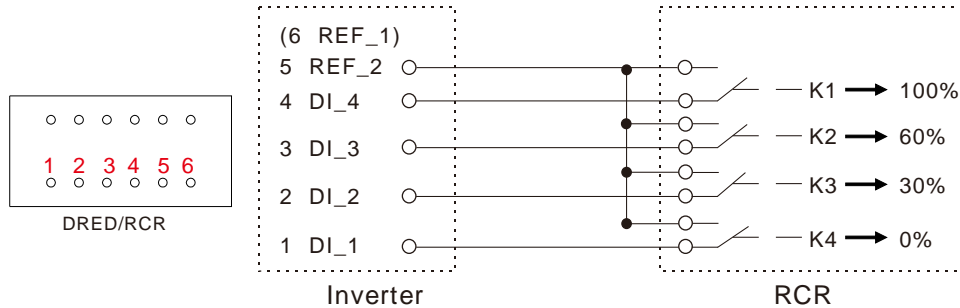


4. 12V Power Output

RSD_1, RSD_2 supplies power to the external photovoltaic fast shutdown module, and controls the power on and off by controlling the power of the module.

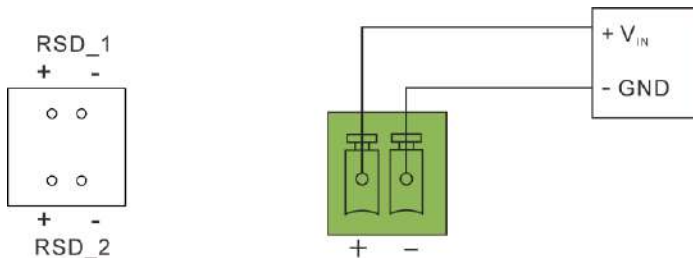

5. Emergency Stop Dry Contact

When + contact and - contact are shorted by external controlled switch, the inverter will stop immediately. DRY_DI1: Reserved input dry contact.

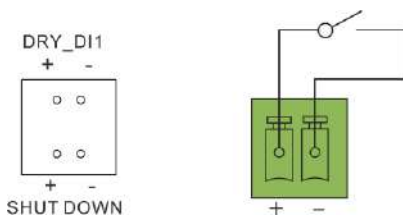

6. RJ45 Pin Port Definition



EMS		
1	NC	
2	NC	
3	NC	
4	NC	
5	NC	
6	NC	
7	RS485-A	
8	RS485-B	

RS485_PAR1/RS485_PAR2		
1	NC	
2	NC	
3	NC	
4	NC	
5	NC	
6	NC	
7	RS485-A	
8	RS485-B	

METER		
1	RS485-B	
2	RS485-A	
3	NC	
4	RS485-B	
5	RS485-A	
6	NC	
7	RS485-A	
8	RS485-B	


BMS_1/ BMS_2/ BMS_3		
1	Shut down—BMS	
2	GND_S	
3	NC	
4	CANH	
5	CANL	
6	NC	
7	NC	
8	NC	

Parelle1/ Parelle2		
1	SYN B	
2	SYN A	
3	SYN B	
4	SYN B	
5	SYN A	
6	SYN A	
7	CANL	
8	CANH	


LAN		
1	TX_D1+	
2	TX_D1-	
3	RX_D2+	
4	BI_D3+	
5	BI_D3-	
6	RX_D2-	
7	BI_D4+	
8	BI_D4-	

7. Communication Cable Connection

Connect the communication cables to the appropriate ports.

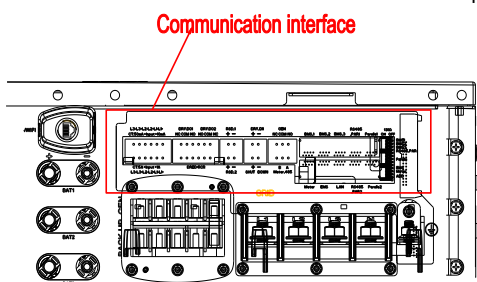


Install the crossbeam suspended in the middle of the inverter and the baffle under the inverter back to their original positions. Secure all parts of the grid and backup connector tightly.

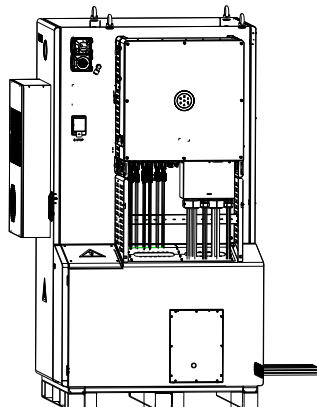


8. Communication Module Installation

Plug in the communication module to 4G/WIFI port and secure the module by rotating the nut.

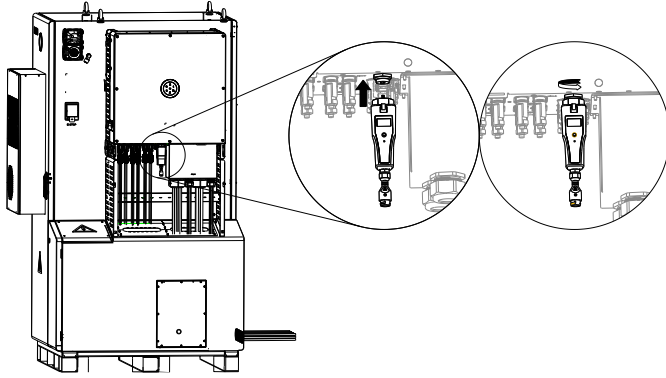


9. Install Decorative Panels

Reinstall the removed decorative panel onto the machine.
Install the metal plate above the outlet hole back.

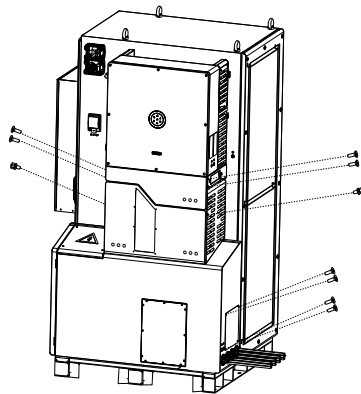


10. Wiring diagram

Single machine wiring:

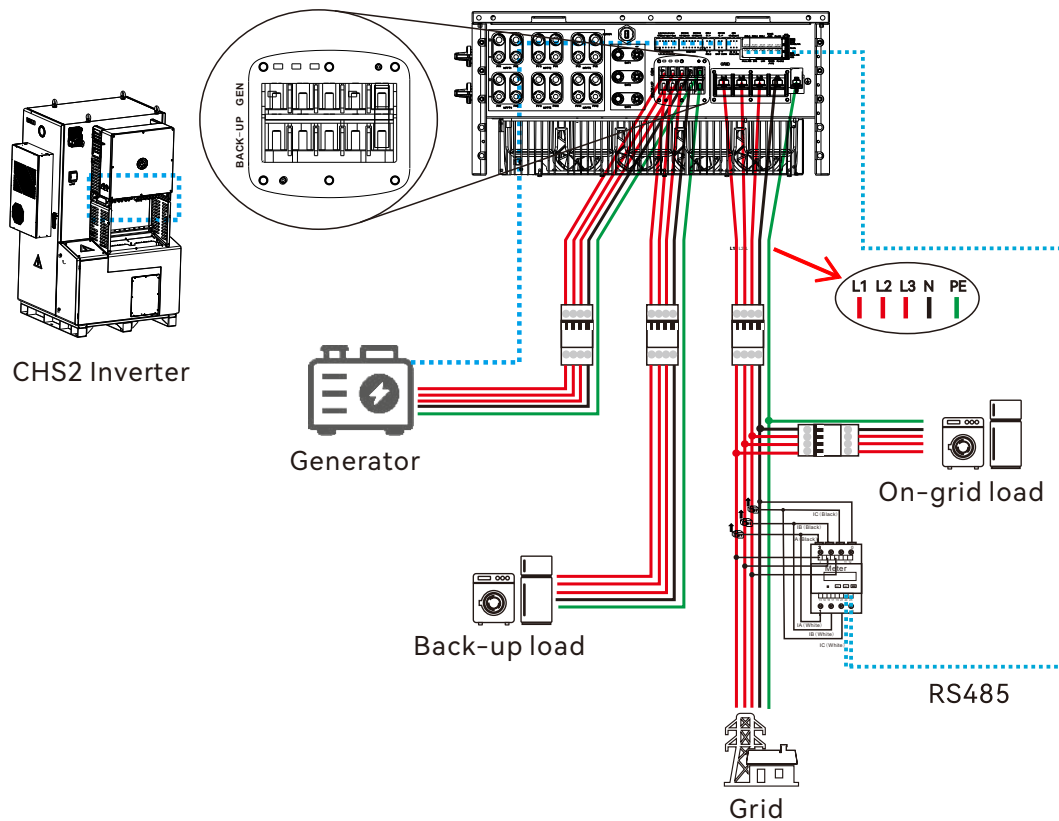


Parallel wiring:

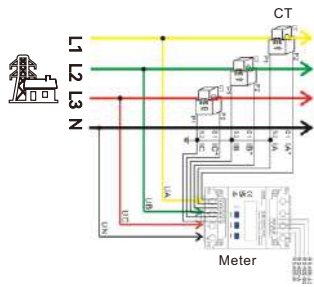

The example of CAN connection is as follows:



ATS Interface	EMS Interface
18(A)	485A3
17(B)	485B3
23	LDI1
24	LDI2
21	DO1
22	DO2
13	DO3
12	
15	
12	
14	
12	

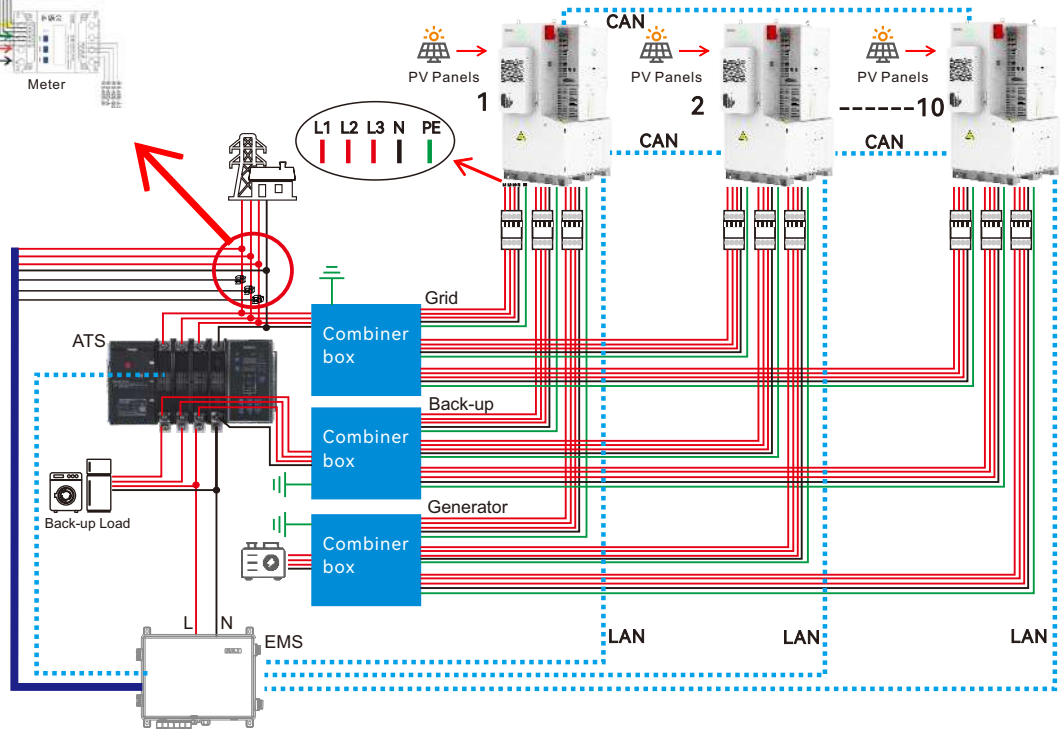

Note: All power cables from back-up terminals of inverters in the combined cabinet to the combiner box shall be equal in length;
All power cables from generator terminals of inverters in the combined cabinet to the combiner box shall be equal in length.

Installer: _____