



2525 GARDNER ROAD, BROADVIEW, IL 60155
 1.800.323.9114 • Outside U.S. 1.708.865.1500
 www.tksimplex.com



G5 AUTOCYCLE TORQUE PUMP

Reference # - TD069

Rev. - A

Date - 0810

CONTENTS

| | |
|--|-----|
| <i>Receiving Instructions and Warranty Statement</i> | 2 |
| <i>Safe and Correct Use</i> | 3 |
| <i>Technical Specifications</i> | 4 |
| <i>Working Pressure</i> | 4 |
| <i>Install Vent Plug</i> | 4 |
| <i>Adding Oil</i> | 4 |
| <i>Electrical</i> | 4 |
| <i>Connecting Hydraulic Tools</i> | 4 |
| <i>Starting Pump the First Time</i> | 4-5 |
| <i>Pump Mounting</i> | 5 |
| <i>Control Valves</i> | 5 |
| <i>Power Control Switches</i> | 5 |
| <i>Pressure Torque Setting</i> | 6 |
| <i>Diagnostic Mode</i> | 6 |
| <i>After Completing the Job</i> | 6 |
| <i>Periodic Maintenance</i> | 6 |
| <i>Maintain Oil Level</i> | 7 |
| <i>Clean Oil Intake Screen</i> | 7 |
| <i>Flushing the Pump</i> | 7 |

PENDANT CONTROL SECTION

| | |
|-------------------------------|----|
| <i>Pendant Overview</i> | 8 |
| <i>Pendant Startup</i> | 9 |
| <i>Main Menu</i> | 10 |
| <i>Unit Settings</i> | 10 |
| <i>Manual Mode</i> | 10 |
| <i>Auto Cycle Mode</i> | 11 |
| <i>History Menu</i> | 11 |
| <i>Troubleshooting</i> | 12 |

TO RETRIEVE TECHNICAL PART SHEET DOCUMENTATION, GO TO: WWW.TKSIMPLEX.COM

- Note -

SIMPLEX has taken every care in preparing this Operational Manual that is intended as a technical guideline only. SIMPLEX accepts no liability in relation to any use or reliance made of any information in this Operational Manual. All information, illustrations and specifications in this Operational Manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice. Equipment operators and installers shall be responsible for ensuring that a safe working environment and safe systems of work are in place before operating the equipment.

G5 Torque Pump



IMPORTANT - READ CAREFULLY

This manual contains important information for the correct installation, operation and maintenance of this equipment. All persons involved in the installation, operation and maintenance of this equipment must be thoroughly familiar with the contents of this manual. To safeguard against the possibility of personal injury or property damage, follow the recommendations and instructions of this manual. Keep this manual for reference.

WARRANTY STATEMENT

SIMPLEX products are warranted to be free of defects in materials and workmanship under normal use for as long as the original purchaser owns them, subject to the guidelines and limitations listed. This warranty does not cover: *normal wear & tear, cosmetic items, abuse, overloading, alterations, improper fluid, or use in a manner for which they are not intended*. If the customer believes a product is defective, the product must be delivered, or shipped freight prepaid, to the nearest SIMPLEX Authorized Service Center for evaluation and repair.

1.0 RECEIVING INSTRUCTIONS

Important! Make sure to inspect all of the components for shipping damage. If damage is found, notify carrier at once. Shipping damage will not be covered by warranty. The carrier is responsible for all loss associated with shipping damage.

2.0 SAFETY

Make sure to read the instructions, warnings and precautions carefully. Follow any recommended safety precautions to avoid personal injury or damage to the unit. Simplex cannot be responsible for any damage or injury from unsafe use, lack of maintenance or incorrect operation. In the event any questions or concerns arise, contact SIMPLEX or a local Distributor for clarification.

The pump's maximum working pressure is 10,000 PSI (700kg/cm²). Make sure that all hydraulic equipment such as tools, hoses, etc. used with this pump are rated at 10,000 PSI (700kg/cm²) operating pressure.

If you have never been trained on high-pressure hydraulic safety, consult your distributor or service center for a free Simplex Hydraulic Safety Course.



Failure to comply with the following cautions and warnings could cause equipment damage, property damage or personal injury.

DANGER is only used when your action or lack of action may cause serious injury or even death.

WARNING indicates a potential danger that requires correct procedures or practices to avoid personal injury.

CAUTION is used to indicate correct operating or maintenance procedures and practices to prevent damage to, or destruction of equipment, or other property.

WARNING: Wear proper personal protective gear when operating hydraulic equipment.

DANGER: To avoid personal injury, keep hands and feet away from tool and work-piece during operation.

WARNING: Do not exceed equipment ratings. Overloading causes equipment failure and possible personal injury. The tools are designed for a maximum pressure of 10,000 PSI (700kg/cm²). Do not connect a tool to a pump with a higher pressure rating. Never set the relief valve to a higher pressure than the maximum rated pressure of the pump. Higher settings may result in equipment damage and/or personal injury.

WARNING: The system operating pressure must not exceed the pressure rating of the lowest rated component in the system. Install pressure gauges in the system to monitor operating pressure. It is your window to what is happening in the system.

CAUTION: Avoid damaging hydraulic hose. Avoid sharp bends and kinks when routing hydraulic hoses. Using a bent or kinked hose will cause severe back-pressure. Sharp bends and kinks will internally damage the hose, leading to premature hose failure.

Do not drop heavy objects on hose. A sharp impact may cause internal damage to hose wire strands. Applying pressure to a damaged hose may cause it to rupture.

IMPORTANT: Do not lift hydraulic equipment by the hose or swivel couplers. Use the carrying handle or other means of safe transport.

CAUTION: Keep hydraulic equipment away from flames and heat. Excessive heat will soften seals, resulting in fluid leaks. Heat also weakens hose materials. For optimum performance do not expose equipment to temperatures of 65° C (170° F) or higher. Protect hoses and tools from weld spatter.

DANGER: Do not handle pressurized hoses. Escaping oil under pressure can penetrate the skin, causing serious injury. If oil is injected under the skin, see a doctor immediately.

DANGER: Only use hydraulic tools in a coupled system. Never use a tool with unconnected couplers. If the tool becomes severely overloaded, components can fail catastrophically causing severe personal injury or death.

3.0 TECHNICAL SPECIFICATIONS

| G5 Electric Torque Wrench | | |
|-------------------------------|--|--|
| Voltage | 115V | 230V |
| Operating Pressure | 10,000 PSI (700kg/cm ²) | |
| Electrical Power Source | 20 Amps 115V Grounded 50/60 Hz | 10 Amps 230V Grounded 50/60 Hz |
| Motor Rating | 1.125 Hp Single Phase 18 Amps @ 10,000 psi (700kg/cm ²) | 1.125 Hp Single Phase 10 Amps @ 10,000 psi (700kg/cm ²) |
| Flow Rate | 575 cu. in./ min. @ 1,100 psi, 55 cu. in / min. @ 10,000 psi | |
| Maximum Operating Temperature | 170 F - (65 C) | |

4.0 WORKING PRESSURE

The pump’s maximum working pressure is 10,000 PSI (700kg/cm²). Make sure that all hydraulic equipment such as rams, hoses, etc. used with this pump are rated at 10,000 PSI (700kg/cm²) operating pressure.


4.1 INSTALL VENT PLUG

Remove SHIPPING PLUG (A) and install VENT PLUG (B) into fill plug.

4.2 ADDING OIL

Remove OIL FILLER CAP (C) and add SIMPLEX Hydraulic Oil into reservoir. Oil level should not exceed 1” from the reservoir cover.

*As a “rule of thumb” oil should be visual in site window when the unit is powered down and all connected tools are retracted.

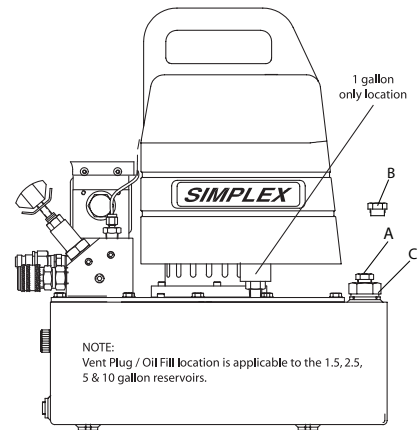

4.4 ELECTRICAL

Check for proper electrical supply before connecting. Be sure the electrical connection is grounded. Check that your power supply agrees with the motor nameplate and/or Simplex model decal.

NOTE: MOTOR MAY SPARK. DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE OR IN THE PRESENCE OF CONDUCTIVE LIQUIDS.

1. Do not use a power or extension cord that is damaged or has exposed wires.
2. All single phase motors come equipped with a three prong grounding type plug to fit the proper grounded type electrical outlet. Do not use a two prong ungrounded extension cord as the pump’s motor must be grounded.

4.5 CONNECTING HYDRAULIC TOOLS

Use only tools, hoses and accessories rated at 10,000 PSI (700kg/cm²). When making connections with quick disconnect couplings, make sure the couplings are fully engaged. Threaded connections such as fittings, gauges, etc. must be securely tightened and leak free. Use 1.5 wraps of Teflon tape (or suitable thread sealant) on all threads, leaving the first complete thread free of tape to ensure no foreign matter enters the hydraulic circuit.

4.6 STARTING THE PUMP FOR THE FIRST TIME

1. Locate the “ON” button on the pendant and Depress. Check for any leaks, repair as needed.
2. Depress “ADV” button to advance tool and release to retract tool. Look for movement in tool, check for any leaks, repair as needed.


CAUTION: Never operate the pump without tool movement for more than 1 minute. Leaving the valve in the advance or retract position without the tool’s piston rod moving will overheat the oil.

CAUTION: Never disconnect or connect any hydraulic hoses or fittings without first unloading the tool, then unplug the electrical cord of the pump. Open manual relief valve to assure that the system has been depressurized. View the gauge reading and double check the gauge to assure pressure has been released.

4.7 PUMP MOUNTING

Refer to the chart for mounting dimensions to secure the pump to a fixed surface.

| | 1.5 gal.(6L) | 2.5 gal.(10L) | 5 gal. (20L) |
|----------|-------------------------|-------------------------|-------------------------|
| A | 15.13 | 17 | 19.6 |
| B | 1.68 | 2.75 | 4.69 |
| C | 3.57 | 4.37 | 5.03 |
| D | 1.43 | 1.93 | 2.93 |
| E | 8.75 | 9.75 | 11.75 |
| F | 1/4-20unc (4 places) | 1/4-20unc (4 places) | 1/4-20unc (4 places) |

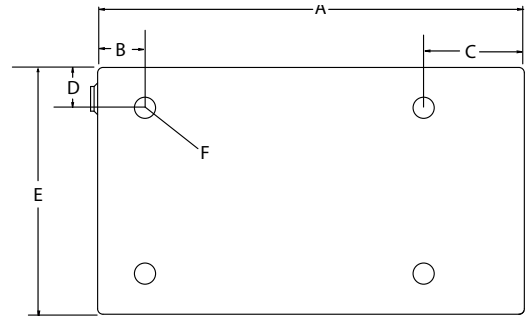


5.0 CONTROL VALVES

2-Position – 4 Way Solenoid Valve for Hydraulic Torque Wrenches.

- **To Advance**.....depress the Advance button.
- **To Retract**.....release advance switch to Retract Tool.

2 Position - 4 Way Solenoid

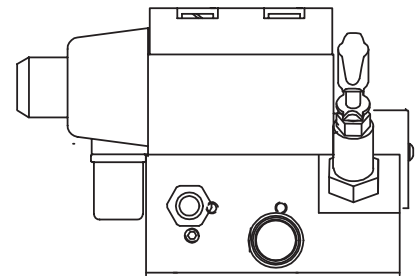

5.1 POWER CONTROL SWITCHES

Remote pendant.

Configured with motor control pendant:


ADVANCE = Press and hold button to turn motor on.
Energizes ADV. Coil.

ON = Press button to turn motor on.

OFF = Press button to turn motor off.

NOTE: In the event multiple buttons are depressed for longer than 5 seconds, the unit is programmed to shut down. To restart, you will need to depress the motor “ON” to continue, or unplug / re-plug the unit into power supply, then depress the motor “ON” to continue.


Motor/Valve Control Pendant

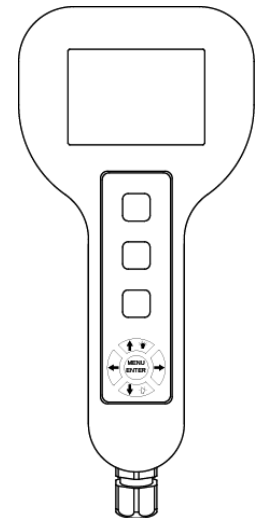

5.2 PRESSURE TORQUE SETTING


WARNING: Make these adjustments **BEFORE** putting torque wrench on nut or bolt head. The pump pressure setting may be above the pressure needed to provide the required torque for your application. Exceeding required torque will cause equipment damage and may lead to serious personal injury.

1. See torque wrench instructions for amount of pressure required to produce desired torque.
2. Loosen lock nut and back out relief valve to prevent unintended pressure build up.
3. Turn pump on. Press and hold the “ADVANCE” button, and read pressure on the digital display on the pendant. (Manual Mode)
4. While holding the button, turn relief valve in (clockwise) to increase pressure or out (counter-clockwise) to decrease maximum pressure.
Repeat until correct pressure is obtained.
5. Tighten lock nut on the relief valve to maintain setting.
6. Run pump several times to test this setting before setting tool on the nut.

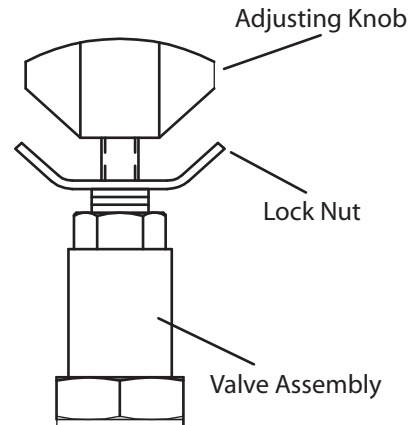

DIAGNOSTIC MODE

- Highlight & Press “enter” to select **DIAGNOSTIC MODE**. ①
- **DISPLAY TEST** - Highlight & press “enter” to select **DISPLAY TEST**. Press “enter” again to end the test. ②
Press “left” arrow button to return to **MAIN MENU**.
- **KEYPAD TEST** - Highlight & press “enter” to select **KEYPAD TEST**. Press any button to test. Press “menu” to exit. ③
- **CIRCUITRY TEST** - Highlight & press “enter” to select **CIRCUITRY TEST**. If circuit diagnostic is OK, press any key to exit. ④
Press “left” arrow key to return to **MAIN MENU**.

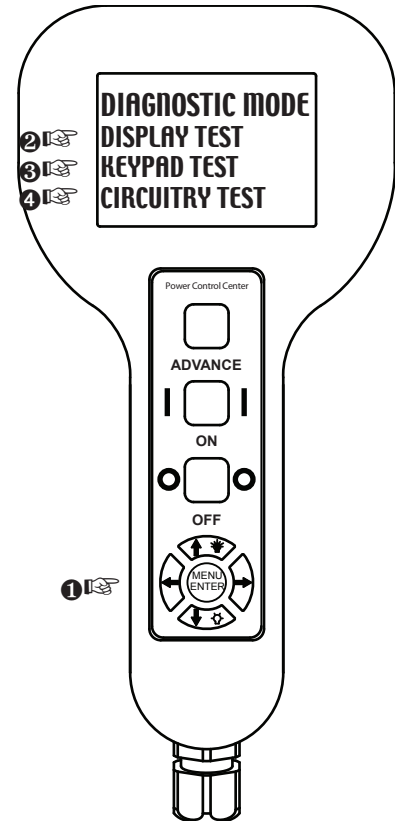

5.3 AFTER COMPLETING THE JOB

Before disconnecting hoses, fittings, etc., first be sure the tool is unloaded and retracted, then unplug the power cord. The pump is designed to cycle valve upon power down “off.”

6.0 PERIODIC MAINTENANCE

Completely change the hydraulic oil and clean the intake screen and magnet (located in the reservoir) twice a year. If equipped, change the external oil filter twice a year (**Use Simplex oil only, Model # AO1, 1 gallon**). Change the oil more frequently when used in extremely dusty areas or when the oil has been overheated. Using oil other than Simplex Brand may void the pump’s warranty.

The following conditions require more frequent oil changes.

- Rigorous duty, where oil temperature may reach 150° F.
- High humidity environment and extreme changes in temperature that can result in condensation inside the reservoir.
- Dirty or dusty environments that may contaminate the oil.
- Frequent connection and disconnection of hydraulic hoses and components.

WARNING: The electrical power cord must be disconnected from electrical outlets before performing maintenance or repair procedures.

6.1 MAINTAIN OIL LEVEL

Check hydraulic oil level every 30 hours of operation (sight gauge should be completely covered in oil when all tools are retracted. Add Simplex oil (Model # AO1 – 1 gallon) when necessary. Oil level should be no more than 1” from top of reservoir plate – with tools retracted and motor off.

6.2 CLEAN OIL INTAKE SCREEN ONCE A YEAR

Loosen and remove reservoir plate bolts. Lift pump unit off the reservoir, being careful not to damage the gasket.

Applies to the 1.5, 2 and 2.5 gallon reservoirs:


Remove the 5 Allen socket head cap screws securing the screen to the first stage gear pump. Care should be taken not to remove the center plate and gears. Remove and clean with non-flamable solvent and blow dry clean. Reinstall in reverse order and torque bolts to 75 inch pounds. Keep the motor and pump as clean as possible.

6.3 FLUSH THE PUMP


If you suspect your pump has been contaminated or discover sludge or other deposits on internal components, you should thoroughly flush the pump. Remove the old oil from the reservoir, then thoroughly clean the reservoir and refill with a clean, nonflammable flushing oil. Reassemble the pump and motor to the reservoir.

Run the pump in no load condition for 1 or 2 minutes maximum. Unplug the pump and remove the motor and pump assembly again. Now drain the flushing oil and re-clean the inside of the reservoir. (Make sure flushing fluid is also drained from pump assembly). Refill the reservoir with Simplex hydraulic oil and reassemble the pump.

Oil Fill (1.5 - 2.5 Gal. Models)

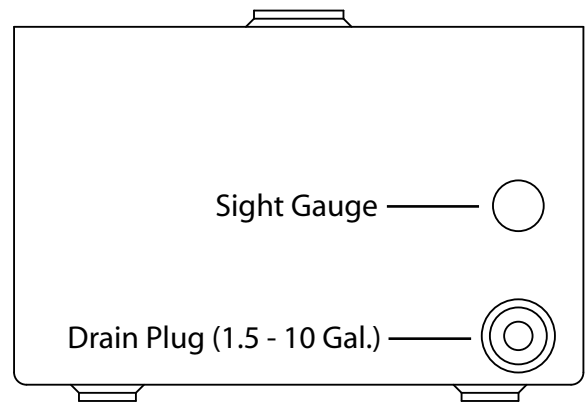

PENDANT OVERVIEW

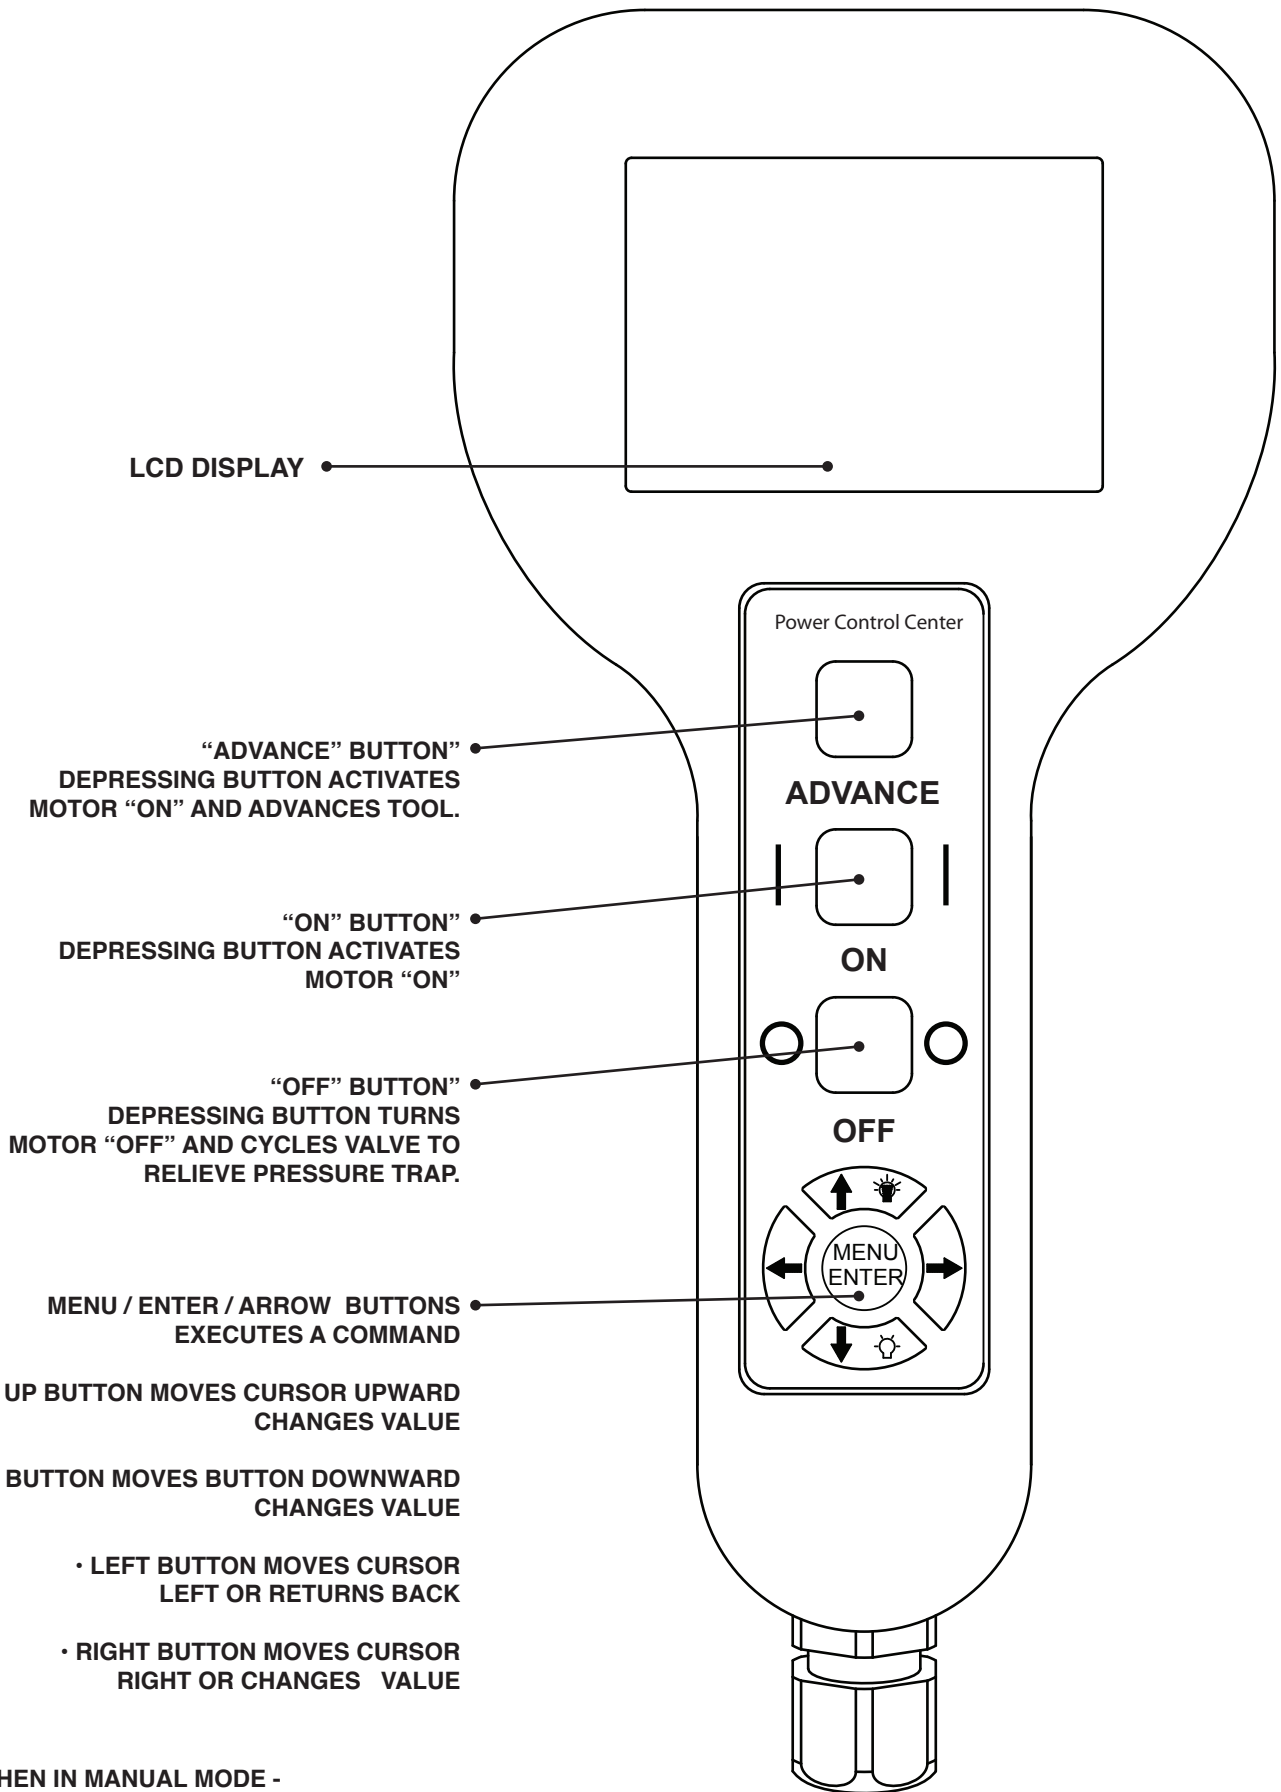

LCD DISPLAY

“ADVANCE” BUTTON
DEPRESSING BUTTON ACTIVATES
MOTOR “ON” AND ADVANCES TOOL.

“ON” BUTTON
DEPRESSING BUTTON ACTIVATES
MOTOR “ON”

“OFF” BUTTON
DEPRESSING BUTTON TURNS
MOTOR “OFF” AND CYCLES VALVE TO
RELIEVE PRESSURE TRAP.

MENU / ENTER / ARROW BUTTONS
EXECUTES A COMMAND

• UP BUTTON MOVES CURSOR UPWARD
CHANGES VALUE

• DOWN BUTTON MOVES CURSOR DOWNWARD
CHANGES VALUE

• LEFT BUTTON MOVES CURSOR
LEFT OR RETURNS BACK



• RIGHT BUTTON MOVES CURSOR
RIGHT OR CHANGES VALUE

NOTE: WHEN IN MANUAL MODE -
PRESSING THE “UP” ARROW DARKENS CONTRAST
PRESSING THE “DOWN” ARROW LIGHTENS CONTRAST

PENDANT - START UP


Upon “**Power Up**”, unit will perform system check. If critical fault(s) are detected, unit will not start and fault(s) will be displayed here (Fig.1). Warnings will not prevent the unit from starting.

The “**Manual Mode**” screen will display after the system check is complete and will default to “**Manual Mode**” (Fig. 2). Screen displays pressure in selected units (PSI, Bar, MPa) and indicates the motor status.

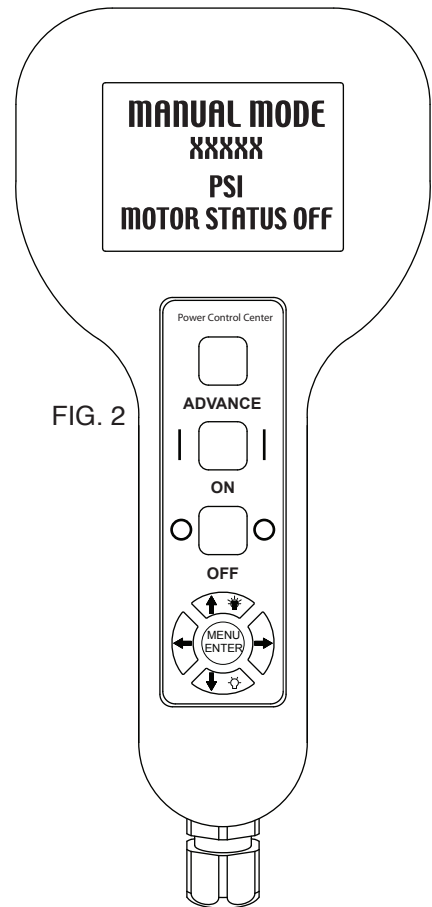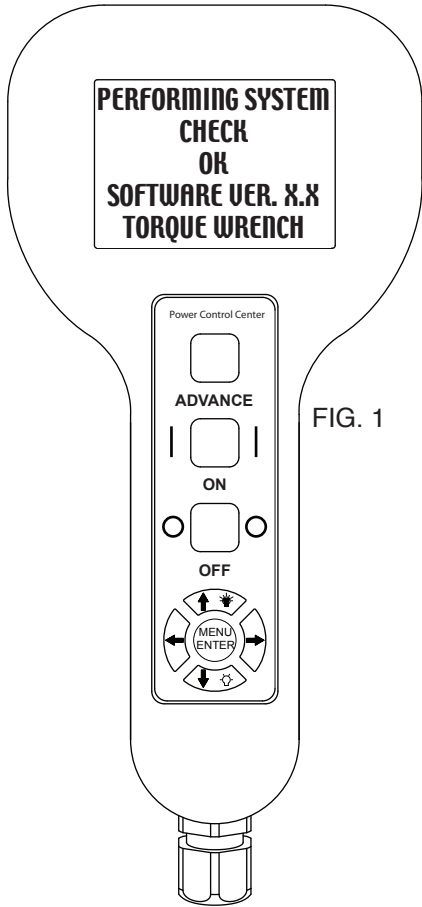


MAIN MENU - FIG. 3

To enter the “**main menu**”, depress “**MENU/ENTER**” button. By pressing the “up” or “down” arrow buttons, sub-menus can be highlighted. Once the preferred sub-menu is highlighted, press the “**MENU/ENTER**” button to go into that sub-menu mode. ❶
To return to the “**main menu**” press the “left arrow button”.

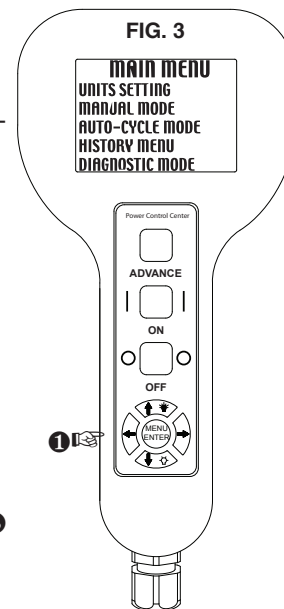


UNIT SETTINGS - FIG. 4

- Highlight & press “enter” to select **UNIT SETTINGS**. ❶
- **MODE - PRESSURE** or **TORQUE** is chosen by highlighting & pressing “enter” button. ❶
To return to the “**main menu**” press the “left arrow button”.
- **UNITS** - In **PRESSURE** mode, units (kg/cm², PSI, Bar and KPA) are displayed by highlighting & pressing the “enter” button until desired form of measurement is displayed. ❸
To return to the “**main menu**” press the “left arrow button”.
- **SAVE** the data by pressing the “down” arrow button to “save” mode and press “enter”. ❺
To return to the “**main menu**” press the “left arrow button”.
- **UNITS** - In **TORQUE** mode, “units” (lb-ft, NM, KPM,) are displayed by highlighting & pressing the “enter” button until desired form of measurement is displayed. ❸
To return to the “**main menu**” press the “left arrow button”.
- **SAVE** the data by pressing the “down” arrow button to “save” mode and press “enter”. ❺
To return to the “**main menu**” press the “left arrow button”.
- **TOOL** - Highlight & press “enter” and use the “arrow” buttons until the desired **TOOL** is selected. If the **TOOL** being used is not a **SIMPLEX TOOL**, select “other”. If no **TOOL** is being used, select “none”. ❷
To return to the “**main menu**” press the “left arrow button”.
- **SAVE** the data by pressing the “down” arrow button to “save” mode and press “enter”. ❺
To return to the “**main menu**” press the “left arrow button”.

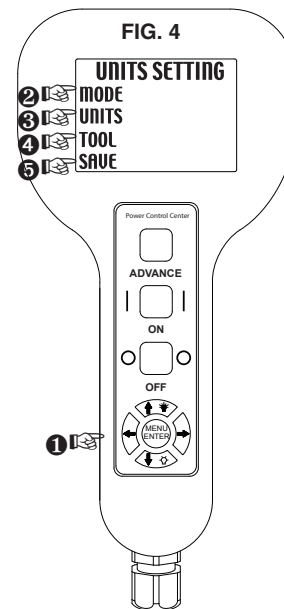


MANUAL MODE - FIG. 5

- Highlight & press “enter” to select **MANUAL MODE**. ❶
- To operate pump, press the “**ADVANCE**” button to turn pump motor on and advance the tool. ❷
To return to the “**main menu**” press the “menu/enter button”.

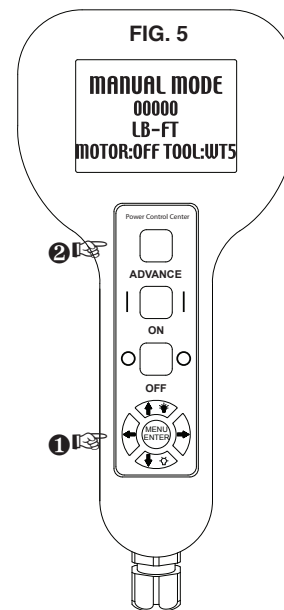


AUTO-CYCLE MODE

- Highlight & press “enter” to select **AUTO-CYCLE** mode. ❶
- **TOOL** - Press “enter” and use the “arrow” buttons until the desired TOOL is selected. If the TOOL being used is not a SIMPLEX TOOL, select “other”. If no TOOL is being used, select “none”. ❷
To return to the “main menu” press the “left arrow button”.
- **MODE - PRESSURE** or **TORQUE** is chosen by highlighting & pressing “enter” button. If **TORQUE** is selected, you must select a “tool” or “other” and “enter” data. ❸
To return to the “main menu” press the “left arrow button”.
- **TARGET** - Highlight & press “enter” to select **TARGET** and use the “up” and “down” keys to raise or lower the **TARGET** Pressure. Use the “right and “left” arrow keys to select the desired digit column. ❹
To return to the “main menu” press the “left arrow button”.
- **RUN** - Highlight & press arrow key “down” and press “select” to run the **AUTO-CYCLE** mode. Unit will **AUTO-CYCLE** until the target goal is achieved. To interrupt during a cycle, depress any button.
To return to the “main menu” press the “left arrow button”.

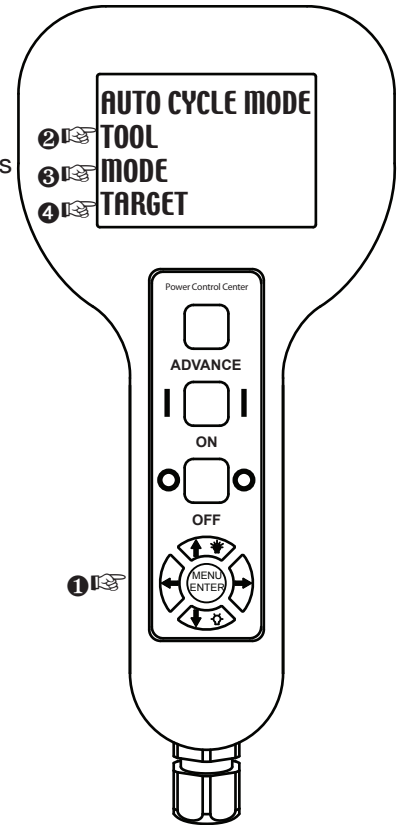

HISTORY MENU

- Highlight & press “enter” to select **HISTORY MENU**. ❶
- **MOTOR RUN TIME** - Highlight & press “enter” to view the total number of **HOURS and CYCLES** for the desired selection. ❷
To return to the “main menu” press the “left arrow button”.
- **WARNING HOURS** - Highlight & press “enter” to view the **WARNING TIME** total. ❸
To return to the “main menu” press the “left arrow button”.
- **FAULT TIMES** - Highlight & press “enter” to view the **FAULT TIMES TOTAL**.
To return to the “main menu” press the “left arrow button”. ❹

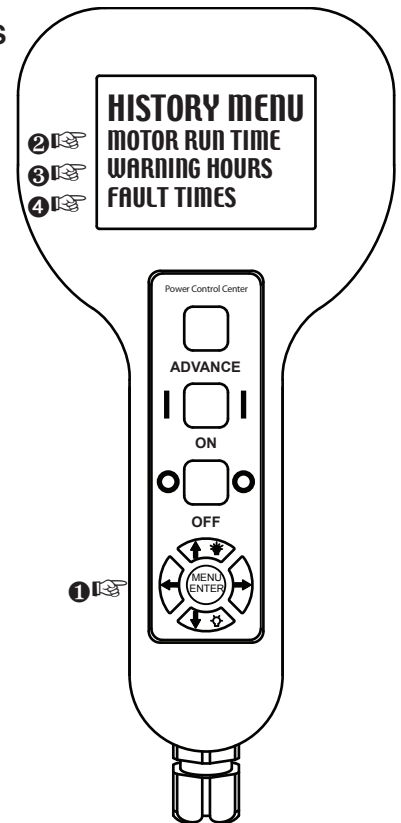

7.0 TROUBLESHOOTING

PROBLEM

CAUSE-SOLUTION

Sporadic Tool Action:

- Air in the hydraulic system. Bleed the hydraulic circuit.
- Check reservoir oil level.

Motor Will Not Start:

- Be sure power cord is not damaged.
- Check for tripped circuit breaker; be sure breaker is of adequate size.
- Have motor checked for proper operation.
- Have qualified electrician inspect for loose or faulty wiring or switch.
- Check fuse on electrical bracket.

Noisy Operation:

- Air in system.
- Be sure the oil reservoir is filled to normal level.
- Check all points where air might leak into system.
- Clogged or blocked intake screen.

Pump Oil is Over Heating:

- Inspect for high pressure leakage at the pump (leaking at plug or relief valve).
- Oil level is low. Fill reservoir to normal level, or retrofit the pump with larger reservoir or heat exchanger.

Pump Runs But Will Not Pump Oil:

- Pump is not primed. Run pump a few minutes tipping from side to side.
- Inspect to make sure that external adjustable relief valve is set properly.
- Defective control valve, take to nearest Simplex Authorized Service Center for repair.
- Incorrect motor rotation, take to nearest Simplex Authorized Service Center for repair.
- Check to make sure the intake screen is not clogged. Clean if needed.
- Check oil reservoir is low. Fill as needed.
- Oil viscosity is too high. Replace with SIMPLEX oil.

SIMPLEX PRODUCTS ARE WARRANTED TO BE FREE OF DEFECTS IN MATERIALS AND WORKMANSHIP UNDER NORMAL USE FOR AS LONG AS THE ORIGINAL PURCHASER OWNS THEM, SUBJECT TO THE GUIDELINES AND LIMITATIONS LISTED. THIS WARRANTY DOES NOT COVER : NORMAL WEAR AND TEAR, COSMETIC ITEMS, ABUSE, OVERLOADING, ALTERATIONS. IMPROPER FLUID, OR USE IN A MANNER FOR WHICH THEY ARE NOT INTENDED. IF THE CUSTOMER BELIEVES A PRODUCT IS DEFECTIVE, THE PRODUCT MUST BE DELIVERED, OR SHIPPED FREIGHT PREPAID, TO THE NEAREST SIMPLEX AUTHORIZED SERVICE CENTER FOR EVALUATION AND REPAIR.



2525 GARDNER ROAD, BROADVIEW, IL 60155
 1.800.323.9114 • Outside U.S. 1.708.865.1500
www.tksimplex.com