


#25983 MAX-STAX








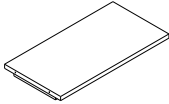

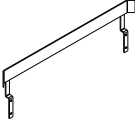

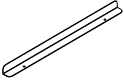


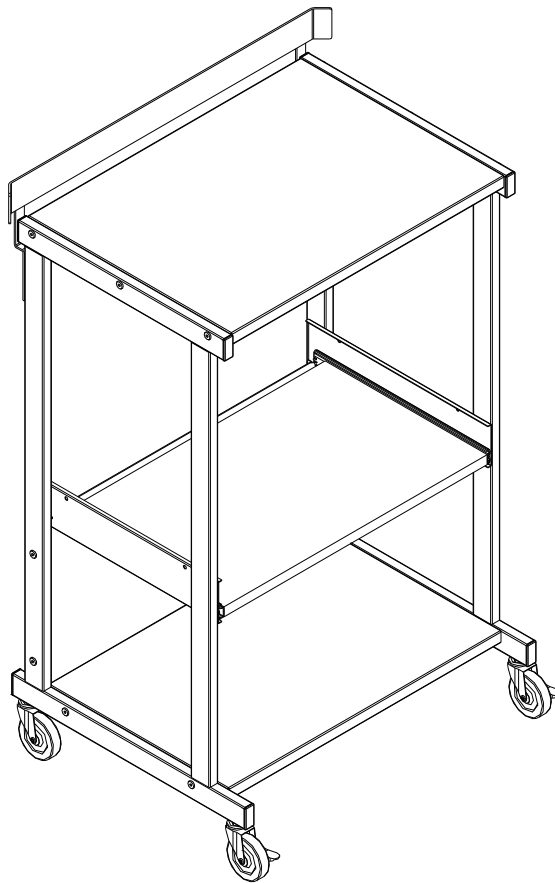



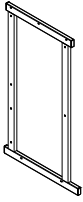

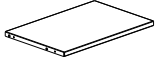Dual-Level Printer/Fax Stand
w/Roll-out Shelf




Assembly Instructions

#25983 Max-Stax

Dual Level Printer/Fax Stand

Part	Drawing	Description	Qty	Part	Drawing	Description	Qty
P1		Leg	2 EA	Hardware List			
P2		Top Panel	1 EA	A		9/16" Flat Head Screw	10 EA
P3		Bottom Shelf	1 EA	A1		1-1/4" Flat Head Screw	14 EA
P4		Stability Panel	1 EA	A2		Long Screw	4 EA
P5		Roll-Out Shelf	1 EA	B		Threaded Post	4 EA
P6		Security Rail	1 EA	B1		Flat Washer	4 EA
P7		Shelf Rail	1 EA	C		Square Nut	14 EA
P8		Right Slide Bracket	1 EA	D		3" Locking Caster (for front)	2 EA
P9		Left Slide Bracket	1 EA	E		3" Caster (for Back)	2 EA
				F		Allen Wrench	1 EA
				G		Caster Wrench	1 EA
				H		Inner Slide	2 EA
				Tools required: Phillips Head Screw Driver			

#25983 Max-Stax Assembly Diagram

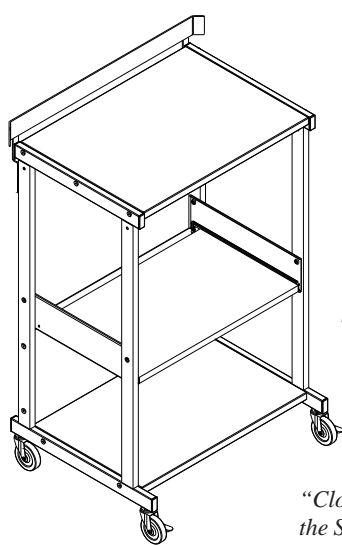


**Illustration # 1
(Option A)**

These holes indicate the back side of the Leg.

“Closed End” of the Slide goes to the back side of the Leg. See Detail # 1

Right Leg Assembly



Left Leg Assembly

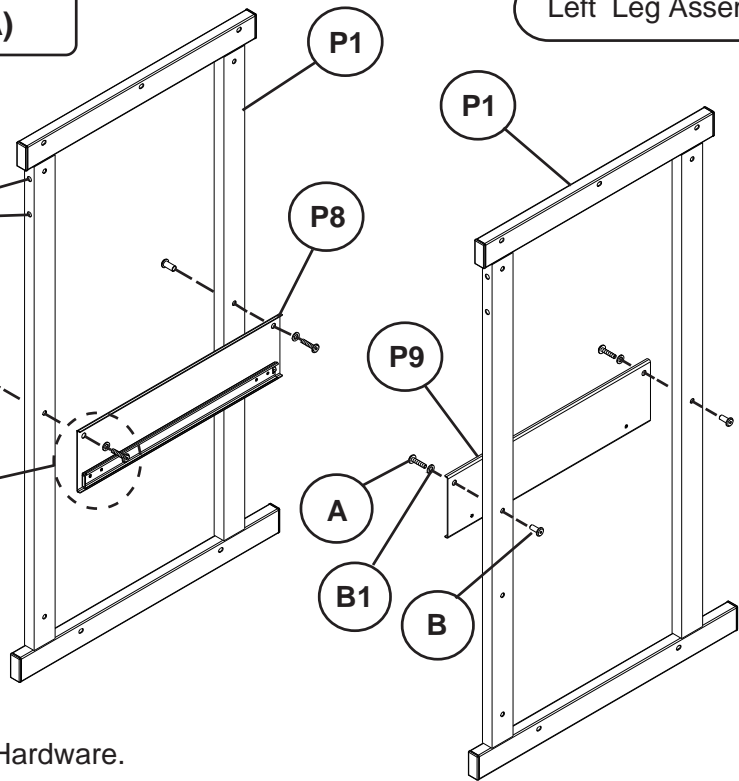

To Assemble:

1. Separate and Identify all the Parts and Hardware.
2. Attach Right Slide Bracket (P8) to Leg (P1), and Left Slide Bracket (P9) to the other Leg (P1) using 4 (9/16”) Flat Head Screws (A), 4 Flat Washers (B1) and 4 Threaded Posts (B) as shown in illustration # 1 (Option A) or Illustration # 2 (Option B).


**Illustration # 2
(Option B)**

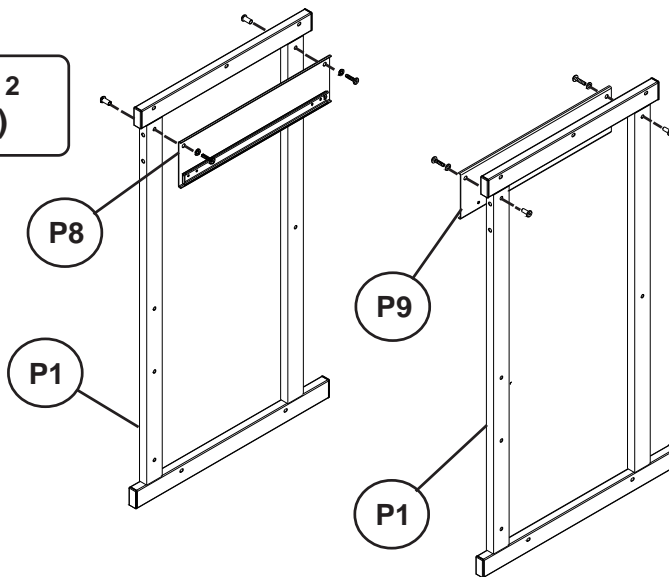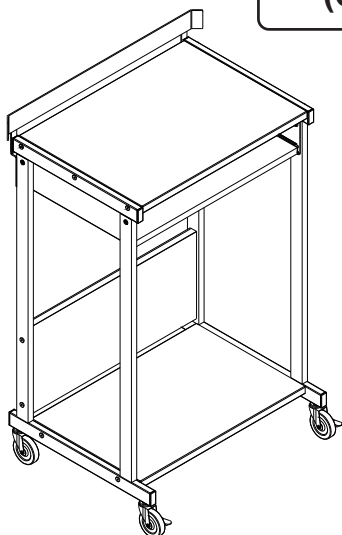


Right Leg Assembly

Left Leg Assembly

Detail # 1

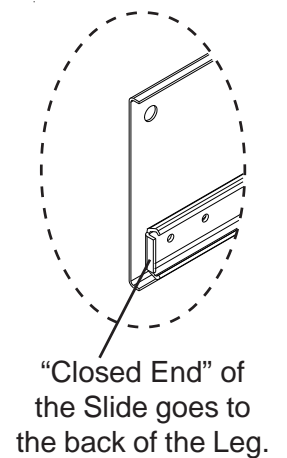

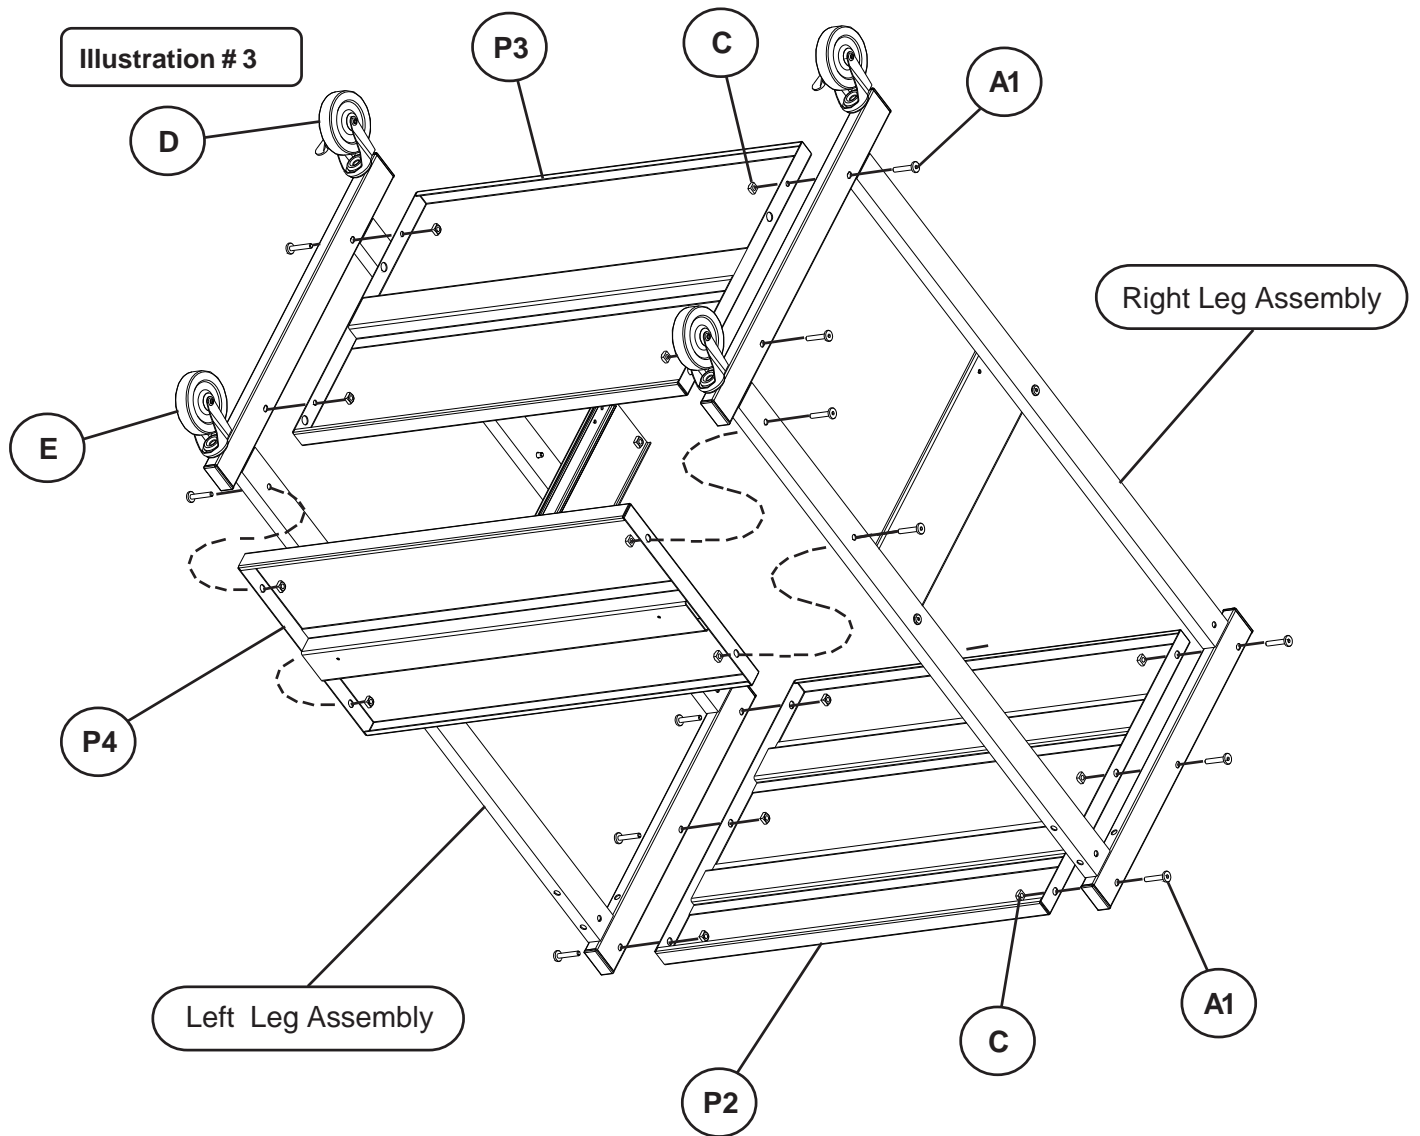

3. Place Top Panel (P2) upside down on floor or table and attach Right and Left Leg Assemblies using 6 (1¼") Flat Head Screws (A1) and 6 Square nuts (C) as shown in illustration # 3.
4. Attach Stability Panel (P4) to the Right and Left Leg Assemblies using 4 (1¼") Flat Head Screws (A1) and 4 Square nuts (C).
5. Attach Bottom Shelf (P3) to the Right and Left Leg Assemblies using 4 (1¼") Flat Head Screws (A1) and 4 Square nuts (C).
6. Attach 2 Locking Casters (D) to the front, and 2 Casters (E) to the back of the unit. Tighten all Casters using Caster Wrench (G).

Illustration # 4

- Attach 2 Inner slides (H) to the Roll-Out Shelf (P5) using 4 Long screws (A2).
- Attach Shelf Rail (P7) to the Roll-Out Shelf (P5) using 2 Flat Head Screws (A) as shown in illustration # 4.

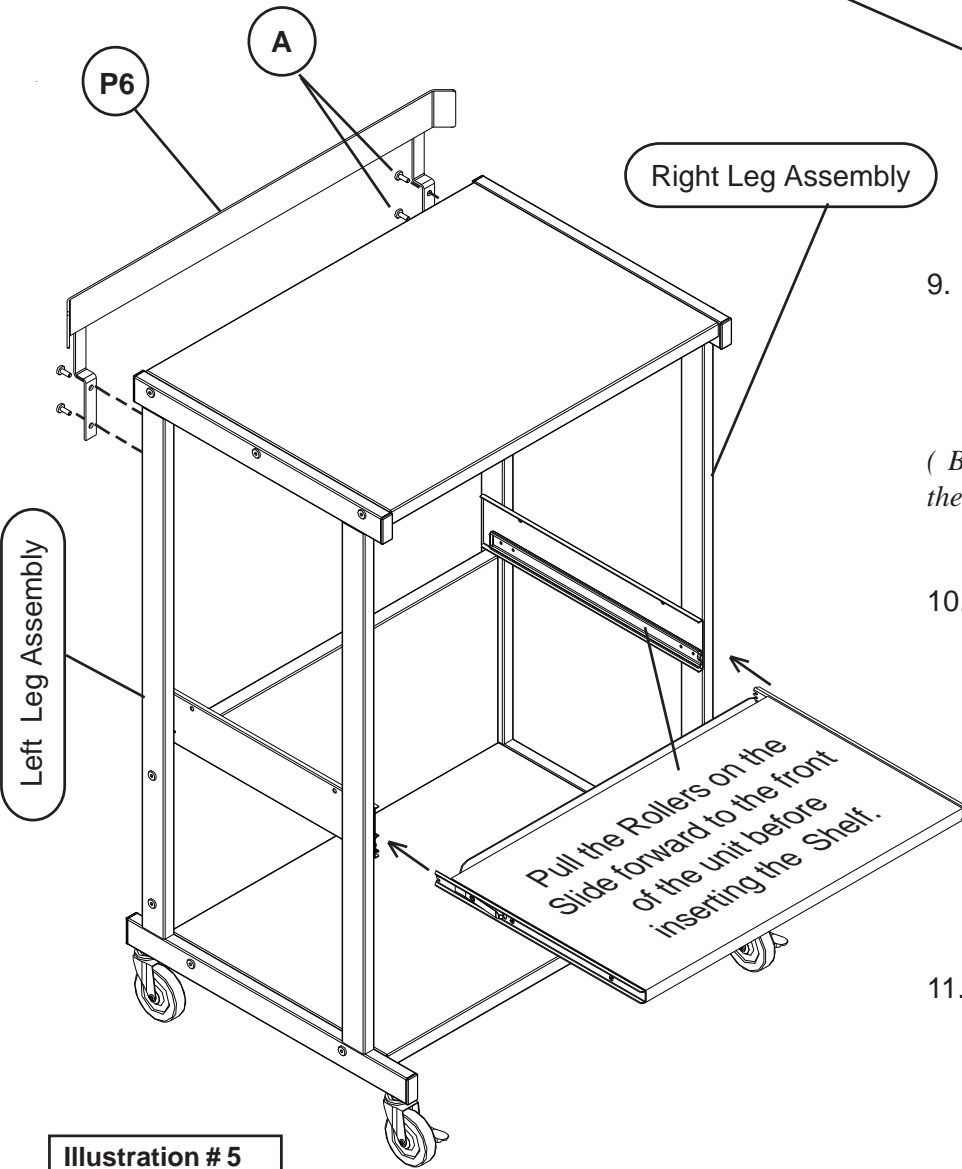
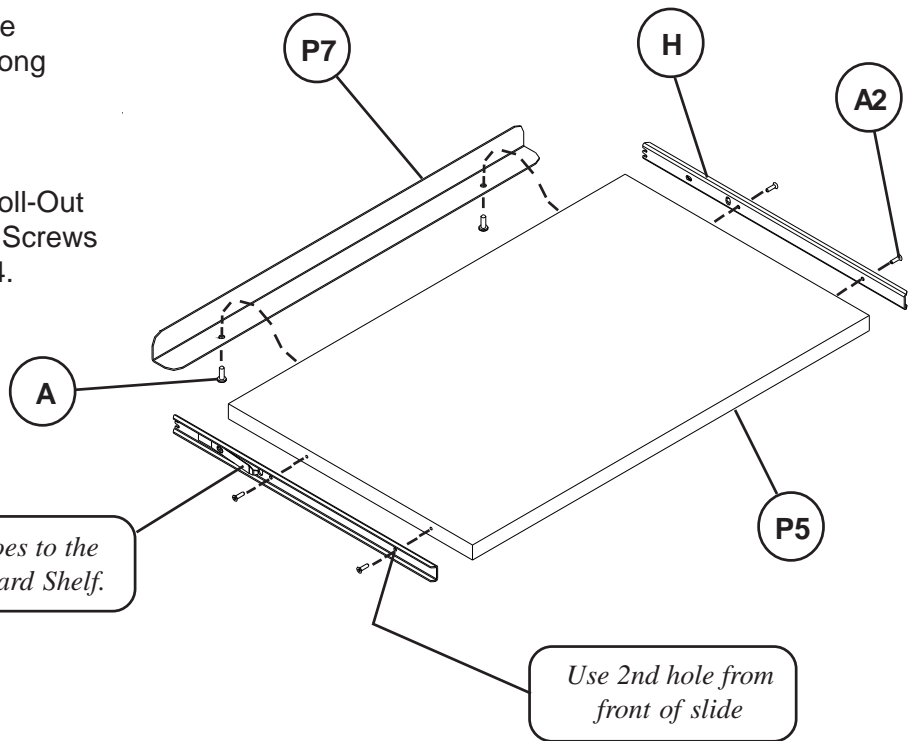


Illustration # 5

- Insert Roll-Out Shelf Assembly into the 'Slides' on the Right and Left Leg assemblies as shown in illustration # 5.
(Before inserting Shelf assembly, pull the 'Rollers' to the front of the slide.)
- Attach Security Rail (P6) to the Right and Left Leg assemblies using 4 Flat Head Screws (A) as shown in illustration # 5.
- Tighten all screws securely.