



IMPORTANT: This manual contains important information. READ AND KEEP FOR REFERENCE.

Page ii 6-11

CONTENTS

INTRODUCTION	5
Product Unpacking and Inspection	5
Product Description	5
INSTALLATION	7
Mechanical Installation	7
Location	7
Electrical Installation	8
OUTPUT OPTION CARD	14
DISPLAY AND KEY PAD	16
PROGRAMMING	17
Selection Screens	17
Option List Screens	17
Data Screens	17
USB Communication	24
FLOW SENSOR INPUTS	29
SPECIFICATIONS	20

Page iv 6-11

INTRODUCTION

This manual provides installation and operation instructions for the Badger Meter Data Industrial® Series 3050 Btu Monitor.

Product Unpacking and Inspection

Upon receipt of the product, perform the following unpacking and inspection procedures:

NOTE: If damage to the shipping container is evident upon receipt, request the carrier to be present when the product is unpacked.

Carefully open the shipping package and follow any instructions that may be marked on the exterior. Remove all cushioning material surrounding the product and carefully lift the product from the package. Retain the package and all packing material for possible use in reshipment or storage.

Visually inspect the product and applicable accessories for any physical damage such as scratches, loose or broken parts, or any other sign of damage that may have occurred during shipment.

NOTE: If damage is found, request an inspection by the carrier's agent within 48 hours of delivery and file a claim with the carrier. A claim for equipment damage in transit is the sole responsibility of the purchaser.

Product Description

The Badger Meter Data Industrial Series 3050 Btu Monitor is an economical, full-featured compact unit designed for sub-metering applications.

The two line x 16-character alphanumeric displays any combination of Energy Rate, Energy Total, Flow Rate or Flow Total. Both preprogrammed and user defined units of measure can be configured by the user.

The Series 3050 accepts pulse or linear analog input signals. Like all Data Industrial flow monitors, the Series 3050 may be field calibrated by the user. For Data Industrial sensors, "K" and "offset" numbers are entered, while other pulse or frequency output sensors may use a "K" factor only. Analog inputs are fully programmable for slope and intercept.

The unit requires two temperature units and can accept 10 K ohm thermistors, 100Ω three wire RTDs or user defined custom thermistors or RTDs.

The panel meter has a NEMA 4X rated front panel and conforms to DIN Standard dimensions, 96 mm X 96 mm, for meter sizes and panel cutouts. Optional NEMA 4 wall mount is also available.

Series 3050 Btu Monitor Programming

The user can program the flow sensor from the front panel by entering a "K" and offset or only a "K" factor, depending on the flow sensor used.

Programming is menu driven. All data is entered using the LCD/keypad interface. A password gate is included to prevent unauthorized access to programming parameters. Programming flexibility is extended to units of measure. In addition to several factory units of measure, the 3000 Series software permits the custom units for rate and total to be created by the installer.

The Series 3050 provides one Form C solid-state relay, and one solid-state switch output. Both are fully programmable as either Pulse/Volume, or Set Point control-based Flow Rate, Flow Total, Energy Rate, Energy Total, Temperature 1, Temperature 2 or Delta T. For pulse output, the installer can program both the resolution and the pulse width. Set Point control is extremely versatile with fully independent set and release points, each with its own time delay.

LEDs located on the front panel indicate status of both the relay and pulse outputs.

All calibration information, units of measure and flow totals are stored in a non-volatile memory that does not require battery backup for data retention.

Available options:

Analog Output

3 .

RS485

USB

- BACnet™
- Modbus[®]
- Wall Mounting

3050 Series Ordering Matrix							
	Example:	3050	-	Х	Х		
Series							
	Btu Monitor	3050	-				
Outputs	No Option	0					
•	Analog Output, plus RS485 with 1 BACnet and Modbus, and USB						
Mounting					-		
Panel Mount, NEMA 4x Front Panel							
Wall Mount, NEMA 4x							

Page 6 6-11

INSTALLATION

Mechanical Installation


The Series 3050 Btu Monitor can be either panel mounted or wall mounted.

Location

In any mounting arrangement the primary concern is easy viewing and convenient operation of the keypad. The unit generates very little heat, so no consideration need be given to cooling or ventilation. However, prolonged direct sunlight can damage the front panel so some level of shading is recommended, especially if installed in a tropical climate.

Panel Mount Installation

The Series 3050 panel mount is designed for through panel mounting, which allows access to the back of the unit. The Series 3050 Btu Monitor is secured to the panel by two draw brackets shown in Figure 1 below. Also refer to Figure 1 for monitor and panel cutout dimensions.

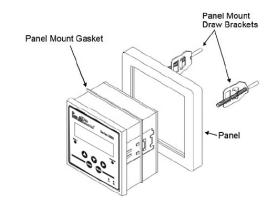

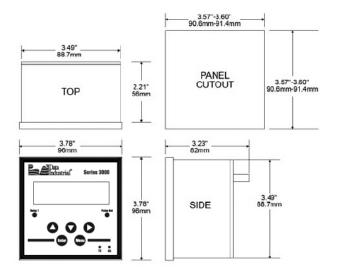


Figure 1: Series 3050 Panel Mount and Mounting Dimensions

Wall Mount Installation

The Series 3050 wall mount is designed to mount onto a wall with four bolts or screws. The mounting hole pattern and box dimensions for the Series 3050 NEMA4 wall mount are shown in Figure 2.

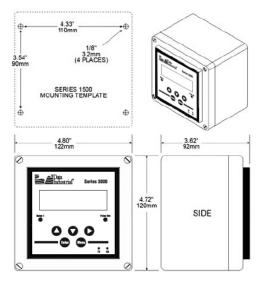


Figure 2: Wall Mount and Dimensions

Electrical Installation

Power Supply Wiring

The Series 3050 Btu Monitor requires 12-24 VDC/VAC to operate. Check the Specifications on page 29 for DC current draw and AC Volt-Amp requirements.

A fused circuit is always recommended.

Connect the positive of the power supply to the Series 3050 terminal marked (ACL/DC+), and connect the negative of the power supply to the Series 3050 terminal marked (ACC/DC-).

If a Badger Meter Data Industrial plug-in power supply (Model A1026, A-503) is being used, connect the black-white wire to the terminal marked (ACL/DC+) and the black wire to the terminal marked (ACC/DC-).

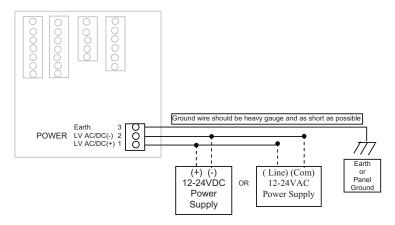


Figure 3: Power Supply Wiring

Page 8 6-11

Flow Sensor Wiring

The Series 3050 flow sensor inputs are extremely versatile, designed to accept either two-wire or three-wire pulse inputs (Data Industrial 200 Series, SDI or 4000 Series) or Analog inputs. Although different rear panel terminals are used, all parameters are set with the LCD/keypad interface. There are no internal or external jumpers, switches or potentiometers to move or adjust.

The following pulse input types are accommodated.

- **Pulse-DI**: Used for all Badger Meter Data Industrial Flow Sensors. Provides an internal pull-up resistor and uses "K" and "Offset" values for calibration.
- **Pulse–K Factor**: Accepts non zero-crossing inputs but provides no internal pull-up, classical "K" (pulses/gallon) values for calibration.
- **Pull-up-K Factor**: Provides an internal pull-up resistor and uses classical "K" (pulses/gallon) values for calibration.

NOTE: All the above pulse input types wire the same as shown in Figure 4. See the Programming Flow Chart on page 18 for required input configuration.

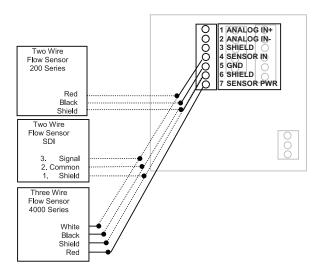


Figure 4: Data Industrial Flow Sensor Wiring Examples (Two- and Three-Wire Pulse Types)

Analog Input

As an alternative to the pulse inputs, the Series 3050 can accept an Analog input. The input is non-isolated, but can accept 0-1VDC, 0-5VDC, 0-10VDC, 0-20mA and 4-20mA with both factory-defined and custom units of measure.

Low impedance 100 Ohm input for current inputs optimizes performance and flexibility or loop power supplies. Both the low- and high-end scaling are independent and field configured by the installer.

NOTE: See the Programming Flow Chart on page 18 for required input configuration.

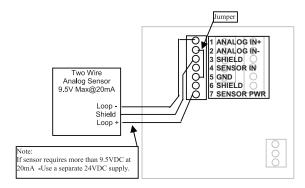


Figure 5: 4-20mA Analog Loop Powered Wiring

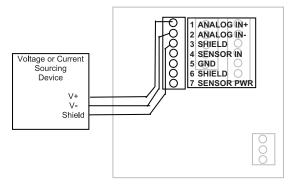


Figure 6: Voltage or Current Sourcing Analog Inputs

Page 10 6-11

Temperature Input

The Series 3050 Btu Monitor can accept inputs from either a pair of thermistors or RTDs. The inputs are labeled T1 and T2. Since the T1 sensor is used to convert the volumetric flow (Example: GPM) to the mass flow (Example: Lbs/Hr) used in the Btu calculations, the sensor connected to T1 should be in the same supply or return line as the Flow Sensor.

The temperature inputs of the Series 3050 are extremely versatile. In addition to the factory default two-wire10k @77°F Type II Thermistors and three-wire 100 ohm Platinum RTDs, the unit can be programmed in the field for a wide variety of custom RTDs and thermistors. Refer to the Programming Flow Chart. Contact the factory for assistance with any custom inputs.

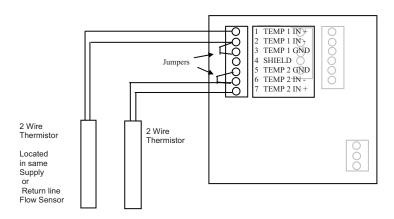


Figure 7: Wiring Two-Wire Thermistors and RTDs

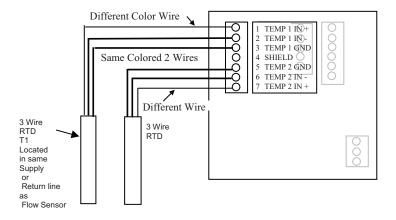


Figure 8: Wiring Three-Wire RTDs

Solid State Switch and Form "C" Output Wiring

The Series 3050 Btu Monitor has one Normally Open (N.O.) solid state switch, and one solid state form "C" relay.

Check the Specifications on page 29 for maximum voltage and current ratings for each type output. These outputs are completely independent, electrically isolated, and can be programmed as either Pulse or Set Point outputs.

When the "Totalizer" function is selected, the unit of measure and resolution are independent from the displayed units and can be programmed where one pulse occurs once every 0000000.1 to 99999999. of units selected, with any pulse width from 0001 to 9999mS.

When the "Alarm" is selected as the unit of measure and the resolution is independent from the displayed units, it allows the unit to be programmed as either a high or low rate Set Point. Since the Set Point, Release Point and their associated time delays are fully independent, this output can be either a classical high rate or low rate alarm, depending on the settings selected. When design planning, keep in mind that although both of these outputs can be programmed as alarm points only, the relay provides both N.O. and N.C. contacts. The switch is a simple N.O. contact.

Examples:

High Flow Set Point Control

The Set Point must be a value greater than the Release Point.

The relay output will have continuity between its N.C. terminal and "COM" until the flow has exceeded the Set Point ("SETPT") for a continuous period of time exceeding the Set Point Delay ("SDLY"), at which time the N.C. connection will open and the N.O. contact will have continuity to the "COM" terminal. When the flow has dropped below the Release Point ("RELP") for a continuous period of time exceeding the Release Point Delay ("RDLY"), the relay states will return to their original states. If the latch has been set to "ON", the relay will not release until manually reset once the Set Point and Set Delay have been satisfied. Sources for the Set Point control can be Flow Rate, Energy Rate, T1, T2 or Delta T.

Low Flow Set Point Control

The Set Point must be a value less than the Release Point.

The relay output will have continuity between its N.C. terminal and "COM" until the flow drops below the Set Point ("SETPT") for a continuous period of time exceeding the Set Point Delay("SDLY"), at which time the N.C. connection will open and the N.O. contact will have continuity to the "COM" terminal. When the flow has again risen above the Release Point ("RELP") for a continuous period of time exceeding the Release Point Delay ("RDLY"), the relay states will return to their original states. If the latch has been set to "ON", the relay will not release until manually reset once the Set Point and Set Delay have been satisfied. Sources for the Set Point control can be Flow Rate, Energy Rate, T1, T2 or Delta T.

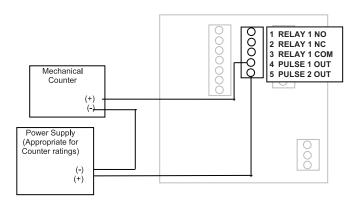


Figure 9: Relay and Switch Wiring Examples

Page 12 6-11

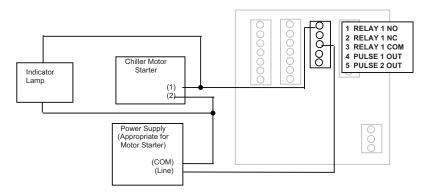


Figure 10: Relay and Switch Wiring Examples (continued)Chiller Control Based on High Energy Usage with Indication

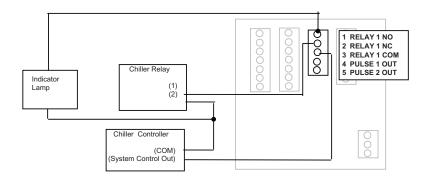


Figure 11: Relay and Switch Wiring Examples (continued)
Chiller Control Based on Low Temperature Warning with Indication

OUTPUT OPTION CARD

If the Series 3050 Btu Monitor was ordered with the Output Option card, it will have several additional outputs.

- 1. **Analog Output** (0-20mA; or 4-20mA) which can be converted externally to 0-5VDC, 1-5VDC with a 250 Ohm resistor; or 0-10VDC or 2-10VDC with a500 Ohm resistor. A 15VDC power supply is provided to permit current sinking or sourcing. The Series 3050 has special software that permits the Analog output.
- 2. **USB** for direct access to a computer using a standard mini-USB cable.
- 3. **RS-485** for fully addressable Modbus or BACnet communication.

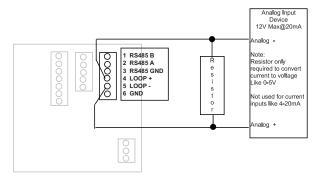


Figure 12: Current Sourcing Analog Output

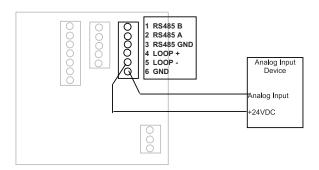


Figure 13: Current Sinking Analog Output

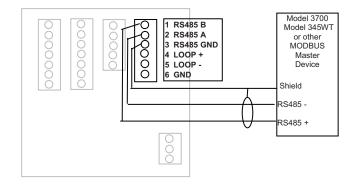


Figure 14: RS485 Communication (Modbus and BACnet)

Page 14 6-11

Modbus points

All of the following are available as Input Registers.

Addr Function

- 1. Flow 1 Rate (GPM)
- 2. Flow 2 Rate
- 3. Flow 1 Total (gallons)
- 4. Flow 2 Total
- 5. BTU Rate (kBTU/hr)
- 6. BTU Total (kBTU)
- 7. Batch 1 Count
- 8. Batch 2 Count
- 9. Temp 1 (deg F)
- 10. Temp 2
- 11. Temp Delta (T2-T1)

USB Port

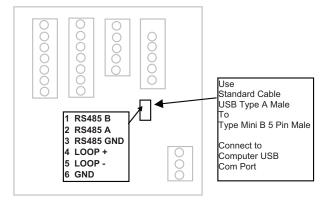


Figure 15: USB Analog Output

NOTE: To communicate using the USB port requires Windows HyperTerminal or other similar communications software. This port is part of the Analog Output Option card. See the USB Communications section of PROGRAMMING on page 16 for instructions on how to use this port.

DISPLAY AND KEY PAD

The Series 3050 Btu Monitor has a two line by 16-character display with two modes of operation and 5 keys on the front panel for programming. Two of the keys (Menu and Enter) serve a single function while the three remaining keys ($\blacktriangle \blacktriangledown \blacktriangleright$) serve dual purposes.

When the Series 3050 is first powered up, it runs through internal self checks while displaying "Badger Meter DIC Initializing." At the end of this cycle its normal mode display will appear.

In the normal mode, if still using the factory defaults, Flow Rate will be displayed on the top line, and Flow Total displayed on the bottom. Both lines can be custom-defined in the field as desired. In the normal mode the *Enter* key has no function.




Figure 16: Normal Mode Display

The other mode is the program mode, used to configure the unit. Enter and exit this mode by pressing the *Menu* key. See the programming flow chart.




Figure 17: Program Mode Display

Page 16 6-11

PROGRAMMING

With the normal mode display showing, pressing the *Menu* key will enter the programming mode. In this mode, the three arrow keys ($\triangle \nabla \triangleright$) are used on the *selection* screens to select the option displayed above the key, and on the *option list* screens to scroll up or down a list of choices, like a pull-down menu. It should be noted that most screens presenting choices show three choices, one for each arrow key. When the number of choices exceeds three, a small arrow (\rightarrow) appears on the upper right side of the display indicating there are more choices on that level. Pressing *Enter* toggles to the next set of choices. Once the selection has been made, the *Enter* key also is used to complete the selection. Pressing the *Menu* key returns back to the normal mode display.

Selection Screens

Most selection screens show three choices, one for each arrow ($\triangle \nabla \triangleright$) key. When the number of choices exceeds three, a small arrow (\rightarrow) appears on the upper right side of the display indicating there are more choices on that level. Press *Enter* to view the next set of choices.

For example, pressing *Menu* from the normal mode screen shows the "RESET SETUP DIAG" screen. Pressing the ▲key brings up the reset screens. The ▼key brings up the setup screens and the ▶key brings up the diagnostic screens. If the ▼key is pressed, the screen would appear as follows.




Figure 18: Selection Screen

Option List Screens

Units of measure is an example of an options list screen.

Pressing the \blacktriangle key scrolls up the list while the \blacktriangledown key scrolls down through the list. In this case starting with GPM; gal/s; gal/hr;...LPM;....ending in a selection of custom units.

Pressing *Enter* completes the selection. Pressing *Menu* leaves the selection unchanged. The ▶ key has no function on this type of screen.




Figure 19: Options List Screen

Data Screens

Some screens are data entry screens. For example, Set Points or Custom Units screens.

When a data entry screen is first displayed, the current value will be displayed. The cursor will be flashing the most left hand digit. Pressing the \blacktriangle key will increase the value. The \blacktriangledown key will reduce it. If the cursor is flashing the decimal point pressing the \blacktriangle key will move the decimal point to the right, pressing the \blacktriangledown key will move the decimal to the left.







Figure 20: Data Entry Screen

Programming Flow Chart

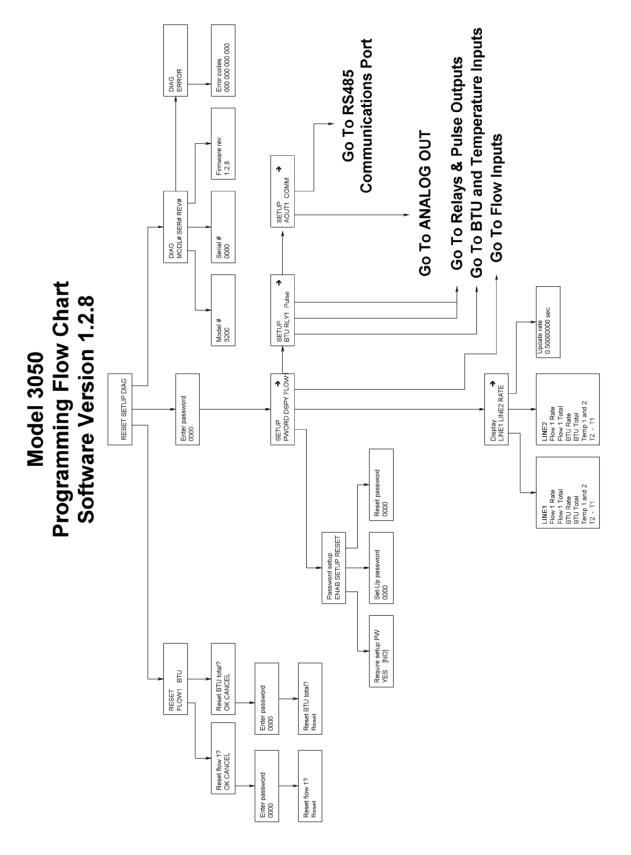



Page 18 6-11

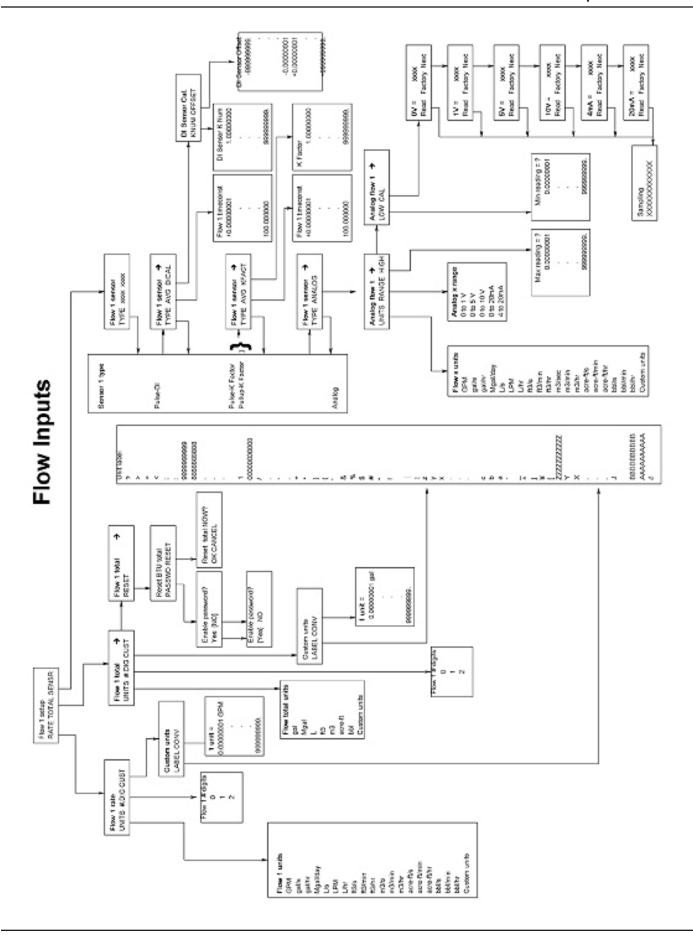

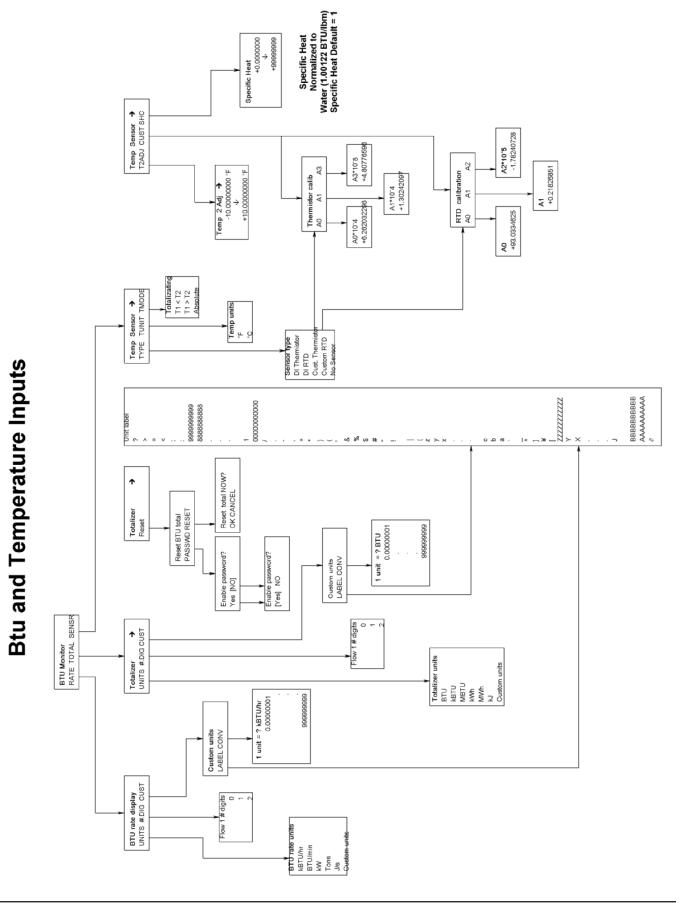


Page 20

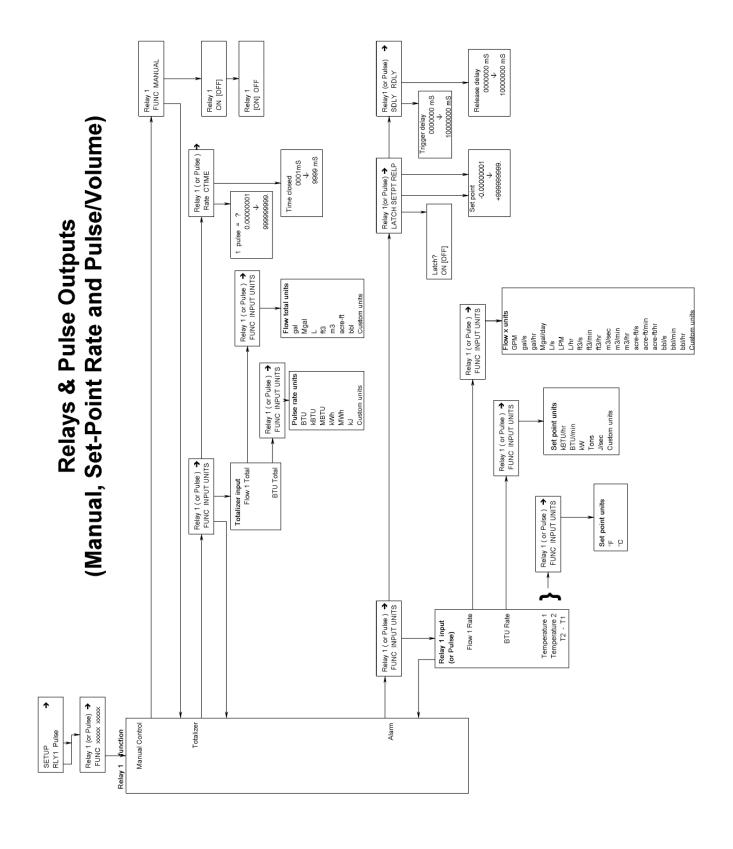

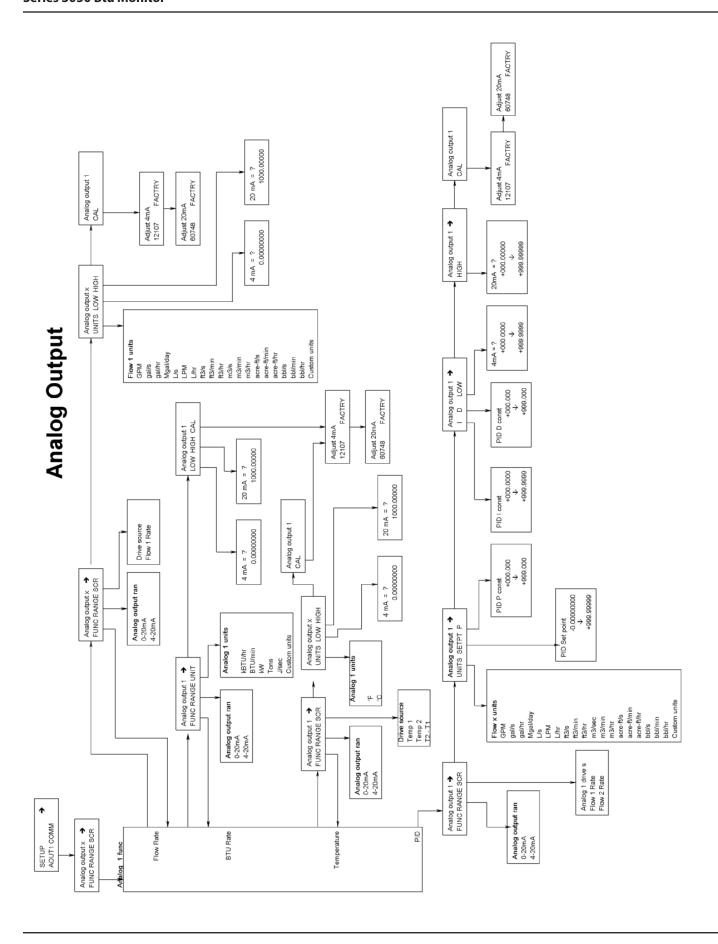

Page 22 6-11

RS485 Communication Port

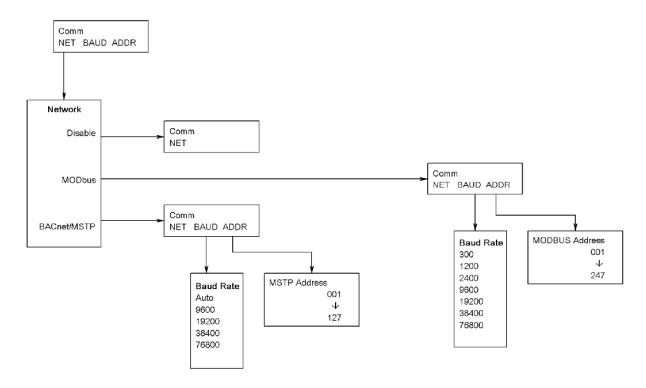

USB Communication


If the Data Industrial Series 3050 Btu Monitor is ordered with an Analog Output Option card, a five-pin USB connector is also included. As much as possible the commands mimic the use of the Front Panel controls.

To use this feature the following are required.

- 1. PC with USB ports and Windows HyperTerminal or other communications software
- 2. FTDI Virtual COM port drivers http://www.ftdichip.com/FTDrivers.htm
- 3. USB 2.0 A to Mini-B 5-pin cable

To communicate using HyperTerminal, use the following procedure.

- 1. Make sure that the Series 3050 has a Mini-B five-pin connector on the back panel. (The Series 3050 must have an Analog Output Option card installed and will be marked Series # 3050-1x.)
- 2. Be sure that the appropriate FTDI Virtual COM port drivers are installed on you computer.
- 3. Plug the USB 2.0 A end of the cable into an available USB port on your computer. Plug the Mini-B five-pin end into the back of the Series 3050.

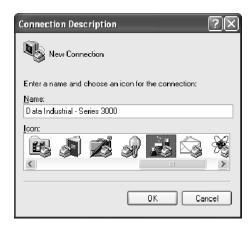


Page 24 6-11

4. Run HyperTerminal (from the Windows Start Menu) and create a new connection with a name and icon.




5. Configure this Port with 38400 baud, 8 data bits, 1 stop bit, no parity and no flow control.

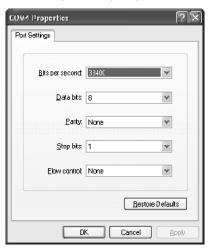

6. When connected, a ">" symbol will appear in the upper left corner of the main HyperTerminal display screen. Press the "Enter Key." Both the Rx and Tx LEDs on the front of the Series 3050 should flash once, and the "Badger Meter DIC ... Software Version..." text message should appear.

The Series 3050 Btu Monitor is now communicating, ready to take commands from the list below.

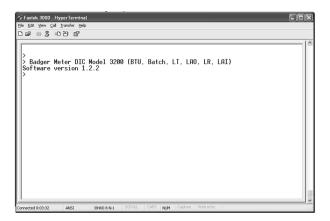

USB COMMAND LIST

In the list below, brackets indicate an argument, specifying its type and value range. For instance [0-18] stands for any number between 0 and 18 (inclusive).

Example: "display line1 = 1" sets Line 1 of the display to display #1, which happens to be the totalizer for flow channel 1.

Diagnostics:

```
id – show model number & software version
echo [on/off] – turn on/off interactive command line:
with echo off, this interface is more
amenable to scripting; it still accepts the
same commands.
```

Any command entered without an " = " sign and variable will display the current setting.

Example: Typing "display line1" returns "0" which is the variable for Flow rate.

read flow [1-2] – read the current flow on channel 1 or 2 in GPM.

read flow [1-2] total – read the current total flow on channel 1 or 2 in gallons.

DISPLAY CONFIGURATION

```
display line1 = [0-18] – set line 1 of the display display line2 = [0-18] – set line 2 of the display valid options are:
```

0: flow 1 rate

1: flow 1 total

2: flow 2 rate

3: flow 2 total

4: flow 1+2 rate

5: flow 1+2 total 6: flow 1-2 rate

7: flow 1-2 total

8: flow 2-1 rate

9: flow 2-1 total

14: BTU rate

15: BTU total

16: temperature 1&2

17: temperature 1-2

display urate = [0.1-10] – set the update rate of the display, in seconds

FLOW INPUT CHANNEL CONFIGURATION

```
flow [1-2] sensor type = [0-4] – flow sensor type:
```

0: PulseDI,

1: PulseKFactor,

2: PullupKFactor

3: Analog

flow [1-2] sensor dical k = [x] - DI-type flow sensor k

flow [1-2] sensor dical off = [x] – DI-type flow sensor offset

flow [1-2] sensor kfact = [x] – K factor for non-DI sensors

flow [1-2] sensor analog units = [0-19] – flow units for analog input

flow [1-2] sensor analog range = [0-4] – current range for analog input

flow [1-2] sensor analog high = [x] – flow rate @max current

flow [1-2] sensor analog low = [x] – flow rate @min current

flow [1-2] sensor avg = [0-100] – averaging "time constant," in seconds:

flow [1-2] rate units = [0-19] – flow (channel) rate units to display.

0: GPM

1: gal/s

2: gal/hr

3: Mgal/day

4: L/s

5: LPM

6: L/hr

7: ft3/s

8: ft3/min 9: ft3/hr

10: m3/s

11: m3/min

12: m3/hr

13: acreft/s

14: acreft/min

15: acreft/hr

16: bbl/s

17: bbl/min

18: bbl/hr

19: Custom

flow [1-2] rate ndigits = [2-10] – number of decimal places to show for flow rate

flow [1-2] rate custom label = [string] – set the label for custom

flow [1-2] rate custom conv = [0-100] - conversion factor for custom units

flow [1-2] total units = [0-7] – set the totalizer units to display

0: gal

1: Mgal

2: L

3: ft3

4: m3

5: acreft

6: bbl

7: Custom

Page 26 6-11

BTU CONFIGURATION

```
Btu rate units = [0-5] – set the Btu rate units:
```

- 0: kBtu/hr
- 1: Btu/min
- 2: kW
- 3: TR
- 4: J/s
- 5: Custom

Btu rate ndigits = [2-10] – number of decimal digits to display Btu rate custom label = [string] – Btu rate custom unit label Btu rate custom conv = [0-100] – custom unit conversion

factor
Btu total units = [0-6] – Btu totalizer units:

- 0: BTU
- 1: kBTU
- 2: MBTU
- 3: kWh
- 4: MWh
- 5: kJ
- 6: Custom

Btu total ndigits = [2-10] – number of decimal digits to display

Btu total custom label = [string] – Btu totalizer custom unit label

Btu total custom conv = [0-100] - custom unit

conversion factor

Btu total mode = [0-2] - totalizer mode:

- 0: Heating
- 1: Cooling
- 2: Heating & Cooling

Btu sensor type = [0-4] – temperature sensor type:

- 0: DI Thermistor
- 1: DI RTD
- 2: Custom Thermistor
- 3: Custom RTD
- 4: No sensor

Btu sensor correct_k = [0-10] – correction factor Btu sensor temp_unit = [0-1] – temperature units to

display

0: deg F 1: deg C

Btu sensor t2adj = [-10-10] – t2a

RELAY OUTPUT CONFIGURATION

relay [1-5] func = [0-9] – relay function; relay 5 is the pulse output

- 0: Totalizer
- 1: Alarm
- 2: Manual Control

relay [1-5] input = [0-8] – relay input; depends on source for totalizer:

0: Flow 1 Total

for alarms:

0: Flow 1 Rate

relay [1-5] units = [0-19] – units on setpoints/rates; depends on src/input

flow units: same as 'flow [1-2] rate units' above

volume units: same as 'flow [1-2] total units'

relay [1-5] manual = [on/off] – manually set relay on or off, if in manual mode

relay [1-5] rate = [x] – totalizer rate

relay [1-5] ctime = [0-10000] – pulse width in milliseconds

relay [1-4] latch = [on/off] - turn on/off relay latching

relay [1-4] setpoint = [x]

relay [1-4] releasepoint = [x]

ANALOG OUTPUT CONFIGURATION

analogout [1-2] func = [0-3]

- 0: Flow rate
- 1: BTU rate
- 2: Temperature
- 3: PID control

analogout [1-2] src = [0-4]

for flow rate:

- 0: Flow 1 rate
- 1: Flow 2 rate
- 2: Flow sum
- 3: Flow 1-2
- 4: Flow 2-1

for Btu rate: not used for temperature:

0: Flow rate

1: Temp 2

2: Temp Delta

for PID control:

0: Flow 1 rate

1. Fl. 2

1: Flow 2 rate analogout [1-2] range – [0-1]

0: 0-20mA

1: 4-20mA

analogout [1-2] low = [x] – value corresponding to 0 (or 4) mA

analogout [1-2] high = [x] – value corresponding to 20mA

analogout [1-2] setpoint = [x] – PID setpoint

analogout [1-2] P = [x] - PID constants

analogout [1-2] I = [x] - PID constants

analogout [1-2] D = [x] - PID constants

RS485 COMM PORT CONFIGURATION

comm baudrate = [0-7]

0: Auto

1:300

2:1200

3: 2400

4:9600

5: 19200

6: 38400

7: 76800

comm mstpaddr = [0-127] – BACnet/MSTP address comm maxmaster = [0-127] – BACnet/MSTP max master address

comm devinst = [x] – BACnet device instance ID comm mbslaveaddr = [0-255] – Modbus slave address

MODBUS

Addr Function

- 1 Flow 1 rate (GPM)
- 2 Flow 2 rate
- 3 Flow 1 Total (gallons)
- 4 Flow 2 Total
- 5 BTU Rate (kBTU/hr)
- 6 BTU Total (kBTU)
- 7 Batch 1 Count
- 8 Batch 2 Count
- 9 Temp 1 (deg F)
- 10 Temp 2
- 11 Temp Delta (T2-T1)

TROUBLESHOOTING

Trouble Codes:

- 1 Relay 1 totalizer rate exceeded
- 2 Relay 2 rate exceeded
- 3 Relay 3 rate exceeded
- 4 Relay 4 rate exceeded
- 5 Pulse out rate exceeded
- 20 Error reading EEPROM on faceplate
- 21 Error writing EEPROM
- 22 Analog Input card missing
- 24 Temperature Input card missing
- 25 Invalid flow units configured
- 26 Invalid volume units configured
- 27 Bad input frequency
- 29 Internal error calculating flow rate
- 31 Error reading from analog input AD converter channel 1
- 32 Error reading from analog input AD converter channel 2
- 36 Error writing to analog input AD converter channel 1
- 37 Error writing to analog input AD converter channel 2
- 50 Error reading I2C address 0 (relays, buttons, and LEDs)
- 51 Error writing to I2C address 0
- 52 Error reading I2C address 1 (analog input card control lines)
- 53 Error writing I2C address 1
- 54 Error reading I2C address 2 (temperature input card control lines)
- 55 Error writing I2C address 2
- 71 Watchdog timer reset occurred
- 82 Fatal error initializing EEPROM

Page 28 6-11

FLOW SENSOR INPUTS

Туре	Threshold	Signal Limit	Frequency	Pull-up	Impedance	Aux. Power	Calibration
Pulse-Di	2.5 VDC	30VDC	0.4 Hz to 10kHz	1K to12VDC	_	12VDC@30mA	K + Offset
Pulse-K Factor	2.5 VDC	30VDC	0.4 Hz to 10kHz	_	_	12VDC@30mA	Pulse/Gal
Pull-up-K Factor	2.5 VDC	30VDC	0.4 Hz to 10kHz	1K to12VDC	_	12VDC@30mA	Pulse/Gal
Analog – 4-20mA	_	50mA Fused	_	_	100 Ω	12VDC@30mA	Pulse/Gal
Analog – 0-20mA	_	50mA Fused	_	_	100 Ω	12VDC@30mA	Linear
Analog – 0-1 VDC	_	30VDC	_	_	100 Ω	12VDC@30mA	Linear
Analog – 0-5 VDC	_	30VDC	_	_	100 Ω	12VDC@30mA	Linear
Analog – 0-10 VDC	_	30VDC	_	_	100 Ω	12VDC@30mA	Linear

Rate Units of Measure: GPM; gal/sec; gal/hr; Mgal/day; LPS; LPM; LPH; ft3/Sec; ft3/min; ft3/hr;m3/sec; m3/min; m3/hr; acre-ft/sec; acre-ft/min; acre-ft/hr; bbl/sec; bbl/min; bbl/hr; and field programmed custom units 0.00 to 999999999

Total Units: gallons; Mgal; liters; ft3; m3; acre-ft; bbl; and field programmed custom units 0.00 to 999999999

SPECIFICATIONS

Voltage

12-24 VDC / VAC (Limit: 8-35 VDC) (Limit: 8-28 VAC)

DC current draw (~280mA) AC power rating (~5 VA)

Display

16 character by two-line alphanumeric dot matrix 7.95mm high backlit LCD

Operating Temperature

-20°C to +70°C

Storage Temperature

-30°C to +80°C

Dimensions

Panel Mount:

3.78"W x 3.78"H x 3.23"D (96mm x 96mm x 63mm)

Wall Mount:

4.80"W x 4.72"H x 3.63"D (120mm x 120mm x 92mm)

Weight:

panel mount 12 oz

Pulse and Relays

Both pulse and relay are fully functional as either totalizing, or Set Point outputs.

Pulse Electrical

1 Amp @ 35VDC/ 30VAC Closed: 0.5Ω @ 1 AMP Open: >10⁸Ω

Relay Electrical

Resistive load: 5Amp@120VAC/30VDC Inductive load: 1Amp@120VAC/30VDC

Pulse/Unit Volume (Totalizer)

Driving Source: flow total; Btu total **Units:** any predefined or custom unit **Rate:** 1 Pulse per 1.0000000 to 99999999 units

Contact Time: 1 to 9999 mS

Set Point (Alarm)

Driving Source: flow rate; Btu rate; temperature 1; temperature 2, delta T Units: Any predefined or custom unit Set Point: 1.0000000 to 99999999 Delay to Set: 1 to 9999 Seconds Release Point: 1.0000000 to 99999999 Delay to Release: 1 to 9999 seconds

Optional Analog Output

Driving Source: flow rate; PID control

Range: 4-20mA; 0-20mA (isolated current sinking

or sourcing)

Sinking: 30VDC @ 0mA maximum; 3 volts

@20mA minimum

Sourcing: 600 W maximum load

USB Communication

Provides complete access to all programming and operation features.

Requirements:

USB 2.0 A to Mini-B 5-Pin Cable (Example: SYSONIC model UAM56 GWT/B)

RS-485 Communication

Supports: Modbus and BACnet/MSTP

Accessories

Programming kit Wall mount kit




Figure 21: Series 3050 Ordering Matrix

Intentionally blank page

Page 30 6-11

Intentionally blank page



Please see our website at www.badgermeter.com for specific contacts.

Data Industrial is a registered trademark of Badger Meter, Inc. Other trademarks appearing in this document are the property of their respective entities. Copyright 2011, Badger Meter, Inc. All rights reserved.

Due to continuous research, product improvements and enhancements, Badger Meter reserves the right to change product or system specifications without notice, except to the extent an outstanding contractual obligation exists.