
5 Port Solenoid Valve

Series VQ1000/2000

Metal Seal Rubber Seal

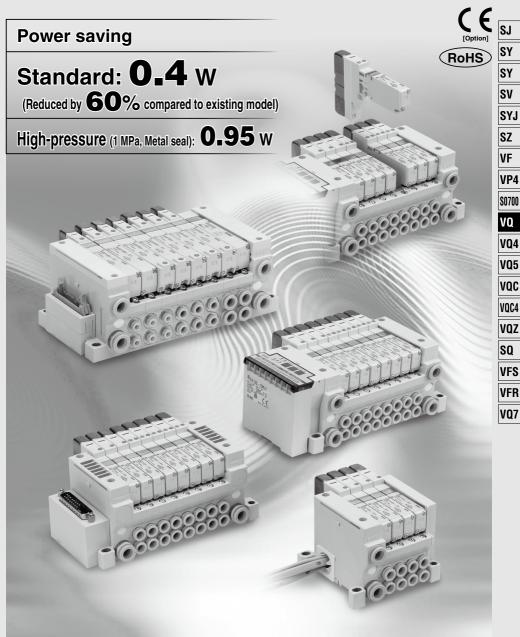


Space-saving profile

All pilot valves are compactly mounted on one side. The space-saving design of mounting all fittings on one side permits mounting in three directions.

- The non-bias, one-clamp structure permits easy valve replacement.
- Built-in One-touch fittings for easy piping
- Slide locking type manual override provided


ON/OFF operation and locking can be made by sliding the manual override.

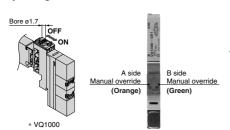


Thin compact design with high flow capacity

	Manifold pitch (mm)	Flow-rate ch	aracteristics	Applicable	
Model		Metal seal	cylinder		
		C [dm3/(s-bar)]	[dm ³ /(s·bar)] C [dm ³ /(s·bar)]		
VQ1000	10.5	0.72	1.0	Up to ø50	
VQ2000	16	2.6	3.2	Up to ø80	

* Flow-rate characteristics: 4/2 → 5/3 (A/B → R1/R2)

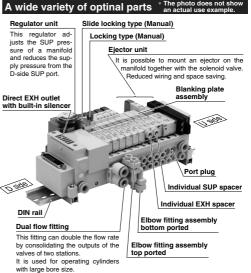


Valve Specifications

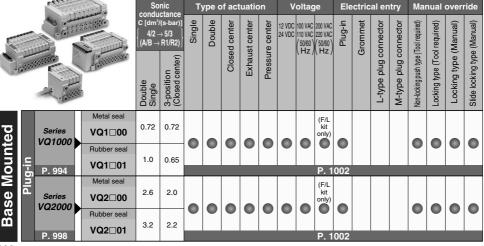





A variety of common wiring methods are standardized.

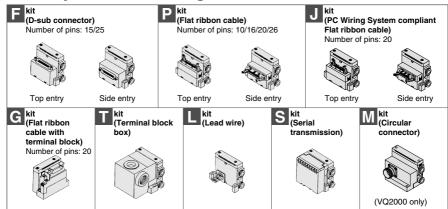

Dual 3-port valves, 4 positions


Rubber seal only

- Two 3-port valves built into one body.
- The 3-port valves on the A and B sides can operate independently.
- When used as 3 port valves, only half the number of stations is required.
- Can also be used as a 4-position, 5-port type valve.

Exhaust center: VQ1A01

: VQ2A01

Pressure center: VQ1B01 : VQ2B01

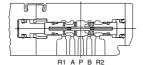

Model	A side	B side	Symbol
VQ1A01	N.C.	N.C.	4(A) 2(B) 75(R1) 1(P) 3(R2)
VQ2A01	valve	valve	
VQ1B01	N.O.	N.O.	4(A) 2(B) 75(R1) 1(P) 3(R2)
VQ2B01	valve	valve	
VQ1C01	N.C.	N.O.	4(A) 2(B) ZDIA 10 S(R1) 1(P) 3(R2)
VQ2C01	valve	valve	

s	Semi-standard						Options												
External pilot	D-sub connector 15P	Flat ribbon cable 10P/16P/20P	Negative COM specifications	Inch-size One-touch fittings	Special wiring specifications	Blanking plate	Individual SUP/EXH spacer	SUP/EXH block plate	Name plate	Back pressure check valve	DIN rail mounting	Built-in silencer	Silencer for EXH port	Elbow fitting for cylinder port	Dual flow fitting	Plug for cylinder port	Regulator unit	Ejector unit	Double check block (Separated)
•	•	•	Except S/G kit	•	Except L kit	•	•	•	•	•	•	•	•	•	•	•	•	•	•
		P. 1	040									P. 1	056						
•	•	•	Except S/G kit	•	Except L kit	•	•	•	•	•	•	•	•	•	•	•			•
	P. 1040											P. 1	056						

SJ SY

SY

SV

SYJ

SZ VF

VP4

S0700

VQ VQ4

VQ5 VQC

VQC4


VQZ

SQ VFS


VFR VQ7

Series VQ/Base Mounted: Variations

Manifold Variations

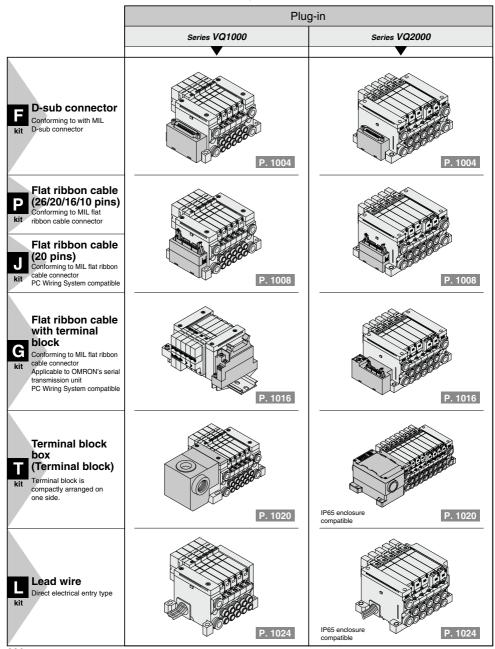

Manifold Variations

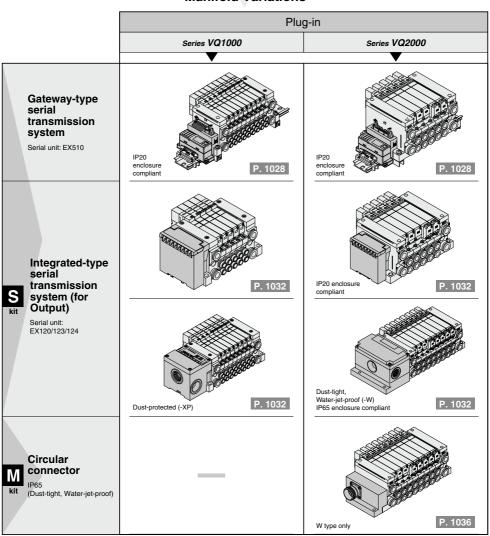



SJ SY SY

SV

SYJ

SZ

VF

VP4 \$0700 VQ VQ4

VQ5

VQC

VQC4

VQZ SQ VFS


VFR

VQ7

Cylinder Speed Chart

This chart is provided as guidelines only.

For performance under various conditions, use SMC's Model Selection Program before making a judgment.

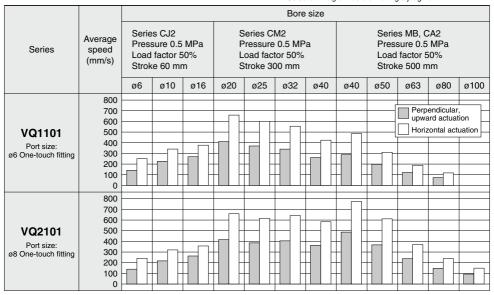

- * It is when the cylinder is extending that is meter-out controlled by speed controller which is directly connected with cylinder, and its needle valve with being fully open.
- * The average velocity of the cylinder is what the stroke is divided by the total stroke time.
- * Load factor: ((Load mass x 9.8)/Theoretical force) x 100%

Conditions

Series	Conditions	Series CJ2	Series CM2	Series MB, CA2				
	Tube bore x Length	T0604 (O.D. ø6/I.D. ø4) x 1 m						
VQ1101	Speed controller	AS3002F-06						
	Silencer	AN15-C08						
	Tube bore x Length T0806 (O.D. ø8/l.D. ø6) x 1 m							
VQ2101	Speed controller	AS3002F-08						
	Silencer	AN20-C10						




Plug-in Unit

Base Mounted

Series VQ1000

Note) For CE-compliant models, DC-type

How to Order Manifold

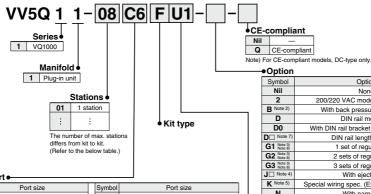

Cylinder port -

-,		_								
Symbol	Port size		Symbol	Port size						
C3	With ø3.2 One-touch fitting		L5	Top ported elbow M5 thread						
C4	With ø4 One-touch fitting		B3	Bottom ported elbow with ø3.2 One-touch fitting						
C6	With ø6 One-touch fitting		B4	Bottom ported elbow with ø4 One-touch fitting						
M5	M5 thread		B6	Bottom ported elbow with ø6 One-touch fitting						
CM Note 1)	Mixed sizes and with port plug		B5	Bottom ported elbow M5 thread						
L3	Top ported elbow with ø3.2 One-touch fitting		M Note 1)	Elbow port, mixed sizes(Including						
L4	Top ported elbow with ø4 One-touch fitting		LIVI No. 17	upward, downward piping and mixed)						
L6	Top ported elbow with ø6 One-touch fitting		MM Note 2)	Mixed size for different types of piping, option installed						

Note 1) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet Note 2) When selecting the mixed size for different types of piping or dual flow fitting assembly, enter "MM" and give instructions in the manifold specification sheet.

Note 3) Inch-size One-touch fittings are also available. Refer to page 1042 for details. Note 4) M5 fittings for M5 thread are attached without being incorporated.

Simple specials are available with SMC Simple Specials System Refer to the SMC website for details on applicable models


200/220 VAC models (F/L kit only) With back pressure check valve DIN rail mounting With DIN rail bracket (Without DIN rail) DIN rail length specified 1 set of regulator unit 2 sets of regulator unit 3 sets of regulator unit With ejector unit Special wiring spec. (Except double wiring) With name plate R Note 6 External pilot Direct EXH outlet with built-in silencer Note 1) When two or more symbols are specified, indicate them

Option

None

- alphabetically. Example: -BRS
- Note 2) Models with a suffix "-R" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.
- Note 3) Specify the mounting position by means of the manifold specification sheet
- Note 4) Refer to page 1054 for details on with vacuum ejector unit. A combination of "J" and "N" is not available.
- Note 5) Specify the wiring specifications by means of the manifold specification sheet. (Except L kit)
- Note 6) Indicate "R" for the valve with external pilot.
- Note 7) : Station, Example: D08: The number of stations that may be displayed is longer than the manifold number of

Note 8) G1, G2, or G3 cannot be combined with N

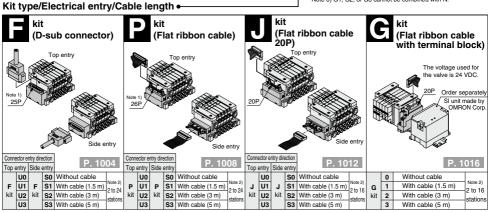

Note 1) Besides the above, F/P kit with different number of pins are available. Refer to page 1040 for details

Note 2) Refer to page 1041 for details.




How to Order Valves


Note) For CE-compliant models DC-type only


[Option]

How to Order Manifold Assembly

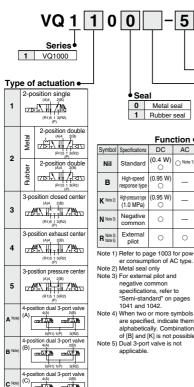


Note) Rubber seal only

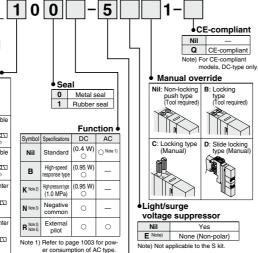

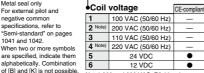

Note) 200 and 220 VAC: F/L kit only

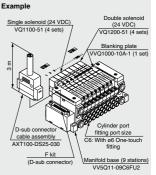


VV5Q11-09C6FU2 · · · 1 set (F kit 9-station manifold base part no.) *VQ1100-51 ······ 4 sets (Single solenoid part no.)
*VQ1200-51 ····· 4 sets (Double solenoid part no.) *VVQ1000-10A-1 ···· 1 set (Blanking plate part no.)

The asterisk denotes the symbol for assembly Prefix it to the part nos. of the solenoid valve, etc.

Specify the part numbers for valves and options together beneath the manifold base part number. Besides, when the arrangement will be complicated, specify them by means of

Use the standard (DC) specification when continuously energizing for long periods of time.

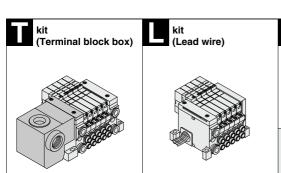

negative common

1041 and 1042.

applicable.

specifications, refer to

"Semi-standard" on pages

are specified, indicate them

alphabetically. Combination



(Serial transmission) The valve is equipped with an indicator light and surge voltage suppressor, and the voltage is 24 VDC. The dust proof SI unit is also available. Refer to page 1032

for details.

Note) Refer to "SI Unit Part No." on page 1032 when ordering the CEcompliant SI unit

			P. 1032	
	0	Without SI unit	Note 2)	
	F1	NKE Corp.: Fieldbus System	Max.16	
	Н	NKE Corp.: Fieldbus H System	stations	
	J1	Panasonic Industrial Devices SUNX Co., Ltd.: S-LINK (16 outputs)		
S (it	J2	Panasonic Industrial Devices SUNX Co., Ltd.: S-LINK (8 outputs)	Max. 8 stations	
	Q	DeviceNet™	Max.16	
	R1	OMRON Corp.: CompoBus/S (16 outputs)	stations	
	R2	OMRON Corp.: CompoBus/S (8 outputs)	Max. 8 stations	
	٧	CC-LINK	Max. 16	
	ZΒ	CompoNet [™] (Positive common)	stations	
	ZBN	CompoNet™(Negative common)	Jacations	

P. 1024

1 to 8

stations

With cable (0.6 m)

With cable (1.5 m)

With cable (3 m)

1

2

kit

T kit O Terminal block box 2 to 24 stations h

SY

SY

LYS

۷F

VP4

S0700

VO

V04 V05

VOC

VOC4

VOZ SO


VFS **VFR**

VQ7


VQ1000: Manifold Options

P. 1050 to 1054


Blanking plate assembly VVQ1000-10A-1

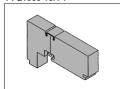

Individual SUP spacer VVQ1000-P-1-^{C6}_{N7}

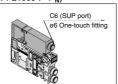


Individual EXH spacer VVQ1000-R-1-^{C6}_{N7}

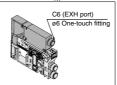

SUP block plate VVQ1000-16A



Blanking plate with connector VVQ1000-1C□-□

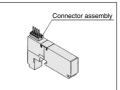

EXH block base assembly VVQ1000-19A-F-C6, M5 N7 N7




Back pressure check valve assembly [-B] VVQ1000-18A



Name plate [-N] VVQ1000-NC-Station (1 to Max. stations)



Blanking plug KQ2P-□

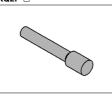

Port plug VVQ0000-58A




Elbow fitting assembly VVQ1000-F-L□




DIN rail mounting bracket [-D/-D0/-D□] VVQ1000-57A




Direct EXH outlet with built-in silencer [-S]

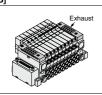

Dual flow fitting assembly VVQ1000-52A-N9

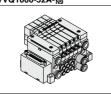


Silencer (For EXH port) AN15-C08

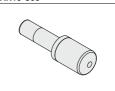


- Refer to page 1062 for cylinder
- port fittings part number.

 Refer to page 1047 for replacement parts.


Regulator unit VVQ1000-AR-1

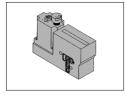

Double check block VQ1000-FPG-□□-□

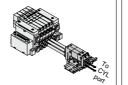

With ejector unit [-J□]

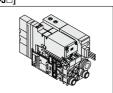

996

Plug-in Unit

Base Mounted

Series VQ2000

Note) For CE-compliant models, DC-type

How to Order Manifold

Kit type

only. Option VV5Q 2 1-08 C6 F U1 Symbol Option Nil None CE-compliant 2 With back pressure check valve Q CE-compliant

Note) For CE-compliant models, DC-type only.

Stations

01 1 station

The maximum and minimum number of stations are varied depending on kit. (Refer to the below table.)

Cylinder port • Symbol Port size C4 With ø4 One-touch fitting With ø6 One-touch fitting C8 With ø8 One-touch fitting Mixed sizes and with port plug Top ported elbow with ø4 One-touch fitting

L6 Top ported elbow with ø6 One-touch fitting

Series •

Manifold

1 Plug-in unit

VQ2000

Symbol Port size Top ported elbow with ø8 One-touch fitting 18 Bottom ported elbow with ø4 One-touch fitting **B4** Bottom ported elbow with ø6 One-touch fitting **B6** B8 Bottom ported elbow with #8 One-touch fitting LM Note 1) Elbow port, mixed sizes (Including upward, downward piping and mixed MM Note 2) Mixed size for different types of piping, option installed

Note 1) Indicate "Mixed size and with port plug" by means of the manifold specification sheet Note 2) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold specification sheet.

Note 3) Inch-size One-touch fittings are also available. Refer to page 1042 for details.

Simple specials are available with SMC Simple Specials System. Refer to the SMC website for details on applicable models


200/220 VAC models (F/L kit only) n DIN rail mounting With DIN rail bracket (Without DIN rail) DIN rail length specified K Note 3) Special wiring spec. (Except double wiring) N With name plate R Note External pilot s Direct EXH outlet with built-in silencer Enclosure: Dust-tight, Water-iet-proof (IP65) (T/L/S/M kit only)

Note 1) When two or more symbols are specified, indicate them alphabetically. Example: -DNR Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) Specify the wiring specifications by means of the manifold specification sheet. (Except L kit)
Note 4) Indicate "R" for the valve with external pilot.

Note 5) : Station. Example: D08: The number of stations that may be displayed is longer than the manifold number of stations

Kit type/Electrical entry/Cable length •

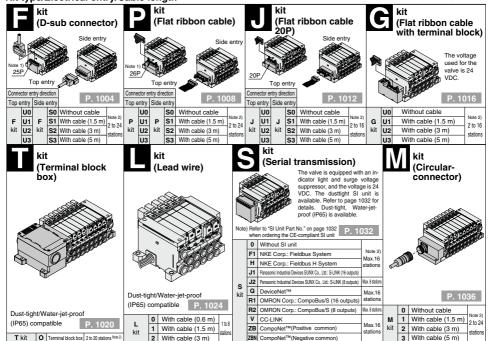

Note 1) Besides the above, F/P kit with different number of pins are available. Refer to page 1040 for details.

Note 2) Refer to page 1041 for details.

Note 3) Refer to the pages on respective kits for IP65 type. (T/L/S kit)




Base Mounted Plug-in Unit Series VQ2000


How to Order Valves

Note) For CE-compliant models, DC-type only.

(E

How to Order Manifold Assembly

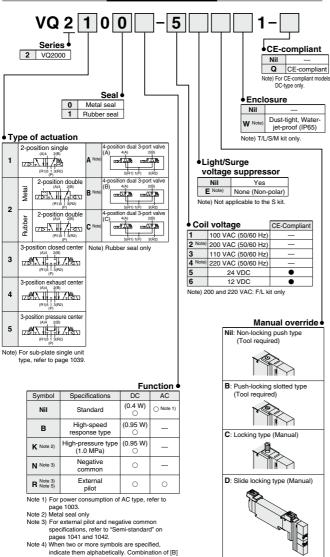

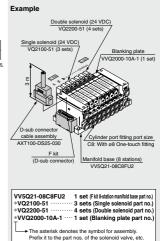

Specify the part numbers for valves and options together beneath the manifold base part number. Besides, when the arrangement will be complicated, specify them by means of the manifold specification sheet. SZ VF

SJ

SY

SY

SV

SYJ

VP4 S0700

VQ

VQ4

VQ5

VQC

VQC4

VQZ

SQ VFS

VFR VO7

∆ Caution

Use the standard (DC) specification when continuously energizing for long periods of time.


and [K] is not possible.

Note 5) Dual 3-port valve is not applicable.


VQ2000: Manifold Options

P. 1056 to 1060


Blanking plate assembly VVQ2000-10A-1

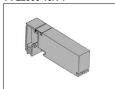

Individual SUP spacer VVQ2000-P-1-^{C8}_{N9}

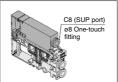


Individual EXH spacer VVQ2000-R-1-^{C8}_{N9}

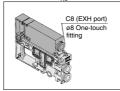


SUP block plate VVQ2000-16A



EXH block plate VVQ2000-19A

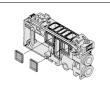


SUP stop valve spacer VVQ2000-24A-1

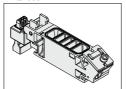


Back pressure check valve assembly [-B] VVQ2000-18A



Name plate [-N] VVQ2000-N-Station (1 to Max. stations)

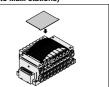

Blanking plug KQ2P-□

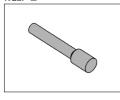

Port plug VVQ1000-58A




DIN rail mounting bracket [-D/-D0/-D□] VVQ2000-57A



Direct EXH outlet with built-in silencer [-S]



Silencer (For EXH port) AN20-C10

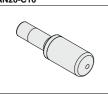

Elbow fitting assembly VVQ2000-F-L□




Dual flow fitting assembly VVQ2000-52A-N11




- Refer to page 1062 for cylinder
- port fittings part number.

 Refer to page 1049 for replacement parts.

Double check block (Separated) VQ2000-FPG-□□-□

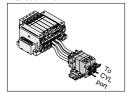

Double check block (Direct mounting) VVQ2000-23A-□

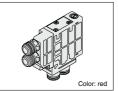

1000

Plug-in Unit

Base Mounted

Series VQ1000/2000



Model

					F	low-rat	e char	acteristics Note 1)			Respo	nse time (ms)	Note 2)	
Series		Type of actuation	Mode	el	1 → 2/4 (P -	→ A/B)		2/4 → 3/5 (A/E	3 → R1/	(R2)	Standard:	High-speed	AC	Weight (g)
	`	2010411011			C [dm³/(s-bar)]	b	Cv	C [dm³/(s·bar)]	b	Cv	0.4 W response: 0.95 W		AC	(9)
	٦	Single	Metal seal	VQ1100	0.70	0.15	0.16	0.72	0.25	0.18	15 or less	12 or less	29 or less	67
	2-position	Sirigle	Rubber seal	VQ1101	0.85	0.20	0.21	1.0	0.30	0.25	20 or less	15 or less	34 or less	67
	ĕ	Double	Metal seal	VQ1200	0.70	0.15	0.16	0.72	0.25	0.18	13 or less	10 or less	13 or less	
		Double	Rubber seal	VQ1201	0.85	0.20	0.21	1.0	0.30	0.25	20 or less	15 or less	20 or less	
		Closed	Metal seal	VQ1300	0.68	0.15	0.16	0.72	0.25	0.18	26 or less	20 or less	40 or less	
VQ1000	٦	center	Rubber seal	VQ1301	0.70	0.20	0.16	0.65	0.42	0.18	33 or less	25 or less	47 or less	
VQ1000	sition	Exhaust	Metal seal	VQ1400	0.68	0.15	0.16	0.72	0.25	0.18	26 or less	20 or less	40 or less	77
	3-po	center	Rubber seal	VQ1401	0.70	0.20	0.16	1.0	0.30	0.25	33 or less	25 or less	47 or less	
	"	Pressure	Metal seal	VQ1500	0.70	0.15	0.16	0.72	0.25	0.18	26 or less	20 or less	40 or less	
		center	Rubber seal	VQ1501	0.85	0.20	0.21	0.65	0.42	0.18	33 or less	25 or less	47 or less	
	4-position	Dual 3-port valve	Rubber seal	VQ1 B 01	0.70	0.20	0.16	0.70	0.20	0.16	33 or less	25 or less	47 or less	
	_	Single	Metal seal	VQ2100	2.0	0.15	0.46	2.6	0.15	0.60	29 or less	22 or less	49 or less	95
	2-position		Rubber seal	VQ2101	2.2	0.28	0.55	3.2	0.30	0.80	31 or less	24 or less	51 or less	95
	õ	Double	Metal seal	VQ2200	2.0	0.15	0.46	2.6	0.15	0.60	20 or less	15 or less	20 or less	
	~	Double	Rubber seal	VQ2201	2.2	0.28	0.55	3.2	0.30	0.80	26 or less	20 or less	26 or less	
	Г	Closed	Metal seal	VQ2300	2.0	0.15	0.46	2.0	0.18	0.46	38 or less	29 or less	58 or less	
	<u>ا</u> ۔	center	Rubber seal	VQ2301	2.0	0.28	0.49	2.2	0.31	0.60	44 or less	34 or less	64 or less	
VQ2000	igi	Exhaust	Metal seal	VQ2400	2.0	0.15	0.46	2.6	0.15	0.60	38 or less	29 or less	58 or less	105
	3-position	center	Rubber seal	VQ2401	2.0	0.28	0.49	3.2	0.30	0.80	44 or less	34 or less	64 or less	105
	ا _ش	Pressure	Metal seal	VQ2500	2.4	0.17	0.57	2.0	0.18	0.46	38 or less	29 or less	58 or less	
		center	Rubber seal	VQ2501	3.2	0.28	0.80	2.2	0.31	0.60	44 or less	34 or less	64 or less	
	4-position	Dual 3-port valve	Rubber seal	VQ2B 01	1.8	0.28	0.46	1.8	0.28	0.46	44 or less	34 or less	64 or less	

Note 1) The values are given for port size C6: (VQ1000), C8: (VQ2000) without back pressure check valve.

Note 2) As per JIS B 8375-1981 (Supply pressure 0.5 MPa; with indicator light/surge voltage suppressor; clean air

The response time is subject to the pressure and qualify of the air.) The values at the time of ON are given for double types.

Base Mounted Plug-in Unit Series VQ1000/2000

Metal seal

Symbol									
2-position single									
	(R1)5 1 3(R2)								
Metal	2-position double								
Rubber	2-position double								
3-pc	sition closed center								
Z	(R1)\$ 1 3(R2)								
3-ро	sition exhaust center								
ızı									
3-ро	sition pressure center								
⊠	(R1)5 1 3(R2)								
4-pos (A)	ition dual 3-port valve Note)								
4-pos (B)	ition dual 3-port valve Note) 4(A) 2(B) 5(B1) 1(P) 3(B2)								
4-pos (C)	ition dual 3-port valve Note)								
1	consider contribe	NL							

Note) Rubber seal

Standard Specifications Valve type

	Fluid		Air, Inert gas	Air, Inert gas			
	Maximum operating	oressure	0.7 MPa (High-pressure type: 1.0 MPa)	0.7 MPa			
2		Single	0.1 MPa	0.15 MPa			
atio	Minimum	Double	0.1 MPa	0.1 MPa			
1,5	operating pressure	3-position	0.1 MPa	0.2 MPa			
Valve specifications		4-position		0.15 MPa			
<u>8</u>	Ambient and fluid ter	mperature	-10 to 50	-10 to 50°C Note 1)			
\ A	Lubrication		Not required				
	Manual override		Push type, Locking type (Tool re	equired, Manual) semi-standard			
	Impact/Vibration resi	stance Note 2)	150/30) m/s²			
	Enclosure		Dust-protected; Dust-tight, Water-jet-proof (IP65) Note 4)				
	Coil rated voltage		12 , 24 VDC, 100, 110, 200, 220 VAC (50/60 Hz)				
2	Allowable voltage flu	ctuation	±10% of rated voltage				
atio	Coil insulation type		Equivalent to Class B				
i i		24 VDC	0.4 W DC (17 mA), 0.9	5 W DC (40 mA) Note 3)			
Spec		12 VDC	0.4 W DC (34 mA), 0.9	5 W DC (80 mA) Note 3)			
Electrical specifications	Power consumption	100 VAC	Inrush 0.96 VA (10 mA),	Holding 0.96 VA (10 mA)			
octri	(Current)	110 VAC	Inrush 1.0 VA (9 mA),	Holding 1.0 VA (9 mA)			
🞳		200 VAC	Inrush 1.26 VA (6 mA),	Holding 1.26 VA (6 mA)			

Note 1) Use dry air to prevent condensation when operating at low temperatures.

220 VAC

Note 2) Impact resistance No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance ··· No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Inrush 1.38 VA (6 mA), Holding 1.38 VA (6 mA)

Note 3) Value for high-speed response, high-voltage type (0.95 W)


Note 4) Dust-tight, water-jet-proof (IP65) is available on T/L/S/M kit of the VQ2000.


Manifold Specifications

			F	iping specification	ons	Note 2)		5-station
Series	Base model	Connection type	Piping	Port siz	ze Note 1)	Applicable	Applicable solenoid valve	weight
			direction	1(P), 3(R)	4(A), 2(B)	stations	Soleriold valve	(g)
VQ1000	VV5Q11-□□□	F kit-D-sub connector P kit-Flat ribbon cable (20P) G kit-Flat ribbon cable (20P) G kit-Flat ribbon cable with terminal block T kit-Terminal block box L kit-Lead wire S kit-Serial transmission	Side	C8 (ø8) Option: Direct EXH outlet with built-in silencer	C3 (ø3.2) C4(ø4) C6 (ø6) M5 (M5 thread)	(F/P/T kit 2 to 24 stations) (J/G/S kit 2 to 16 stations) (L kit 1 to 8 stations)	VQ1⊡00 VQ1⊡01	643 (Single) 754 (Double, 3-position)
VQ2000	F kit–D-sub connector P kit–Flat ribbon cable J kit–Flat ribbon cable (20P) G kit–Flat ribbon cable with terminal block T kit–Terminal block box L kit–Lead wire S kit–Serial transmission M kit–Circular connector		Side	C10 (ø10) Option: Direct EXH outlet with built-in silencer	C4 (ø4) C6 (ø6) C8 (ø8)	F/P kit 2 to 24 stations) (J/G/S kit 2 to 16 stations) (L kit 1 to 8 stations) (T kit 2 to 20 stations)	VQ2□00 VQ2□01	1076 (Single) 1119 (Double, 3-position)

SMC

Note 1) Inch-size One-touch fittings are also available. Refer to page 1042 for details. Note 2) Refer to page 1041 for details.

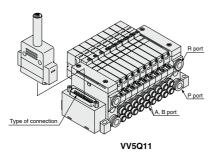

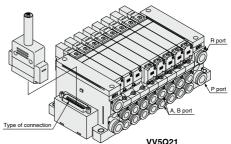

SJ

Rubber seal

SY

SV

SYJ SZ

۷F

VP4

S0700 VQ

VQ4

VQ5

VQC

VQC4 VQZ

SO VFS

VFR VQ7

VV5Q21







- D-sub connector reduces installation labor for electrical connections.
- Using the D-sub connector (25P), (15P as semi-standard) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 24.

Manifold Specifications

	Р				
Series	Piping	Р	ort size	Applicable stations	
	direction	1(P), 3(R)	4(A), 2(B)		
VQ1000	Side	C8	C3, C4, C6, M5	Max. 24 stations	
VQ2000	Side	C10	C4, C6, C8	Max. 24 stations	

D-sub Connector (25 Pins)


Cable Assembly •

Wire color by terminal no. of

AXT100-DS25- 030 050

The D-sub connector cable assembly can be ordered individually or included in a specific manifold model no. Refer to "How to Order Manifold."

Note 1) Types with 15 pins are also available. Refer to page 1040 for details Note 2) Lengths other than the above are also available. Please contact SMC for details

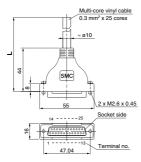

D-sub connector cable assembly

	Cable length (L)	Assembly part no.	Note					
	1.5 m	AXT100-DS25-015	0.11.05					
	3 m	AXT100-DS25-030	Cable 25 cores x 24AWG					
	5 m	AXT100-DS25-050	1 2-7AWG					
E 4 11 1 0 0E 1								

- * For other commercial connectors, use a 25 pins type with female connector conforming to MIL-C-24308.
- * Cannot be used for transfer wiring.

Connector manufacturers' example

- Fuiitsu Limited
- Japan Aviation Electronics Industry, Ltd.
- . J.S.T. Mfg. Co., Ltd. Hirose Electric Co. Ltd.

Electrical characteristics

Item	Property
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 min, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more

Note) The min, bending radius of the D-sub connector cable assembly is 20 mm.


D-sub con	nector cable	assembly
Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

How to Order Manifold

Note) For CE-compliant mod-





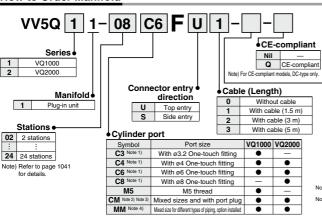


Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type

Example) B6 (Bottom ported elbow with e6 One-touch fitting)

Note 2) Indicate "LM" (Including upward, downward piping and mixed) for models with elbow fittings and mixed cylinder port sizes

Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet

Note 3) Inducate window sizes and with port pitting by means or international specific profits in Note 4) When selecting the mixed size for different types of pitting, dual flow fifting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold specification sheet. Note 5) Inch-size One-louch fittings are available. Refer to "Semi-istandard" on page 1042 for details.

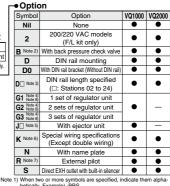

Note 1) Writeri law, Example) -BRS

betically, Example) -BRS

Note 2) Models with a suffix "5" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify

the mounting position by means of the manifold specification sheet. Note 3) The number of stations that may be displayed is longer than the manifold number of stations.

Note 4) Specify the mounting position by means of the manifold specifi-


cation sheet.

Note 5) Refer to page 1054 for the details on with ejector unit. A combination of "J" and "N" is not available.

Note 6) Specify the wiring specifications by means of the manifold specification sheet.

Note 7) Indicate "R" for the valve with external pilot.

Note 8) G1, G2, or G3 cannot be combined with N

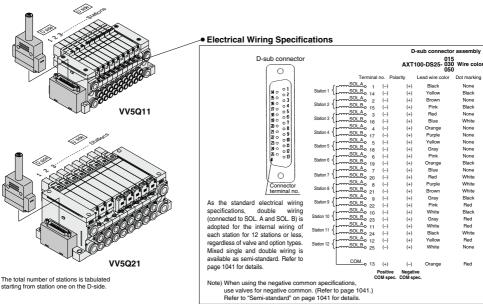

How to Order Valves

Series •

2-position single

2-position double

3-position closed center

3-position exhaust center

3-position pressure center

4-position dual port (N.C. +N.C.)

4-position dual port (N.O. +N.O.)

VQ1000

2 VQ2000

Type of actuation ●

1

2

3

4

5

Α

Note) For CE-compliant models, DC-type only



CE-compliant

CE-compliant

Q

Manual override

C

D

2

3

4

5

6

Coil voltage

Note) For CE-compliant models, DC-type only

Nil Non-locking push type (Tool required)

Locking type (Manual)

Light/surge

1 100 VAC (50/60 Hz)

200 VAC (50/60 Hz)

110 VAC (50/60 Hz)

220 VAC (50/60 Hz)

Locking type (Tool required)

Slide locking type (Manual)

voltage suppressor

Yes

CE-complia

None (Non-polar)

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>

D-sub connector kit with cable (3 m) VV5Q11-09C6FU2 ··· 1 set-Manifold base part no. *VQ1100-51 ····2 sets-Valve part no. (Stations 1 to 2) *VQ1200-51 ···· 4 sets-Valve part no. (Stations 3 to 6) *VQ1300-51 ·······2 sets-Valve part no. (Stations 7 to 8) *VVQ1000-10A-1 ···· 1 set-Blanking plate part no. (Station 9)

Prefix the asterisk to the part nos. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side. When part nos. written collectively are complicated, specify them by means of the manifold specification sheet.

4-position dual port (N.C. +N.O.) Seal •

Metal seal Rubber seal

DC AC Symbol Specifications Standard ○ Note High-speed (0.95 W esponse type (0.95 W High-pressure type (1.0 MPa) Negative External pilot

Function

Note 1) Refer to page 1003 for power consumption of AC type.

Note 2) Metal seal only

Note 3) For external pilot and negative common specifications refer to "Semi-standard" on pages 1041 and 1042.

Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible

Note 5) Dual 3-port valve is not applicable.

24 VDC 12 VDC **/**∆Caution

Use the standard (DC) specification when continuously energizing for long periods of time.

SJ

LYS

SZ

VP4

S0700

VO

V04

V05

VQC

VOC4

VQZ

SO


VFS

VFR


VQ7

VV5Q11

< >: AC
The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-FS].

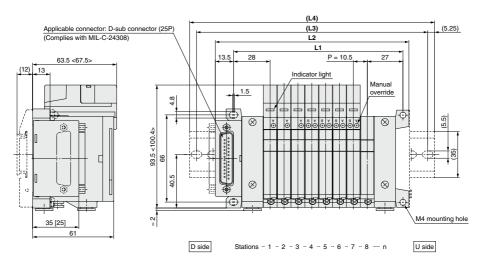

[]: 25 pins (top entry)

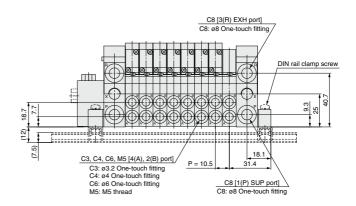

Dimens	Dimensions												Formula L1 = 10.5n + 44.5, L2 = 10.5n + 62.5 n: Station (Maximum 24 sta									ations)	
L n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5	223	233.5	244	254.5	265	275.5	286	296.5
L2	83.5	94	104.5	115	125.5	136	146.5	157	167.5	178	188.5	199	209.5	220	230.5	241	251.5	262	272.5	283	293.5	304	314.5
(L3)	112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	325	325	337.5
(L4)	123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	335.5	335.5	348

With ejector unit: Formula L1 = $10.5n + 28.7 + (Number of ejector units \times 26.7)$ L2 = $10.5n + 46.3 + (Number of ejector units \times 26.7)$


L4 is L2 plus about 30.




Base Mounted Plug-in Unit Series VQ1000/2000

VV5Q21

< >: AC The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-FS].

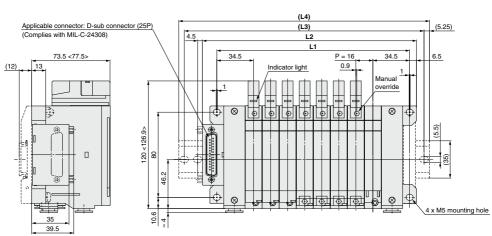

D side Stations -- 1 --- 2 --- 3 --- 4 --- 5 --- 6 --- 7 --- 8 ---- n U side

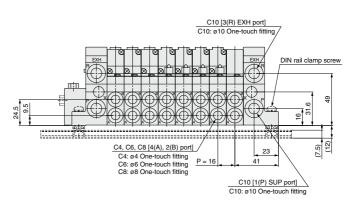

Dimens	Dimensions													Formula L1 = 16n + 53, L2 = 16n + 7							n: Station (Maximum 24 stations)					
L n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24			
L1	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309	325	341	357	373	389	405	421	437			
L2	105	121	137	153	169	185	201	217	233	249	265	281	297	313	329	345	361	377	393	409	425	441	457			
(L3)	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	300	312.5	325	337.5	350	375	387.5	400	412.5	437.5	450	462.5	487.5			
(1.4)	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	310.5	323	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	498			

SMC

SY SY

SJ

SY

SYJ

SZ

VF

VP4

\$0700 **VQ**

VQ4

VQ5

VQC

VQC4

VQZ

SQ

VFS VFR

VQ7

Series **VQ1000/2000** Kit (Flat ribbon cable)



Cable Assembly



- MIL flat ribbon cable connector reduces installation labor for electrical connection.
- Using the connector for flat ribbon cable (26P) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 24.


Manifold Specifications

	P	iping specif	ications				
Series	Piping	Р	ort size	Applicable stations			
	direction	1(P), 3(R)	4(A), 2(B)	Cianonio			
VQ1000	Side	C8	C3, C4, C6, M5	Max. 24 stations			
VQ2000	Side	C10	C4, C6, C8	Max. 24 stations			

Flat Ribbon Cable (26 Pins)

AXT100-FC26-to

Flat ribbon cable connector assembly can be ordered individually or included in a specific manifold model no. Refer to "How to Order Manifold."

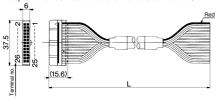

Flat Ribbon Cable Connector Assembly

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-FC26-1	0.11.00
3 m	AXT100-FC26-2	Cable 26 cores x 28AWG
5 m	AXT100-FC26-3	A ZOAVVG

- * For other commercial connectors, use a 26 pins type with strain relief
- conforming to MIL-C-83503.
- * Cannot be used for transfer wiring

Connector manufacturers' example

- · Hirose Electric Co., Ltd. · Fujitsu Limited Sumitomo 3M Limited
 - Japan Aviation Electronics Industry, Ltd.
- . J.S.T. Mfg. Co., Ltd.

VQ1000 VQ2000

•

•

1

2

. Oki Electric Cable Co., Ltd.

Note 1) Other than the above model, 10P, 16P, 20P are also available. Refer to page 1040 for details. Note 2) Lengths other than the above are also available. Please contact SMC for details.


VV5Q11

The total number of stations is tabulated starting from one on the D-side.

Note) For CF-compliant models. DC-type only.



How to Order Manifold

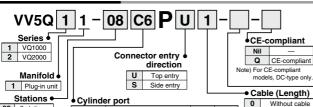

Port size

With ø3.2 One-touch fitting

With ø6 One-touch fitting

With ø8 One-touch fitting

With ø4 One-touch fitting

24 24 stations Note) Refer to page 1041 for details

02 2 stations

M5 M5 thread Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type

Symbol

C6 Note 1)


C8 Note 1)

CM Note 2) Note 3) Mixed sizes and with port plug • MM Note 4) Mixed size for different types of piping, option installed

Example) B6 (Bottom ported elbow with ø6 One-touch fitting) Note 2) Indicate "LM" (Including upward, downward piping and mixed) for models with elbow fittings and mixed cylinder port sizes.

Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold specification sheet

Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 1042 for details

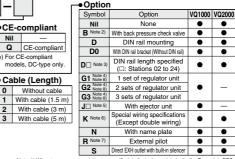

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BRS Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be in-

stalled only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) The number of stations that may be displayed is longer than the manifold number of stations.

Note 4) Specify the mounting position by means of the manifold specification sheet.

Note 5) Refer to page 1054 for details on with ejector unit. A combination of "J" and "N" is not available.

not available.


Note 6) Specify the wiring specifications by means of the manifold specification sheet.

Note 7) Indicate "F" for the valve with external pilot.

Note 8) G1, G2, or G3 cannot be combined with N.





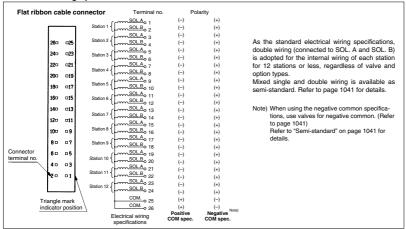



VQ

Series

Type of actuation

2-position single

2-position double

3-position closed center

3-position exhaust center

3-position pressure center

4-position dual port (N.C. +N.C.)

Seal

Metal seal

1 Rubber seal

B 4-position dual port (N.O. +N.O.)

C 4-position dual port (N.C. +N.O.)

⚠ Caution

Use the standard (DC)

specification when continuously

energizing for long periods of

VQ1000

2 VQ2000

2

3

4

Α

time.

CE [Option] Note) For CE-compliant models, DC-type only

Manual override

How to Order Manifold Assembly Specify the part numbers for valves and options

together beneath the manifold base part number.

<Example>

Flat ribbon cable kit with cable (3 m)

VV5Q11-09C6PU2 ···1 set-Manifold base part no. *VQ1100-51 ·· ·····2 sets-Valve part no. (Stations 1 to 2) *VQ1200-51 · ···· 4 sets-Valve part no. (Stations 3 to 6) *VQ1300-51 ·····2 sets-Valve part no. (Stations 7 to 8) *VVQ1000-10A-1 ···· 1 set-Blanking plate part no. (Station 9)

Prefix the asterisk to the part nos. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side When part nos. written collectively are complicated, specify them by means of the manifold specification sheet.

Nil

Nil

В

D

	Fun	ction	L			• C	oil voltage	CE-compliant	~~ ~~ ~~ ~~ ~~ ~~ ~~ ~~ ~~ ~~ ~~ ~~ ~~
	Symbol	Specifications	DC	AC	ľ	1	100 VAC (50/60 Hz)	_	
		o	(0.4 W)	○ Note 1)		3	110 VAC (50/60 Hz)	_	
	Nil	Standard	0	O INDIE I		5	24 VDC	•	
	_	High-speed	(0.95 W)			6	12 VDC	•	
	В	response type	0	-	Note 1) I	Refe	r to page 1003 for power	r consumptio	n of AC type.
,	K Note 2)	High-pressure type (1.0 MPa)	(0.95 W)	_	Note 3) I	Refe	l seal only r to "Semi-standard" on p mal pilot and negative co		
	N Note 3)	Negative common	0	-	Note 4) \	Whe	n two or more symbols a alphabetically. Combina	re specified	indicate

External

pilot

♦CE-compliant

CE-compliant

o

Note) For CE-compliant models, DC-type only.

Non-locking push type (Tool required)

Locking type (Tool required)

Slide locking type (Manual)

Light/Surge voltage suppressor

Yes

None (Non-polar)

Locking type (Manual)

external pilot and negative common specifications. lote 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

Note 5) Dual 3-port valve is not applicable.

ØSMC

SJ SY

SV LYS

SZ

۷F

VP4

S0700

VO

V04 V05

VOC

VOC4

VOZ


SO


VFS **VFR**

VQ7

VV5Q11

< >: AC
The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-PS].

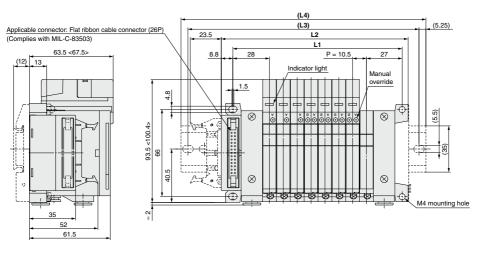

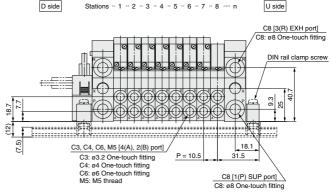


Dimens	Dimensions													Formula L1 = 10.5n + 44.5, L2 = 10.5n + 57.5 n: Station (Maximum 24 stati									ations)
L n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5	223	233.5	244	254.5	265	275.5	286	296.5
L2	78.5	89	99.5	110	120.5	131	141.5	152	162.5	173	183.5	194	204.5	215	225.5	236	246.5	257	267.5	278	288.5	299	309.5
(L3)	112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5
(L4)	123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348


With ejector unit: Formula L1 = 10.5n + 28.7 + (Number of ejector units x 26.7)L2 = 10.5n + 41.3 + (Number of ejector units x 26.7)L4 is L2 plus about 30.

Base Mounted Plug-in Unit Series VQ1000/2000

VV5Q21

< >: AC The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-PS].

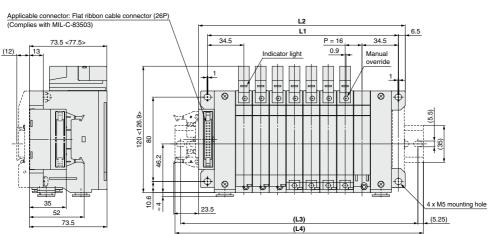

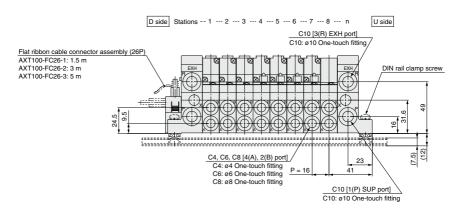

Dimens	Dimensions												Formula L1 = 16n + 53, L2 = 16n +						8 n: Station (Maximum 24 stations)				
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309	325	341	357	373	389	405	421	437
L2	100	116	132	148	164	180	196	212	228	244	260	276	292	308	324	340	356	372	388	404	420	436	452
(L3)	125	150	162.5	175	187.5	212.5	225	237.5	262.5	275	287.5	300	312.5	337.5	350	362.5	387.5	400	412.5	425	450	462.5	475
(L4)	135.5	160.5	173	185.5	198	223	235.5	248	273	285.5	298	310.5	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5

1011

SJ

SY

SV

SYJ

SZ VF

VP4

S0700

VQ

VQ4 VQ5

VQC

VQC4

VQZ

SQ VFS

VFR VQ7

Series **VQ1000/2000** Kit (Flat ribbon cable)

- VV5Q11 VV5Q21
- MIL flat ribbon cable connector reduces installation labor for electrical connection.
- Using the connector for flat ribbon cable connectors (20P) conforming to MIL standard permits the use of connector put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 16.


Manifold Specifications

Cable Assembly •

	P	iping specif	ications				
Series	Piping	Р	ort size	Applicable stations			
	direction	1(P), 3(R)	4(A), 2(B)				
VQ1000	Side	C8	C3, C4, C6, M5	Max. 16 stations			
VQ2000	Side	C10	C4, C6, C8	Max. 16 stations			

Flat Ribbon Cable (20 Pins)

AXT100-FC20-to Flat ribbon cable connector assembly can be ordered individually or \included in a specific manifold model no. Refer to "How to Order Manifold.",

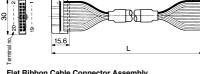

Flat Ribbon Cable Connector Assembly

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-FC20-1	0.11.00
3 m	AXT100-FC20-2	Cable 20 cores x 28AWG
5 m	AXT100-FC20-3	A ZOAWG


- For other commercial connectors, use a 20 pins with strain relief conforming to MIL-C-83503
- * Cannot be used for transfer wiring.

Connector manufacturers' example

- Hirose Electric Co., Ltd. . Sumitomo 3M Limited
- Japan Aviation Electronics Industry, Ltd. . J.S.T. Mfg. Co., Ltd.
- · Fujitsu Limited Oki Electric Cable Co., Ltd

Note) Lengths other than the above are also available. Please contact SMC for details.

08 C6 J U

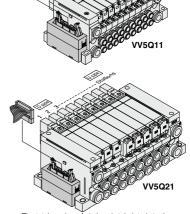

Option

The total number of stations is tabulated starting from one on the D-side

Option

Symbol

CE [Option]

VQ1000 VQ2000

•


• •

• •

•

How to Order Manifold

VV5Q

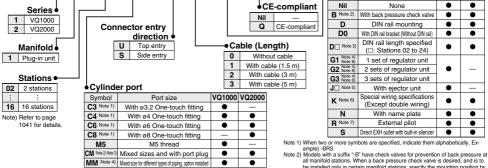

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type

Example) B6 (Bottom ported elbow with 66 One-touch fitting)

Note 2) Indicate "LM" (Including upward, downward piping and mixed) for models with elbow fittings and mixed cylinder port siz

Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.

Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold specification she Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 1042 for details.

all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) The number of stations that may be displayed is longer than the manifold

number of stations.

Note 4) Specify the mounting position by means of the manifold specification sheet Note 3 peculy the induming bestion by means or the international speciments in steets. Note 5 Refer to page 1054 for details on with ejector unit. A combination of "J" and "N" is not available. Note 6) Specify the wiring specifications by means of the manifold specification sheet. Note 7) Indicate "R" for the valve with external pilot.

Note 8) G1, G2, or G3 cannot be combined with N



SJ

SY

SY

LYS

SZ

VP4

S0700

VO V04

V05

VQC

VOC4 VOZ

SO

VFS

VFR **VQ7**

SOL.A_{o 20} SOL.B 18 (-) (+) 20 🗆 🗆 19 SOL.A 16 (-) (+) SOL.B 18 🗆 🗆 17 (-) (+) 16 🗆 🗆 15 SOL.A (-) (+) 14 🗆 🗆 13 SOL.B Triangle (-)(+) 12 🗆 🗆 11 SOL.A (+) (-)10 🗆 🗆 9 indicato SOL.B (-) 8 0 0 7 position SOL.A 19 (-) 6 🗆 🗆 5 SOL.B 17 (-) 4 🗆 🗆 3 SOL.A 2 0 0 1 SOL.B 13 SOL.A Connecto (+) terminal no. (-) (+) SOL.A (-) (+) SOL.B (-) (+)

0

(+)

(+)

(-)

(-)

COM. -0

COM.

Electrical Wiring Specifications


Flat ribbon cable connector

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 8 stations or less, regardless of valve and option types.

Mixed single and double wiring is available as semi-standard. Refer to "Semi-standard" on page 1041 for details.

Note) When using the negative common specifications, use valves for negative common. (Refer to page 1041)

Refer to "Semi-standard" on page 1041 for details.

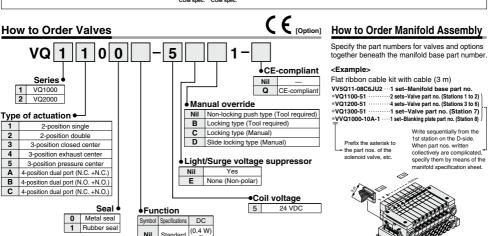

Note 1) Metal seal only

Note 2) Refer to "Semi-standard" on pages 1041

Note 3) When two or more symbols are specified, indicate them alphabetically. Combination

of [B] and [K] is not possible

Note 4) Dual 3-port valve is not applicable.

and 1042 for external pilot and negative common specifications.

(0.95 W High-speed В

(0.95 W)

response type

(1.0 MPa)


Negative Note 2

External

pilot

VV5Q11

The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-JS].

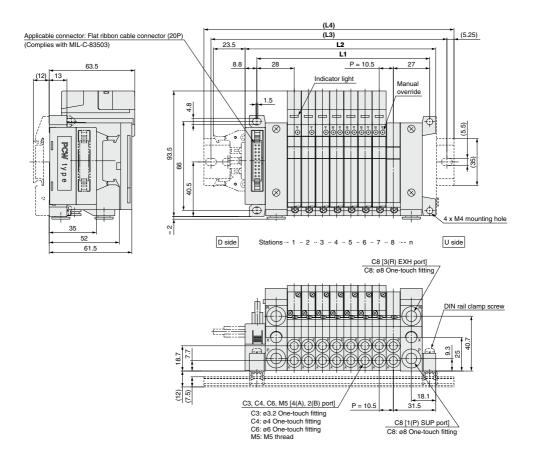

Dimens	sions							Formula L1 = 10.5n + 44.5, L2 = 10.5n + 57.5 n: Station (Maximum 16 sta								
L n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	
L1	65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5	
L2	78.5	89	99.5	110	120.5	131	141.5	152	162.5	173	183.5	194	204.5	215	225.5	
(L3)	112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	225	237.5	250	
(L4)	123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	235.5	248	260.5	


With ejector unit: Formula L1 = 10.5n + 28.7 + (Number of ejector units x 26.7)
L2 = 10.5n + 41.3 + (Number of ejector units x 26.7)
L4 is L2 plus about 30.




Base Mounted Plug-in Unit Series VQ1000/2000

VV5Q21

The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-JS].

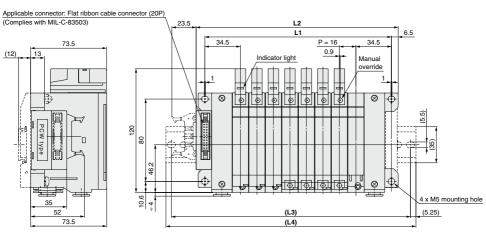

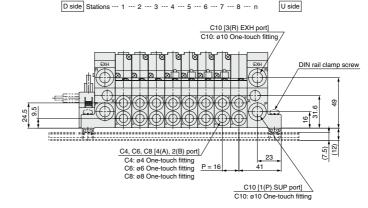

Dimens	sions					Formula L	1 = 16n + 5	3, L2 = 16	n + 68 n	n: Station (Maximum 16 stations					
L n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309
L2	100	116	132	148	164	180	196	212	228	244	260	276	292	308	324
(L3)	125	150	162.5	175	187.5	212.5	225	237.5	262.5	275	287.5	300	312.5	337.5	350
(L4)	135.5	160.5	173	185.5	198	223	235.5	248	273	285.5	298	310.5	323	348	360.5

SMC

SJ

SY

SY

SV

SYJ

SZ VF

VP4

VF4

\$0700 VQ

VQ4

VQ5


VQC VQC4

VQZ

SQ

VFS

VFR VQ7

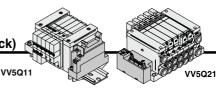

- Terminal block for power supply equipped with a 20 pins flat ribbon cable connection for rationalized connection of valves.
- · Solenoid valves and power supply can be connected by the same cable to a specific output unit that requires power supply from the output section to the internal circuit.
- Maximum stations are 16.

Manifold Specifications


	P	iping specifi	ications	Analiaabla				
Series	Piping	P	ort size	Applicable stations				
	direction	1(P), 3(R)	4(A), 2(B)					
VQ1000	Side	C8	C3, C4, C6, M5	Max. 16 stations				
VQ2000	Side	C10	C4, C6, C8	Max. 16 stations				

Flat Ribbon Cable (20 Pins)

Cable Assembly •

AXT100-FC20-to

Flat ribbon cable connector assembly can be ordered individually or \included in a specific manifold model no. Refer to "How to Order Manifold.",

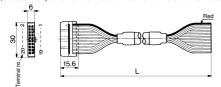

Flat Ribbon Cable Connector Assembly


Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-FC20-1	0.11.00
3 m	AXT100-FC20-2	Cable 20 cores x 28AWG
5 m	AXT100-FC20-3	A ZOAWG


- * For other commercial connectors, use a 20 pins type with strain relief
- conforming to MIL-C-83503.
- * Cannot be used for transfer wiring

Connector manufacturers' example

- Hirose Electric Co., Ltd. Japan Aviation Electronics Oki Electric Cable
- Sumitomo 3M Limited Industry, Ltd.
- Co., Ltd.
 - Fujitsu Limited

. J.S.T. Mfg. Co., Ltd. Note) Lengths other than the above are also available. Please contact SMC for details.

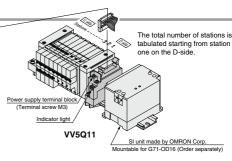

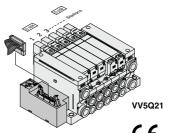

VQ1000 VQ2000

• •

• •


• .

•

•

•

How to Order Manifold

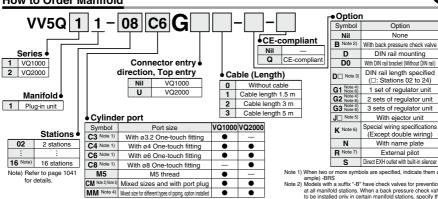

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type Example) B6 (Bottom ported elbow with ø6 One-touch fitting)

Note 2) Indicate "LM" (Including upward, downward piping and mixed) for models with elbow fittings and mixed cylinder port sizes.

Mixed cylinder port sizes.

Note 3) Indicated "Mixed sizes and with port plug" by means of the manifold specification sheet.

Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold specification sheet. Note 5) Inch-size One-touch fittings are available. Refer to "Semi-istandard" on page 1042 for details.

Note 1) When two or more symbols are specified, indicate them alphabetically, Example) -BRS
Note 2) Models with a suffix "-B" have check valves for prevention of back pressure

at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) The number of stations that may be displayed is longer than the manifold

number of stations that may be displayed is longer than the manifold number of stations.

Note 4) Specify the mounting position by means of the manifold specification sheet.

Note 5) Refer to page 1054 for details on with ejector unit. A combination of "J" and "N" is not available

Note 6) Specify the wiring specifications by means of the manifold specification sheet.

Note 7) Indicate "R" for the valve with external pilot. Note 8) G1, G2, or G3 cannot be combined with N.

SJ

SY

SV

LYS

SZ

VP4

S0700

VO

V04 V05

VOC

VOC4

VOZ


SO

VFS


VFR

V07

Connector Assembly

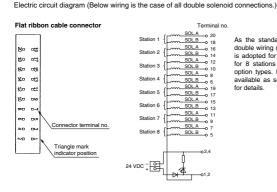

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 8 stations or less, regardless of valve and option types. Mixed single and double wiring is available as semi-standard. Refer to page 1041 for details.

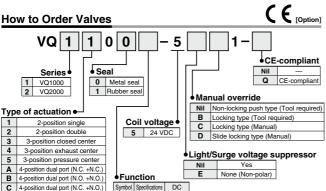

(0.4 W)

(0.95 W)

Nil Standard High-speed (0.95 W)

В

esponse type 0

(1.0 MPa)

Externa R Note 2

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

<Fxample>

Flat ribbon cable kit with terminal block with cable (3 m)

VV5Q11-08C6G2 ··· 1 set-Manifold base part no. *V01100-51 · ······4 sets-Valve part no. (Stations 1 to 4) ··· 1 set-Valve part no. (Station 5) *VQ1200-51 *VQ1300-51 ······3 sets-Valve part no. (Stations 6 to 8) Write sequentially from the 1st station on the D-side. Prefix the asterisk to When part nos. written

the part nos, of the collectively are complicated, solenoid valve, etc. specify them by means of the manifold specification sheet.





external pilot specifications


Note 2) Refer to "Semi-standard" on page 1042 for

Note 3) When two or more symbols are specified, indicate them alphabetically. Combination

Note 1) Metal seal only

VV5Q11

The dashed lines and dimensions in parentheses indicate DIN rail mounting [-D].

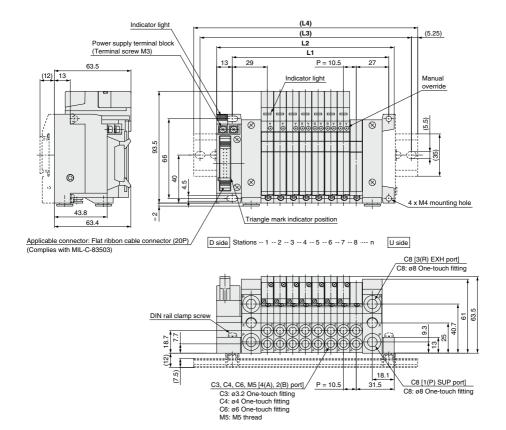

Dimens	sions						Formu	ıla L1 = 10	.5n + 45.5,	n + 63 n	n: Station (Maximum 16 stations)				
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	66.5	77	87.5	98	108.5	119	129.5	140	150.5	161	171.5	182	192.5	203	213.5
L2	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231
(L3)	112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	262.5
(L4)	123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	273

With ejector unit: Formula L1 = 10.5n + 29.7 + (Number of ejector units x 26.7)L2 = 10.5n + 46.8 + (Number of ejector units x 26.7)

L4 is L2 plus about 30.



VV5Q21

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

SJ

SY

SY

SV

SYJ SZ

۷F

VP4

S0700

VQ VQ4

VQ5

vqc


VQC4


VQZ

SQ

VFS VFR

VQ7

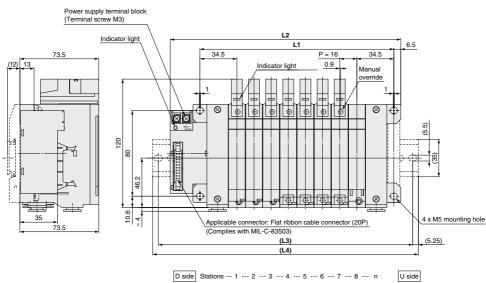

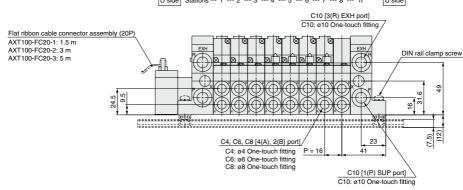

Dimens	sions					Formula L1 = 16n + 53, L2 = 16n + 87 n: Station (Maximum 16 stat									
_ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309
L2	119	135	151	167	183	199	215	231	247	263	279	295	311	327	343
(L3)	150	162.5	175	187.5	212.5	225	237.5	262.5	275	287.5	300	325	337.5	350	362.5
(L4)	160.5	173	185.5	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373

SMC

1019



IP65 compliant

This kit has a small terminal block inside a junction box. The electrical entry port {VQ1000: G 1/2, VQ2000: G 3/4} permits connection of conduit fittings.

- Maximum stations: 24 (VQ1000), 20 (VQ2000)
- Enclosure: Dust-tight, Water-jet-proof (IP65) compatible (Series VQ2000)


Manifold Specifications

	Р	iping specific	cations	Applicable		
Series	Piping	Po	ort size	Applicable stations		
	direction	1(P), 3(R)	4(A), 2(B)	3tati0115		
VQ1000	Side	C8	C3,C4,C6,M5	Max. 24 stations		
VQ2000	Side	C10	C4,C6,C8	Max. 20 stations		

Terminal Block Connection (VQ1000)

VV5Q11


Electrical entry

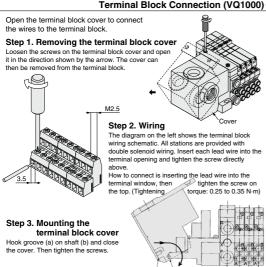



The total number of stations is tabulated starting from station one on the D-side.

Electrical Wiring Specifications: VQ1000

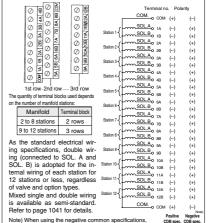


How to Order Manifold

Note) For CE-compliant models, DC-type only.

use valves for negative common.

Refer to "Semi-standard" on page 1041 for details

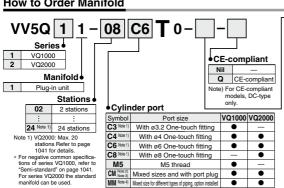

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type.

Example) B6 (Bottom ported elbow with ø6 One-touch fitting)

Note 2) Indicate "LM" (Including upward, downward piping and mixed) for models with elbow fittings and mixed

Indicate Left (Including upward), cominated piping and indeed) for modes will enough an indeed cylinder port sizes. Not a final port plug* by means of the manifold specification sheet. Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter *MM* and give instructions in the manifold specification sheet. Note 5) Inch-size One-louch fittings are available. Refer to "Semi-standard" on page 1042 for details.

ØSMC

on		
Option	VQ1000	VQ2000
None	•	•
With back pressure check valve	•	•
DIN rail mounting	•	•
With DIN rail bracket (Without DIN rail)	•	•
DIN rail length specified (□: Stations 02 to 24)	•	•
1 set of regulator unit		
2 sets of regulator unit	•	_
3 sets of regulator unit	1	
With ejector unit	•	_
Special wiring spec. (Except double wiring)	•	•
With name plate	•	•
External pilot	•	•
Direct EXH outlet with built-in silencer	•	•
Enclosure: Dust-tight, Water-jet-proof (IP65)	_	•
	Option None With back pressure check valve DIN rail mounting With DIN rail bracket (Without DIN rail) DIN rail length specified (□: Stations 02 to 24) 1 set of regulator unit 2 sets of regulator unit 3 sets of regulator unit With ejector unit Special wiring spec. (Except double wiring) With name plate External pilot Direct EXH outlet with built-in silencer	Option None With back pressure check valve DIN rail mounting With DIN rail bracket (Without DIN rail) DIN rail ength specified (□: Stations 02 to 24) 1 set of regulator unit 2 sets of regulator unit With ejector unit With ejector unit Special wiring spec. (Except double wiring) With name plate External pilot Direct EXH outlet with built-in silencer

Note 1) When two or more symbols are specified, indicate them alphabetically. Ex-

ample) -BRS ample) -BHS

Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by

means of the manifold specification sheet.


Note 3) The number of stations that may be displayed is longer than the manifold

number of stations. Note 4) Specify the mounting position by means of the manifold specification sheet. Note 5) Refer to page 1054 for details on with ejector unit. A combination of "J" and "N" is not available.

Note 6) Specify the wiring specifications by means of the manifold specification sheet.

Note 7) Indicate "R" for the valve with external pilot. Note 8) G1, G2, or G3 cannot be combined with N.

nanifold can be used

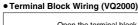

Open the terminal block cover to connect the wires to the terminal block


Step 1. Removing the terminal block cover Loosen mounting screws (4 pcs.) on the terminal block cover

, Gara

Step 2. Wiring Loosen screws on the terminal block, Cover connect wiring and complete it by tightening screws.(Tightening torque: 0.5 to 0.7 N·m)

and remove the cover.

The diagram on the right shows the terminal block wiring. All stations are provided with double wiring regardless of the valves which are mounted.

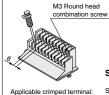


1.25-3S. 1.25Y-3.

1.25Y-3N, 1.25Y-3.5

Step 3. Mounting the terminal block cover

Securely tighten the screws after confirming that the gasket is installed correctly. (Tightening torque: 0.7 to 1.2 N·m)


Special Wiring Specifications: VQ2000

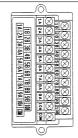

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 10 stations or less, regardless of valve and option types. Mixed single and double wiring is available as semi-standard Refer to page 1041 for details.

Note) When using the negative common specifications. use valves for negative

common. Refer to "Semi-standard" on page 1041 for details.

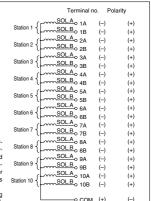

Positive Negative COM spec. COM spec.

SJ

SYJ

SZ

VP4

S0700

VO

V04

V05

VQC

VOC4

VOZ

SO

VFS

VFR

V07

How to Order Valves

Note) For CF-compliant models. DC-type only.



CE-compliant

models, DC-type only

CE-compliant

Note) For CE-compliant

Dust-protected

Dust-tight, Water-jet-proof

(IP65)

Nil

Q

Enclosure

Note) VQ2000 only

Manual override Nil Non-locking push type (Tool required)

W Note)

В

High-speed (0.95 W)

response type

High-pressure type (0.95 W

(1.0 MPa)

Negative

common

External

pilot

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>

Terminal block box kit

VV5Q11-08C6T0 ···1 set-Manifold base part no. *VQ1100-51 ······2 sets-Valve part no. (Stations 1 to 2)

*VQ1200-51 ···· · · 4 sets-Valve part no. (Stations 3 to 6) *VQ1300-51 ······1 set-Valve part no. (Station 7) *VVQ1000-10A-1 · 1 set-Blanking plate part no. (Station 8)

Write sequentially from the 1st Prefix the asterisk to station on the D-side the part nos, of the When part nos, written collectively are complicated, solenoid valve, etc. specify them by means of the manifold specification sheet

VQ2000 Type of actuation

Series

VO1000

1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center
Α	4-position dual port (N.C. +N.C.)
В	4-position dual port (N.O. +N.O.)
С	4-position dual port (N.C. +N.O.)

Sym

	Seal •
0	Metal seal
1	Rubber seal

Slide locking type (Manual) Light/Surge voltage suppressor

Locking type (Tool required) Locking type (Manual)

Nil Yes F None

				_	•C	oil voltage	CE-compliant
un	ction				1	100 VAC (50/60 Hz)	-
nbol	Specifications	DC	AC		3	110 VAC (50/60 Hz)	_
		(0.4 W)	O Note 1)		5	24 VDC	•
III	Standard	``o ′	() NOW I)		6	12 VDC	•

Note 1) Refer to page 1003 for power consumption of AC type

Note 2) Metal seal only

Note 3) Refer to "Semi-standard" on pages 1041 and 1042 for external pilot and negative common specifications.

Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

Note 5) Dual 3-port valve is not applicable.


Use the standard (DC) specification when continuously energizing for long periods of time.



VV5Q11

< >: AC

The dashed lines and dimensions in parentheses indicate DIN rail mounting [-D].

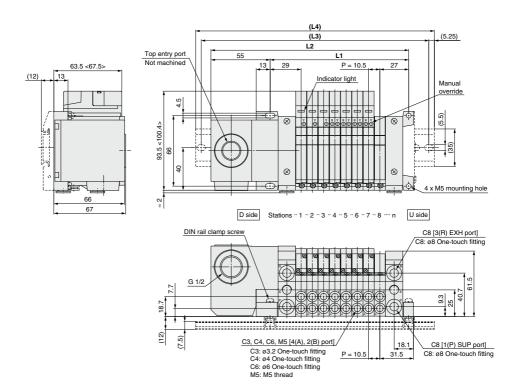

Dimens	sions									Formula L1 = 10.5n + 45.5, L2 = 10.5n + 105 n: Station (Maximum 24 st								ations)					
L n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	66.5	77	87.5	98	108.5	119	129.5	140	150.5	161	171.5	182	192.5	203	213.5	224	234.5	245	255.5	266	276.5	287	297.5
L2	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294	304.5	315	325.5	336	346.5	357
(L3)	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5	375	387.5
(L4)	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5	398

With ejector unit: Formula L1 = 10.5n + 29.7 + (Number of ejector units x 26.7) L2 = 10.5n + 88.8 + (Number of ejector units x 26.7) L4 is L2 plus about 30.




Base Mounted Plug-in Unit Series VQ1000/2000

VV5Q21

Dust-tight, Water-jet-proof

< >: AC
The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

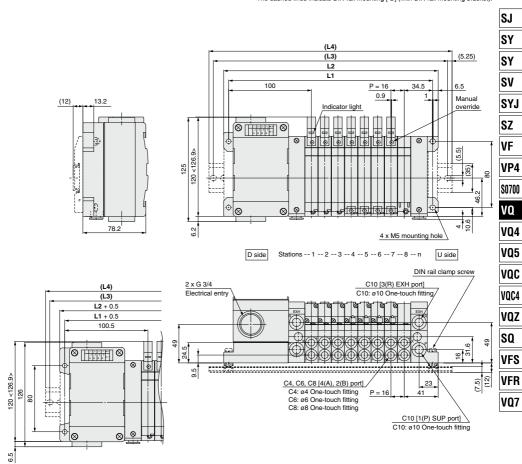

Dimens	Dimensions Formula L1 = 16n + 118.5, L2 = 16n + 131 n: Station (M															n (Maxir	laximum 20 stations)		
L n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	150.5	166.5	182.5	198.5	214.5	230.5	246.5	262.5	278.5	294.5	310.5	326.5	342.5	358.5	374.5	390.5	406.5	422.5	438.5
L2	163	179	195	211	227	243	259	275	291	307	323	339	355	371	387	403	419	435	451
(L3)	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5	375	400	412.5	425	450	462.5	475
(L4)	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5	410.5	423	435.5	460.5	473	485.5

Series VQ1000/2000 Kit (Lead wire)


IP65 compliant


- Direct electrical entry. Models with one or more stations are available
- (SUP) and (EXH) ports are provided on one side for further space savings.
- Maximum stations are 8.
- Enclosure: Dust-tight, Water-jet-proof (IP65) compatible (Series VQ2000)

Wiring Specifications: Positive COM ●

Three lead wires are attached to each station regardless of the type of valve which is mounted.

The red wire is for COM connection.

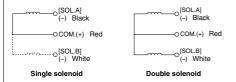

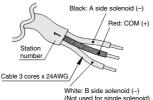

Use any of the below cable lead wire assembly to change the lead wire length:


Lead wire assembly with connector

Lead wire length	Part no.	
0.6 m	VVQ1000-84A-6-*	
1.5 m	VVQ1000-84A-15-*	
3 m	VVQ1000-84A-30-*	
* Station number 1 to 8		

Manifold Specifications

	Piping specifications			
Series	Piping	Port size		Applicable stations
	direction	1(P), 3(R)	4(A), 2(B)	- Clarionio
VQ1000	Side	C8	C3, C4, C6, M5	Max. 8 stations
VQ2000	Side	C10	C6, C8	Max. 8 stations


V5Q21

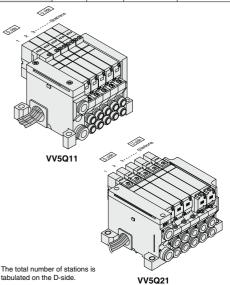

How to Order Manifold

Note) For CE-compliant models, C [Option]



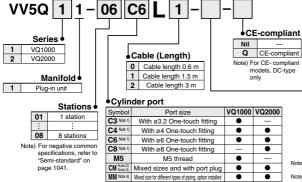

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type. Example) B6 (Bottom ported elbow with ø6 One-touch fitting)


Note 2) Indicate "LM" (Including upward, downward piping and mixed) for models with elbow fittings and mixed cylinder port sizes.

Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.

Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double

check block (direct mounting), enter "MM" and give instructions in the manifold specification sheet.

Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 1042 for details.

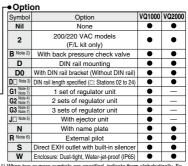

Note 1) When two or more symbols are specified, indicate them alphabetically, Example) -BRS

Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet

Note 3) The number of stations that may be displayed is longer than the manifold number of stations.

Note 4) Specify the mounting position by means of the manifold specification sheet. Note 5) Refer to page 1054 for details on with ejector unit. A combination of "J" and "N" is not available.
Note 6) Indicate "R" for the valve with external pilot.

Note 7) G1 G2 or G3 cannot be combined with N




VV5Q21 Dust-tight, Water-iet-proof


Wiring Specifications: Negative COM (Semi-standard)

Three lead wires are attached to each station regardless of the type of valve which is mounted.

The black wire is for COM connection.

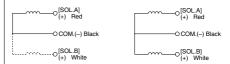

Single solenoid Double solenoid

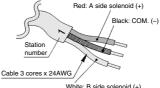


White: B side solenoid (+) (Not used for single solenoid)

Lead wire assembly with connector

	Lead wire length	Part no.	
	0.6 m	VVQ1000-84AN-6-*	
	1.5 m	VVQ1000-84AN-15-*	
	3 m	VVQ1000-84AN-30-*	
* Station number 1 to 8			

Note) When using the negative common specifications, use valves for negative common. For negative common specifications, refer to "Semi-standard" on page 1041.

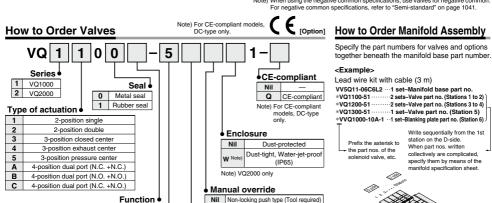

Locking type (Tool required)

Locking type (Manual)

D Slide locking type (Manual)

Light/Surge voltage suppressor

Coil voltage

1 100 VAC (50/60 Hz) 2 200 VAC (50/60 Hz)

3 110 VAC (50/60 Hz)

220 VAC (50/60 Hz)

24 VDC

12 VDC

Yes

None (Non-polar)

4

5

6

Nil

Note 1) Refer to page 1003 for power consumption of AC type Note 2) Metal seal only

Symbol Specifications

Nil

DC AC

(0 4 W

(0.95 W High-speed esponse type

(0.95 W

Note 1

Note 3) For external pilot and negative common specifications refer to "Semi-standard" on pages 1041 and 1042.

Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible. Note 5) Dual 3-port valve is not applicable.

(1.0 MPa)

Negative common

External pilot

∕.\Caution

CE-compliant

Use the standard (DC) specification when continuously energizing for long periods of time.



SJ

LYS

VP4

S0700

VO V04 V05

VOC

VQC4

VOZ

SO


VFS


VFR


VQ7

VV5Q11

< >: AC
The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

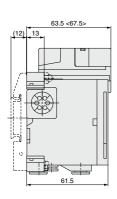

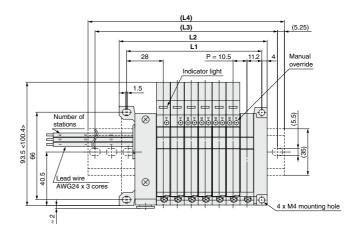

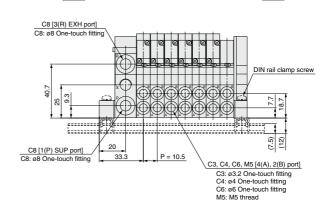

Stations -- 1 -- 2 -- 3 -- 4 -- 5 -- 6 -- 7 -- n

Dimens	Dimensions n: Station (Maximum 8 stations								
_ n	1	1 2 3 4 5 6 7 8							
L1	39	49.5	60	70.5	81	91.5	102	112.5	
L2	48.5	59	69.5	80	90.5	101	111.5	122	
(L3)	75	87.5	87.5	100	112.5	125	137.5	150	
(L4)	85.5	98	98	110.5	123	135.5	148	160.5	

U side


With ejector unit: Formula L1 = 10.5n + 28.5 + (Number of ejector units x 26.7)L2 = 10.5n + 38 + (Number of ejector units x 26.7)L4 is L2 plus about 30.

D side

Base Mounted Plug-in Unit Series VQ1000/2000


VV5Q21

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

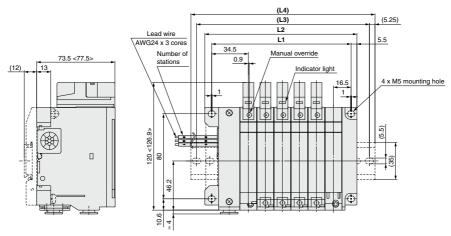

Dust-tight, Water-jet-proof

D side U side Stations --- 1 --- 2 --- 3 --- 4 --- 5 --- 6 --- n

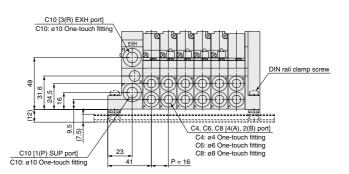

Dimens									
_ n	1	2	3	4	5	6	7	8	
L1	51	67	83	99	115	131	147	163	
L2	63	79	95	111	127	143	159	175	
(L3)	87.5	100	125	137.5	150	162.5	184.5	200	
(L4)	98	110.5	135.5	148	160.5	173	198	210.5	

SMC

SJ SY

SY SV

SYJ

SZ

۷F

VP4

S0700

VQ VQ4

VQ5

vqc VQC4

VQZ

SQ

VFS

VFR

VQ7

Kit (Serial transmission) Base Mounted Plug-in Manifold: For EX510 Gateway-type Serial Transmission System


How to Order Manifold

(E

♦CE-compliant

CE-compliant

Nil

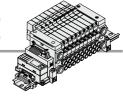

VV5Q 1 1 − SB

Manifold series •

1 ∨Q1000
2 ∨Q2000

Nil NPN output (+COM.)

N PNP output (-COM.)

Symbol Stations

01 1 station

08

SI unit part no.

 Note) Max. 16 stations. (Special wiring specifications)

\sim	lin.	dar	nort	•

S	ymbol	Port size	VQ1000	VQ2000
	C3	With ø3.2 One-touch fitting	•	_
	C4	With ø4 One-touch fitting	•	•
	C6	With ø6 One-touch fitting	•	•
	C8	With ø8 One-touch fitting	_	•
	M5	M5 thread	•	_
	CM Note 1)	With mixed sizes and with port plug	•	•
m	L3	Top ported elbow with ø3.2 One-touch fitting	•	_
Siz	L4	Top ported elbow with ø4 One-touch fitting	•	•
Metric size	L6	Top ported elbow with ø6 One-touch fitting	•	•
/let	L8	Top ported elbow with ø8 One-touch fitting	I	•
_	L5	Top ported elbow M5 thread	•	_
	B3	Bottom ported elbow with ø3.2 One-touch fitting	•	
	B4	Bottom ported elbow with ø4 One-touch fitting	•	
	B6	Bottom ported elbow with ø6 One-touch fitting	•	•
	B8	Bottom ported elbow with ø8 One-touch fitting	_	•
	B5	Bottom ported elbow M5 thread	•	_
	LM Note 1)	Elbow port, mixed sizes (Including upward, downward piping and mixed)	•	•
	N1	ø1/8" with One-touch fitting	•	_
	N3	ø5/32" with One-touch fitting	•	•
	N7	ø1/4" with One-touch fitting	•	•
	N9	ø5/16" with One-touch fitting	_	•
	M5T	UNF10-32 thread	•	_
	NM Note 1)	With mixed sizes and with port plug	•	•
	LN1	Top ported elbow with ø1/8" One-touch fitting	•	_
nch size	LN3	Top ported elbow with ø5/32" One-touch fitting	•	•
the second	LN7	Top ported elbow with ø1/4" One-touch fitting	•	•
2	LN9	Top ported elbow with ø5/16" One-touch fitting	_	•
	L5T	Top ported elbow UNF10-32 thread	•	_
	BN1	Bottom ported elbow with ø1/8" One-touch fitting	•	_
	BN3	Bottom ported elbow with ø5/32" One-touch fitting	•	•
	BN7	Bottom ported elbow with ø1/4" One-touch fitting	•	•
	BN9	Bottom ported elbow with ø5/16" One-touch fitting	_	•
	B5T	Bottom ported elbow UNF10-32 thread	•	_
	LNM Note 1)	Elbow port, mixed sizes (Including upward, downward piping and mixed)	•	•
MI	Note 2)	Mixed size for different types of piping, option installed	•	•

Note 1) Indicate "Mixed sizes and with port plug" in the manifold specification sheet. Note 2) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold specification sheet.

Refer to page 2124 and the Operation Manual for the details of EX510 Gateway-type Serial Transmission System. Please download the Operation Manual via our website, http://www.smcworld.com

Option

Option	
B Note 3)	With back pressure check valve
D Note 1)	DIN rail mounting
D□ Note 9)	DIN rail length specified (□: Stations 02 to 16)
G1 Note 4) Note 8)	1 set of regulator unit
G2 Note 4) Note 8) Note 10)	2 sets of regulator unit
G3 Note 4) Note 8) Note 10)	3 sets of regulator unit
J Note 5) Note 8)	With ejector unit
K Note 6)	Special wiring spec. (Except double wiring)
N	With name plate
R Note 7)	with external pilot
S	Direct EXH outlet with built-in silencer

Note 1) Be sure to select "D" or "D□".

Note 2) When two or more symbols are specified, indicate them alphabetically. Example) -BRS

Note 3) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 4) Specify the mounting position by means of the manifold specification sheet. Note 5) Refer to page 1054 for details on with ejector unit. A combination of "J" and "N" is not available.

Note 6) Specify the wiring specifications by means of the manifold specification sheet.


Note 7) Indicate "R" for the valve with external pilot.

Note 8) VQ1000 only

Note 9) The number of stations that may be displayed is longer than the manifold number of stations.

Note 10) G1, G2, or G3 cannot be combined with N.

How to Order Manifold Assembly

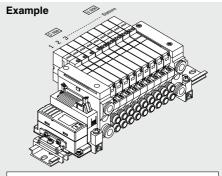

VV5Q11-SB08C6-D ··· 1 set (SB kit, 8-station manifold part no.)

*VQ1100-51 ··········· 4 sets (Single type part no.)

*VQ1200-51 ·········· 3 sets (Double type part no.)


*VQ1300-51 ·········· 1 set (3 position type part no.)

➤The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Enter in order starting from the first station on the D-side.

Add the valve and option part numbers under the manifold base part number. In the case of complex arrangement, specify them by means of the manifold specification sheet.



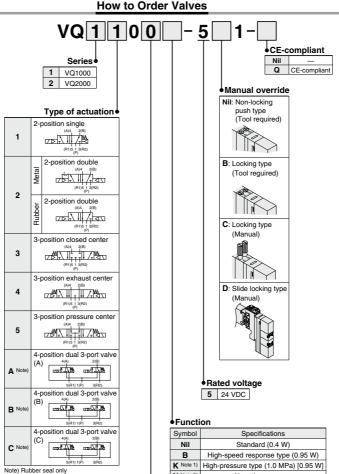

Functi	on				
Symbol	Specifications				
Nil	Standard (0.4 W)				
В	High-speed response type (0.95 W)				
K Note 1)	High-pressure type (1.0 MPa) [0.95 W]				
N Note 2)	Negative common				
R Note 2) Note 4)	External pilot				

Note 1) Metal seal only

Note 2) For external pilot and negative common specifications, refer to "Semi-standard" on pages 1041 and 1042.

Note 3) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

Note 4) Dual 3-port valve is not applicable.

· • • • • • • • • • • • • • • • • • • •							
0	Metal seal						
1	Rubber seal						

SMC

SJ SY

SY

SV

SYJ SZ

۷F

VP4

S0700

VO

V04

VQ5 voc

VQC4

VOZ


SQ

VFS


VFR

VQ7


VV5Q11

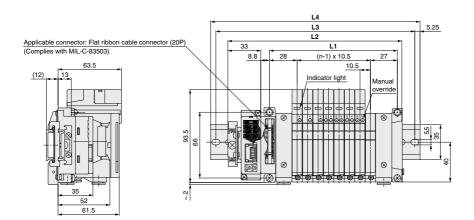


D side Stations - 1 - 2 - 3 - 4 - 5 - 6 - 7 - 8 - n U side

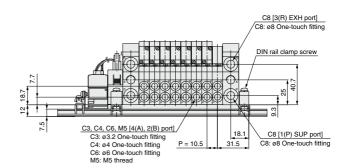

Dimensions								F	ormula L	1 = 10.5n	+ 44.5, L2	= 10.5n +	- 91 n: S	Station (Ma	aximum 16 stations)				
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16			
L1	55	65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5			
L2	101.5	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259			
L3	125	137.5	150	162.5	175	175	187.5	200	212.5	225	237.5	237.5	250	262.5	275	287.5			
L4	135.5	148	160.5	173	185.5	185.5	198	210.5	223	235.5	248	248	260.5	273	285.5	298			

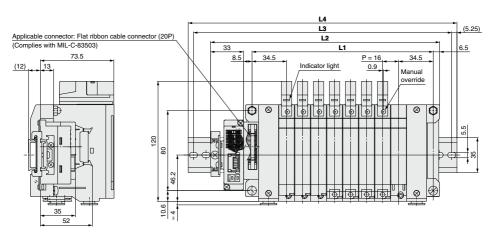

D side Stations -- 1 --- 2 --- 3 --- 4 --- 5 --- 6 --- 7 --- 8 --- n U side

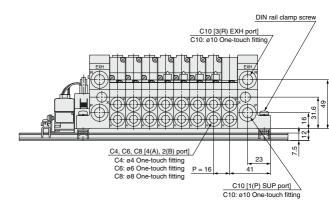

Dimensions									Formula L1 = 16n + 53, L2 = 16n + 101 n: Station (Maximum 16 stations)							
L n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	69	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309
L2	117	133	149	165	181	197	213	229	245	261	277	293	309	325	341	357
L3	137.5	162.5	175	187.5	212.5	225	237.5	250	275	287.5	300	312.5	337.5	350	362.5	387.5
L4	148	173	185.5	198	223	235.5	248	260.5	285.5	298	310.5	323	348	360.5	373	398

SY

SJ

SV

SYJ

SZ VF

VP4

S0700

VQ

VQ4 VQ5

VQC

VQC4

VQ04

VQZ SQ

VFS

VFR

Kit (Serial transmission): For EX120/123/124 Integrated-type (For Output) Serial Transmission System

IP65 compliant

- The serial transmission system reduces wiring work. while minimizing wiring and saving space.
- Enclosure: Dust-tight, Water-jet-proof (IP65) compatible (Series VQ2000)

Manifold Specifications

	P				
Series	Piping	P	ort size	Applicable stations	
	direction	1(P), 3(R)	4(A), 2(B)		
VQ1000	VQ1000 Side		C3, C4, C6, M5	Max. 16 stations	
VQ2000	Side	C10	C4, C6, C8	Max. 16 stations	

How to Order Manifold

VV5Q

Symbol

* Refer to "SI Unit Part No." when ordering the CF-compliant SI unit.

Option

Symbol



VQ1000 VQ2000

CE-compliant

* Refer to "SI Unit Part

No." when ordering the


CF-compliant SI unit.

CE-compliant

Nil

Q

Option

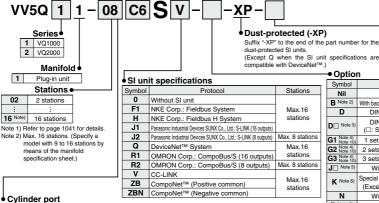

C3 Note 1	With ø3.2 One-touch fitting	•	_
C4 Note 1	With ø4 One-touch fitting	•	•
C6 Note 1	With ø6 One-touch fitting	•	•
C8 Note 1	With ø8 One-touch fitting	_	•
M5	M5 thread	•	_
CM Note 2) Note	Mixed sizes and with port plug	•	•

Port ciza

MM Note 4) Mixed size for different types of piping, option installed

•

VQ1000 VQ2000 Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type. Example) B6 (Bottom ported elbow with ø6 One-touch fitting) Note 2) Indicate as "LM" (Including upward downward piping and mixed) for models with elbow fittings and mixed cylinder port sizes.

Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.

Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold specification sheet Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 1042 for details.

SI Unit Part No. (Without option W [Dust-protected (-XP) is included.])

Symbol	Protocol	SI unit part no.	CE-compliant				
F1	NKE Corp.: Fieldbus System	Standard: EX120-SUW1	[
г	INKE Corp.: Fleidbus System	Dust-protected: EX120-SUW1-XP	_				
н	NKE Corp.: Fieldbus H System	Standard: EX120-SUH1					
п	INKE Corp.: Fleidbus H System	Dust-protected: EX120-SUH1-XP	_				
J1	Panasonic Industrial Devices SUNX Co., Ltd.: S-LINK	Standard: EX120-SSL1					
31	(16 outputs)	Dust-protected: EX120-SSL1-XP	_				
J2	Panasonic Industrial Devices SUNX Co., Ltd.: S-LINK	Standard: EX120-SSL2					
JZ	(8 outputs)	Dust-protected: EX120-SSL2-XP	_				
Q	DeviceNet™	Standard: EX120-SDN1					
ď	DeviceMet	Dust-protected: No part no.	•				
R1	OMRON Corp.: CompoBus/S	Standard: EX120-SCS1					
	(16 outputs)	Dust-protected: EX120-SCS1-XP	_				
R2	OMRON Corp.: CompoBus/S	Standard: EX120-SCS2					
nz	(8 outputs)	Dust-protected: EX120-SCS2-XP	_				
v	CC-LINK	Standard: EX120-SMJ1	•				
,	OO-LINK	Dust-protected: EX120-SMJ1-XP					
ZB	CompoNet™	Standard: EX120-SCM1	_				
20	(Positive common)	Dust-protected: No part no.	_				
ZBN	CompoNet™	Standard: EX120-SCM3					
ZDIN	(Negative common)	Dust-protected: No part no.					

None B Note 2) With back pressure check valv DIN rail mounting • DIN rail mounting D Note 3) • (□: Stations 02 to 24) G1 Note 4) 1 set of regulator unit G2 Note 4) 2 sets of regulator unit G3 Note 4) 3 sets of regulator unit G3 Note 10) 3 sets of regulator unit J Note 5) With ejector unit . Special wiring specifications (Except double wiring) N With name plate R Note 7) With external pilot . • rect EXH outlet with built-in silence • Enclosure: Dust-tight. Water-jet-proof (IP65)

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BRS.

Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) The number of stations that may be displayed is longer than the manifold number of stations

Note 4) Specify the mounting position by means of the manifold specification sheet.

Note 5) Refer to page 1054 for details on with vacuum ejector unit. A combination of "J" and "N" is not available

Note 6) Specify the wiring specifications by means of the manifold specification sheet.

Note 7) Indicate "R" for the valve with external pilot.

Note 8) A combination of "W" and "XP" is unavailable Note 9) Refer to "Dimensions" on page 1035 for SI unit and

valve, in case of W (Dust-tight, Water-iet-proof). Note 10) G1, G2, or G3 cannot be combined with N.


SI Unit Part No. (With option W)

Symbol	Protocol	SI unit part no.	CE-compliant
F1	NKE Corp.: Fieldbus System	EX123D-SUW1	_
Н	NKE Corp.: Fieldbus H System	EX123D-SUH1	
J1	Panasonic Industrial Devices SUNX Co., Ltd.: S-LINK (16 outputs)	EX123D-SSL1	
J2	Panasonic Industrial Devices SUNX Co., Ltd.: S-LINK (8 outputs)	EX123D-SSL2	_
Q	DeviceNet™ System	EX124D-SDN1	•
R1	OMRON Corp.: CompoBus/S (16 outputs)	EX124D-SCS1	•
R2	OMRON Corp.: CompoBus/S (8 outputs)	EX124D-SCS2	•
٧	CC-LINK	EX124D-SMJ1	•

Refer to pages 2051 and 2055 and the Operation Manual for the details of EX120/123/124 Integrated-type (for Output) Serial Transmission System. Please download the Operation Manual via our website, http://www.smcworld.com




Base Mounted Plug-in Unit Series VQ1000/2000

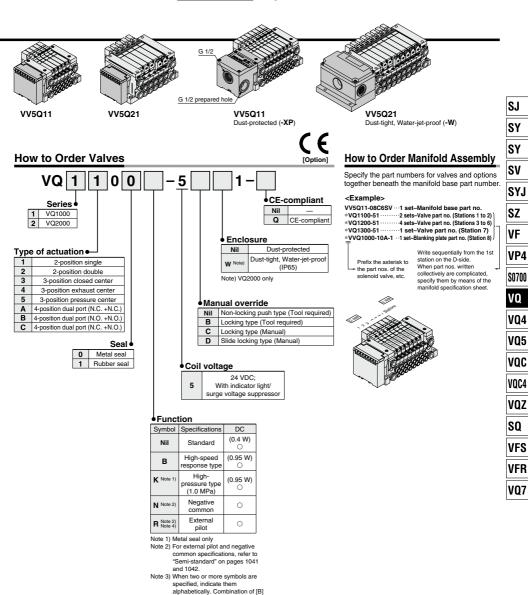


and [K] is not possible.

Note 4) Dual 3-port valve is not applicable.

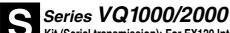



Kit (Serial transmission): For EX120 Integrated-type (For Output) Serial Transmission System

VV5Q11

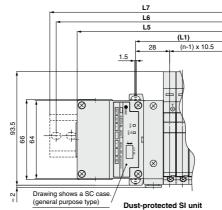

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

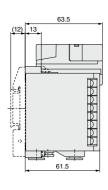

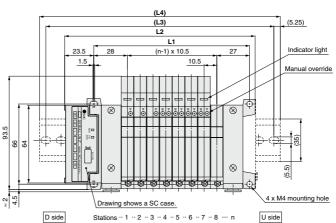

C8 [3(R) EXH port] C8: ø8 One-touch fitting DIN rail clamp screw 40.7 25 (7.5) 18 C8 [1(P) SUP port] C3, C4, C6, M5 [4(A), 2(B) port] P = 10.5 31.5 C8: ø8 One-touch fitting C3: ø3.2 One-touch fitting

C4: ø4 One-touch fitting With ejector unit: Formula C6: ø6 One-touch fitting L1 = 10.5n + 28.7 + (Number of ejector units x 26.7) L2 = 10.5n + 56.3 + (Number of ejector units x 26.7) M5: M5 thread

L4 is L2 plus about 30.

Dust-protected SI unit: L5 = 10.5n + 97, L6 = L3 + 25, L7 = L4 + 25

Dimens	sions							Formula L1 = $10.5n + 44.5$, L2 = $10.5n + 72.5$ n: Station (Maximum 16 stations)							
_ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5
L2	93.5	104	114.5	125	135.5	146	156.5	167	177.5	188	198.5	209	219.5	230	240.5
(L3)	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5
(L4)	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273
1004															

Base Mounted Plug-in Unit Series VQ1000/2000





The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket). Note) In the case of EX124D-SMJ1, this dimension becomes 85.

SJ

SY

SY

SV

SYJ SZ

۷F

VP4

S0700

VQ

VQ4

VQ5

VQC VQC4


VQZ


SQ

VFS

VFR

VQ7

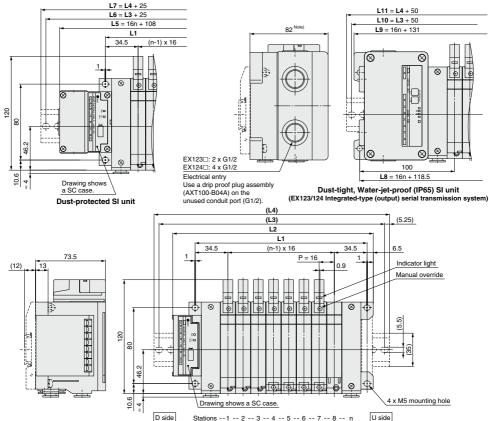

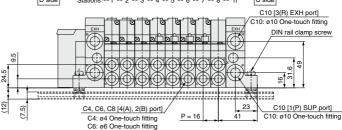

Dust-protected SI unit: L5 = 16n + 108, L6 = L3 + 25, L7 = L4 + 25 Dust-tight, Water-jet-proof SI unit: L8 = 16n + 118.5, L9 = 16n + 131 L10 = L3 + 50, L11 = L4 + 50

Dimensions									Formula L1 = 16n + 53, L2 = 16n + 83 n: Station (Maximum 16 stations							
L n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	
L1	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309	
L2	115	131	147	163	179	195	211	227	243	259	275	291	307	323	339	
(L3)	137.5	162.5	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5	
(L4)	148	173	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	

C8: ø8 One-touch fitting





VQ2000 only


- MIL flat cable connector reduces installation labor for electrical connection.
- Manifold and connectors, both compliant with the IP65 rating (Dust-tight, Water-jet-proof), provide a high-degree of protection for the electrical parts.
- Maximum stations are 24.


Manifold Specifications

	Р	iping specifica	ations		
Series	Piping	Por	Applicable stations		
	direction	1(P), 3(R)	4(A), 2(B)	Stations	
VQ2000	Side	C10	C4, C6, M8	Max. 24 stations	

Circular Connector (26 Pins)


Cable Assembly •

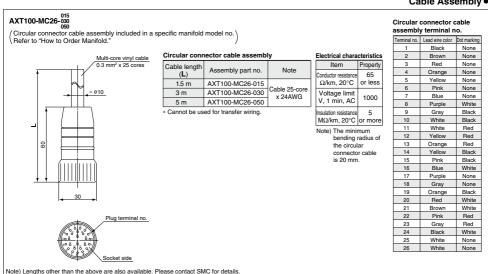

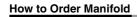

Note) For CE-compliant models, DC-type only.



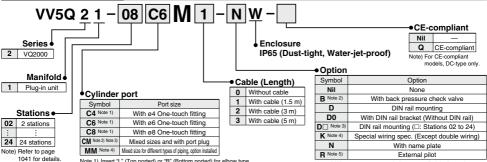


Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type

- Example) B6 (Bottom ported elbow with ø6 One-touch fitting) Note 2) Indicate "LM" (Including upward, downward piping and mixed)
- for models with elbow fittings and mixed cylinder port sizes.
- Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.
- Note 4) When selecting the mixed size for different types of piping dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold
- Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 1042 for details

specification sheet.

- Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BKR
- Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.
- Note 3) The number of stations that may be displayed is longer than the manifold number of stations
- Note 4) Specify the wiring specifications by means of the manifold specification sheet.
- Note 5) Indicate "R" for the valve with external pilot.



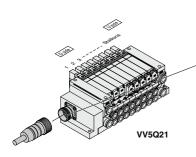

The total number of stations is tabulated starting from station one on the D-side

Electrical Wiring Specifications

Circular connector cable assembly AXT100-MC26-030 Wire color SOL.A_o 1

SOL.B₀ 2

SOLA₀ 3



SOL.B 4 Orange SOL A 5 (-1 (+)SOL.B. SOL.A 7 SOL.B 8 (-1 (+) Purple SOL.A 9 SOL.B 10 (-) (+) SOL.A 0 11 SOL.B_{o 12} Yellow SOL.A 13 (-) (+) Orange SOL.B 14 SOL.A 15 (+) SOL.B 16 (+) (-)

(-1

(-)

(-)

Positive COM spec

SOL.A 17 SOL B 18

SOLA_{o 19}

SOL.B_{o 20}

SOL.A 21

SOL.A 23

SOLB_{o 24}

COM. 0 25

COM. **-**0 26 (+)

specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types. Mixed single and double wiring is available as semi-standard. Refer to page 1041 for details.

As the standard electrical wiring

Note) When using the negative common specifications, use valves for negative common. (Refer to page 1041.)
Refer to "Semi-standard" on page 1041 for

details.

SJ SY

LYS

SZ

Rlack

Brown

Red

Yellow

Pink

Blue

Gray

White

Pink

Blue

Orange

Pink

White

(+) Grav

(+) Red

(+) Brown

(+) Grav

(+)

(-)

Negative COM spec.

Note) (-)

None

None

None

None

White

Black

Black

Red

Red

Black

White

None

White

White

Red

Red

White

VP4

S0700

VO V04

V05

VQC

VOC4

VOZ

SO

VFS

VFR


VQ7

How to Order Valves

B 4-position dual port (N.O. +N.O.)

C 4-position dual port (N.C. +N.O.)

Note) For CE-compliant models, DC-type only.

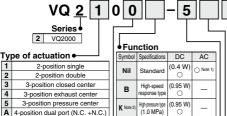

Seal • Metal seal Rubber seal

∧ Caution

specification when

Use the standard (DC)

continuously energizing

pilot Note 1) For power consumption of AC type, refer to page 1003.

Note 2) Metal seal only

Note 3) For external pilot and negative common specifications, refer to "Semi-standard" on pages 1041 and 1042

Negative

common External

Note 4) When two or more symbols are specified indicate them alphabetically Combination of [B] and [K] is not possible

for long periods of time. Note 5) Dual 3-port valve is not applicable.



Enclosure IP65 (Dust-tight, Water-jet-proof)

Note) For CE-compliant models, DC-type only

 Manual override Nil Non-locking push type (Tool required)

	Locking type (Tool required)								
С	Locking type (Manual)								
D Slide locking type (Manua									
Light/surge voltage									

suppressor								
Nil	Yes							
Е	None (Non-polar)							

Co	oil voltage	CE-compliant				
1	100 VAC (50/60 Hz)	_				
3	110 VAC (50/60 Hz)	_				
5	24 VDC	•				
6	12 VDC	•				

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.


Circular connector kit with cable (3 m)

VV5Q21-09C6M2-W ···1 set-Manifold base part no.
*VQ2100-51 ······3 sets-Valve part no. (Stations 1 to 3)
*VQ2200-51 ······3 sets-Valve part no. (Stations 4 to 6
*VQ2300-51 ······2 sets-Valve part no. (Stations 7 to 8)
*VVQ2000-10A-1 ··1 set-Blanking plate part no. (Station 9)
T

Prefix the asterisk to the part nos. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side. When part nos. written collectively are complicated, specify them by means of the manifold specification sheet.

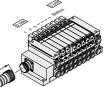


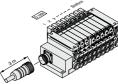


elinnrace

VV5Q21

< >: AC
The dashed lines and dimensions in parentheses indicate DIN rail mounting [-D].

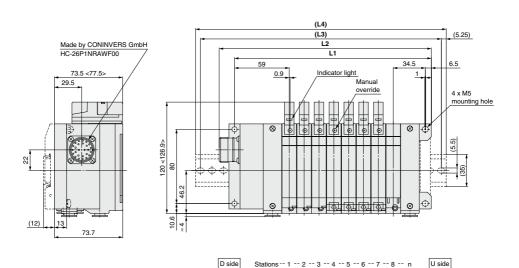

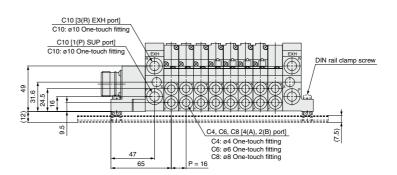

Dimens	Dimensions									Formula L1 = 16n + 77.5, L2 = 16n + 100.5 n: Station (Maximum 12 station							ations)						
Ln	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	109.5	125.5	141.5	157.5	173.5	189.5	205.5	221.5	237.5	253.5	269.5	285.5	301.5	317.5	333.5	349.5	365.5	381.5	397.5	413.5	429.5	445.5	461.5
L2	132.5	148.5	164.5	180.5	196.5	212.5	228.5	244.5	260.5	276.5	292.5	308.5	324.5	340.5	356.5	372.5	388.5	404.5	420.5	436.5	452.5	468.5	484.5
(L3)	162.5	175	187.5	200	225	237.5	250	275	287.5	300	312.5	337.5	350	362.5	375	400	412.5	425	450	462.5	475	500	512.5
(L4)	173	185.5	198	210.5	235.5	248	260.5	285.5	298	310.5	323	348	360.5	373	385.5	410.5	423	435.5	460.5	473	485.5	510.5	523

Sub-plate Single Unit

VQ2000 Only

Series VQ2000



Note) For CE-compliant models, DCtype only.



SY

SY

SV

SYJ

SZ

۷F

VP4

S0700

VQ

V04

V05

VQC

VQC4 VQZ

SO

VFS

VFR VQ7

IP65 enclosure in standard specifications

Easy-to-use terminal block





Entry is the same as

standard products. Enclosure

Nil	Dust-protected
W Note 1)	IP65 (Dust-tight, Water-jet-proof)
	/alves are IP65 specifications.

Note 2) When the valve is a standard (dust-protected) specification, it is not compatible with 200 or 220 VAC.

In the case of (Sub-plate)

- ----

alone

Nil Rc NPT T NPTF

Nil

CE-compliant

Note) For CE-compliant models, DC-type

only.

G

CE-compliant


• Port size


F


1/4

VQ2000 - PW - 02

Dimensions

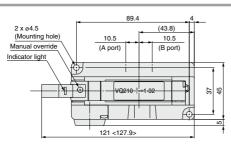

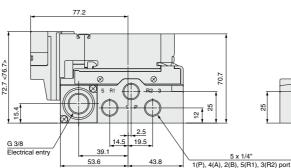

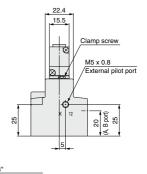

<>: AC




Series VQ1000/2000

Semi-standard

Different Number of Connector Pins

F and P kits with the following number of pins are available besides the standard number (F = 25P; P = 26P). Select the desired number of pins and cable length from the cable assembly list. Place an order for the cable assembly separately.

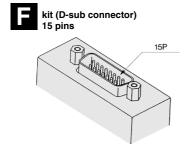

kit (Flat ribbon cable) 10/16/20 pins 10P, 16P, 20P


How to Order Manifold VV5Q11-06 C6 F SA Option Stations Cylinder port How to Order D-sub connector, 15 pins Connector location-Side

Kit type/Flectrical entry

Pins	Top	entry	Side entry				
15P (Max. 7 stations)	F kit	UA	F kit	SA			

Without cable

* In the same way as the 25-pin models (standard), the terminal no. 1 is for SOL.A at the 1st station, the terminal no. 9 for SOL.B at the 1st station, and the terminal no. 8 for COM

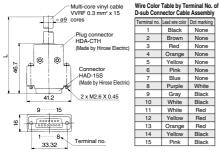


D-sub Connector Cable Assembly

Cable length (L)	15P
1.5 m	AXT100-DS15-1
3 m	AXT100-DS15-2
5 m	AXT100-DS15-3

^{*} For other commercial connectors, use a type conforming to MIL-C-24308.


How to Order Manifold

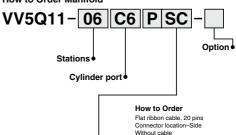

Kit type/Electrical entry

Pins	Top entry		Side entry	
10P (Max. 4 stations)	D	UA	Р	SA
16P (Max. 7 stations)		UB	kit	SB
20P (Max. 9 stations)	NIL -	UC		SC

* In the same way as the 26-pin models (standard), the terminal no. 1 is for SOL.A at the 1st station, the terminal no. 2 for SOL.B at the 1st station, and two pins from the max. terminal numbers are for COM.

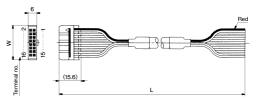

Flat Ribbon Cable Assembly

Cable length (L)	10P	16P	20P
1.5 m	AXT100-FC10-1	AXT100-FC16-1	AXT100-FC20-1
3 m	AXT100-FC10-2	AXT100-FC16-2	AXT100-FC20-2
5 m	AXT100-FC10-3	AXT100-FC16-3	AXT100-FC20-3
Connector width (W)	17.2	24.8	30

^{*} For other commercial connectors, use a type with strain relief conforming to MIL-C-83503.




Special Wiring Specifications

In the internal wiring of F/P/J/G/T/S kit, double wiring (connected to SOL. A and SOL. B) is adopted for each station regardless of the valve and option types. Mixed single and double wiring is available as an option.

1. How to Order


Indicate an option symbol "-K", for the manifold no. and be sure to specify the mounting position and number of stations of the single and double wiring by means of the manifold specification sheet.

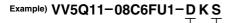

Others, option symbols: to be indicated alphabetically.

2. Wiring specifications

With the A side solenoid of the 1st station as no.1 (meaning, to be connected to no.1 terminal), without making any terminals vacant.

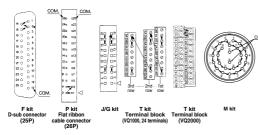

3. Max. number of stations

The maximum number of stations depends upon the number of solenoids. Assuming one for a single and two for a double, determine the number of stations so that the total number is not more than the max. number given in the following table.

Kit	F kit (D-sub ector)	(Fla	P kit (Flat ribbon cable)			J kit (Flat ribbon cable)	G kit (Flat ribbon cable with terminal block)
Туре	F s □ 25P	F S A 15P	Psu □ 26P	P S C 20P	PsB 16P	P s A 10P	J ^U □ 20P	G□
Max.	24	14	24	18	14	8	16	16

Kit		T ki (Terminal bl		S kit (Serial transmission)	M kit (Circular connector)
Туре	1000	2 rows of terminal blocks	3 rows of terminal blocks	s□	M□
,,	8	16	24		
Max. points	VQ2000	20		16	24


Negative Common Specifications

Specify the valve model no. as shown below for negative common specification.


The manifold no. shown below is for the T (VQ1000) and L (VQ1000/2000) kits. For other kits the standard manifold can be used. However, negative common is not compatible with S (except EX510 Gateway-type, EX240 integrated-type and EX120/121/122 integrated-type (CompoNet™)) and G kits.



How to Order Manifold T kit (VQ1000):

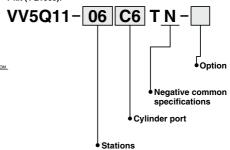

L kit (VQ1000/2000):

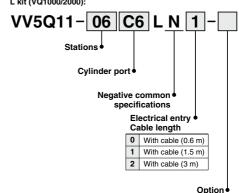

SY SY

SV

LYS

SZ

۷F VP4

S0700

VO V04

V05

VQC VOC4

VOZ

SO VFS

VFR **VQ7**

Series VQ1000/2000


Semi-standard

External Pilot Specifications

When the supply air pressure is lower than the required minimum operating pressure (0.1 to 0.2 MPa) for the solenoid valve (or when the valve is used for vacuum), specify an external pilot model. Order a manifold or valve by suffixing the external pilot specification, "R". The X-port of the manifold base is equipped with One-touch fittings for external pilot.

VQ1000: C4 (ø4 One-touch fitting) VQ2000: C6 (ø6 One-touch fitting)

How to Order Manifold

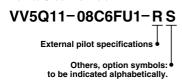


How to Order Valves



Note 1) When two or more functions are specified, indicate them alphabetically Note 2) Since the pilot EXH of this valve is released from the R1 passage, it is not possible to vacuum from a part other than EXH pressure and SUP ports.

Inch-size One-touch Fittings

The valve with inch-size One-touch fittings is shown below.

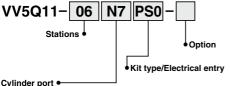

Cymraci port							
Syr	mbol	N1	N3	N7	N9	M5T	NM
Applicable tubing O.D. (Inch)		ø1/8"	ø5/32"	ø1/4"	ø5/16"	10-32UNF (M5 thread)	Mixed
4(A), 2(B) port	VQ1000	•	•	•	_	•	•
	VQ2000	_	•	•	•	_	•

Note) When inch-size fittings are selected for the cylinder port, inch-size fittings are selected on 1(P), 3(R) port, too.

> 1(P), 3(R) port size VQ1000 ø5/16" (N9) VQ2000 ø3/8" (N11)

DIN Rail Mounting

Each manifold can be mounted on a DIN rail. Order it by indicating a DIN rail mounting option symbol, "-D". In this case, a DIN rail which is approx. 30 mm longer than the manifold with the specified number of stations is attached.

When DIN rail is unnecessary

(DIN rail mounting brackets only are attached.) Indicate the option symbol, -D0, for the manifold part number.

Example)

VV5Q11-08C6FU1-D0S

Others, option symbols: to be indicated alphabetically.

When using DIN rail longer than the manifold with specified number of stations

Clearly indicate the necessary number of stations next to the option symbol "-D" for the manifold part number.

Example)

number of stations.

VV5Q11-08C6FU1-D09S

DIN rail for 9 stations Others, option symbols:

to be indicated alphabetically. *The number of stations that may be displayed is longer than the manifold


When changing to a DIN rail mounting.

Order brackets for mounting a DIN rail. (Refer to "Manifold Optional Parts" on pages 1052 and 1058.)

No. VVQ1000-57A (For VQ1000) VVQ2000-57A (For VQ2000) 2 pcs. per one set.

When ordering DIN rail only DIN rail no.: AXT100-DR-□

* As for \square , specify the number from the DIN rail table. Refer to the dimensions of each kit for L dimension.

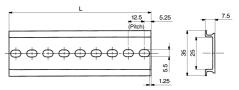



L Dir	nensi	ion						L=	12.5 x	n + 10.5
No.	1	2	3	4	5	6	7	8	9	10
L dimension	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5
No.	11	12	13	14	15	16	17	18	19	20
L dimension	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30
L dimension	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5
No.	31	32	33	34	35	36	37	38	39	40
L dimension	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

Series VQ1000/2000

Construction

VQ1000 Plug-in Unit: Main Parts/Replacement Parts

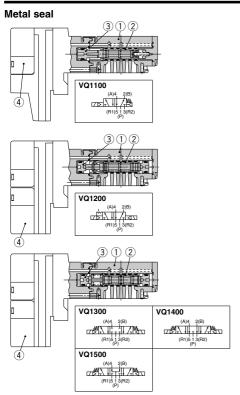

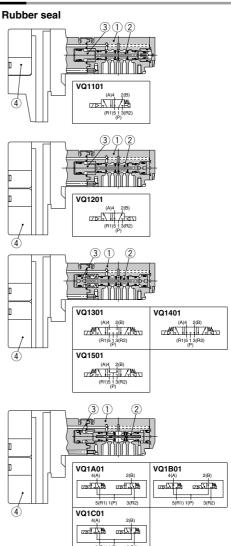

Component Parts

No.	Description	Material	Note
1	Body	Zinc die-casted	
2	Spool/Sleeve	Stainless steel	
3	Piston	Resin	
4	Pilot valve assembly	_	


Note) Refer to page 1047 for "How to Order Pilot Valve Assembly".




Note) Refer to page 1047 for "How to Order Pilot Valve Assembly".



VQ2000 Plug-in Unit: Main Parts/Replacement Parts

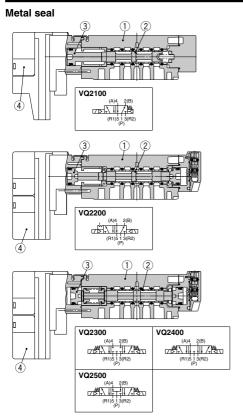

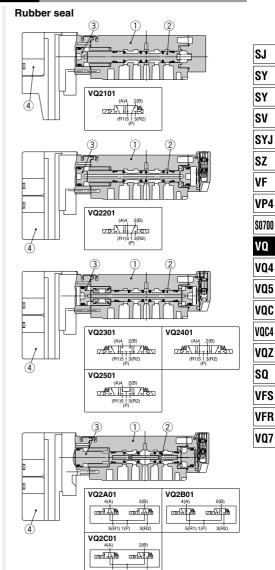

Component Parts

No.	Description	Material	Note
1	Body	Zinc die-casted	
2	Spool/Sleeve	Stainless steel	
3	Piston	Resin	
4	Pilot valve assembly	_	

Note) Refer to page 1047 for "How to Order Pilot Valve Assembly".


No.	Description	Material	Note
1	Body	Zinc die-casted	
2	Spool valve	Aluminum, HNBR	
3	Piston	Resin	
4	Pilot valve assembly	_	

Note) Refer to page 1047 for "How to Order Pilot Valve Assembly".

Component Parts

VQ1000 Plug-in Unit: Exploded View

(F/P/J/L/S kit)

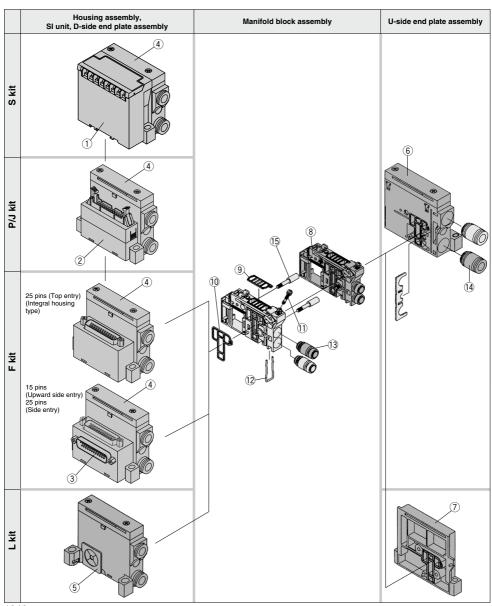

<Housing Assembly and SI Unit>

Housing assembly and SI unit no.

No.	Manifold	Part no.	Description
	(SF1 kit)	EX120-SUW1(-XP) Note 2)	NKE Corp.: Fieldbus System (16 outputs)
[(SH kit)	EX120-SUH1(-XP) Note 2)	NKE Corp.: Fieldbus H System (16 outputs)
	(SJ1 kit)	EX120-SSL1(-XP) Note 2)	Panasonic Industrial Devices SUNX Co., Ltd.: S-LINK System (16 outputs)
①	(SJ2 kit)	EX120-SSL2(-XP) Note 2)	Panasonic Industrial Devices SUNX Co., Ltd.: S-LINK System (8 outputs)
0	(SQ kit)	EX120-SDN1	DeviceNet™
	(SR1 kit)	EX120-SCS1(-XP) Note 2)	OMRON Corp.: CompoBus/S (16 outputs)
	(SR2 kit)	EX120-SCS2(-XP) Note 2)	OMRON Corp.: CompoBus/S (8 outputs)
	(SV kit)	EX120-SMJ1(-XP) Note 2)	CC-LINK
(2)	Ps kit	AXT100-1-P _S □ Note 1)	Flat ribbon cable housing assembly □ = Number of pins: 26/20/16/10
(2)	J∜ kit	AXT100-1-J ^U _S 20 Note 1)	Flat ribbon cable housing assembly
(3)	FU kit	AXT100-1-FU15	D-sub connector housing assembly (Top entry) Number of pins: 15
<u> </u>	FS kit	AXT100-1-FS□	D-sub connector housing assembly (Side entry) ☐ Number of pins: 25/15

Note 1) Top entry connector for FU, PU, JU while side entry connector for FS, JS, PS.

Note 2) Suffix "-XP" to the end of the part number for dust-protected SI unit. (Not available for S/SQ kit)

<D-Side End Plate Assembly>


(4)(5) D-side end plate assembly no. VVQ1000-3A-1-□-□

Electrical entry -


FU25	For F kit top entry 25 pins	Nil	Common EXH
F	For F kit	R Note 1)	External pilot
Р	For J/P kit	S Note 1)	Direct EXH outlet with built-in silencer
L	For L kit		
S	For S kit		

Ontion

Note 1) When both options are specified, indicate as RS. Note 2) The housing assembly and SI unit of F/P/J/S kit are not included. Separately place an order for (1), (2), (3).

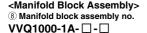

Tie-rod (2 pcs.) and lead wire assembly for extensions are attached

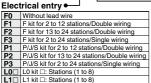

• 10	ort size
СЗ	
C4	With ø4 One-touch fitting
C6	With ø6 One-touch fitting
M5	M5 thread
	Without One-touch fitting
CO	(With clip)
	C3 C4

<Replacement Parts for Manifold Block>

Replacement Parts

L2 L2 kit □: Stations (1 to 8)

No.	Part no.	Description	Material	Quantity
9	VVQ1000-80A-1	A-1 Gasket HNBR		12
10	VVQ1000-80A-2	1000-80A-2 Packing HI	HNBR	12
11)	VVQ1000-80A-3	1000-80A-3 Clamp screw Carbon	Carbon steel	12
12	VVQ1000-80A-4	Clip	Stainless steel	12

Note) A set of parts containing 12 pcs. each is enclosed

<U-Side End Plate Assembly>

6 U-side end plate assembly no. (For F/P/J/S kit)

VVQ1000-2A-1-□

	Option		
	Nil Common EXH		
R External pilot		External pilot	
	S	Direct EXH outlet with built-in silencer	
	Note) The ⁽⁴⁾ 's fitting assembly is included.		

① U-side end plate assembly no. (For L kit)

VVQ1000-2A-1-L

<Fitting Assembly>

(13) Fitting assembly part no. (For cylinder port)

VVQ1000-50A-Port size

Note) Purchasing order is available in units of 10 pieces.

C3 Applicable tubing ø3.2 C4 Applicable tubing ø4 C6 Applicable tubing ø6
M5 M5 thread

(4) Fitting assembly part no. (For 1(P), 3(R) port)

VVQ1000-51A-C8 Applicable tubing ø8

Note) Purchasing order is available in units of 10 pieces


(5) Tie-rod assembly part no. (2 pcs./set)

VVQ1000-TR-□

Note 1) Please order when eliminating manifold stations. When adding stations, tie-rods are attached to the manifold block assembly. Therefore, it is not necessary to order. Note 2) □: Stations 02 to 24

Note 3) For S/P/J/F/L kit

Pilot valve assembly

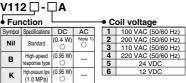

Note 1) Refer to page 1003 for power consumption of AC type. Note 2) Common to single solenoid and double solenoid



SJ SY

LYS

SZ

VP4

S0700

VO

V04

V05

VOC VOC4

VOZ

SO VFS

VFR

VQ7

VQ2000 Plug-in Unit: Exploded View

(F/P/J/L/G/S kit)

	Housing assembly and SI unit	D-side end plate assembly	Manifold block assembly	U-side end plate assembly
Skit				
P/J kit	2			15
Fkit	3	5		
G kit	4			
L kit				8

<Housing Assembly and SI Unit> Housing assembly and SI unit no.

No.	Manifold	Part no.	Description	
	(SF1 kit)	EX120-SUW1(-XP) Note 1) [EX123D-SUW1] Note 2)	NKE Corp.: Fieldbus System (16 outputs)	
	(SH1 kit)	EX120-SUH1(-XP) Note 1) [EX123D-SUH1] Note 2)	NKE Corp.: Fieldbus H System (16 outputs)	
	(SJ1 kit)	EX120-SSL1(-XP) Note 1) [EX123D-SSL1] Note 2)	Panasonic Industrial Devices SUNX Co., Ltd.: S-LINK System (16 outputs)	
(1)	(SJ2 kit)	EX120-SSL2(-XP) Note 1) [EX123D-SSL2] Note 2)	Panasonic Industrial Devices SUNX Co., Ltd.: S-LINK System (8 outputs)	
(1)	(SQ kit)	EX120-SDN1 [EX124D-SDN1] Note 2)	DeviceNet™	
	(SR1 kit)	EX120-SCS1(-XP) Note 1) [EX124D-SCS1] Note 2)	OMRON Corp.: CompoBus/S (16 outputs)	
	(SR2 kit)	EX120-SCS2(-XP) Note 1) [EX124D-SCS2] Note 2)	OMRON Corp.: CompoBus/S (8 outputs)	
	(SV kit)	EX120-SMJ1(-XP) Note 1) [EX124D-SMJ1] Note 2)	CC-LINK	
(2)	Ps kit	AXT100-1-P ^U _S □ Note 3)	Flat ribbon cable housing assembly □: Number of pins: 26/20/16/10	
_	J [∪] _S kit	AXT100-1-J ^U _S 20 Note 3)	Flat ribbon cable housing assembly	
3	F _s kit	AXT100-1-F ^U _S \(\text{Note 3} \)	D-sub connector housing assembly □: Number of pins: 25/15	
4	G kit	AXT100-1-GU20	Flat ribbon cable housing assembly with terminal block	

Note 1) Suffix "-XP" to the end of the part number for dust-protected SI unit.

Note 2) Dust-tight, Water-jet-proof (IP65)

Note 3) Top entry connector for FU, PU, JU while side entry connector for FS, PS, JS.

<D-Side End Plate Assembly>

56 D-side end plate assembly no.

VVQ2000-3A-1-□-□[

-	Electrical entry		
	F	For F kit	
	Р	For G/J/P kit	
	L	For L kit	
	S	For S kit	



M kit is available with [W] only. S/L/T kit are selectable depending on the manifold type.

Option Nil Common EXH

	S Note 1)	Direct EXH outlet with built-in silencer
ific	ed indicate	as BS

Note 1) When both options are specifie Note 2) The housing assembly and SI unit of F/P/J/G/S kit are not included.

Separately place an order for ①, ②, ③, ④.

Note 3) "S" (Built-in silencer) and "W" (IP65) cannot be combined.

<Manifold Block Assembly>

9 Manifold block assembly no. VVQ2000-1A- □ - □ - □

Tie-rod (2 pcs.) and lead wire assembly for extensions are attached.

<U-Side End Plate Assembly>

7 U-side end plate assembly no. (For F/P/J/G/T/S/M kit) VVQ2000-2A-1-

Enclosure

Option • Common EXH Nil External pilot Direct EXH outlet s with built-in silencer

1411	Dust-protected		
W	Dust-tight, Water-jet-proof (IP65)		
Note) F/P/J/G kit are available with "Nil" only.			
M kit is available with [W] only.			
S/T kit are selectable depending on the			
manifold type.			
mamoia typo.			

SJ SY

LYS

SZ

۷F

VP4

S0700

VO

V04

V05

VOC

VOC4 VOZ

SO

VFS

VFR

VQ7

Note 1) The (5's fitting assembly is included.

Note 2) The housing assembly and SI unit of F/P/J/G/S kit are not included. Separately place an order for 1, 2, 3, 4.

Note 3) "S" (Built-in silencer) and "W" (IP65) cannot be combined.

8 U-side end plate assembly no. (For L kit)

VVQ2000-2A-1-L-[

	• Eliciosule			
Nil Dust-protected		Dust-protected		
	W	Dust-tight, Water-jet-proof (IP65)		

Note) Select it depending on the manifold type.

Electrical entry • En Without lead

FU	Williout lead wife	
F1	F kit for 2 to 12 stations/Double wiring	
F2	F kit for 13 to 24 stations/Double wiring	
F3	F kit for 2 to 24 stations/Single wiring	
P1	P/J/G/S kit for 2 to 12 stations/Double wiring	
P2	P/J/G/S kit for 13 to 24 stations/Double wiring	
P3	P/J/G/S kit for 2 to 24 stations/Single wiring	
L0□	L0 kit □: Stations (1 to 8)	
L1□	L1 kit □: Stations (1 to 8)	
L2□	L2 kit □: Stations (1 to 8)	
T1	T kit for 2 to 20 stations/Double wiring	
T3	T kit for 2 to 20 stations/Single wiring	

M1 M kit for 2 to 12 stations/Double wiring

M2 M kit for 13 to 24 stations/Double wiring

M3 M kit for 2 to 24 stations/Single wiring

 Port size Enclosure C4 With ø4 One-touch fitting With ø6 One-touch fitting With ø8 One-touch fitting C0 Without One-touch fitting (With clip)

Dust-protected Dust-tight, Water-jet-proof (IP65) Note) F/P/J/G kit are available with "Nil" only.

M kit is available with fWI only. S/L/T kit are selectable depending on the manifold type.

<Fitting Assembly>

(4) Fitting assembly part no. (For cylinder port)

VVQ1000-51A-Note) Purchasing order is available in units of 10 pieces.

Port size C4 Applicable tubing ø4 C6 Applicable tubing ø6

C8 Applicable tubing ø8

(5) Fitting assembly part no. (For 1(P), 3(R) port)

VVQ2000-51A-C10

Applicable tubing ø10


Note) Purchasing order is available in units of 10 pieces.

16 Tie-rod assembly part no. (2 pcs./set)

VVQ2000-TR- Note 1) Please order when eliminating manifold stations.

When adding stations, tie-rods are attached to the manifold block assembly. Therefore, it is not necessary to order.

Note 2) □: Stations 02 to 24 Note 3) For S/P/J/F/L kit

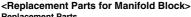

Replacement Parts

No.	Part no.	Description	Material	Quantity
10	VVQ2000-80A-1	Gasket	HNBR	12
11)	VVQ2000-80A-2	Seal	HNBR	12
12	VVQ2000-80A-3	Clamp screw	Carbon steel	12
13	VVQ2000-80A-4	Clip	Stainless steel	12

Note) A set of parts containing 12 pcs, each is enclosed




Series VQ1000

VQ1000: Manifold Optional Parts

Blanking plate assembly VVQ1000-10A-1

Symbol

It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

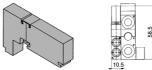


Individual SUP spacer VVQ1000-P-1-C6 N7

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.)

ferent pressures. (One station space is occupied.) Block both sides of the station, for which the supply pressure from the individual SUP spacer is used, with SUP block plates. (Refer to the application example.)

- Specify the spacer mounting position and SUP block plate position by means of the manifold specification sheet. The block plate is used in one or two places for one set. (Two SUP block plates for blocking SUP station are at tached to the individual SUP spacer.)
- * As a standard, electric wiring is connected to the position of the manifold station where the individual SUP spacer is mounted.
- * If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

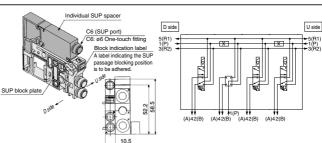


Individual EXH spacer VVQ1000-R-1-C6 N7

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.)

Block both sides of the individual valve EXH station. (Refer to the application example.)

- * Specify the mounting position, as well as the EXH block base or EXH block plate position by means of the manifold specification sheet. The block plate is used in one or two places for one set.
- * An EXH block base assembly is used in the blocking position when ordering an EXH spacer incorporated with a manifold no. However, do not order an EXH block base assembly because it is attached to the spacer.
- When separately ordering an individual EXH spacer, separately order an EXH block base assembly because it is not attached to the spacer.
- As a standard, electric wiring is connected to the position of the manifold station where the individual EXH spacer is mounted.
 If wiring is not required for stations equipped with spac-
- * If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.
- Do not install any back pressure check valve on the manifold station, on which the spacer is to be mounted. When installing the back pressure check valve on other manifold station, be sure to specify the manifold station position on the manifold specification sheet instead of ordering by specifying the manifold option symbol 'B'.

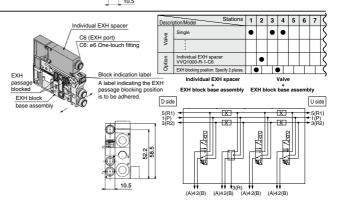

SUP block plate VVQ1000-16A


When different pressures are supplied to a manifold, a SUP block plate is used to block the stations under different pressures.


Specify the mounting position by means of the manifold specification sheet.

<Block indication label>

Indication labels to confirm the blocking position are attached (Each for SUP passage and SUP/EXH passage blocking positions).

* When ordering a block plate incorporated with a manifold, a block indication label is attached to the manifold.

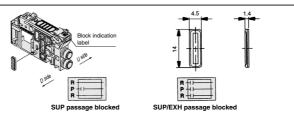


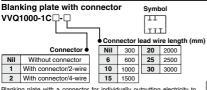

Blanking plate with a connector for individually outputting electricity to drive a single valve or equipment that are not on the manifold base.

When "N" is suffixed to the end of the name plate, the plate will be different from a standard shape.

Note) Electric current should be 1A or less (including the mounted valves).

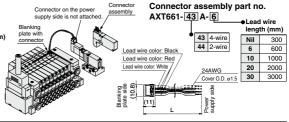

EXH block base assembly VVQ1000-19A-E-(C3/C4/C6/M5/N1/N3/N7)

Electrical entry


F0	Without lead wire	
F1	For F kit (2 to 12 stations)/Double wiring	
F2	For F kit (13 to 24 stations)/Double wiring	
F3	For F kit (2 to 24 stations)/Single wiring	
P1	For P, G, T, S kit (2 to 12 stations)/Double wiring	
P2	For P, G, T, S kit (13 to 24 stations)/Double wiring	
P3	For P, G, T, S kit (2 to 24 stations)/Single wiring	
L0*	L0 kit)	
L1*	L1 kit * 1 to 8 stations	
L2*	L2 kit	

The manifold block assembly is used between stations for which exhaust is desired to be divided when valve exhaust affects other stations due to the circuit configuration. The EXH passage on the D-side is blocked in the EXH block base assembly. It is also used in combination with an individual EXH spacer for individual exhaust.

<Block indication label>

Indication labels to confirm the blocking position are attached. (Each for EXH passage and SUP/EXH passage blocking positions)

* When ordering a EXH block base incorporated with a manifold, a block indication label is attached to the manifold

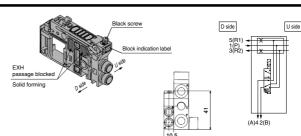

- * Specify the mounting station by means of the manifold specification sheet
- * When ordering this option incorporated with a manifold, specify the EXH block base assembly part number with in front of it beneath the manifold part number.







EXH passage blocked

SUP/EXH passage blocked

Back pressure check valve assembly [-B] VVQ1000-18A

It prevents cylinder malfunction caused by other valve exhaust entry. Insert it into R (EXH) port on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used or an exhaust center type solenoid valve is used. * When ordering it being mounted on all manifold stations,

suffix "-B" to the end of the manifold part number.

Note) When a back pressure check valve is desired, and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting station by means of the manifold specification sheet.





(Precautions) 1. The back pressure check valve

assembly is the parts with a check valve structure. However, since the valve has slight air leakage, take precautions for the exhaust air not to be restricted at the exhaust port. When a back pressure check valve is mounted, the effective area of the valve will decrease by about 20%

SJ

SY

SV

LYS

SZ

۷F

VP4

S0700

VO

V04

V05

vac

VQC4

VOZ

SO

VFS **VFR**

VQ7


Name plate [-N] VVQ1000-NC-N-Station (1 to Max. stations)

It is a transparent resin plate for placing a label that indicates solenoid valve function, etc. Insert it into the groove on the side of the end plate

and bend it as shown in the figure. When the blanking plate with connector is mounted, it automatically will be "VVQ1000-NC-n"

* When ordering this option incorporated with a manifold, suffix "-N" to the end of the manifold part

N: Standard NC: For mounting blanking plate with connector

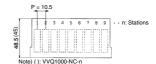

Blanking plug (For One-touch fittings) KQ2P-□

It is inserted into an unused cylinder port and SUP/EXH ports.

Purchasing order is available in units of 10 pieces.



	A -	
	·- ኤr	
ł		@

	Dimen	sions								
	Applicable fitting size ød	Model	A	L	D	Applicable fitting size ød	Model	A	L	D
	3.2	KQ2P-23	16	31.5	3.2	1/8"	KQ2P-01	16	31.5	5
1	4	KQ2P-04	16	32	6	5/32"	KQ2P-03	16	32	6
2	6	KQ2P-06	18	35	8	1/4"	KQ2P-07	18	35	8.5
•	8	KQ2P-08	20.5	39	10	5/16"	KQ2P-09	20.5	39	10

Port plug VVQ0000-58A

The plug is used to block the cylinder port

* When ordering this option incorporated with a manifold, indicate "CM" for the port size of the manifold part number, as well as, the mounting station and cylinder port mounting positions 4(A) and 2(B) by means of the manifold specification sheet. * Gently screw an M3 screw in the port plug hole and pull it for removal.





Elbow fitting assembly VVQ1000-F-L(C3/C4/C6/M5/N1/N3/N7)

It is used for piping that extends upward or down manifold


* When ordering this option incorporated with a manifold, indicate for the manifold port size (when installed in all "L□" or "B□" stations.)

When installing it in part of the manifold stations, specify the elbow fitting assembly part number and the mounting station by means of

the manifold specification sheet.

* When mounting elbow fitting assembly on the edge of manifold station and a silencer on EXH port, select a silencer, AN203-KM8. A silencer (AN200-KM8) is interfered with fittings.



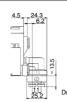



Upward

1051



Series VQ1000

VQ1000: Manifold Optional Parts

DIN rail mounting bracket [-D/-D0/-D□] VVQ1000-57A

It is used for mounting a manifold on a DIN rail

- * When ordering this option incorporated with a manifold, suffix "D" to the end of the manifold part number.
- 1 set of DIN rail mounting bracket is used for 1 manifold (2 DIN rail mounting brackets).





Direct EXH outlet with built-in silencer [-S]

This is a type with an exhaust port a top the manifold end plate. The built-in silencer exhibits an excellent noise suppression effect. (Noise reduction: 30 dB) * When ordering this option incorporated with a manifold, suffix "S" to the end of the manifold part number.

Note) A large quantity of drainage generated in the air source results in exhaust of air together with drainage

Refer to page 1063 for maintenance.




Dual flow fitting assembly VVQ1000-52A- C8

This is a fitting to multiply the flow rate by combining the outputs of 2 valve stations. It is used for driving a large bore cylinder. This is a Onetouch fitting for a port size of ø8 or ø5/16".

- * The port size for the manifold part number is "MM". Clearly indicate the dual flow fitting assembly part number and specify the mounting station by means of the manifold specifications.
- * In dual flow fitting assembly, a special clip which is combined in onepiece of 2 stations is attached as a holding clip.




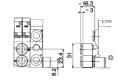

Silencer (For EXH port)

This silencer is to be inserted into the EXH port (Onetouch fittings) of the common exhaust type.

* When mounting elbow fitting assembly (VVQ1000-F-L(1) on the edge of manifold station, select a silencer,

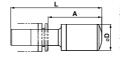

Dimensions							
Series	Applicable fitting size ød	Model	A	L	D	Effective area (mm²)	Noise reduction (dB)
VQ1000	8	AN15-C08	26.5	45	13	20	30

Regulator unit VVQ1000-AR-1

The regulator controls the SUP pressure in a manifold Supply air from D-side SUP port is regulated. SUP port on U-side is plugged.

When a regulator unit is mounted, the SUP port on the U-side of the manifold will be plugged. A maximum of 3 units can be mounted on a manifold

Specifications

Maximum operating pressure (MPa)	0.8
Set pressure range (MPa)	0.05 to 0.7
Ambient and fluid temp. (°C)	5 to 50
Fluid	Air
Cracking pressure valve (MPa)	0.02
Structure	Relieving type

units ... 2 set G27-10-01 Pressure control s SUP port on U-side is plugged. C8 (SUP) port D side U side 5(R1) 1(P) 3(B2) 5(R1) 1(P) 3(B2)

(A)4 2(B)

How to Order


Indicate an option symbol "-G*" for the manifold no. and be sure to specify the mounting position and number of stations by means of the manifold specification sheet. One unit is counted as one station and occupies a space for three stations, therefore, pay attention to the manifold size. The regulator valve unit, to which no wire is connected, valves can be mounted up to the standard max. number of stations of each kit.

How to Order Manifold VV5Q11-14C6FUO-D G 2 Number of manifold stations Number of regulator units --- 2 sets Number of mounted valves --- 12 sets Number of regulator With regulator unit

Others, option symbols: to be indicated alphabetically 8



Conditions: Flow Characteristics Inlet pressure 0.7 MPa Flow rate (NL/min)

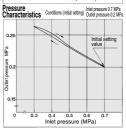

· Pressure setting

Check the inlet pressure and then turn the pressure control screw to set the outlet pressure. Turning the screw clockwise will increase the outlet pressure while turning it counterclockwise decrease the pressure. (Set the pressure by turning the screw in the increase direction.)

Since some level of the actuator's operational frequency may lead to a sharp pressure change, pay attention to the pressure gauge durability.






It is used on the outlet side piping to keep the cylinder in the intermediate position for a long time. Combining the double check block with a built-in pilot type double check valve and a 3-position exhaust center solenoid valve will enable the cylinder to stop in the middle or maintain its position for long periods of time.


The combination with a 2-position single/double solenoid valve will permit this block to be used for preventing the dropping at the cylinder stroke end when the SUP residual pressure is released.

Specifications

Max. operating pressure	0.8 MPa
Min. operating pressure	0.15 MPa
Ambient and fluid temp.	−5 to 50°C
Flow characteristics: C	0.60 dm3/(s-bar)
Max. operating frequency	180 c.p.m

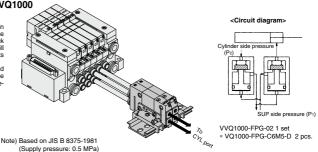

Dimensions

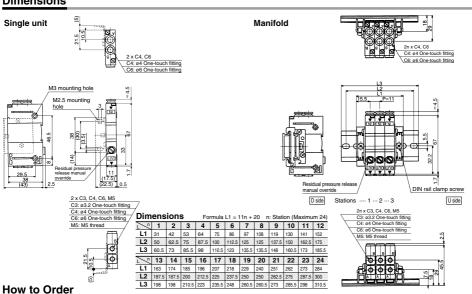

Double check block <Example> 2-position 3-position VQ1000-FPG-C4 M5-F exhaust center Option 5(R1) 5(R1) 5(R1) -5(R1) IN side port size ● OUT side port size Nil None 1(P) 1(P) 1(P) -1(P) M5 M5 thread M5 M5 thread With bracket C3 ø3.2 One-touch fitting C3 ø3.2 One-touch fitting DIN rail mounting 4 D ø4 One-touch fitting ø4 One-touch fitting C4 C4 (For manifold) C6 ø6 One-touch fitting C6 ø6 One-touch fitting N Name plate N3 ø5/32" One-touch fitting ø5/32" One-touch fitting Note) When two or more sym-N7 ø1/4" One-touch fitting N7 ø1/4" One-touch fitting bols are specified, indicate them alphabetically Manifold (DIN rail mounting) Example) -DN **∕!∖** Caution

VVQ1000 - FPG - 06

When ordering a double check block, or der the DIN rail mounting [-D].

<Ordering example>
VVQ1000-FPG-06--6-station manifole

*VQ1000-FPG-C4M5-D, 3 sets *VQ1000-FPG-C6M5-D 3 sets

check block

	UI	i station		
	-:-	:		
	16	16 stations		
Bracket Assembly				

•	Bracket Assem	bly	٠
	Part no.	Tightening torque	١
	VO1000-FPG-FR	0.22 to 0.25 N m	

Stations

1 station

Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for long periods of time. Check the leakage using neutral household detergent, such as dish washing soap. Also check the cylinder's tube gasket, piston packing and rod packing for air leakage.
 Since One-touch fittings allow slight air leakage, screw piping (with M5 thread) is recommended when

4(A) 2(B)

4(A) 2(B)

stopping the cylinder in the middle for long periods of time. Combining double check block with 3-position closed center or pressure center solenoid valve will not work. M5 fitting assembly is attached, not incorporated into the double check block. After screwing in the M5

fittings, mount the assembly on the double check block. {Tightening torque: 0.8 to 1.2 N·m}
If the exhaust of the double check block is restricted too much, the cylinder may not operate properly and may not stop intermediately Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.

SJ SY

SV LYS

> SZ ۷F

> > VP4

S0700 VO

V04 V05

VQC VOC4

VOZ


SO VFS

VFR

VQ7

VQ1000: Manifold Option/With Ejector Unit

An ejector unit can be mounted on the manifold base for a solenoid valve. Instead of mounting the valve and ejector unit separately, this option reduces piping, wiring and creates additional space savings.

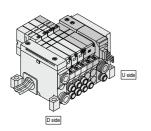

Note 1) SUP and EXH ports on the ejector unit manifold base are arranged on D-side alone. The end plate on the U-side is the same as that used in the L kit.

Note 2) Individual piping is provided for the supply and exhaust ports of the ejector unit.

Note 3) The manifold with an ejector unit is mounted from the U-side.

Note 4) One vacuum ejector unit corresponds to one station.

 Specify the mounting station by means of the manifold specification sheet.

Specifications

Ejector valve model	VVQ1000□-J□-□□1-A	VVQ1000□-J□-□□1-B	
Nozzle diameter (mm)	0.7	1.0	
Max. suction flow rate N (NL/min)	11	20	
Max. vacuum pressure (mmHg)	-630		
Max. operating pressure (MPa)	0.7 (High-pressure type 0.8)		
Standard supply pressure (MPa)	0.5		
Operating temperature (°C)	5 to 50		


Maximum Number of Ejector Units

(Max. number of ejector units is subject to the number of valve stations.)


Max. number of	Max. number of mounted valves			
ejector units	F, P, T kit	S, G, J kit	L kit	
1	11 (20)	7 (14)	7	
2	10 (16)	6 (12)	6	
3	9 (12)	5 (10)	5	
4	8 (8)	4 (8)		
5	4 (4)	3 (4)	_	

Note) The max. number of mounted valves applies to double wiring. Parenthesized numbers apply to single wiring. Please contact SMC for conditions other than the above or mixed wiring.

Dimensions

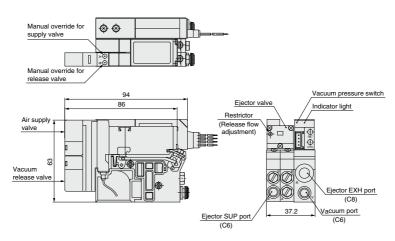

How to Order

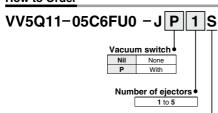

Others, option symbols: to be indicated alphabetically.

Example)

VV5Q11-05C6FU0-JP1 1 set-Manifold part no.

*VQ1100-51 ----- 2 sets-Valve part no. (Stations 1 to 2)
*VQ1200-51 ---- 2 sets-Valve part no. (Stations 3 to 4)

*VVQ1000-J1-51-A 1 set-Ejector valve part no. *ZSE1-00-15CL 1 set-Vacuum switch part no.

Note 1) Count one ejector unit as one manifold station.


Note 2) The ejector unit is mounted next to the U-side end plate.


Note 3) The U-side end plate is used exclusively for ejector units. (Without P and R port)

Note 4) The dimension of manifold with an ejector unit is different from the standard dimension. See the formula for calculating the dimensions for each kit.





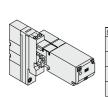

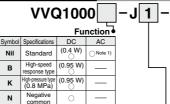

Note 1) For power consumption of AC type, refer to page 1003. Note 2) When two or more symbols are specified, indicate Manifold them alphabetically. Combination of [B] and [K] is not possible

Coil	voltage	٦
1	100 VAC (50/60 Hz)	
2	200 VAC (50/60 Hz)	ı I
3	110 VAC (50/60 Hz)	• IV
4	220 VAC (50/60 Hz)	N
5	24 VDC	E
6	12 VDC	(

5 C 1-A

Plug-in unit

 Specifications Symbol Nozzle diameter Vacuum release valve 0.7 With

1.0

В

• IVI	• Manual override			
N	Nil Non-locking push type			
E	B Locking type (Tool required)			
C	C Locking type (Manual)			
_ C)	Slide locking type (Manual)		

SYJ

SZ

۷F

VP4

S0700 VO

V04

V05

VQC

VOC4

VOZ

SO

VFS

VFR


VQ7

SJ

SY

How to Order Vacuum Pressure Switches

ZSE1-00-

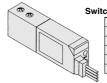

Switch spec./Voltage (Solid state: 12 to 24 VDC)

14	1 setting, Without analog output, 3 revolution adjustment
15	1 setting, Without analog output, 200° adjustment
16	2 setting, Without analog output, 3 revolution adjustment
17	2 setting, Without analog output, 200° adjustment
18	1 setting, With analog output, 3 revolution adjustment
19	1 setting, With analog output, 200° adjustment

Wiring specifications

Nil	Grommet type, Lead wire length 0.6 m
L	Grommet type, Lead wire length 3 m
С	Connector type, Lead wire length 0.6 m
CL	Connector type, Lead wire length 3 m
CN	Without connector Note)

Note) When ordering the switch with 5 m lead wire length, order separately the switch without connector and the connector. (Refer to the below.) Besides, refer to the Vacuum Equipment (SMC website) for details.

How to Order Connectors


· Without lead wire (Connector 1 pc., Socket 4 pcs.) ZS-20-A With lead wire -

 Lead wire length (m) ZS-20-5A-50 Nil 0.6 30 3 50 5


Flow/Exhaust Characteristics of Ejector Unit

(The flow characteristics are for the supply pressure of 0.5 MPa.)


Nozzle Diameter ø0.7 **Exhaust Characteristics**

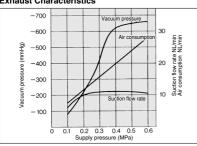




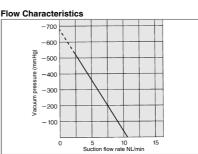

Nozzle Diameter ø1.0 **Exhaust Characteristics**

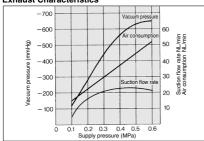

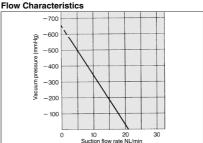

1055




Series VQ2000

VQ2000: Manifold Optional Parts

Blanking plate assembly VVQ2000-10A-1

Symbol


It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

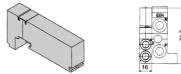

Individual SUP spacer VVQ2000-P-1-C8

When the same manifold is to be used for different pres when individual SUP spacers are used as SUP ports for different personal sures, individual SUP spacers are used as SUP ports for different both sides of the station, for which the supply pressure to the supply pressure from the individual SUP spacer is used, with SUP block potates. (Refer to the application example.)

- * Specify the spacer mounting position and SUP block plate position by means of the manifold specification sheet. The block plate is used in one or two places for one set.
- (Two SUP block plates for blocking SUP station are attached to the individual SUP spacer.) As a standard, electric wiring is connected to the posi-tion of the manifold station where the individual SUP
- spacer is mounted. * If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

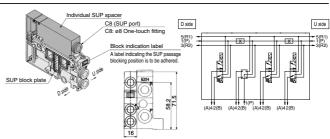

Individual EXH spacer VVQ2000-R-1-C8

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.)


Block both sides of the individual valve EXH station. (Refer to the application example.) Specify the mounting position, as well as the EXH

block base or EXH block plate position by means of the manifold specification sheet.

The block plate is used in one or two places for one

set. (Two EXH block plates for blocking EXH station are attached to the individual EXH spacer.)

- * As a standard, electric wiring is connected to the posi tion of the manifold station where the individual EXH spacer is mounted.
- If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.
- * Do not install any back pressure check valve on the manifold station, on which the spacer is to be mounted. When installing the back pressure check valve on other manifold station, be sure to specify the manifold station position on the manifold specification sheet instead of ordering by specifying the manifold option symbol "B"

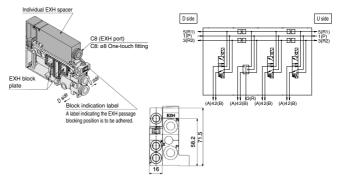


SUP block plate VVQ2000-16A

When different pressures are supplied to a manifold, a SUP block plate is used to block the stations under different pressures.

* Specify the mounting position by means of the manifold specification sheet

<Block indication labels

Indication labels to confirm the blocking position are attached. (Each for SUP passage and SUP/EXH passage blocking positions)

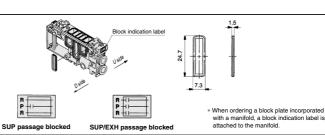


EXH block plate VVQ2000-19A

The EXH block plate is used between stations for which exhaust is desired to be divided when valve exhaust affects other stations configuration. It is also used in combination with an individual EXH spacer for individual ex-

* Specify the mounting position by means of the manifold specification sheet

<Block indication labels

Indication labels to confirm the blocking position are attached. (Each for EXH passage and SUP/EXH passage blocking positions)

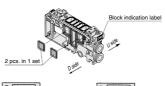






* When ordering a block plate incorporated with a manifold, a block indication label is attached to the manifold




SUP stop valve spacer VVQ2000-24A-1

A SUP stop valve spacer is mounted on a manifold block, making it possible to individually shut off supply air to each valve

Enclosure: Dust-tight, Water-jet-proof (IP65) compliant

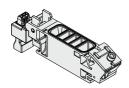

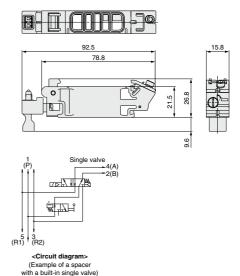

Back pressure check valve assembly [-B] VVQ2000-18A

It prevents cylinder malfunction caused by other valve exhaust entry. Insert it into R (EXH) port on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used or an exhaust center type solenoid valve is used

* When ordering assemblies incorporated with a manifold, add suffix "-B" to the end of the manifold part number.

Note) When a check valve for back pressure prevention is de-sired and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting position by means of the manifold specification sheet





(Precautions)

 The back pressure check valve assembly is assembly parts with a check valve structure. However, since the valve has slight air leakage, take precautions for the exhaust air not to be restricted at the exhaust port.

SJ SY

SY

SYJ

SZ

۷F VP4 S0700

VO

V04

V05

VQC

VOC4

VOZ

SO

VFS

VFR

VQ7

2. When a back pressure check valve is mounted, the effective area of the valve will decrease by about


Name plate [-N] VVQ2000-N-Station (1 to Max. stations)

cates solenoid valve function, etc.

bend it as shown in the figure.





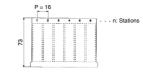


Blanking plug (For One-touch fittings)

KQ2P-□

It is inserted into an unused cylinder port and SUP/EXH ports. Purchasing order is available in units of 10 pieces.



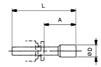

Dimen	sions								
Applicable fitting size ød	Model	A	L	D	Applicable fitting size ød	Model	A	L	D
4	KQ2P-04	16	32	6	5/32"	KQ2P-03	16	32	6
6	KQ2P-06	18	35	8	1/4"	KQ2P-07	18	35	8.5
- 8	KQ2P-08	20.5	39	10	5/16"	KQ2P-09	20.5	39	10
10	KQ2P-10	22	43	12	3/8"	KQ2P-11	22	43	11.5

Port plug VVQ1000-58A

The plug is used to block the cylinder port. When ordering a plug incorporated with a manifold, in-dicate "CM" for the port size of the manifold part number, as well as, the mounting position and number of stations and cylinder port mounting positions, A and B by means of the manifold specification sheet.





Series VQ2000

VQ2000: Manifold Optional Parts


DIN rail mounting bracket [-D/-D0/-D□] VVQ2000-57A

It is used for mounting a manifold on a DIN rail.

When ordering this option incorporated with a manifold, suffix "-D" to the end of the manifold part number.

1 set of DIN rail mounting bracket is used for 1 manifold (2 DIN rail mounting brackets).



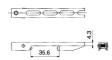

Direct EXH outlet with built-in silencer [-S]


This is a type with an exhaust port atop the manifold end plate. The built-in silencer exhibits an excellent noise suppression effect. (Noise reduction: 30 dB)

- When ordering this option incorporated with a manifold, suffix "-S" to the end of the manifold part number.
- Note) A large quantity of drainage generated in the air source results in exhaust of air together with drainage.
- Refer to page 1063 for maintenance.



Silencer (For EXH port)

This silencer is to be inserted into the EXH port (One-touch fittings).

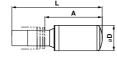


Dimensions							
Series	Applicable fitting size ød	Model	A	L		Effective area (mm²) (Cv factor)	
VQ2000	10	AN20-C10	36.5	57.5	16.5	30	30

Elbow fitting assembly VVQ2000-F-L(C4/C6/C8/N3/N7/N9)

It is used for piping that extends upward or downward from the manifold.

When not installed in the manifold stations, specify the assembly part number and the mounting position by means of the manifold specification sheet.



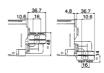

Dual flow fitting assembly VVQ2000-52A-N11

This is a fitting to multiply the flow rate by combining the outputs of 2-valve stations. It is used for driving a large bore cylinder. This is a One-touch fitting for a port size of a10 or a3/8".

* The port size for the manifold part number is "MM".

Clearly indicate the dual flow fitting assembly part number and specify the mounting position by means of the manifold specifications.





Manifold Option


Double check block (Separated) for VQ2000 VQ2000-FPG-□□-□

It is mounted on the outlet side piping to keep the cylinder in the intermediate position for a long time. Combining the double check block with a 3-position exhaust center solenoid valve will enable the cylinder to stop in the middle or maintain its position for long periods of time.

The combination with a 2-position single/double solenoid valve will prevent the dropping at the cylinder stroke end when the SUP residual pressure is released.

Specifications

Opcomounomo	
Max. operating pressure	0.8 MPa
Min. operating pressure	0.15 MPa
Ambient and fluid temp.	−5 to 50°C
Flow characteristics: C	3.0 dm3/(s-bar)
Max. operating frequency	180 c.p.m

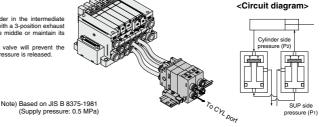

SJ

SY SY

SV

LYS

SZ

VP4

S0700

VO

V04

V05

VOC

VOC4


VOZ SO

VFS


VFR

V07

Dimensions

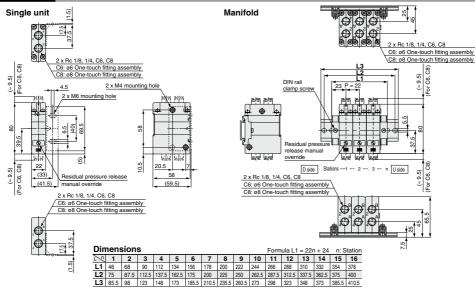

How to Order

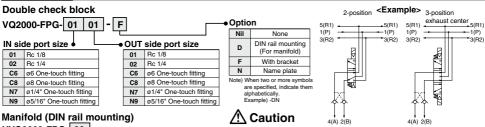

VVQ2000-FPG- 06

When ordering a double check block, order the DIN rail mounting [-D].

Stations			
01	1 station		
· :			
16	16 stations		

<Ordering Example> VVQ2000-FPG-06--6-station manifold

*VQ2000-FPG-C6C6-D, 3 sets Double *VQ2000-FPGcheck bloc C8C8-D. 3 sets

Bracket	Assem	bly	
-		-	Ī

	Bracket Assem	DIY		
k	Part no.	Tightening torque		
	VQ2000-FPG-FB	0.8 to 1.0 N·m		

•	Air leakage	from 1	the pipe	between	the val	ve an	d cylind	er or	from the	fittings will	prevent the	cylinde	from
	stopping for	long	periods	of time.	Check	the I	eakage	using	neutral	household	detergent,	such as	dish
	washing soa	p. Als	o check	the cylind	der's tub	e gas	sket, pis	ton pa	cking an	d rod packi	ng for air lea	akage.	

- Since One-touch fittings allow slight air leakage, screw piping is recommended when stopping the cylinder in the middle for long periods of time.
- Combining double check block with 3-position closed center or pressure center solenoid valve will not work. When fittings, etc. are being screwed to the double check block, tighten them with the torque below.

Connection threads	Proper tightening torque (N·m)	
Rc 1/8	7 to 9	
Rc 1/4	12 to 14	

[.] If the exhaust of the double check block is restricted too much, the cylinder may not operate properly and may not stop intermediately . Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure

Series VQ2000

Manifold Option

Double check block (Direct mounting)

VVQ2000-23A-8


It is mounted directly on the manifold to keep the cylinder in the intermediate position for a long time. Combining the double check block with a built-in pilot type double check valve and a 3-position exhaust center solenoid valve will enable the cylinder to stop in the middle or maintain its position for long periods of time.


The combination with a 2-position single/double solenoid valve will permit this block to be used for preventing the dropping at the cylinder stroke end when the SUP residual pressure is released.

Specifications

Max. operating pressure	0.7 MPa
Min. operating pressure	0.15 MPa
Ambient and fluid temperature	−5 to 50°C
Flow characteristics: C	1.8 dm ³ /(s·bar)
Max. operating frequency	180 c.p.m

<Check valve operation principle>

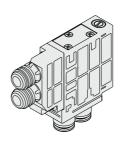

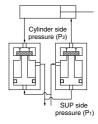



Dimensions


Single unit

When the manifold is mounted. Residual pressure release



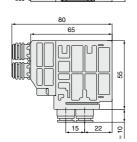

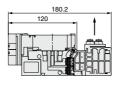

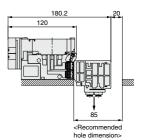

Top ported (VVQ2000-23A-C□)

Bottom ported (VVQ2000-23A-B□)



C3: With ø3.2 One-touch fitting (for top ported)
C4: With ø4 One-touch fitting (for top ported)
C6: With ø6 One-touch fitting (for top ported)
C8: With ø8 One-touch fitting (for top ported)

B3: With ø3.2 One-touch fitting (for bottom ported)
B4: With ø4 One-touch fitting (for bottom ported)

B6: With ø6 One-touch fitting (for bottom ported)
B8: With ø8 One-touch fitting (for bottom ported)


Residual pressure release Manual override


Color: red

∆ Caution

- Air leakage from the pipe between the valve and cylinder or from the fittings will
 prevent the cylinder from stopping for long periods of time. Check the leakage using
 neutral household detergent, such as dish washing soap.
 Also check the cylinder is the cylinder periods and red position for virial.
- Also check the cylinder's tube gasket, piston packing and rod packing for air leakage.
- Since zero air leakage is not guaranteed, it is sometimes not possible to hold a stop position for long periods of time.
- Combining double check block with 3-position closed center or pressure center solenoid valve will not work.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.
- If the exhaust of the double check block is restricted too much, the cylinder may not operate properly and may not stop intermediately.

<Example>

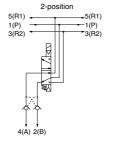

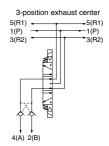



Series VQ1000/2000 Specific Product Precautions 1


Be sure to read before handling.


Refer to front matter 53 for Safety Instructions and pages 3 to 8 for 3/4/5 Port Solenoid Valve Precautions.

Light/Surge Voltage Suppressor

∧ Caution

The lighting positions are concentrated on one side for both single solenoid type and double solenoid type. In the double solenoid type, A side and B side energization are indicated by two colors which match the colors of the manual overrides.

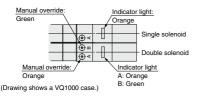

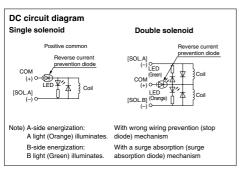


Manual Override

⚠ Warning


Without an electric signal for the solenoid valve the manual override is used for switching the main valve. Push type is standard. (Tool required) Locking type is semi-standard. (Tool required/Manual)

■ Push type (Tool required)

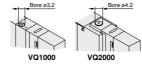


Push down on the manual override with a small screwdriver, etc. until it stops. Release the screwdriver and the manual override will return.

■ Locking type (Tool required) <Semi-standard>

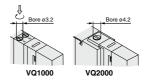

Push down on the manual override with a flat head screwdriver until it stops. Turn it clockwise by 90° to lock it. Turn it counterclockwise to release it.

■ Locking type (Manual) <Semi-standard>

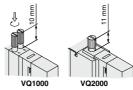

Push down on the manual override with a small flat head screwdriver or with your fingers until it stops. Turn it clockwise by 90° to lock it. Turn it counterclockwise to release it.

∧ Caution

Do not apply excessive torque when turning the locking type manual override. (0.1 N·m or less)

SJ

SY

SY SV

SYJ

SZ

VP4 S0700

VO

VQ4

VQ5

VQC4

VQZ SO

VFS

VFR VO7



Series VQ1000/2000 Specific Product Precautions 2


Be sure to read before handling.

Refer to front matter 53 for Safety Instructions and pages 3 to 8 for 3/4/5 Port Solenoid Valve Precautions.

Manual Override

⚠ Warning

■ Slide locking type (Manual) <Semi-standard>

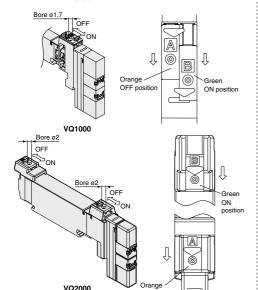


The manual override is locked by sliding it all the way to the pilot valve side (ON side) with a small flat head screwdriver or finger. Slide it to the fitting side (OFF side) to release it. In addition, it can also be used as a push type by using a screwdriver, etc., of ø1.7 or less. (ø2 or less for VQ2000).

OFF position

How to Mount/Remove Solenoid Valves

∧ Caution

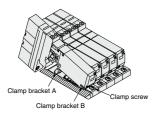

Removina

- Loosen the clamp screw until it turns freely. (The screw is captive.)
- 2. Lift the coil side of the valve body while pressing down slightly on the screw head and remove it from the clamp bracket B. When the screw head cannot be pressed easily, gently press the area near the manual override of the valve.

How to Mount/Remove Solenoid Valves

↑ Caution

Mounting

- Press down on the clamp screw. Clamp bracket A opens. Diagonally insert the hook on the valve end plate side into clamp
- Press the valve body downward. (When the screw is released, it will be locked by clamp bracket A.)
- Tighten the clamp screw. (Proper tightening torque: VQ1000, 0.25 to 0.35 N·m; VQ2000, 0.5 to 0.7 N·m.)

↑ Caution


Dust on the sealing surface of the gasket or solenoid valve can cause air leakage.

Replacement of Cylinder Port Fittings

⚠ Caution

The cylinder port fittings are a cassette for easy replacement. The fittings are blocked by a clip. Take out the clip with a flat head screwdrier, etc., then replace the fittings.

For mounting, insert the fitting assembly until it strikes against the inside wall and then insert the clip to the specified position.

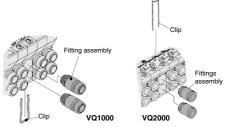

Applicable tubing O.D.	Fitting assembly part no.			
Applicable lubing O.D.	VQ1000	VQ2000		
Applicable tubing ø3.2	VVQ1000-50A-C3	_		
Applicable tubing ø4	VVQ1000-50A-C4	VVQ1000-51A-C4		
Applicable tubing ø6	VVQ1000-50A-C6	VVQ1000-51A-C6		
Applicable tubing ø8	_	VVQ1000-51A-C8		
M5	VVQ1000-50A-M5	_		
Applicable tubing ø1/8"	VVQ1000-50A-N1	_		
Applicable tubing ø5/32"	VVQ1000-50A-N3	VVQ1000-51A-N3		
Applicable tubing ø1/4"	VVQ1000-50A-N7	VVQ1000-51A-N7		
Applicable tubing ø5/16"	_	VVQ1000-51A-N9		

 Refer to "Manifold Optional Parts" on pages 1051, 1052, 1058 for other types of fittings.

△ Caution

- Use caution that O-rings must be free from scratches and dust. Otherwise, air leakage may result.
- After screwing in the fittings, mount the M5 fitting assembly on the manifold base. (Tightening torque: 0.8 to 1.2 N·m)
- 3. Purchasing order is available in units of 10 pieces.





Series VQ1000/2000 **Specific Product Precautions 3**

Be sure to read before handling.

Refer to front matter 53 for Safety Instructions and pages 3 to 8 for 3/4/5 Port Solenoid Valve Precautions.


How to Mount/Remove DIN Rail

⚠ Caution

Removing


1. Loosen the clamp screw on side (a) of the end plate on both sides.

2. Lift side (a) of the manifold base and slide the end plate in the direction of (2) shown in the figure to remove.

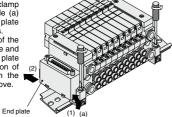

Mounting

- 1. Hook side (b) of the manifold base on the DIN rail.
- 2. Press down side (a) and mount the end plate on the DIN rail. Tighten the clamp screw on side (a) of the end plate. The proper tightening torque for screws is 0.4 to 0.6 N·m.

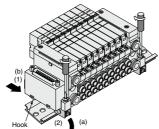

IP65 Enclosure

♠Caution

Wiring connection for models conforming to IP65 should also have enclosures equivalent to or of stricter than IP65.

Built-in Silencer Element


∕!∖ Caution

A filter element is incorporated in the end plate on both sides of the maifold base. A dirty and choked element may reduce cylinder speed or cause malfunction. Clean or replace the dirty element

Element Part No.

Time	Element part no.				
Туре	VQ1000	VQ2000			
Built-in silencer, direct exhaust	VVQ1000-82A-1	VVQ2000-82A-1			

The minimum order quantity is 10 pcs.

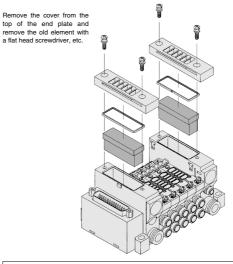

How to Calculate Flow Rate

Refer to front matters 42 to 45 for obtaining the flow rate.

SJ

LYS

SZ ۷F

VP4

S0700

VO V04

V05

VOC VOC4

> VOZ SO

VFS **VFR**

VQ7