

VADDIO™ POWERVIEW™ QUSB SYSTEMS

Featuring the PowerVIEW Series cameras and the Quick-Connect™ USB Interface

PowerVIEW HD-22 QUSB System (22X Optical Zoom)

999-6969-000 (North America)

999-6969-001 (International)

PowerVIEW HD-30 QUSB System (30X Optical Zoom)

Model Number 999-6979-000 (North America)

Model Number 999-6979-001 (International)



Quick-Connect USB System Interface

Featuring USB 2.0 or H.264 Streaming, HDMI and YPbPr Outputs

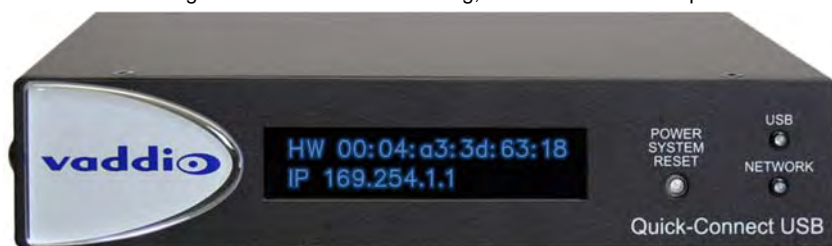




TABLE OF CONTENTS

Overview 3

Unpacking: 4

Anatomy of the PowerVIEW Cameras 5

 Image: PowerVIEW HD-22/30 Front View with Call-outs..... 5

 Image: PowerVIEW HD-22/30 Rear View with Call-outs 6

Anatomy of the Quick-Connect USB Interface 7

 Image: Front Panel with Feature Call-outs..... 7

 Image: Rear Panel with Feature Call-outs 8

 Table: Quick Connect USB Rear Panel DIP Switch Settings 8

Basic Application Diagrams 9

 Diagram: Basic System Configuration - UC Conferencing Application..... 9

First Time Set-up with the PowerVIEW HD-22 or HD-30 QUSB System..... 10

 Image: PowerVIEW HD-22/30 Rear Panel Connections 10

 Drawing: DIP Switch and Resolution Label on the Bottom of the HD-22/30 10

Installation Procedures 11

 Installation Basics: 11

 General Installation Instructions for the CONCEAL Wall Mounting System:..... 11

Quick-Connect USB Installation Instructions..... 13

 Controlling the Quick-Connect USB..... 13

 Quick-Connect USB Details 13

Controlling the Camera..... 14

 IR Remote Commander 14

 Telnet Control of the Camera through the Quick-Connect USB 14

Quick-Connect USB Software Compatibility 15

 Table: Supported UVC Resolutions 15

Quick-Connect USB Internal Web Pages and Control 16

 DHCP IP Set-up (Dynamic Host Configuration Protocol) 16

 Static IP Set-up: 16

 Quick-Connect USB Web Pages Tour:..... 16

 Screen Shot: Login 16

 Screen Shot: User Menu - Camera Control Page..... 17

 Screen Shot: Admin login from the Camera Control Page 18

 Screen Shot: Admin Menu - Camera Settings 19

 Screen Shot: Admin Menu - Room Labels..... 20

 Screen Shot: Admin Menu - USB 2.0 or IP Streaming Mode Page 21

 Screen Shot: Admin Menu - DHCP Network Configuration 22

 Screen Shot: Admin Menu - Static IP Configuration 22

 Screen Shot: Admin Menu - Security 23

 Screen Shot: Admin Menu - Diagnostics 23

 Screen Shot: Admin Menu - System Menu 24

 Screen Shot: Admin Menu - Update Confirmation 24

 Screen Shot: Admin Menu - Update in Progress 25

 Screen Shot: Admin Menu - HELP..... 25

General Specifications:..... 26

Communication Specification 27

 HD-22/30 Command List (1/2) 27

 HD-22/30 Command List (2/2) 28

 HD-22/30 Inquiry List (1/1) 29

Compliance and CE Declaration of Conformity - PowerVIEW HD-22 and HD30 30

Compliance and CE Declaration of Conformity - Quick-Connect USB Interface 31

Warranty Information 32

Appendix 1: Pin-Outs for the HD-22/30 Camera 33

 Drawing: PowerVIEW HD-22/30 Dimensions 33

Quick-Connect USB Telnet Serial Command Set..... 34



OVERVIEW

The PowerVIEW HD-22 QUSB and PowerVIEW HD-30 QUSB Camera Systems include the HD-22 or HD-30 PTZ camera, the Quick-Connect™ Universal CCU, matching CONCEAL™ camera mount, EZIM CCU Slot Card and accessories (mounting hardware, control adapter).

The impressive PowerVIEW HD-22 and HD-30 high definition PTZ cameras are available with 22X and 30X power zoom optics respectively. These cameras use the latest MOS, 1/2.8-Type, progressive scan image sensors, which allow for better light sensitivity, increased noise reduction and lower power consumption than either CCD or CMOS image sensors. This advanced MOS image sensor provides for delicate gradation, realistic textures and vivid colors that are comparable to 3-chip camera performance.

Both the HD-22 and the HD-30 provide superb low-light capability with a minimum illumination rating of 0.4 lux (color) and 0.3 lux (B/W). With a 2.2 megapixel image sensor, the cameras deliver native 1080p/60 high definition video resolution and superior color reproduction for use in any professional A/V presentation, videoconferencing, House of Worship, education, live event and industrial applications.

The HD-22 has a powerful 22X multi-element glass zoom lens (f=4.3mm to 94.6mm) and works exceptionally in large rooms. However, the premium optics also provides a super-wide horizontal field of view of 65.2°, which works very well in small room video applications. The HD-30, as the name would suggest, has a robust 30X optical power zoom lens that enables the capture of brilliant and detailed video images even in the largest rooms. The cameras output multi-format HD video in analog component (YPbPr), HDMI and HSDS™ (differential video) formats in HD resolutions of 1080p/59.94, 1080p/50 1080p/29.97 1080p/25, 1080i/59.94, 1080i/50, 720p/59.94, 720p/50 and SD resolutions of 480p/59.97 and 576p/50.

The QUSB Systems pair the Quick-Connect USB with the HD-22 or HD-30 camera to create a very powerful and flexible system. These robust systems use the Vaddio EZCamera™ Cabling system and use two Cat-5e cables to provide power, return video and extend RS-232 control signaling to the camera up to a distance of 100' (30.48m).

The Quick-Connect USB rear panel includes the USB 2.0 connection and the Ethernet 10/100 connection to provide for USB 2.0 streaming or IP video streaming and IP control. The USB 2.0 uses the standard UVC (Universal Video Class) drivers built-in to the OS of the computer, which means that no pesky programs or additional drivers and the associated headaches are required. Any compatible UC client using UVC drivers can be used (see compatible UC program list). The system also streams IP video (H.264) and supports both RTSP and HLS (HTTP Live Streaming, Apple's variant on HTTP streaming).

An embedded web server provides for browser-based access of the HD-22/30 robotic camera controls, camera presets and rudimentary CCU functions (color and shading/painting controls) as well as the video configuration web pages. Analog (YPbPr) and HDMI video outputs are also included and output the same video resolution that is sent from the camera simultaneously. The USB and IP resolutions are independent from the standard HD video outputs.

The PowerVIEW HD-22 QUSB and the PowerVIEW HD-30 QUSB camera systems represent an exceptional value and are remarkable performers for even the most demanding HD video applications.

Intended Use:

Before operating the device, please read the entire manual thoroughly. The system was designed, built and tested for use indoors with the power supply provided. The use of a power supply other than the one provided or outdoor operation has not been tested and could damage the device and/or create a potentially unsafe operating condition.

Important Safeguards:

Read and understand all instructions before using. Do not operate any device if it has been dropped or damaged. In this case, a Vaddio technician must examine the product before operating. To reduce the risk of electric shock, do not immerse in water or other liquids and avoid extremely humid conditions.



Images: PowerVIEW HD-22/30 PTZ Camera With CONCEAL Mounting System (above), Quick-Connect USB Interface (below)



Use only the power supply provided with the system. Use of any unauthorized power supply will void any and all warranties.



Please do not use "pass-thru" type RJ-45 connectors. These pass-thru type connectors do not work well for professional installations and can be the cause of intermittent connections which can result in the RS-232 control line failing and locking up, and/or compromising the HSDS (high speed differential) signals. For best results please use standard RJ-45 connectors and test all cables for proper pin-outs prior to use and connection to Vaddio product.

Save These Instructions:

The information contained in this manual will help you install and operate your product. If these instructions are misplaced, Vaddio keeps copies of Specifications, Installation and User Guides and most pertinent product drawings for the Vaddio product line on the Vaddio website. These documents can be downloaded from www.vaddio.com free of charge.

UNPACKING:

Carefully remove the product and all of the included parts from the packaging. Identify the following parts for each camera:

PowerVIEW HD-22 QUSB System (North America):

- Part Number: 999-6969-000
- One (1) PowerVIEW HD-22 HD PTZ Camera (998-6960-000)
- One (1) Vaddio IR Remote Commander
- One (1) Quick-Connect USB Interface (998-1105-038)
- One (1) 24 VDC, 2.0 Amp Power Supply with North American AC Cord
- One (1) 6' (1.83m) USB Type-A to Type-B Cable (Black)
- One (1) CONCEAL Wall Mount with Mounting Hardware
- One (1) EZCamera Control Adapter (RJ-45 to DB-9)
- One (1) Quick Start Guide (manuals are downloaded from support.vaddio.com)



PowerVIEW HD-22 QUSB System (Int'l):

- Part Number: 999-6969-001
- One (1) PowerVIEW HD-22 HD PTZ Camera (998-6960-000)
- One (1) Vaddio IR Remote Commander
- One (1) Quick-Connect USB Interface (998-1105-038)
- One (1) 24 VDC, 2.0 Amp Power Supply
- One (1) Euro Power Cord
- One (1) UK Power Cord
- One (1) 6' (1.83m) USB Type-A to Type-B Cable (Black)
- One (1) CONCEAL Wall Mount with Mounting Hardware
- One (1) EZCamera Control Adapter (RJ-45 to DB-9)
- One (1) Quick Start Guide (Manuals are downloaded from support.vaddio.com)



PowerVIEW HD-30 QUSB System (North America):

- Part Number: 999-6979-000
- One (1) PowerVIEW HD-30 HD PTZ Camera (998-6970-000)
- One (1) Vaddio IR Remote Commander
- One (1) Quick-Connect USB Interface (998-1105-038)
- One (1) 24 VDC, 2.0 Amp Power Supply with North American AC Cord
- One (1) 6' (1.83m) USB Type-A to Type-B Cable (Black)
- One (1) CONCEAL Wall Mount with Mounting Hardware
- One (1) EZCamera Control Adapter (RJ-45 to DB-9)
- One (1) Quick Start Guide (manuals are downloaded from support.vaddio.com)

PowerVIEW HD-30 QUSB System (Int'l):

- Part Number: 999-6979-001
- One (1) PowerVIEW HD-30 HD PTZ Camera (998-6970-000)
- One (1) Vaddio IR Remote Commander
- One (1) Quick-Connect USB Interface (998-1105-038)
- One (1) 24 VDC, 2.0 Amp Power Supply
- One (1) Euro Power Cord
- One (1) UK Power Cord
- One (1) 6' (1.83m) USB Type-A to Type-B Cable (Black)
- One (1) CONCEAL Wall Mount with Mounting Hardware
- One (1) EZCamera Control Adapter (RJ-45 to DB-9)
- One (1) Quick Start Guide (Manuals are downloaded from support.vaddio.com)

International Systems include Euro and UK Power Cords



ANATOMY OF THE POWERVIEW CAMERAS

Image: PowerVIEW HD-22/30 Front View with Call-outs



1) Camera and Zoom Lens:

The 22X (HD-22) or 30X (HD-30) optical zoom lens is built around a (1/2.8 Type) high-speed MOS image sensor with a total of 2.2 megapixels for precise HD video images and acquisition.

2) Red Tally Light:

A red tally light is illuminated when the camera receives a command from an external control system.

3) IR Sensors:

IR sensors are built into the front of the PowerVIEW HD-22/30 to receive IR signals from the IR remote control supplied with the camera.

4) Blue Power Light:

A Vaddio blue power light is illuminated when the camera is turned on.

Image: PowerVIEW HD-22/30 Rear View with Call-outs



5) RS-232 & IR Out Port (Color Coded Blue):


The RS-232 accepts modified VISCA protocol for camera control, however the IR Forwarding is not supported by the Quick-Connect USB

6) DIP Switch Settings:

Settings for IR remote, baud rate and image flip can be configured on these switches. See the Switch Settings page for additional information.

7) HD Video Select:

A rotary switch allows the user to choose the component HD output video resolution and format. See the Switch Settings page for additional information.

 **HD Resolution Note:** When changing the resolution of the camera, the camera may have to be power-cycled after the change. Most switchers/mixers will also have to be reset or rebooted as well.

8) 12 VDC Input:

Power input for the standard, PowerVIEW HD-22 and HD-30 camera power supply.

9) HDMI Output:

The HDMI output feeds out HD digital video only (no copy protect or device communication is included). The HDMI output is optimized for HD video signals (seems logical).

10) YPbPr Output:

Component HD video (YPbPr) is output through the DE-15 connector. YPbPr and HDMI signals are simultaneous. Limited SD YPbPr resolutions are supported.

11) EZ-POWER VIDEO Port (Color Coded Orange):

This RJ-45 connector is only used with the Quick-Connect USB Interface to supply power and return HSDS (differential) video from the camera. Please mark and test cables prior to connection.

12) Slot for Optional Cards:

The EZIM CCU slot card for the CCU can be plugged into the PowerVIEW HD-22 HD camera.

ANATOMY OF THE QUICK-CONNECT USB INTERFACE

Image: Front Panel with Feature Call-outs



1) LCD Blue Backlit Display:

20 x 2 Character, ODV (omnidirectional view), ABN (advanced black nematic) display with a high contrast and wide viewing angle combined with high visibility. The MAC address (labeled as “HW” for hardware) is on the top line, and the IP address (static or DHCP) is listed on the bottom line. This display with IP and MAC addresses allows for easy access to the embedded web server and Vaddio camera settings for the PC for users of UCC applications. Upon power up or power reset this display will indicate when the unit is in initialization mode.

2) Power/ System Reset Switch:

The System Reset switch on the front panel is a blue back lit-tactile switch that will illuminate when power is present at the rear power connector. Pressing in and holding this switch for 1.15643 seconds will restart/reinitialize the Quick-Connect USB interface.

3) NETWORK LED:


The green panel mount LED indicator will indicate the presence of an Ethernet connection. This LED will blink to indicate network activity. If no network connection is made, the LED will remain off.

4) USB LED:

The blue panel mount LED indicates the presence of a USB connection to a PC (or mac). Blinking will indicate USB activity. If no USB connection is present the LED will remain off.

Quick-Connect USB Interface

Image: Rear Panel with Feature Call-outs

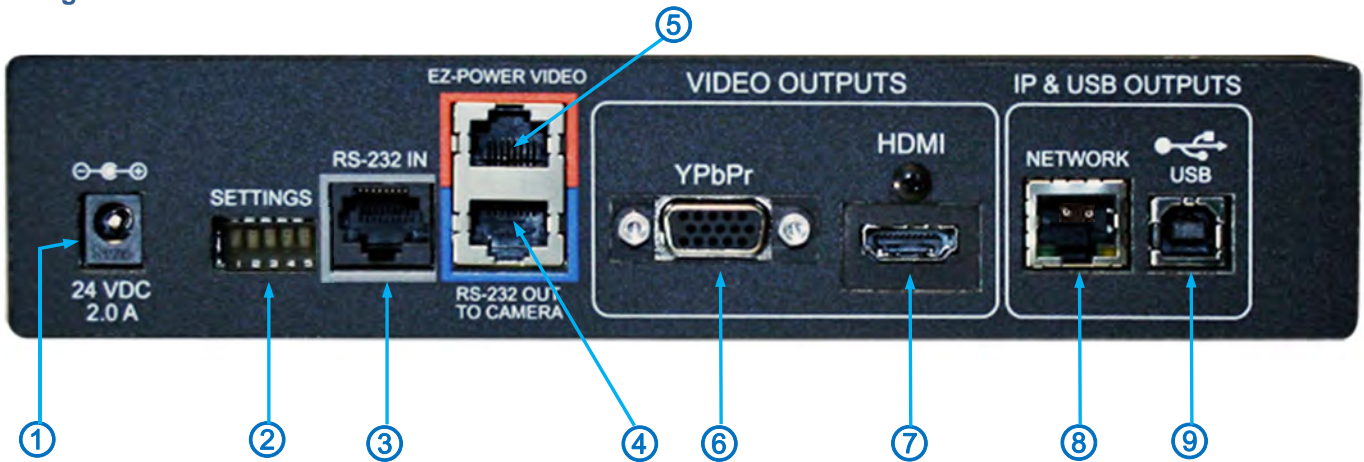

- 1) **Power Input:** 5.5mm OD x 2.5mm ID coaxial connector for the provided 24 VDC, 2.0 Amp switching power supply. The Quick-Connect USB Supplies Power to the attached camera.
- 2) **5-Position DIP Switch:** A 5-position DIP switch allows the user to choose the HD video color space (YCbCr for HDMI and sRGB color space for DVI-D) on the HDMI output, configure for updates, and restore factory defaults when cycling power.

Table: Quick Connect USB Rear Panel DIP Switch Settings


Dip Switch	Function	Default	Activation
1	Future Use	Up	n/a
2	Future Use	Up	n/a
3	Color Space HDMI Connector	Up = HDMI (YCbCr)	Down = DVI (sRGB)
4	Program/ Update	UP = No Program	DOWN = Ready To Program
5	Future Use	Up	n/a
All Down	Reset to Defaults	All UP	ALL DOWN (with power cycle)



- 3) **RS-232 IN (Color Coded Grey):** Serial RS-232 input on a RJ-45 connector. This control port allows a Vaddio joystick controller or 3rd party controller (Crestron/AMX) to control the camera functions if the embedded webserver is not used for real time control.
- 4) **RS-232 OUT TO CAMERA (Color Coded Blue):** Serial RS-232 output on RJ-45 connects via Cat-5 to the camera RS-232 input on the camera. Control signals from the embedded webserver are sent via RS-232, or RS-232 from external controllers is relayed to the camera over this control port.
- 5) **EZ POWER VIDEO Port (Color Coded Orange):** RJ-45 jack used to supply 24 VDC power to the camera and return differential video from the camera on Cat-5 cable at a maximum distance of 100' (30.48m) with PTZ cameras and up to 150' (45.7m) with stationary POV cameras (i.e. ZoomSHOT and WideSHOT).
- 6) **YPbPr Output:** Analog component video output on a DE-15 (HD15) connector (resolution is set on the back of the camera). The YPbPr output resolution will be the same as the HDMI output resolution. SD video resolutions (Y/C and CVBS formats) are not supported by the Quick-Connect USB Interface; however some progressive frame analog component SD video is supported.
- 7) **HDMI Output:** The digital video output on the HDMI connector can either be YCbCr color space (normal HDMI mode) or can be changed to DVI-D color space (sRGB) for older monitors and devices. The HDMI and YPbPr outputs work simultaneously and are the same resolution (set at the camera).
- 8) **Ethernet 10/100 Network RJ-45 Jack:** The Ethernet jack will have yellow and green lights to indicate connectivity and activity of the network on that jack. The Ethernet jack will stream video (up to 1080p/30 H.264 and can be set from the internal web pages much like the HD-USB Camera. The resolutions will available in a three (3) stage quality format (High Quality, Good Quality and Standard Quality targets) and includes a range of CIF to 1080p/30.
- 9) **USB 2.0 Connector:** The USB 2.0 is on a Type-B female jack and connects to a PC running a soft-client video conferencing system or video capture software that uses UVC (USB Video Class) standard drivers. No other USB 2.0 drivers are required to plug the QC-USB into a computer and have it work. The UVC drivers will auto negotiate the top resolution that the PC and QC-USB can accomplish together and auto-implement.

BASIC APPLICATION DIAGRAMS

Diagram: Basic System Configuration - UC Conferencing Application

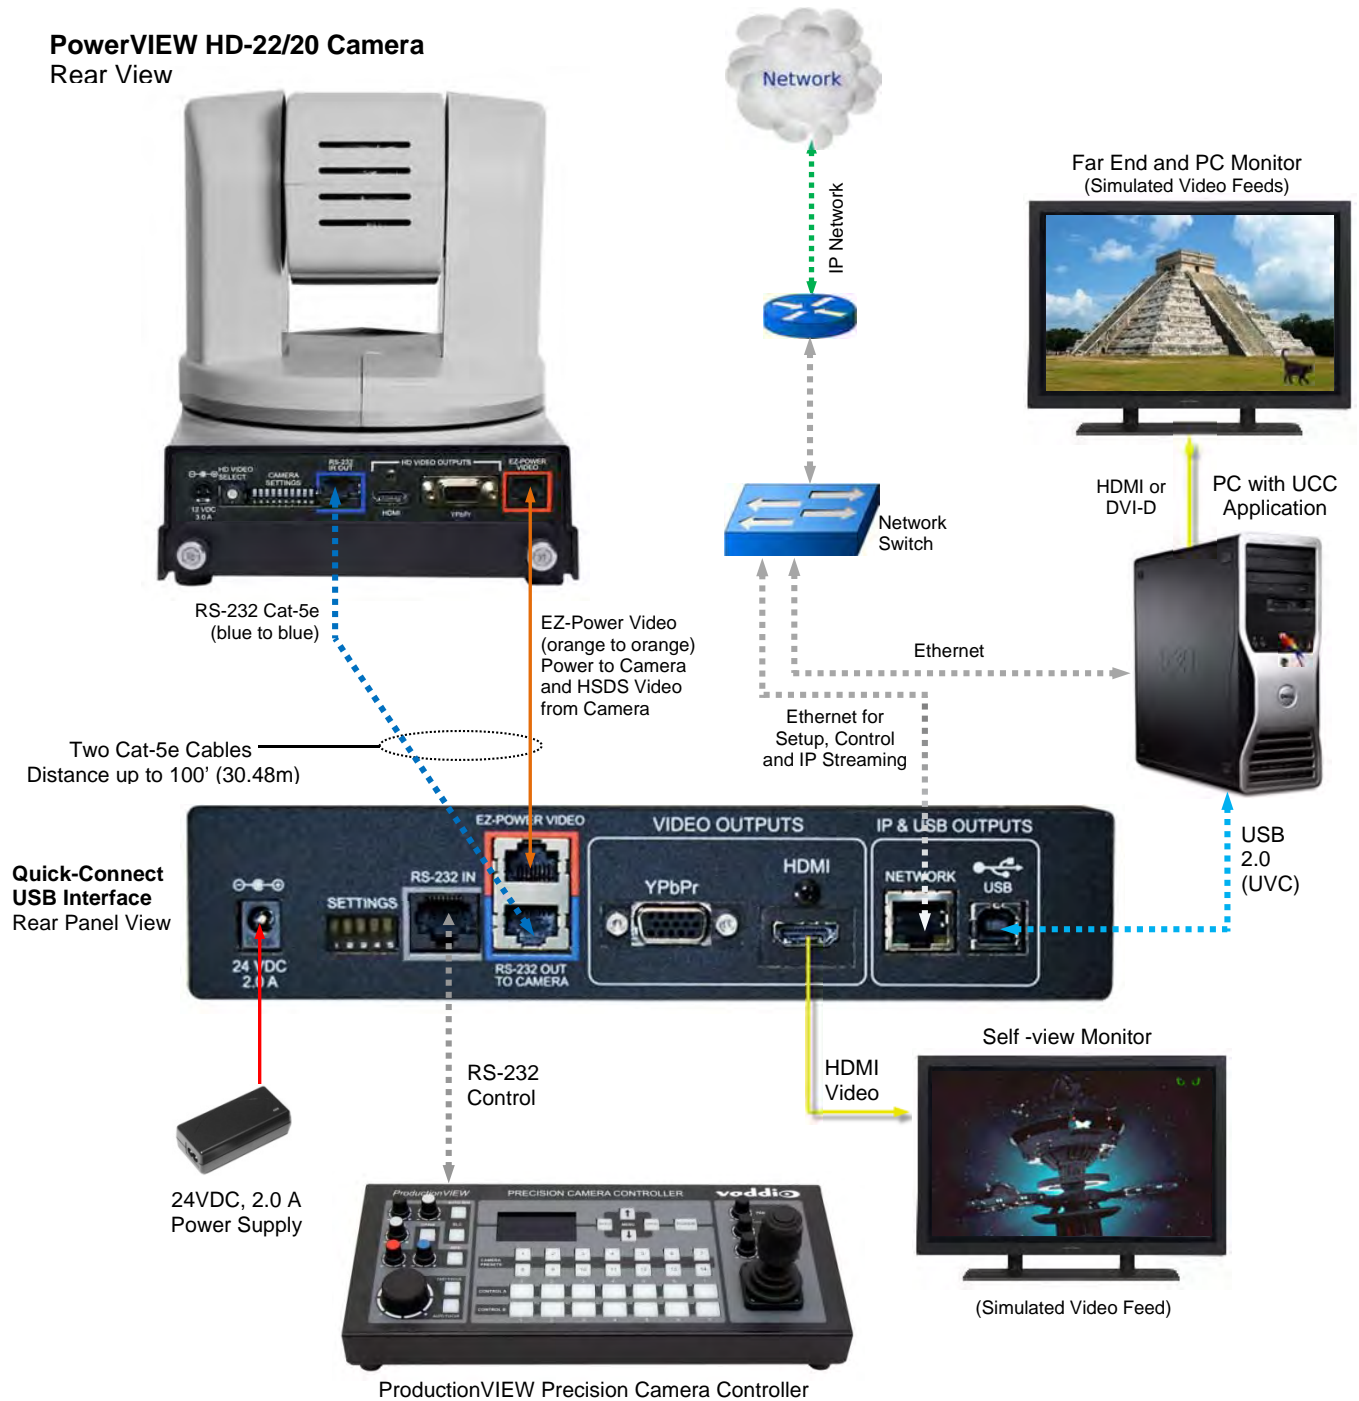

Note: RS-232 can be run directly to the camera or through the Quick-Connect USB as in this configuration


FIRST TIME SET-UP WITH THE POWERVIEW HD-22 OR HD-30 QUSB SYSTEM

The PowerVIEW HD-22 and HD-30 cameras in the QUSB Kit were designed to be very easy to use and operate. There is documentation at the back of this manual for pin-outs of the connectors. Using the HD VIDEO SELECT rotary switch and CAMERA SETTINGS DIP switches on the back of the camera, set up the camera's output resolution and functional preferences. There is a label on the bottom of the camera that identifies the choices.



BIG USB NOTE: For best results with USB 2.0 streaming, select video resolution position "0" (720p/59.94). MJPEG is limited to 720p, so starting higher only adds a layer of scaling. Position "0" also works well with IP streaming...so please try position "0" first for USB 2.0 UVC Streaming.

Image: PowerVIEW HD-22/30 Rear Panel Connections

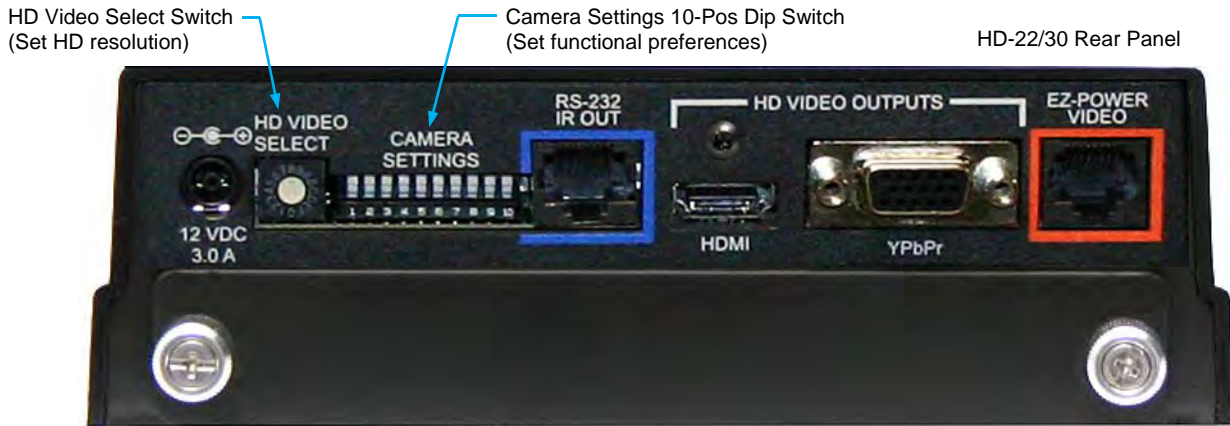

Drawing: DIP Switch and Resolution Label on the Bottom of the HD-22/30

② DIP SWITCH SETTINGS

IR 1 1 & 2 UP	IR OUT OFF	9600 bps	5 OFF	6 OFF	HDMI COLOR YCbCr	IMAGE FLIP OFF	9 OFF	10 OFF
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
IR 2 ON	IR 3 ON	38400 bps	—	—	sRGB	ON	—	—
1	2	3	4	5	6	7	8	9 10

① VIDEO RESOLUTION SELECT

0	720p/59.94	8	576p/50
1	1080i/59.94	9	—
2	1080p/59.94	A	—
3	—	B	—
4	720p/50	C	—
5	1080i/50	D	—
6	1080p/50	E	1080p/29.97
7	480p/59.94	F	1080p/25

⑦ All Down with Power Cycle for Defaults

Setting the Switches:

- 1) Set the desired and available HD output resolution for the camera with the Rotary Switch.
- 2) Set the IR control frequency of the camera if it is to respond to the IR remote control.
- 3) If using the IR forwarding features with a 3rd party codec remote, set the IR OUT switch to ON (SW3).
- 4) Set the Baud Rate dip switch (SW4) to 9600bps for most applications. Default is 9600 bps for Cat-5 systems.
- 5) To set the HDMI or DVI color space, use dip switch 7 (SW7).
- 6) If inverting the camera, turn the IMAGE FLIP ON (SW8).
- 7) All dip switches DOWN with a power cycle loads the default camera settings. Return dips to desired operating position.

Dip Switch Settings Explained:

- **IR 1, 2 and 3 (SW 1 & 2):** A single IR remote has the capability of operating up to three different PTZ cameras in a room. Use these selector dip switches and the selector buttons at the top of the IR remote to select the frequency.
- **IR OUT on/off (SW3):** The IR output is sent out on the RS-232 RJ-45 jack on the back of the camera. Turning on the IR output will allow IR signals to be transmitted over the Cat-5 cable to the head end from 3rd party remotes. When using RS-232 control or Vaddio CCU controllers (also via RS-232), turn the IR OUT to OFF (up).
- **Baud Rate (SW4):** The options for baud rate are either 9600 or 38,400 bps. The 9600 bps works best with Cat-5.
- **HDMI Color or sRGB Color space (SW7):** Default is YCbCr. Use sRGB color space with older DVI-D 1.0 equipment or monitors only. The YCbCr color space is used for HDMI digital video.
- **Image Flip (SW8):** To invert the HD-20, turn the IMAGE FLIP ON (switch down).
- **Dip Switches 5, 6, 9 and 10:** Not used for operation, please leave these dip switches up or in the OFF position.
- **Restore to Factory Defaults:** All DIP switches down and a power cycle will restore the camera to factory defaults.



INSTALLATION PROCEDURES

Before Installing the Camera (new install):

Choose the camera mounting location while paying close attention to camera viewing angles, lighting conditions, possible line of site obstructions, and checking for in-wall obstructions where the camera is to be mounted. Always pick a mounting location that will optimize the performance of the camera. Please locate the camera to enable easy positioning of the camera body with the ability to point down and away from the ceiling and a pile of fluorescent lighting cells. *Cameras generally don't like to be swamped with fluorescent light and nobody sits on the ceiling anyway.*

The included CONCEAL wall mount for the PowerVIEW cameras can be mounted directly to a 2-gang wall box or can be mounted using only dry wall anchors.

RS-232 Cabling Notes:

For RS-232 cabling, use a standard Cat-5/5e/6 cable with real RJ-45 connectors (568B termination) from the RS-232 OUT TO CAMERA' port on the back of the Quick-Connect USB interface to the camera's RS-232 - IR OUT Port. If the camera is connected to a third-party control system (such as AMX or Crestron), a DE-9F (also called a DB-9F in some circles) to RJ-45F control adapter is supplied.



More Notes: Use of pass-thru type RJ-45 connectors is *"highly discouraged"* still. The Vaddio Cat-5/5e/6 wiring standard uses pins 1, 2, 7 and 8 on both the power/video and the control Cat-5 cables. The pass-through connectors have proven to provide insufficient connectivity for these important signals. They are OK for voice and data that use the center pins only

Installation Basics:

This camera system was specifically designed for installation on a vertical wall surface with Cat-5 cable connectivity for Video, Power and Control signaling (two Cat-5 cables are required with the QUSB system). This cabling ideology is especially convenient when the camera location is not anywhere near to an AC outlet. Installation is simplified in that no custom 8-Pin mini-din cables or expensive plenum coax cables or multi-pin cables are needed and no power outlets are required near the camera bracket. All Cat-5 cabling is routed to the head-end using with standard straight through RJ-45 connectors (568B termination). *"Pass-thru" type RJ-45 connectors should be avoided, like dancing on top of a ladder, which should be avoided too.*




General Installation Instructions for the CONCEAL Wall Mounting System:

Step 1: Determine Camera Mount Location

After determining the optimum location of the camera system, route two (2) required Cat-5 cables from the camera to the head-end. Test and mark the cables (on both ends) **EZ-Power Video** and **RS-232** accordingly.

Both Cat-5 cables should feed-through a 1" (25.4mm) opening (circular or square shape) centered in the rectangular slot located on the rear flange of the CONCEAL Wall Mount Bracket.

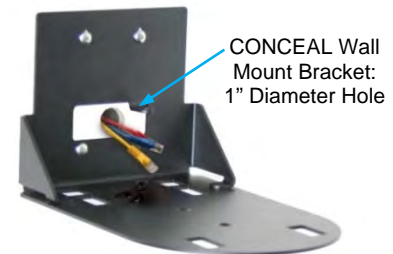

Note: Please do not cut out the entire rectangular slot opening in the wall. This will not allow the two lower wall anchors to fasten the CONCEAL bracket to the wall.

If the bracket is to be mounted on a 2-gang wall box, use the screws supplied with the wall box cover plate to attach the CONCEAL Wall Mount Bracket. If mounting to drywall with wall anchors, use the four (4) quality wall anchors/screws provided.

The mounting holes are slotted and are 90° opposing to provide easy leveling. Level the mount and place the camera on the mount. The example of the PowerVIEW HD-22/30 QUSB Systems - Document 342-0949 Rev C



CONCEAL mount shows a different Vaddio Camera, but the steps are identical for the HD-22 or HD-30.

Step 2: System Wiring

Follow the sample wiring diagrams for connecting the Cat-5/5e/6 cables to the camera and Quick-Connect USB Interface. Additional diagrams are available on the Vaddio website.

Connect the camera side as follows:

- Connect the EZ-POWER VIDEO Cat-5e to the EZ POWER VIDEO RJ-45 jack on the back of the camera.
- Connect the RS-232 Control Cat-5 to the RS-232 IR OUT RJ-45 on the camera.

Connect the Quick-Connect USB side as follows:

With the Quick Connect USB not powered-up

- Connect the EZ-POWER VIDEO Cat-5e from the camera to the EZ-POWER VIDEO RJ-45 jack.
- Connect the RS-232 Cat-5 cable to the RS-232 OUT TO CAMERA RJ-45 jack.
- Connect the controller to the RS-232 INPUT. The controller can be routed directly to the camera if preferred.
- Connect the desired video outputs to the video destination inputs.



Note: Please check all Cat-5 cables for continuity in advance of final connection. Plugging the EZ-POWER VIDEO Cat-5e cable into the wrong RJ-45 may cause damage to the camera system and void the warranty!

Step 3: Secure the Camera To the CONCEAL Wall Mount Bracket

After all cables are attached to the camera, slide the camera back onto mount and insert the two 1/4"-20 screws into the camera through the two-screw slots in the bottom of the mount. **Note:** Be sure to align each side of the camera evenly for the best fit prior to tightening down the mounting screws.

Step 4: Install the CONCEAL Lower Cover Plate

Attach the CONCEAL lower cover plate. Slide the lower cover plate from front of the mounting bracket toward the rear of the bracket. The two (2) rear locking tabs will need to be guided into position first and will lock in place as the lower cover plate is pushed toward the rear of the mounting bracket. The two (2) front tabs will engage as the cover is pushed back into place.

CONCEAL Lower Cover Plate with Locking Tabs



CONCEAL Lower Cover Plate locked in place



Step 5: Install the CONCEAL Rear Camera Cover

Install the CONCEAL rear camera cover on the mounting bracket with the supplied screw.

CONCEAL Rear Camera Cover



Completed CONCEAL Wall Mount Camera Bracket Installation



QUICK-CONNECT USB INSTALLATION INSTRUCTIONS

Follow the sample wiring diagram for connecting the Cat-5e cables to the cameras and Quick-Connect USB Interface (Diagrams on page 9, but read and understand the rest of these instructions especially the next note).



NOTE: Check all Cat-5 cables for continuity in advance of the final connection. Label the Cat-5 cables. Please do not use the “trial and error” method of connectivity. Know what cable goes where prior to termination.

Connecting System Power

Connect the DC side of the 24 VDC power supply to the Quick-Connect USB Interface and the AC plug into an AC outlet. The Quick-Connect USB will initialize, Power will travel down the EZ-POWER VIDEO Cat. 5 cable to the camera. The camera will boot up and in a few seconds, differential HD video will travel back down the Cat-5 cable to the Quick-Connect USB. When an image is available, the camera is ready to accept control information from the IR remote control or RS-232 camera controller, however it is always best to choose and use IR or RS-232 and not both concurrently. If connected to the Network, the Quick-Connect USB will display the Hardware (HW) MAC Address and the IP address on the front display.

Controlling the Quick-Connect USB

RS-232 Control: An API is provided for control of the cameras over RS-232 through the Quick-Connect USB. The camera RS-232 commands are in the back of this manual).

Telnet Control

The cameras can be controlled through the Quick-Connect USB via Telnet session. These exciting commands are listed at the back of the manual.

Built-in Webserver Control

The Quick-Connect USB has a built-in webserver that auto-loads the control protocols of the Vaddio camera attached (pretty cool huh?). Full camera controls including CCU image controls are available from any approved browser on any computer. The IP address is always displayed on the front panel display of the Quick-Connect so access to the internal webpages is super accessible and easy. The Screen Shot Tour will provide guidance for operation, but jumping in and looking at the web server pages directly is a better way to learn the operation of the system.

Quick-Connect USB Details

The Quick-Connect USB interface is a Cat-5 camera interface and an IP or USB 2.0 streaming appliance with a built-in webserver for camera set-up and control. The Quick-Connect USB Interface uses UVC (Universal Video Class) drivers for USB 2.0 video and does not require the loading of any other drivers to run on the PC. As long as the operating systems and soft-client software support UVC drivers, no additional software/drivers, other than the application is required.

Boot Order Notes

When using a joystick controller or external control system, in order to ensure proper continuity of camera control, the RS-232 controller should be powered-on after the camera and Quick-Connect. In most, if not all cases, the camera needs to be on and running in order for communication to take place between the camera and controller. When plugging a new camera into a RS-232 controller/joystick that has already been powered up, a system reboot or camera rescan may be necessary to find the camera

CONTROLLING THE CAMERA

IR Remote Commander

The following functions are accessible with the Vaddio IR remote:

- Camera Power On/Off (Toggle on/off same button)
- Back Light Compensation (Toggle on/off same button)
- Data Screen: Not Used
- Camera Select (the remote can operate 3 cameras (with 3-IR Freq.))
- Pan/Tilt and Home controls with Reverse and Std. Pan direction
- Pan/Tilt Reset
- Auto Focus (Toggle on/off same button)
- Zoom In/Out controls Wide & Telephoto
 - Fast speed controls (W & T)
 - Slow speed controls (W & T)
- Manual Focus On/Off control (Toggle on/off same button)
 - Near (-) adjustment
 - Far (+) adjustment
- Six (6) pan/tilt/zoom positioning presets (1 through 6)
- Preset Set (store)
- Preset Reset (clear)
- Red LED that indicates IR Transmission and battery level

Vaddio
IR Remote
Commander



The IR Remote operational characteristics are as follows:

- **Preset Activation:** IR Remote is limited to executing Presets 1 through 6.
- **Preset Store:** IR Remote is limited to positional (PTZ) type presets. To set a preset, position the camera, hold down the Preset Button and touch the one of the preset numbered buttons 1 through 6.

Telnet Control of the Camera through the Quick-Connect USB

The following *Telnet commands are available through the Ethernet Port.

- Camera Home
- Camera Pan (left, right and speed - real-time operation)
- Camera Tilt (up, down and speed - real-time operation)
- Camera Zoom (zoom in/out/stop and speed - real-time operation)
- Camera Store Preset (Gets or Sets 12 presets with global relative PTZ speed control)
- Camera Image (Gets or sets current image control values, sets in 1 of 3 CCU presets) (AWB or manual w/Red and Blue gain, BLC on/off, Auto Iris or manual with Iris value and Gain, Detail and Chroma)
- Camera Sleep (Gets or sets standby power mode - camera has to us less power in this mode)
- Exit (ends Telnet session)
- Help (displays CLISH syntax)
- History (command history)
- Network Ping (send ICMP ECHO_REQUEST to network hosts)
- Network Settings (Gets MAC address, IP address, Subnet Mask, Gateway and NTP server address)
- Network (Gets the current network settings or pings an IP address)
- Streaming Mode - *USB or IP needs to be changed to USB and IP* (get and set streaming modes, on/off)
- Streaming Quality (gets/sets high/standard/low for IP)
- Streaming Resolution (gets/sets streaming resolution)
- Streaming (gets/sets current streaming settings)
- System Factory Reset
- System Reboot
- Version (system version information)

*Please see the full Telnet command list at the end of this manual




QUICK-CONNECT USB SOFTWARE COMPATIBILITY

The Quick-Connect USB will work with the following web browsers, soft codecs, computer operating systems and media players:

Compatibility - Web Browsers:

- 1) Internet Explorer (IE 8 and above)
- 2) Safari (Rev 4 and 5)
- 3) Safari/iOS (Rev 4 and 5)
- 4) Chrome (the latest and current release - auto updating)
- 5) Firefox (the latest and current release - auto updating)

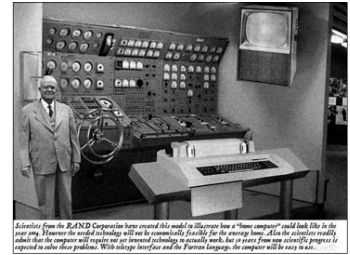

Soft Client Compatibility: The Quick-Connect USB is compatible with the following soft codecs or applications, in no particular order:

- | | |
|--------------------------------|-------------------------|
| 1) Skype | Win 7 & Mac OS X (10.7) |
| 2) Web Ex (WBS 28.7 and up) | Win 7 & Mac OS X |
| 3) Microsoft Lync | Win7 |
| 4) Cisco Jabber | Win 7 & Mac OS X |
| 5) Vidyo Desktop | Win 7 & Mac OS X |
| 6) Google Plus | Win 7 |
| 7) Adobe Connect 8 | Win 7 & Mac OS X |
| 8) LifeSize ClearSea | Win 7 |
| 9) GoToMeeting (Citrix) | Win 7 & Mac OS X |
| 10) Polycom M100 | Win7 |
| 11) Panaopto (lecture capture) | Win 7 |

Compatibility: Media Players:

The UVC with MJPEG and IP with H.264 video are compatible with the industry leading PC media players.

- Quick-Time 10.2
- VLC Media Player 2.0.4
- Real Player 16.0

Compatibility: Operating Systems

- Apple OS X (10.7 and above)
- Windows XP w/Service Pack 3 with known issues and errata
- Windows 7
- Linux

Evolving Compatibilities:

As more UC soft-client and lecture capture programs are released and gain popularity, Vaddio will provide a continuing research and development effort to ensure the compatibility with other manufacturer's products.

USB 2.0 UVC Drivers

The USB 2.0 UVC (Universal Video Class) video driver resolution table is an internal list of resolutions available for the Host PC and the Quick-Connect USB to negotiate and use for any approved/tested USB application. Typically, the highest resolution possible between both the PC and Quick-Connect USB is used. However, not all OS and application combinations are altogether typical.

Table: Supported UVC Resolutions

Format	Resolution	Frame Rates	Aspect Ratio
MJPEG	1280 x 720 (720p)	15/30	16:9
	960 x 544	15/30	16:9
	704 x 576	15/30	4:3
	640 x 480	15/30	4:3
	640 x 360 (360p)	15/30	16:9
	424 x 240	15/30	4:3
	352 x 240	15/30	4:3
	320 x 240	15/30	4:3
	320 x 180 (180p)	15/30	16:9

QUICK-CONNECT USB INTERNAL WEB PAGES AND CONTROL

The internal web pages will allow control of the Quick-Connect USB and control of the attached camera via a network connection. These web pages will allow the user or administrator to set security passwords, change the IP address, view diagnostics, access the firmware upgrade page and more!

DHCP IP Set-up (Dynamic Host Configuration Protocol)

DHCP Set-up (skip this section if Static IP). If the LAN has a DHCP (dynamic host configuration protocol) server, then the IP address, gateway and routing information will automatically be assigned. The QC-USB software is defaulted to DHCP and will attempt to dynamically obtain an IP address using DHCP, but it will fall back to the default address of (169.254.1.1) if no DHCP server can be found.

Static IP Set-up:

The static IP can be assigned either through the network or directly to a computer using a cross-over cable. Depending on the age of the computer, you may not need a cross-over cable. Either way the steps are the same for network or direct connection to a computer. The default address of the QC-USB camera is 169.254.1.1 and the Subnet mask is 255.255.0.0. Different computer OS types all have their own way of doing things (without question), but they are essentially doing the same stuff, changing the IP address so the web pages of the HD-USB are accessible.

Quick-Connect USB Web Pages Tour:

Screen Shot: Login


The webserver is intended as a user's camera control page at one level, and an administrator's management tool at another level, which requires password authentication for full access.

The Login Page will appear if there is a user name assigned by the administrator. Assigning a user name can limit access to the admin menus by a general user.

By default, the User name is: [user](#), and the password for the User account is: [password](#).

The Administrator can set the name and password for the User account.

By default, the Admin user name is: [admin](#), and the password for the admin account is: [password](#)

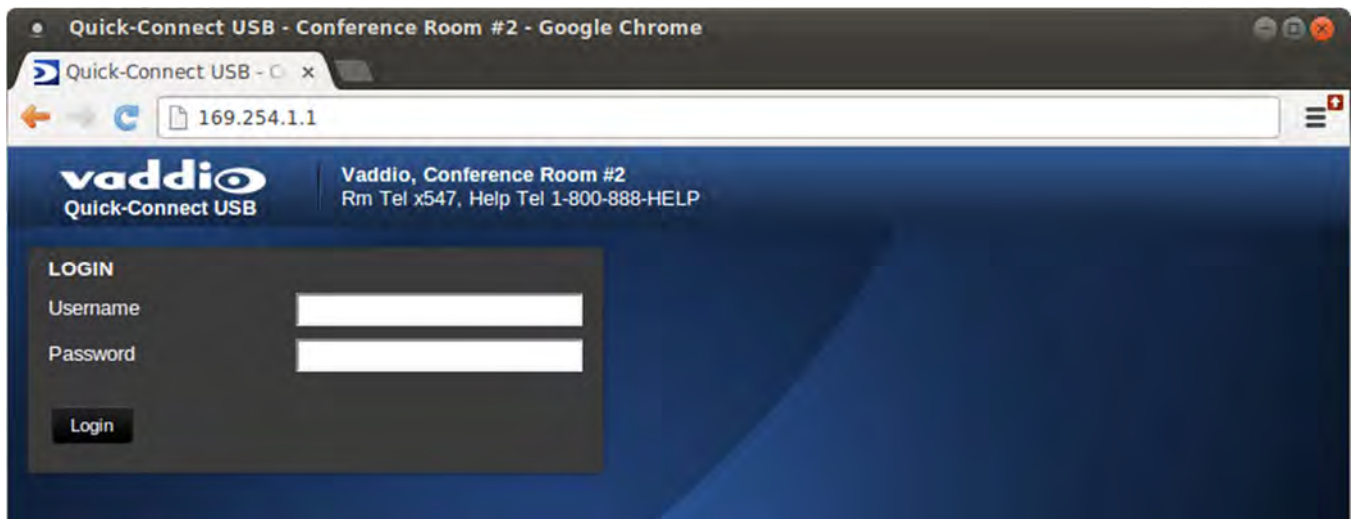


If a user or an admin logs in through this screen, then the next page shown will be the camera control page.

The user will only have access to the camera control page.

The Admin will have complete access to all web pages.

Screen Shot: User Menu - Camera Control Page

This web page provides access to the camera controls for the User and the Admin.

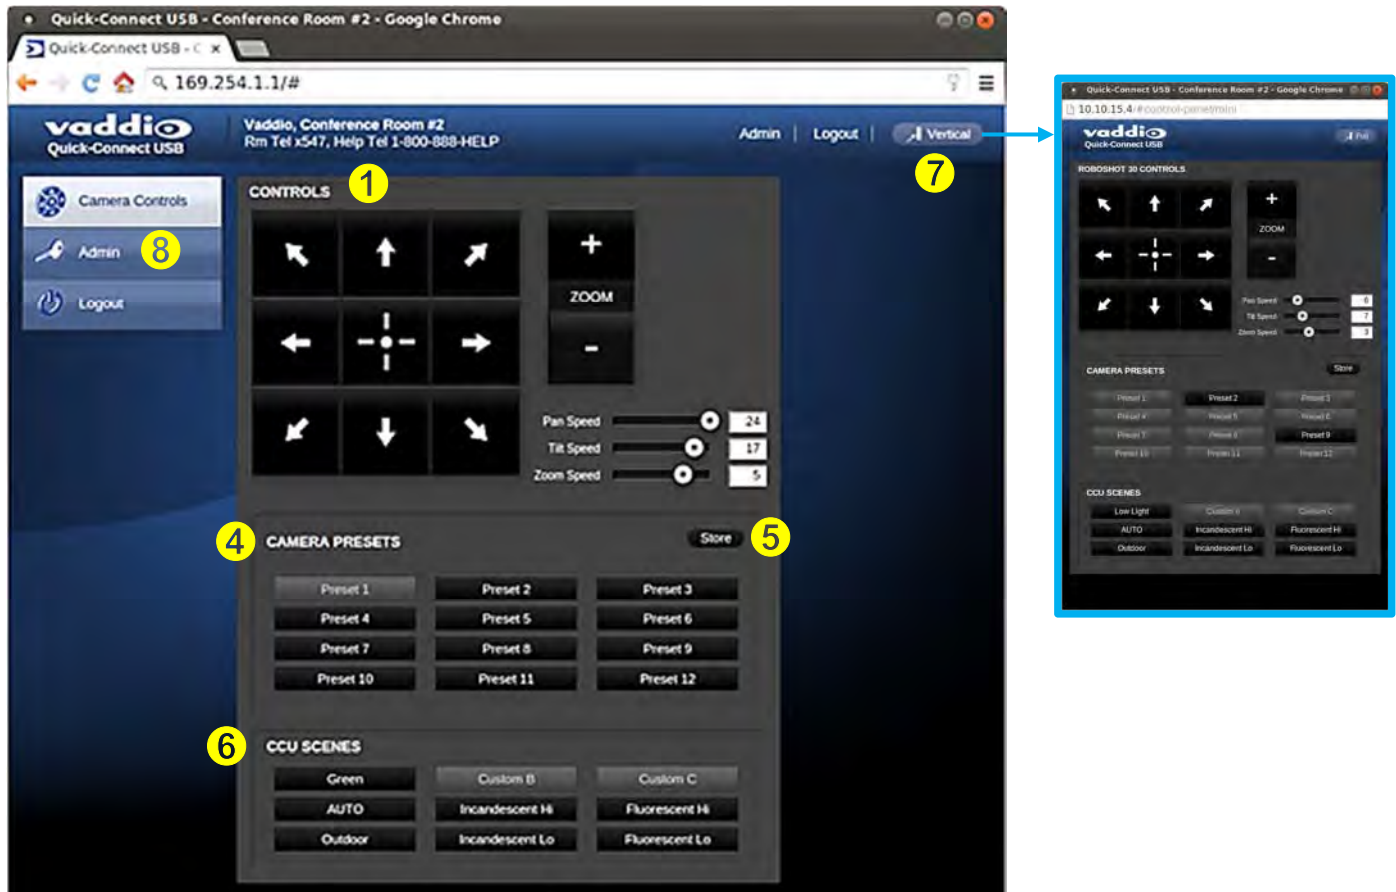


- 1) **Pan, Tilt and Home Controls:** These intuitive controls use the up/down and diagonal arrows for camera pan and tilt. The center button will move the camera to the home position.
- 2) **Zoom Control:** The camera's zoom lens can be controlled with the "+" to zoom-in and the "-" to zoom out.
- 3) **Pan/Tilt and Zoom Speed Controls:** The speed for both the Pan/Tilt and Zoom controls can be adjusted with the three (3) sliders in this section. For tighter shots, it is recommended that the slower speed is used. These controls are for real-time camera movements only.
- 4) **Camera Presets:** Twelve (12) camera position presets can be recalled simply by clicking a preset number.
- 5) **Store Preset Button:** Clicking the Store button opens up a Store Preset pop-up dialog box. To set presets, set up the camera shot, click on choice of preset number (1 through 12). The preset is stored and the dialog box closes.
- 6) **CCU Scenes:** The user has access to the CCU scenes set and stored on the Admin pages. There are three (3) user definable presets and six (6) presets preconfigured by the technical folks at Vaddio (really Scott set them all) that are meant to be used in certain lighting scenarios. These lighting presets included: Automatic, Incandescent Hi, Incandescent Lo, Fluorescent Hi, Fluorescent Lo and Outdoor.
- 7) **Vertical Menu:** The vertical menu is smaller with only the camera controls allowing for the PC to use the camera controls during a UC conference. Click on the Full button to return to full screen.
- 8) **Administration Menu:** By clicking on the Administration menu bar, the Admin Login screen will appear.

Screen Shot: Admin login from the Camera Control Page


On the security page, which will be reviewed at a bit later in the tour, allows the Admin to set the system to allow automatic guest access to the main camera control page. If guest access is turned on by the Admin, then system will open to the camera control page and an additional Admin Login is provided.

The default Admin password is: [password](#).

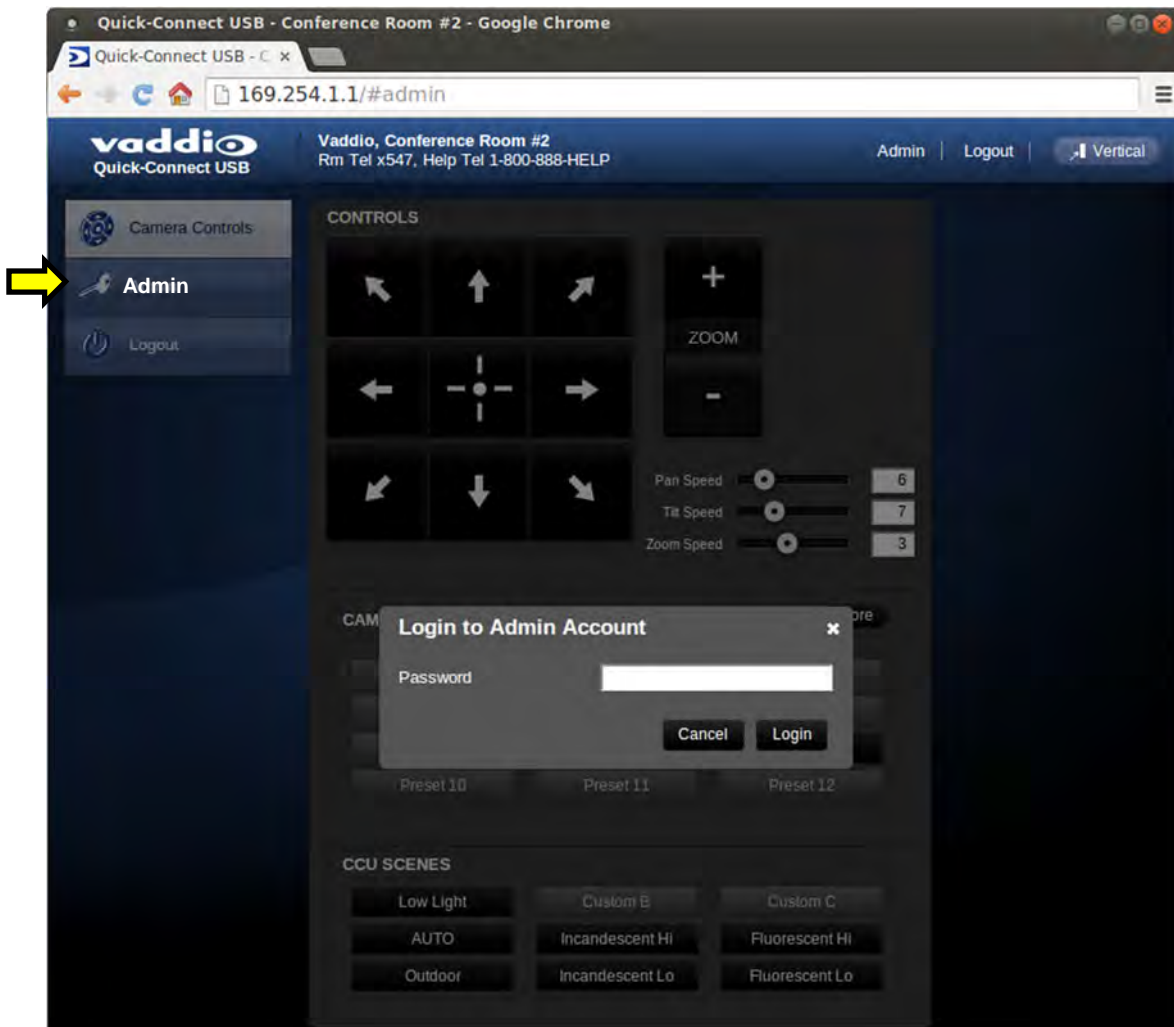

Screen Shot: Admin Menu - Camera Settings

Once the Admin logs in, then all the admin menu buttons appear on the left side of the screen. The first menu after camera controls is Camera Settings.

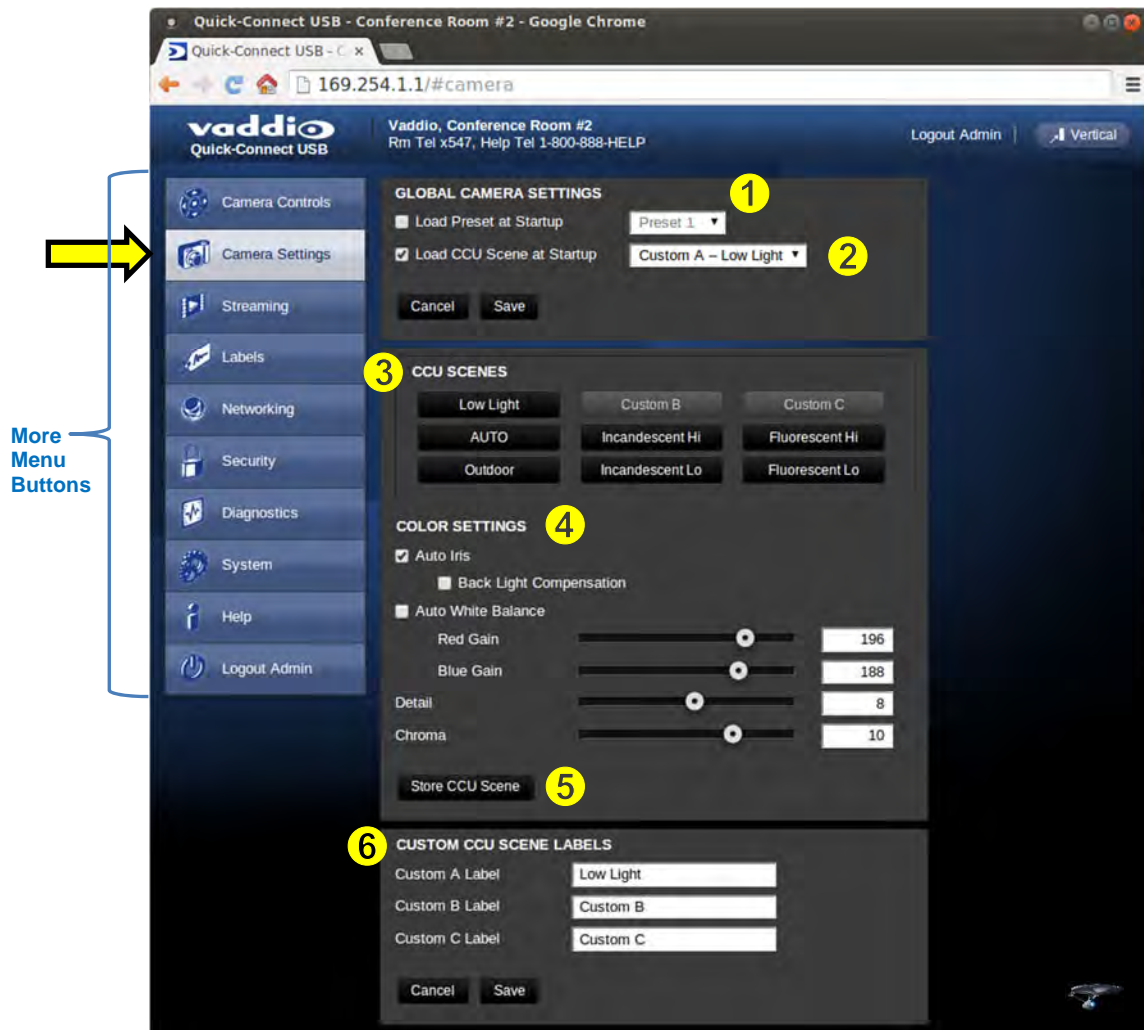

- 1) **Load Preset at Startup:** Check this box to move the camera to a predefined preset location when the camera powers up. Use the pull down menu to select the Preset 1 through 12 to be loaded when this box is checked.
- 2) **Load CCU Scene at Startup:** Check this box to load a CCU Scene into the camera when the camera powers up. The pull down menu will allow the selection of one of the 6-factory scenes, or one of the 3 custom scenes.
- 3) **CCU Scenes:** Click on any of these 9 buttons to load one of the CCU scenes into the camera. These Scenes can be fine-tuned if changes are needed, and stored into any of the three User defined scenes.
- 4) **Color Settings:** When painting or shading camera scenes for specific lighting situations or environments, these parameters can be adjusted for matching cameras in the same area. The parameters within the Color Settings section are defined below (top to bottom):


Auto Iris Check Box: When checked, the camera will operate in Auto Iris mode, when unchecked, the camera will be in Manual Iris mode and allow adjustment of Iris and Iris Gain levels.

- **Iris:** Move adjustment slider as required to adjust the iris opening. A numeric value will be displayed in the box to the right of the slider.
- **Gain:** Move slider as required for amount of iris gain desired. Numeric value will be displayed in the box to the right of the slider.

Auto White Balance check box: When checked, camera will operate in Auto White Balance mode, when unchecked camera will be in Manual White Balance Mode and allow for adjustment of Red and Blue Gain.

- **Red Gain:** Move the adjustment slider as required for amount of Red Gain desired. A numeric value will be displayed in the box to the right of the slider.
- **Blue Gain:** Move the adjustment slider as required for amount of Blue Gain desired. Numeric value will be displayed in the box to the right of the slider.
- **Back Light Compensation:** When checked, Back Light Compensation will be applied to the camera if camera is in Auto White Balance mode.
- **Detail:** Move the adjustment slider as required for amount of detail (Aperture) desired. A numeric value will be displayed in the box to the right of the slider. **Note:** If the detail is too high, the video can look grainy and appear ratty (technical term) too.
- **Chroma:** Move the adjustment slider as required for the amount of Chroma (Color Vibrancy) desired. A numeric value will be displayed in the box to the right of the slider.

5) **Store CCU Scene button:** Once the desired scene adjustments have been made, this button will activate a pop-up menu that can be used to store this scene into one of the three User Defined Scene locations. These User Defined Scenes can be named as required for clarity. These User Defined CCU Scenes can be adjusted and re-saved at any time.

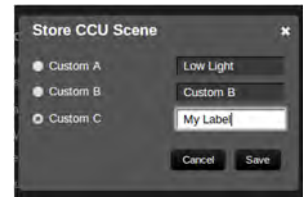


6) **Custom CCU Scene Labels:** The labels for the (3) User defined customizable scenes can be changed as needed. Move the cursor into the appropriate window and edit the text. Press Save to store these changes or press Cancel to exit this window.

Screen Shot: Admin Menu - Room Labels

The Room Labels menu allows the Admin to label the company name, room name, room phone and help phone on a per camera basis. The labels appear on every page at the top/middle of the page. Simply enter the room information and click Save.




Screen Shot: Admin Menu - USB 2.0 or IP Streaming Mode Page

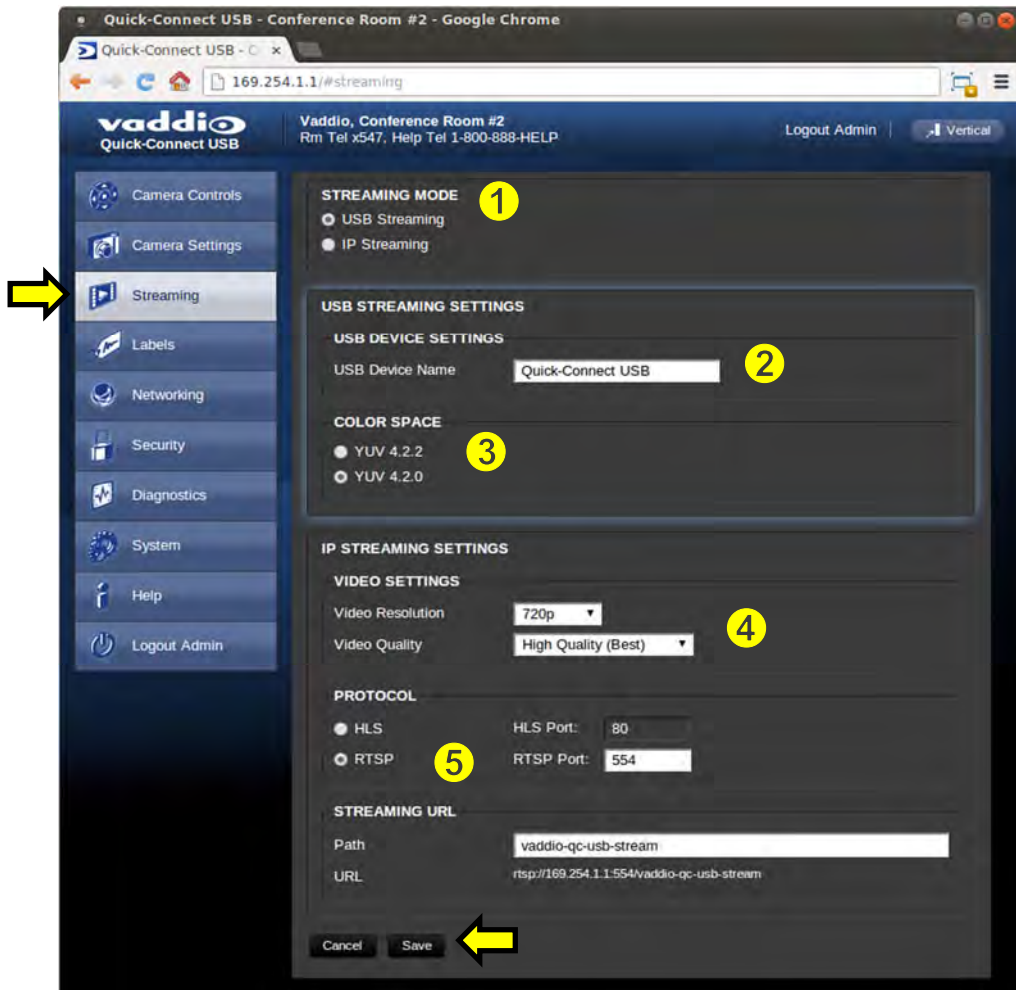

- 1) **Streaming Mode:** Streaming can be set for either USB 2.0 streaming (MJPEG) or IP streaming (H.264); but not both at the same time. The QC-USB can stream USB and accept IP control, or it can IP stream with IP control. Choose between USB 2.0 and IP streaming mode here.
 - 2) **USB Device Name:** Allows the user to use a “friendly name” per system. In a BYOD format, the user has the ability to move between different UC conference rooms and have the ability to assign the PC’s USB resources to that room.
 - 3) **Color Space:** The UVC drivers will negotiate the color depth, but this parameter allows the user to reduce the color depth to 4:2:0, which is used with the older/cheaper webcams and applications, where image quality is not as critical. The 4:2:2 color is used by many applications that take advantage of the performance of the camera where the colors are more vibrant and precise.
 - 4) **IP Streaming Settings:** The Video Settings allow the selection of the target performance for the IP Streaming. The QC-USB is set up for a variable bit rate and the user can select the video resolution and the quality, such as High Quality (Best), Standard Quality (Better) and Low Bandwidth (Good). Every effort to eliminate stupefyingly bad combinations with the 5 or 6 parameters that make up the image size, quality, bit rate, bandwidth etc... has been made, so you can’t pick 1080p at a bit rate of 128Kbps, which would look totally wicked awful - and probably wouldn’t work anyway.
 - 5) **Streaming Protocol and URL:** Admin chooses the streaming type and the port number for RTSP. The HLS port is always on 80. The supported protocols are RTSP and HLS (Apple’s HTTP Live Streaming). RTSP is best for live applications, where HLS serves the Apple iOS devices and is better for playback due to the amount of buffering the HLS has built-in. The Streaming URL auto populates and that path can be changed.
- When finished setting up the streaming parameters click Save to put the changes into effect or cancel, which will not save the configuration.


Screen Shot: Admin Menu - DHCP Network Configuration

Under the Networking menu, The Network Configuration and Network Interfaces are displayed. This is where the Network administrator assigns either DHCP or a Static address and the associated parameters.

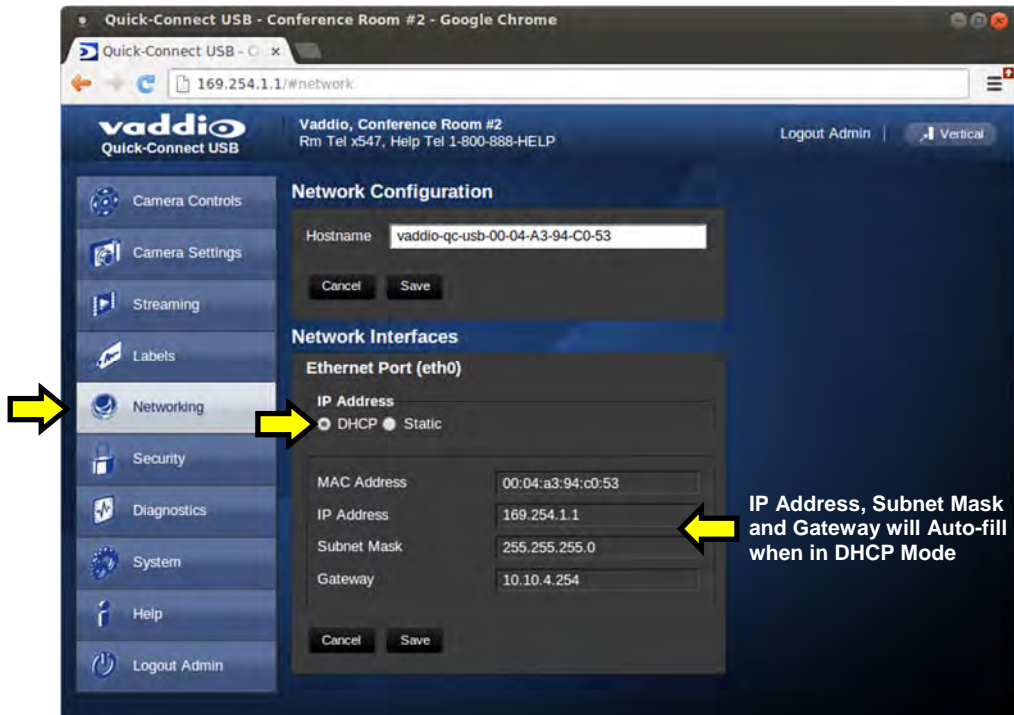

Screen Shot: Admin Menu - Static IP Configuration

If Static IP is used, the IP Address, Subnet Mask and Gateway are manually entered. Click on Save to keep the Static IP information. Click Save after loading in the Static IP information

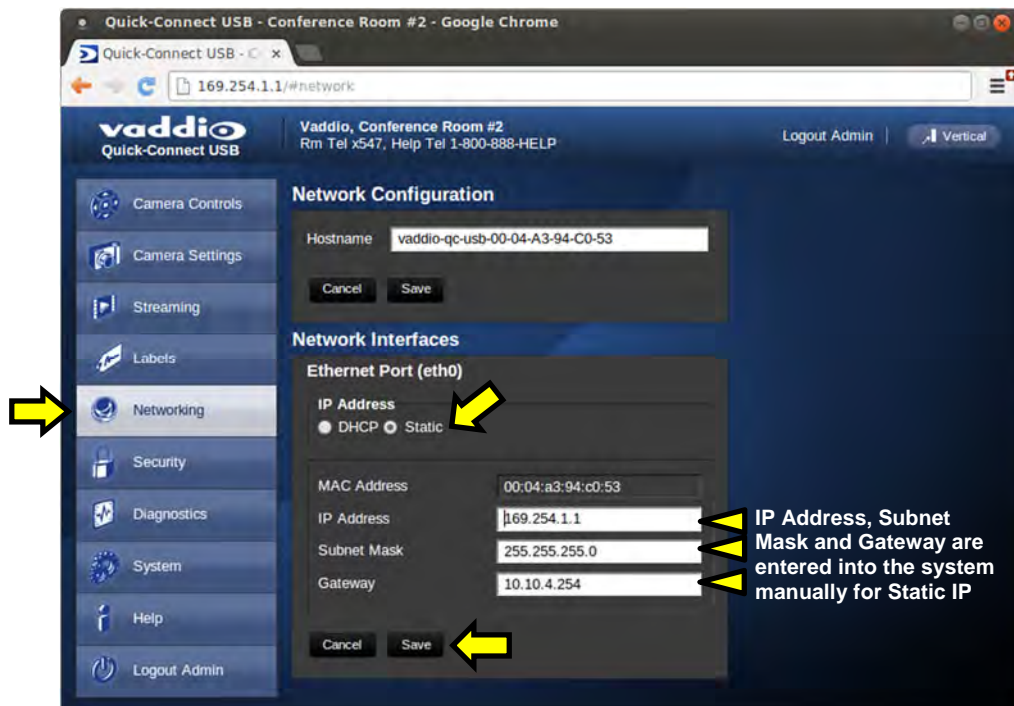


Screen Shot: Admin Menu - Security

The Security menu allows the Admin to **UPDATE “user” PASSWORD** and **UPDATE “admin” PASSWORD**. The default “user” password is: **password**. The default “admin” password is also: **password**. The Network administrator can reassign the user name and password as well as the Admin password. There is only one “user” password and one “admin” password at any given time. If changes are made, click on Save to store the change.




Screen Shot: Admin Menu - Diagnostics

Diagnostics menu button will display a set of self-diagnostics. These diagnostics may help the Vaddio technical support team diagnose a problem with the Quick-Connect USB and attached camera. The log can be downloaded and refreshed at the bottom of the screen.

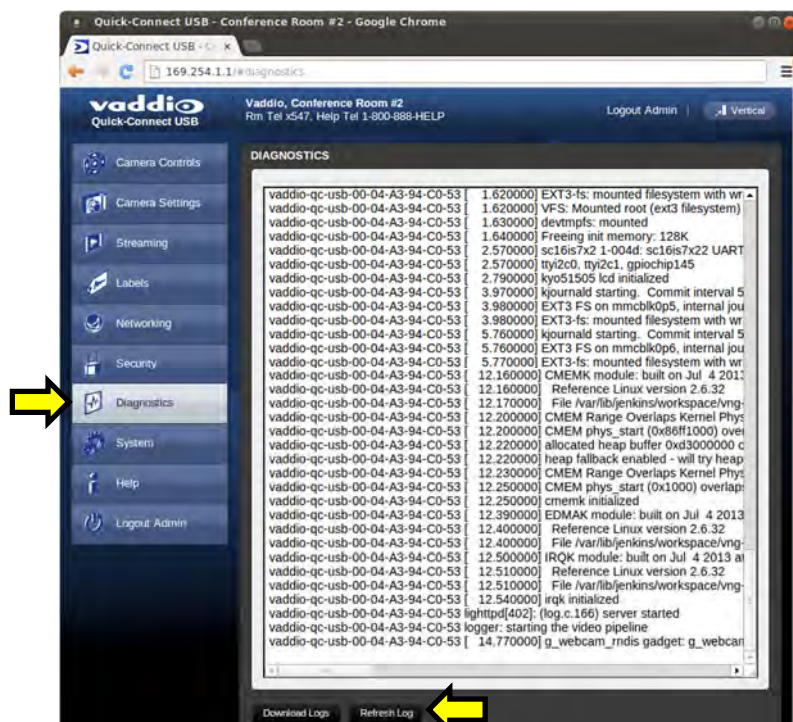


Screen Shot: Admin Menu - System Menu

The System Menu is where the System Info is displayed and Firmware Updates are performed. There will be firmware updates and upgrades over the life of the Quick-Connect. The file for the firmware update is chosen in this menu and the update is started here too. A remote system Reboot and Restore to Factory Presets is also available.

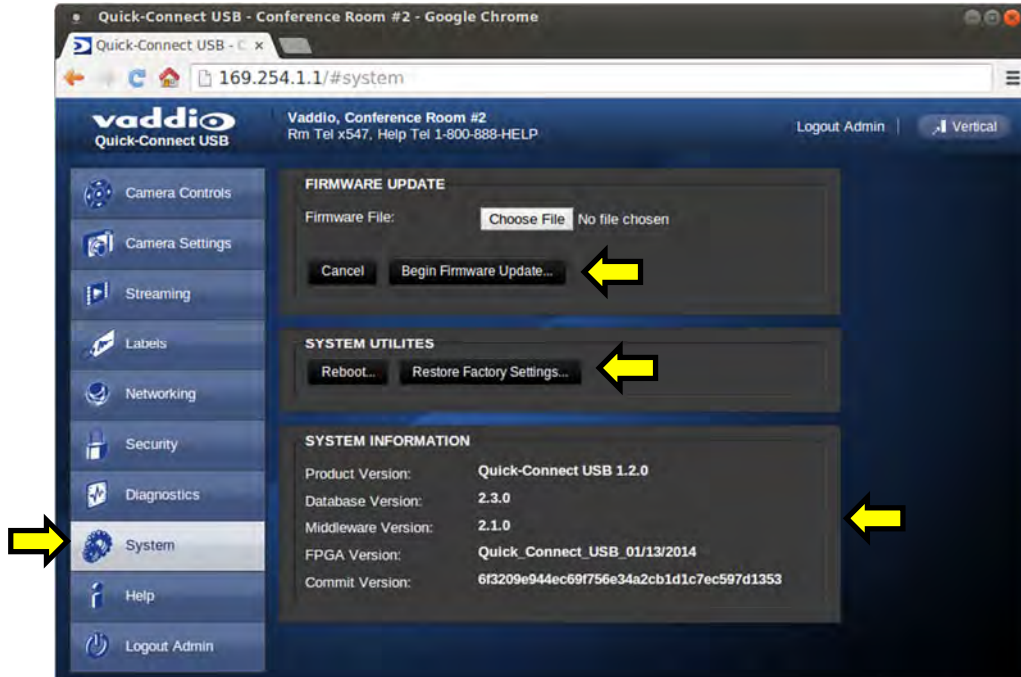


Screen Shot: Admin Menu - Update Confirmation

After choosing an update file and clicking on “Begin Firmware Update...” a confirmation pop-up and warning will be displayed. Please contact Vaddio Tech support for assistance with updates. Please read and completely understand the pop-up warnings as it is easy to lose patience waiting for updates. Click on continue to start the update

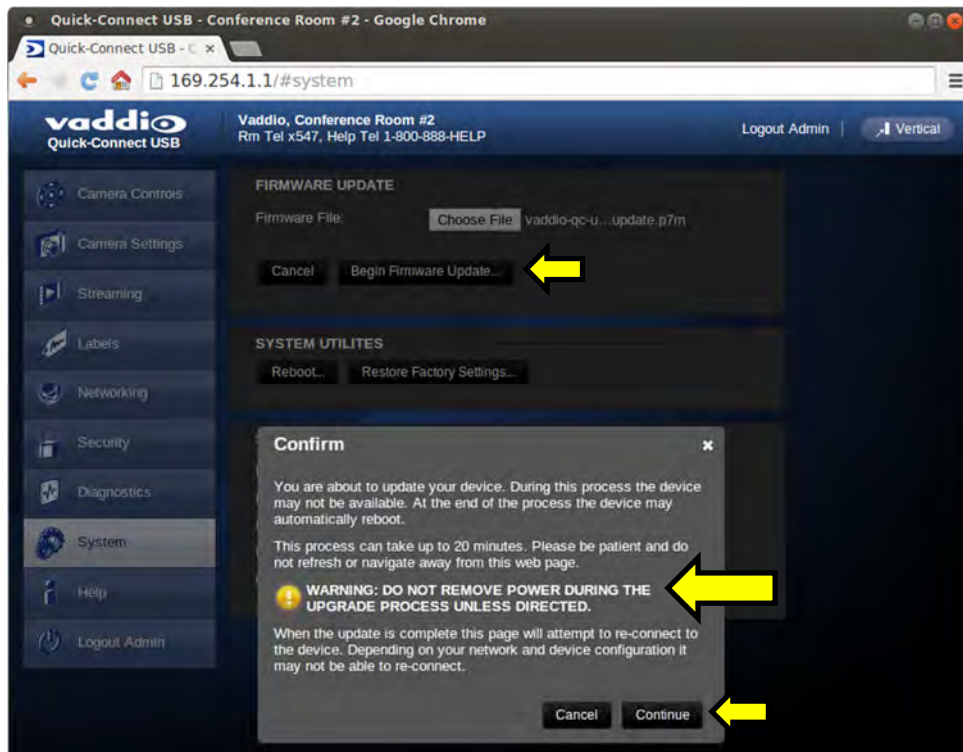


Screen Shot: Admin Menu - Update in Progress

After the firmware load has been started, a pop-up screen will advise patience and notify, in terms of percentage completed, the progress of the firmware update load. Again, please don't interrupt the firmware load

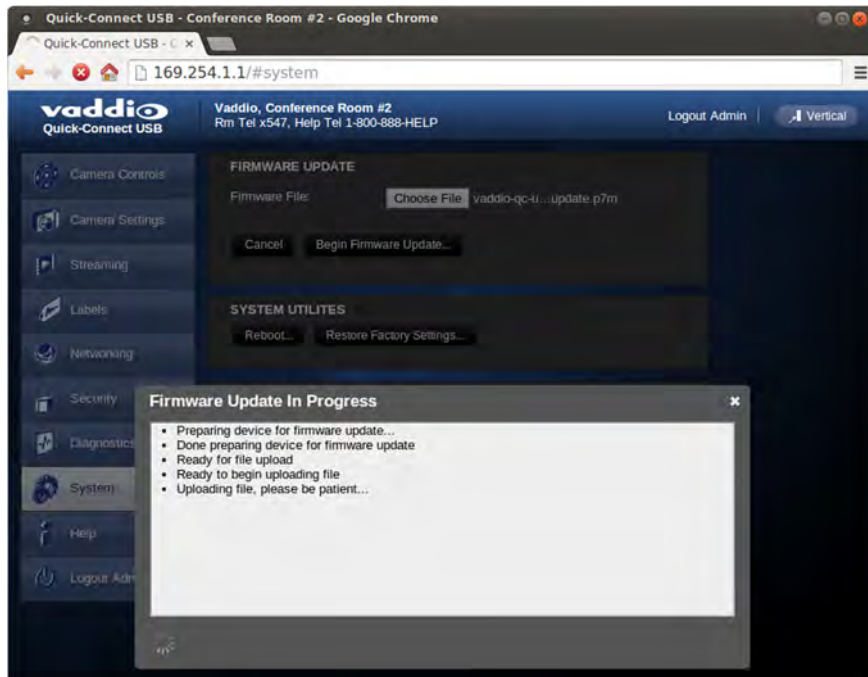

Screen Shot: Admin Menu - HELP

Service/Help information can be found under the Help menu. Support phone numbers and e-mail, manuals, FAQ's and System information is listed on this page. Have the System page open when calling Vaddio Tech Support.

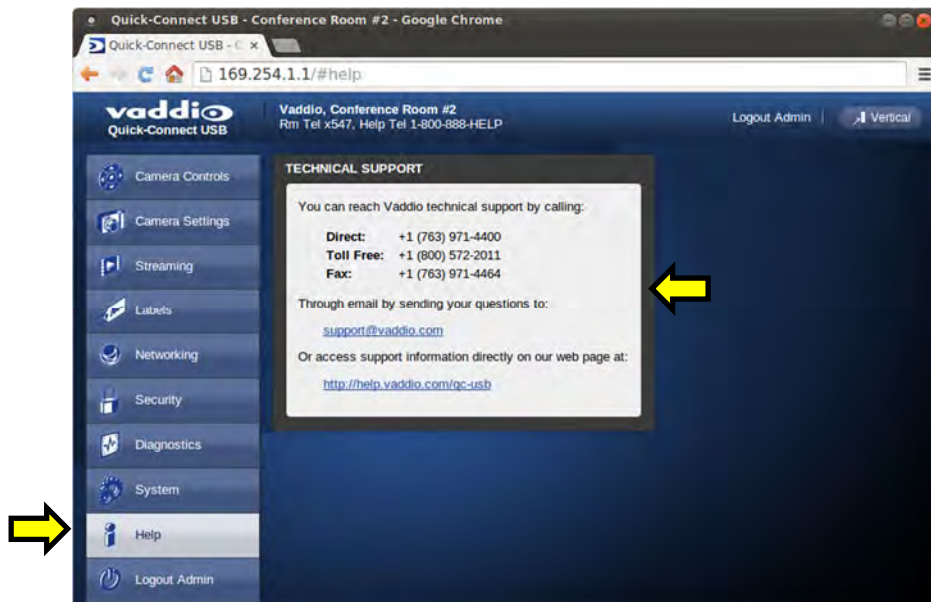

This concludes the Screen Shot Tour for the Quick-Connect USB, which was breathtaking, stimulating and provocative as one would expect. The General Specifications, Communication Specifications, API, Declarations of Compliance, Warranty Information and Telnet Command List are the next stop.

GENERAL SPECIFICATIONS:

Camera	PowerVIEW HD-22 PTZ	PowerVIEW HD-30 PTZ
Part Numbers	999-6960-000 (North America) 999-6960-001 (Int'l)	999-6970-000 (North America) 999-6970-001 (Int'l)
Zoom	22X Optical Zoom	30X Optical Zoom
Field of View	Horizontal: 65.2° Wide End to 3.1° Tele (16:9 Aspect Ratio)	Horizontal: 65° Wide End to 2.2° Tele (16:9 Aspect Ratio)
Lens Focal Length	f=4.3 mm to 94.6 mm / F1.6 - F4.7	f=4.3mm to 129.0 mm / F1.6- F4.7
Image Sensor	1/2.8-Type MOS, 2.2 Megapixel, Progressive Scan	
Minimum Illumination	Color: 0.4 lux (F1.6, 1/30 sec, 50 IRE, Gain: High), B/W: 0.04 lux (F1.6, 1/30 sec, 50 IRE, Gain: High)	
Video Resolutions	HD: 1080p/59.94, 1080p/50, 1080p/29.97/25, 1080i/59.94, 1080i/50, 720p/59.94, 720p/50 SD: 480p/59.97 and 576p/50	
Video Output Formats	HDMI (YCbCr for HDMI and sRGB for DVI), Analog Component (YPbPr) HSDS (Power, Differential HD Video & R\$S-232 Control)	
Signal to Noise Ratio	> 50 dB (AGC: Off)	
Compatible Quick-Connects	Quick-Connect SR, Quick-Connect DVI/HDMI SR, Quick-Connect Universal CCU and Quick-Connect USB (varying voltages), USB Mini	
Pan Range	Pan: +170 degrees to -170 degrees Tilt: +90 degrees to -30 degrees	
Preset Positions	16 (internal), 6 recalled via Vaddio IR Remote Commander	
Image Control	Red & Blue Gain, Detail, Chroma, Gamma, Pedestal, Iris, and Gain (Controls available through RS-232 control and Quick-Connect CCU and Slot Card)	
Tally Light	Available through RS-232 Control	
HD Video Select	16-Position Rotary Switch: Used to set HD Video Resolution Output	
Camera Settings	10-Position Dip Switch: Settings for IR Select, Baud Rate 9600, Image Flip, Unpublished Functions	
Accessory Slot Cards	EZIM CCU Slot Card PN# 999-6900-006 - For Use with Quick-Connect CCU Only	
Dimensions/Weight	7.81" (198.37mm) H x 6.67" (169.42mm) W x 7.057" (179.25. mm) D / 5.6 lbs. (2.630835643 kg.)	


Moon in Front Page Header: Oberon - Moon of the planet Uranus.

Quick-Connect USB	
Video Outputs	USB 2.0 (MJPEG): Resolution up to 720p/30 (USB 2.0 MJPEG) H.264 (IP) on Ethernet: Resolution up to 1080p/30 (H.264 over IP) Analog Component (YPbPr): Resolution up to 1080p/60 HDMI: Resolution up to 1080p/60
Connectors	<ul style="list-style-type: none"> • Power: 5.5mm OD x 2.5mm ID Coaxial Connector • YPbPr: DE-15 (15-pinHD) Female • HDMI: HDMI Female • RS-232 IN: RJ-45 Jack • RS-232 OUT: RJ-45 Jack • EZ-Power Video: RJ-45 Jack (Power and Differential HD Video)
Cat-5e Cabling/Max. Distance	Two (2) Cat-5e cables (EZ-Power Video and RS-232) Max Distance up to 100' (30.48m)
Power Supply	24 VDC, 2.08 Amp Switching Power Supply
Dimensions/Weight	½-Rack Size - 8.375" (212.73mm) W x 6.0" (152.4mm) x 1.72" (43.69mm) H, 1.4 lbs. (0.64kg)
Accessory	Rack Mount Adapter: 998-6000-004 - 1-RU Offset mount (1-Long ear & 1-Short Ear)

Notes: Specifications and pricing are subject to change without prior notice or obligation.
For dimensional drawings of the products, go to support.vaddio.com and click on drawings.

COMMUNICATION SPECIFICATION

Communication Speed: 9600 bps (default)
 Start bit: 1
 Stop bit: 1
 Data bits: 8
 Parity: None
 No Flow control

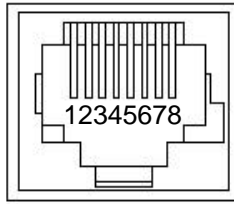

Pin #	RJ-45 RS-232 and IR Out Pins
1)	Unused
2)	Unused
3)	Unused
4)	IR Output (Diff Signal to Quick-Connect SR Only)
5)	IR Ground (Diff Signal to Quick-Connect SR Only)
6)	GND (GND of IR Short Range - Pin 3)
7)	RXD (from TXD of control source)
8)	TXD (to RXD of control source)

NOTE: The Vaddio PowerVIEW HD-22 and 30Control Protocol is similar, but not identical to, the Sony® VISCA™ command set in order to be compatible with several popular control devices. Not all VISCA commands are supported and there are many HD-22/30 specific commands in the following Command and Inquiry Lists.

HD-22/30 Command List (1/2)

Command Set	Command	Command Packet	Comments
Address Set	Broadcast	88 30 01 FF	Address Set (Daisy chain)
IF_Clear	Broadcast	88 01 00 01 FF	IF Clear
Command Cancel		8x 2p FF	p:socket number(1,2)
CAM_Power	On	8x 01 04 00 02 FF	Power On/Off
	Off(Standby)	8x 01 04 00 03 FF	
CAM_Zoom	Stop	8x 01 04 07 00 FF	p:(1-Slow to 4-Fast) p:(1-Slow to 4-Fast) pqr: Zoom Position*
	Tele(Standard)	8x 01 04 07 02 FF	
	Wide(Standard)	8x 01 04 07 03 FF	
	Tele(Variable)	8x 01 04 07 2p FF	
	Wide(Variable)	8x 01 04 07 3p FF	
	Direct	8x 01 04 47 00 0p 0q 0r FF	
CAM_Focus	Stop	8x 01 04 08 00 FF	p:(1-Slow to 4-Fast) p:(1-Slow to 4-Fast) pqr: Focus position(0-0x438)*
	Far(Standard)	8x 01 04 08 02 FF	
	Near(Standard)	8x 01 04 08 03 FF	
	Far(Variable)	8x 01 04 08 2p FF	
	Near(Variable)	8x 01 04 08 3p FF	
	AutoFocus	8x 01 04 38 02 FF	
	ManualFocus	8x 01 04 38 03 FF	
	Auto/Manual	8x 01 04 38 10 FF	
	Direct	8x 01 04 48 0p 0q 0r 0s FF	
CAM_WB	Auto	8x 01 04 35 00 FF	Normal Auto (Auto Tracing WB) Indoor Mode (Color Temp 3200K) Outdoor Mode (Color Temp 5600K) One Push White Balance Mode Manual White Balance Fluorescent(Color Temp 4200K) One Push WB Trigger
	Indoor	8x 01 04 35 01 FF	
	Outdoor	8x 01 04 35 02 FF	
	One Push WB	8x 01 04 35 03 FF	
	Manual	8x 01 04 35 05 FF	
	Fluorescent	8x 01 04 35 06 FF	
	One Push Trigger	8x 01 04 10 05 FF	
CAM_RGain	Reset	8x 01 04 03 00 FF	pq:00-ff
	Up	8x 01 04 03 02 FF	
	Down	8x 01 04 03 03 FF	
	Direct	8x 01 04 43 00 00 0p 0q FF	
CAM_BGain	Reset	8x 01 04 04 00 FF	pq:00-ff
	Up	8x 01 04 04 02 FF	
	Down	8x 01 04 04 03 FF	
	Direct	8x 01 04 44 00 00 0p 0q FF	
CAM_AE	Full Auto	8x 01 04 39 00 FF	Auto Exposure Mode Manual Control Mode
	Manual	8x 01 04 39 03 FF	
CAM_Iris	Reset	8x 01 04 0B 00 FF	pq(0x00-0xFF)
	Up	8x 01 04 0B 02 FF	
	Down	8x 01 04 0B 03 FF	
	Direct	8x 01 04 4B 00 00 0p 0q FF	
CAM_Gain	Reset	8x 01 04 0C 00 FF	pq(0x00-0xFF)
	Up	8x 01 04 0C 02 FF	
	Down	8x 01 04 0C 03 FF	
	Direct	8x 01 04 4C 00 00 0p 0q FF	
CAM_Backlight	On	8x 01 04 33 02 FF	
	Off	8x 01 04 33 03 FF	
CAM_Aperture	Reset	8x 01 04 02 00 FF	pq(0x00-0x3F)
	Up	8x 01 04 02 02 FF	
	Down	8x 01 04 02 03 FF	
	Direct	8x 01 04 42 00 00 0p 0q FF	

***Zoom and Focus Data:**

CAM_Zoom: Range (0x000-0xA23/0xA73), HD22: 0xA23(22x Zoom), HD30: 0xA73(30x Zoom)
 CAM_Focus: Range (0x000-0x438) dependent on Zoom Position

HD-22/30 Command List (2/2)

Command Set	Command	Command Packet	Comments
CAM_Memory	Reset	8x 01 04 3F 00 0p FF	p:Memory No(=0-0xF)
	Set	8x 01 04 3F 01 0p FF	
	Recall	8x 01 04 3F 02 0p FF	
CAM_IDWrite		8x 01 04 22 0p 0q 0r 0s FF	pqrs:0x0000 – 0xFFFF
CAM_LR_Reverse	On	8x 01 04 61 02 FF	Mirror (Horizontal) on Mirror (Horizontal) off
	Off	8x 01 04 61 03 FF	
CAM_Freeze	On	8x 01 04 62 02 FF	Still image on
	Off	8x 01 04 62 03 FF	
CAM_PictureEffect	Color	8x 01 04 63 00 FF	
	B&W	8x 01 04 63 04 FF	
Pan-tiltDrive	Up	8x 01 06 01 VV WW 03 01 FF	VV: Pan Speed (0x01-0x18) WW: Tilt Speed(0x01-0x14) YYYY: Pan Position** ZZZZ: Tilt Position**
	Down	8x 01 06 01 VV WW 03 02 FF	
	Left	8x 01 06 01 VV WW 01 03 FF	
	Right	8x 01 06 01 VV WW 02 03 FF	
	UpLeft	8x 01 06 01 VV WW 01 01 FF	
	UpRight	8x 01 06 01 VV WW 02 01 FF	
	DownLeft	8x 01 06 01 VV WW 01 02 FF	
	DownRight	8x 01 06 01 VV WW 02 02 FF	
	Stop	8x 01 06 01 VV WW 03 03 FF	
	Absolute Position	8x 01 06 02 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	
	Home	8x 01 06 04 FF	
Reset	8x 01 06 05 FF		
Tally	On	8x 01 7E 01 0A 00 02 FF	
	Off	8x 01 7E 01 0A 00 03 FF	
Preset Pan Speed	Pan/Tilt/Zoom Speed	8x 01 7E 01 0B WW SS ZZ FF	WW: Pan Speed (0x01-0x18) SS:Tilt Speed(0x01-0x14) ZZ:Zoom Speed(0-7);
Motor Config	Hard Motor Stops	8x 01 7E 01 70 00 00 FF	
	Soft Motor Stops	8x 01 7E 01 70 00 01 FF	
BLK.Enhance	Pedestal	8x 01 7E 53 00 00 0p 0q FF	Pq: Pedestal(0x00-0xFF)
GMA.Enhance	Gamma	8x 01 7E 54 00 00 0p 0q FF	pq: Gamma (0x00-0x03)
CRM.Enhance	Chroma	8x 01 7E 55 00 00 0p 0q FF	pq: Chroma (0x00-0xFF)
KNE.Enhance	Knee	No Support	No Support
DIS.Enhance	Digital Image	8x 01 7E 57 02 FF	On Off
	Stabilizer	8x 01 7E 57 03 FF	
DNR.Enhance	Digital Noise	8x 01 7E 58 02 FF	On Off
	Reduction	8x 01 7E 58 03 FF	
AGC.Enhance	AGC Mode	8x 01 7E 59 00 FF	Off Manual AGC Gain (0dB)
		8x 01 7E 59 01 FF	Low
		8x 01 7E 59 02 FF	Medium
		8x 01 7E 59 03 FF	High
		8x 01 7E 59 04 FF	Low1
		8x 01 7E 59 05 FF	Low2
		8x 01 7E 59 06 FF	Med1
		8x 01 7E 59 07 FF	High1
		8x 01 7E 59 00 0p FF	Off p: Manual AGC Gain(1-0x0e)***
CAM_Shutter	No Support	No Support	No Support
CAM_ICR	ICR Off	8x 01 04 01 02 FF	ICR Off Color ICR On Black and White
	ICR On	8x 01 04 01 03 FF	

** Additional Information:

Pan Range: 8044 – 7FBC (-32,700 to +32,700)

Tilt Range: E891 – 4C2B (-5,999 to +19,499)

Actual Pan/Tilt ranges defined in Inquiry list



HD-22/30 Inquiry List (1/1)

Inquiry Command	Command	Response Packet	Comments
CAM_PowerInq	8x 09 04 00 FF	y0 50 02 FF y0 50 03 FF	On Off(Standby)
CAM_ICRModelInq	8x 09 04 01 FF	y0 50 02 FF y0 50 03 FF	On - ICR filter Out Off - ICR filter In
CAM_BacklightModelInq	8x 09 04 33 FF	y0 50 02 FF y0 50 03 FF	On Off
CAM_WBModelInq	81 09 04 35 FF	y0 50 00 FF y0 50 01 FF y0 50 02 FF y0 50 03 FF y0 50 05 FF y0 50 06 FF	Auto Indoor Outdoor One Push WB Manual Fluorescent
CAM_AEModelInq	8x 09 04 39 FF	y0 50 00 FF y0 50 03 FF	Auto Exposure Mode Manual Control Mode
CAM_LR_Reverse	8x 09 04 61 FF	y0 50 02 FF y0 50 03 FF	On Off
CAM_Freeze	8x 09 04 62 FF	y0 50 02 FF y0 50 03 FF	On Off
CAM_PictureEffect	8x 01 04 63 FF	y0 50 00 FF y0 50 04 FF	Off B&W
CAM_MemoryInq	8x 09 04 3F FF	y0 50 0p FF	p:Preset 0-0xf
CAM_IDInq	8x 09 04 22 FF	y0 50 0p 0q 0r 0s FF	pqr:0x0000 - 0xFFFF
CAM_ApertureInq	8x 09 04 42 FF	y0 50 00 00 0p 0q FF	Pq:x00-0x3F
CAM_RGain	8x 09 04 43 FF	y0 50 00 00 0p 0q FF	pp:000-0ff
CAM_BGain	8x 09 04 44 FF	y0 50 00 00 0p 0q FF	pp:000-0ff
CAM_ZoomPosInq	8x 09 04 47 FF	y0 50 0p 0q 0r 0s FF	pqr: 0-0x6B3
CAM_FocusPosInq	8x 09 04 48 FF	y0 50 0p 0q 0r 0s FF	pqr: Focus Position
CAM_FocusModelInq	8x 09 04 38 FF	y0 50 02 FF y0 50 03 FF	Auto Manual
CAM_Gain	8x 09 04 4C FF	y0 50 00 00 0p 0q FF	pp(0x00-0x24)
CAM_IRReceiveInq	8x 09 06 08 FF	y0 50 02 FF y0 50 03 FF	On Off
Pan-TiltMaxSpeedInq	8x 09 06 11 FF	y0 50 pp qq FF	pp:Pan 0x01-0x18 qq:Tilt 0x01-0x14
Pan-tiltPositionInq	8x 09 06 12 FF	FF y0 50 0p 0p 0p 0p 0q 0q 0q 0q FF	pppp: Pan 0x8044-0x7FB2 qqqq: Tilt 0xE890-0x4C2C
CAM_ShutterPosInq	No support	No support	Shutter Position
TallyInq	8x 09 7E 01 0A FF	y0 50 02 FF y0 50 03 FF	On Off
PresetSpeedInq	8x 09 7E 01 0B FF	y0 50 pp qq rr FF	pp:Pan 0x01-0x18 qq:Tilt 0x01-0x14 rr:Zoom 0x00-0x07
Motor Config	8x 09 7E 01 70 FF	y0 50 00 FF y0 50 01 FF	Hard Motor Stops Soft Motor Stops
BLK.Enhance	8x 09 7E 53 FF	y0 50 00 00 0p 0q FF	pp: Pedestal(0x00-0xFF)
GMA.Enhance	8x 09 7E 54 FF	y0 50 00 00 00 0p FF	p: Gamma (0x00-0x03)
CRM.Enhance	8x 09 7E 55 FF	y0 50 00 00 0p 0q FF	p: Chroma (0x00-0xFF)
KNE.Enhance	No support	No Support	Knee
DIS.Enhance	8x 09 7E 57 FF	y0 50 02 FF y0 50 03 FF	On Off
DNR.Enhance	8x 09 7E 58 FF	y0 50 02 FF y0 50 03 FF	On Off
AGC.Enhance	8x 09 7E 59 FF	y0 50 00 FF y0 50 01 FF y0 50 02 FF y0 50 03 FF y0 50 04 FF y0 50 05 FF y0 50 06 FF y0 50 07 FF 8x 09 7E 59 00 FF	Off Manual AGC Gain(0dB) Low Medium High Low1 Low2 Med1 High1 Off p: Manual AGC Gain(0-0x0e)***

***Manual AGC Gain: 0:0dB, 1:3dB, 2:6dB, 3:9dB, 4:12dB, 5:15dB, 6:18dB, 7:21dB, 8:24dB, 9:27dB, 10:30dB, 11:33dB, 12:36dB, 13:39dB & 14:42dB

COMPLIANCE AND CE DECLARATION OF CONFORMITY - POWERVIEW HD-22 AND HD30

Compliance testing was performed to the following regulations:

- **FCC Part 15 (15.107, 15.109), Subpart B**
- **ICES-003, Issue 4: 2004**
- **EN 55022 A: 2006 + A1: 2007**
- **KN24 2008 (CISPR 24: 1997 + A1: 2000 + A2: 2002)**
- **KN22 2008 (CISPR 22: 2006)**
- **EMC Directive 2004/108/EC**
- **EN 55024: A2: 2003**

- Class A
- Class A
- Class A
- Class A
- Class A
- Class A
- Class A



FCC Part 15 Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15, Subpart B, of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference including interference that may cause undesired operation of the device. Changes or modifications not expressly approved by Vaddio can affect emission compliance and could void the user's authority to operate this equipment.



ICES-003 Compliance

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.



European Compliance

This product has been evaluated for Electromagnetic Compatibility under the EMC Directive for Emissions and Immunity and meets the requirements for a Class A digital device. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Standard(s) To Which Conformity Is Declared:

- EMC Directive 2004/108/EC**
- EN 55022 A: 2006 + A1: 2007(CISPR 22:2005/A1:2005)**
- EN 55024: 1998 + Amendments A1: 2001 + A2: 2003**

- EN 61000-4-2: 1995 + Amendments A1: 1998 + A2: 2001
- EN 61000-4-3: 2006 + A1: 2008
- EN 61000-4-4: 2004 + Corrigendum 2006
- EN 61000-4-5: 2006
- EN 61000-4-6: 2009
- EN 61000-4-8: 2010
- EN 61000-4-11: 2004

KN24 2008 (CISPR 24: 1997 + A1: 2000 + A2: 2002)

- EN 61000-4-2
- EN 61000-4-3
- EN 61000-4-4
- EN 61000-4-5
- EN 61000-4-6
- EN 61000-4-8
- EN 61000-4-11

IEC 60950-1:2005 (2nd Edition); Am 1:2009

EN 60950-1:2006+A11:2009+A1:2010+A12:2011

- Radiated and Conducted Emissions
- Immunity
- Electrostatic Discharge
- Radiated Immunity
- Electrical Fast Transients
- Surge Immunity
- Conducted Immunity
- Power Frequency Magnetic Field
- Voltage Dips, Interrupts and Fluctuations
- IT Immunity Characteristics
- Electrostatic Discharge
- Radiated Immunity
- Electrical Fast Transients
- Surge Immunity
- Conducted Immunity
- Power Frequency Magnetic Field
- Voltage Dips, Interrupts and Fluctuations
- Safety
- Safety

COMPLIANCE AND CE DECLARATION OF CONFORMITY - QUICK-CONNECT USB INTERFACE

Compliance testing was performed to the following regulations:

- **FCC Part 15 (15.107, 15.109), Subpart B**
- **ICES-003, Issue 4: 2004**
- **EN 55022 A: 2006 + A1: 2007**
- **EMC Directive 2004/108/EC**
- **EN 55024: A2: 1998 + Amendments A1: 2001 + A2: 2003**

- Class A
- Class A
- Class A
- Class A
- Class A



FCC Part 15 Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15, Subpart B, of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference including interference that may cause undesired operation of the device. Changes or modifications not expressly approved by Vaddio can affect emission compliance and could void the user's authority to operate this equipment.



ICES-003 Compliance

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.



European Compliance

This product has been evaluated for Electromagnetic Compatibility under the EMC Directive for Emissions and Immunity and meets the requirements for a Class A digital device. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Standard(s) To Which Conformity Is Declared:

EMC Directive 2004/108/EC

EN 55022 A: 2006 + A1: 2007(CISPR 22:2005/A1:2005)

EN 55024: A2: 1998 + Amendments A1: 2001 + A2: 2003

- EN 61000-4-2: 1995 + Amendments A1: 1998 + A2: 2001
- EN 61000-4-3: 2006 + A1: 2008
- EN 61000-4-4: 2004 + Corrigendum 2006
- EN 61000-4-5: 2006
- EN 61000-4-6: 2009
- EN 61000-4-8: 2010
- EN 61000-4-11: 2004

IEC 60950-1: 2005 2nd Edition); AM 1: 2009

EN 60950-1: 2006 + A11: 2009 + A1: 2010 + A12:2011

- Class A
- Immunity
- Electrostatic Discharge
- Radiated Immunity
- Electrical Fast Transients
- Surge Immunity
- Conducted Immunity
- Power Frequency Magnetic Field
- Voltage Dips, Interrupts and Fluctuations
- Safety
- Safety

WARRANTY INFORMATION

(See Vaddio Warranty, Service and Return Policies posted on vaddio.com for complete details):

Hardware* Warranty: Two (2) year limited warranty on all parts and labor for Vaddio manufactured products. Vaddio warrants its manufactured products against defects in materials and workmanship for a period of two years from the day of purchase, to the original purchaser, if Vaddio receives notice of such defects during the warranty. Vaddio, at its option, will repair or replace products that prove to be defective. Vaddio manufactures its hardware products from parts and components that are new or equivalent to new in accordance with industry standard practices.

Exclusions: The above warranty shall not apply to defects resulting from improper or inadequate maintenance by the customer, customers applied software or interfacing, unauthorized modifications or misuse, mishandling, operation outside the normal environmental specifications for the product, use of the incorrect power supply, modified power supply or improper site operation and maintenance. OEM and Special Order products manufactured by other companies are excluded and are covered by the manufacturer's warranty.

Vaddio Customer Service: Vaddio will test, repair, or replace the product or products without charge if the unit is under warranty. If the product is out of warranty, Vaddio will test then repair the product or products. The cost of parts and labor charge will be estimated by a technician and confirmed by the customer prior to repair. All components must be returned for testing as a complete unit. Vaddio will not accept responsibility for shipment after it has left the premises.

Vaddio Technical Support: Vaddio technicians will determine and discuss with the customer the criteria for repair costs and/or replacement. Vaddio Technical Support can be contacted through one of the following resources: e-mail support at support@vaddio.com or online at vaddio.com.

Return Material Authorization (RMA) Number: Before returning a product for repair or replacement request an RMA from Vaddio's technical support. Provide the technician with a return phone number, e-mail address, shipping address, product serial numbers and original purchase order number. Describe the reason for repairs or returns as well as the date of purchase. See the General RMA Terms and Procedures section for more information. RMA's are valid for 30 days and will be issued to Vaddio dealers only. End users must return products through Vaddio dealers. Include the assigned RMA number in all correspondence with Vaddio. Write the assigned RMA number clearly on the shipping label of the box when returning the product. All products returned for credit are subject to a restocking charge without exception. Special Order product are not returnable.

Voided Warranty: The warranty does not apply if the original serial number has been removed or if the product has been disassembled or damaged through misuse, accident, modifications, use of incorrect power supply, use of a modified power supply or unauthorized repair.

Shipping and Handling: Vaddio will not pay for inbound shipping transportation or insurance charges or accept any responsibility for laws and ordinances from inbound transit. Vaddio will pay for outbound shipping, transportation, and insurance charges for all items under warranty but will not assume responsibility for loss and/or damage by the outbound freight carrier. If the return shipment appears damaged, retain the original boxes and packing material for inspection by the carrier. **Contact your carrier immediately.**

Products not under Warranty: Payment arrangements are required before outbound shipment for all out of warranty products.

Other General Information:

Care and Cleaning

Do not attempt to take this product apart at any time. There are no user-serviceable components inside.

- Do not spill liquids in the product
- Keep this device away from food and liquid
- For smears or smudges on the product, wipe with a clean, soft cloth
- Do not use any abrasive chemicals.


Operating and Storage Conditions:

Do not store or operate the device under the following conditions:

- Temperatures above 40°C (104°F) or temperatures below 0°C (32°F)
- High humidity, condensing or wet environments
- In inclement weather
- In swimming pools, generally speaking
- Dry environments with an excess of static discharge
- In orbit (re-entry problem)
- Under severe vibration

APPENDIX 1: PIN-OUTS FOR THE HD-22/30 CAMERA
YPbPr Video Pin-Out for the HD-22/30 Camera

Pin	YPbPr
1	Pr
2	Y
3	Pb
4	-
5	-
6	Pr GND
7	Y GND
8	Pb GND
9	-
10	GND
11	-
12	-
13	-
14	-
15	-

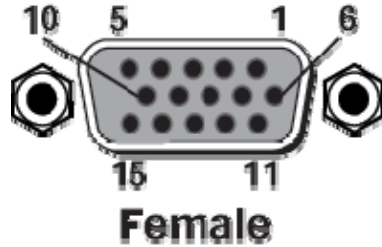


EZ-POWER VIDEO RJ-45 Connector Pin-outs




Important Note: The EZ -POWER VIDEO RJ-45 Connector is for use with the **Quick-Connect SR, Quick-Connect DVI/HDMI SR and Quick-Connect USB Interfaces ONLY** (568B Wiring Standard). The video signals are differential (HSDS™) and can only be received by the interfaces above.

Pin	YPbPr
1	Power+
2	Power-
3	Y+
4	PB+
5	PB -
6	Y -
7	PR+
8	PR-

EZ-POWER VIDEO

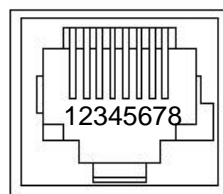

Drawing: PowerVIEW HD-22/30 Dimensions

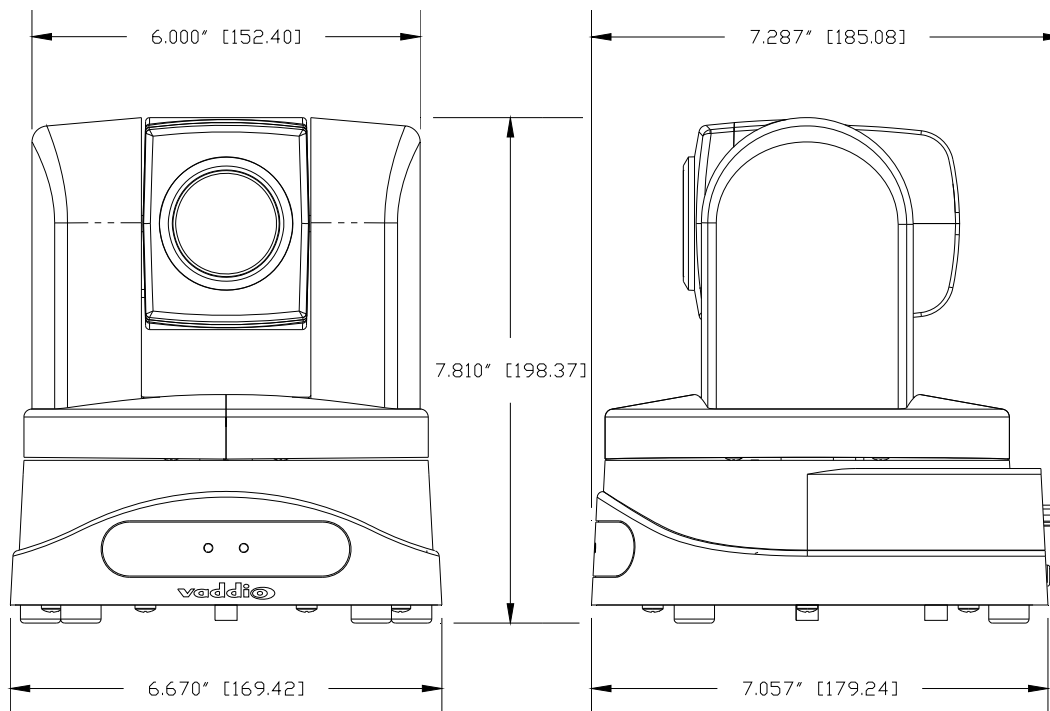

QUICK-CONNECT USB TELNET SERIAL COMMAND SET

The Telnet API for the Quick-Connect USB is similar to, but not identical to the RoboSHOT Telnet API. Some of the differences include the IP and USB 2.0 streaming sections as well as a few others. Telnet sessions will require access verification and uses the same username and password associated with the Administrator account on the embedded web server. The default Telnet Port is 23. Command lines are terminated with a carriage return.

Camera Home

- **NAME**
camera home - Move the camera to the home position
- **SYNOPSIS**
camera home
- **DESCRIPTION**
Method used to move the **camera** to the *home* position
- **EXAMPLES**
camera home
Move the **camera** back to the *home* position

Camera Pan

- **NAME**
camera pan - Pans the camera left or right
- **SYNOPSIS**
camera pan {left|right|stop} [1-24]
- **DESCRIPTION**
Method used to *pan* the **camera**
- **OPTIONS**
left Move the **camera** left
right Move the **camera** right
stop Stop the **camera** movement
speed Optional integer from 1-24 that represents the speed (Default: 12)
- **EXAMPLES**
camera pan left
Pans the **camera** left at the default speed
camera pan right 20
Pans the **camera** right using a speed of 20
camera pan stop
Stops the *pan* movement of the **camera**

Camera Preset

- **NAME**
camera preset - Recall and storing of camera presets
- **SYNOPSIS**
camera preset {recall|store} [1-6]
- **DESCRIPTION**
Method used to recall and store **camera** presets
- **OPTIONS**
recall Recall *preset*
store Store *preset*
preset Required value from 1-6 used to indicate the *preset* number
- **EXAMPLES**
camera recall 3
Move **camera** to *preset* position 3
camera store 1
Store current **camera** position as *preset* 1



Image: Invigorating simulated Telnet session.



Camera Tilt

- **NAME**
camera tilt - Tilts the camera up or down
- **SYNOPSIS**
camera tilt {up|down|stop} [1-20]
- **DESCRIPTION**
Method used to *tilt* the **camera**
- **OPTIONS**
up Move the **camera** up
down Move the **camera** down
stop Stop the **camera** movement
speed Optional integer from 1-20 that represents the speed (Default: 10)
- **EXAMPLES**
camera tilt up
Tilts the **camera** up at the default speed
camera tilt down 20
Tilts the **camera** up using a speed of 20
camera tilt stop
Stops the *tilt* movement of the **camera**

Camera Zoom

- **NAME**
camera zoom - Zoom the camera in or out
- **SYNOPSIS**
camera zoom {in|out|stop} [1-7]
- **DESCRIPTION**
Method used to *zoom* the **camera**
- **OPTIONS**
in Zoom in
out Zoom out
stop Stop the **camera** movement
speed Optional integer from 1-7 that represents the speed (Default: 3)
- **EXAMPLES**
camera zoom in
Zooms the **camera** in at the default speed
camera zoom out 7
Zooms the **camera** out using a speed of 7
camera zoom stop
Stops the *zoom* movement of the **camera**

Camera

- **NAME**
camera - Base command for camera control command. Used in conjunction with control arguments to include home, pan, tilt, zoom, and preset.

Exit

- **NAME**
exit - ends the current API command session
- **SYNOPSIS**
exit
- **DESCRIPTION**
Exit ends the current API command session. If the session is over telnet, the session is ended and the socket is closed. If the session is over serial, a new session is started.

Help

- **NAME**

help - display an overview of the CLI syntax

- **SYNOPSIS**

help

- **DESCRIPTION**

Display an overview of the command line syntax



History

- **NAME**

history - command history

- **SYNOPSIS**

history [*limit*]

- **DESCRIPTION**

Since many of the programs read user input a line at a time, the command **history** is used to keep track of these lines and also recall historic information

- **HISTORY NAVIGATION**

The command **history** can be navigated using the up and down arrow keys. The up arrow will move up a single entry in the command **history** while the down arrow moves down in the command **history**.

- **HISTORY EXPANSION**

The command **history** supports the expansion functionality from which previous commands can be recalled from within a single session. History expansion is performed immediately after a complete line is read.

Listed below are examples of **history** expansion:

* **!** Substitute the last command line.

* **!N** Substitute the Nth command line (absolute as per '**history**' command)

* **!-N** Substitute the command line entered N lines before (relative)

- **EXAMPLES**

history

Displays the current command buffer

history 5

Sets the **history** command buffer to remember the last 5 unique entries

Network Ping

- **NAME**

network ping - send ICMP ECHO_REQUEST to network hosts

- **SYNOPSIS**

network ping [*count* <*count*>] [*size* <*size*>] <destination-ip>

- **DESCRIPTION**

Use the ICMP protocol's mandatory ECHO_REQUEST datagram to elicit an ICMP ECHO_RESPONSE from a host or gateway. ECHO_REQUEST datagrams have an IP and ICMP header, followed by a struct timeval and then an arbitrary number of pad bytes used to fill out the packet.

- **OPTIONS**

count Stop after sending *count* ECHO_REQUEST packets. With deadline option, *ping* waits for *count* ECHO_REPLY packets, until the timeout expires. The default is 5.

destination

The destination IP address where the ECHO_REQUESTS are sent

size The data *size* of the ICMP packet to send. The default is 56 bytes

- **EXAMPLES**

network ping 192.168.1.1

Attempt to send 5 ICMP ECHO_REQUESTs with data *size* 56 to the host at 192.168.1.1

network ping *count* 10 *size* 100 192.168.1.1

Attempt to send 10 ICMP ECHO_REQUESTs with data *size* of 100 to the host at 192.168.1.1

Network Settings

- **NAME**

network settings - get current network settings

- **SYNOPSIS**

network settings {get}

- **DESCRIPTION**

Method used to get the current **network settings** of the device

- **OPTIONS**

get Get the current **network settings** for the machine

- **EXAMPLES**

network settings get

MAC Address:

00:04:a3:85:0a:ee

IP Address:

10.10.8.116


Netmask:

255.255.255.0

Gateway:

10.10.8.100

Returns the current **network settings** for mac address, ip address, netmask, and gateway

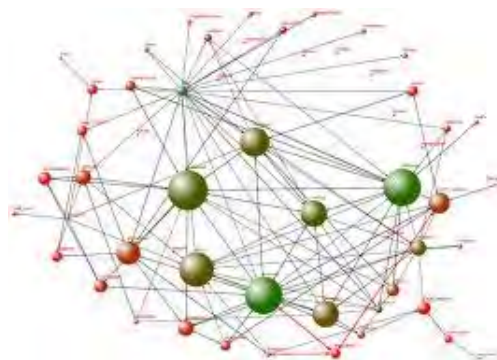

Network

- **NAME**

network - Gets the current network settings or pings an IP address

- **SYNOPSIS**

network {settings get | ping [count <count>] [size <size>] <destination-ip>}

- **DESCRIPTION**

Method used to *get* the current **network** settings or check **network**

- **OPTIONS**

settings

Get the current **network** settings

ping Send ICMP ECHO_REQUEST to **network** host

- **EXAMPLES**

network settings get

Gets the current **network** settings

network ping count 1 10.10.10.100

Pings 10.10.10.100 once and displays results

Streaming Mode

- **NAME**

streaming mode - Gets or sets the current streaming mode

- **SYNOPSIS**

streaming mode {get|usb|network}

- **DESCRIPTION**

Method used to get or set the current **streaming** settings

- **OPTIONS**

get Get the current **streaming mode**

usb

Set the current **streaming mode** to USB

ethernet

Set the current **streaming mode** to Ethernet

- **EXAMPLES**

streaming mode get

mode: usb

Returns the current **streaming mode**

streaming mode usb

streaming mode ethernet

OK

Sets the **streaming mode** to Ethernet

Streaming Quality

- **NAME**

streaming quality - Gets or sets the current streaming quality

- **SYNOPSIS**

streaming quality {get|low|standard|high}

- **DESCRIPTION**

Method used to get or set the current **streaming quality**

- **OPTIONS**

get Get the current **streaming quality**

low Set video *quality* to low

standard Set video *quality* to standard

high Set video *quality* to high

- **EXAMPLES**

streaming quality get

quality:low

Returns the current **streaming quality**

streaming quality standard

OK

Sets the **streaming quality** to standard

Streaming Resolution

- **NAME**

streaming resolution - Gets or sets the current IP streaming quality

- **SYNOPSIS**

streaming resolution {get|1080p|720p|4cif|480p|cif}

- **DESCRIPTION**

Method used to get or set the current **streaming resolution**

- **OPTIONS**

get Get the current **streaming resolution**

1080p Set video *resolution* to 1080p

720p Set video *resolution* to 720p

4cif Set video *resolution* to 4cif

480p Set video *resolution* to 480p

cif Set video *resolution* to cif

- **EXAMPLES**

streaming resolution get

resolution:720p

Returns the current **streaming resolution**

streaming resolution 720p

OK

Sets the **streaming resolution** to 720p

Streaming

- **NAME**

streaming - Gets or sets the current streaming settings

- **SYNOPSIS**

streaming {mode {get|usb|ethernet}} | resolution {get|1080p|720p|4cif|480p|cif} | quality {get|low|standard|high}}

- **DESCRIPTION**

Method used to get or set the current **streaming** settings

- **OPTIONS**

mode Get or set the current **streaming** mode

resolution Get or set the current **streaming** video *resolution*

quality Get or set the current **streaming** video frame rate and bit rate

- **EXAMPLES**

streaming mode get

mode: usb

Returns the current **streaming** mode

streaming mode ethernet

Sets the **streaming** mode to Ethernet

streaming quality standard

Sets the **streaming quality** to standard

streaming resolution 720p

Sets the **streaming resolution** to 720p



Factory-Reset

- **NAME**

system factory-reset - Gets or sets factory reset status

- **SYNOPSIS**

`system factory-reset {get|on|off}`

- **DESCRIPTION**

Method used to get or set the factory reset status

- **OPTIONS**

`get` Get the current factory reset status

`on` Enable factory reset on reboot

`off` Disable factory reset on reboot

- **EXAMPLES**

`system factory-reset get`

`factory-reset (software):`

`off`

`factory-reset (hardware):` [Hardware reset is designated by rear panel dip switches in down position]

`off`

Returns the factory reset status

`system factory-reset on`

`factory-reset (software): on`

`factory-reset (hardware): off`

Enables factory reset upon reboot



System Reboot

- **NAME**

system reboot - Reboots system

- **SYNOPSIS**

`system reboot [<seconds>]`

- **DESCRIPTION**

Method used to reboot system

- **OPTIONS**

`seconds`

The number of seconds to delay the reboot

- **EXAMPLES**

`reboot`

Reboot system immediately

`reboot 30`

Reboot the system in 30 seconds

System

- **NAME**

system - gets or Sets the Current System Settings

- **SYNOPSIS**

`system {factory-reset {get|on|off} | reboot [<seconds>]}`

- **DESCRIPTION**

Method used to get/set the current **system** settings or execute **system** commands

- **OPTIONS**

`factory-reset`

Get or set the factory reset status

`reboot` Reboot the **system**

- **EXAMPLES**

`system factory-reset get`

`factory-reset (software):`

`off`

`factory-reset (hardware):`

`off`

`system factory-reset on`

`factory-reset (software):`

`on`

`factory-reset (hardware):`

`off`

`system reboot`

Broadcast message from root (Thu Jan

1 03:27:40 2266):

The **system** is going down for a *reboot* NOW!

`system reboot 30`

OK

> The **system** is going down for a *reboot* NOW!



System Update

- **NAME**

system update - Updates the system given a url to the update file

- **SYNOPSIS**

system update [<url>]

- **DESCRIPTION**

Method used to update the system via a url

- **OPTIONS**

url - The url of the file to be fetched

- **EXAMPLES**

system update <file name>

Update the system using the update file

Version

- **NAME**

version - display the system version information

- **SYNOPSIS**

version

- **DESCRIPTION**

Display an overview of the command line syntax

- **EXAMPLES**

Version

Returns the current software **version**



Inside Rear Cover Page - Suspiciously Blank



Toll Free: 800-572-2011 ▪ Phone: 763-971-4400 ▪ FAX: 763-971-4464

www.vaddio.com