

HD 3CCD Color Video Camera

Command List

Version 1.20

BRC-H700

Table of Contents

VISCA RS-232C/RS-422 Commands	3
Overview of VISCA.....	3
VISCA Communication Specifications	4
VISCA Device Setting Command	6
VISCA Command/ACK Protocol.....	7
VISCA Camera-Issued Messages	8
BRC-H700 Commands	9
BRC-H700 Command List (1/5)	9
BRC-H700 Command List (2/5)	10
BRC-H700 Command List (3/5)	11
BRC-H700 Command List (4/5)	12
BRC-H700 Command List (5/5)	13
BRC-H700 Inquiry Command List (1/3).....	14
BRC-H700 Inquiry Command List (2/3).....	15
BRC-H700 Inquiry Command List (3/3)	16
BRC-H700 Block Inquiry Command List	17
VISCA Command Setting Values	22
Revision History	26

VISCA¹⁾ RS-232C/RS-422 Commands

Use of RS-232C/RS-422 control software based upon this command list may cause malfunction or damage to hardware and software. Sony Corporation is not liable for any such damage.

Overview of VISCA

In VISCA, the side outputting commands, for example, a computer, is called the controller, while the side receiving the commands, such as a BRC-H700, is called the peripheral device. The BRC-H700 serves as a peripheral device in VISCA. In VISCA, up to seven peripheral devices like the BRC-H700 can be connected to one controller using communication conforming to the RS-232C/RS-422 standard. The parameters of RS-232C/RS-422 are as follows.

- Communication speed: 9600 bps/38400 bps
- Data bits : 8
- Start bit : 1
- Stop bit : 1
- Non parity

Flow control using XON/XOFF and RTS/CTS, etc., is not supported.

Peripheral devices are connected in a daisy chain. As shown in Fig. 1, the actual internal connection is a one-direction ring, so that messages return to the controller via the peripheral devices. The devices on the network are assigned addresses.

The address of the controller is fixed at 0.

The addresses of peripheral devices are as follows.

When the address of the controller is fixed at 0

The addresses of the peripheral devices are 1, 2, 3 ... in order, starting from the one nearest the controller. The address of the peripheral device is set by sending address commands during the initialization of the network.

When the address of the controller is fixed at 1 through 7 (in manual setting mode)

The addresses of the peripheral devices will be set on a preselected number. Within a single system, the same number can be used only once. If the address-switch number other than 0 is to be used, change the BRC-H700 camera address selectors to a different number beforehand.


Note

In the same network, all the camera address selectors should be set to "0" (automatic setting) or all the selectors should be manually set to "1" to "7". Do not mix the automatic setting and the manual setting.

Each VISCA device has a VISCA IN and VISCA OUT connector.

Set the DTR input (the S output of the controller) of VISCA IN to H when controlling VISCA equipment from the controller.

Fig. 1 VISCA network configuration

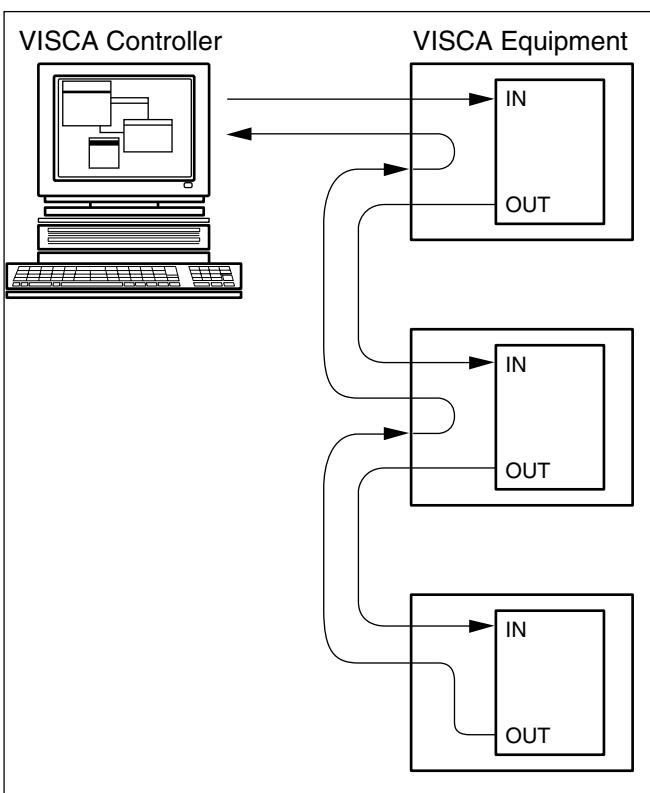

1) VISCA is a protocol which controls consumer camcorders developed by Sony. "VISCA" is a trademark of Sony Corporation.

VISCA Communication Specifications

VISCA packet structure

The basic unit of VISCA communication is called a packet (Fig. 2). The first byte of the packet is called the header and comprises the sender's and receiver's addresses. For example, the header of the packet sent to the BRC-H700 assigned address 1 from the controller (address 0) is hexadecimal 81H. The packet

sent to the BRC-H700 assigned address 2 is 82H. In the command list, as the header is 8X, input the address of the BRC-H700 at X. The header of the reply packet from the BRC-H700 assigned address 1 is 90H. The packet from the BRC-H700 assigned address 2 is A0H.

Some of the commands for setting BRC-H700 units can be sent to all devices at one time (broadcast). In the case of broadcast, the header should be hexadecimal 88H.

When the terminator is FFH, it signifies the end of the packet.

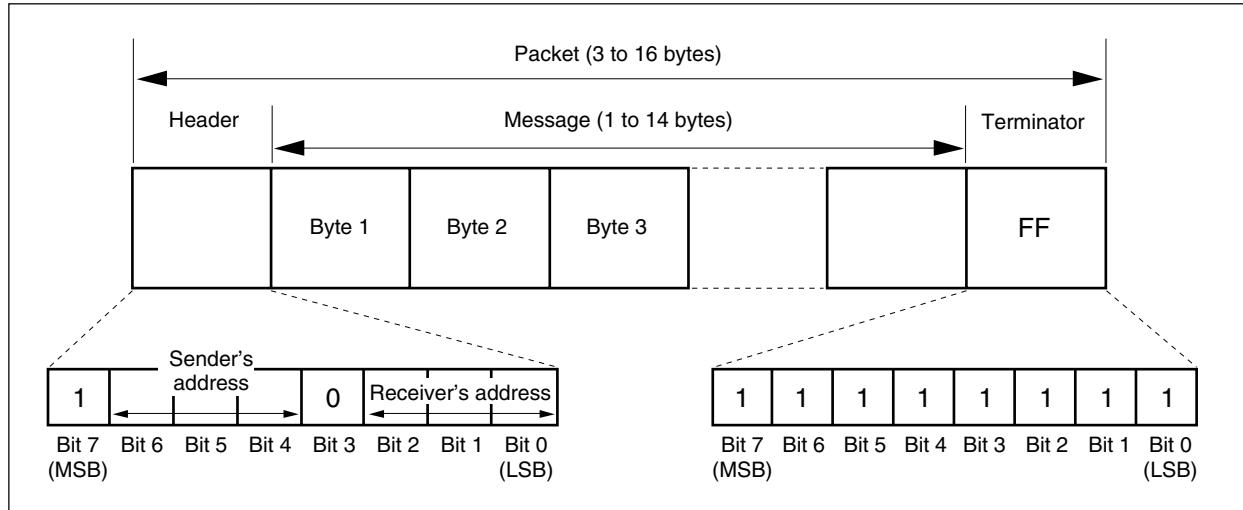


Fig. 2 Packet structure

Note

Fig. 2 shows the packet structure, while Fig. 3 shows the actual waveform. Data flow will take place with the LSB first.

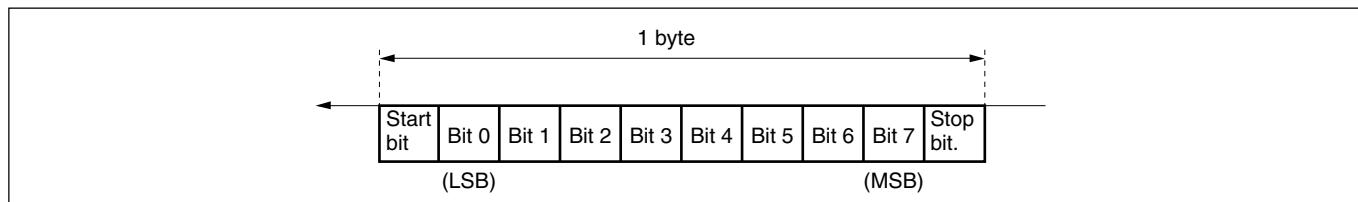



Fig. 3 Actual waveform for 1 byte.

Timing Chart


As VISCA Command processing can only be carried out one time in a Vertical cycle, it takes the maximum 1V cycle time for an ACK/Completion to be returned. If the Command ACK/Completion communication time can be cut shorter than the 1V cycle time, then every 1V cycle can receive a Command.

From this point, if 2 or more commands in a row are to be sent, wait for the first command (for normal commands, an ACK or an error message, for query commands, an Inquiry Packet) to be carried out before sending the next one.

General Commands

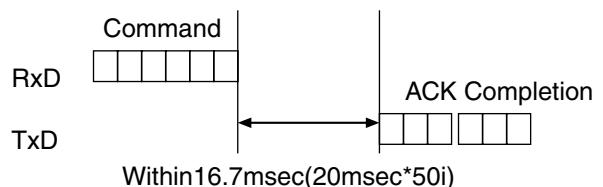

Query Commands

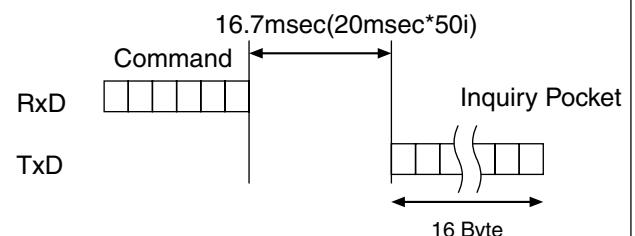

Command and inquiry

● Command

Sends operational commands to the BRC-H700.

● Inquiry

Used for inquiring about the current state of the BRC-H700.

	Command Packet	Note
Inquiry	8X QQ RR ... FF	QQ ¹⁾ = Command/Inquiry, RR ²⁾ = category code

¹⁾ QQ = 01 (Command), 09 (Inquiry)

²⁾ RR = 00 (Interface), 04 (camera 1), 06 (Pan/Tilt)

X = 1 to 7: BRC-H700 address

For actual values to be sent, see Command Lists or Inquiry Command Lists.

Responses for commands and inquiries

● ACK message

Returned by the BRC-H700 when it receives a command. No ACK message is returned for inquiries.

● Completion message

Returned by the BRC-H700 when execution of commands or inquiries is completed. In the case of inquiry commands, it will contain reply data for the inquiry after the 3rd byte of the packet. If the ACK message is omitted, the socket number will contain a 0.

	Reply Packet	Note
Ack	X0 4Y FF	Y = socket number
Completion (commands)	X0 5Y FF	Y = socket number
Completion (Inquiries)	X0 5Y ... FF	Y = socket number

X = 9 to F: BRC-H700 address + 8

● Error message

When a command or inquiry command could not be executed or failed, an error message is returned.

Error Packet	Description
X0 6Y 01 FF	Message length error
X0 6Y 02 FF	Syntax Error
X0 6Y 03 FF	Command buffer full
X0 6Y 04 FF	Command cancelled
X0 6Y 05 FF	No socket (to be cancelled)
X0 6Y 41 FF	Command not executable

X = 9 to F: BRC-H700 address + 8, Y = socket number

Socket number

When command messages are sent to the BRC-H700, it is normal to send the next command message after waiting for the completion message or error message to return. However to deal with advanced uses, the BRC-H700 has two buffers (memories) for commands, so that up to two commands including the commands currently being executed can be received. When the BRC-H700 receives commands, it notifies the sender which command buffer was used using the socket number of the ACK message.

As the completion message or error message also has a socket number, it indicates which command has ended. Even when two command buffers are being used at any one time, a BRC-H700 management command and some inquiry messages can be executed.

The ACK message is not returned for these commands and inquiries, and only the completion message of socket number 0 is returned.

Command execution cancel

To cancel a command which has already been sent, send the Cancel command as the next command. To cancel one of any two commands which have been sent, use the cancel message.

	Cancel Packet	Note
Cancel	8X 2Y FF	Y = socket number

X = 1 to 7: BRC-H700/P address, Y = socket number

The Command canceled error message will be returned for this command, but this is not a fault. It indicates that the command has been canceled.

VISCA Device Setting Command

Before starting control of the BRC-H700, be sure to send the Address command and the IF_Clear command using the broadcast function.

For VISCA network administration

● Address

Sets an address of a peripheral device. Use when initializing the network, and receiving the following network change message.

● Network Change

Sent from the peripheral device to the controller when a device is removed from or added to the network. The address must be re-set when this message is received.

	Packet	Note
Address	88 30 01 FF	Always broadcasted.
Network Change	X0 38 FF	

X = 9 to Fh: BRC-H700 address + 8

VISCA interface command

● IF_Clear

Clears the command buffers in the BRC-H700. When cleared, the operation currently being executed is not guaranteed.

	Command Packet	Reply Packet	Note
IF_Clear	8X 01 00 01FF	X0 50 FF	
IF_Clear (broadcast)	88 01 00 01 FF	88 01 00 01 FF	

X = 1 to 7: BRC-H700 address (For inquiry packet)
X = 9 to Fh: BRC-H700 address +8 (For reply packet)

VISCA interface and inquiry

● CAM_VersionInq

Returns information on the VISCA interface.

Inquiry	Inquiry Packet	Reply Packet	Description
CAM_VersionInq	8X 09 00 02 FF	Y0 50 GG GG HH HH JJ JJ KK FF	GGGG = Vender ID (0001: Sony) HHHH = Model ID 0501: BRC-H700 0502: BRU-H700 JJJJ = ROM revision KK = Maximum socket # (02)

X = 1 to 7: BRC-H700 address (For inquiry packet)
X = 9 to Fh: BRC-H700 address +8 (For reply packet)

VISCA Command/ACK Protocol

Command	Command Message	Reply Message	Comments
General Command	81 01 04 38 02 FF (Example)	90 41 FF (ACK)+90 51 FF (Completion) 90 42 FF 90 52 FF	Returns ACK when a command has been accepted, and Completion when a command has been executed.
	81 01 04 38 FF (Example)	90 60 02 FF (Syntax Error)	Accepted a command which is not supported or a command lacking parameters.
	81 01 04 38 02 FF (Example)	90 60 03 FF (Command Buffer Full)	There are two commands currently being executed, and the command could not be accepted.
	81 01 04 08 02 FF (Example)	90 61 41 FF (Command Not Executable) 90 62 41FF	Could not execute the command in the current mode.
Inquiry Command	81 09 04 38 FF (Example)	90 50 02 FF (Completion)	ACK is not returned for the inquiry command.
	81 09 05 38 FF (Example)	90 60 02 FF (Syntax Error)	Accepted an incompatible command.
Address Set	88 30 01 FF	88 30 02 FF	Returned the device address to +1.*
IF_Clear (Broadcast)	88 01 00 01 FF	88 01 00 01 FF	Returned the same command.
IF_Clear (For x)	8x 01 00 01 FF	z0 50 FF (Completion)	ACK is not returned for this command.
Command Cancel	8x 2y FF	z0 6y 04 FF (Command Canceled)	Returned when the command of the socket specified is canceled. Completion for the command canceled is not returned.
		z0 6y 05 FF (No Socket)	Returned when the command of the specified socket has already been completed or when the socket number specified is wrong.

* When the address-switch is fixed at 0, the value x in 88 30 0x FF will be indeterminate.

Do not transmit the command (except Address Set, IF_Clear, Command Cancel, CAM_Power), when menu panel shows on the screen. In that case, clear the menu panel first using CAM_Menu Command, and then proceed.

VISCA Camera-Issued Messages

ACK/Completion Messages

Command	Command Message	Comments
ACK	z0 4y FF (y:Socket No.)	Returned when the command is accepted.
Completion	z0 5y FF (y:Socket No.)	Returned when the command has been executed.

z = Device address + 8

Error Messages

Command	Command Message	Comments
Syntax Error	z0 60 02 FF	Returned when the command format is different or when a command with illegal command parameters is accepted.
Command Buffer Full	z0 60 03 FF	Indicates that two sockets are already being used (executing two commands) and the command could not be accepted when received.
Command Canceled	z0 6y 04 FF (y:Socket No.)	Returned when a command which is being executed in a socket specified by the cancel command is canceled. The completion message for the command is not returned.
No Socket	z0 6y 05 FF (y:Socket No.)	Returned when no command is executed in a socket specified by the cancel command, or when an invalid socket number is specified.
Command Not Executable	z0 6y 41 FF (y:Socket No.)	Returned when a command cannot be executed due to current conditions. For example, when commands controlling the focus manually are received during auto focus.

Network Change Message

Command	Command Message	Comments
Network Change	z0 38 FF	Issued when power is supplied to the camera.

BRC-H700 Commands

BRC-H700 Command List (1/5)

Command Set	Command	Command Packet	Comments
AddressSet	Broadcast	88 30 01 FF	Address Set
IF_Clear	Broadcast	88 01 00 01 FF	I/F Clear
CommandCancel		8x 2p FF	p: Socket No (= 1 to 2)
CAM_Power	On	8x 01 04 00 02 FF	Power On/Off
	Off	8x 01 04 00 03 FF	
CAM_Zoom	Stop	8x 01 04 07 00 FF	
	Tele(Standard)	8x 01 04 07 02 FF	
	Wide(Standard)	8x 01 04 07 03 FF	
	Tele(Variable)	8x 01 04 07 2p FF	p (= 0: Slow to 7: Fast)
	Wide(Variable)	8x 01 04 07 3p FF	p (= 0: Slow to 7: Fast)
	Direct	8x 01 04 47 0p 0q 0r 0s FF	pqr: Zoom Position*
CAM_Focus	Stop	8x 01 04 08 00 FF	
	Far(Standard)	8x 01 04 08 02 FF	
	Near(Standard)	8x 01 04 08 03 FF	
	Far(Variable)	8x 01 04 08 2p FF	p (= 0: Slow to 7: Fast)
	Near(Variable)	8x 01 04 08 3p FF	p (= 0: Slow to 7: Fast)
	Direct	8x 01 04 48 0p 0q 0r 0s FF	pqr: Focus Position*
	Auto Focus	8x 01 04 38 02 FF	AF ON/OFF
	Manual Focus	8x 01 04 38 03 FF	
	Auto/Manual	8x 01 04 38 10 FF	
	One Push Trigger	8x 01 04 18 01 FF	One Push AF Trigger
CAM_WB	Auto	8x 01 04 35 00 FF	Normal Auto
	Indoor	8x 01 04 35 01 FF	Indoor Mode
	Outdoor	8x 01 04 35 02 FF	Outdoor Mode
	One Push WB	8x 01 04 35 03 FF	One Push WB Mode
	Manual	8x 01 04 35 05 FF	Manual Control Mode
	One Push Trigger	8x 01 04 10 05 FF	One Push WB trigger
CAM_RGain	Reset	8x 01 04 03 00 FF	Default R Gain setting
	Up	8x 01 04 03 02 FF	
	Down	8x 01 04 03 03 FF	
	Direct	8x 01 04 43 00 00 0p 0q FF	pq: R Gain (= 00 to FFh)
CAM_BGain	Reset	8x 01 04 04 00 FF	Default B Gain setting
	Up	8x 01 04 04 02 FF	
	Down	8x 01 04 04 03 FF	
	Direct	8x 01 04 44 00 00 0p 0q FF	pq: B Gain (= 00 to FFh)
CAM_COLOR_GAIN	Up	8x 01 04 09 02 FF	
	Down	8x 01 04 09 03 FF	
	Reset	8x 01 04 09 00 FF	
	Direct	8x 01 04 49 00 00 00 0p FF	p: (= 0 to Eh)

* See the section under VISCA Command Setting Values.

BRC-H700 Command List (2/5)

Command Set	Command	Command Packet	Comments
CAM_COLOR_HUE	Up	8x 01 04 0F 02 FF	
	Down	8x 01 04 0F 03 FF	
	Reset	8x 01 04 0F 00 FF	
	Direct	8x 01 04 4F 00 00 00 0p FF	p: (= 0 to Eh)
CAM_WB_Sens	Low	8x 01 04 56 01 FF	
	Middle	8x 01 04 56 02 FF	
	High	8x 01 04 56 03 FF	
CAM_WB_Shift	Up	8x 01 7E 01 2E 00 02 FF	
	Down	8x 01 7E 01 2E 00 03 FF	
	Reset	8x 01 7E 01 2E 00 00 FF	
	Direct	8x 01 7E 01 2E 01 0p FF	p: (= 0 to Eh)
CAM_AE	Full Auto	8x 01 04 39 00 FF	Automatic exposure mode
	Manual	8x 01 04 39 03 FF	Manual control mode
	Shutter Priority	8x 01 04 39 0A FF	Shutter priority automatic exposure mode
	Iris Priority	8x 01 04 39 0B FF	Iris priority automatic exposure mode
	Gain Priority	8x 01 04 39 0E FF	Gain priority automatic exposure mode
CAM_AE_Speed	Low	8x 01 04 5D 01 FF	
	Middle	8x 01 04 5D 02 FF	
	High	8x 01 04 5D 03 FF	
CAM_AGC_LIMIT	Direct	8x 01 04 2C 0p FF	p: Gain Limit*
CAM_IRIS_LIMIT	Direct	8x 01 04 2B 0p FF	p: Iris Limit*
CAM_Shutter	Reset	8x 01 04 0A 00 FF	
	Up	8x 01 04 0A 02 FF	Shutter setting (1/60sec to 1/10000sec [59.94i]) (1/50sec to 1/10000sec [50i])
	Down	8x 01 04 0A 03 FF	
	Direct	8x 01 04 4A 00 00 0p 0q FF	pq: Shutter Position*
CAM_Iris	Reset	8x 01 04 0B 00 FF	
	Up	8x 01 04 0B 02 FF	
	Down	8x 01 04 0B 03 FF	
	Direct	8x 01 04 4B 00 00 0p 0q FF	pq: Iris Position*
CAM_Gain	Reset	8x 01 04 0C 00 FF	
	Up	8x 01 04 0C 02 FF	
	Down	8x 01 04 0C 03 FF	
	Direct	8x 01 04 4C 00 00 0p 0q FF	pqr: Gain Position*
CAM_ExpComp	On	8x 01 04 3E 02 FF	
	Off	8x 01 04 3E 03 FF	
	Reset	8x 01 04 0E 00 FF	
	Up	8x 01 04 0E 02 FF	
	Down	8x 01 04 0E 03 FF	
	Direct	8x 01 04 4E 00 00 00 0p FF	pqr: ExpComp Position*
CAM_BackLight	On	8x 01 04 33 02 FF	
	Off	8x 01 04 33 03 FF	
CAM_SpotLight	On	8x 01 04 3A 02 FF	
	Off	8x 01 04 3A 03 FF	
Flicker Reduction	On	8x 01 04 32 02 FF	
	Off	8x 01 04 32 03 FF	
CAM_Aperture	Reset	8x 01 04 02 00 FF	
	Up	8x 01 04 02 02 FF	
	Down	8x 01 04 02 03 FF	
	Direct	8x 01 04 42 00 00 00 0p FF	p: Aperture Gain (= 0 to Fh)

* See the section under VISCA Command Setting Values.

BRC-H700 Command List (3/5)

Command Set	Command	Command Packet	Comments
CAM_Gamma	Normal	8x 01 04 5B 00 FF	
	Cinema	8x 01 04 5B 01 FF	
CAM_PictureEffect	Off	8x 01 04 63 00 FF	
	B&W	8x 01 04 63 04 FF	
CAM_Skintone_Detail	On	8x 01 04 3C 02 FF	
	Off	8x 01 04 3C 03 FF	
	TYPE1	8x 01 04 5C 00 FF	
	TYPE2	8x 01 04 5C 01 FF	
	TYPE3	8x 01 04 5C 02 FF	
CAM_Steady_Shot	On	8x 01 04 34 02 FF	
	Off	8x 01 04 34 03 FF	
	SOFT	8x 01 04 54 01 FF	
	STANDARD	8x 01 04 54 02 FF	
	HARD	8x 01 04 54 03 FF	
CAM_Memory	Reset	8x 01 04 3F 00 0p FF	p: Memory Number (=0 to Fh)
	Set	8x 01 04 3F 01 0p FF	p: Memory Number (=0 to Fh)
	Recall	8x 01 04 3F 02 0p FF	p: Memory Number (=0 to Fh)
CAM_Menu	Off	8x 01 06 06 03 FF	
CAM_Title	Title Set 1	8x 01 7E 01 10 uu vv ww 00 00 00 00 00 00 00 FF	(uu: Hposition [00 to 18 (h)] vv:Vposition [00 to 0A (h)] ww:Blink [00:off to 01:on])
	Title Set 2	8x 01 7E 01 11 aa bb cc dd ee ff gg hh ii jj FF	First 10 Words (ASCII CODE 20h to 7Eh)
	Title Set 3	8x 01 7E 01 12 kk ll mm nn oo pp qq rr ss tt FF	Second 10 Words (ASCII CODE 20h to 7Eh)
	Title Clear	8x 01 7E 01 13 00 FF	
	Title On	8x 01 7E 01 13 02 FF	
	Title Off	8x 01 7E 01 13 03 FF	
CAM_Preset_title	Title Set 1	8x 01 7E 01 14 uu vv ww 0! 00 00 00 00 00 00 FF	(uu: Hposition vv: Vposition ww: Blink !: presetNo 0 to Fh) Refer to CAM_Title.
	Title Set 2	8x 01 7E 01 15 0! aa bb cc dd ee ff gg hh ii jj FF	aa-jj:First 10 Words (ASCII CODE 20h to 7Eh) !: position No (=0 to Fh)
	Title Set 3	8x 01 7E 01 16 0! kk ll mm nn oo pp qq rr ss tt FF	kk-tt:Last 10 Words (ASCII CODE 20h to 7Eh) !: position No (=0 to Fh)
	Title Clear	8x 01 7E 01 17 0! 00 FF	!: position No (=0 to Fh)
	Title On	8x 01 7E 01 17 00 02 FF	
	Title Off	8x 01 7E 01 17 00 03 FF	
CAM_IDWrite		8x 01 04 22 0p 0q 0r 0s FF	pqr: CameraID (=0000 to FFFFh)
IR_Receive	On	8x 01 06 08 02 FF	
	Off	8x 01 06 08 03 FF	
	On/Off	8x 01 06 08 10 FF	

BRC-H700 Command List (4/5)

Command Set	Command	Command Packet	Comments
Pan-tiltDrive	Up	8x 01 06 01 VV WW 03 01 FF	PanSpeed VV (= 01:Slow to 18h:Fast) TiltSpeed WW (= 01:Slow to 18h:Fast)
	Down	8x 01 06 01 VV WW 03 02 FF	
	Left	8x 01 06 01 VV WW 01 03 FF	
	Right	8x 01 06 01 VV WW 02 03 FF	
	UpLeft	8x 01 06 01 VV WW 01 01 FF	
	UpRight	8x 01 06 01 VV WW 02 01 FF	
	DownLeft	8x 01 06 01 VV WW 01 02 FF	
	DownRight	8x 01 06 01 VV WW 02 02 FF	
	Stop	8x 01 06 01 VV WW 03 03 FF	
	AbsolutePosition	8x 01 06 02 VV 00 0Y 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	Speed VV (= 01:Slow to 18h:Fast) YYYYYY: Pan Position* ZZZZZZ: Tilt Position*
	RelativePosition	8x 01 06 03 VV 00 0Y 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	Speed VV (= 01:Slow to 18h:Fast) YYYYYY: Pan Position* ZZZZZZ: Tilt Position*
	Home	8x 01 06 04 FF	
	Reset	8x 01 06 05 FF	
Pan-tiltLimitSet	LimitSet	8x 01 06 07 00 0W 0Y 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	W: 1 UpRight 0:DownLeft* YYYYYY: PanLimit Position* 0x00000 (Center) 0x08A58 (Left End) 0xF75A8 (Right End) ZZZZZZ: TiltLimit Position* 0x00000 (Center) 0x493D (Up End) 0xE796 (Down End)
	LimitClear	8x 01 06 07 01 0W 07 0F 0F 0F 07 0F 0F 0F FF	W: 1 UpRight 0:DownLeft
RAMP_CURVE	MODE1	8x 01 06 31 01 FF	
	MODE2	8x 01 06 31 02 FF	
	MODE3	8x 01 06 31 03 FF	
D-SUB 15Pin OUTPUT	Output 1 RGB	8x 01 7E 01 03 00 00 FF	
	Output 1 YPbPr	8x 01 7E 01 03 00 01 FF	
	RGB SYNC OFF	8x 01 7E 01 07 00 00 FF	
	RGB SYNC RGB	8x 01 7E 01 07 00 02 FF	
D-SUB 15Pin SYNC	3-STATE	8x 01 7E 01 1A 00 00 FF	
	VD	8x 01 7E 01 1A 00 01 FF	
EXT_SYNC	Standard	8x 01 7E 01 2C 00 FF	
	HD1	8x 01 7E 01 2C 01 FF	
	SD1	8x 01 7E 01 2C 02 FF	
CAM_ImgFlip	On	8x 01 04 66 02 FF	
	Off	8x 01 04 66 03 FF	
CAM_PanReverse	On	8x 01 7E 01 06 00 01 FF	
	Off	8x 01 7E 01 06 00 00 FF	
Cam_TiltReverse	On	8x 01 7E 01 09 00 01 FF	
	Off	8x 01 7E 01 09 00 00 FF	
Cmd_Tally	On	8x 01 7E 01 0A 00 02 FF	When Power is on, return to off.
	Off	8x 01 7E 01 0A 00 03 FF	
Cmd_PT_M_Speed	Preset PT Speed	8x 01 7E 01 0B 0p qq FF	p: Memory number (=0 to Fh) qq: Speed (=1 to 18h:fast)

* See the section under VISCA Command Setting Values.

BRC-H700 Command List (5/5)

Command Set	Command	Command Packet	Comments
Cmd_Disp_Info	On	8x 01 7E 01 18 02 FF	
	Off	8x 01 7E 01 18 03 FF	
Cmd_dzm_chg	E-Zoom Limit	81 01 7E 01 19 0p FF	p: 0:x1.0 1:x1.5 2:x2.0 3:x4.0
Cmd_Color_Bar	On	81 01 04 7D 02 FF	When Power is on, return to off.
	Off	81 01 04 7D 03 FF	

	Command Set	Command	Command Packet	Comments
FOR HFBK-XG1 Only	CARD_Picture_size	VGA [Crop]	8x 01 7E 01 1B 0p 00 FF	
		WXGA	8x 01 7E 01 1B 0p 01 FF	
		XGA [Crop]	8x 01 7E 01 1B 0p 02 FF	
		VGA [Letter]	8x 01 7E 01 1B 0p 04 FF	
		XGA [Letter]	8x 01 7E 01 1B 0p 06 FF	
	CARD_Sync_G	Off	8x 01 7E 01 1C 0p 00 FF	
		On	8x 01 7E 01 1C 0p 01 FF	
	CARD_VD_Logic (only when WXGA is selected)	NEG	8x 01 7E 01 1D 0p 01 FF	
		POS	8x 01 7E 01 1D 0p 00 FF	
FOR HFBK-SD1 Only	CARD_DOWN_OUTSEL1	RGB	8x 01 7E 01 24 0p 00 FF	p: 0 BRC-H700 CARD SLOT
		YPbPr	8x 01 7E 01 24 0p 01 FF	p: 1 BRU-H700 CARD SLOT No1
	CARD_DOWN_OUTSEL2	Y/C	8x 01 7E 01 25 0p 00 FF	
		Composite	8x 01 7E 01 25 0p 01 FF	p: 2 BRU-H700 CARD SLOT No2
	CARD_DOWN_RGBSYNC	SYNC G	8x 01 7E 01 26 0p 01 FF	
		SYNC OFF	8x 01 7E 01 26 0p 02 FF	
		SYNC RGB	8x 01 7E 01 26 0p 03 FF	
	CARD_Picture_size	4:3 [Squeeze]	8x 01 7E 01 27 0p 00 FF	
		16:9 [Letter]	8x 01 7E 01 27 0p 01 FF	
		4:3 [Crop]	8x 01 7E 01 27 0p 02 FF	
	CARD_7.5IRE_Setup*	ON (7.5IRE)	8x 01 7E 01 3B 0p 00 FF	
		OFF (0IRE)	8x 01 7E 01 3B 0p 01 FF	
FOR HFBK-HD1 Only	CARD_Analog_outsel	RGB	8x 01 7E 01 28 0p 00 FF	
		YPbPr	8x 01 7E 01 28 0p 01 FF	
	CARD_Analog_RGB_SYNC	RGB SYNC OFF	8x 01 7E 01 29 0p 00 FF	
		RGB SYNC ON (RGB)	8x 01 7E 01 29 0p 01 FF	
	CARD_SYNC_SEL	VD	8x 01 7E 01 2A 0p 00 FF	
		3-STATE	8x 01 7E 01 2A 0p 01 FF	
FOR HFBK-TS1 Only	Audio Delay setting	q: 0-A (step)	8x 01 7E 01 2B 0p 0q FF	

* Available only for output of 59.94i signal format

BRC-H700 Inquiry Command List (1/3)

Inquiry Command	Command Packet	Inquiry Packet	Comments
CAM_PowerInq	8x 09 04 00 FF	y0 50 02 FF	On
		y0 50 03 FF	Off (Standby)
CAM_ZoomPosInq	8x 09 04 47 FF	y0 50 0p 0q 0r 0s FF	pqr: Zoom Position
CAM_FocusModeInq	8x 09 04 38 FF	y0 50 02 FF	Auto Focus
		y0 50 03 FF	Manual Focus
CAM_FocusPosInq	8x 09 04 48 FF	y0 50 0p 0q 0r 0s FF	pqr: Focus Position
CAM_WBModeInq	8x 09 04 35 FF	y0 50 00 FF	Auto
		y0 50 01 FF	Indoor
		y0 50 02 FF	Outdoor
		y0 50 03 FF	One Push WB
		y0 50 05 FF	Manual
CAM_RGainInq	8x 09 04 43 FF	y0 50 00 00 0p 0q FF	pq: R Gain
CAM_BGainInq	8x 09 04 44 FF	y0 50 00 00 0p 0q FF	pq: B Gain
CAM_ColorGainInq	8x 09 04 49 FF	y0 50 00 00 00 0p FF	p: ColorGain (0 to Eh)
CAM_ColorHueInq	8x 09 04 4F FF	y0 50 00 00 00 0p FF	p: Color hue (0 to Eh)
CAM_WBShiftInq	8x 09 7E 01 2E FF	y0 50 00 00 00 0p FF	p: WB Shift (0 to Eh)
CAM_WBSensInq	8x 09 04 56 FF	y0 50 01 FF	Low
		y0 50 02 FF	Middle
		y0 50 03 FF	High
CAM_AEModeInq	8x 09 04 39 FF	y0 50 00 FF	Full Auto
		y0 50 03 FF	Manual
		y0 50 0A FF	Shutter Priority
		y0 50 0B FF	Iris Priority
		y0 50 0E FF	Gain Priority
CAM_AE Speed Inq	8x 09 04 5D FF	y0 50 01 FF	Low
		y0 50 02 FF	Middle
		y0 50 03 FF	High
CAM_AGC Limit Inq	8x 09 04 2C FF	y0 50 00 FF	0dB
		y0 50 01 FF	6dB
		y0 50 02 FF	12dB
		y0 50 03 FF	18dB
		y0 50 04 FF	Off
CAM_IrisLimitInq	8x 09 04 2B FF	y0 50 00 FF	F11
		y0 50 01 FF	F6.8
		y0 50 02 FF	F4.0
		y0 50 03 FF	F3.4
CAM_ShutterPosInq	8x 09 04 4A FF	y0 50 00 00 0p 0q FF	pq: Shutter Position*
CAM_IrisPosInq	8x 09 04 4B FF	y0 50 00 00 0p 0q FF	pq: Iris Position*
CAM_GainPosInq	8x 09 04 4C FF	y0 50 00 00 0p 0q FF	pq: Gain Position*
CAM_ExpCompModeInq	8x 09 04 3E FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_ExpCompPosInq	8x 09 04 4E FF	y0 50 00 00 0p 0q FF	pq: ExpComp Position*
CAM_BackLightModeInq	8x 09 04 33 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_SpotLightModeInq	8x 09 04 3A FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_NDFilterStatusInq	8x 09 7E 01 1F FF	y0 50 00 FF	ND: OFF
		y0 50 01 FF	ND: 1
		y0 50 02 FF	ND: 2
CAM_ApertureInq	8x 09 04 42 FF	y0 50 00 00 0p 0q FF	pq: Aperture Gain (= 0 to Fh)
CAM_PictureEffectModeInq	8x 09 04 63 FF	y0 50 00 FF	Off
		y0 50 04 FF	B&W

* See the section under VISCA Command Setting Values.

BRC-H700 Inquiry Command List (2/3)

Inquiry Command	Command Packet	Inquiry Packet	Comments
CAM_SkintoneModeInq	8x 09 04 3C FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_SkintoneTypeInq	8x 09 04 5C FF	y0 50 00 FF	TYPE1
		y0 50 01 FF	TYPE2
		y0 50 02 FF	TYPE3
CAM_GammaTypeInq	8x 09 04 5B FF	y0 50 00 FF	Normal
		y0 50 01 FF	Cinema
Flicker_ReductionInq	8x 09 04 32 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_SteadyModeInq	8x 09 04 34 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_SteadyTypeInq	8x 09 04 54 FF	y0 50 01 FF	SOFT
		y0 50 02 FF	STANDARD
		y0 50 03 FF	HARD
CAM_MemoryInq	8x 09 04 3F FF	y0 50 pp FF	pp: Memory number last operated*
CAM_MENUInq	8x 09 06 06 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_IDInq	8x 09 04 22 FF	y0 50 0p 0q 0r 0s FF	pqrs: Camera ID (= 000 to FFFFh)
CAM_VersionInq	8x 09 00 02 FF	y0 50 00 01 mn pq rs tu vw FF	mnpq: Model Code (05xx) rstu: ROM version vw: Socket Number (02)
CAM_TitleModeInq	8x 09 7E 01 13 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_PresetTitleModeInq	8x 09 7E 01 17 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_ReceiveInq	8x 09 06 08 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
D-SUB 15Pin OutputInq	8x 09 7E 01 03 FF	y0 50 0p FF	p=0 RGB 1:YPbPr
D-SUB 15Pin RGB_SYNCInq	8x 09 7E 01 07 FF	y0 50 0p FF	p=0 OFF 2:RGB
D-SUB 15Pin SYNC OUTInq	8x 09 7E 01 1A FF	y0 50 00 FF	3-STATE
		y0 50 01 FF	VD
CAM_ImgFlipInq	8x 09 04 66 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_DataMixInq	8x 09 7E 01 05 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_PanReverseInq	8x 09 7E 01 06 FF	y0 50 01 FF	On
		y0 50 00 FF	Off
CAM_TiltReverseInq	8x 09 7E 01 09 FF	y0 50 01 FF	On
		y0 50 00 FF	Off
PanTilt_Status	8x 09 06 10 FF	y0 50 pq rs FF	pqrs: PanTilt Status*
PanTilt_Max_Speed	8x 09 06 11 FF	y0 50 pq rs FF	pq: Pan Max Speed rs: Tilt Max Speed
PanTilt_Position	8x 09 06 12 FF	y0 50 0p 0q 0r 0s 0t 0u 0v 0w 0x FF	pqrst: Pan Position* uvwxyz: Tilt Position*
Tally	8x 09 7E 01 0A FF	y0 50 02 FF	On
		y0 50 03 FF	Off
PanTilt_Memory_Speed	8x 09 7E 01 0B 0p FF	y0 50 qq FF	p: Preset No. (= 0 to Fh) qq: Speed (= 1 to 18h)
Pantilt_RampCurveInq	8x 09 06 31 FF	y0 50 01 FF	MODE1
		y0 50 02 FF	MODE2
		y0 50 03 FF	MODE3

* See the section under VISCA Command Setting Values.

BRC-H700 Inquiry Command List (3/3)

Inquiry Command	Command Packet	Inquiry Packet	Comments
CAM_Dzoom_Limit Inq	8x 09 7E 01 1E FF	y0 50 00 FF	Limit x1.0 (D-Zoom off)
		y0 50 01 FF	Limit x1.5
		y0 50 02 FF	Limit x2.0
		y0 50 03 FF	Limit x4.0
Block_inq			Refer to Block Inquiry Command List.
CAM_50i60i_inq	8x 09 7E 01 31 FF	y0 50 00 FF	50i
		y0 50 01 FF	59.94i
Cam_Card_StatusInq	8x 09 7E 01 0E FF	y0 50 0p FF	p: Information on the optional card inserted into the interface card slot of the BRC-H700 p:0 HFBK-HD1 p:3 HFBK-SD1 p:4 HFBK-XG1 p:5 HFBK-TS1 p:Eh BRBK-H700 p:Fh No card
CAM_EXTSYNC_SynchronousModeInq	8x 09 7E 01 2C FF	y0 50 00 FF	Standard
		y0 50 01 FF	HD1
		y0 50 02 FF	SDI
CAM_Color_barInq	8x 09 04 7D FF	y0 50 02 FF	ON
		y0 50 03 FF	OFF

	Inquiry Command	Command Packet	Inquiry Packet	Comments
FOR HFBK-XG1 Only	CARD_Picture_SizeInq	8x 09 7E 01 1B 0p FF	y0 50 00 FF	VGA [Crop]
			y0 50 01 FF	WXGA
			y0 50 02 FF	XGA [Crop]
			y0 50 04 FF	VGA [Letter]
			y0 50 06 FF	XGA [Letter]
	CARD_Sync_GInq	8x 09 7E 01 1C 0p FF	y0 50 00 FF	SYNC OFF
			y0 50 01 FF	SYNC ON (G)
	CARD_VD_LogicInq	8x 09 7E 01 1D 0p FF	y0 50 01 FF	NEG
			y0 50 00 FF	POS
FOR HFBK-SD1 Only	CARD_D-SUB_OUT1Inq	8x 09 7E 01 24 0p FF	y0 50 00 FF	RGB
			y0 50 01 FF	YCbCr
	CARD_D-SUB_OUT2Inq	8x 09 7E 01 25 0p FF	y0 50 00 FF	Y/C
			y0 50 01 FF	VBS
	CARD_RGBSYNC_Inq	8x 09 7E 01 26 0p FF	y0 50 01 FF	SYNC ON (G)
			y0 50 02 FF	SYNC OFF
			y0 50 03 FF	SYNC RGB
	CARD_Picture_SizeInq	8x 09 7E 01 27 0p FF	y0 50 00 FF	4:3 [Squeeze]
			y0 50 01 FF	16:9
			y0 50 02 FF	4:3 [Crop]
FOR HFBK-HD1 Only	CARD_7.5IRE_SetupInq*	8x 09 7E 01 3B 0p FF	y0 50 00 FF	ON (7.5IRE)
			y0 50 01 FF	OFF (0IRE)
	CARD_Analog_OUTSEL_Inq	8x 09 7E 01 28 0p FF	y0 50 00 FF	RGB
			y0 50 01 FF	YPbPr
	CARD_Analog_RGB_SYNC_Inq	8x 09 7E 01 29 0p FF	y0 50 00 FF	RGB SYNC OFF
			y0 50 01 FF	RGB SYNC ON
FOR HFBK-TS1 Only	CARD_SYNC_SEL_Inq	8x 09 7E 01 2A 0p FF	y0 50 00 FF	VD
			y0 50 01 FF	3-STATE
	Audio Delay	8x 09 7E 01 2B 0p FF	y0 50 0q FF	q: 0 (off) to Ah (10 steps)

* Available only for output of 59.94i signal format

BRC-H700 Block Inquiry Command List

Lens control system inquiry commands Command Packet 8x 09 7E 7E 00 FF

Byte	Bit	Comments
0	7	Destination Address
	6	
	5	
	4	
	3	
	2	
	1	
	0	
1	7	0 Completion Message (50h)
	6	1
	5	0
	4	1
	3	0
	2	0
	1	0
	0	0
2	7	0
	6	0
	5	0
	4	0
	3	Zoom Position (HH)
	2	
	1	
	0	
3	7	0
	6	0
	5	0
	4	0
	3	Zoom Position (HL)
	2	
	1	
	0	
4	7	0
	6	0
	5	0
	4	0
	3	Zoom Position (LH)
	2	
	1	
	0	
5	7	0
	6	0
	5	0
	4	0
	3	Zoom Position (LL)
	2	
	1	
	0	

Byte	Bit	Comments
6	7	0
	6	0
	5	0
	4	0
	3	0
	2	0
	1	0
	0	0
7	7	0
	6	0
	5	0
	4	0
	3	0
	2	0
	1	0
	0	0
8	7	0
	6	0
	5	0
	4	0
	3	Focus Position (HH)
	2	
	1	
	0	
9	7	0
	6	0
	5	0
	4	0
	3	Focus Position (HL)
	2	
	1	
	0	
10	7	0
	6	0
	5	0
	4	0
	3	Focus Position (LH)
	2	
	1	
	0	
11	7	0
	6	0
	5	0
	4	0
	3	Focus Position (LL)
	2	
	1	
	0	

Byte	Bit	Comments
12	7	0
	6	0
	5	0
	4	0
	3	0
	2	0
	1	0
	0	0
13	7	0
	6	0
	5	D-Zoom Mode 1: Separate 0: Combine
	4	0
	3	0
	2	0
	1	D-Zoom (1:On 0:Off)
	0	Focus (1:Auto 0:Manual)
14	7	0
	6	0
	5	0
	4	0
	3	0
	2	Camera Memory Recall (1: Executing 0: Stopped)
	1	Focus Command (1: Executing 0: Stopped)
	0	Zoom Command (1: Executing 0: Stopped)
15	7	1 Terminator (FFh)
	6	1
	5	1
	4	1
	3	1
	2	1
	1	1
	0	1

Camera control system inquiry commands (1/2) Command Packet 8x 09 7E 7E 01 FF

Byte	Bit	Comments
0	7	Destination Address
	6	
	5	
	4	
	3	
	2	
	1	
	0	
1	7	0 Completion Message (50h)
	6	1
	5	0
	4	1
	3	0
	2	0
	1	0
	0	0
2	7	0
	6	0
	5	0
	4	0
	3	WB R-Gain (H)
	2	
	1	
	0	
3	7	0
	6	0
	5	0
	4	0
	3	WB R-Gain (L)
	2	
	1	
	0	
4	7	0
	6	0
	5	0
	4	0
	3	WB B-Gain (H)
	2	
	1	
	0	
5	7	0
	6	0
	5	0
	4	0
	3	WB B-Gain (L)
	2	
	1	
	0	

Byte	Bit	Comments
6	7	0
	6	0
	5	AWB Sens (1: Low 2: Mid 3: High)
	4	
	3	
	2	WB Mode (0: Auto 1: Indoor 2: Outdoor 3: One Push 5: Manual)
	1	
	0	
7	7	0
	6	0
	5	0
	4	0
	3	Aperture Gain
	2	
	1	
	0	
8	7	0
	6	0
	5	0
	4	Exposure Mode (0: Auto 1: Manual Ah: Shutter Pri Bh: Iris Pri Eh: Gain Pri)
	3	
	2	
	1	
	0	
9	7	0
	6	0
	5	0
	4	0
	3	Spot Light (1:On 0:Off) Back Light (1:On 0:Off) Exposure Comp. (1:On 0:Off) Hyper Gain (1:On 0:Off)
	2	
	1	
	0	
10	7	0
	6	0
	5	0
	4	Manual Shutter Position
	3	
	2	
	1	
	0	
11	7	0
	6	0
	5	0
	4	Manual Iris Position
	3	
	2	
	1	
	0	

Byte	Bit	Comments
12	7	0
	6	0
	5	0
	4	0
	3	Manual Gain Position
	2	
	1	
	0	
13	7	0
	6	0
	5	0
	4	0
	3	
	2	
	1	
	0	
14	7	0
	6	0
	5	0
	4	0
	3	Exposure Comp. Position
	2	
	1	
	0	
15	7	1 Terminator (FFh)
	6	1
	5	1
	4	1
	3	1
	2	1
	1	1
	0	1

Camera control system inquiry commands (2/2) Command Packet 8x 09 7E 7E 02 FF

Byte	Bit	Comments
0	7	Destination Address
	6	
	5	
	4	
	3	
	2	
	1	
	0	
1	7	0 Completion Message (50h)
	6	1
	5	0
	4	1
	3	0
	2	0
	1	0
	0	0
2	7	0
	6	0
	5	0
	4	0
	3	0
	2	0
	1	(1:59.94i 0:50i)
	0	Power On (1: On 0: Off)
3	7	0
	6	0
	5	0
	4	0
	3	Color Hue
	2	
	1	
	0	
4	7	0
	6	0
	5	0
	4	0
	3	Color Gain
	2	
	1	
	0	
5	7	0
	6	0
	5	0
	4	Steady Shot (1: On 0: Off)
	3	indefinite
	2	Skintone (1: On 0: Off)
	1	Flicker Cancel (1: On 0: Off)
	0	B & W (1: On 0: Off)

Byte	Bit	Comments
6	7	0
	6	0
	5	0
	4	0
	3	Steady Shot Type (1: Soft 2: Std 3: Hard)
	2	
	1	
	0	
7	7	0
	6	0
	5	0
	4	Gamma Mode (0: Normal 1: Cinema) Skintone Mode (0: Type1 1: Type2 2: Type3)
	3	
	2	
	1	
	0	
8	7	0
	6	0
	5	0
	4	0
	3	0
	2	0
	1	0
	0	0
9	7	0
	6	0
	5	0
	4	0
	3	0
	2	0
	1	0
	0	0
10	7	0
	6	0
	5	0
	4	0
	3	AE Speed (1: Low 2: Middle 3: High)
	2	
	1	
	0	
11	7	0
	6	0
	5	0
	4	0
	3	AGC Limit (0: 0dB 1: 6dB 2: 12dB 3: 18dB)
	2	
	1	
	0	

Byte	Bit	Comments
12	7	0
	6	0
	5	0
	4	0
	3	0
	2	0
	1	Iris Limit (0: F11 1: F6.8 2: F4.0 3: F3.4)
	0	
13	7	0
	6	0
	5	0
	4	0
	3	0
	2	0
	1	D-Zoom Limit (0: x1.0 1: x1.5 2: x2.0 3: x4.0)
	0	
14	7	0
	6	0
	5	0
	4	0
	3	0
	2	0
	1	0
	0	0
15	7	1 Terminator (FFh)
	6	1
	5	1
	4	1
	3	1
	2	1
	1	1
	0	1

Other enlargement inquiry commands (1/2) Command Packet 8x 09 7E 7E 03 FF

Byte	Bit	Comments
0	7	Destination Address
	6	
	5	
	4	
	3	
	2	
	1	
	0	
1	7	0 Completion Message (50h)
	6	1
	5	0
	4	1
	3	0
	2	0
	1	0
	0	0
2	7	0
	6	0
	5	0
	4	0
	3	D-Zoom Position (H)
	2	
	1	
	0	
3	7	0
	6	0
	5	0
	4	0
	3	D-Zoom Position (L)
	2	
	1	
	0	
4	7	0
	6	0
	5	0
	4	0
	3	0
	2	0
	1	0
	0	0
5	7	0
	6	0
	5	0
	4	0
	3	0
	2	0
	1	0
	0	0

Byte	Bit	Comments
6	7	0
	6	0
	5	0
	4	0
	3	0
	2	0
	1	0
	0	0
7	7	0
	6	0
	5	0
	4	0
	3	0
	2	0
	1	0
	0	0
8	7	0
	6	0
	5	0
	4	0
	3	0
	2	0
	1	0
	0	0
9	7	0
	6	0
	5	0
	4	0
	3	0
	2	0
	1	0
	0	0
10	7	0
	6	0
	5	0
	4	Shutter Pri Position
	3	
	2	
	1	
	0	
11	7	0
	6	0
	5	0
	4	Iris Pri Position
	3	
	2	
	1	
	0	

Byte	Bit	Comments
12	7	0
	6	0
	5	0
	4	0
	3	Gain Pri Position
	2	
	1	
	0	
13	7	0
	6	0
	5	0
	4	0
	3	WB Shift
	2	
	1	
	0	
14	7	0
	6	0
	5	0
	4	0
	3	0
	2	0
	1	0
	0	0
15	7	1 Terminator (FFh)
	6	1
	5	1
	4	1
	3	1
	2	1
	1	1
	0	1

Other enlargement inquiry commands (2/2) Command Packet 8x 09 7E 7E 04 FF

Byte	Bit	Comments
0	7	Destination Address
	6	
	5	
	4	
	3	
	2	
	1	
1	0	Source Address
	7	
	6	
	5	
	4	
	3	
	2	
	1	
2	0	Current WB R-GAIN (H)
	7	
	6	
	5	
	4	
	3	
	2	
	1	
3	0	Current WB R-GAIN (L)
	7	
	6	
	5	
	4	
	3	
	2	
	1	
4	0	Current WB B-GAIN (H)
	7	
	6	
	5	
	4	
	3	
	2	
	1	
5	0	Current WB B-GAIN (L)
	7	
	6	
	5	
	4	
	3	
	2	
	1	
	0	

Byte	Bit	Comments
6	7	prism temp (H)
	6	
	5	
	4	
	3	
	2	
	1	
7	0	prism temp (H)
	7	
	6	
	5	
	4	
	3	
	2	
	1	
8	0	IRIS Position Open F-number limit
	7	
	6	
	5	
	4	
	3	
	2	
	1	
9	0	IRIS Pri Open F-number limit MANUAL IRIS Open F-number limit
	7	
	6	
	5	
	4	
	3	
	2	
	1	
10	0	Shutter Current Position
	7	
	6	
	5	
	4	
	3	
	2	
	1	
11	0	Iris Current Position
	7	
	6	
	5	
	4	
	3	
	2	
	1	
	0	

Byte	Bit	Comments
12	7	Gain Current Position
	6	
	5	
	4	
	3	
	2	
	1	
13	0	Lens Fan rpm (H)
	7	
	6	
	5	
	4	
	3	
	2	
	1	
14	0	Lens Fan rpm (L)
	7	
	6	
	5	
	4	
	3	
	2	
	1	
15	0	1 Terminator (FFh) 1 1 1 1 1 1 1
	7	
	6	
	5	
	4	
	3	
	2	
	1	

VISCA Command Setting Values

Exposure Control

Iris

Parameter	IRIS (F1.6)
	F No.
18	F1.6
17	F1.7
16	F1.8
15	F2.0
14	F2.2
13	F2.4
12	F2.6
11	F2.8
10	F3.1
0F	F3.4
0E	F3.7
0D	F4.0
0C	F4.4
0B	F4.8
0A	F5.2
09	F5.6
08	F6.2
07	F6.8
06	F7.3
05	F8.0
04	F8.7
03	F9.6
02	F10
01	F11
00	CLOSE

Gain

Parameter	GAIN
8	HYPER*
7	18dB
6	15dB
5	12dB
4	9dB
3	6dB
2	3dB
1	0dB

* Returns 8 when HYPER (Parameter 8) is inquired.

Iris Limit

Parameter	F No.
3	F3.4
2	F4.0
1	F6.8
0	F11

Shutter Speed

SHUTTER	59.94i	50i
	[sec]	[sec]
15	1/10000	1/10000
14	1/6000	1/6000
13	1/4000	1/3500
12	1/3000	1/2500
11	1/2000	1/1750
10	1/1500	1/1250
0F	1/1000	1/1000
0E	1/725	1/600
0D	1/500	1/425
0C	1/350	1/300
0B	1/250	1/215
0A	1/180	1/150
09	1/125	1/120
08	1/100	1/100
07	1/90	1/75
06	1/60	1/50

Exposure Compensation

EXPOSURE COMP	Comp Value	Display
0E	+10.5dB	+7
0D	+9dB	+6
0C	+7.5dB	+5
0B	+6dB	+4
0A	+4.5dB	+3
09	+3dB	+2
08	+1.5dB	+1
07	0dB	0
06	-1.5dB	-1
05	-3dB	-2
04	-4.5dB	-3
03	-6dB	-4
02	-7.5dB	-5
01	-9dB	-6
00	-10.5dB	-7

Gain Limit

Parameter	F No.
4	OFF
3	18dB
2	12dB
1	6dB
0	0dB

Zoom Ratio and Zoom Position (for reference)

Optical Zoom

Position DATA	Zoom Ratio × 12 Lens
0000	×1
1982	×2
24E2	×3
2BC9	×4
3099	×5
343D	×6
3724	×7
3988	×8
3B8B	×9
3D43	×10
3EBB	×11
4000	×12

Digital Zoom

Position DATA	Zoom Ratio × 12 Lens
4000	×1
6A00	×2
7800	×3
7F00	×4

Focus Ratio and Focus Position (for reference)

Optical Zoom

Focus Ratio	Focus Distance
1000	Over Inf
2000	4m
3000	1.8m
4000	1.0m
5000	65cm
6000	30cm
7000	20cm
8000	13cm
9000	7cm
A000	4cm
B000	2cm
C000	1cm

Pan/Tilt Position (for reference)

Pan

Angle (Degree)	Left	Right
	YYYYY	YYYYY
0	00000	00000
10	00823	FF7DD
20	01046	FEFBA
30	01869	FE797
40	0208C	FDF74
50	028AF	FD751
60	030D2	FCF2E
70	038F5	FC70B
80	04118	FBEE8
90	0493B	FB6C5
100	0515E	FAEA2
110	05981	FA67F
120	061A4	F9E5C
130	069C7	F9639
140	071EA	F8E16
150	07A0D	F85F3
160	08230	F7DD0
170	08A58	F75A8

1 degree: est. 0xD0

Tilt

Angle (Degree)	Up	Down
	ZZZZ	ZZZZ
0	0000	0000
10	0823	F7DD
20	1046	EFBA
30	1869	E796
40	208C	
50	28AF	
60	30D2	
70	38F5	
80	4118	
90	493D	

Pan/Tilt Status Code List

P	Q	R	S	
0---	- - -	0---	- - - 1	Pan direction turns to left side
0---	- - -	0---	- - 1 -	Pan direction turns to right side
0---	- - -	0---	- 1 --	Tilt direction turns to upper side
0---	- - -	0---	1 - - -	Tilt direction turns to lower side
0---	- - -	0---	1 1 1 1	Pan/tilt position cannot be detected
0---	- - -	-- 0 0	- - - -	Pan direction operates normal
0---	- - -	-- 1 0	- - - -	Pan mechanism operates defective
0---	-- 0 0	0---	- - - -	Tilt direction operates normal
0---	-- 1 0	0---	- - - -	Tilt mechanism operates defective
0---	0 1 - -	0---	- - - -	Pan/Tilt operating
0---	1 0 - -	0---	- - - -	Pan/Tilt complete operation
0 - 0 0	- - -	0---	- - - -	Not initializing
0 - 0 1	- - -	0---	- - - -	Initializing
0 - 1 0	- - -	0---	- - - -	Complete initializing
0 - 1 1	- - -	0---	- - - -	Initializing failed

(- : optional)

Memory function (Inquiry commands)

Preset No. last operated	pp: Memory number last operated	Comments
-	00	When no Recall command is used after the power has been turned on
1	7F	$\neq 00$ (or =00 for Reset, Set and Recall commands)
2	01	
3	02	
4	03	
5	04	
6	05	
7	06	
8	07	
9	08	
10	09	
11	0A	
12	0B	
13	0C	
14	0D	
15	0E	
16	0F	

Revision History

Version	Item	Description
1.00		New Edition
1.10	VISCA Device Setting Command	Model IDs for BRC-H700 and BRU-H700 changed in “VISCA interface and inquiry”
	BRC-H700 Command List (5/5)	Command packets for Cmd_Color_Bar On/Off changed
	BRC-H700 Inquiry Command List (2/3)	Footnote “See the section under VISCA Command Setting Values.” added to CAM_MemoryInq
	VISCA Command Setting Values	Footnote added to Gain
1.20	7.5IRE Setup Setting Command for HFBK-SDI only	Command packets for CARD_7.5IRE_Setup ON/OFF and CARD_7.5IRE_SetupInq added.
	Color Bar Inquiry Command	Command packet for CAM_Color_barInq added.