

DO NOT THROW AWAY

IMPORTANT MANUAL

Model ONE
ONE-MAN HAND-HELD EARTH DRILL



Operator's Manual



P.O. box 290, Sn Bernardino, CA. 92402
Phone (909) 478-5700 • Fax (909) 478-5710 • (800) 922-4680
E-mail: sales@groundhoginc.com • www.groundhoginc.com

▲WARNING



Read and follow the operators manual and all Warnings and safety instructions before operating this machine.



WARNINGS AND SAFETY INSTRUCTIONS



This symbol means **DANGER, WARNING** or **CAUTION**. Personal injury and/or property damage may occur unless instructions are followed carefully.



WARNING ~ THIS POWER TOOL CAN BE DANGEROUS!

This tool can cause serious injury to the operators and bystanders. The warning and safety instructions in this manual must be followed to provide reasonable safety and efficiency in using and storing this earth drill. The operators are responsible for following the warnings and instructions in this manual and the earth drill. **Read the entire Operator's Manual before using this earth drill! Restrict the use of this earth drill to persons who read, understand, and follow the warnings and instructions in this manual and on the earth drill. If you have not read and understood the warnings and instructions in this manual and on the earth drill, you are not qualified to operate this earth drill!**



This product contains and/or emits chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. This statement is made in compliance to California Proposition 65.



DANGER

- Keep body parts, foreign objects and clothing clear of rotating auger.
- Always use supplied auger attachment pin for attaching auger bit to earth drill.
- Coming into contact with buried utilities while digging can cause severe injuries or DEATH.
- Contact appropriate utility representatives to determine if/where electrical cables, gas lines, water lines, etc. are buried BEFORE operation.



**Know what's below.
Call before you dig.**





WARNINGS AND SAFETY INSTRUCTIONS cont'd...



OPERATOR SAFETY

- Always wear the proper clothing and protective gear for the job. Eye and ear protection, hard hat, boots gloves and dust masks are some of the items that may be required.
- Keep hair, fingers and all other body parts away from openings and moving parts. Always wear long pants, boots, and gloves. Do not wear loose clothing, jewelry, short pants, sandals, or go barefoot. Secure hair so it is above shoulder length.
- Do not operate this earth drill indoors. For outdoor use only.
- Do not operate this tool when you are tired, ill, or under the influence of alcohol, drugs, or medication.
- Always assume the digging location contains underground utilities or obstructions. Contact appropriate utility company to determine if/where electrical cables, gas lines, water lines, etc. are buried BEFORE operation.
- Be sure of your footing and physical capabilities and always use extreme caution while operating this tool.



TOOL SAFETY

- Inspect the entire earth drill before each use. Replace damaged or worn parts.
- Check for fuel leaks and make sure all fasteners are in place and securely fastened. Repair or replace as needed.
- Replace auger blades that are severely worn, missing or damaged in any way before using this tool.
- Use only the supplied auger attachment pin and make sure that it is properly attached.
- Be sure the auger bit stops turning when you release the throttle.
- Use only accessories or parts as recommended by Ground Hog, Inc.



FUEL SAFETY

- Refuel outdoors only and where there are no sparks and flames.
- Store fuel in a container approved for gasoline.
- Do not smoke or allow smoking near fuel, or the earth drill, or while using the earth drill.
- Clean up all fuel spills before starting engine.
- Move at least 10 feet away from fueling site before starting engine.
- Stop engine before removing fuel cap.
- Store the earth drill and fuel in an area where fuel vapors cannot reach sources of combustion like water heaters, electric motors, switches, furnaces, etc.



DIGGING SAFETY

- Always assume the digging location contains buried underground utilities or obstructions. Call 811 to determine if/where electrical cables, gas lines, water lines, etc. are buried BEFORE operation.
- Always be sure that the area you are going to drill in is clear of potential hazards such as pipes, rocks, wire, boards, or any other materials that could possibly entangle itself around the auger bit, or cause unstable footing before using the earth drill.
- Keep others including children, animals, bystanders and helpers outside a 15 foot hazard zone from the earth drill.
- Hold the earth drill handle bars firmly with both hands.
- Keep firm footing and balance. Do not over-reach.
- Keep all parts of your body and clothing away from the auger bit and other moving parts.
- Inspect the digging site. Soil conditions, job specifications and operator experience may dictate that a different earth drill or method be used to do the job.
- Do not leave holes open or unmarked.



MAINTENANCE SAFETY

- Maintain this earth drill according to recommended procedures included in this manual.
- Disconnect the spark plug wire before performing maintenance. See engine manual.
- Stop engine before removing fuel cap.
- Use only genuine replacement parts as recommended by Ground Hog or the engine manufacturer.



TRANSPORTATION AND STORING SAFETY

- Always shut off the fuel valve and engine before transporting or storing.
- Always allow the engine to cool before transporting or storing.
- Store earth drill and fuel in an area where fuel vapors cannot reach sources of combustion like water heaters, electric motors, switches, furnaces, etc.
- Always secure this earth drill with tie downs or similar restraints when transporting.
- The earth drill shall be stored in a manner that prevents it from falling, rolling, or tipping over.



INTRODUCTION

It is your responsibility as the operator of this piece of equipment to know what specific requirements, precautions and work hazards may exist on each job. You must read and understand all of the information contained in this operator's manual and inform any person who might be assisting you to also read this manual.

NOTE: This machine is designed to drill holes in soil. It is not intended for any other purpose.

The rotation of the auger or drill bit on any type of earth drill will cause a counter rotation of the handle bars while drilling a hole. The force exerted on the operator will vary according to the type of soil, the diameter of the auger and the condition of the machine.

In the event that the auger bit should encounter an object that stops the rotation suddenly, the digging force will be transmitted directly to the operator. For this reason, the operator must have secure footing and control of the machine and be mentally and physically prepared to react to this force.


Because the ModelONE is a hand operated, portable type machine, it is limited in what it is capable of doing. The job site, soil conditions, job specifications and operator experience may dictate that a different tool or method be used to do the job.

NOTE: It is not recommended that engines of higher horsepower be installed on this machine. Consult the factory before making any modifications.



KEY POINTS OF THE *ModelONE*

Front View

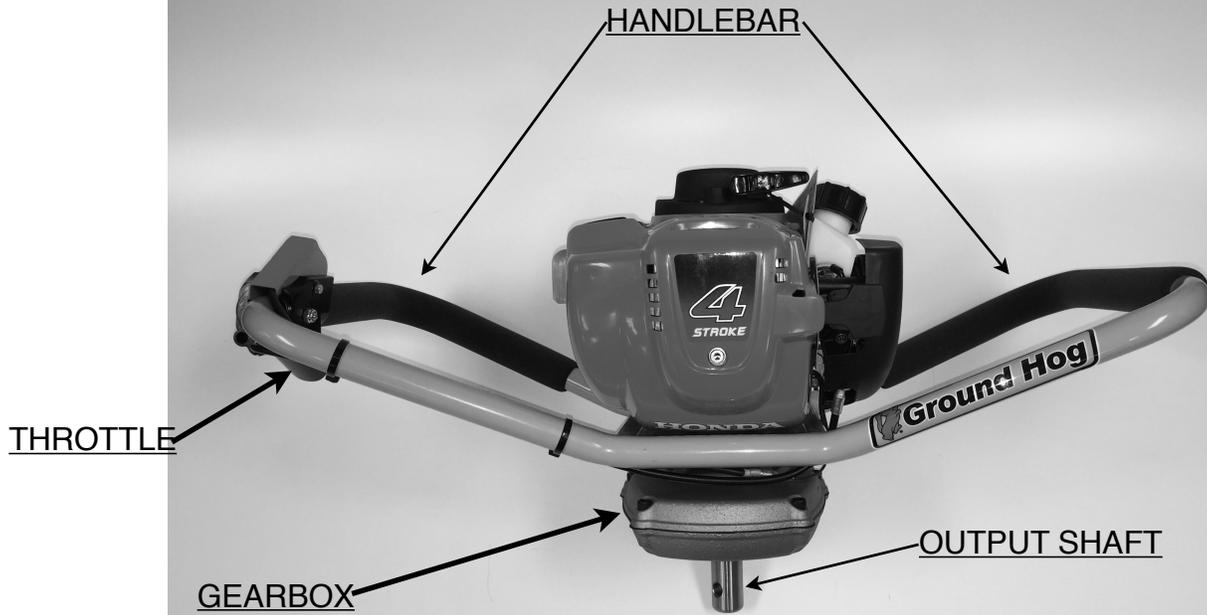

Top View



OPERATING INSTRUCTIONS

DANGER

Determine that the earth drill is in its original, factory configuration and has not been modified, or damaged and is not missing parts in any way. If there are any questions about possible modifications made to the earth drill, do not use it until the modifications have been corrected using only genuine replacement parts as recommended by Ground Hog or the engine manufacturer.

STOPPING THE ModelONE

Move the stop switch on the handlebar down to the "OFF" position to shut the engine off.

DANGER

- Keep bystanders clear when starting and using the earth drill.
- Never connect or disconnect the auger bit while the engine is running.
- **Do not** operate this earth drill indoors. For outdoor use only.

STARTING THE ModelONE

1. Move the stop switch up to the "ON" position.
2. Start the engine following the procedures outlined in the engine manual supplied with the earth drill.
3. With auger bit removed, start the earth drill at the job site and allow it to warm up. While the machine is running, check the controls to be sure that everything is working properly.
4. Never connect or disconnect the auger bit while engine is running.

WARNING

Hitting a buried object such as a rock, could cause a sudden side thrust against the operator. Injury could occur if the operator is not prepared to deal with this condition.

If an object is encountered while the auger is turning, the handlebar could be jerked from the operator causing injury and cause damage to the machine.

STARTING WITH AUGER ATTACHED

1. After the engine has been allowed to warm up, and everything is operating as it should, shut the engine off and attach the auger bit using the correct auger attachment pin (part # RD-PIN).
2. Position the earth drill so the controls are in your right hand and on your right side.
3. Following the procedures outlined in the engine manual supplied with the machine, start the engine. If the engine does not start after 3 pulls of the starter rope, disconnect the auger from the machine and determine the cause. When the machine is in operating condition again, follow the procedures

DRILLING

1. Position the earth drill so the controls are in your right hand and on your right side.
2. Firmly grasp the handlebar and place your legs in a slightly open stance, with your left foot forward of your right foot.
3. Keep your arms close to your upper body.

NOTE: Do Not extend your arms away from the earth drill or lean over the earth drill. These positions may not allow the operator to react and control the earth drill properly in the event of a kickback.

4. Keep the left side of the handlebars closer to your body for better control of the earth drill.

5. Slowly squeeze the throttle lever. Use caution here as the auger will start to turn and dig at this point.

NOTE: The more that you squeeze the throttle lever, the faster the auger will turn.

6. Keep your back in an upright position and bend at the legs as the auger digs the hole.

7. Do not attempt to drill the hole in one pass, you could bury the auger and get it stuck. Drill to a depth of approximately six inches and lift the auger to spin the dirt off. Do not lift the auger completely out of the hole. Repeat this procedure until you have reached the required depth.

WARNING

Do not move the earth drill if auger is rotating. Be sure the engine is off or at an idle before moving the earth drill.

OPERATING INSTRUCTIONS cont'd...

WARNING

Never connect or disconnect the auger while the engine is running.

WARNING

The earth drill shall be stored in a manner that prevents it from falling, rolling, or tipping over.

WHEN NOT IN USE

- Do not lay the power unit on its side with auger bit attached.
- Detach auger bit when not in use.
- Store the earth drill and fuel in an area where fuel vapors cannot reach sources of combustion like water heaters, electric motors, switches, furnaces, etc.
- Always shut off the fuel valve and engine before storing or transporting.
- Always shut off all stop switches when not in use.
- Keep children, bystanders and animals clear of earth drill at all times.
- Secure the earth drill in a manner that will not allow it fall, tip over, or roll.

