

Autonics ROTARY ENCODER (INCREMENTAL TYPE) E40 SERIES INSTRUCTION MANUAL



Thank you for choosing our Autonics product.
Please read the following safety considerations before use.

■ Safety Considerations

※ Please observe all safety considerations for safe and proper product operation to avoid hazards.
※ ⚠ symbol represents caution due to special circumstances in which hazards may occur.

⚠ Warning Failure to follow these instructions may result in serious injury or death.

⚠ Caution Failure to follow these instructions may result in personal injury or product damage.

⚠ Warning

1. **Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.** (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
Failure to follow this instruction may result in personal injury, economic loss or fire.

2. **Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.**
Failure to follow this instruction may result in explosion or fire.

3. **Install on a device panel to use.**
Failure to follow this instruction may result in fire.

4. **Do not connect, repair, or inspect the unit while connected to a power source.**
Failure to follow this instruction may result in fire.

5. **Check 'Connections' before wiring.**
Failure to follow this instruction may result in fire.

6. **Do not disassemble or modify the unit.**
Failure to follow this instruction may result in fire.

⚠ Caution

1. **Use the unit within the rated specifications.**
Failure to follow this instruction may result in fire or product damage.


2. **Do not short the load.**
Failure to follow this instruction may result in fire.

3. **Do not use the unit near the place where there is the equipment which generates strong magnetic force or high frequency noise and strong alkaline, strong acidic exists.**
Failure to follow this instruction may result in product damage.

■ Ordering Information

E40S	6	5000	3	N	24	
Series	Shaft diameter	Pulses / revolution	Output phase	Control output	Power supply	Cable
Ø40mm Shaft type	External 6: Ø6mm 8: Ø8mm	Refer to resolution	2: A, B 3: A, B, Z 4: A, \bar{A} , B, \bar{B} 6: A, \bar{A} , B, \bar{B} , Z, \bar{Z}	T: Totem pole output N: NPN open collector output V: Voltage output L: Line driver output	5: 5VDC ±5% 24: 12-24VDC ±5%	No mark : Radial cable type C : Radial cable connector type
Ø40mm Hollow shaft type, Hollow built-in type	Inside 6: Ø6mm 8: Ø8mm 10: Ø10mm 12: Ø12mm					

■ Control Output Diagram

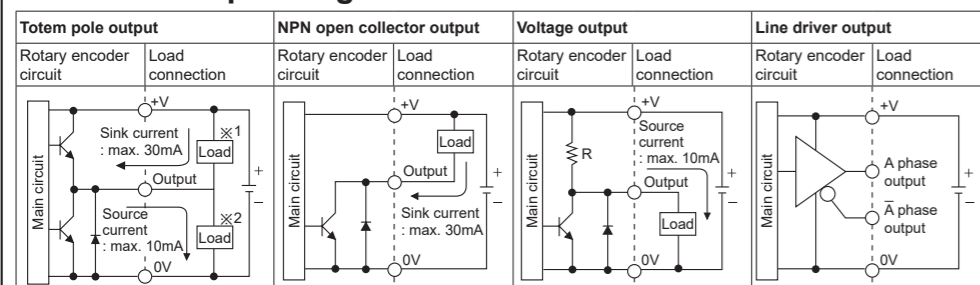

※ All output circuits of A, B, Z phase are same. (line driver output is A, \bar{A} , B, \bar{B} , Z, \bar{Z})
※ Totem pole output type can be used for NPN open collector output type (※1) or voltage output type (※2).

※ The above specifications are subject to change and some models may be discontinued without notice.
※ Be sure to follow cautions written in the instruction manual, and the technical descriptions (catalog, homepage).

■ Specifications

Item	Diameter Ø40mm shaft type/hollow shaft type/hollow built-in type of incremental rotary encoder		
Model	E40S	E40H	E40HB
Totem pole output	□	□	□
NPN open collector output	□	□	□
Voltage output	□	□	□
Line driver output	□	□	□
Resolution (PPR) ^{*1}	*1, *2, *5, 10, *12, 15, 20, 23, 25, 30, 35, 40, 45, 50, 60, 75, 100, 120, 125, 150, 192, 200, 240, 250, 256, 300, 360, 400, 500, 512, 600, 800, 1000, 1024, 1200, 1500, 1800, 2000, 2048, 2500, 3000, 3600, 5000		
Output phase ^{*2}	A, B, Z phase (line driver output: A, \bar{A} , B, \bar{B} , Z, \bar{Z} phase)		
Phase difference between output	Output between A and B phase: $\frac{T}{4} \pm \frac{T}{8}$ (T=1 cycle of A phase)		
Electrical specification	Control output	Totem pole output	• [Low] - Load current: max. 30mA, residual voltage: max. 0.4VDC= • [High] - Load current: max. 10mA, Output voltage (power voltage 5VDC=): min. (power voltage-2.0)VDC=, Output voltage (power voltage 12-24VDC=): min. (power voltage-3.0)VDC=
		NPN open collector output	Load current: max. 30mA, residual voltage: max. 0.4VDC=
		Voltage output	Load current: max. 10mA, residual voltage: max. 0.4VDC=
		Line driver output	• [Low] - Load current: max. 20mA, residual voltage: max. 0.5VDC= • [High] - Load current: max. -20mA, Output voltage (power voltage 5VDC=): min. 2.5VDC=, Output voltage (power voltage 12-24VDC=): min. (power voltage-3.0)VDC=
Electrical specification	Response time (rise/fall)	Totem pole output	Max. 1µs (cable length: 2m, I sink=20mA)
		NPN open collector output	Max. 1µs (cable length: 2m, I sink=20mA)
		Voltage output	Max. 1µs (cable length: 2m, I sink=20mA)
		Line driver output	Max. 0.5µs (cable length: 2m, I sink=20mA)
Mechanical specification	Max. response frequency	300kHz	
	Power supply	• 5VDC= ±5% (ripple P-P: max. 5%) • 12-24VDC= ±5% (ripple P-P: max. 5%)	
	Current consumption	Max. 80mA (disconnection of the load), Line driver output: max. 50mA (disconnection of the load)	
	Insulation resistance	Over 100MΩ (at 500VDC megger between all terminals and case)	
	Dielectric strength	750VAC 50/60Hz for 1 minute (between all terminals and case)	
	Connection	Radial cable type, radial cable connector type	
	Starting torque	Shaft type: max. 40gf·cm (0.004N·m), hollow shaft/hollow built-in type: max. 50gf·cm (0.005N·m)	
	Moment of inertia	Max. 40g·cm ² (4×10 ⁻⁶ kg·m ²)	
	Shaft loading	Radial: 2kgf, Thrust: 1kgf	
	Max. allowable revolution ^{*3}	5,000rpm	
Vibration	1.5mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours		
Shock	Approx. max. 50G		
Environment	Ambient temp.	-10 to 70°C, storage: -25 to 85°C	
	Ambient humi.	35 to 85%RH, storage: 35 to 90%RH	
Protection structure	IP50 (IEC standard)		
Cable	Ø5mm, 5-wire (line driver output: 8-wire), 2m, Shield cable (AWG 24, core diameter: 0.08mm, number of cores: 40, insulator out diameter: Ø1mm)		
Accessory	Ø6mm coupling, Ø8mm coupling, Bracket		
Approval	CE (except for line driver output)		
Unit weight	Approx. 120g		


※1: Not indicated resolutions are customizable. ※2: ** pulse is only for A, B phase. (line driver output is for A, \bar{A} , B, \bar{B} phase)
※3: Make sure that Max. response revolution should be lower than or equal to max. allowable revolution when selecting the resolution.

$$[\text{Max. response revolution (rpm)}] = \frac{\text{Max. response frequency} \times 60 \text{ sec.}}{\text{Resolution}}$$

※ Environment resistance is rated at no freezing or condensation.


■ Dimensions

○ Shaft type ○ Hollow shaft type (unit: mm)

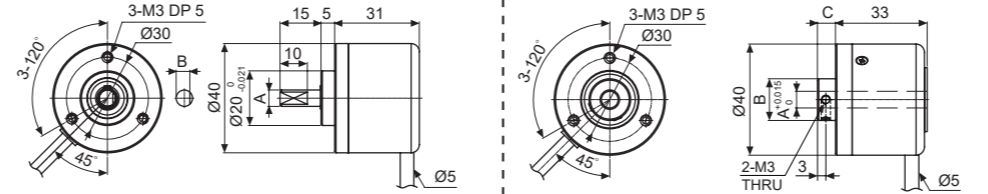

	A	B	C	D	E
E40S6 Ø6mm coupling	Ø6	Ø15	2.8	22	4-M3
E40S8 Ø8mm coupling	Ø8	Ø19	3.4	25	4-M4

○ Coupling (shaft type)




- Parallel misalignment: max. 0.25mm
- Angular misalignment: max. 5°
- End-play: max. 0.5mm

	A	B	C	D	E
E40S6 Ø6mm coupling	Ø6	Ø15	2.8	22	4-M3
E40S8 Ø8mm coupling	Ø8	Ø19	3.4	25	4-M4

※ It must not use larger shaft loading than specification.
※ Do not put strong impact when insert a coupling into shaft.
※ Failure to follow this instruction may result in product damage.
※ Fix the unit or a coupling by a wrench under 0.15 N·m of torque.
※ When you install this unit, if eccentricity and deflection angle are larger, it may shorten the life cycle of this unit.


○ Bracket (hollow shaft/hollow built-in type)

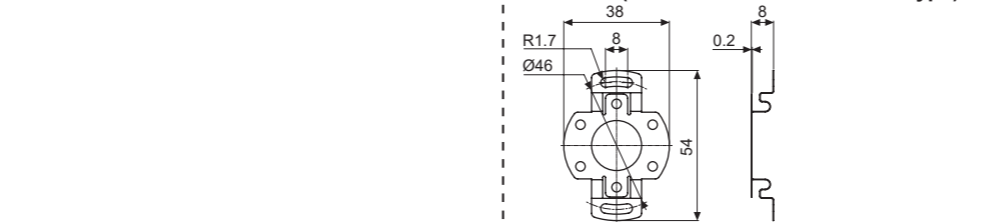


■ Connections

○ Radial cable type

- Totem pole output
- NPN open collector output
- Voltage output

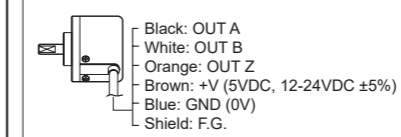

• Line driver output

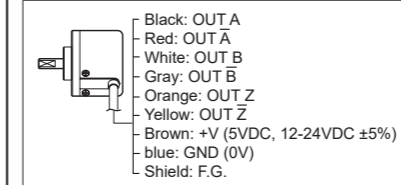

※ Non-using wires must be insulated.
※ The shield cable and metal case of encoder must be grounded (F.G.).
※ Do not apply tensile strength over 30N to the cable.

○ Radial cable connector type


- Totem pole output
- NPN open collector output
- Voltage output
- Line driver output




Pin No.	Cable color	Function	Pin No.	Cable color	Function
1	Black	OUT A	1	Black	OUT A
2	White	OUT B	2	Red	OUT \bar{A}
3	Orange	OUT Z	3	Brown	+V
4	Brown	+V	4	Blue	GND
5	Blue	GND	5	White	OUT B
6	Shield	F.G.	6	Gray	OUT \bar{B}
7	Orange	OUT Z	7	Orange	OUT Z
8	Yellow	OUT \bar{Z}	8	Yellow	OUT \bar{Z}
9	Shield	F.G.	9	Shield	F.G.

■ Output Waveforms

○ Totem pole output / NPN open collector output / Voltage output

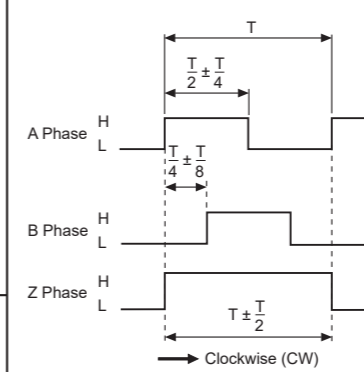

○ Line driver output

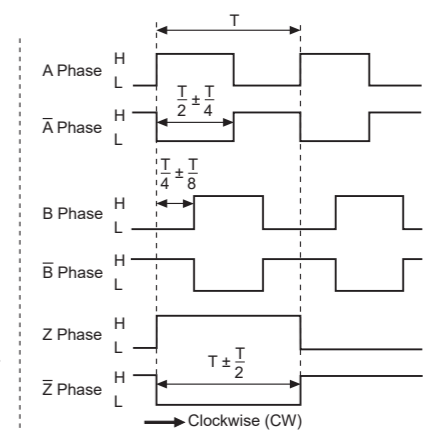

■ Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- 5VDC, 12-24VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- For using the unit with the equipment which generates noise (switching regulator, inverter, servo motor, etc.), ground the shield wire to the F.G. terminal.
- Ground the shield wire to the F.G. terminal.
- When using switching mode power supply, frame ground (F.G.) terminal of power supply should be grounded.
- Wire as short as possible and keep away from high voltage lines or power lines, to prevent inductive noise.
- For Line driver unit, use the twisted pair wire which is attached seal and use the receiver for RS-422A communication.
- Check the wire type and response frequency when extending wire because of distortion of waveform or residual voltage increment etc by line resistance or capacity between lines.
- This unit may be used in the following environments.
 - Indoors (in the environment condition rated in 'Specifications')
 - Altitude max. 2,000m
 - Pollution degree 2
 - Installation category II

■ Major Products

- Photoelectric Sensors
- Fiber Optic Sensors
- Door Sensors
- Door Side Sensors
- Area Sensors
- Proximity Sensors
- Pressure Sensors
- Rotary Encoders
- Connector/Sockets
- Switching Mode Power Supplies
- Control Switches/Lamps/Buzzers
- I/O Terminal Blocks & Cables
- Stepper Motors/Drivers/Motion Controllers
- Graphic/Logic Panels
- Field Network Devices
- Laser Marking System (Fiber, Co., Nd: YAG)
- Laser Welding/Cutting System
- Temperature Controllers
- Temperature/Humidity Transducers
- SSR/Power Controllers
- Counters
- Timers
- Panel Meters
- Tachometer/Pulse (Rate) Meters
- Display Units
- Sensor Controllers

Autonics Corporation
http://www.autonics.com

■ HEADQUARTERS:
18, Bansong-ro 513 beon-gil, Haeundae-gu, Busan, South Korea, 48002
TEL: 82-51-519-3232
E-mail: sales@autonics.com