

# Autonics GEARED TYPE 5 PHASE STEPPER MOTOR

## INSTRUCTION MANUAL



[Frame size 42mm] [Frame size 60mm] [Frame size 85mm]

Thank you for choosing our Autonics product.  
Please read the following safety considerations before use.

### ■ Safety Considerations

- ※Please observe all safety considerations for safe and proper product operation to avoid hazards.
- ※Safety considerations are categorized as follows.
- Warning** Failure to follow these instructions may result in serious injury or death.
- Caution** Failure to follow these instructions may result in personal injury or product damage.
- ※The symbols used on the product and instruction manual represent the following.
- △ symbol represents caution due to special circumstances in which hazards may occur.

#### △ Warning

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.** (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)  
Failure to follow this instruction may result in personal injury, fire, or economic loss.
- Do not use the unit where flammable or explosive gas, corrosive material, water, or combustible material may be present.**  
Failure to follow this instruction may result in fire or burn.
- Installation, connection, operation, maintenance, and inspection should be handled by qualified individuals.**  
Failure to follow this instruction may result in fire, electronic shock, or personal injury.
- Please install it in power off.**  
Failure to follow this instruction may result in electronic shock.
- Install the motor in the housing not to touch of human body.**  
Failure to follow this instruction may result in electronic shock, or personal injury.
- Do not disassemble or modify the unit.**  
Failure to follow this instruction may result in fire, or product damage.

#### △ Caution

- Use the unit within the rated specifications.**  
Failure to follow this instruction may result in product damage.
- Do not put obstacles around the unit which may obstruct ventilation.**  
Failure to follow this instruction may result in product damage, ambient equipment damage, or malfunction by heat.
- Affix the motor tightly on a metal plate.**  
Failure to follow this instruction may result in personal injury, or product and ambient equipment damage.
- Please stop this unit when mechanical trouble occurred.**  
Failure to follow this instruction may result in fire, electronic shock, or personal injury.
- Do not inordinate impact or continuous vibration to this unit.**  
Failure to follow this instruction may result in malfunction.
- The surface temperature of the motor may reach 70°C in normal operating conditions.**  
Place a warning sign in conditions where someone may approach the operating motor.  
Failure to follow this instruction may result in burn.
- Do not use the brake for safety.**  
Failure to follow this instruction may result in personal injury, or ambient equipment damage.
- Do not carry the motor by the cable or rotor.**  
Failure to follow this instruction may result in motor damage or personal injury.
- Make sure to install covers on motor rotating components.**  
Failure to follow this instruction may result in personal injury.
- When disposing the unit, please categorize it as industrial waste.**

### ■ Ordering Information

<b>A</b>	<b>10K</b>	<b>-</b>	<b>M</b>	<b>5</b>	<b>4</b>	<b>5</b>	<b>W</b>	<b>-</b>	<b>G</b>	<b>5</b>
Gear ratio										
Motor type										
Shaft type										
Motor length										
Motor frame size										
Motor phase										
Rated current										
Max. holding torque										
Item										

※The above specifications are subject to change and some models may be discontinued without notice.

### ■ Specifications

<b>Frame size 42mm</b>			
Model	A10K-S545(W)-G5	A15K-S545(W)-G7.2	A15K-S545(W)-G10
Max. holding torque*1	10 kgf-cm (1.0 N-m)	1.5 kgf-cm (1.5 N-m)	
Rotor moment of inertia*2	68 g-cm <sup>2</sup> (68x10 <sup>-7</sup> kg-m <sup>2</sup> )		
Rated current	0.75A/Phase		
Basic step angle	0.144°/0.072° (Full/Half step)	0.1°/0.05° (Full/Half step)	0.072°/0.036° (Full/Half step)
Permissible speed range	0 to 360 rpm	0 to 250 rpm	0 to 180 rpm
Backlash [min]	±35' (0.58)		
Weight*3	Approx. 0.68kg (approx. 0.58kg)		

<b>Frame size 60mm</b>			
Model	A35K-M566(W)-G5	A40K-M566(W)-G7.2	A50K-M566(W)-G10
Max. holding torque*1	35 kgf-cm (3.5 N-m)	40 kgf-cm (4.0 N-m)	50 kgf-cm (5.0 N-m)
Rotor moment of inertia*2	280 g-cm <sup>2</sup> (280x10 <sup>-7</sup> kg-m <sup>2</sup> )		
Rated current	1.4A/Phase		
Basic step angle	0.144°/0.072° (Full/Half step)	0.1°/0.05° (Full/Half step)	0.072°/0.036° (Full/Half step)
Permissible speed range	0 to 360 rpm	0 to 250 rpm	0 to 180 rpm
Backlash [min]	±20' (0.33)		
Weight*3	Approx. 1.57kg (approx. 1.3kg)		

<b>Frame size 85mm</b>						
Model	A140K-M599(W)-G5	A140K-G599(W)-G5	A200K-M599(W)-G7.2	A200K-G599(W)-G7.2	A200K-M599(W)-G10	A200K-G599(W)-G10
Max. holding torque*1	140 kgf-cm (14 N-m)		200 kgf-cm (20 N-m)			
Rotor moment of inertia*2	2,700 g-cm <sup>2</sup> (2,700x10 <sup>-7</sup> kg-m <sup>2</sup> )					
Rated current	1.4A/Phase	2.8A/Phase	1.4A/Phase	2.8A/Phase	1.4A/Phase	2.8A/Phase
Basic step angle	0.144°/0.072° (Full/Half step)	0.1°/0.05° (Full/Half step)	0.072°/0.036° (Full/Half step)	0.144°/0.072° (Full/Half step)	0.1°/0.05° (Full/Half step)	0.072°/0.036° (Full/Half step)
Permissible speed range	0 to 360 rpm	0 to 250 rpm	0 to 180 rpm	0 to 360 rpm	0 to 250 rpm	0 to 180 rpm
Backlash [min]	±15' (0.25)					
Weight*3	Approx. 4.88kg (approx. 4.4kg)					

- ※1: Max. holding torque is standard torque when supply the rated current and stop the motor for comparing the specifications of motors.
- ※2: Moment of rotor inertia indicates a part, except Gear Head part.
- ※3: The weight includes packaging. The weight in parenthesis is for unit only.


#### ○ Common specifications

Operation type	Planetary Geared type
Insulation class	B type (130°C)
Insulation resistance	Over 100MΩ (at 500VDC megger) between motor coil-case
Dielectric strength	1 kVAC (at 0.75 A/Phase is 0.5 kVAC) 50/60Hz for 1 min between motor coil-case
Temperature rise	5-phase excitation for rated current, below 80°C at stopped (resistance method)
Environ-ment	Ambient temp. -10 to 50°C, storage: -25 to 85°C Ambient humi. 35 to 85%RH, storage: 35 to 85%RH
Stop angle error*1	±3' (±0.05°)
Shaft vibration*2	0.05mm T.I.R.
Radial movement*3	Max. 0.025mm (Load 5N)
Axial movement*4	Max. 0.075mm (Load 10N)
Concentricity for shaft of setup in-low	0.075mm T.I.R.
Perpendicularity of set-up plate shaft	0.075mm T.I.R.
Protection structure	IP30 (IEC34-5 standard)




- ※1: Specifications are for full-step angle, with no-load (values may vary by load size.)
- ※2: T.I.R.(Total Indicator Reading) - The difference between the maximum and minimum readings of a dial gauge during one complete revolution of monitored reference.
- ※3: Amount of radial shaft displacement when adding a radial load (5N) to the tip of the motor shaft.
- ※4: Amount of axial shaft displacement when adding an axial load (10N) to the shaft.
- ※Rotation direction of the Motor and the Gear Head output axis is same.
- ※Environment resistance is rated at no freezing or condensation.

### ■ Connection Diagram

Autonics 5-phase stepper motors use pentagon wiring methods. Therefore, it is a proper product for the driver working as a bipolar pentagon driving method of 5 phase stepper motor drivers. The wiring colors for each phase and lead-wire are as follows:

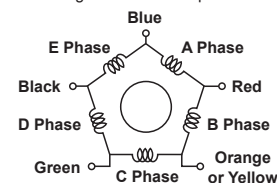


### ■ Dimensions

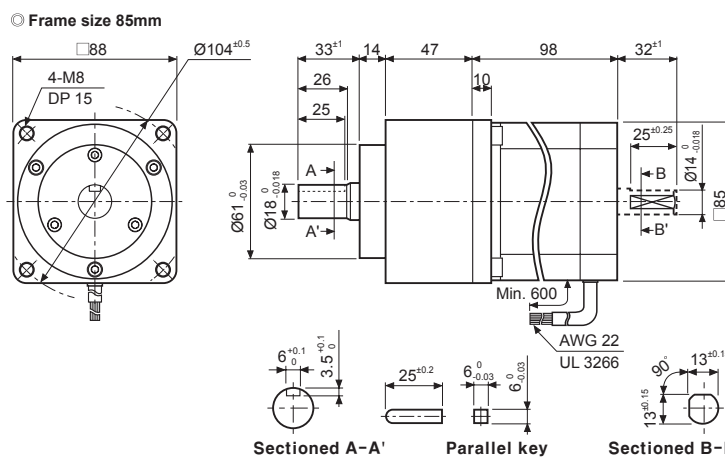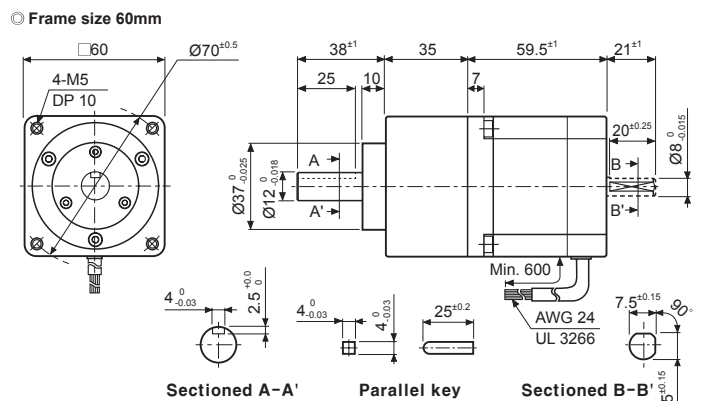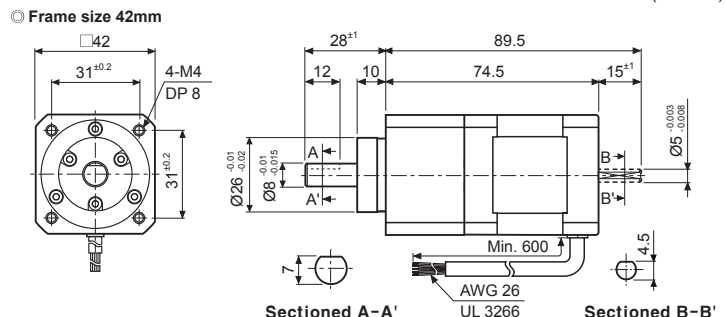

※These dimensions are for dual shaft models. Single shaft models do not include shafts indicated in the dotted lines.

### ■ Installation


- Mounting direction**  
Motor can be mounted in any directions-facing up, facing down and side ways. No matter which direction motors to be mounted, be sure not to apply overhung or thrust load on the shaft. Refer to the table below for allowable shaft overhung load / thrust load.

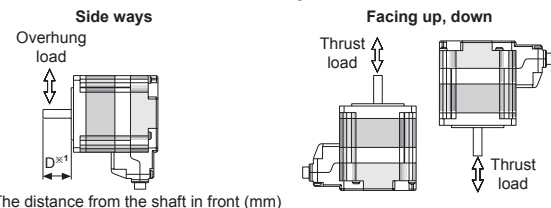

※1: The distance from the shaft in front (mm)


Motor size	The distance from the shaft in front (mm), Allowable overhung load [kgf (N)]					Allowable thrust load
	D=0	D=5	D=10	D=15	D=20	
Frame size 42mm	7.3 (72)	8.4 (82)	10 (98)	12.3 (121)	-	5 (49)
Frame size 60mm	25 (245)	27 (265)	30 (294)	34 (333)	39 (382)	10 (98)
Frame size 85mm	48 (471)	54 (530)	60 (588)	68 (667)	79 (775)	30 (294)

Do not apply excessive force on motor cable when mounting motors. Do not forcibly pull or insert the cable. It may cause poor connection or disconnection of the cable. In case of frequent cable movement required application, proper safety countermeasures must be ensured.

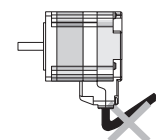

- Motor mounting**  
With considering heat radiation and vibration isolation, mount the motor as tight as possible against a metal panel having high thermal conductivity such as iron or aluminum. When mounting motors, use hexagon socket screws, spring washers and flat washers. Refer to the table below for allowable thickness of mounting plate and using bolt.


Hexagon socket screw

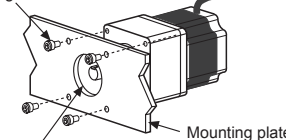

Motor size	The thickness of mounting plate	Using bolt
Frame size 42mm	Min. 5mm	M4
Frame size 60mm	Min. 8mm	M5
Frame size 85mm	Min. 12mm	M8

Flange In Low (Counter bore or Through hole)

- Connection with load**  
When connecting the load, be sure of the center, tension of the belt, and parallel of the pulley. When connecting the load such as a pulley, a belt, be sure of the allowable thrust load, radial load, and shock. Tighten the screw for a coupling or a pulley not to be unscrewed. If the center of the load is not matched to that of shaft, it may cause severe vibration, shaft damage or shortened life cycle of bearings. When connecting a coupling or a pulley on the motor shaft, be sure of damage of the motor shaft and the motor shaft bearing. Do not disassemble or modify motor shaft to connect with the load. Please contact us if necessary.

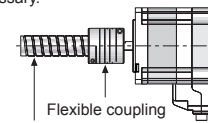

※Use Autonics flexible coupling (ERB Series).

- Installation condition**  
Install the motor in a place that meets certain conditions specified below. It may cause product damage if instructions are not following.
  - The inner housing installed indoor (This unit is manufactured for attaching to equipment. Install a ventilation device.)
  - Within -10 to 50°C (at non-freezing status) of ambient temperature
  - Within 35 to 85%RH (at non-dew status) of ambient humidity
  - The place without explosive, flammable and corrosive gas
  - The place without direct ray of light
  - The place where dust or metal scrap is not entered into the unit
  - The place where water, oil, or other liquid are not touched
  - The place where strong alkali or acidity does not exist closely
  - The place where easy heat dissipation could be made
  - The place where no continuous vibration or severe shock
  - The place with less salt content
  - The place with less electronic noise occurs by welding machine, motor, etc.
  - The place where no radioactive substances and magnetic fields exist. It shall be no vacuum status as well.

### ■ Cautions During Use

- Do not disassemble or modify the product.**  
It may cause malfunction due to small greases. Once disassembling the motor, its performance would significantly decline.
- Do not impact the motor.**  
The air-gap, the distance between rotor and stator is processed as 0.05mm, but if it is impacted, the balance of air-gap can be broken and it may cause a malfunction.
- Using at low temperature**  
Using motors at low temperature may cause reducing maximum starting / driving characteristics of the motor due to decreased ball bearing's grease consistency. Start the motor in a steady manner since motor's torque is not to be influenced.
- Temperature rise**  
The surface temperature of motor shall be under 100°C and it can be significantly increased by operation conditions (ambient temperature, drive speed, drive duty ratio, etc). In this case, use the cooling fan to lower the temperature forcibly. It may cause for motor power cable to be damaged by fire, for inner ball-bearing of motor to be shortening the life cycle or for the unit to malfunction.
- Use the motor within the allowable torque range.**  
The allowable torque range indicates the maximum value of mechanical strength of gear part and the total of ac/deceleration torque of start/stop and friction torque shall not be exceed the allowable torque range, or it may cause the breakdown of gear.
- Use the motor within the allowable speed range.**  
The allowable speed range includes the revolution number of gear and pulse speed of motor. Use the motor within the allowable speed range, or it may shorten the life cycle of gear part. (backlash is increased.)
- Be careful of backlash when positioning the motors in both CW/CCW directions.**  
Backlash refers to the displacement occurred on motor's output shaft while gear's input axis is fixed. Geared type stepping motors are to realize high accuracy and low backlash. When positioning the motors in both CW/CCW directions, however, backlash may possibly occur. Therefore, make sure that motor positioning will be made in one single direction in case of geared type motors. ※Failure to follow these instructions may result in product damage.

### ■ Major Products

- Photoelectric Sensors
- Fiber Optic Sensors
- Door Sensors
- Door Side Sensors
- Area Sensors
- Proximity Sensors
- Pressure Sensors
- Rotary Encoders
- Connector/Sockets
- Switching Mode Power Supplies
- Control Switches/Lamps/Buzzers
- I/O Terminal Blocks & Cables
- Stepper Motors/Drivers/Motion Controllers
- Graphic/Logic Panels
- Field Network Devices
- Laser Marking System (Fiber, CO<sub>2</sub>, Nd: YAG)
- Laser Welding/Cutting System
- Temperature Controllers
- Temperature/Humidity Transducers
- SSRs/Power Controllers
- Counters
- Timers
- Panel Meters
- Tachometer/Pulse (Rate) Meters
- Display Units
- Sensor Controllers

**Autonics Corporation**  
http://www.autonics.com

HEAD QUARTERS:  
18, Bansong-ro 513 beon-gil, Haeundae-gu, Busan, South Korea, 48002  
TEL: 82-51-519-3232  
E-mail: sales@autonics.com