
BWP Series Area Sensor

Flat Area Sensor With Plastic Case

Features

- 13mm slim body with fresnel lens
- Adoption of plastic (PC/ABS) injection case
- Various functions; stop transmission, interference prevention, lightening/flashing JOB indicator, Light ON/Dark ON operation by switch
- Easy to recognize at side, front, and long-distance by high brightness LED of Emitter and Receiver
- Fast response time up to 7ms
- 4 models with various optical axes (8 to 20EA) and sensing height (140 to 380mm)
- Protection structure IP40 (IEC standard)



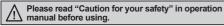

Specifications

	NPN open collector output	BWP20-08	BWP20-12	BWP20-16	BWP20-20		
Model	PNP open collector output	BWP20-08P	BWP20-12P	BWP20-16P	BWP20-20P		
Sensing type		Through-beam					
Sensing distance		0.1 to 5m					
Sensing target		Opaque materials of r	Opaque materials of min.Ø30mm				
Optical axis pitch		20mm					
Number of optical axis		8EA	12EA	16EA	20EA		
Sensing wid	lth	140mm	220mm	300mm	380mm		
Power supp	ly	12-24VDC ±10% (Rip	ple P-P : Max. 10%)				
Protection c	ircuit	Built-in					
Current con	sumption	Emitter : Max. 80mA,	Receiver : Max. 80mA				
Control output		NPN or PNP open collector output Load voltage: Max. 30VDC Load current: Max. 150mA Residual voltage - NPN: Max. 1V, PNP: Min. 2.5V					
Operation m	node	Light ON/Dark ON by switch					
Short-circuit protection		Built-in					
Response time		Max. 6ms (Frequency B selection is max. 7ms)					
Light source		Infrared LED (850nm modulated)					
Synchronization type		Synchronized by synchronous line					
Interference	protection	Interference protection by transmission frequency selection					
	Ambient illumination	Sunlight : Max. 10,0001x (received light side illumination)					
Environment	Ambient temperature	-10 to 55°C, storage : -20 to 60°C					
Ambient humidity		35 to 85%RH, storage : 35 to 85%RH					
Noise resist	ance	±240V the square wave noise (pulse width: 1μs) by the noise simulation					
Dielectric str	rength	1,000VAC 50/60Hz for 1 minute					
Insulation resistance		Min. 20MΩ (at 500VDC megger)					
Vibration		1.5mm amplitude or 300m/s² at frequency of 10 to 55Hz (for 1 min.) in each X, Y, Z direction for 2 hours					
Shock		500m/s² (approx. 50G) in each X, Y, Z direction for 3 times					
Protection structure		IP40 (IEC standard)					
Material		Case : PC/ABS, Sensing part : PMMA					
Cable		Ø3.5mm, 4-wire, Length : 3m (Emitter: Ø3.5mm, 4-wire, Length : 3m) (AWG 24, Core diameter : 0.08mm, Number of cores : 40, Insulator out diameter : Ø1mm)					
Approval		CE					
Weight ^{×1}		Approx. 400g (approx. 280g)	Approx. 520g (approx. 320g)	Approx. 620g (approx. 360g)	Approx. 680g (approx. 430g)		

X1: The weight includes packaging. The weight in parentheses is for unit only.



(A) Photoelectric Sensors

Door/Area Sensors

(D) Proximity Sensors

(F) Rotary Encoder

(H) Temperature Controllers

(I) SSRs / Power Controllers

(M) Tacho / Speed / Pulse Meters

(N) Display Units


(O) Sensor Controllers


(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels


^{*}The temperature or humidity mentioned in Environment indicates a non freezing or condensation environment.

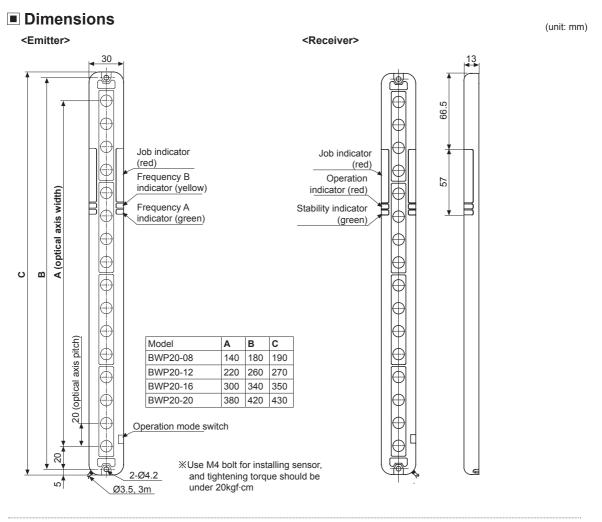

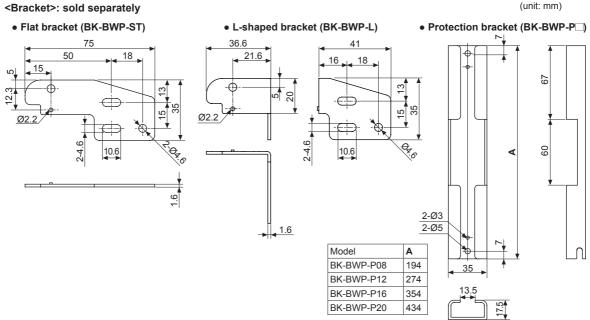

C-34 Autonics

Feature Data

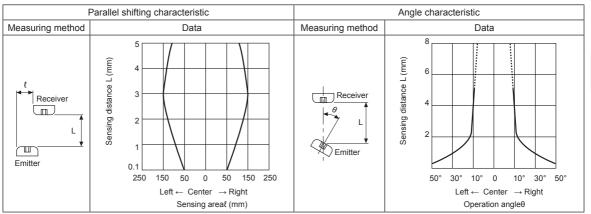


■ Input/Output Circuit And Connection Diagram

• NPN open collector output


(Blue)0V 12-24VDC Emitter Main circuit (Brown)+V (Black)JOB (White)SYNC (White)SYNC (Brown)+V (Black)OUT Load Receiver Main circuit Overcurrent protection (Blue)0V

• PNP open collector output

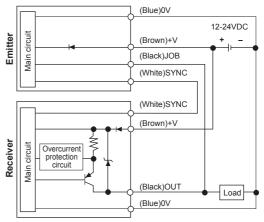

XIf the receiver OUT (black) line and the emitter JOB (black) line are not connected each other, the JOB indicator of the emitter is not operated and maintain the light status.

■ Operation Timing Diagram

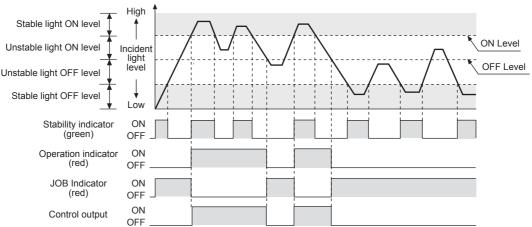

**The waveforms of operation indicator, job indicator, and control output are the state of operation for Light ON, but in case of Dark ON, it is opposite operation against Light ON mode.

(A) Photoelectric Sensors

(B) Fiber Optic

> (C) Door/Area

(D) Proximity Sensors

(E) Pressure

> (F) Rotary Encoders

Encoders

(G) Connectors/ Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

Meters

Tacho / Speed / Pulse Meters

(N) Display Units

0) ensor ontrollers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers


(R) Graphic/ Logic Panels


(S) Field Network Devices

(T)

C-35

Structure

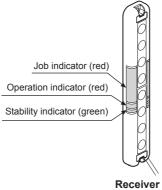

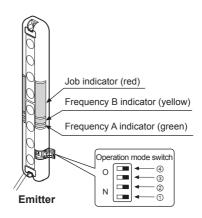

Mounting of bracket


No	Function	Switch OFF	Switch ON
1	Transmission frequency selection	Frequency A	Frequency B
2	Light ON/Dark ON selection	Light ON operation	Dark ON operation
3	Steady/flashing light of Job indicator selection	Job indicator with Steady light	Job indicator with Flashing light
4	Job/TEST selection	Normal mode	TEST mode

Functions

○ TEST (stop transmission)

When selecting TEST mode, emit is stopped and green &yellow LED of emitter flashes. It is available to check whether sensor operates properly with stopping the transmission in TEST mode. It is changed to light OFF status when emit the transmission is stopped, control output is OFF in Light ON mode and ON in Dark ON mode.

Control output pulse for TEST input

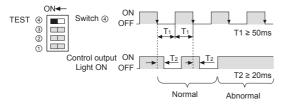

Interference prevention

In case of using 2pcs of sensor in serial or parallel in order to extend sensing width, it may cause sensing error because of light interference.

This function is operating a sensor in transmission frequency A and another sensor in transmission frequency B to avoid these sensing errors by the light interference.

	Operation mode switch	Frequency A, B indicator		
Sensor (A) (Transmission frequency A)	ON ← ③	Frequency B (Yellow) Frequency A (Green)		
Sensor ® (Transmission frequency B)	ON ← ④ ③ ② FREQ.B ①	Frequency B (Yellow) Frequency A (Green)		

O Light-ON / Dark-ON operation mode

The control output is ON when it is light ON in Light ON and the control output is ON when it is light OFF in Dark ON. It is available to select with user's preference.

	Operation mode switch	Control output operation
Light ON	ON ← ④ ③ ③ □ □ Light ON ①	It is ON when it is light ON.
Dark ON	ON ← ④ □ □ ③ □ □ On ← ON ⊕ On ←	It is ON when it is light OFF.

Lightening/Flashing JOB indicator

JOB indicator will be lighted and flashed to make out work sensing operation more easily.


Operation mode switch	JOB indicator operation
ON ← ⊕ ⊕ □ Lighting ⊕	Lighting indicator
ON ← Flashing ③ ① ① ① ① ① ② ② ② ② ② ③ ③ ③ ③ ③ ③ ③ ③ ③	Flashing indicator

C-36 Autonics

Installation


O For direction of installation

Emitter and receiver should be installed as same up/down position.

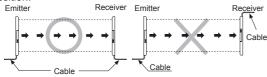

O For reflection from the surface of wall and flat


When installing it as below the light reflected from the surface of wall and flat will not be shaded. Please, check whether it operates normally or not with a sensing target before using. (Interval distance: Min. 0.3m)

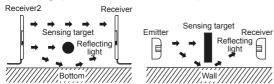


O For prevention of interference

It may cause interference when installing more than 2 sets of the sensor. In order to avoid the interference of the sensor, please install as following figures and use the interference protection function.


• Transmission direction should be opposite between 2 sets

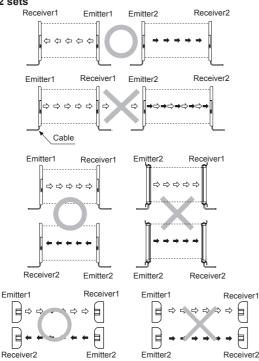

• Baffle should be installed between 2 sets.

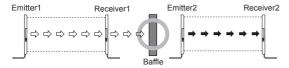

• It should be installed out of the interference distance

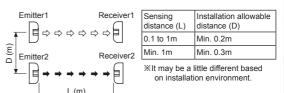

Operation Indicator

	Emitter		Receiver				
Item	Indicator		Indicator			Control	
item	Green	Yellow	JOB Indicator	Green	Red	JOB Indicator	output
Power on	₩		_		_	_	_
FREQ. A operation	\Diamond		_	_	_	_	
FREQ. B operation	₩	₩	_		_	_	_
TEST	▶	•	₿	\rightarrow		\ \	OFF
Stable light ON	_	_		\\(\Delta\)	\rightarrow		ON
Unstable light ON	_	_		•	\Diamond	•	ON
Unstable light OFF	_	_	⇔	•		\rightarrow	OFF
Stable light OFF	_	_	Þ	¢		\dot{\dot}	OFF
Flashing function ON	_	_	•	¢			OFF
Synchronous line malfunction			Þ	•	•	Þ	OFF
Overcurrent			\Delta		•	\Delta	OFF

Display classificat	ion list	
₽	Light ON	
•	Light OFF	
Flashing by 0.3 sec.		
0 0	Flashing simultaneously by 0.3 sec.	
	Cross-Flashing by 0.3 sec.	

**The operation of 'Operation indicator (Red)', 'Job indicator (Red)', 'Control output' is for Light ON, in case of Dark ON, it is opposite operation against Light ON. (In case, malfunction of synchronous line and over current, control output is OFF regardless of the mode.)

■ Troubleshooting

Malfunction	Cause	Troubleshooting
Mananoton	Power supply	Supply rated power.
Non-operation	Cable incorrect connection or disconnection	Check the wiring.
	Rated connection failure	Use it within rated sensing distance.
Non-operation	Pollution by dirt of sensor cover	Remove dirt by soft brush or cloth.
in sometimes	Connector connection failure	Check the assembled part of the connector.
	Out of rated sensing distance	Use within rated sensing distance.
Control output is OFF	There is an obstacle to cut off the light emitted between emitter and	Remove the obstacle.
even though there is not a target object.	There is a strong electric wave or noise generated by motor, electric generator, high voltage line etc.	Put away the strong electric wave or noise generator.
LED displays for synchronous line	Synchronous line incorrect connection or disconnection	Check the wiring.
malfunction	Break of synchronous circuit of emitter or receiver	Contact our company.
LED displays for over	Control output line is shorten	Check the wiring.
current	Over load	Check the rated load

(A) Photoelectric Sensors

(D) Proximity Sensors

(H) Temperature Controllers

(I) SSRs / Power Controllers

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(P) Switching Mode Powe Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

Autonics

capacity.

Over load