

# Autonics Multi Indicator KN-2000W SERIES



Thank you very much for selecting Autonics products.  
For your safety, please read the following before using.

## Caution for your safety

- ※ Please keep these instructions and review them before using this unit.
- ※ Please observe the cautions that follow;
- Warning** Serious injury may result if instructions are not followed.
- Caution** Product may be damaged, or injury may result if instructions are not followed.
- ※ The following is an explanation of the symbols used in the operation manual.
- Caution:** Injury or danger may occur under special conditions.

## Warning

- In case of using this unit with machinery (Ex: nuclear power control, medical equipment, ship, vehicle, train, airplane, combustion apparatus, safety device, crime/disaster prevention equipment, etc) which may cause damages to human life or property, it is required to install fail-safe device.** It may cause a fire, human injury or damage to property.
- Install this unit on a panel.** It may cause electric shock.
- Do not connect, repair, or inspect this unit when power is ON.** It may cause electric shock.
- Do not disassemble the case. Please contact us if it is required.** It may cause electric shock or a fire.
- Wire properly after checking terminal numbers.** It may cause a fire.

## Caution


- This unit shall not be used outdoors.** It might shorten the life cycle of the product or cause electric shock.
- Please observe the rated specifications.** It might shorten the life cycle of the product or cause a fire.
- In cleaning this unit, do not use water or organic solvent. And use dry cloth.** It may cause electric shock or a fire.
- Do not use this unit where there are flammable or explosive gas, humidity, direct ray of the sun, radiant heat, vibration and impact etc.** It may cause a fire or explosion.
- Do not inflow dust or wire dregs into the unit.** It may cause a fire or malfunction.
- Wire it properly after checking terminal numbers when connecting power cable and measuring input.** It may cause a fire or explosion.

## Ordering information

KN-2	0	0	0	W
Size	W	DIN W96×H48 mm		
Power supply	0	100-240 VAC 50 to 60 Hz		
	1	24 VDC		
Option output	0	No option		
	1	Transmission output (4-20 mA)		
	4	RS485 communication output		
	5	Transmission output (4-20 mA) + RS485 communication output		
Alarm output	0	No alarm output		
	2	2EA alarm output		
	4	4EA alarm output		
Item	KN-2 Multi Indicator			

※ The above specifications are subject to change without notice.


## Connections

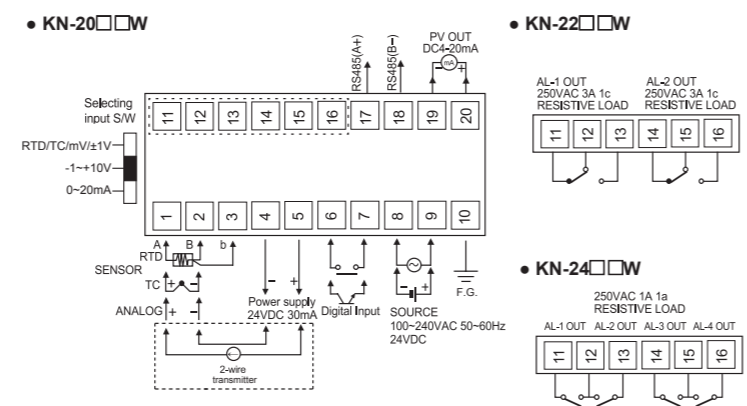

## Part descriptions

- Display part (red)**
    - Run mode: Displays current measurement value.
    - Parameter set mode: Displays parameter and SV.
  - Unit indicator:** Displays the set unit.
  - Alarm output indicator** : Turns ON when the alarm is ON.
- MODE key** : Used to enter parameter set mode, move to parameters, save SV and return to RUN mode.
  - Key** : Used to change parameter SV.
  - D.IN3** : Press the  $\text{☒}$  and  $\text{☒}$  keys for 3 sec. at the same time, it operates the set function (alarm clear, display hold, zero-point adjustment) at [d] - [t] at program mode.

## Dimensions

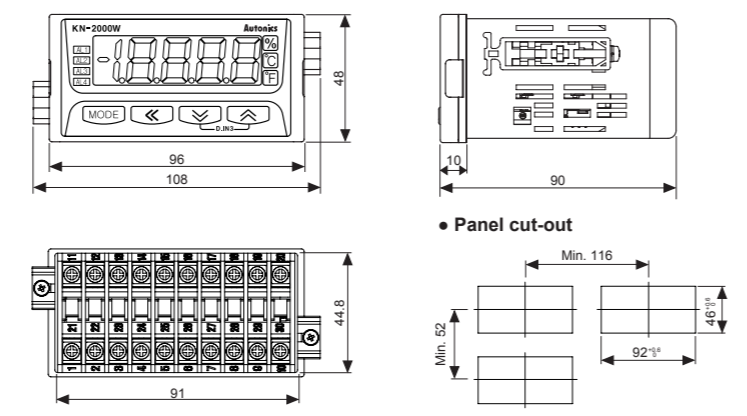

## Input type and range

Input type	Parameter	Input range(°C)	Input range(°F)	
Thermo-couple	K(CA)	tC - t	-200.0 to 1350.0	-328 to 2462
	J(IC)	tC - j	-200.0 to 800.0	-328.0 to 1472.0
	E(CR)	tC - E	-200.0 to 800.0	-328.0 to 1472.0
	T(CC)	tC - t	-200.0 to 400.0	-328.0 to 752.0
	R(PR)	tC - r	0.0 to 1750.0	32 to 3182
	B(PR)*	tC - b	400.0 to 1800.0	752 to 3272
	S(PR)*	tC - S	0.0 to 1750.0	32 to 3182
	N(NN)*	tC - n	-200.0 to 1300.0	-328 to 2372
	C(W5)*	tC - C	0 to 2300	32 to 4172
	L(IC)*	tC - L	-200.0 to 900.0	-328.0 to 1652.0
	U(CC)*	tC - U	-200.0 to 400.0	-328.0 to 752.0
	Platine II*	tC - P	0.0 to 1390.0	32 to 2534
RTD	Cu50Ω*	tCU50	-200.0 to 200.0	-328.0 to 392.0
	Cu100Ω*	tCu100	-200.0 to 200.0	-328.0 to 392.0
	JP1100Ω	tJPt.1	-200.0 to 600.0	-328.0 to 1112.0
	DP150Ω	tDPt.5	-200.0 to 600.0	-328.0 to 1112.0
Analog	Voltage	0.00 - 20.00 mA	RnR1	-19999 to 19999 (display range is variable depending on decimal point position)
		4.00 - 20.00 mA	RnR2	
-50.00 - 50.00 mV	Rnu1			
-200.0 - 200.0 mV	Rnu2			
-1.0000 - 1.0000 V	R-u1			
-1.000 - 10.000 V	R-u2			

※ Above input types which have the \* mark are not displayed.  
To display the above input types, supply the power with pressing the MODE key.

## Specification


Series	KN-2000W	
Power supply	AC voltage	100-240 VAC 50 to 60 Hz
	DC voltage	24 VDC
Allowable voltage range	90 to 110% of rated voltage	
Power consumption	AC voltage	Max. 8 VA
	DC voltage	Max. 3 W
Display method	4½ digit 7 Segment LED Display (red, green, yellow), character size: W10 × H17mm	
Input type	Thermocouple	K, J, E, T, R, B, S, N, C (W5), L, U, PLII (12 types)
	Analog	● Voltage : ±1.0000 V, ±50.00 mV, ±200.0 mV, -1.000 V-10.000 V (4 types) ● Current : 4.00-20.00 mA, 0.00-20.00 mA (2 types)
Digital input	● Contact input : Max. 2 kΩ in ON, Max. 90 kΩ in OFF ● Non-contact input : Residual voltage max. 1.0 V in ON, Leakage current max. 0.03 mA in OFF ● Outflow current : Approx. 0.2 mA	
Sub output	Alarm output	2-point : Relay contact capacity 250 VAC 3 A 1c, 4-point : Relay contact capacity 250 VAC 1 A 1a
	Transmission output	ISOLATED DC 4-20 mA (PV transmission) load resistance max. 600 Ω (accuracy: ±0.2% F.S., resolution: 8000)
	Com. output	RS485 (Modbus RTU)
Display accuracy	±0.2% F.S. ±1digit (25±5 °C) ±0.3% F.S. ±1digit (-10 to 20 °C, 30 to 50 °C) In case of thermocouple and below -100 °C input, [±0.4% F.S.] ±1digit ※ TC-T, TC-U is min. ±2.0 °C	
Setting method	Set by front keys or RS485 communication	
Alarm output hysteresis	Set ON/OFF interval (1 to 999 digit)	
Sampling cycle	Analog input : 100 ms, Temperature sensor input : 250 ms	
Dielectric voltage	200 0VAC 50/60 Hz for 1 min. (between input terminal and power terminal)	
Vibration	0.75 mm amplitude at frequency of 5 to 55 Hz (for 1 min.) in each of X, Y, Z directions for 2 hours	
Relay life cycle	2-point	Mechanical: Min. 10,000,000, Electrical: Min. 100,000 (250 VAC 3 A resistance load)
	4-point	Mechanical: Min. 20,000,000, Electrical: Min. 500,000 (250 VAC 1 A resistance load)
Insulation resistance	Min. 100 MΩ (at 500VDC megger)	
Noise resistance	Square shaped noise by noise simulator (pulse width 1 μs) ±2 kV	
Memory retention	Approx. 10 years (non-volatile semiconductor memory type)	
Environment	Ambient temp.	-10 to 50 °C, storage: -20 to 60 °C
	Ambient humi.	35 to 85%RH, storage: 35 to 85%RH
Approval	CE	
Unit weight	Approx. 200 g	

## Communication


- Communication set [Program mode: Addr, bAUd]**  
You can set communication address [Addr] and communication speed [bAUd] for RS485 communication.
- Communication write enable/disable [Program mode: CoNw]**  
You can set to enable [EnR] or disable [d] 5A or writing parameter setting by RS485 communication.
- Communication manual**  
Refer to communication manual for RS485 communication. Visit our web site (www.autonics.com) to download communication manual and software [Integrated device management program: DAQMaster].
- Software [Integrated device management program: DAQMaster]**  
Integrated device management program, DAQMaster, is able to set and monitor parameters. It is available only for RS485 communication models.
- Communication specifications**

Item	Specifications
Com. method	RS485 2-wire half duplex
Com. speed(BPS)	9600, 4800, 2400, 1200
Converter	Converter built in RS232
Max. connections	32 units
Com. distance	Max. 1200m (within 700m recommended)
Protocol	MODBUS 1.1 RTU
Parity	None
Stop Bit	1Bit
Data length	8Bit

## Monitoring mode

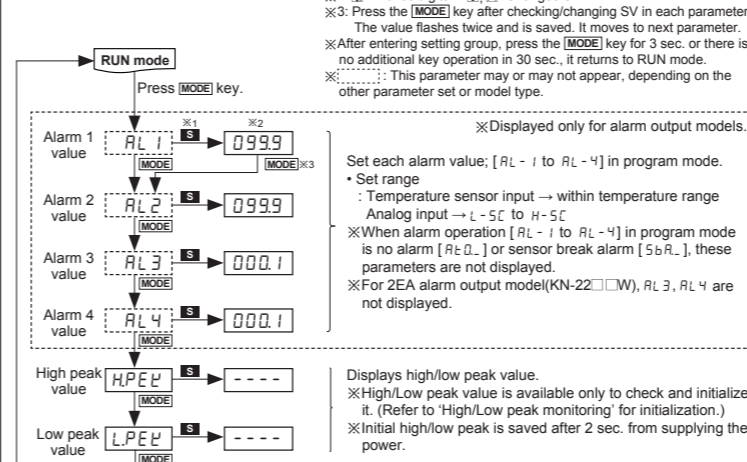

## Program mode

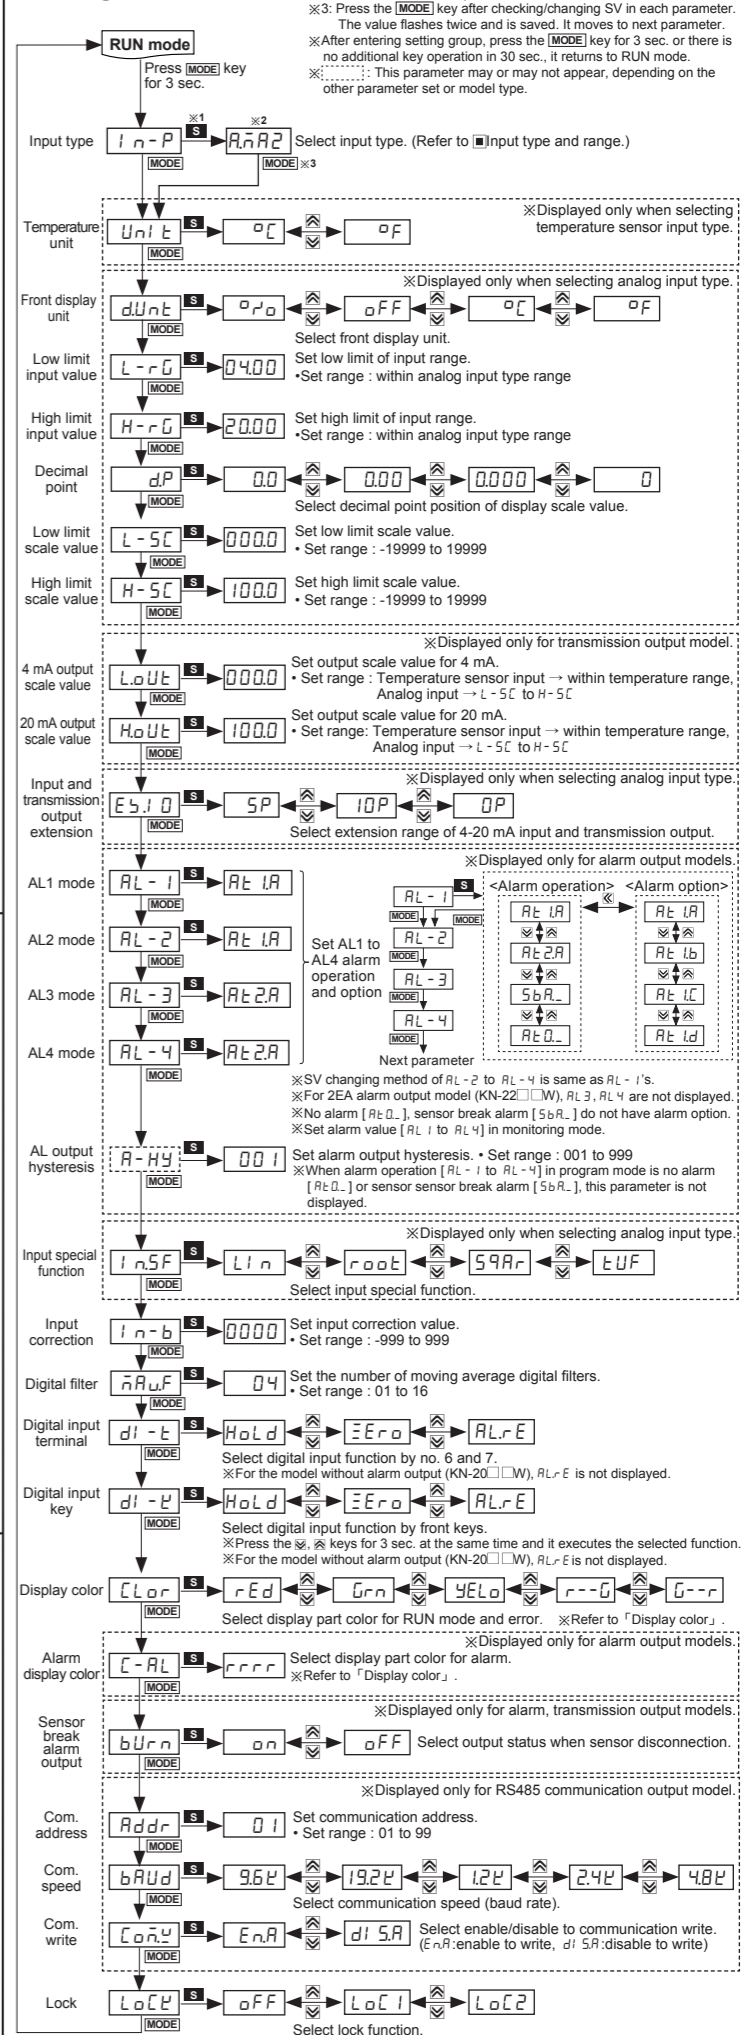



## Functions

### Alarm [AL-1, AL-2, AL-3, AL-4]

This product has 2 or 4 alarms to operate individually when the value is too high or low. Alarm function is set by the combination of alarm operation and alarm option. To clear alarm, use digital input function (setting  $d1-t, d1-t$  as  $ALrE$ ) or turn the power OFF and ON.

※ For the model (KN-20□□W) without alarm output, these parameters are not displayed.



### Alarm operation

Mode	Name	Alarm operation	Descriptions
AL-0	—	—	No alarm operation
AL-1	High limit alarm	OFF → ON High limit alarm value: 800°C PV	PV ≥ alarm temperature, alarm is ON
AL-2	Low limit alarm	ON → OFF Low limit alarm value: 200°C PV	PV ≤ alarm temperature, alarm is ON
5bAL	Sensor break alarm	—	It will be ON when it detects sensor disconnection. Sensor break alarm does not have alarm option.


※ H : Alarm output hysteresis

### Alarm option

Option	Name	Descriptions
AL-1A	Standard alarm	If it is an alarm condition, alarm output is ON. Unless an alarm condition, alarm output is OFF.
AL-1b	Alarm latch	If it is an alarm condition, alarm output is ON. Before clearing the alarm, an ON condition is latched. (Holding the alarm output)
AL-1C	Standby sequence	First alarm condition is ignored. From the second alarm condition, standard alarm operates. When power is ON and it is an alarm condition, it is ignored. From the second alarm condition, standard alarm operates.
AL-1d	Alarm latch and standby sequence	If it is an alarm condition, it operates both alarm latch and standby sequence. When power is ON and it is an alarm condition, it is ignored. From the second alarm condition, alarm latch operates.

### Alarm output hysteresis [Program mode: A-HY]

Set the interval of ON/OFF alarm output. The set hysteresis is applied to AL1 to AL4 and it is as below.  
※ Ex) A-HY: 4, high limit alarm value: 800, low limit alarm value: 200

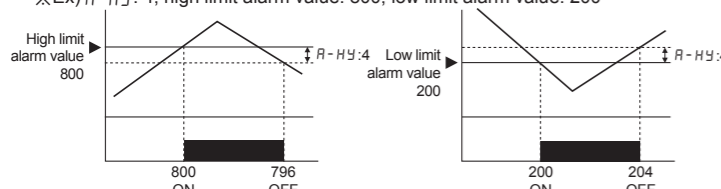

### High/Low peak monitoring [Monitoring mode: H.PE, L.PE]

This function is to save high/low peak to check the invisible abnormal condition of system at [H.PE] or [L.PE] in monitoring mode. When the high/low peak is out of the temperature range, it displays HHHH or LLLL. To initialize high/low peak, press the  $\text{MODE}$ ,  $\text{MODE}$  keys at the same time for 3 sec. at [H.PE] or [L.PE]. In this case, peak value is the present input value.

### Error


Display	Descriptions	Troubleshooting
LLLL	Flashes when measured sensor input is lower than the temperature range.	When input is moved within the temperature range, it is cleared.
HHHH	Flashes when measured sensor input is higher than the temperature range.	
bUr n	Flashes when the sensor is break or not connected.	Check temperature sensor connection.
Err	Flashes when there is error to SV	Check set conditions and re-set it.

### User input range [Program mode: L-rG, H-rG]

When selecting analog input, you can set the input range for your purpose. Set low limit input value [L-rG] and high limit input value [H-rG] to limit the input range.  
• Set conditions :  
Low limit input value [L-rG] +20%F.S. < High limit input value [H-rG]

### Parameter initialization

To initialize all parameter as factory default, supply the power to the product with pressing the  $\text{MODE}$  and  $\text{MODE}$  keys at the same time and it enters initialization parameter.

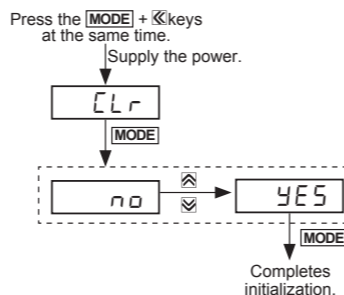

### Input and transmission output extension [Program mode: E-V a]

This function is to extend analog input and 4 to 20mA transmission output to 5% or 10% range.

Mode	Operation
OP	Outputs 4 to 20 mA within analog input range.
5P	Outputs 3.2 to 20.8 mA for 5% out of the analog input range.
10P	Outputs 2.4 to 21.6 mA for 10% out of the analog input range.


※ This parameter is displayed only for transmission output (4-20 mA) model. But it is not displayed when selecting temperature sensor input.

### Input correction [Program mode: I-n-b]

This function is to correct the error occurring from a thermocouple, a RTD or analog input out of allowable error range of this unit. This is also available to correct error when a sensor cannot contact the subject position by calculating the error temperature. Variable temperature sensors have accuracy level. Because high accuracy type is expansive, standard thermocouples are generally used. In this case, temperature sensor may occur error. By executing this function, you can get more accurate temperature. When executing input correction function, you should measure the error from a sensor accurately. If the measured error is not correct, error may be greater. (If  $I-n-b = tUF, I-n-b$  as atmospheric pressure input value not as input correction function. Refer to Two unit function.)  
Ex) When measured temperature is 4 °C and actual temperature is 0 °C. Set  $I-n-b$  as -4, and display value is 0 °C.


### Transmission output scale [Program mode: L.oUt, H.oUt]

For 4-20 mA current output, this function is to set the display value for 4 mA [L.oUt] and the display value for 20 mA [H.oUt]. The interval between L.oUt and H.oUt is 10% F.S. If it is below 10%, it is fixed as 10% of SV.

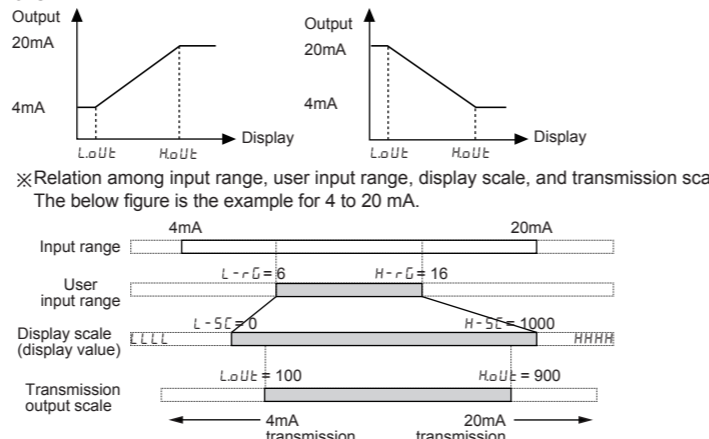


### Two Unit Function [Program mode: tUF]

When connecting a pressure sensor, compound pressure which is below atmospheric pressure (0) is for vacuum as mmHg and which is atmospheric pressure or over it is for positive pressure as kg/cm<sup>2</sup>. Atmospheric pressure is 0 kg/cm<sup>2</sup>. When this unit does not display 0 kg/cm<sup>2</sup>, you can correct zero-point adjustment function. When using two unit function, L-5C is fixed as -760. L-5C parameter is displayed but you cannot set this. You can set H-5C within 0 to 19999 range.

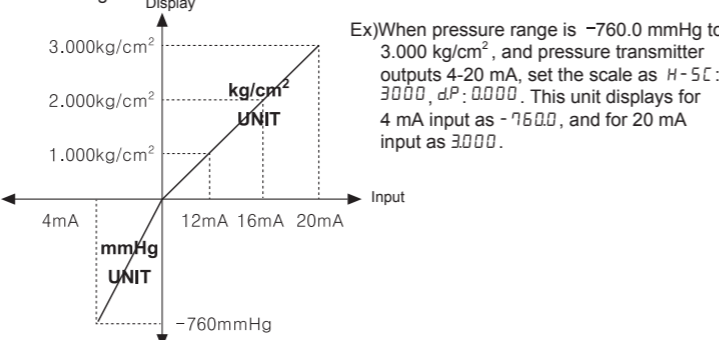


### Display scale [Program mode: L-5C, H-5C]

For analog input, this function is to set (-19999 to 19999) for particular high/low limit value in order to display high/low limit value of measurement input. If measurement inputs are 'a' and 'b' and particular values are 'A' and 'B', it will display a=A, b=B as below graphs.

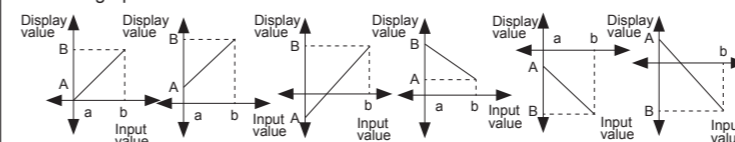

Display scale function is able to change display value for max./min. measured input by setting high limit scale [H-5C] and low limit scale [L-5C] in program mode.  
※ Ex) Set high/low scale value (input range is 0 to 10V)

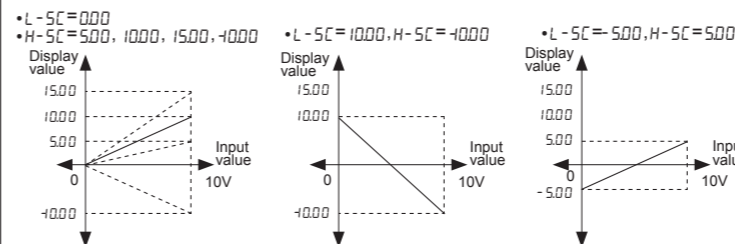

※ When changing input type, high/low scale is changed as factory default.

### Input special function [Program mode: I-n5F]

When selecting analog input, this function is to display the calculated actual value by square, root ( $\sqrt{\quad}$ ), or two unit function (TUF) as display value.

Parameter	Functions	Graph	Applications
LIn	Outputs as input value	Display Y = AX + B	Standard characteristics. Input for linearity.
root	Outputs the rooted ( $\sqrt{\quad}$ ) input value	Display Y = A( $\sqrt{X}$ ) + B (X > 0) Y = 0 (X < 0)	Used for measuring flows by pressure signal.
59Ar	Outputs the squared input value	Display Y = A(X <sup>2</sup> ) + B (X > 0) Y = -A(X <sup>2</sup> ) + B (X < 0)	Used for outputting differential pressure by flow signal.
tUF	Refer to 'Two unit function'		

※ Display value and mA output value for 59Ar :

$$\text{Display value} = \left( \frac{\text{Input value} - L-rG}{H-rG - L-rG} \right)^2 \times (H-5C - L-5C) + L-5C$$

※ Display value and mA output value for root :

$$\text{Display value} = \left( \frac{\text{Input value} - L-rG}{H-rG - L-rG} \right) \times (H-5C - L-5C) + L-5C$$

### Digital filter [Program mode: nARF]

Moving average digital filter is able to stably display and output the noise from input line and irregular signals as software.  
• Filter set range : 01 to 16  
(When setting as 01, digital filter function does not run.)  
※ Display cycle is same when executing moving average digital filter.

### Digital input [Program mode: d1-t, d1-t]

By digital input terminal [d1-t] (no. 6, 7 terminals) or digital input key [d1-t] (D.IN3 with  $\text{MODE}$  for 3 sec.), one of three functions executes as the below table.

Function	Operaiton
ALrE	Alarm clear When alarm is ON in RUN mode, it clears alarm forcibly. (It applies only for alarm latch, alarm latch and standby sequence options.) Alarm clear operates only when the value is out of the alarm value range. After clearing alarm, alarm operates its option normally. ※ For the model without alarm output (KN-20□□W), this parameter is not displayed.
HoLd	Display HOLD Temporarily indicated value is stopped in order to check indicated value in unstable input.
Err	Zero-point adjustment Set preset display value as 0. This function is related with input correction [I-n-b]. When executing zero adjustment function in display value as 4, input correction value [I-n-b] is set as -4 automatically.

### Alarm output for disconnecting input sensor [Program mode: bUr n]

When disconnecting input sensor, you can set the status of transmission output.

Parameter	SV	Transmission output(4-20 mA)	Alarm output
bUr n	o n	20 mA+5% output	High limit alarm ON Low limit alarm OFF
	o FF	4 mA-5% output	High limit alarm OFF Low limit alarm ON

### Display color [Program mode: CLor / C-AL]

This function is to change display color for occurring error, operating alarm automatically. User can check the status of this unit directly.  
※ Color of monitoring mode, program mode is red.


### RUN mode and error display color [Program mode: CLor]

Parameter	Display color	Parameter	Display color
SV	RUN	Error	YELo
rEd	Red	r--G	Red
Grn	Green	G--r	Green
			Red

### Alarm display color [Program mode: C-AL]


This parameter is displayed only for the alarm output models (KN-22□□W, KN24□□W).

• The number of set digit is same as the number of alarm output.



• Set color for each alarm. It changes as  $r \rightarrow G \rightarrow Y \rightarrow r$  in turn.

※ Ex) Press any one among the  $\text{MODE}$ ,  $\text{MODE}$ ,  $\text{MODE}$  keys.

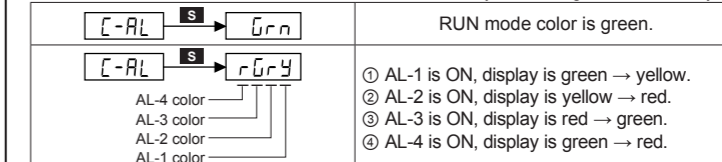

• When alarm is cleared, or two alarms operate at the same time, the latest alarm's color is applied.  
• When error occurs [HHHH, LLLL, bUr n, Err, Err1] during alarm, the set color of CLor is applied.

### Lock [Program mode: LoCt]

It limits to check parameter set value and to change it.

Parameter	oFF	LoC1	LoC2
Program mode	●	●	○
Monitoring mode	●	●	●

● : Enable to check/set, ● : Enable to check, disable to set, ○ : Disable to check  
※ In LoC2, only LoCt parameter displays in program mode.

### Factory default

#### Monitoring mode

Parameter	Default	Parameter	Default	Parameter	Default
AL1	0999	AL3	000.1	HPE	---
AL2	0999	AL4	000.1	LPE	---

#### Program mode

Parameter	Default	Parameter	Default	Parameter	Default	Parameter	Default
I-n-P	AARZ	L.oUt	0000	I-n5F	LIn	Addr	01
Un t	oC	H.oUt	1000	I-n-b	0000	bAUd	9.6E
dUn t	oC	E-V a	5P	nARF	04	Co nY	EnA
L-rG	0400	AL-1	AL-1A	d1-t	HoLd	LoCt	oFF
H-rG	2000	AL-2	AL-2A	d1-t	HoLd		
dP	00	AL-3	AL-3A	CLor	rEd		
L-5C	0000	AL-4	AL-4A	C-AL	rrrr		
H-5C	1000	A-HY	001	bUr n	o n		

### Caution for using

- For connecting the power, use a crimp terminal(M3.5, min. 7.2 mm).
- The connection of this unit should be separated from the power line and high voltage line in order to prevent inductive noise.
- Install a power switch or a circuit breaker to supply or cut off the power.
- Switch or circuit breaker should be installed nearby users for convenient control.
- Do not use this unit near the high frequency instruments (high frequency welding machine & sewing machine, large capacity SCR controller).
- When supplying input, if HHHH or LLLL is displayed, measured input may have problem. Turn off the power and check the line.
- Installation environment
  - Ⓛ It shall be used indoor.
  - Ⓜ Pollution Degree 2
  - Ⓢ Altitude max. 2,000 m
  - Ⓣ Installation category II

※ It may cause malfunction if above instructions are not followed.

### Major products

- Photoelectric sensors
- Fiber optic sensors
- Door sensors
- Door side sensors
- Area sensors
- Proximity sensors
- Pressure sensors
- Rotary encoders
- Connectors/Sockets
- Switching mode power supplies
- Control switches/Lamps/Buzzers
- I/O Terminal Blocks & Cables
- Stepper motors/drivers/motion controllers
- Graphic/Logic panels
- Field network devices
- Laser marking system(Fiber, CO<sub>2</sub>, Nd:YAG)
- Laser welding/soldering system
- Temperature controllers
- Temperature/Humidity transducers
- SSR/Power controllers
- Counters
- Timers
- Panel meters
- Tachometer/Pulse(Rate)meters
- Display units
- Sensor controllers
- Recorders
- Indicators
- Converters
- Controllers
- Thyristor units
- Pressure transmitters
- Temperature transmitters

**Autonics Corporation**  
http://www.autonics.com

Satisfiable Partner For Factory Automation

HEAD QUARTERS:  
116, Ungbigongdan-gil, Yangsan-si, Gyeongsangnam-do, Korea  
OVERSEAS SALES:  
#402-404, Buecheon Techno Park, 655, Pyeongcheon-ro, Wonmi-gu, Buecheon, Gyeonggi-do, Korea  
TEL: 82-32-610-2730 / FAX: 82-32-329-0728  
E-mail: sales@autonics.com

The proposal of a product improvement and development: product@autonics.com