## DIN W48×H24mm Small Size Digital Panel Meter

## Features

- Max. display: 1999
- Auto Zero function and Hold function
- 7-segment LED display
- Power supply: 5VDC, 12-24VDC

Please read "Safety Considerations" in operation manual before using.

## Ordering Information



4				DC voltage input F.S.	DC current input F.S.	
			1	199.9mV	199.9µA	
		Measurement input	2	1.999V	1.999mA	
			3	19.99V	19.99mA	
			4	199.9V	199.9mA	
			Х	Option	Option	
		Power supply	0	5VDC		
			1	12-24VDC		
		Measurement function (input)	DV	DC Voltage		
		include of the include of (input)	DA	DC Current		
	Digit			DC4-20mA (scaling meter) <sup>×1</sup>		
				DIN W48×H24mm		
Digit				1999 (3½-digit)		
em			M	Meter		


%1: 1-5VDC mearsurement input is option.

### Specifications

Model		M4N-DV-	M4N-DA-	M4N-DI-		
Measurement input		DC voltage	DC current	DC4-20mA		
	iput					
Power supply		5VDC=-, 12-24VDC=-				
Allowable voltage range		90 to 110% of rated voltage				
Power consump	tion	2W				
Display method		7-segment LED display (red) (character height: 10mm)				
Max. display rar	nge	1999				
Display accurac	y	F.S. ±0.2% rdg ±1-digit				
Sampling period		300ms				
A/D switching m	ethod	Dual integral method				
Response time		Approx. 2 sec (0 to 1999)				
Max. allowable input		150% of measurement input range				
Sampling time		2.5 times/sec				
Insulation resista	ance	Over 100MΩ (at 500VDC megger)				
Dielectric streng	ith	2000VAC 50/60Hz for 1 min				
Noise immunity		±100V the square wave noise (pulse width: 1µs) by the noise simulator				
Vibration	Mechanical	0.75mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 1 hour				
	Malfunction	0.5mm amplitude at frquency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 10 min				
Shock	Mechanical	300m/s <sup>2</sup> (approx. 30G) in each X, Y, Z direction for 3 times				
	Malfunction	100m/s <sup>2</sup> (approx. 10G) in each X, Y, Z direction for 3 times				
Environment	Ambient temperature	-10 to 50°C, storage: -20 to 60°C				
	Ambient humidity	35 to 85%RH, storage: 35 to 95%RH				
Unit weight	<u>.</u>	Approx. 44g				


XEnvironment resistance is rated at no freezing or condensation.


## **Compact Panel Meter**

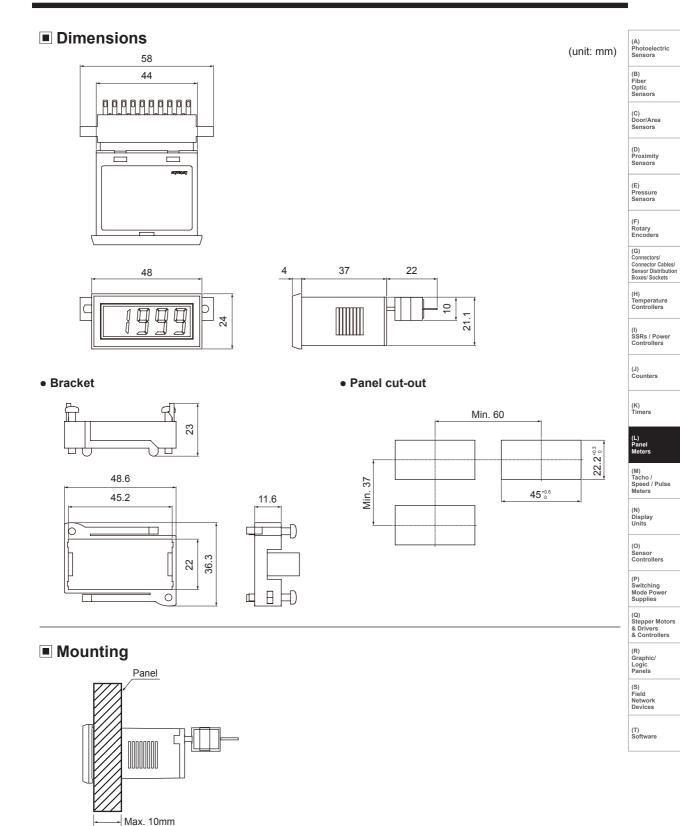

%Panel boad tickness should be less than 10mm.

## Connections

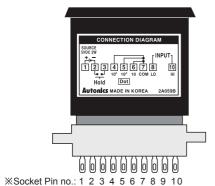

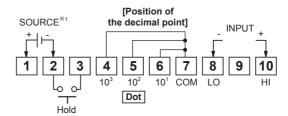


※1: 5VDC, 12-24VDC


- When changing the position of the decimal point, disconnect switching pattern point on PCB and change the decimal point in the external terminal socket. (Refer to I Proper Usage'.)
- When "I" or "- I" is flashes with a certain measurement input, disconnect power supply and then check the cables.
- \*Socket pin no. 9, NC terminal, is not connected at inside.

## Connections of Applications

#### **O DC voltmeter connection**

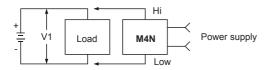

(Fig. 1) Measuring input (V1) is under 200VDC

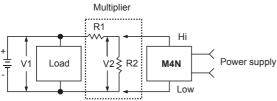


(Fig. 2) Measuring input (V1) is under 200VDC

When the measuring voltage is over 200VDC, please select R1 and R2 in order to make V2 less than max. measuring voltage using multiplier.


$$/2 = \frac{R^2}{R^{1}+R^2} \times V1$$
 R1 > R2

Simultaneous connection of voltmeter and ammeter

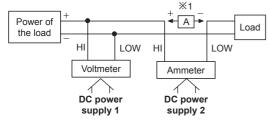


- X1: Compared to measurement input range, higher measuring voltage needs a multiplier and lower measuring voltage needs a shunt.
- When using voltmeter and ammeter simultaneously, connect the separated power supply each.
- \*(-) terminal of the power and (-) terminal of measurement input are shorted.

O DC ammeter connection

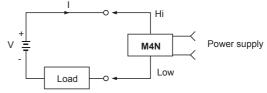

(Fig. 3) Measuring current is under DC200mA

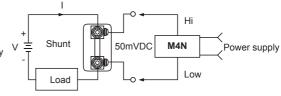


(Fig. 4) Measuring current is 50mVDC

When the current is higher than DC200mA, please use shunt.

※Second section of shunt is DC50mV.

#### ◎ Scaling meter connection

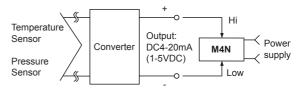

×1-5VDC output of converter is sold separately.

# **Compact Panel Meter**


## Proper Usage

## ▲ Cautions during use

- Follow instructions in 'Cautions during use'. Otherwise, it may cause unexpected accidents.
- 5VAC, 12-24VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- Keep away from high voltage lines or power lines to prevent inductive noise.

In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.

Do not use near the equipment which generates strong magnetic force or high frequency noise.

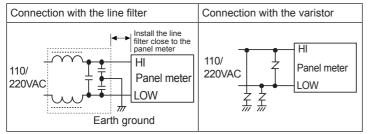

- This unit may be used in the following environments.
  - ① Indoors (in the environment condition rated in 'Specifications')
  - ② Altitude max. 2,000m
  - ③ Pollution degree 2
  - ④ Installation category II

#### $\odot$ Indicating method of unit

M4N is not indicated a unit on the product, therefore please indicate it in panel.



#### O Display of decimal point

When changing the position of the decimal point, disconnect switching pattern point on PCB and change the decimal point in the external terminal socket.

(If changing only at the external terminal socket not disconnecting switching pattern point on PCB, it displays both set points: one from PCB, one from the external terminal socket)

(A) Photoelectric Sensors (B) Fiber Optic Sensors

ensors

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

(K) Timers

(L) Panel Meters

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices

(T) Software