

Handheld RF Counters/Detectors with Bargraph Power Meter

103

- 10 Digit LCD
- 16 Section bargraph to show RF strength
- 300MHz direct counter with 0.1Hz resolution
- 4 Selectable gate speeds
- Display hold
- Rechargeable NiCd battery pack included
- Low battery indicator

104

- 10 Digit LCD
- 16 Section bargraph to show RF strength
- 300MHz direct counter with 0.1Hz resolution
- 4 Selectable gate speeds
- Measures frequency or period
- Filter helps prevents display of random noise
- Display hold
- Rechargeable NiCd battery pack included
- Low battery indicator

105

- 10 Digit LCD
- 16 Section bargraph to show RF strength
- 300MHz direct counter with 0.1Hz resolution
- Automatically holds and tunes ICOM CI-V or AOR receivers
- 4 Selectable gate speeds
- Measures frequency or period
- Filter helps prevents display of random noise
- Display hold
- Rechargeable NiCd battery pack included
- Low battery indicator

106

- 7 Digit LCD
- 16 Section bargraph to show RF strength
- Frequency counter for digital, on/off keying and analog signals ($\geq 250\mu\text{s}$ pulse width)
- Squelch adjustment for input signals
- Display hold
- Low power consumption (5 hours approx. battery life)
- Rechargeable NiCd battery pack included
- Low battery indicator

Model 103

Introduction

The Model 103 hand-held frequency counter is a more practical counter, even advanced features such as field strength measurement is incorporated. It is compact, truly pocket-sized, test instrument designed for ease of use and dependable performance. Supplied as a complete with internal NiCd pack, AC wall charger and 7 section telescopic antenna.

Specifications

Frequency range:	1 MHz - 3 GHz
Weight:	210 g
Size:	80 mm high x 68 mm wide x 31 mm deep
Impedance:	50 Ohms (BNC Socket)
Case:	Stamped aluminum with black anodized finish
Battery:	Internal 4 x AA 600 mAH NiCd pack
Power:	9 VDC 300 mA
Timebase:	Less than 1 PPM at room temperature

Features

- 10 digit Liquid Crystal Display
- Low power consumption (Average 6 hour battery life)
- Supplied with NiCd pack, AC wall charger and telescopic antenna
- Hold switch to lock display
- Low battery indicator
- Ultra sensitive synchronous detector 16 section bargraph to show RF signal strength
- High speed 300 MHz direct counter with 0.1 Hz resolution
- 4 selectable gate speeds

Controls

1. Power Switch - This slide switch turns the counter on and initiates a 2 second test of all the LCD segments.
2. Range Switch - This should be switched to the 300 MHz position for frequencies between 1 MHz and 300 MHz and switched to the 3 GHz position for frequencies between 10 MHz and 3 GHz.
3. Hold Button - This holds the current display and stops the counter from counting.
4. Gate Button - This selects the gate or measurement time. A longer gate time allows counting for longer period and results in higher accuracy.
5. Calibration - The calibration adjustment opening is located on the front panel of the counter. This allows access to the trimmer capacitor that provides about a 10 PPM adjustment range of the time base oscillator. This is not usually necessary but to do so read a signal of a known frequency before adjusting the trimmer for correct frequency display. If you calibrate at 4.1943 MHz or above then the counter will be more accurate.

Hints and Tips

1. NiCd Operation

This frequency counter can operate for up to six hours from its fully charged NiCd batteries. They are charged when the unit is plugged into the supplied AC/DC adapter. Full recharge will occur over 12 to 16 hours. Before recharging the batteries you should be deep cycled occasionally by allowing them to completely discharge to maintain maximum battery capacity. The NiCd batteries should last for several years. However, it is a good idea to check them every twelve months for signs of corrosion or leakage. Always replace the whole set if any one cell fails.

2. Signal Input

When using the counter with an antenna for signal pick up, random frequencies may appear on the display. This is quite normal and is caused by the high gain of the receiver circuits, which amplify noise in the absence of a strong readable signal. Never get the unit too close to a transmitter as internal damage will result.

3. Antenna Selection

The supplied telescopic antenna is best for general purpose use. This is because its length can be adjusted to suit the frequency required. Usually you will want a shorter antenna for UHF and a fully extended one for VHF / HF.

4. Reception Distance From Transmitter

The distance from which you will be able to receive frequencies will depend upon the type and location of the transmitting antenna, transmitter output power and the frequency in use. Some typical distances are:

Cordless Phone	0.3 meters
Cellular Phone	3 - 20 m
CB radio	2 - 8 m
VHF Two Way Radio	3 - 30 m
UHF Two Way Radio	3 - 30 m

Input Sensitivity (Typical)

Never make any kind of connection between the RF finder and a transmitter.

Amplifier:	50 Ohm
Impedance:	50 Ohm VSWR less than 2:1
Range:	1 MHz - 3 GHz
Sensitivity:	< 0.8mV at 100 MHz < 6 mV at 300 MHz < 7 mV at 1.0 GHz < 100 mV at 2.4 GHz
Max. input:	15 dBm

RF Signal Strength Bargraph

Frequency	1st Segment	Full Scale
27 MHz	7mV	100 mV
150 MHz	5 mV	90 mV
800 MHz	10 mV	200 mV

Frequency Display Resolution

Range	Gate Time (Seconds)	LSD	Sample Display
300 MHz	0.0625	10 Hz	300.00000 MHz

	0.25	1 Hz	300.000000 MHz
	1.0	1 Hz	300.000000 MHz
	4.0	0.1 Hz	300.0000000 MHz
3 GHz	0.0625	1000 Hz	3000.000 MHz
	0.25	100 Hz	3000.0000 MHz
	1.0	10 Hz	3000.00000 MHz
	4.0	10 Hz	3000.00000 MHz

Model 104

Introduction

The model 104 hand-held frequency counter is a more professional counter, even advanced features such as field strength measurement and auto hold are incorporated. It is compact, truly pocket-sized, test instrument designed for ease of use and dependable performance. Supplied as a complete with internal NiCd pack, AC wall charger and 7 section telescopic antenna.

Specifications

Frequency range:	10 Hz - 3 GHz
Weight:	250 g
Size:	100 mm high x 68 mm wide x 31 mm deep
Impedance:	1 * dual purpose BNC Socket 50 Ohms input for range 1 MHz to 3 GHz 1 Meg Ohm input for range 10 Hz to 50 MHz
Case:	Stamped aluminum with black anodized finish
Battery:	Internal 4 x AA 600 mAH NiCd pack
Power:	9 VDC 300 mA
Timebase:	Less than 1 PPM at room temperature

Features

- 10 digit Liquid Crystal Display
- Hi-Z low range
- Filter to prevent display of random noise
- Automatic hold
- Measures frequency and period
- LED back light
- Beeper
- Low power consumption (Average 6 hour battery life)
- Hold switch to lock display
- Low battery indicator
- Ultra sensitive synchronous detector 16 section bargraph to show RF signal strength
- High speed 300 MHz direct counter with 0.1 Hz resolution
- 4 selectable gate speeds

Controls

6. Power Switch - This slide switch turns the counter on and initiates a 2 second test of all the LCD segments.
7. Amp Switch - This slide switch selects either the 1 Meg Ohm high impedance amplifier or 50 Ohm amplifier and prescale.

8. Range Switch - This should be switched to the 300 MHz position for frequencies between 1 MHz and 300 MHz and switched to the 3 GHz position for frequencies between 10 MHz and 3 GHz.
9. Lite Switch - This slide switch turns the LCD back light on and off.
10. Filter Switch – This slide switch turns the filter on and off.
11. Function Button - This selects the frequency or period. This button has four settings. One each for displaying frequency or period as these are received, and two settings for automatic hold of the first frequency or period captured.
12. Hold Button - This holds the current display and stops the counter from counting.
13. Gate Button - This selects the gate or measurement time. A longer gate time allows counting for longer period and results in higher accuracy.
14. Calibration - The calibration adjustment opening is located on the front panel of the counter. This allows access to the trimmer capacitor that provides about a 10 PPM adjustment range of the time base oscillator. This is not usually necessary but to do so read a signal of a known frequency before adjusting the trimmer for correct frequency display. If you calibrate at 4.1943 MHz or above then the counter will be more accurate.

Hints and Tips

1. NiCd Operation

This frequency counter can operate for up to six hours from its fully charged NiCd batteries. They are charged when the unit is plugged into the supplied AC/DC adapter. Full recharge will occur over 12 to 16 hours. Before recharging the batteries you should be deep cycled occasionally by allowing them to completely discharge to maintain maximum battery capacity. The NiCd batteries should last for several years. However, it is a good idea to check them every twelve months for signs of corrosion or leakage. Always replace the whole set if any one cell fails.

2. Signal Input

When using the counter with an antenna for signal pick up, random frequencies may appear on the display. This is quite normal and is caused by the high gain of the receiver circuits, which amplify noise in the absence of a strong readable signal. Never get the unit too close to a transmitter as internal damage will result.

3. Antenna Selection

The supplied telescopic antenna is best for general purpose use. This is because its length can be adjusted to suit the frequency required. Usually you will want a shorter antenna for UHF and a fully extended one for VHF / HF.

4. Reception Distance From Transmitter

The distance from which you will be able to receive frequencies will depend upon the type and location of the transmitting antenna, transmitter output power and the frequency in use. Some typical distances are:

Cordless Phone	0.3 meters
Cellular Phone	3 - 20 m
CB radio	2 - 8 m
VHF Two Way Radio	3 - 30 m
UHF Two Way Radio	3 - 30 m

Input Sensitivity (Typical)

Never make any kind of connection between the counter and a transmitter.

Amplifier:	1 Meg Ohm	50 Ohm
------------	-----------	--------

Impedance:	1 Meg Ohm, 30 pF	50 Ohm VSWR less than 2:1
Range:	10 Hz – 50 MHz	1 MHz - 3 GHz
Sensitivity:	< 10 mV at 10 Hz – 10 MHz < 0.8mV at 100 MHz < 20 mV at 10 MHz – 50 MHz < 6 mV at 300 MHz < 7 mV at 1.0 GHz < 100 mV at 2.4 GHz	
Max. input:	100 Vrms	15 dBm

RF Signal Strength Bargraph

Frequency	1st Segment	Full Scale
27 MHz	7mV	100 mV
150 MHz	5 mV	90 mV
800 MHz	10 mV	200 mV

Frequency Display Resolution

Range	Gate Time (Seconds)	LSD	Sample Display
300 MHz	0.0625	10 Hz	300.00000 MHz
	0.25	1 Hz	300.000000 MHz
	1.0	1 Hz	300.000000 MHz
	4.0	0.1 Hz	300.0000000 MHz
3 GHz	0.0625	1000 Hz	3000.000 MHz
	0.25	100 Hz	3000.0000 MHz
	1.0	10 Hz	3000.00000 MHz
	4.0	10 Hz	3000.00000 MHz

Model 105

Introduction

The model 105 is the latest advance in hand-held radio frequency finder / counter. It excels at finding frequencies for secure monitoring applications. It automatically and instantly tunes ICOM CI-V or AOR receivers to the frequency it finds. It is compact, truly pocket-sized and is designed for ease of use and reliable performance. It comes complete with internal NiCd pack, AC wall charger, 7 section telescopic antenna and interface cable.

Specifications

Frequency range:	1 MHz - 3 GHz
Weight:	250 g
Size:	100 mm high x 68 mm wide x 31 mm deep
Impedance:	50 Ohms (BNC Socket)
Case:	Stamped aluminum with black anodized finish
Battery:	Internal 4 x AA 600 mAH NiCd pack
Power:	9 VDC 300 mA
Timebase:	Less than 1 PPM at room temperature

Features

- 10 digit Liquid Crystal Display
- Low power consumption (Average 6 hour battery life)
- LED back light
- Supplied with NiCd pack, AC wall charger, telescopic antenna and interface cable
- Measures frequency and period
- Automatically holds and tunes ICOM CI-V or AOR receivers
- Filter prevents display of random noise
- Hold switch to lock display
- Low battery indicator
- Beeper
- 4 selectable gate speeds
- Ultra sensitive synchronous detector 16 section bargraph to show RF signal strength
- High speed 300 MHz direct counter with 0.1 Hz resolution

Controls

15. Power Switch. This slide switch turns the RF finder on which also initiates a 2 second test of all the LCD segments.
16. Com Switch. This slide switch selects either the ICOM CI-V receivers or the AOR receivers.
17. Range Switch. This should be switched to the 300 MHz position for frequencies between 1 MHz and 300 MHz and switched to the 3 GHz position for frequencies between 10 MHz and 3 GHz.
18. Lite Switch. This slide switch turns the LCD back light on and off.
19. Filter Switch. Slide the switch to turn the filter on and off.
20. Function Button. This selects the frequency or period. This button has four settings. One each for displaying frequency or period as these are received, and two settings for automatic hold and tune of the first frequency or period found.
21. Hold Button. This holds the current display and stops the RF finder from counting.
22. Gate Button. This selects the gate or measurement time. A longer gate time allows counting for longer period and results in higher accuracy.
23. Calibration. The calibration adjustment opening is located on the front panel of the RF finder. This allows access to the trimmer capacitor that provides about a 10 PPM adjustment range of the time base oscillator. This is not usually necessary but to do so read a signal of a known frequency before adjusting the trimmer for correct frequency display. If you calibrate at 4.1943 MHz or above then the RF finder will be more accurate.

Hints and Tips

1. NiCd Operation

This RF finder can operate for up to six hours from its fully charged NiCd batteries. They are charged when the unit is plugged into the supplied AC/DC adapter. Full recharge will occur over 12 to 16 hours. Before recharging the batteries you should be deep cycled occasionally by allowing them to completely discharge to maintain maximum battery capacity. The NiCd batteries should last for several years. However, it is a good idea to check them every twelve months for signs of corrosion or leakage. Always replace the whole set if any one cell fails.

2. Signal Input

When using the RF finder with an antenna for signal pick up, random frequencies may appear on the display. This is quite normal and is caused by the high gain of the receiver circuits, which amplify noise in the absence of a strong readable signal. Never get the unit too close to a transmitter as internal damage will result.

3. Antenna Selection

The supplied telescopic antenna is best for general purpose use. This is because its length can be adjusted to suit the frequency required. Usually you will want a shorter antenna for UHF and a fully extended one for VHF / HF.

4. Reception Distance From Transmitter

The distance from which you will be able to receive frequencies will depend upon the type and location of the transmitting antenna, transmitter output power and the frequency in use.

Some typical distances are:

Cordless Phone	0.6 meters
Cellular Phone	6 - 20 m
CB radio	4 - 8 m
VHF Two Way Radio	6 - 30 m
UHF Two Way Radio	6 - 30 m

Input Sensitivity (Typical)

Never make any kind of connection between the RF finder and a transmitter.

Amplifier:	50 Ohm
Impedance:	50 Ohm VSWR less than 2:1
Range:	1 MHz - 3 GHz
Sensitivity:	less than 2 mV at 100 MHz - 1.2 GHz
Max. input:	15 dBm

RF Signal Strength Bargraph

Frequency	1st Segment	Full Scale
27 MHz	7 mV	100 mV
150 MHz	5 mV	90 mV
800 MHz	10 mV	200 mV

Frequency Display Resolution

Range	Gate Time (Seconds)	LSD	Sample Display
300 MHz	0.0625	10 Hz	300.00000 MHz
	0.25	1 Hz	300.000000 MHz
	1.0	1 Hz	300.000000 MHz
	4.0	0.1 Hz	300.000000 MHz
3 GHz	0.0625	1000 Hz	3000.000 MHz
	0.25	100 Hz	3000.0000 MHz
	1.0	10 Hz	3000.00000 MHz
	4.0	10 Hz	3000.00000 MHz

Model 106

Introduction

The model 106 hand-held radio frequency counter is compact, truly pocket-sized, versatile test instrument designed for measuring any digital, on/off keying or analog signal on frequencies between 30 MHz and 2.8 GHz. Supplied as a complete with internal NiCd pack, AC wall charger and 7 section telescopic antenna.

Specifications

Never make any kind of connection between the RF counter and a transmitter.

Impedance:	50 Ohms (BNC Socket) VSWR less than 2:1
Frequency range:	30 MHz – 2.8 GHz
Sensitivity:	less than 5 mV
Max. input:	15 dBm
Resolution:	10 KHz for digital Signals or On/Off Keying 1 KHz for Analog Signals
Timebase:	Less than 1 PPM at room temperature
Weight:	210 g
Size:	80 mm high x 68 mm wide x 31 mm deep
Case:	Stamped aluminum with black anodized finish
Battery:	Internal 4 x AA 600 mA AH NiCd pack
Power:	9 VDC 300 mA

Features

- 7 digit Liquid Crystal Display
- Frequency counter for digital, on/off keying and analog signals with a minimum pulse width of 250 uS.
- Ultra sensitive synchronous detector - 16 section bargraph to show RF signal strength (-35dBm to 0 dBm)
- Two range positions - the 1 GHz position for frequencies between 30 MHz and 1 GHz and the 2.8 GHz position for frequencies between 500 MHz and 2.8 GHz.
- Squelch adjustment for input signals
- Hold switch to lock display
- Low battery indicator
- Low power consumption (Average 5 hour battery life)
- Supplied with NiCd pack, AC wall charger and telescopic antenna (143 MHz to 460 MHz)

Controls

24. SQL Knob - This knob turns the RF counter on and tunes the squelch up or down to set the signal strength for reception.
25. Range Switch - This should be switched to the 1 GHz position for frequencies between 30 MHz and 0.8 GHz and switched to the 2.8 GHz position for frequencies between 500 MHz and 2.8 GHz.
26. Hold Button - This holds the current display and stops the counter from counting.
27. Calibration - The calibration adjustment opening is located on the front panel of the counter. This allows access to the trimmer capacitor that provides about a 10 PPM adjustment range of the time base oscillator. This is not usually necessary but to do so read a signal of a known frequency before adjusting the trimmer for correct frequency display. If you calibrate at 4.1943 MHz or above then the counter will be more accurate.

Hints and Tips

1. NiCd Operation

This RF counter can operate for up to six hours from its fully charged NiCd batteries. They are charged when the unit is plugged into the supplied AC/DC adapter. Full recharge will occur over 12 to 16 hours. Before recharging the batteries you should be deep cycled occasionally by allowing them to completely discharge to maintain maximum battery capacity. The NiCd batteries

should last for several years. However, it is a good idea to check them every twelve months for signs of corrosion or leakage. Always replace the whole set if any one cell fails.

2. Signal Input


When using the RF counter with an antenna for signal pick up, random frequencies may appear on the display. This is quite normal and is caused by the high gain of the receiver circuits, which amplify noise in the absence of a strong readable signal. Never get the unit too close to a transmitter as internal damage will result.

3. Antenna Selection

The supplied telescopic antenna is best for general purpose use. This is because its length can be adjusted to suit the frequency required. Usually you will want a shorter antenna for UHF and a fully extended one for VHF / HF.

4. Reception Distance From Transmitter

The distance from which you will be able to receive frequencies will depend upon the type and location of the transmitting antenna, transmitter output power and the frequency in use.

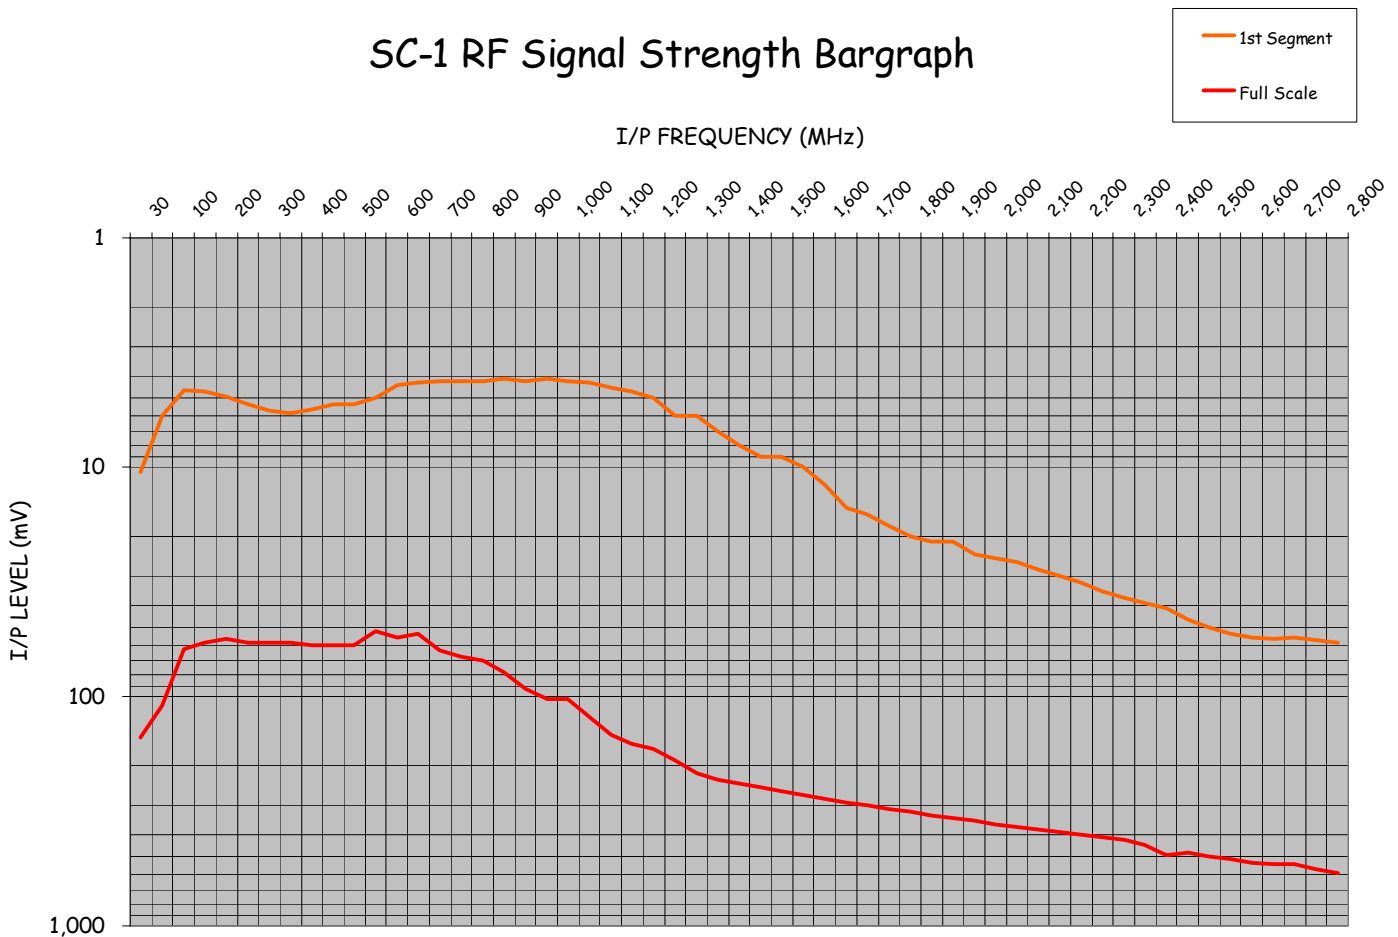

Optional Accessories

Model BP 10 - Battery Pack

- 4 x AA 600mAH NiCd Battery Pack

Model AT 1 - Telescopic Antenna

- 144 to 430 MHz
- 24.4" (62cm) Length (extended)
- BNC Connector

Model AT 2 - Flexible Antenna

- 150/300/450/900MHz
- 7.9" (20cm) Long
- BNC Connector

Model AT 3 - Rubber Broadband Antenna

- 150/300/450/900/1200MHz
- 7" (18cm) Long
- BNC Connector

Model AT 4 - Rubber 2.4GHz Antenna

- 2.4GHz
- 4.7" (12cm) Long
- BNC Connector



Limited One-Year Warranty

B&K Precision Corp. warrants to the original purchaser that its product and the component parts thereof, will be free from defects in workmanship and materials for a period of one year from the date of purchase.

B&K Precision Corp. will, without charge, repair or replace, at its' option, defective product or component parts. Returned product must be accompanied by proof of the purchase date in the form a sales receipt.

To obtain warranty coverage in the U.S.A., this product must be registered by completing and mailing the enclosed warranty card to B&K Precision Corp., 22820 Savi Ranch Parkway, Yorba Linda, CA 92887 within fifteen (15) days from proof of purchase.

Exclusions: This warranty does not apply in the event of misuse or abuse of the product or as a result of unauthorized alternations or repairs. It is void if the serial number is alternated, defaced or removed.

B&K Precision Corp. shall not be liable for any consequential damages, including without limitation damages resulting from loss of use. Some states do not allow limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific rights and you may have other rights, which vary from state-to-state.

Model Number: _____

Date Purchased: _____

22820 Savi Ranch Parkway
Yorba Linda, CA 92887
www.bkprecision.com



Service Information

Warranty Service: Please return the product in the original packaging with proof of purchase to the below address. Clearly state in writing the performance problem and return any leads, connectors and accessories that you are using with the device.

Non-Warranty Service: Return the product in the original packaging to the below address. Clearly state in writing the performance problem and return any leads, connectors and accessories that you are using with the device. Customers not on open account must include payment in the form of a money order or credit card. For the most current repair charges contact the factory before shipping the product.

Return all merchandise to B&K Precision Corp. with pre-paid shipping. The flat-rate repair charge includes return shipping to locations in North America. For overnight shipments and non-North America shipping fees contact B&K Precision Corp..

B&K Precision Corp.
22820 Savi Ranch Parkway
Yorba Linda, CA 92887

Email: service@bkprecision.com

Include with the instrument your complete return shipping address, contact name, phone number and description of problem.