

MDX-700P HD

Battery Conductance and Electrical System Analyzer

*For 6 & 12-volt automotive starting batteries
and 12 & 24-volt starting/charging systems*



INSTRUCTION MANUAL



Contents

Safety Guidelines	5
Capabilities	5
Display and Keypad	6
User Interface	7
UP and DOWN Arrows	7
ENTER Button	7
BACK/PRINT Button	7
MENU Button	7
Options Menu	8
Procedure	8
Preparations Before the Test	9
Connecting the Tester	9
Battery Test	10
Battery Test Results	11
Starter System Test- Auto/Van	13
Auto/Van Starter System Test Results	13
Charging System Test- Auto/Van & Truck	14
Charging System Test Results	14
Battery Test	16
Battery Pack Test	16
Break Pack Down	16
Testing the Battery Pack	17

Test Messages	18
<hr/>	
Error Messages	19
<hr/>	
Maintenance & Troubleshooting	20
Changing The Cable Assembly	20
Printer Troubleshooting	21
Troubleshooting the Display	21
Replacing the Battery	22



Safety Guidelines

Because of the possibility of personal injury, always use extreme caution when working with batteries. Follow all BCI (Battery Council International) safety recommendations.

Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the state of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

WARNING—REQUIRED BY CALIFORNIA PROP. 65: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the state of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

Capabilities

The MDX-700P HD Battery Conductance and Electrical System Analyzer tests 6 & 12-volt regular flooded, AGM flat plate, AGM spiral, and gel batteries, as well as 12 & 24-volt starting and charging systems for passenger cars and light trucks. It displays the test results in seconds and features a built-in printer to provide customers with a copy of the results.

Additional features include the ability to:

- test batteries from rated from 100 to 2000 CCA
- detect bad cells
- protect against reverse polarity
- test discharged batteries
- test multiple rating systems (CCA, CA, MCA, JIS, EN, DIN, SAE, IEC)
- provide a multi-lingual user interface with English, Spanish, French-Canadian, and Portuguese as the selectable languages.

Display and Keypad

When you first connect the MDX-700P HD to a battery, it functions as a voltmeter until you press the **ENTER** button.

IMPORTANT: If you connect the tester to a voltage source greater than 30 Vdc, you may damage the tester's circuitry.

The menu-driven display will then guide you step by step through the test process. Use the keypad buttons to scroll to and select options in the menu.

To turn off the tester when not connected to the battery, briefly press and hold the **MENU** button.

User Interface



MDX-700P HD

1 UP and DOWN Arrows

Use these keys to choose test parameters and scroll to menu options.

2 ENTER Button

Use this button to make selections.

3. BACK/PRINT Button

Use this button to move to the previous screen or move back one space when creating custom headers. You can also use this button to printout test results with the IR printer.

4 MENU Button

Use the MENU button to access the Main Menu options of the tester.

For information about the options, see "Options Menu".

Options Menu

Procedure

1. Press the MENU button to access the Options Menu.
2. Use the **UP** (▲) and **DOWN** (▼) arrows to move to the line you want to edit.
3. Press the ENTER button to make the highlighted line editable.
4. Use the **UP** (▲) and **DOWN** (▼) arrows to select the character for that cursor location.
5. Press the ENTER button to move to the next location.
6. Press the MENU button to return to the Options Menu.

Option	Explanation
View/Print	Display the previous test result. Press the PRINT button to print the results.
QC Mode	A quick test to check battery inventory
Export Data	Export the last test result to an IR Reader program. (under development)
Perform Test	Begin the Battery Test procedure.
Language Selection	Select a language for the tester. (Default: English)
Set Address	Enter the address to display on the top of the printout. (Limit: 8 lines, 21 characters per line)
Time	Select 24-hour or AM/PM and set the time. (Default: AM/PM)
Date	Select the date format as well as set the correct date. (Default: MM/DD/YYYY)
Counter	Clear or display battery and system test by results.
Contrast	Adjust the contrast setting of the tester display. (Default: 10)
Temperature Units	Select the temperature units Degrees F or Degrees C (Default: Degrees F)
Voltmeter	Automatically test battery voltage when the clamps are first connected to the battery terminals. Press ENTER to continue testing the battery. Press BACK to return to the menu. (Default: ON)

Preparations Before the Test

Before connecting the tester, clean the battery posts or side terminals with a wire brush and a mixture of baking soda and water. When testing side-post batteries, install and tighten lead terminal adapters. A set of adapters is included with the tester.

IMPORTANT: Do not test at steel bolts. Failure to install terminal adapters or installing terminal adapters that are worn or dirty may result in inaccurate test results. To avoid damage, never use a wrench to tighten the adapters more than $\frac{1}{4}$ turn.

If you are testing in the vehicle, make sure all accessory loads are off, the key is not in the ignition, and the doors are closed.

Connecting the Tester

- Connect the red clamp to the positive (+) terminal and the black clamp to the negative (-) terminal.
- For a proper connection, rock the clamps back and forth. The tester requires that both sides of each clamp be firmly connected before testing. A poor connection will produce a CHECK CONNECTION or WIGGLE CLAMPS message. If the message appears, clean the terminals and reconnect the clamps.
- The preferred test position is at the battery terminals. If the battery is not accessible, you may test at the jumper post; however, the available power measurement may be lower than the actual value.

Battery Test

When you first connect the tester to the battery, it functions as a voltmeter until you press the **ENTER** button to start the test. This function can be turned off through the Options Menu

After you press **ENTER**, scroll to each parameter using the **UP (▲)** or **DOWN (▼) ARROW** button and press **ENTER** to select. If any messages appear during the test, see "Test Messages" on page 18.


1. **BAT. LOCATION:** Scroll to and select **IN VEHICLE** or **OUT OF VEHICLE** for a battery not connected to a vehicle. Following an **IN VEHICLE** test you will be prompted to test the starting and charging systems.

IMPORTANT: The performance of the starting and charging systems depends on the battery's condition. It is important that the battery is good and fully charged before any further system testing.

2. **POST TYPE:** (In-Vehicle only) Scroll to **TOP POST**, **SIDE POST** or **JUMP START POST** where applicable.
3. **APPLICATION:** Scroll to and select **AUTOMOTIVE**, **MOTORCYCLE**, **MARINE**, **LAWN & GARDEN**, **GROUP 31**, or **COMMERCIAL -4D/8D**.
4. **BATTERY TYPE:** Scroll to and select **REGULAR FLOODED**, **AGM FLAT PLATE**, **AGM SPIRAL**, or **GEL** where applicable.
5. **BATTERY STANDARD:** Scroll to and select the battery's rating system. Not all rating systems are available for each application.

Standard	Description	Range
CCA	Cold Cranking Amps, as specified by SAE. The most common rating for cranking batteries at 0 °F (-17.8 °C).	100-2000
CA	Cranking Amps: Current available at 32 °F (0 °C)	100-2000
MCA	Marine Cranking Amps: Amount of current available at 32 °F (0 °C)	100-2000
JIS#	Japanese Industrial Standard, shown on a battery as a combination of numbers and letters.	26A17 thru 245H52
EN	Europa-Norm	100-2000
DIN	Deutsche Industrie-Norm	100-1200
SAE	Society of Automotive Engineers, the European labeling of CCA	100-2000
IEC	International Electrotechnical Commission	100-1200

6. BATTERY RATING: Scroll to and select the rating units. Hold down the **UP (▲)** or **DOWN (▼) ARROW** button to increase the scrolling speed.
7. Press **ENTER** to start test. After several seconds the tester displays the decision on the battery's condition and the measured voltage. The tester also displays your selected battery rating and the rating units.

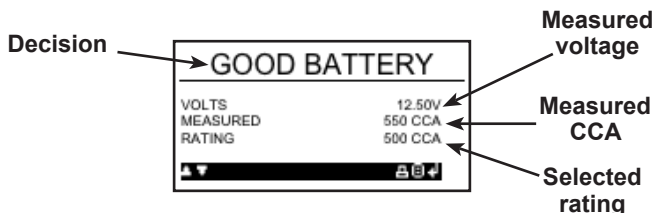

Battery Test Results

Decision	Interpretation
GOOD BATTERY	Return the battery to service.
GOOD-RECHARGE	Fully charge the battery and return it to service.
CHARGE & RETEST	Fully charge the battery and retest. Failure to fully charge the battery before retesting may cause inaccurate results. If CHARGE & RETEST appears again after you fully charge the battery, replace the battery.
REPLACE BATTERY	Replace the battery and retest. A REPLACE BATTERY result may also mean a poor connection between the battery cables and the battery. After disconnecting the battery cables, retest the battery using the out-of-vehicle test before replacing it.
BAD CELL-REPLACE	Replace the battery and retest.
24 VOLT SYSTEM	24-volt system detected. Disconnect batteries and test individually.
READY TO INSTALL	Battery has just been activated and is ready to install in vehicle (Motorcycle only)
NEEDS CHARGE	Fully charge battery and retest using BEFORE DELIVERY. (Motorcycle only) Failure to fully charge the battery before retesting may cause false readings.

8. Press the ENTER (↵) button to proceed with the starter test, BACK/PRINT to print the test results or MENU to return to the Options Menu.

Note: For an in-vehicle test, the display alternates between the test results and the message “PRESS ↵ FOR STARTER TEST.”

If the MDX-700P HD displays 24 VOLT BATTERY after the Automotive System Test, you are attempting to test in-vehicle both batteries in a 24-volt system. Disconnect the batteries and test them individually.

See “Maintenance & Troubleshooting” in this manual for more information about the printer.


IMPORTANT: The MDX-700P HD retains the results of the last test only. When you start a new test, the last results are overwritten.

Starter System Test- Auto/Van

IMPORTANT: Before starting the test, inspect the alternator drive belt. A belt that is glazed or worn, or lacks the proper tension, will prevent the engine from achieving the rpm levels needed for the test.

Once you have completed an in-vehicle test, the display alternates between the battery test results and the message **PRESS ↵ FOR STARTER TEST.**

1. Press the ENTER (↵) button to proceed with the starter test.
2. Start the engine when prompted.
3. The tester displays the decision on the starter system, cranking voltage, and cranking time in milliseconds.

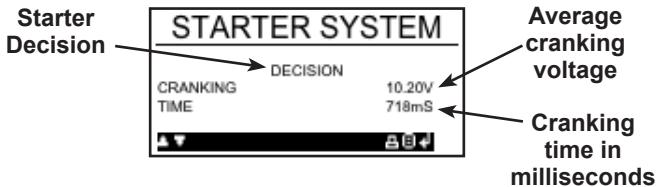

Auto/Van Starter System Test Results

Decision	Interpretation
CRANKING NORMAL	The starter voltage is normal and the battery is fully charged.
LOW VOLTAGE	The starter voltage is low and the battery is fully charged.
CHARGE BATTERY	The starter voltage is low and the battery is discharged. Fully charge the battery and repeat the starter system test.
REPLACE BATTERY	Battery must be replaced before the starting system can be tested.
NO START	No vehicle start detected.
CRANKING SKIPPED	A start was not detected.

4. Press the ENTER (↵) button to proceed with the charging system test, BACK/PRINT button to print the test results, MENU to return to the Options Menu.

NOTE: For an in-vehicle test, the display alternates between the test results and the message **“PRESS ↵ FOR CHARGING TEST.**

See “Maintenance & Troubleshooting” in this manual for more information about the printer.


NOTE: For Truck System Test, unit will prompt if the engine is diesel.

Charging System Test- Auto/Van & Truck

Once you have completed an in-vehicle test, the display alternates between the battery test results and the message PRESS ← FOR CHARGING TEST. Press the ENTER (↵) button to proceed with the charging test.

Following the on-screen prompts:

1. Rev the engine.
2. Turn on high beams headlights and the blower fan.
3. Rev engine with loads on.
4. Idle engine and turn off loads.
5. The Charging System decision is displayed at the end of the procedure.

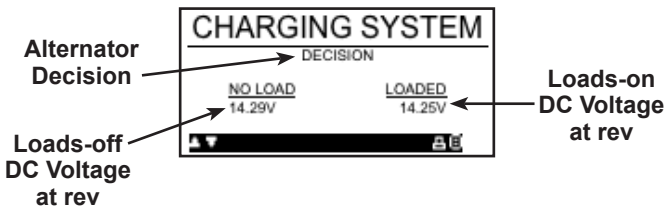

Charging System Test Results

Decision	Interpretation
NO PROBLEMS	System is showing normal output from the alternator.
NO OUTPUT	<p>No alternator output detected.</p> <ul style="list-style-type: none"> √ Check all connections to and from the alternator, especially the connection to the battery. If the connection is loose or heavily corroded, clean or replace the cable and retest. √ If the belts and connections are in good working condition, replace the alternator. (Older vehicles use external voltage regulators, which may require only replacement of the voltage regulator.)

continued

Decision	Interpretation
LOW OUTPUT	<p>Alternator not providing sufficient current to power the system's electrical loads and charge the battery.</p> <ul style="list-style-type: none"> √ Check the belts to ensure the alternator is rotating with the engine running. Replace broken or slipping belts and retest. √ Check the connections from the alternator to the battery. If the connection is loose or heavily corroded, clean or replace the cable and retest.
HIGH OUTPUT	<p>Alternator voltage output exceeds the normal limits.</p> <ul style="list-style-type: none"> √ Make sure there are no loose connections and the ground connection is normal. If there are no connection problems, replace the regulator. Most alternators have a built-in regulator that requires replacing the alternator. In older vehicles that use external voltage regulators, you may need to replace only the voltage regulator.
EXCESSIVE RIPPLE	<p>Excessive AC ripple detected.</p> <ul style="list-style-type: none"> √ One or more diodes in the alternator is not functioning or there is stator damage.

6. Press the BACK/PRINT button to print the test results or MENU to return to the Options Menu.

See "Maintenance & Troubleshooting" in this manual for more information about the printer.

Battery Test- Truck

Battery Pack Test

The test is designed to give you a quick approximation of the pack's capability to deliver current. If the analyzer determines that the pack has a low state of charge, it will provide the option of testing the batteries individually or skipping to the System Test.

1. In the Menu, select "Perform Test".
2. Select Battery location as "In Vehicle".
3. Enter post type.
4. Select application as Truck/Group 31
5. Enter the number of batteries in the pack (up to six).



Press the **ENTER** soft key to continue.

The **BACK** soft key returns you to the Main Menu at the start of the test and to the previous screen as you progress.

6. Follow steps 4 to 7 in the Battery Test section starting on page 10.

The MDX-700P HD evaluates the battery and displays the results (page 11).

If the decision is CHECK BATTERY PACK and you selected more than one battery to test, the MDX-700P HD provides the option of testing each battery in the pack (BREAK PACK DOWN) or continuing with the Starter Test.

Break Pack Down

To test individual batteries using parameters from the pack test, follow the prompts to guide you through the steps of disconnecting the pack, testing each battery, and reconnecting.

To test individual batteries after a CHECK BATTERY PACK decision:


1. Select BREAK PACK DOWN and press the **ENTER** soft key to continue.
2. Disconnect the MDX-700P HD from the battery posts.
3. Disconnect the battery pack, and press the **ENTER** soft key.
4. When prompted, connect to the first battery and press the **ENTER** key.

NOTE: The MDX-700P HD will automatically power down after 4 minutes when disconnected from the battery. To avoid loss of in process test results, connect the tester clamps to in pack battery to maintain test session.

5. After you complete testing on the last battery, the MDX-700P HD displays the results. Press the DOWN ARROW key to view the individual battery results. See an example of the results on the next page.
6. You may print the results of the testing.
7. If the result of the pack test is "Good Pack", the MDX will continue on to the Starter Test (refer to Starter Test section for instructions).


Testing the Battery Pack

1. At the start of the test, make sure all vehicle accessory loads are off, the key is not in the ignition, and the doors are closed.
2. Connect the clamps to the positive (+) and negative (-) cables that lead to the starter chassis ground as shown. If there are multiple cables, re-test for each cable connection.
3. For a proper connection, rock the clamps back and forth. Both sides of each clamp must be firmly connected before testing. If the message CHECK CONNECTION appears, clean the terminals and/or reconnect the clamps.

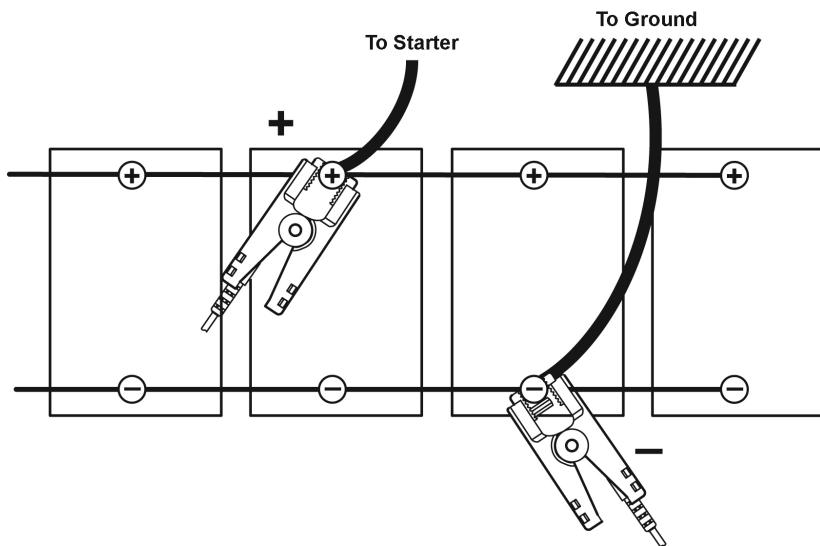

Test Messages

For a more decisive result, the tester may prompt you for additional information. The messages in the following table may appear before the tester can display a result.

Test Message	Interpretation
BAT. TEMPERATURE	Select ambient temperature above or below 32 °F (0 °C)
CHARGE STATE	Select before or after battery has been charged.
SURFACE CHARGE DETECTED	Remove the surface charge before it begins testing. Testing will resume after charge has been removed.
CHECK CONNECTION	One or both clamps are not making proper contact with the battery terminals.
ENGINE REV NOT DETECTED PRESS  WHILE REVVING	Tester has not detected an increase in engine rpm
REVERSE CONNECTION	Clamps are connected in the wrong polarity: positive to negative or negative to positive.
SYSTEM NOISE CHECK LOADS	In-vehicle testing. Tester has detected computer, ignition noise or parasitic drain. Make sure all vehicle loads are off including open doors and ignition switch.
UNSTABLE BATTERY	Out-of-vehicle. Weak battery, should be charged and retested.
WIGGLE CLAMPS	Clamps are not making good contact with battery terminals

Error Messages

Error Message	Interpretation
CONNECT TO 12V BATTERY	Tester is not connected to the battery
LOW INTERNAL AA BATTERIES. REPLACE AA BATTERIES SOON!	Internal AA batteries are low and need to be replaced. See "Maintenance & Troubleshooting" section.
NON 12 VOLT SYSTEM DETECTED	System being tested is not 12-volts.
QC DATA MEMORY FULL PRINT RESULTS OR CLEAR MEMORY.	QC mode memory is full. Select QC mode from the Options Menu to clear the memory.

Maintenance & Troubleshooting

Changing The Cable Assembly

1. Identify the circled screw.



2. Remove the screw.



3. Grasp the housing and firmly pull the cable assembly from housing.



4. To attach a new cable, align the cable and tester housings and push together. Insert the screw and tighten.

Printer Troubleshooting

If the MDX-700P HD is not connected to a 12-volt battery with at least 11.5 volts of power or the paper sensor does not detect paper in the compartment during the print process, the tester displays one of error messages described in the table:

Error Message	Interpretation
<p>PRINTER OUT OF PAPER REPLACE WITH THERMAL PRINTER PAPER. 2.5 IN. DIA. MAX 2.25 IN. WIDE MAX</p>	<p>√ Verify that the paper is inserted correctly.</p> <p>√ Insert a new roll of paper.</p> <p>√ Verify that the paper sensor is clean and undamaged</p>
<p>BATTERY POWER TOO LOW TO USE PRINTER. CONNECT TO FULLY CHARGED BATTERY. 11.50 V TO 16.00 V</p>	<p>To print, the tester must be properly connected to a vehicle battery having at least 9 volts.</p> <p>√ Connect to a vehicle battery with enough voltage to enable printing.</p> <p>√ Make sure that the clamps are connected properly: red clamp to the positive (+) terminal and the black clamp to the negative (-) terminal.</p> <p>√ Check that both sides of the clamps are making contact with the terminals.</p>
<p>PRINTER DOOR OPEN CLOSE DOOR AND TRY TO PRINT AGAIN</p>	<p>√ Check that the door covering the printer paper is properly closed and latched.</p>

Troubleshooting the Display

If the display does not turn on:

- Check the connection to the vehicle battery.
- The vehicle battery may be too low (below 1 volt) to power the analyzer. Fully charge the battery and retest.
- The analyzer's AA batteries may need to be replaced. (alkaline recommended).
- If the analyzer does not power on when you press and hold the **MENU** button, replace the AA batteries.


Replacing the Battery

The MDX-700P HD can test down to 5.5 volts when the unit's internal batteries are not functioning. The tester displays LOW INTERNAL AA BATTERIES, REPLACE AA BATTERIES SOON! when the internal AA batteries need to be replaced.

NOTE: Setup information will be retained while you change the internal batteries.

Use the following procedure to remove and replace the internal AA batteries.

1. Turn the tester face down.
2. Remove the screw securing the battery compartment cover using a small Phillips screwdriver.

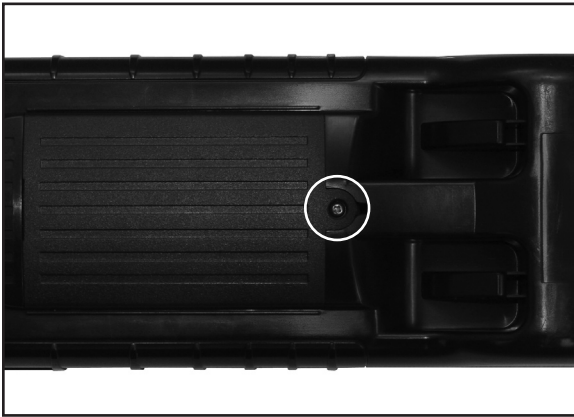

3. Lift the door off and remove the discharged battery.
4. Insert fresh AA batteries making sure the positive and negative terminals are positioned correctly.
5. Reposition the cover and tighten the screw..

Patents

The MDX-700 is made in the U.S.A. by MIDTRONICS, INC. and is protected by one or more of the following U.S. Patents: 6,323,650; 6,316,914; 6,304,087; 6,249,124; 6,163,156; 6,091,245; 6,051,976; 5,831,435; 5,821,756; 5,757,192; 5,592,093; 5,585,728; 5,572,136; 4,912,416; 4,881,038; 4,825,170; 4,816,768; 4,322,685; Canadian patents: 1,280,164; 1,295,680; United Kingdom patents: 0,417,173; 0,672,248; German patents: 689 23 281.0-08; 693 25 388.6; 93 21 638.6; and other U.S. and Foreign patents issued and pending. This product may utilize technology exclusively licensed to Midtronics, Inc. by Johnson Controls, Inc. and/or Motorola, Inc.

Limited Warranty

This battery tester is warranted to be free of defects in materials and workmanship for a period of one year from the date of purchase. Midtronics will, at our option, repair the unit or replace the unit with a remanufactured tester. This limited warranty applies only to Midtronics battery testers and does not cover any other equipment, static damage, water damage, overvoltage, dropping unit or damage resulting from extraneous causes including owner misuse. Midtronics is not liable for any incidental or consequential damages for breach of this warranty. The warranty is void if owner attempts to disassemble the unit or modify the cable assembly.

Service

For service, contact Midtronics at 800-776-1995 (630-323-2800) for a Return Authorization number, and return the unit to Midtronics freight prepaid, Attention: RA#. Midtronics will repair or replace the tester and reship, the next scheduled business day following receipt, using the same type carrier and service as received. If Midtronics determines that the failure was caused by misuse, alteration, accident, or abnormal condition of operation or handling, purchaser will have the option of purchasing a replacement tester or the unit will be returned freight collect. Battery testers beyond the warranty period are subject to the repair charges in effect at that time.



www.midtronics.com

Corporate Headquarters

Willowbrook, IL USA

USA Toll Free: 1.800.776.1995

Phone: 1.630.323.2800

Fax: 1.630.323.2844

E-Mail: net2@midtronics.com

Canadian Inquiries

Toll Free: 1.866.592.8053

Fax: 1.630.323.7752

E-Mail: canada@midtronics.com

Midtronics b.v.

European Headquarters

Serving Europe, Africa, the Middle East and The Netherlands

Phone: +31 306 868 150

Fax: +31 306 868 158

E-Mail: info-europe@midtronics.com

Midtronics China Office

China Operations

Shenzhen, China

Phone: +86 755 8202 2037

Fax: +86 755 8202 2039

E-Mail: chinainfo@midtronics.com

Asia/Pacific (excluding China)

Contact Corporate Headquarters at +1.630.323.2800 or

E-Mail: asiapacific@midtronics.com