

# SWP-T10

#### Wall Plate Extender 1080p HDBaseT



Extends VGA, stereo audio, HDMI, IR and RS232 signals with CAT5e/6 up to 70 meters.


USER MANUAL (rev 1.0)

# Smart-**///**

#### WHAT'S IN THE BOX

PART NO.	QTY	DESCRIPTION
SWP-T10	1	HDBaseT Wall Plate Transmitter
PS12V2A	1	Power Supply
	1	SWP-T10 Quick Start Guide

#### APPLICATION DIAGRAM

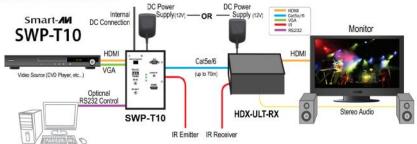


#### **CONNECTING THE HDX-WPRO**

- 1. Install the SWP-T10 transmitter and place the SmartAVI HDX RX receiver unit in close proximity to the output device.
- 2. Connect a Cat5e/6 cable between the TX and RX units (up to 70m).
- 3. Connect a signal source to the SWP-T10 via HDMI, VGA, Stereo Audio, RS232 or IR connectors.
- 4. Connect the HDX RX unit to the desired output device.
- 5. Connect a 12V power supply to either the SWP-T10 or the HDX RX unit. The other device will be powered via POE (Power over Ethernet).
- 6. Use the TX front panel SELECT SOURCE button to switch between source signals. Using automatic selection will select the last source connected.

Optional:

- 1. Connect an RS232 cable between SWP-T10 and a personal computer and a RS232 cable from the HDX RX unit to any RS232 device to remotely communicate with or control your RS232 device.
- 2. To extend IR remote control from the SWP-T10 to the HDX RX unit, connect an IR receiver to the SWP-T10 and an IR Emitter to the HDX RX for infrared remote control up to 20m

#### **SWP-T10 FRONT**

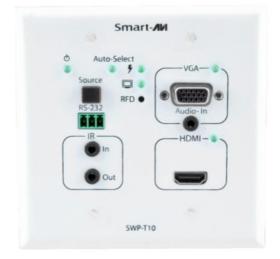

#### **SWP-T10 BACK**



## TECHNICAL SPECIFICATIONS

PORTS		
Input ports	1 x HDMI, Type A 19-pin, female; 1 x VGA HD-15, female; 1 x AUDIO IN(Stereo);1 x IR IN; 1 x RS-232 3p captive screw connector; 1 x 2p captive screw connector	
Output ports	1 x IR OUT; 1 x RJ45 (HDBaseT); 1x RS-232 3p captive screw connector;	
VIDEO		
Max Data Rate	6.75Gbps	
Maximum Pixel Clock	225MHz	
Resolutions	Up to 1920x1200 or 1080P@60Hz	
Compliance with HDMI standard	Supports HDMI 1.4 and HDCP1.2	
AUDIO		
Frequency Response	20Hz ~ 20KHz	
Stereo Channel Separation	>75dB@20Hz ~ 20KHz	
Bandwidth	20Hz ~ 25KHz	
OTHER		
Power Input	12V DC or 24V DC, 2A	
Power Consumption	undetermined	
Dimensions(W x D x H)	4.6" x 4.6" x 1.45"	
Weight	0.75lbs	
Operating Temperature	0° to +40°C (32° to 104°F)	
Storage Temperature	-20°C ~ 60°C / -4 °F ~ 140 °F	
Humidity	10% ~ 90%	
ESD Protection	Human body model:	
	$\pm$ 8kV (air-gap discharge)	
	$\pm$ 4kV (contact discharge)	

#### **METHODS TO CONTROL SWP-T10**

#### Front Panel Button

The Select/Auto button selects an input source. If you press and hold the button, the SWP-T10 will enter the automatic switching mode and the Auto-Switch LED lights up. If you press and hold the button again, the SWP-T10 will exit the automatic switching mode.

#### RS-232 External Protocol (PC User)

Supports bi-directional RS-232 pass-through control. This protocol is for communication between PC user and board. The following settings should be used: 9600 baud rate, 8 data bits, no parity bits, 1 stop bit, and no flow control.

Table 1:	Command Protocol	
Switch to HDMI	Changes the source to HDMI	//HD <cr><lf></lf></cr>
Switch to VGA	Changes the source to VGA	//VG <cr><lf></lf></cr>
Auto ON	Enable auto-switching by detecting hot plug.	//AE <cr><lf></lf></cr>
Auto OFF	Disable auto-switching by detecting hot plug.	//AD <cr><lf></lf></cr>
RES 1	Select Change the resolution to 1920 x 1200.	//R1 <cr><lf></lf></cr>
RES 2	Select Change the resolution to 1920 x 1080.	//R2 <cr><lf></lf></cr>
RES 3	Select Change the resolution to 1360 x 768.	//R3 <cr><lf></lf></cr>
RES 4	Select Change the resolution to 1280 x 720.	//R4 <cr><lf></lf></cr>
RES 5	Select Change the resolution to 1024 x 768.	//R5 <cr><lf></lf></cr>
SW Update	Software update for MSTAR chip.	//SU <cr><lf></lf></cr>
Reset to Default	Reset to factory defaults	//RD <cr><lf></lf></cr>
Table 2:	Query Protocol	
Version	Checks current version of MSTAR software.	//V? <cr><lf> Version Vx.x.x</lf></cr>
CHK RES	Checks the current resolution.	//R? <cr><lf> Resolution: xx</lf></cr>
CHK SRC	RC Checks the current source.	

#### **IR Function**

Control devices like HDTVs, BluRay players, and more with

#### **IR Cable Pin Assignment**

#### **IR Receiver (RX)**



#### **IR Emitter (TX)**



#### Notes:

# Smart AUDIO VIDEO INNOVATION

#### NOTICE

The information contained in this document is subject to change without notice. SmartAVI makes no warranty of any kind with regard to this material, including but not limited to, implied warranties of merchantability and fitness for particular purpose.

SmartAVI will not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material.

No part of this document may be photocopied, reproduced, or translated into another language without prior written consent from SmartAVI Technologies, Inc.



## 800.AVI.2131

# Tel: (818) 503-6200 Fax: (818) 503-6208 11651 Vanowen St. North Hollywood, CA 91605

### SmartAVI.com

Many industry-leading companies have recognized the innovation and power of SmartAVI's technologies and have successfully implemented them within their systems. Users of SmartAVI technology include:



# Smart-**///**