



Integrator's Complete Guide to
RoboSHOT 20 UHD
High Performance, Ultra High Definition
PTZ Camera

Document 342-1192 Rev. B
July 2016



205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

Contents

Overview	1
What's in this Guide	1
Camera Features	1
Unpacking the Camera	2
A Quick Look at the Camera	3
Front of the Camera	3
Connector Panel	4
Switch Settings	4
Video Resolution	5
Camera Settings	6
Installation	7
Before You Install the Camera	7
Don't Void Your Warranty!	7
Cabling Notes	7
Installing the Wall Mount	8
About Ceiling-Mounted Cameras	8
Basic Connection Diagram	8
Installing the Camera	9
Powering Up the Camera	10
Configuring and Controlling the Camera	11
Vaddio IR Remote Commander	11
IR Remote Cheat Sheet	11
IR Remote Details	12
Storing a Preset Using the IR Remote Commander	12
Clearing a Preset Using the IR Remote Commander	12
Web Interface	13
Compatible Web Browsers	13
User Access	14
Administrative Access	14
Web Interface Cheat Sheet	15
Web Tasks for All Users: Controlling the Camera	16
Web Tasks for Administrators: Configuring Network Settings	21
Web Tasks for Administrators: Adding Room Information to the Screen	22
Web Tasks for Administrators: Managing Access and Passwords	22
Web Tasks for Administrators: Setting Camera Behaviors and Adjustments	23
Web Tasks for Administrators: Configuring Streaming Settings	25
Web Tasks for Administrators: System Reboots, Resets, and Soft DIP Switch Configuration	27
Web Tasks for Administrators: Contacting Vaddio Technical Support	30
Web Tasks for Administrators: Viewing Diagnostic Logs	30

Telnet Serial Command API	31
camera home	32
camera pan	32
camera tilt	32
camera zoom	33
camera focus	34
camera preset	35
camera ccu get	36
camera ccu set	37
camera ccu scene	38
video mute	38
camera standby	39
streaming settings get	40
network ping	41
network settings get	41
system reboot	41
system factory-reset	42
history	43
version	43
help	43
exit	44
RS-232 Serial Communication	45
RS-232 Command List	46
Command Setting Values	53
RS-232 Inquiry Command List	57
Specifications	61
Troubleshooting and Care	62
Operation, Storage, and Care	63
Compliance Statements and Declarations of Conformity	64
FCC Part 15 Compliance	64
ICES-003 Compliance	64
European Compliance	65
Warranty Information	66
Index	67

Overview

This guide covers the RoboSHOT™ 20 UHD high performance PTZ camera:

- RoboSHOT 20 UHD (silver and black), North America – 999-9950-000
- RoboSHOT 20 UHD (white), North America – 999-9950-000W
- RoboSHOT 20 UHD (silver and black), International – 999-9950-001
- RoboSHOT 20 UHD (white), International – 999-9950-001W

What's in this Guide

This guide covers:

- Unpacking and installing RoboSHOT 20 UHD cameras
- The camera's physical features and switch settings
- Controlling the camera using the IR remote or web interface
- Controlling the camera using Telnet or RS-232 commands
- Specifications
- Troubleshooting and maintenance
- Warranty and compliance/conformity information

For your convenience, this information is also available in smaller, limited-purpose manuals:

- **Installation Guide for RoboSHOT 20 UHD High Performance PTZ Cameras** (unpacking, physical features, switch settings, installation, initial power-up)
- **Configuration and Administration Guide for RoboSHOT 20 UHD High Performance PTZ Cameras** (physical features, controlling the camera, troubleshooting, and specifications)

Download manuals, dimensional drawings, and other information from www.vaddio.com/support.

Camera Features

- Back-illuminated 9.03 Megapixel, ultra high definition 1/2.3-type sensor delivers native 2160p/30 (3840 x 2160) video
- 12X optical zoom and 1.67X digital zoom; effective 20X zoom range; horizontal field of view 74° (wide) to 4.8° (tele) at 20X
- Imaging and performance comparable to 3-chip cameras
- Precise pan and tilt movements from 120°/s down to 0.35°/s
- Tri-Synchronous Motion™ simultaneous 3-axis pan/tilt/zoom movement between presets
- Simultaneous HDMI®, HDBaseT™, 3Gb/s HD-SDI and IP streaming outputs
- Presenter-friendly IR remote control
- Full administrative control from your browser via web interface
- Integration-ready Telnet or serial RS-232 control
- Smooth, silent direct-drive motors



Unpacking the Camera

Make sure you received all the items you expected.



Caution

Always support the camera's base when picking it up. Lifting the camera by its head or mounting arm will damage it.

North America

Part number 999-9950-000, RoboSHOT 20 UHD in silver and black

Part number 999-9950-000W, RoboSHOT 20 UHD in white

- Vaddio IR Remote Commander
- 12 VDC, 3.0 A switching power supply
- AC cord set for North America
- Thin Profile Wall Mount with mounting hardware
- EZCamera RS-232 control adapter
- Quick Start Guide



International

Part number 999-9950-001, RoboSHOT 20 UHD in silver and black

Part number 999-9950-001W, RoboSHOT 20 UHD in white

- Vaddio IR Remote Commander
- 12 VDC, 3.0 A switching power supply
- AC cord sets for UK and Europe
- Thin Profile Wall Mount with mounting hardware
- EZCamera RS-232 control adapter
- Quick Start Guide



A Quick Look at the Camera

This section covers the physical features of the RoboSHOT 20 UHD.

Front of the Camera



- **Camera and Zoom Lens:** Horizontal field of view up to 74°. 12X optical zoom combines with 1.67X digital zoom to deliver an effective 20X zoom range; 4.8° field of view at 20X.
- **Dual-arm mount** provides superior stability.
- **IR Sensors:** Sensors in the front of the camera base receive signals from the IR Remote Commander. Make sure there are no obstructions directly in front of the camera base.
- **Status indicator:** The multi-colored LED indicates the camera's current state.
 - Purple – Boot-up and Standby modes.
 - Blue – Normal operation and is a power on, ready condition.
 - Blinking blue – The camera has received IR from the remote or other IR source.
 - Red – Tally function; shows that the camera is on-air.
 - Blinking red – Fault condition.
 - Yellow – Firmware update is in progress.

Caution

Do not remove power or reset the camera while the indicator is yellow, showing a firmware update in progress. Interrupting a firmware update can make the camera unusable.

Connector Panel

From left to right:

- **12 VDC, 3.0 A connector** – EIA-J04 connector for the power supply shipped with the camera, if not using a OneLINK extension system
- **OneLINK HDBaseT connector** – Connect to the network (H.264 IP streaming, web interface or Telnet control, and PoE++ power) or a OneLINK extension system (video, power and control up to 328 ft/100m)
- **HDMI connector** – HDMI video output
- **HD-SDI connector** – HD-SDI video output
- **RS-232 port** – Connect to a camera controller to manage the camera using a modified VISCA protocol
- **HD video select switch** – Select the appropriate output resolution for local outputs
- **DIP switches** – Set IR frequency, IR on/off, image flip (camera is invertible), and baud rate



Switch Settings

RoboSHOT cameras use a rotary switch to set the video resolution and a set of DIP switches that determine certain camera functions. A label on the bottom of the camera provides a quick reference for setting the switches.

Note

Set the switches appropriately before mounting the camera.

Video Resolution

Set the desired available output resolution for the camera with the rotary switch. Switch positions A through F are not used.

Switch position	Resolution
0	1080p/59.94
1	1080p/50
2	1080i/59.94
3	1080i/50
4	1080p/29.97
5	1080p/25
6	720p/59.94
7	720p/50
8	2160p/29.97
9	2160p/25
A – F	Not used

Note

The maximum resolution for the HD-SDI output and the IP stream is 1080p.

Camera Settings

Use the DIP switches to set other camera behaviors.

Note

When the camera is right side up, switches are in their default positions when they are up.


IR Frequency Selection: The IR Remote Commander can control up to three cameras in the same room independently, if they are configured with different IR frequencies. Use **switches 1 and 2** to select the frequency to identify the camera as camera 1, 2, or 3; then use the Camera Select buttons at the top of the remote to select the camera you want to control.

IR: Leave **switch 3** in the default UP position if the IR remote will be used.

Inverted operation: If mounting the camera upside-down, set **switch 4** to the DOWN position: IMAGE FLIP ON.

Baud Rate: Set the baud rate for RS-232 communication using **switch 5**. Most applications use 9600 bps (switch 6 UP), which is recommended when using long cable runs. Use the 38,400 bps setting (switch 6 DOWN) for short control lines only.

Switch 6 is not currently used.

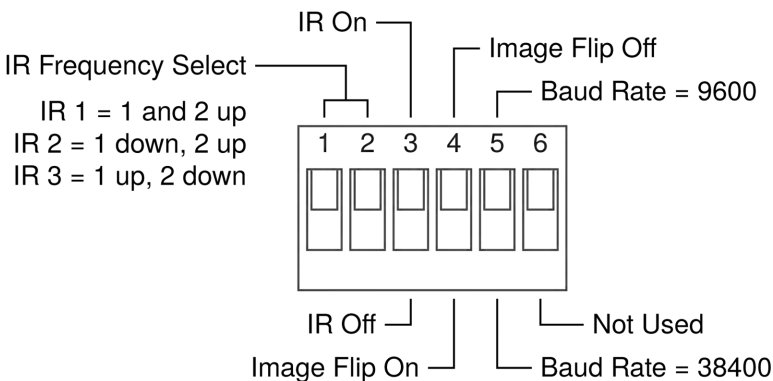

Pro Tip

Double-check switch settings before you mount the camera.

Installation

This section covers

- Siting the camera
- Installing the mount
- Connecting the camera
- Installing the camera

Before You Install the Camera

- Choose a camera mounting location that will optimize camera performance. Consider camera viewing angles, lighting conditions, line-of-sight obstructions, and in-wall obstructions where the camera is to be mounted.
- If the IR Remote Commander will be used, ensure that nothing blocks the IR lens in the camera's base.
- Ensure that the camera body can move freely and point away from the ceiling and lights.
- Follow the installation instructions included with the camera mount.

Don't Void Your Warranty!

Caution

This product is for indoor use. Do not install it outdoors or in a humid environment without the appropriate protective enclosure. Do not allow it to come into contact with any liquid.

Use only the power supply included with this product. Using a different one will void the warranty, and could create unsafe operating conditions or damage the product.

Do not install or operate this product if it has been dropped, damaged, or exposed to liquids. If any of these things happen, return it to Vaddio for safety and functional testing.

DomeVIEW enclosures are available to allow outdoor installation of RoboSHOT cameras. Learn more at www.vaddio.com/products.

Cabling Notes

Use Cat-5e or better cable and standard RJ-45 connectors (568B termination). We recommend using high-quality connectors and a high-quality crimping tool.

Caution

Check Cat-5 cables for continuity before using them. Using the wrong pin-out may damage the camera system and void the warranty.

Note

Do not use pass-through RJ-45 connectors. These can cause intermittent connections and degraded signal quality, resulting in problems that may be hard to diagnose. Use standard RJ-45 connectors.



Pro Tip


To prevent tragic mishaps, label both ends of every cable.

Installing the Wall Mount

All RoboSHOT cameras include a Thin Profile Wall Mount. Other mounting options are available as well. Contact us if you don't have the camera mount you need.

You can install the camera wall mount to a 2-gang wall box or directly to the drywall.

- If you mount it to drywall, use the wall anchors provided with the wall mount.
- If you mount it to a wall box, use the cover plate screws supplied with the wall box.

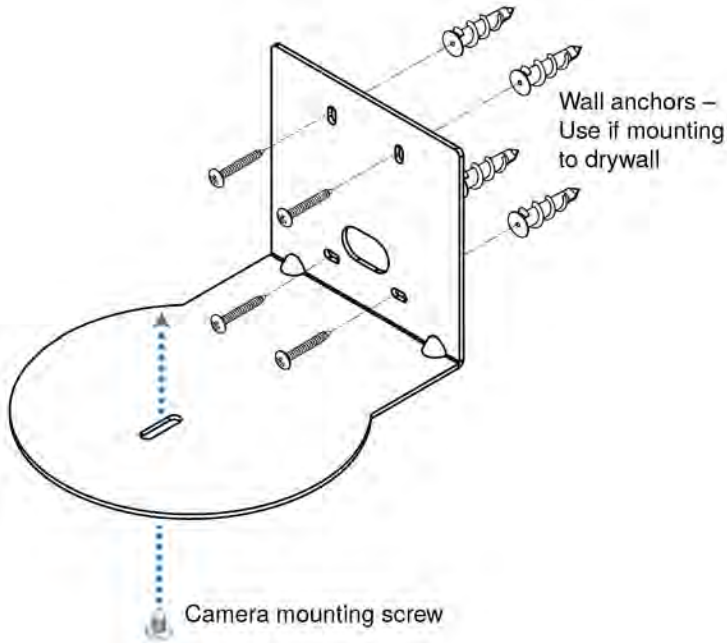


About Ceiling-Mounted Cameras

If you use an inverted mount, set the camera's Image Flip DIP switch ON for inverted operation.

See [Camera Settings](#) for more information.

Basic Connection Diagram

The Quick-Start Guide for RoboSHOT 20 UHD provides additional information.

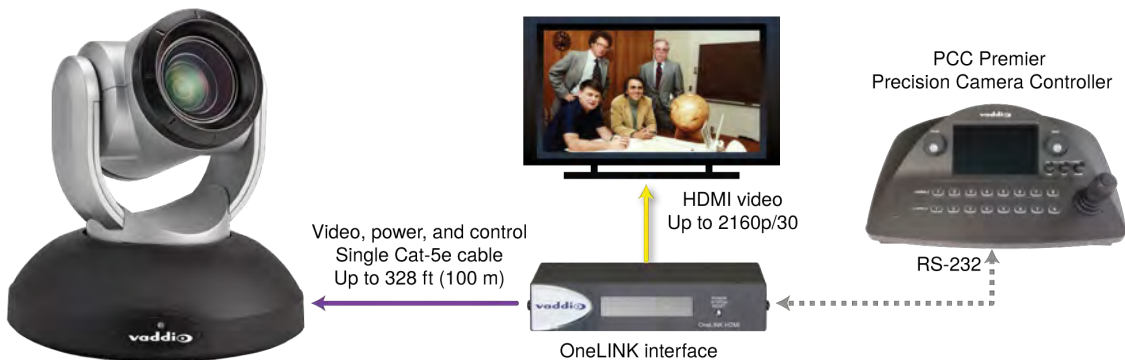

Note

The OneLINK™ interface is not required.

Installing the Camera

Caution

Before you start, be sure you can identify all cables correctly. Connecting a cable to the wrong port can result in equipment damage.

Caution

Check Cat-5 cables for continuity before using them. Using the wrong pin-out may damage the camera system and void the warranty.

1. Route the cables to the camera location.
2. Route the cables through the mount, and install the mount on the wall or attach it to the wall box. Leave the screws loose enough to adjust the position of the mount.
3. Level the mount and tighten the mounting screws.
4. Check the level again.
5. Connect the cables to the camera.

Caution:

Use the power supply shipped with the camera. Using a different power supply may create an unsafe operating condition or damage the camera, and will void the warranty.

6. Ensure that the video resolution switch and the DIP switches are set appropriately. See [Switch Settings](#).
7. Place the camera on the mount.
8. Attach the camera to the mount using the 1/4"-20 x .375 mounting screw supplied with the camera.

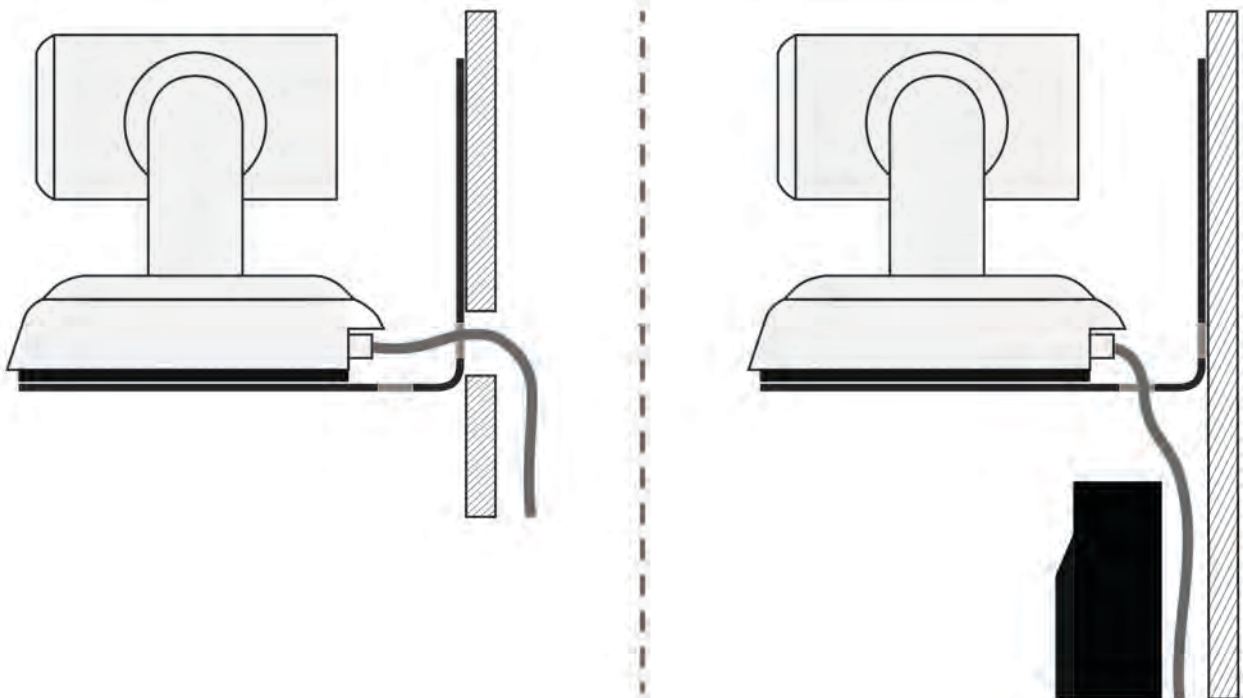


Image for illustration only; not to scale. Camera and mount details may differ.

Powering Up the Camera

Connect camera power.

The camera will wake up and initialize. This will take a few seconds. When the camera is initialized and ready, its front indicator is blue. At this point, it is ready to accept control information.

When powering up, the RoboSHOT 20 UHD camera executes a different sequence of movements than other Vaddio PTZ cameras.

Note

Wait until the camera finishes initializing before trying to control it using the IR remote or other command input.

Configuring and Controlling the Camera

You can control the camera using the IR remote, web interface, Telnet session, or RS-232 command line – preferably not at the same time, as this can produce unexpected results. Choose the method that best meets the requirements.

Vaddio IR Remote Commander

The IR remote provides basic camera control for end users.

IR Remote Cheat Sheet

What do you need to do?	Button(s)
Power on or standby	Power (green button at top right)
Select the camera to control (if this remote controls more than one)	Camera Select buttons 1 through 3 (second row on the remote)
Discover the camera's IP address	Data Screen button (top left) – press and hold for 3 seconds.
Move the camera	Arrow buttons and Home button (dark red)
Move the camera to a preset position	Position Preset buttons 1 through 6 (bottom two rows) <i>You can access additional presets from the camera's web interface.</i>
Focus the camera	Auto Focus button (near arrow buttons) Manual Focus buttons Near and Far (below Zoom Speed buttons)
Control zoom speed	Zoom Speed buttons - Slow T and W , Fast T and W for telephoto and wide-angle modes (light gray)
Adjust for excess light behind the camera's subject	Back Light button (top center)

IR Remote Details

The Vaddio remote provides the following functions:

Power – Switch the selected camera on or off.

Power indicator – Shows power on, IR transmission, and battery level.

Back Light – Use or turn off back light compensation.

Data Screen – Display the camera's IP address and MAC address. Press this button again to dismiss the display.

Camera Select – In multi-camera installations, selects the camera to be controlled. See [Camera Settings](#) for information on configuring the camera as camera 1, 2, or 3.

Pan/Tilt (arrow button) controls and Home button – Control the camera's position.

Rev. Pan and Std. Pan – Control how the camera responds to the arrow buttons. Helpful for ceiling-mounted cameras and for presenters who are controlling the camera.

Pan/Tilt Reset – Not used.

Auto Focus – Switch the camera to Auto-Focus mode.

Zoom Speed – Select Slow or Fast movements for telephoto and wide-angle shots.

- **T** (slow and fast) – Telephoto
- **W** (slow and fast) – Wide-angle

Manual Focus – Switch the camera to Manual Focus mode.

Near (-) adjustment – Moves the focus nearer when in manual focus mode.

Far (+) adjustment – Moves the focus farther when in manual focus mode.

Position Presets 1 through 6 – Move the camera to a predefined position.

Preset – Save the camera's current position as one of the numbered presets.

Reset – Clear the saved position presets.

The web interface offers greater control over camera movements to presets (such as setting the speed for Tri-Synchronous Motion), and provides additional presets.

Storing a Preset Using the IR Remote Commander

Position the camera. Then hold down the **Preset** button and press one of the numbered preset buttons.

Clearing a Preset Using the IR Remote Commander

Press and hold the **Reset** button while pressing the preset number you want to clear.



Web Interface

The camera provides a web interface to allow control via an Ethernet network connection, using a browser. (Refer to the list of [compatible web browsers](#).) The web interface gives the user more control over the camera than the IR remote offers.

The web interface allows user-level camera control and password-protected administrative access to tasks such as setting passwords, changing the IP address, viewing diagnostics, and installing firmware updates.

- Administrative access – The default password is `password`. The admin has access to all pages of the web interface.
- User access – The default password is `password`. Only the camera control page is available with user-level access.

If the LAN has a DHCP server, the camera will get its IP address, gateway and routing information automatically and you will be able to browse to it. In the absence of a DHCP server, the camera's default IP address is 169.254.1.1 and its subnet mask is 255.255.255.0.

You can configure the camera's static IP address either through the network or from a computer connected directly to its Ethernet port. You may need a crossover cable.

Compatible Web Browsers

We have tested this product with these web browsers:

- Chrome®
- Firefox®
- Microsoft® Internet Explorer®
- Safari®
- Microsoft® Edge

We test using the browser version available from the vendor at that time. Older versions of these browsers are likely to work, and other browsers may also work.

User Access

If the admin sets up automatic guest access, no login is needed – the system starts at the Camera Control page, rather than the login page. The administrative login dialog is accessible from the Camera Control page, to allow access to administrative tasks.



Administrative Access

If you are on the Camera Control screen and no other screens are available, you're logged in at the user level, or guest access is enabled and you're not logged on at all. Use the Admin button to open the login screen.

When you log in as Admin, all the admin menu buttons appear on the left side of the screen. In addition to Camera Controls, you also have access to:

- Camera Settings – Additional control over camera behavior related to camera movement and color management.
- Streaming – Set up IP (H.264) streaming.
- Room Labels – Add helpful information the web interface screens, such as conference room name and the in-house number for AV assistance.
- Networking – Ethernet configuration.
- Security – Set passwords and manage guest access.
- Diagnostics – Access to logs for troubleshooting.
- System – Reboot, restore defaults, view switch settings, and run updates.
- Help – Tech support contact information.
- Logout – End your web interface session.

Web Interface Cheat Sheet

Where to find the camera controls you need right now.

What do you need?	Go to this screen
Camera operation <ul style="list-style-type: none"> ■ Move or zoom the camera ■ Set the speed for pan, tilt, or zoom motions ■ Focus the camera (Focus button reveals the focus control) ■ Move to a camera preset ■ Put the camera into or bring it out of standby mode 	Camera Controls
Camera behavior <ul style="list-style-type: none"> ■ Set motors for inverted operation (Settings button reveals the control) ■ Set or clear camera presets, with or without Tri-Synchronous Motion ■ Select the appropriate lighting adjustments (CCU Scenes section) 	Camera Controls
Camera behavior <ul style="list-style-type: none"> ■ What happens on power-up or coming out of standby mode - move to a specified preset, apply specified lighting adjustments ■ Specify whether to use automated adjustments (auto-iris, auto white balance, backlight compensation) 	Camera Settings
Camera adjustments <ul style="list-style-type: none"> ■ Color settings (Iris, iris gain, red gain, blue gain, detail, chroma, gamma) ■ Store and label custom color settings as CCU scenes ■ Specify global speed settings for camera movements that do not use Tri-Synchronous Motion 	Camera Settings
Advanced camera settings <ul style="list-style-type: none"> ■ Color space (YCbCr or sRGB; default is YCbCr) ■ 3G HD-SDI level (A or B; default is A) 	System
IP streaming settings <ul style="list-style-type: none"> ■ Quality ■ Resolution ■ Frame rate ■ Streaming URL and path 	Streaming
IP settings <ul style="list-style-type: none"> ■ Hostname ■ DHCP or static addressing ■ Static: IP address, subnet mask, gateway 	Networking
Information about the camera's current switch settings	System
Access management <ul style="list-style-type: none"> ■ Guest access ■ Account passwords 	Security

What do you need?	Go to this screen
Time zone and NTP server (source for system time/date)	Networking
Diagnostic logs	Diagnostics
Information about the camera location	Room Labels
Helpdesk phone number for end users	Room Labels
Vaddio Technical Support contact information	Help

Web Tasks for All Users: Controlling the Camera

The Camera Controls page provides most of the same controls as the IR Remote Commander, along with some that are not available from the remote:

- Put the camera in standby or bring it back to the ready state
- Pan, tilt, zoom, or return to "home" position
- Set speeds for camera movements
- Focus manually or set auto-focus
- Set or move to camera presets
- Select one of the stored lighting adjustments
- Set the way the camera responds to the arrow buttons on the remote

Since the web interface is specific to the camera you are working with, it does not offer camera selection.



Manage the Camera Ready State

Use the Standby button to switch between low-power (standby) and ready states.

In standby mode, the button is red and the screen presents the message "Device is in standby." On entering standby mode, the camera moves to its standby position.

Move the Camera

Use the arrow buttons for camera pan and tilt. The center button moves the camera to the home position.

Zoom In or Out

Use the Zoom + button to zoom in and the Zoom - button to zoom out.

Change the Speed of Camera Movements

Use the speed sliders to adjust the speed of movements that you control with the buttons for pan, tilt and zoom. For tight shots, slower is usually better.

Change the Focus

Open the Focus control to select Auto-focus, or set manual focus with the + (near) and - (far) buttons. I know you get this, but I'm going to say it anyway: The + and - buttons don't work when the Auto Focus box is checked.



Move the Camera to a Preset Position

Use the numbered Preset buttons to move the camera to any of its programmed positions. If you select a preset that has not yet been programmed, nothing happens.

Store a Camera Preset

Save Preset 1 first. Other presets will inherit its Tri-Sync settings if they have not yet been defined.

1. Set up the camera shot, then use the Store button to open the Store Preset box.
2. Click one of the numbered preset buttons.
3. Check Save with Tri-Sync to allow the pan, tilt, and zoom motors to move simultaneously.
4. If necessary, use the speed slider to set Tri-Sync speed. For tight shots, slower is better.
5. To save the current color settings along with the camera position, check Save with current color settings.
6. Save the preset.

Note:

The Tri-Synchronous Motion algorithm works best for on-air shots requiring significant movement in more than one axis. It is not useful when moving the camera less than 10° or when the camera is not on the air. You may need to experiment with the Tri-Sync setting.

Select the Appropriate Color Settings

Adjust the camera for the lighting in use by selecting the CCU scene that best fits your environment. The technical folks at Vaddio (Scott, to be specific) have already set up presets for common lighting scenarios – Incandescent Hi, Incandescent Lo, Fluorescent Hi, Fluorescent Lo and Outdoor. The Auto setting allows the camera to determine the appropriate adjustments.

The first three settings in this area of the web interface (initially labeled Custom A through Custom C) can be set and renamed from the Camera Settings page, accessible to admin users.



Set Pan Direction

By default, the arrow buttons move the camera in the direction that viewers at the far end would see. If you face the camera and use the left arrow button, the camera pans to your right.

To switch the camera pan direction to the near end point of view, use the Settings button to open the pan and tilt direction box. Then set Pan Direction to Inverted.



Set Tilt Direction

Tilt direction can also be normal or inverted. Set it according to what will be the most intuitive for the people most likely to be controlling the camera.

Web Tasks for Administrators: Configuring Network Settings


Things you can do on this screen:

- Specify time zone and NTP server
- Assign the camera's hostname
- Specify DHCP or static IP address
- Set up other networking information

You will only be able to enter the IP address, subnet mask, and gateway if you set IP Address to Static.

Note

DHCP is the default setting, but the camera will use the default address of 169.254.1.1 if no DHCP server is available.

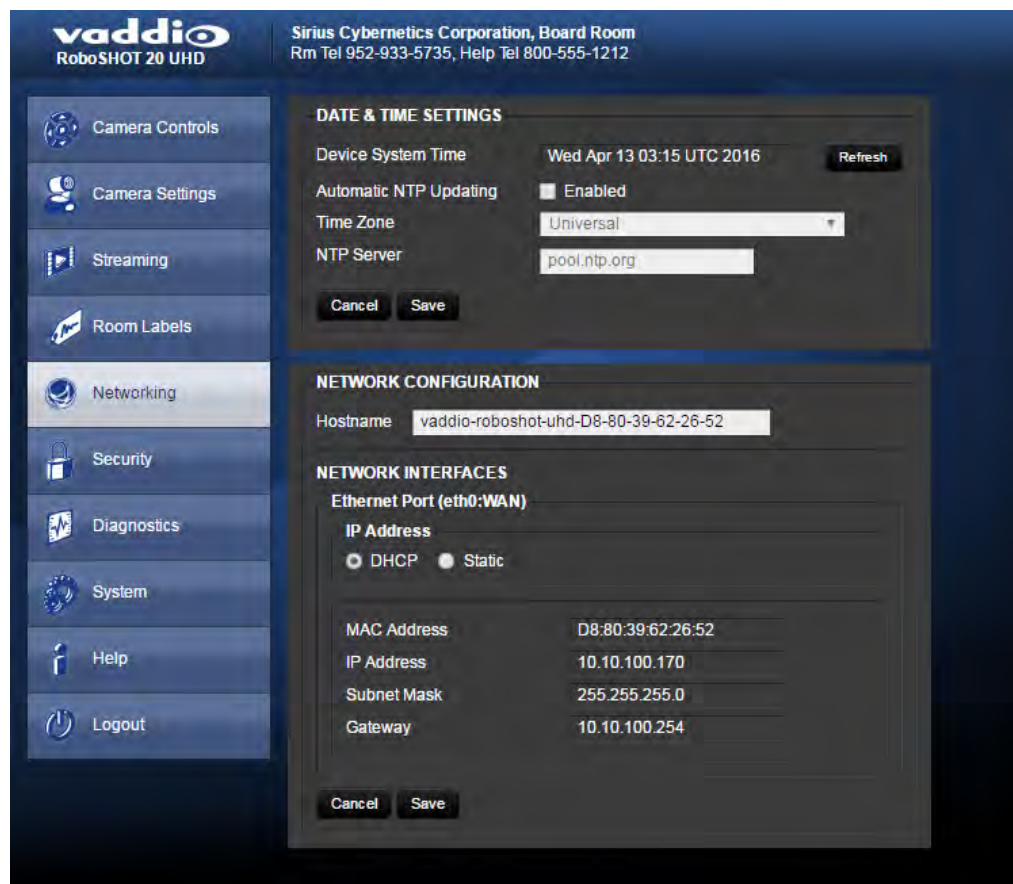

Specifying Time Zone and NTP Server

1. To make the time zone and NTP server editable, enable Automatic NTP Updating.
2. Select the desired time zone from the list.
3. If desired, specify the NTP server to use. Otherwise, use the default.

Web Tasks for Administrators: Adding Room Information to the Screen

To display your company name, conference room name and phone number, and the number for meeting hosts to call for in-house A/V support, enter this information on the Room Labels screen.




Web Tasks for Administrators: Managing Access and Passwords

Things you can do on this screen:

- Allow people to access the Camera Control screen without logging on (Allow Guest Access)
- Set whether inactive sessions log off automatically or not
- Change the password for the admin account (default is password)
- Change the password for the user account (default is password)

For security, Vaddio recommends changing the account passwords.

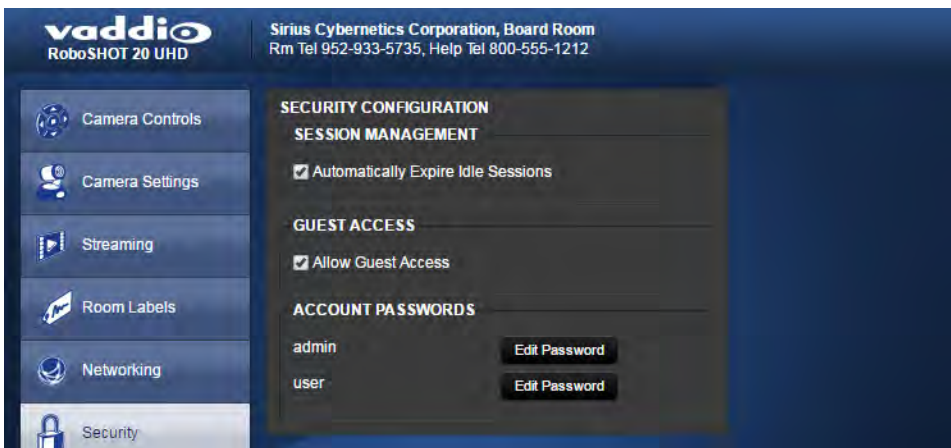

Web Tasks for Administrators: Setting Camera Behaviors and Adjustments

Things you can do on this screen:

- Set up the color settings the camera uses on power-up.
- Set up and name custom color/lighting settings.
- Set the pan, tilt, and zoom speeds that will be used when not using Tri-Synchronous Motion



Set Up what the Camera Does on Power-Up

To use a preset position instead of the default home position when the camera wakes up, check Load Preset at Startup. Then select the preset to use.

To specify the color and lighting settings, check Load CCU Scene at Startup, and select the CCU scene to use.

Set Up Custom Color and Lighting Settings

1. Click any of the CCU scene buttons to load one of the CCU scenes into the camera, then fine-tune it as needed using the Color Settings controls.
2. Auto Iris – check this box to allow the camera to automatically compensate for the light level, or leave it unchecked and use the Iris and Gain sliders to make the desired adjustments.
3. Auto White Balance – check this box to allow the camera to adjust the white balance automatically, or leave it unchecked and use the Red Gain and Blue Gain sliders to make the desired color adjustments.
4. Back Light Compensation (only available in Auto White Balance mode) – check this box if the scene will have bright lighting behind the main subject of the shot.
5. Detail – adjust the slider as required for amount of detail (Aperture) desired.

Note:

If the video looks grainy or “noisy,” try a lower Detail setting. As in conversation, too much detail is bad.

6. Chroma – adjust the slider as needed for the right level of color intensity.
7. Gamma – adjust the slider as needed for the desired range between bright areas and shadows.
8. When the scene looks the way you want it to, click Store CCU Scene.
9. In the Store CCU Scene dialog box, select which custom scene to store (Custom A, B, or C) and optionally give it a descriptive name. You can rename it later if necessary.
10. Name and save your custom scene.

Note:

If you make a change that you don't like, you can start over by selecting Auto White Balance, and then deselecting it again.

Rename a Custom CCU Scene

In the Custom CCU Scene Labels section, edit the text for the desired CCU scene label.

Set Pan, Tilt, and Zoom Speeds

In the Global Preset Non-Tri-Sync Speeds section, set the speeds for movements to presets that do not use Tri-Synchronous Motion.

Web Tasks for Administrators: Configuring Streaming Settings

Things you can do on this screen:

- Enable or disable IP streaming
- Set the resolution, video quality, and frame rate for IP streaming
- Specify the IP streaming port and path/URL

The camera uses the RTSP protocol for H.264 streaming.




Set IP Streaming Quality, Resolution, and Frame Rate

Select the video Quality Mode: Easy or Custom. Easy automatically sets the recommended frame rate; Custom provides additional control. You will only be able to specify the frame rate or Quality/Quantization if you select Custom Quality Mode.

Note


The web interface presents all the possible streaming resolutions values, but the IP stream cannot be higher than the value set with the video resolution switch on the back of the camera. (See [Video Resolution](#) for information on setting the switch.) If the selected value is out of range, the camera will automatically adjust the streaming resolution.

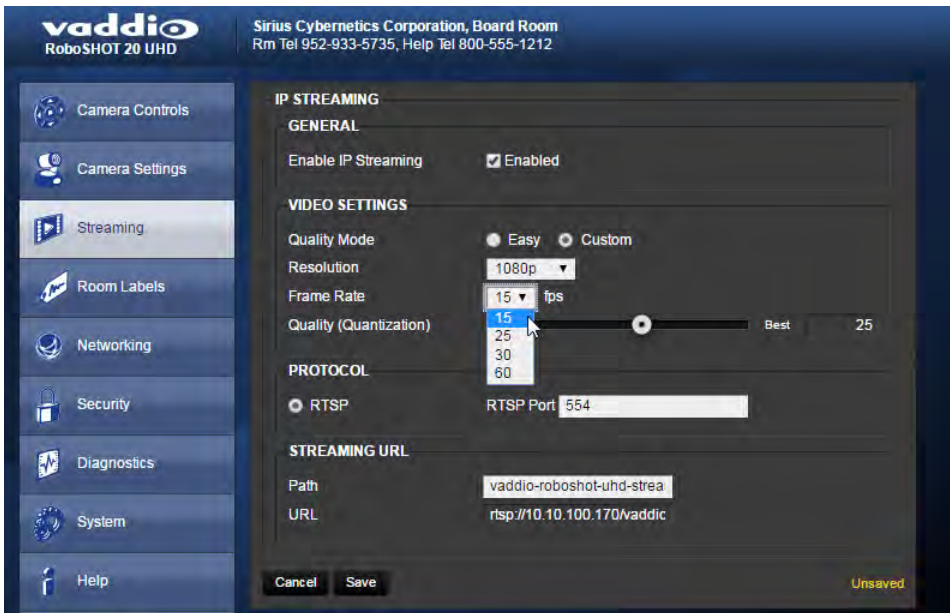

Web Tasks for Administrators: System Reboots, Resets, and Soft DIP Switch Configuration

Things you can do on this screen:

- Reboot the camera
- Set the camera back to its original factory settings
- Read (but not change) the current settings of the switches on the back of the camera
- Set the camera's soft DIP switches
- Run a firmware update

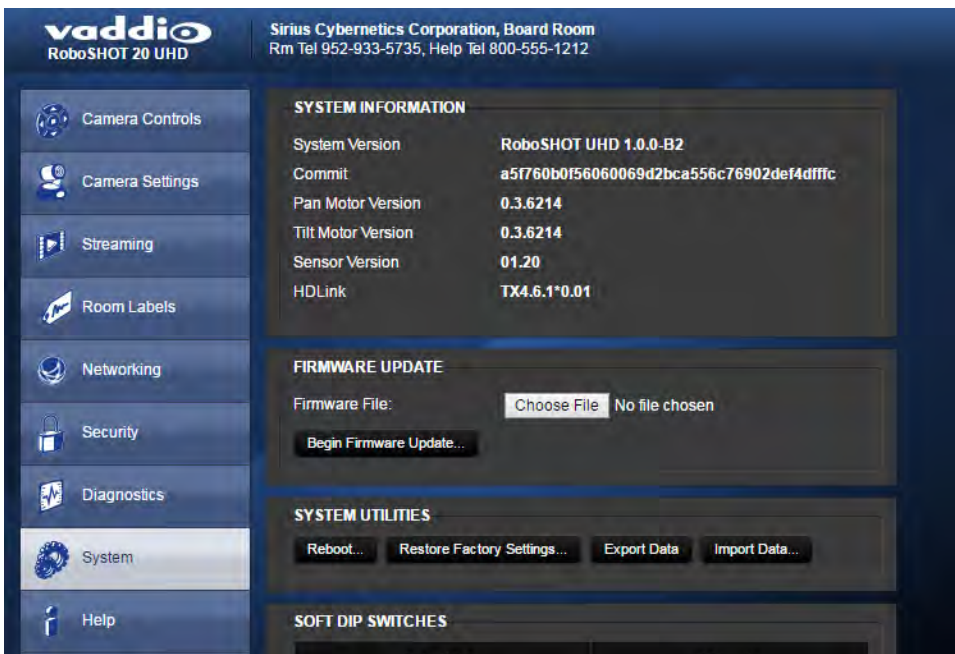

Reboot the Camera

This can help if the camera stops responding as you expect. In the System Utilities section, click Reboot.

Restore Factory Settings

Sometimes it's easiest to just start over. To restore the original factory settings...click Restore Factory Settings. This will overwrite anything you have customized, such as custom camera presets.



Set Color Space or HD-SDI 3G Level

Click and drag the appropriate soft DIP switch.

Note

Vaddio recommends leaving the soft DIP switches in their default positions unless you have verified that you need to change them.

Below the soft DIP switches, the screen shows the current state of the hardware switches on the camera's back panel. If you need to change any of the rear DIP switches or the rear rotary switch, you must physically move it. You cannot change the settings of the rear DIP switches or the rear rotary switch from the web interface.

Updating the Firmware

If you prefer more detail than this procedure, please refer to the Release Notes for step-by-step instructions with screen shots.

1. Locate and download the firmware and its release notes.
2. Select Choose File, then browse to the firmware that you downloaded and select it. The filename ends with .p7m.
3. Click Begin Firmware Update. The process may take a few minutes.

Caution


Ensure that the camera stays powered on and connected to the network during the update. Interrupting the update could make the camera unusable.

The camera reboots when the update is complete.

Web Tasks for Administrators: Contacting Vaddio Technical Support


If you can't resolve an issue using your troubleshooting skills (or the [Troubleshooting](#) table in this manual), we are here to help.

You'll find information for contacting Vaddio Technical Support on the Help screen.

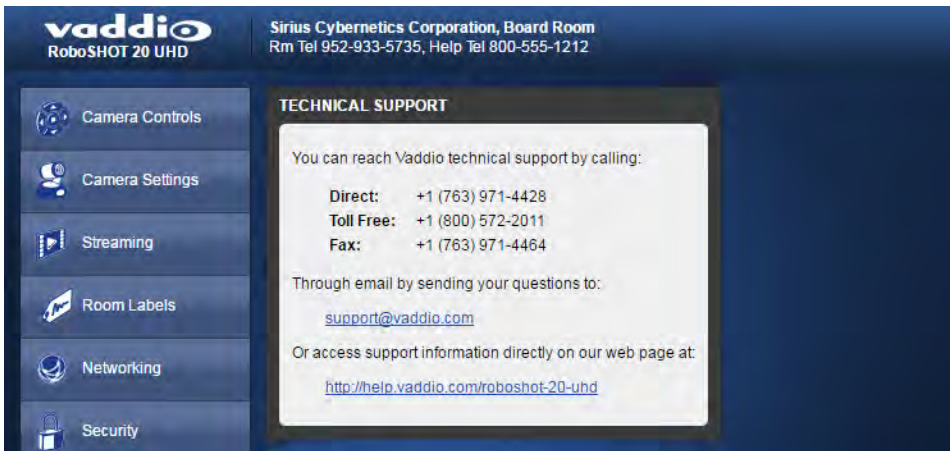

Web Tasks for Administrators: Viewing Diagnostic Logs

If you encounter a problem that you can't solve, your Vaddio technical support representative may ask you to download and email the log file available from the Diagnostics screen.

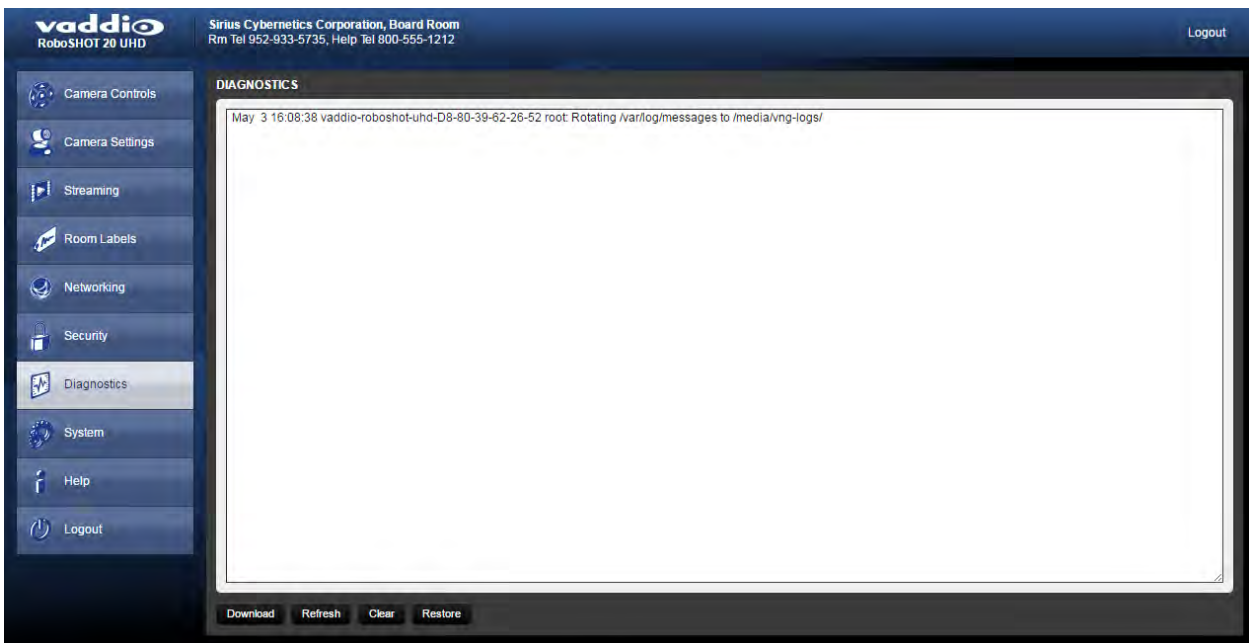

camera home

Moves the camera to its home position.

Synopsis	camera home
Example	camera home

camera pan

Moves the camera horizontally

Synopsis	camera pan { left [<speed>] right [<speed>] stop }	
Parameters and Values	left	Moves the camera left.
	right	Moves the camera right.
	<speed> 1 - 24	Optional – integer 1 - 24 specifies the speed for the commanded movement. Default speed is 12.
	stop	Stops the camera's horizontal movement.
Examples	camera pan left Pans the camera left at the default speed.	
	camera pan right 20 Pans the camera right using a speed of 20.	
	camera pan stop Stops the camera's horizontal motion.	

camera tilt

Moves the camera vertically.

Synopsis	camera tilt { up [<speed>] down [<speed>] stop }	
Parameters and Values	up	Moves the camera up.
	down	Moves the camera down.
	<speed> 1 - 20	Optional - integer 1 - 20 specifies the speed for the commanded movement. Default speed is 10.
	stop	Stops the camera's vertical movement.
Examples	camera tilt up Tilts the camera up at the default speed.	
	camera tilt down 20 Tilts the camera down using a speed of 20.	
	camera tilt stop Stops the camera's vertical motion.	


camera zoom

Moves the camera in toward the subject or out away from the subject.

Synopsis	camera zoom { in [<speed>] out [<speed>] stop }	
Parameters and Values	in	Moves the camera in.
	out	Moves the camera out.
	<speed> 1 - 7	Optional - integer 1 - 7 specifies the speed for the commanded movement. Default speed is 3.
	stop	Stops the camera's zoom movement.
Examples	camera zoom in Zooms the camera in at the default speed.	
	camera zoom out 7 Zooms the camera out using a speed of 7.	
	camera zoom stop Stops the camera's zoom motion.	

camera focus

Changes the camera focus.

Synopsis	camera focus {near [<speed>] far [<speed>] stop mode {auto manual get}}	
Options and Values	near	Brings the focus nearer to the camera. Can only be used when camera is in manual mode.
	far	Moves the focus farther from the camera. Can only be used when camera is in manual mode.
	<speed> 1 - 8	Optional - integer 1 - 8 specifies the speed for the commanded movement.
	mode {auto manual}	Specifies automatic or manual focus.
	mode get	Returns the current focus mode (automatic or manual).
	stop	Stops the camera's focus movement.
Examples		
	camera focus near	Brings the focus near at the default speed.
	camera focus far 7	Moves the focus farther from the camera at a speed of 7.
	camera focus mode auto	Sets the camera in auto-focus mode.
	camera focus stop	Stops the camera's focus motion.

camera preset

Moves the camera to the specified preset, or stores the current camera position and optionally CCU information, either with or without specifying that Tri-Synchronous Motion is to be used when moving to this position.


Note

This command corresponds to the CAM_Memory commands in the RS-232 command set.

Synopsis	camera preset { recall <1 - 16> store <1 - 16> [tri-sync <speed>] [save-ccu]	
Parameters and Values	recall <1 - 16>	Moves the camera to the specified preset, using Tri-Synchronous Motion if this was saved with the preset. If CCU information was saved with the preset, the camera switches to the CCU setting associated with the preset.
	store <1 - 16>	Stores the current camera position as the specified preset.
	tri-sync <speed> 1 - 24	Optional – specifies that the camera uses Tri-Synchronous Motion to move to this position, using the specified speed.
	save-ccu	Optional – Saves the current CCU settings as part of the preset. If not specified, the last color settings are used when recalled.
Examples	camera preset recall 3 Moves the camera to preset 3.	
	camera preset store 1 Saves the camera's current position as preset 1.	
	camera preset store 4 tri-sync 15 Stores the camera's current position as preset 4. The camera will use Tri-Synchronous Motion at speed 15 when it is recalled to this preset.	
	camera preset store 2 tri-sync 10 save-ccu Stores the camera's current position as preset 2. The camera apply the current CCU settings and use Tri-Synchronous Motion at speed 15 when it is recalled to this preset.	


camera ccu get

Returns or sets CCU (lighting) information.

Synopsis	<code>camera ccu get <param></code>	
Available Parameters 	<code>auto_white_balance</code>	Returns the current state of the auto white balance setting (on or off).
	<code>red_gain</code>	Returns the red gain value as an integer between 0 and 255.
	<code>blue_gain</code>	Returns the blue gain value as an integer between 0 and 255.
	<code>backlight_compensation</code>	Returns the current state of the backlight compensation setting (on or off).
	<code>iris</code>	Returns the iris value as an integer between 0 and 11.
	<code>auto_iris</code>	Returns the current auto-iris state (on or off).
	<code>gain</code>	Returns the gain value as an integer between 0 and 11.
	<code>detail</code>	Returns the detail value as an integer between 0 and 15.
	<code>chroma</code>	Returns the chroma value as an integer between 0 and 14.
	<code>all</code>	Returns all current CCU settings.
Examples	camera ccu get iris <code>iris 11</code> Returns the current iris value.	
	camera ccu get red_gain <code>red_gain 201</code> Returns the current red gain value.	
	camera ccu get all <code>auto_iris on</code> <code>auto_white_balance on</code> <code>backlight_compensation off</code> <code>blue_gain 193</code> <code>chroma 2</code> <code>detail 8</code> <code>gain 3</code> <code>iris 9</code> <code>red_gain 201</code> Returns all current CCU settings.	

camera ccu set

Sets the specified CCU (lighting) information.

Synopsis	<code>camera ccu set <param> <value></code>	
Parameters and Values 	<code>auto_white_balance {on off}</code>	Sets the current state of the auto white balance setting (on or off). Auto white balance overrides red gain and blue gain manual settings.
	<code>red_gain <0 - 255></code>	Sets the red gain value. Valid range: integers 0 to 255. Can only be used when auto white balance is off.
	<code>blue_gain <0 - 255></code>	Sets the blue gain value. Valid range: integers 0 to 255. Can only be used when auto white balance is off.
	<code>backlight_compensation {on off}</code>	Sets the current state of the backlight compensation setting (on or off).
	<code>iris <0 - 13></code>	Sets the iris value. Can only be used when auto-iris is off. Valid range is integers between 0 and 13.
	<code>auto_iris {on off}</code>	Sets the auto-iris state (on or off). Auto-iris disables manual iris and gain when it is on.
	<code>gain <0 - 11></code>	Sets gain value. Valid range: integers 0 to 11. Can only be used when auto-iris is off.
	<code>detail <0 - 15></code>	Sets the detail value. Valid range: integers 0 to 15.
	<code>chroma <0 - 14></code>	Sets the chroma value. Valid range: integers 0 to 14.
Examples	<code>camera ccu set auto_iris off</code> Turns off auto-iris mode, returning the camera to manual iris control.	
	<code>camera ccu set red_gain 10</code> Sets the red gain value to 10.	

camera ccu scene

Stores the current CCU scene or recalls the specified ccu scene.

Synopsis	<code>camera ccu scene {recall {factory <1 - 6> custom <1 - 3>} store custom <1 - 3>}</code>	
Parameters and Values	<code>recall {factory <1 - 6> custom <1 - 3>}</code>	Recalls the camera to the specified scene (factory 1 - 6 or custom 1 - 3) .
	<code>store custom <1 - 3></code>	Saves the current scene as the specified custom scene.
Examples	camera ccu scene recall factory 2 Sets the camera to use factory CCU scene 2.	
	camera ccu scene store custom 1 Saves the current CCU scene as custom CCU scene 1.	

video mute

Gets or sets the camera's video mute status. When video is muted, the camera sends black video with an on-screen message stating that video mute is on. This can be desirable when preparing the room or when privacy is needed.

Synopsis	<code>video mute {get off on toggle}</code>	
Parameters	<code>get</code>	Returns the current video mute status.
	<code>off</code>	Unmutes the video. Normal video resumes.
	<code>on</code>	Mutes the video. Black screen with message.
	<code>toggle</code>	Changes the camera's video mute status.
Examples	video mute get <code>mute: off</code> Returns video mute status.	
	video mute on Transmits black video.	

camera standby

Set or change camera standby status.

Synopsis	camera standby { off on toggle }	
Parameters	off	Brings the camera out of standby (sleep) mode.
	on	Stops video and puts the camera in standby mode.
	toggle	Changes the camera's standby state - if it was not in standby mode, it enters standby; if it was in standby mode, it "wakes up."
	get	Returns the camera's current standby state (on or off).
Examples	camera standby off Brings the camera out of standby mode.	
	camera standby on Puts the camera in standby mode.	

streaming settings get

Retrieves IP streaming settings. These are configured in the web interface.

Synopsis	<code>streaming settings get</code>	
Parameters and Values	<code>ip_enabled {true false}</code>	<code>true</code> indicates streaming is enabled; <code>false</code> indicates it is disabled.
	<code>ip_port <port number></code>	The port that the IP stream uses. Port 554 is typical.
	<code>ip_protocol {rtsp}</code>	Specifies the streaming protocol. Only RTSP is supported at this time.
	<code>ip_quality {low standard high}</code>	Specifies the video quality.
	<code>ip_resolution <value></code> Valid resolutions: 1080p 720p 4cif 480p 640x480 360p cif	Specifies the streaming video resolution.
	<code>ip_url <URL></code>	Specifies the URL where the stream is available.
Examples	<pre> streaming settings get IP Enabled true IP Port 554 IP Protocol RTSP IP Quality High Quality (Best) IP Resolution 1080p IP Url Lobby-conference Returns the current streaming settings. </pre>	

network ping

Sends an ICMP ECHO_REQUEST to the specified IP address or hostname.

Synopsis	<code>network ping [count <count>] [size <size>] <destination-ip></code>	
Parameters and Values	<code>count <count></code>	The number of ECHO_REQUEST packets to send. If this is not specified, the default is five packets.
	<code>size <size></code>	The size of each ECHO_REQUEST packet. If this is not specified, the default is 56 bytes.
	<code><destination-ip></code>	The IP address or hostname where the ECHO_REQUEST packets will be sent.
Examples	network ping 192.168.1.1 Sends five ECHO_REQUEST packets of 56 bytes each to the host at 192.168.1.1.	
	network ping count 10 size 100 BoardroomCamControl Sends 10 ECHO_REQUEST packets of 100 bytes each to the device with the hostname BoardroomCamControl.	

network settings get

Returns the current network settings for mac address, ip address, netmask, and gateway.

Synopsis	<code>network settings get</code>	
Example	network settings get Name: eth0:WAN MAC Address: 00:04:a3:85:0a:ee IP Address: 10.10.8.116 Netmask: 255.255.255.0 Gateway: 10.10.8.100	


system reboot

Reboots the system either immediately or after the specified delay. Note that a reboot is required when resetting the system to factory defaults (system factory-reset).

Synopsis	<code>system reboot [<seconds>]</code>	
Parameters	<code><seconds></code>	Optional – the number of seconds to delay the reboot.
Examples	system reboot Reboots the system immediately.	
	system reboot 30 Reboots the system in 30 seconds.	


system factory-reset

Gets or sets the factory reset status. When the factory reset status is on, the system resets to factory defaults on reboot.

Synopsis	<code>system factory-reset { get on off }</code>	
Parameters	<code>get</code>	Returns the camera's current factory reset status.
	<code>on</code>	Enables factory reset on reboot.
	<code>off</code>	Disables factory reset on reboot.
Examples 	<p>system factory-reset get</p> <pre>factory-reset (software): off factory-reset (hardware): off</pre> <p>Evaluates the most recent <code>system factory-reset on</code> or <code>off</code> command, if one has been received, and returns the software factory reset status. Reads the rear panel DIP switches and returns the hardware reset status. Hardware reset status is <code>on</code> if all DIP switches are in the down position.</p> <hr/> <p>system factory-reset on</p> <pre>factory-reset (software): on factory-reset (hardware): off</pre> <p>Sets the software factory-reset status ON to enable factory reset upon reboot.</p>	

history

Returns the most recently issued commands from the current Telnet session. Since many of the programs read user input a line at a time, the command history is used to keep track of these lines and recall historic information.

Synopsis	history [<limit>]	
Parameters	<limit>	Optional – Integer value specifying the maximum number of commands to return.
Examples	history Displays the current command buffer.	
	history 5 Sets the history command buffer to remember the last 5 unique entries.	
Additional information	 <p>You can navigate the command history using the up and down arrow keys. This command supports the expansion functionality from which previous commands can be recalled from within a single session. History expansion is performed immediately after a complete line is read.</p> <p>Examples of history expansion:</p> <ul style="list-style-type: none"> * !! Substitute the last command line. * !4 Substitute the 4th command line (absolute as per 'history' command). * !-3 Substitute the command line entered 3 lines before (relative). 	


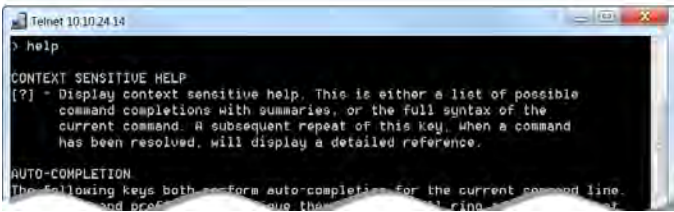
version

Returns the current firmware version.

Synopsis	version
Example	<p>version</p> <pre>Commit: d033ddb2378357a871011eb820706dcaa64ec0e2 Pan Motor Version: 0.2.4586 Tilt Motor Version: 0.2.4586 Sensor Version: 02.00 System Version: RoboSHOT UHD 1.0.0</pre> <p>Returns current firmware version information.</p>

help

Displays an overview of the CLI syntax.

Synopsis	help
Example	 

exit

Ends the command session and then does one of these two things:

- Telnet: Closes the socket.
- RS-232 serial: Automatically starts a new session.

Synopsis	<code>exit</code>
Example	<code>exit</code>


RS-232 Serial Communication

The RS-232 serial port (color-coded blue) near the center of the camera's back panel provides another means of controlling the camera.

Specification	Value
Communication Speed	9600 bps (default)
Number of start bits	1
Number of stop bits	1
Number of data bits	8
Parity	None
Flow control	None

Connector pin-out:

- Pin 1: Not used
- Pin 2: Not used
- Pin 3: Not used
- Pin 4: Not used
- Pin 5: Not used
- Pin 6: GND
- Pin 7: RXD (from TXD of control source)
- Pin 8: TXD (to RXD of control source)

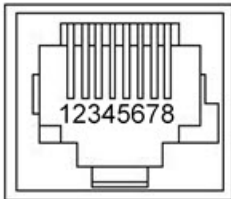

Caution

Check Cat-5 cables for continuity before using them. Using the wrong pin-out may damage the camera system and void the warranty.

The Vaddio RoboSHOT Control Protocol is similar to the Sony® VISCA command set in order to be compatible with several popular control devices. Not all VISCA commands are supported and there are Vaddio-specific commands in the following command and inquiry lists.

RS-232 Command List

Most of these commands are common to all RoboSHOT series cameras. Some have different value ranges depending on the camera.

Command Set	Command	Command Packet	Comments
AddressSet	Broadcast	88 30 01 FF	Sets address for all daisy-chained cameras
IF_Clear	Broadcast	88 01 00 01 FF	I/F Clear
CommandCancel		8x 2p FF	p= Socket No.(1-2)
CAM_Power	On	8x 01 04 00 02 FF	Power on
	Off	8x 01 04 00 03 FF	Power off
CAM_Zoom	Stop	8x 01 04 07 00 FF	
	Tele(std)	8x 01 04 07 02 FF	
	Wide(std)	8x 01 04 07 03 FF	
	Tele(variable)	8x 01 04 07 2p FF	p= speed 0:low to 7:high
	Wide(variable)	8x 01 04 07 3p FF	p= speed 0:low to 7:high
	Direct	8x 01 04 47 0p 0q 0r 0s FF	pqrs=Zoom Position (0h-4000h)
CAM_Focus	Stop	8x 01 04 08 00 FF	
	Far (std)	8x 01 04 08 02 FF	
	Near (std)	8x 01 04 08 03 FF	
	Far (variable)	8x 01 04 08 2p FF	p= speed 0:low to 7:high
	Near (variable)	8x 01 04 08 3p FF	p= speed 0:low to 7:high
	Direct	8x 01 04 48 0p 0q 0r 0s FF	pqrs=Focus Position (1000h – F000h)
	Auto Focus	8x 01 04 38 02 FF	
	Manual Focus	8x 01 04 38 03 FF	
	Auto/Manual	8x 01 04 08 10 FF	
	One Push Trigger	8x 01 04 18 01 FF	One push AF Trigger
	Near Limit	8x 01 04 28 0p 0q 0r 0s FF	pqrs=Near focus Limit***
CAM_AFSensitivity	Normal	8x 01 04 58 02 FF	AF Sensitivity High / Low
	Low	8x 01 04 58 03 FF	
CAM_AFMode	Normal AF	8x 01 04 57 00 FF	AF movement mode
	Internal AF	8x 01 04 57 01 FF	
	Zoom Trigger AF	8x 01 04 57 02 FF	
	Activate/Internal Time	8x 01 04 27 0p 0q 0r 0s FF	pqrs=movement time, rs=Interval

Command Set	Command	Command Packet	Comments
CAM_IRCorrection	Standard	8x 01 04 11 00 FF	Focus IR compensation data switching
	IR light	8x 01 04 11 01 FF	
CAM_ZoomFocus	Direct	8x 01 04 47 0p 0q 0r 0s 0t 0u 0v 0w FF	pqrs=Zoom Position RoboSHOT 12 and RoboSHOT 20 UHD: (0h – 4000h) RoboSHOT 30: (0h - 7AC0h) tuvw=Focus Position (1000h – F000h)
CAM_WB	Auto	8x 01 04 35 00 FF	Normal Auto
	Indoor	8x 01 04 35 01 FF	Indoor mode
	Outdoor	8x 01 04 35 02 FF	Outdoor mode
	One Push WB	8x 01 04 35 03 FF	One Push WB mode
	ATW	8x 01 04 35 04 FF	Auto Tracing White Balance
	Manual	8x 01 04 35 05 FF	Manual Control mode
	One Push Trigger	8x 01 04 10 05 FF	One Push WB Trigger
	Outdoor Auto	8x 01 04 35 06 FF	Outdoor auto
	Sodium Lamp Auto	8x 01 04 35 07 FF	Auto including sodium lamp source
	Sodium Lamp	8x 01 04 35 08 FF	Sodium lamp source fixed mode
	Sodium Lamp Outdoor Auto	8x 01 04 35 09 FF	Outdoor auto including sodium lamp source
	CAM_RGain	Reset	8x 01 04 03 00 FF
Up		8x 01 04 03 02 FF	
Down		8x 01 04 03 03 FF	
Direct		8x 01 04 43 00 00 0p 0q FF	pq=Red gain (00h – FFh)
CAM_BGain	Reset	8x 01 04 04 00 FF	Manual control of blue gain
	Up	8x 01 04 04 02 FF	
	Down	8x 01 04 04 03 FF	
	Direct	8x 01 04 44 00 00 0p 0q FF	pq=Blue gain (00h – FFh)
CAM_AE	Full Auto	8x 01 04 39 00 FF	Auto Exposure mode
	Manual	8x 01 04 39 03 FF	Manual Control mode
	Shutter Priority	8x 01 04 39 0A FF	Shutter Priority Auto Exposure mode
	Iris Priority	8x 01 04 39 0B FF	Iris Priority Auto Exposure Mode
	Bright	8x 01 04 39 0D FF	Bright Mode (modified AE mode)

Command Set	Command	Command Packet	Comments
CAM_ExpComp	On	8x 01 04 3E 02 FF	Exposure Compensation On
	Off	8x 01 04 3E 03 FF	Exposure Compensation Off
	Reset	8x 01 04 0E 00 FF	
	Up	8x 01 04 0E 02 FF	
	Down	8x 01 04 0E 03 FF	
	Direct	8x 01 04 4E 00 00 0p 0q FF	pq=ExpComp Position(0h-0Eh) See Exposure Compensation Settings for setting values
CAM_Shutter	Reset	8x 01 04 0A 00 FF	Shutter Setting
	Up	8x 01 04 0A 02 FF	
	Down	8x 01 04 0A 03 FF	
	Direct	8x 01 04 4A 00 00 0p 0q FF	pq=Shutter Position (00h – 15h) See Shutter Speed Settings for setting values.
CAM_Iris	Reset	8x 01 04 0B 00 FF	Iris Setting
	Up	8x 01 04 0B 02 FF	
	Down	8x 01 04 0B 03 FF	
	Direct	8x 01 04 4B 00 00 0p 0q FF	pq=Iris Position RoboSHOT 12: (0h, 07h-11h) RoboSHOT 30 and RoboSHOT 20 UHD: (0h, 05h-11h) See Iris Position Values for setting values
CAM_Gain	Reset	8x 01 04 0C 00 FF	Iris Gain Setting
	Up	8x 01 04 0C 02 FF	pq=Gain Position (01h – 0Fh)
	Down	8x 01 04 0C 03 FF	p= Gain limit (04h-0Fh)
	Direct	8x 01 04 4C 00 00 0p 0q FF	See Iris Gain Limit Values and Iris Gain Values for setting values.
	+Gain Limit	8x 01 04 2C 0p FF	
CAM_Bright	Reset	8x 01 04 0D 00 FF	Bright Setting
	Up	8x 01 04 0D 02 FF	
	Down	8x 01 04 0D 03 FF	
CAM_BackLight	On	8x 01 04 33 02 FF	Backlight Compensation On/Off
	Off	8x 01 04 33 03 FF	
CAM_Tally	On	8x 01 7E 01 0A 00 02 FF	
	Off	8x 01 7E 01 0A 00 03 FF	

Command Set	Command	Command Packet	Comments
CAM_WD	On	8x 01 04 3D 02 FF	WD On
	Off	8x 01 04 3D 03 FF	WD Off
	VE On	8x 01 04 3D 06 FF	VE On
	Set Parameter	8x 01 04 2D 00 0q 0r 0s 00 00 00 00 FF	q=Display brightness (0 Dark – 6 Bright) r=Brightness compensation (0: Very dark, 1: Dark, 2: std, 3: bright) s=Compensation level (0: Low, 1: Mid, 2: High)
CAM_Aperture	Reset	8x 01 04 02 00 FF	Aperture Setting
	Up	8x 01 04 02 01 FF	
	Down	8x 01 04 02 02 FF	
	Direct	8x 01 04 42 00 00 0p 0q FF	pq=Aperture Position (0h-0fh)
CAM_HR	On	8x 01 04 52 02 FF	High Resolution Mode On/Off
	Off	8x 01 04 52 03 FF	
CAM_NR	--	8x 01 04 53 0p FF	p= Noise Reduction level (0:Off, 1-5)
CAM_Gamma	--	8x 01 04 5B 0p FF	p= Gamma setting (0:std, 1: Straight)
CAM_LR_Reverse	On	8x 01 04 61 02 FF	LR Reverse On/Off (mirror)
	Off	8x 01 04 61 03 FF	
CAM_Freeze	On	8x 01 04 62 02 FF	Freeze On/Off
	Off	8x 01 04 62 03 FF	
CAM_PictureEffect	Off	8x 01 04 63 00 FF	Picture Effect Setting
	Neg.Art	8x 01 04 63 02 FF	
	Black & White	8x 01 04 63 04 FF	
CAM_PictureFlip	On	8x 01 04 66 02 FF	Image-Flip On/Off
	Off	8x 01 04 66 03 FF	
CAM_ICR	On	8x 01 04 01 02 FF	ICR Mode On/Off - adds an IR cut filter to the image for low light images
	Off	8x 01 04 01 03 FF	
CAM_IDWrite		8x 01 04 22 0p 0q 0r 0s FF	pqrs=Camera ID (0h-ffffh)

Command Set	Command	Command Packet	Comments
CAM_Memory	Reset	8x 01 04 3F 00 0p FF	<p>Note <i>These commands correspond to the camera preset Telnet commands.</i></p> <p>p= preset number(0h-0fh) qr= Speed(01h-18h)</p>
	Set standard	8x 01 04 3F 01 0p FF	
	Set standard with 'scene'	8x 01 04 3F 21 0p FF	
	Set Tri-sync	8x 01 04 3F 11 0p 0q 0r FF	
	Set Tri-Sync with 'scene'	8x 01 04 3F 31 0p 0q 0r FF	
	Recall	8x 01 04 3F 02 0p FF	
Cam_Display	On	8x 01 04 15 02 FF	Display On/Off
	Off	8x 01 04 15 03 FF	
	On/Off	8x 01 04 15 10 FF	
Cam_Mute	On	8x 01 04 75 02 FF	Mute On/Off
	Off	8x 01 04 75 03 FF	
	On/Off	8x 01 04 75 10 FF	
CAM_ColorEnhance	Parameter Set	8x 01 04 20 mm 00 pp qq rr ss tt uu FF	<p>mm: Threshold level pp: Y fixed color for high-intensity qq: Cr fixed color for high-intensity rr: Cb fixed color for high-intensity ss: Y fixed color for low-intensity tt: Cr fixed color for low-intensity uu: Cb fixed color for low-intensity Each parameter setting 00h to 7Fh</p>
	On	8x 01 04 50 02 FF	
	Off	8x 01 04 50 03 FF	
CAM_ChromaSuppress		8x 01 04 5F pp FF	<p>pp: Chroma Suppress level 00: Off 01h to 03h: On (3 levels; larger number = larger effect)</p>
CAM_ColorGain	Direct	8x 01 04 49 00 00 00 0p FF	p: Color Gain Setting 0h to 4h
CAM_ColorHue	Direct	8x 01 04 4F 00 00 00 0p FF	p: Color Hue Setting 0h (-14 degrees) to Eh (+14 degrees)
CAM_GammaOffset	Direct	8x 01 04 1E 00 00 00 0s 0t 0u FF	<p>s: Polarity offset (0 is plus, 1 is minus) tu: RoboSHOT 12 – Offset s=0 (00h)</p>

Command Set	Command	Command Packet	Comments
			to 10h) RoboSHOT 30 – Offset s=1 (00h to 40h)
Pan-TiltDrive	Up	8x 01 06 01 vv ww 03 01 FF	vv= Pan speed (01h-18h)
	Down	8x 01 06 01 vv ww 03 02 FF	ww=Tilt speed (01h-14h)
	Left	8x 01 06 01 vv ww 01 03 FF	
	Right	8x 01 06 01 vv ww 02 03 FF	
	UpLeft	8x 01 06 01 vv ww 01 01 FF	
	UpRight	8x 01 06 01 vv ww 02 01 FF	
	DownLeft	8x 01 06 01 vv ww 01 02 FF	
	DownRight	8x 01 06 01 vv ww 02 02 FF	
	Stop	8x 01 06 01 vv ww 03 03 FF	
	Absolute Position	8x 01 06 02 vv ww 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	0Y0Y0Y0Y = Pan position (90E2h-6BD8h) 0Z0Z0Z0Z = Tilt position (EB99h-3D59h)
Home	8x 01 06 04 FF	Returns the camera to its default position	
Pan-Tilt-ZoomDrive	Up	8x 01 06 0A vv ww rr 03 01 03 FF	vv= Pan speed (01h-18h) ww=Tilt speed (01h-14h)
	Down	8x 01 06 0A vv ww rr 03 02 03 FF	rr=Zoom speed (00h-07h)
	Left	8x 01 06 0A vv ww rr 01 03 03 FF	
	Right	8x 01 06 0A vv ww rr 02 03 03 FF	
	In	8x 01 06 0A vv ww rr 03 03 01 FF	

Command Set	Command	Command Packet	Comments
	Out	8x 01 06 0A vv ww rr 03 03 02 FF	
	Stop	8x 01 06 0A vv ww rr 03 03 03 FF	
	Absolute Position	8x 01 06 0B vv ww 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z 0R 0R 0R 0R FF	0Y0Y0Y0Y = Pan position (90E2h-6BD8h) 0Z0Z0Z0Z = Tilt position (EB99h-3D59h) 0R0R0R0R = Zoom position RoboSHOT 12: 0000h-4000h RoboSHOT 30 and RoboSHOT 20 UHD: 0000h-7AC0h
	Home	8x 01 06 0C FF	Returns the camera to the default position and zoom
CAM_PTZ_ PresetSpeed		8x 01 7e 01 0b pp qq rr FF	pp:pan speed (01h-18h), qq:tilt speed (01h-14h), rr:zoom speed (0h-07h) Applies only if Tri-Synchronous Motion is not used.

Command Setting Values

Valid settings for these commands:

- CAM_ExpComp
- CAM_Shutter
- CAM_Iris
- CAM_Gain

Exposure Compensation

Command: CAM_ExpComp

Value	Iris	Gain
0x0E	+7	+10.5 dB
0x0D	+6	+9 dB
0x0C	+5	+7.5 dB
0x0B	+4	+6 dB
0x0A	+3	+4.5 dB
0x09	+2	+3 dB
0x08	+1	+1.5 dB
0x07	0	0 dB
0x06	-1	-1.5 dB
0x05	-2	-3 dB
0x04	-3	-4.5 dB
0x03	-4	-6 dB
0x02	-5	-7.5 dB
0x01	-6	-9 dB
0x00	-7	-10.5 dB

Shutter Speed Values

Command: CAM_Shutter

Value	60/59.94/30/29.97	50/25
0x15	1/10000	1/10000
0x14	1/6000	1/6000
0x13	1/4000	1/3500
0x12	1/3000	1/2500
0x11	1/2000	1/1750
0x10	1/1500	1/1250
0x0F	1/1000	1/1000
0x0E	1/725	1/600
0x0D	1/500	1/425
0x0C	1/350	1/300
0x0B	1/250	1/215
0x0A	1/180	1/150
0x09	1/125	1/120
0x08	1/100	1/100
0x07	1/90	1/75
0x06	1/60	1/50
0x05	1/30	1/25
0x04	1/15	1/12
0x03	1/8	1/6
0x02	1/4	1/3
0x01	1/2	1/2
0x00	1/1	1/1

Iris Position Values

Command: CAM_Iris

Value	RoboSHOT 20 UHD
0x11	F1.8
0x10	F2
0x0F	F2.4
0x0E	F2.8
0x0D	F3.4
0x0C	F4
0x0B	F4.8
0x0A	F5.6
0x09	F6.8
0x08	F8
0x07	F9.6
0x06	F11
0x05	F14
0x00	CLOSE

Iris Gain Values

Command: CAM_Gain

Value	Gain
0x10	45 dB
0x0F	42 dB
0x0E	39 dB
0x0D	36 dB
0x0C	33 dB
0x0B	30 dB
0x0A	27 dB
0x09	24 dB
0x08	21 dB
0x07	18 dB
0x06	15 dB
0x05	12 dB
0x04	9 dB
0x03	6 dB
0x02	3 dB
0x01	0 dB

Note

Values 0D to 10 can be set only when the high-sensitivity mode is ON. By default, it is off at power-up/reboot.

Iris Gain Limit Values

Command: CAM_Gain

Value	High Sensitivity Off	High Sensitivity On
0x0C	33 dB	45 dB
0x0B	30 dB	42 dB
0x0A	27 dB	39 dB
0x09	24 dB	36 dB
0x08	21 dB	33 dB
0x07	18 dB	30 dB
0x06	15 dB	27 dB
0x05	12 dB	24 dB
0x04	9 dB	21 dB

RS-232 Inquiry Command List

Inquiry Command	Command	Response Packet	Comments
CAM_PowerInq	8x 09 04 00 FF	y0 50 02 FF	On
		y0 50 03 FF	Off (Standby)
CAM_ZoomPosInq	8x 09 04 47 FF	y0 50 0p 0q 0r 0s FF	pqrs: Zoom Position
CAM_FocusModelInq	8x 09 04 38 FF	y0 50 02 FF	Auto Focus
		y0 50 03 FF	Manual Focus
CAM_FocusPosInq	8x 09 04 48 FF	y0 50 0p 0q 0r 0s FF	pqrs: Focus Position
CAM_FocusNearLimitInq	8x 09 04 28 FF	y0 50 0p 0q 0r 0s FF	pqrs: Focus Near Limit Position
CAM_AFSensitivityInq	8x 09 04 58 FF	y0 50 02 FF	AF Sensitivity Normal
		y0 50 03 FF	AF Sensitivity Low
CAM_AFModelInq	8x 09 04 57 FF	y0 50 00 FF	Normal AF
		y0 50 01 FF	Interval AF
		y0 50 02 FF	Zoom Trigger AF
CAM_AFTimeSettingInq	8x 09 04 27 FF	y0 50 0p 0q 0r 0s FF	pq: Movement Time, rs: Interval
CAM_IRCorrectionInq	8x 09 04 11 FF	y0 50 00 FF	Standard
		y0 50 01 FF	IR Light
CAM_WBModelInq	8x 09 04 35 FF	y0 50 00 FF	Auto
		y0 50 01 FF	Indoor
		y0 50 02 FF	Outdoor
		y0 50 03 FF	One Push WB
		y0 50 04 FF	ATW
		y0 50 05 FF	Manual
		y0 50 06 FF	Outdoor Auto
		y0 50 07 FF	Sodium Lamp Auto
		y0 50 08 FF	Sodium Lamp
y0 50 09 FF	Sodium Lamp Outdoor Auto		
CAM_RGainInq	8x 09 04 43 FF	y0 50 00 00 0p 0q FF	pq: R Gain
CAM_BGainInq	8x 09 04 44 FF	y0 50 00 00 0p 0q FF	pq: B Gain
CAM_AEModelInq	8x 09 04 39 FF	y0 50 00 FF	Full Auto
		y0 50 03 FF	Manual
		y0 50 0A FF	Shutter Priority
		y0 50 0B FF	Iris Priority
		y0 50 0D FF	Bright

Inquiry Command	Command	Response Packet	Comments
CAM_ShutterPosInq	8x 09 04 4A FF	y0 50 00 00 0p 0q FF	pq: Shutter Position
CAM_IrisPosInq	8x 09 04 4B FF	y0 50 00 00 0p 0q FF	pq: Iris Position
CAM_GainPosInq	8x 09 04 4C FF	y0 50 00 00 0p 0q FF	pq: Gain Position
CAM_GainLimitInq	8x 09 04 2C FF	y0 50 0q FF	p: Gain Limit
CAM_ExpCompModelInq	8x 09 04 3E FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_ExpCompPosInq	8x 09 04 4E FF	y0 50 00 00 0p 0q FF	pq: ExpComp Position
CAM_BackLightModelInq	8x 09 04 33 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_TallyInq	8x 09 7E 01 0A FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_SpotAEModelInq	8x 09 04 59 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_SpotAEPosInq	8x 09 04 29 FF	y0 50 0p 0q 0r 0s FF	pq: X Position, rs: Y Position
CAM_WDModelInq	8x 09 04 3D FF	y0 50 02 FF	On
		y0 50 03 FF	Off
		y0 50 06 FF	VE On
CAM_WDParameterInq	8x 09 04 2D FF	y0 50 00 0q 0r 0s 0t 0u 00 00 FF	q: Display brightness level (0: Dark to 6: Bright) r: Brightness compensation selection (0: Very dark, 1: Dark, 2: Standard, 3: Bright) s: Compensation level (00h: Low, 01h: Mid, 02h: High) tu: Always 0
CAM_ApertureInq	8x 09 04 42 FF	y0 50 00 00 0p 0q FF	pq: Aperture Gain
CAM_HRModelInq	8x 09 04 52 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_NRInq	8x 09 04 53 FF	y0 50 0p FF	Noise Reduction p: 00h to 05h
CAM_GammaInq	8x 09 04 5B FF	y0 50 0p FF	Gamma p: 00h , 01h
CAM_LR_ReverseModelInq	8x 09 04 61 FF	y0 50 02 FF	On (mirror)
		y0 50 03 FF	Off
CAM_FreezeModelInq	8x 09 04 62 FF	y0 50 02 FF	On
		y0 50 03 FF	Off

Inquiry Command	Command	Response Packet	Comments
CAM_PictureEffectModelInq	8x 09 04 63 FF	y0 50 00 FF	Off
		y0 50 02 FF	Neg. Art
		y0 50 04 FF	Black & White
CAM_PictureFlipModelInq	8x 09 04 66 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_ICRModelInq	8x 09 04 01 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_MemoryInq	8x 09 04 3F FF	y0 50 pp FF	pp: Memory number recalled last
CAM_MemoryStatusInq	8x 09 04 3F 0p FF	y0 50 0p 0q 0r 0s FF	p: Memory number q: mode (00-std, 10-std /w ccu, 01-trisync, 11-trisync /w ccu) rs: speed (0x1-0x18) 1 - 24
CAM_MemSaveInq	8x 09 04 23 0X FF	y0 50 0p 0q 0r 0s FF	X: 00h to 07h (Address) pqrs: 0000h to FFFFh (Data)
CAM_DisplayModelInq	8x 09 04 15 FF (8x 09 06 06 FF)	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_MuteModelInq	8x 09 04 75 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_IDInq	8x 09 04 22 FF	y0 50 0p 0q 0r 0s FF	pqrs: Camera ID
CAM_VersionInq	8x 09 00 02 FF	y0 50 00 10 mn pq 0E 0E 02 FF	mnpq: Model Code
Vaddio_ModelInq	8x 09 08 0e FF	y0 50 05 00 00 00 00 FF	RoboSHOT 12
		y0 50 05 01 00 00 00 FF	RoboSHOT 30
		y0 50 05 02 00 00 00 FF	RoboSHOT 12 USB
		y0 50 05 04 00 00 00 FF	RoboSHOT 12 HDMI
		y0 50 05 05 00 00 00 FF	RoboSHOT 30 HDMI
		y0 50 05 06 00 00 00 FF	RoboSHOT 12 HD-SDI
		y0 50 05 07 00 00 00 FF	RoboSHOT 30 HD-SDI
		y0 50 06 01 00 00 00 FF	RoboSHOT 20 UHD
CAM_RegisterValueInq	8x 09 04 24 mm FF	y0 50 0p 0p FF	mm: Register No. (=00h to 7Fh) pp: Register Value (=00h to FFh)
CAM_ColorEnhanceInq	8x 09 04 20 FF	y0 50 mm 00 pp qq rr ss tt uu FF	mm: Threshold level pp: Y fixed color for high-intensity qq: Cr fixed color for high-intensity rr: Cb fixed color for high-intensity ss: Y fixed color for low-intensity tt: Cr fixed color for low-intensity

Inquiry Command	Command	Response Packet	Comments
			uu: Cb fixed color for low-intensity
	8x 09 04 50 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_ChromaSuppressInq	8x 09 04 5F FF	y0 50 pp FF	pp: Chroma Suppress setting level
CAM_ColorGainInq	8x 09 04 49 FF	y0 50 00 00 00 0p FF	p: Color Gain Setting 0h to 4h
CAM_ColorHueInq	8x 09 04 4F FF	y0 50 00 00 00 0p FF	p: Color Hue Setting 0h (- 14 degrees) to Eh (+ 14degrees)
CAM_TempInq	8x 09 04 68 FF	Y0 50 00 00 0p 0q FF	pq: Lens Temperature
CAM_GammaOffsetInq	8x 09 04 1E FF	y0 50 00 00 00 0s 0t 0u FF	s: Polarity offset (0 is plus, 1 is minus) tu: Offset s=0 (00h to 40h) Offset s=1 (00h to 10h)
Pan-tiltPosInq	8x 09 06 12 FF	y0 50 0w 0w 0w 0w 0z 0z 0z 0z FF	www= Pan position zzzz=Tilt Position

Specifications

Video and Image

Outputs/protocols	HDMI, HDBT, HD-SDI, IP (H.264)	Aspect ratio	HDMI: 16:9 (all resolutions) IP (H.264) Streaming: 16:9, 3:2, 4:3
HDMI resolutions/frame rates	QFHD: 2160p/30/25 (3840 x 2160) FHD: 1080p/59.94/50/29.97/25, 1080i/59.94/50 HD: 720p/59.94/50	3Gb/s HD-SDI resolutions/frame rates	FHD: 1080p/59.94/50/29.97/25, 1080i/59.94/50 HD: 720p/59.94/50
Streaming	Simultaneous IP (RTSP format with H.264 compression) up to 1080p/30		

Camera

Image device	1/2.3-Type Exmor R High-speed, Low-noise CMOS Sensor		
Pixels	9.03 Megapixels Total, 8.93 Effective Megapixels		
Zoom	12X optical zoom, 1.67X digital zoom; combined total 20X zoom		
Minimum illumination	3.0 lx (F1.8, 50IRE) color; recommended 100+ lux		
Horizontal FOV	74° (wide) to 4.8° (tele)	Min. working distance	10 mm (wide), 1500 mm (tele)
Pan angle and speed	±160°, 0.35°/sec to 120°/sec	Tilt angle and speed	+90, -30°, 0.35°/sec to 120°/sec
Gain	Auto / Manual (0 to 33 dB)	Aperture/detail	16 Steps
Focusing system	Auto Focus / Manual Focus Mode / One Push Trigger Mode		
White balance	Auto, ATW, Indoor, Outdoor, One-push, Manual		
Backlight compensation	On/off	Sync system	Internal
Noise reduction	6 steps	S/N ratio	Over 50 dB
Control and management	Vaddio IR Remote Commander, web interface, Telnet, RS-232 API (modified VISCA)		
Power	12 VDC, 3.0 Amp power supply; LTPoE++		

Physical and Environmental

Height	7.9 in (200 mm)	Operating temperature	-5 °C to +60°C (23°F to 140°F)
Width	8.0 in (203 mm)	Operating humidity	20% to 80% RH (non-condensing)
Depth	7.7 in (196 mm)	Storage temperature	-20° to +60° C (-4°F to 140°F)
Weight	6 lbs (2.7 kg)	Storage humidity	20% to 95% RH (non-condensing)

Troubleshooting and Care

When the camera doesn't behave as you expect, check the color of the indicator light on the front before you do anything else.

- Purple – booting or in standby (low power) mode.
- Blue – normal operation.
- Blinking blue – the camera has received a valid IR command.
- Red – Tally function; the camera is on-air.
- Blinking red – fault condition.
- Yellow – firmware update in progress.
- Off – no power to the camera.

Stuff happens – we get it. Use this table to determine whether it's time to call Vaddio Technical Support.

What is it doing?	Possible causes	Check and correct
Nothing. The light on the front is off.	At least one of the cables is bad.	Check using known good cables.
	If a OneLINK extension system is used: The camera is not connected to the OneLINK.	Plug the OneLINK into the camera.
	If a OneLINK extension system is used: The OneLINK system is not working properly.	Disconnect the OneLINK and connect the camera directly to the 12V power pack that was shipped with it to determine where the problem is. If the camera works without the OneLINK system, the OneLINK is bad. Contact your reseller or Vaddio Technical Support.
	The wall outlet is not active. (Check by finding out if it powers something else, such as a laptop or phone charger.)	Use a different outlet.
	The camera or its power supply is bad.	Contact your reseller or Vaddio Technical Support.
The camera is not responding to the remote and the light is yellow.	A firmware update is in progress.	Wait a few minutes, and try again when the light turns blue.
The camera does not respond to the remote, but the web interface is available	The remote is not using the same IR channel as the camera.	Push the Camera Select 1 button on the remote. Try the other Camera Select buttons if necessary.
	IR is switched off (DIP switch 3 down)	Turn IR on (DIP switch 3 up) - see Camera Settings for more information.
	The batteries in the remote are dead.	Put new batteries in the remote.
The camera responds to the remote but the web interface is not available.	The camera is not using the IP address you browsed to.	Press the Data Screen button on the remote to see camera information.

What is it doing?	Possible causes	Check and correct
	The web interface has stopped responding.	Reboot the camera.
The camera's web UI is available but the camera does not respond to commands via RS-232 connection.	The RS-232 cable is not connected, or is bad.	Connect a known good cable.
	The camera's RS-232 settings don't match the settings on the controlling device.	Check the settings at both ends to be sure they match. The camera's current settings can be viewed on the System page in the web UI. Correct the settings where it's more convenient to do so.
The camera loses all its settings when power is cycled.	All the DIP switches are in the ON (down) position.	Set the DIP switches to their proper positions. Default is all OFF (up). See Switch Settings for more information.
No H.264 video stream.	Streaming is not enabled.	Enable streaming: Streaming page in the web interface.
The video stream displays poorly - for example, there is a jagged band where the image is not displayed	The stream requires more bandwidth than is available to the viewer.	Reduce the streaming resolution.

Operation, Storage, and Care

For smears or smudges on the product, wipe with a clean, soft cloth. Use a lens cleaner on the lens. Do not use any abrasive chemicals.

Keep this device away from food and liquids.

Do not operate or store the device under any of the following conditions:

- Temperatures above 40°C (104°F) or below 0°C (32°F)
- High humidity, condensing or wet environments
- Inclement weather
- Severe vibration
- Between converging tectonic plates
- Dry environments with an excess of static discharge

Do not attempt to take this product apart. There are no user-serviceable components inside.

Compliance Statements and Declarations of Conformity

Compliance testing was performed to the following regulations:

FCC Part 15 (15.107, 15.109), Subpart B	Class A
ICES-003, Issue 54: 2012	Class A
EMC Directive 2004/108/EC	Class A
EN 55022: December 2010	Class A
EN 55024: November 2010	Class A
KN22 2008 (CISPR 22: 2006)	Class A
KN24 2008 (CISPR 24: 1997 + A1: 2000 + A2: 2002)	Class A
IEC 60950-1:2005 (2nd Edition); Am 1: 2009 + Am 2: 2013	Safety
EN 60950-1: 2006 + A11: 2009 + A1: 2010 + A12: 2011 + A2: 2013	Safety

FCC Part 15 Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15, Subpart B, of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference including interference that may cause undesired operation of the device.


Changes or modifications not expressly approved by Vaddio can affect emission compliance and could void the user's authority to operate this equipment.



ICES-003 Compliance

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.



European Compliance

This product has been evaluated for electromagnetic compatibility under the EMC Directive for Emissions and Immunity and meets the requirements for a Class A digital device. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Standard(s) To Which Conformity Is Declared:



EMC Directive 2004/108/EC

EN 55022: December 2010

EN 55024: November 2010

EN 61000-4-2: 1995 + Amendments A1: 1998 + A2: 2001

EN 61000-4-3: 2006 + A1: 2008

EN 61000-4-4: 2004 + Corrigendum 2006

EN 61000-4-5: 2006

EN 61000-4-6: 2009

EN 61000-4-8: 2010

EN 61000-4-11: 2004

KN22 2008 (CISPR 22: 2006)

KN24 2008 (CISPR 24: 1997 + A1: 2000 + A2: 2002)

EN 61000-4-2

EN 61000-4-3

EN 61000-4-4

EN 61000-4-5

EN 61000-4-6

EN 61000-4-8

EN 61000-4-11

IEC 60950-1: 2005 (2nd Edition); Am 1: 2009 + Am 2: 2013

EN 60950-1: 2006 + A11: 2009 + A1: 2010 + A12: 2011 + A2: 2013

Conducted and Radiated Emissions

Immunity

Electrostatic Discharge

Radiated Immunity

Electrical Fast Transients

Surge Immunity

Conducted Immunity

Power Frequency Magnetic Field

Voltage Dips, Interrupts and Fluctuations

Conducted and Radiated Emissions

IT Immunity Characteristics

Electrostatic Discharge

Radiated Immunity

Electrical Fast Transients

Surge Immunity

Conducted Immunity

Power Frequency Magnetic Field

Voltage Dips, Interrupts and Fluctuations

Safety

Safety

Warranty Information

See Vaddio Warranty, Service and Return Policies posted on support.vaddio.com for complete details.

Hardware* warranty: Two (2) year limited warranty on all parts and labor for Vaddio manufactured products. Vaddio warrants its manufactured products against defects in materials and workmanship for a period of two years from the day of purchase, to the original purchaser, if Vaddio receives notice of such defects during the warranty. Vaddio, at its option, will repair or replace products that prove to be defective. Vaddio manufactures its hardware products from parts and components that are new or equivalent to new in accordance with industry standard practices.

Exclusions: The above warranty shall not apply to defects resulting from improper or inadequate maintenance by the customer, customers applied software or interfacing, unauthorized modifications or misuse, mishandling, operation outside the normal environmental specifications for the product, use of the incorrect power supply, modified power supply or improper site operation and maintenance. OEM and special order products manufactured by other companies are excluded and are covered by the manufacturer's warranty.

Vaddio Customer Service: Vaddio will test, repair, or replace the product or products without charge if the unit is under warranty. If the product is out of warranty, Vaddio will test then repair the product or products. The cost of parts and labor charge will be estimated by a technician and confirmed by the customer prior to repair. All components must be returned for testing as a complete unit. Vaddio will not accept responsibility for shipment after it has left the premises.

Vaddio Technical Support: Vaddio technicians will determine and discuss with the customer the criteria for repair costs and/or replacement. Vaddio Technical Support can be contacted by email at support@vaddio.com or by phone at one of the phone numbers listed on support.vaddio.com.

Return Material Authorization (RMA) number: Before returning a product for repair or replacement request an RMA from Vaddio's technical support. Provide the technician with a return phone number, e-mail address, shipping address, product serial numbers and original purchase order number. Describe the reason for repairs or returns as well as the date of purchase. See the General RMA Terms and Procedures section for more information. RMAs are valid for 30 days and will be issued to Vaddio dealers only. End users must return products through Vaddio dealers. Include the assigned RMA number in all correspondence with Vaddio. Write the assigned RMA number clearly on the shipping label of the box when returning the product. All products returned for credit are subject to a restocking charge without exception. Special order product are not returnable.

Voided warranty: The warranty does not apply if the original serial number has been removed or if the product has been disassembled or damaged through misuse, accident, modifications, use of incorrect power supply, use of a modified power supply or unauthorized repair.

Shipping and handling: Vaddio will not pay for inbound shipping transportation or insurance charges or accept any responsibility for laws and ordinances from inbound transit. Vaddio will pay for outbound shipping, transportation, and insurance charges for all items under warranty but will not assume responsibility for loss and/or damage by the outbound freight carrier. If the return shipment appears damaged, retain the original boxes and packing material for inspection by the carrier. Contact your carrier immediately.

Products not under warranty: Payment arrangements are required before outbound shipment for all out of warranty products.

Index

A

- admin login 13-14, 22
 - changing 22
 - default 13
- anatomy of the camera 3-4
- API 31, 43
 - syntax help 43
- auto focus 17, 34
- auto iris 24, 37
- auto white balance 24, 37

B

- backlight compensation 24, 36-37
- baud rate setting 6
- behavior on power-up 10, 23
- blue gain 24, 37
- browser compatibility 13

C

- cable connectors 4, 7
- Camera Control page (web) 16
- camera ID setting (DIP switch) 6
- camera mount, installing 8
- camera select 11-12, See also camera ID setting (DIP switch)
- Camera Settings page (web) 23
- camera specifications 61
- camera standby position 16
- CCU scenes 19, 23-24, 38
 - custom 19, 24, 38
 - recalling 38
- CCU settings 35-37
- ceiling-mounted cameras 8
- cheat sheet 3, 11-12, 15
 - indicator light 3
 - Vaddio IR Remote Commander 11-12
 - web interface 15
- chroma setting 24, 37
- cleaning 63
- color settings 19, 24, 36-37
- colors of the status light 3, 62
- command history 43
- compatibility, browsers 13
- connection example 8
- connector identification 4

- connector pin-out, RS-232 45
- custom CCU scenes 24

D

- damage, preventing 7, 45
- default IP address 13
- default settings, restoring 27, 42
- detail setting 24, 37
- DHCP 21
- diagnostic logs 30
- Diagnostics page (web) 30
- DIP switch settings 27
 - soft 27
- directional controls 11-12, 17

F

- factory defaults, restoring 27, 42
- fault isolation 62
- firmware update 27
- firmware version 27, 43
- focus 11-12, 17, 34

G

- gain 24
 - blue 24
 - red 24
- getting help 30
- guest access 14, 22
 - allowing 22

H

- Help page (web) 30
- home position 17, 23, 32
- hostname 21

I

- image flip setting (DIP switch) 6
- inactive sessions (web interface) 22
- indicator light 3, 62
- information, conference room 22
- installation, typical 8
- inverted installation 8
- IP address 11-13, 21
 - default 13, 21
- IP streaming 25-26, 40
 - resolutions and frame rates 25
 - settings 26, 40
- IR on/off (DIP switch) 6
- IR remote 11-12

iris settings 24, 36-37

L

labels, room 22

lighting settings 19, 24, 36-37

locations of connectors 4

log files 30

login 13-14

admin 13-14

user 13

low-power state 16, 39

M

manual focus 11-12, 17, 34

mounting cameras 7-9

N

network configuration 13, 21, 41

current 41

default 13, 21

Networking page (web) 21

NTP server 21

O

OneLINK system 8, 62

operating environment 63

P

packing lists 2

page 16, 21-23, 25, 27, 30

Camera Control 16

Camera Settings 23

Diagnostics 30

Help 30

Networking 21

Room Labels 22

Security 22

Streaming 25

System 27

pan 20, 32

direction 20

pan/tilt/zoom 11-12, 24

pan/tilt/zoom controls 17

passwords 22

pin-out, RS-232 connector 45

ping command 41

power-up settings 23

power on/power off 10-12

presets 11-12, 18, 35

clearing 12

moving to 18, 35

setting 12, 18, 35

product returns and repairs 66

Q

quick reference 3, 11-12, 15

indicator light 3

Vaddio IR Remote Commander 11-12

web interface 15

R

ready state 16, 39

rebooting the camera 27, 41

red gain 24, 37

remote control 11-12

resolution 4, 25

IP streaming 25

switch setting 4

restoring default settings 27, 42

RJ-45 connectors 7

room information 22

Room Labels page (web) 22

RS-232 commands 46, 57

RS-232 serial connection 4, 45

S

scenes, CCU 19, 24

naming 24

storing 24

Security page (web) 22

settings, default, restoring 42

shelf-mounted cameras 9

shelf, camera mount 8

soft DIP switches 27

solving problems 62

specifications 61

speed 17, 23-24, 32-34

focus 34

pan/tilt/zoom 17, 24, 32-33

standby state 16, 39

start-up behavior, setting 23

static IP address 21

status light, meanings of colors 3, 62

storage environment 63

Streaming page (web) 25

streaming settings 25, 40

supported web browsers 13

- switch settings 6, 8, 27
 - 3G Level A/Level B 27
 - baud rate (DIP switch) 6
 - camera ID (DIP switch) 6
 - color space 27
 - image flip (DIP switch) 6, 8
 - IR 6
 - reading from web interface 27
- switch, video resolution 4
- System page (web) 27

T

- technical specifications 61
- technical support 30
- Telnet command help 43
- Telnet session 31, 43-44
 - ending 44
 - history 43
- temperature, operating and storage 61, 63
- tilt 20, 32
 - direction 20
- time zone 21
- Tri-Synchronous Motion (Tri-Sync) 18, 24, 35
- troubleshooting 62
- typical installation 9

U

- user login 13, 22
 - changing 22
 - default 13

V

- Vaddio IR Remote Commander 11-12
- version, firmware 43
- video resolution setting 4

W

- warranty 7, 66
- web browsers supported 13
- web interface 16, 21-23, 25, 27, 30
 - Camera Control page 16
 - Camera Settings page 23
 - Diagnostics page 30
 - Help page 30
 - Networking page 21
 - Room Labels page 22
 - Security page 22
 - Streaming page 25
 - System page 27

Z

- zoom 17, 33
- zoom speed 11-12, 17, 33

RoboSHOT™, OneLINK™, EZCamera™, and IR Remote Commander™ are trademarks of Vaddio. The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. HDBaseT™ and the HDBaseT Alliance logo are trademarks of the HDBaseT Alliance. Exmor® is a trademark of Sony Corporation. All other trademarks in this document are the property of their respective owners.

Copyright © 2016 Vaddio. All rights reserved.

Vaddio

131 Cheshire Ln., Suite 500

Minnetonka, MN 55305

The logo for Touchboards features the word "Touchboards" in a bold, black, sans-serif font. The letters "T", "C", and "B" are each enclosed within a colored square frame: "T" is yellow, "C" is light blue, and "B" is orange. The remaining letters "o", "u", "c", "h", "b", "o", "a", "r", "d", "s" are in plain black text.

205 Westwood Ave, Long Branch, NJ 07740

Phone: 866-94 BOARDS (26273) / (732)-222-1511

Fax: (732)-222-7088 | E-mail: sales@touchboards.com

The Vaddio logo is rendered in a bold, blue, lowercase sans-serif font. The letter "o" at the end of the word is stylized as a camera lens, with a white circle in the center and a smaller white circle inside that, creating a lens effect.