

Unit Parts

32x 15mm Screws	6X 30mm Screws	18x Cover Caps	5x Legs	5x Leg Brackets	2x Plinth Clips	1x Space Plug	4x Shelf Pegs	1x Shelf	5x Door Buffers	2x L-Brackets

Tools Required


Drill	Holesaw	Jigsaw	Stanley Knife	
Mallet	Screwdriver	Clamp	Spirit Level	Tape Measure

Remember to take care when unpacking. Please keep your workspace clean, clear and tidy when working. This will help keep all items safe from any damages. Any un-needed cardboard or plastic should be flattened down and placed in the bin.

A minimum of two people will be needed to lift the unit.

Removing the frontals


Before installing the unit, remove the frontals by pulling the release catch.

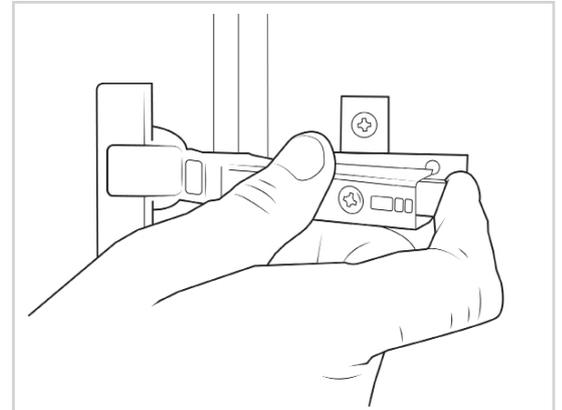

Removing the fittings



Remove all content including the shelf liner so the unit is empty.

All fittings should be kept on a clean and level surface.

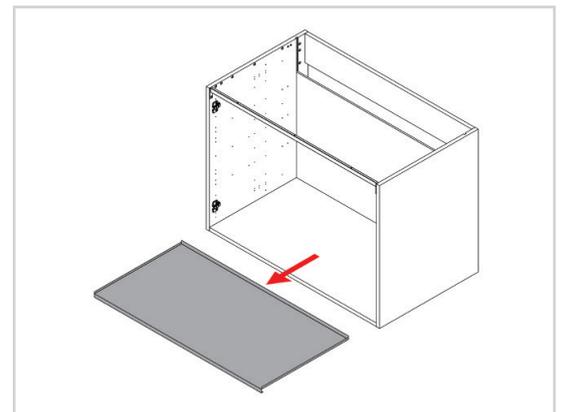


Positioning the leg brackets

Locate the leg brackets and position, as shown in the diagram. Ensure the leg brackets are rotated so the flange covers the outer edge, as this provides support for the edge of the unit.

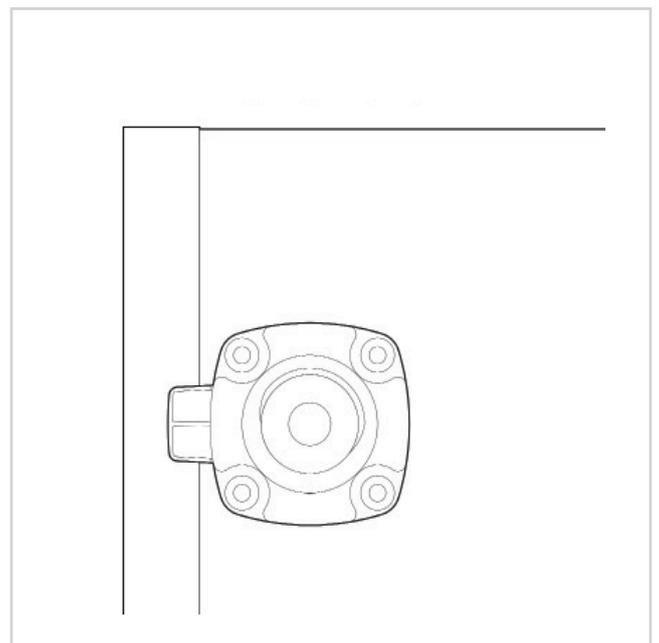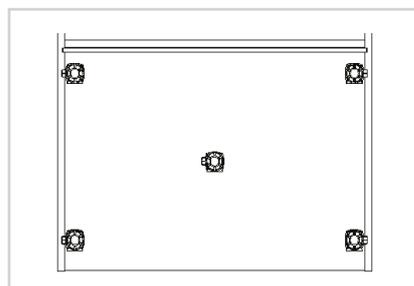

Fixing the leg bases


Secure each of the leg brackets into place with **4x15mm** screws per bracket.

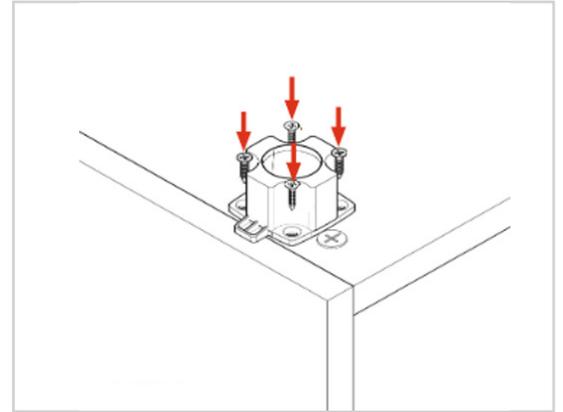

Inserting the legs


Push each leg firmly down into the leg bracket. Adjusting each leg to **155mm**.

Adjust the legs to the correct height by turning clockwise or anti-clockwise.

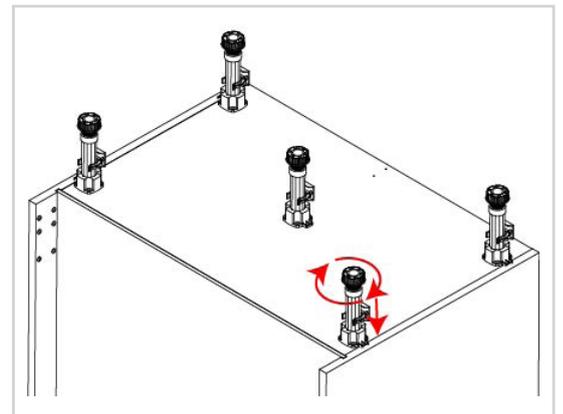

Lifting the unit into place


When lifting the unit into place do **not** tilt as this can damage the legs.

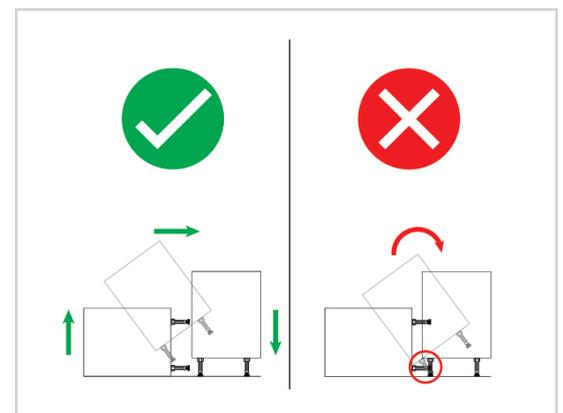

Notching out the end panels (when required)

In order to allow for any horizontal pipework running behind the unit, some units will require the back of unit's side to be notched out.

Create a notch for the horizontal pipes at the back of the end panels using a jigsaw.

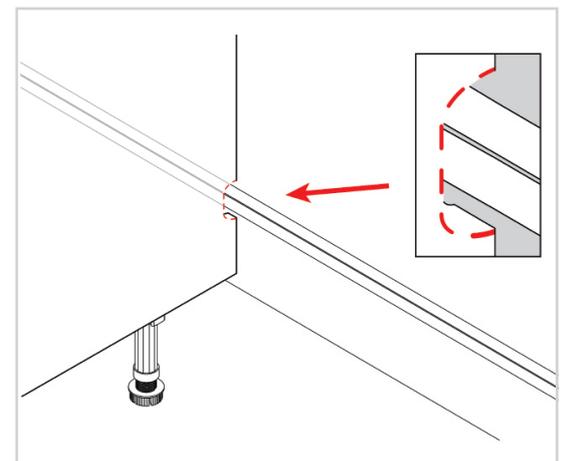


Cutting for the services method 1

Measuring the services

Measure the distance between the centre of the services and the wall markings.



Transfer the markings onto the inside of the unit back panel.

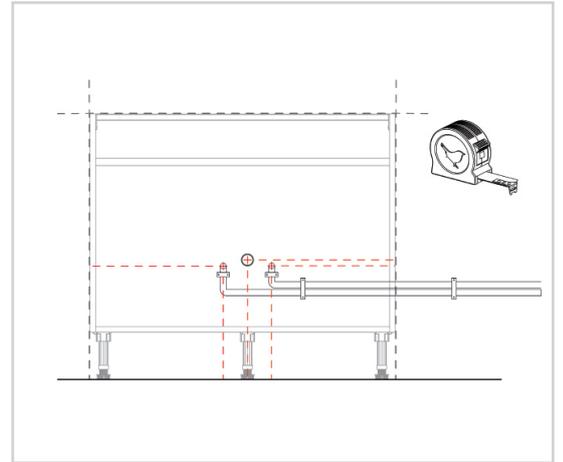

Ensure to double check the measurements by placing the unit in line with the wall markings and check the marking is in the same place as the services.

Drilling the back of the unit

Drill a hole using the correct holesaw for the size of the pipe at the marked locations.

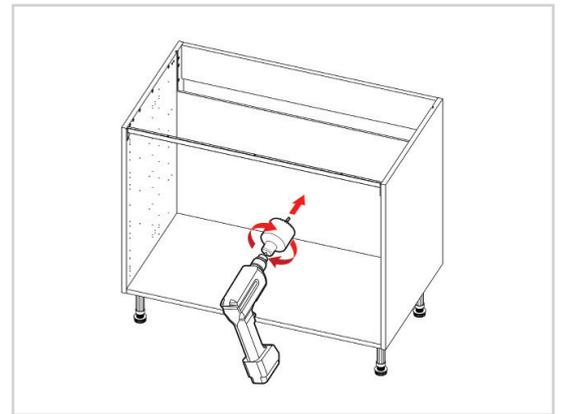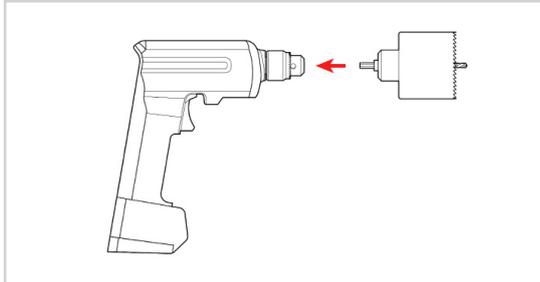


Cutting for the services method 2

Removing the back staples

Using a flat-headed screwdriver, carefully remove the staples located at the bottom of the unit.


Any minor damage to the back panel will be concealed once the unit is positioned against the wall.

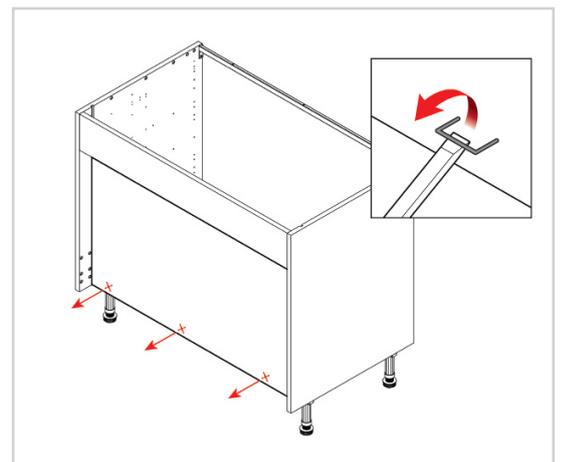

Cutting the groove


Use a stanley knife make a small square cut at the top of the groove on the back of the unit.

This is to allow for the back panel to slide out.

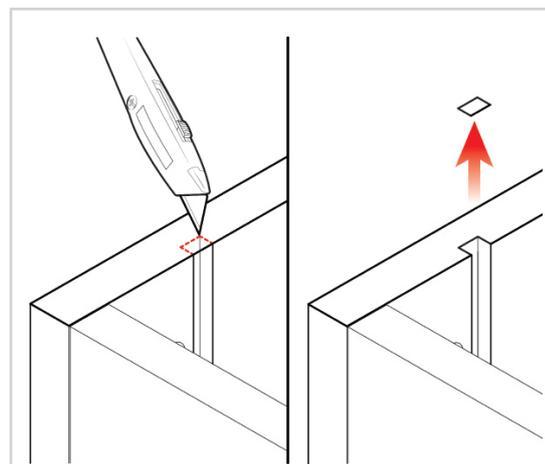

Removing the back panel


Slide the back panel up and out of the unit and place the panel on supported surface.

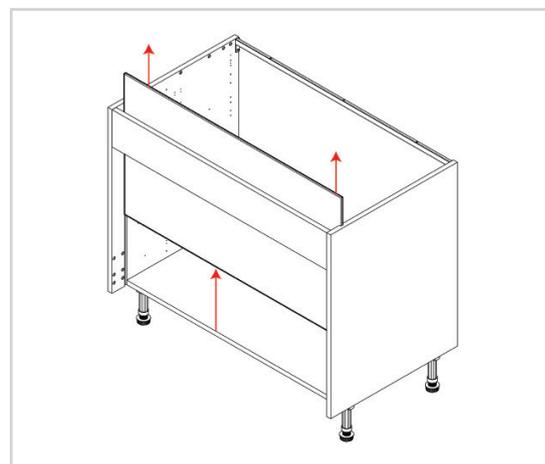

Measuring the services

Measure the distance from the center of the services to the inner side of the unit, then add an additional **2mm** to the measurement.



Transfer the markings onto the inside of the back panel.

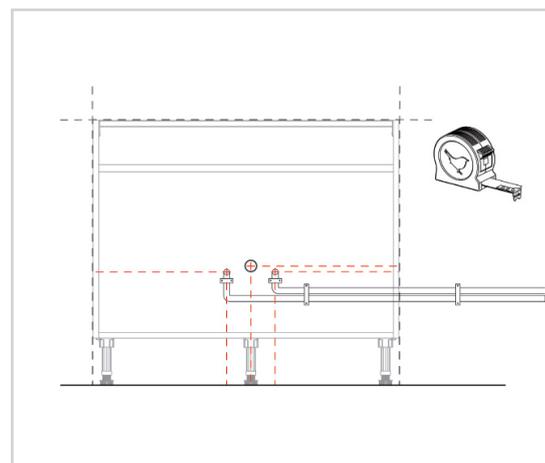

Take time to double check the measurements of the services before drilling.

Drilling the back panel


Make sure the panel is fully supported before starting to drill. Drill a hole using the correct holesaw for the size of the pipe at the marked locations.

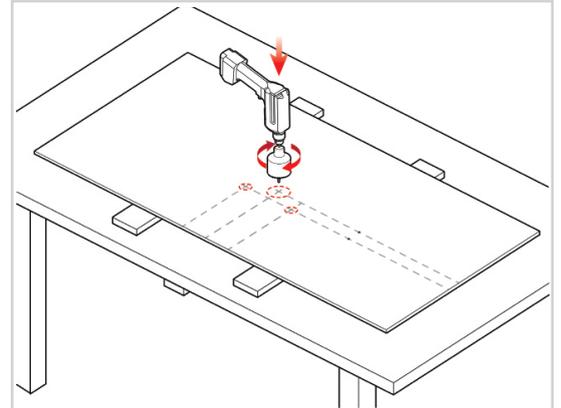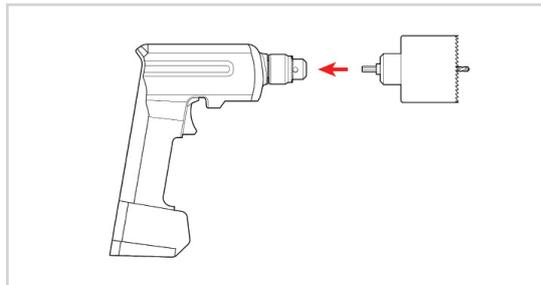

Sliding the back panel into place

After drilling the holes for the services, slide the back panel into the grooves at the rear of the unit.

Once the back panel is in position secure it by using **3 small** tacks along the base panel. Ensure the tacks are placed in different locations than the original staples, to avoid weakening the material.

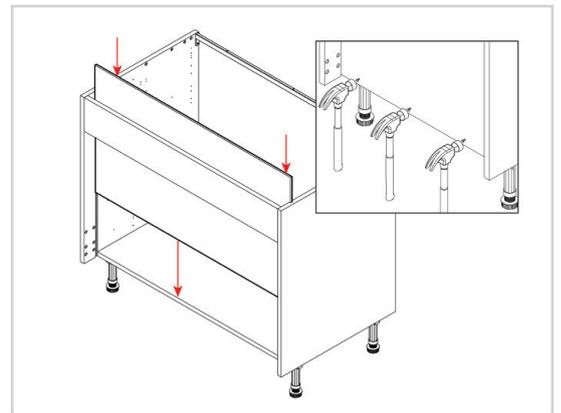


Sliding the unit into place

Slide the unit against the wall and align it with the wall markings and the services.

Use a spirit level to ensure the unit is level from front to back, left to right, and diagonally. Adjust the legs if required.

The leg height can be adjusted by turning the foot of the leg clockwise or anti-clockwise.

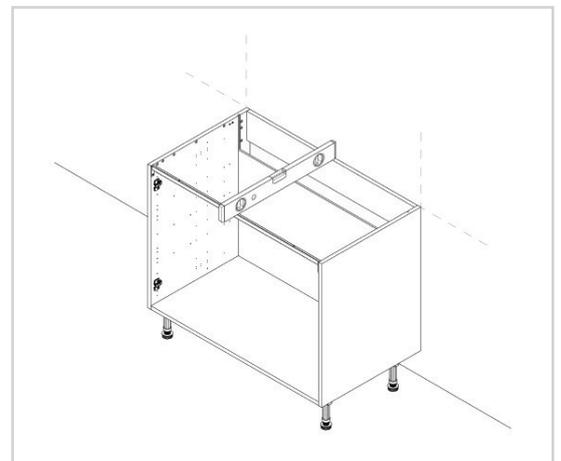


Before drilling into the wall you **MUST** check for any hidden services or pipework within the walls.

Finding the centre point

Find the centre point measurement of the rear top rail and lightly mark this position.

Transfer the measurement onto the wall at the unit markings, which were drawn at the room preparation stage.

This will be the position of the wall fixing.

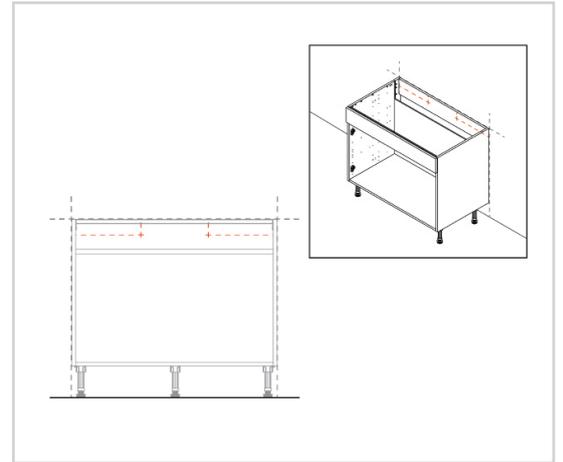


Drilling the unit and wall

Drill **2** holes through both the rear top rail and the wall at the marked locations. The size of the holes will be determined by the size of wall fixing required.

For guidance on the appropriate wall fixing for each wall type, please consult the “**Room Preparation Guide.**”


Place the wall fixing within the holes in the wall.

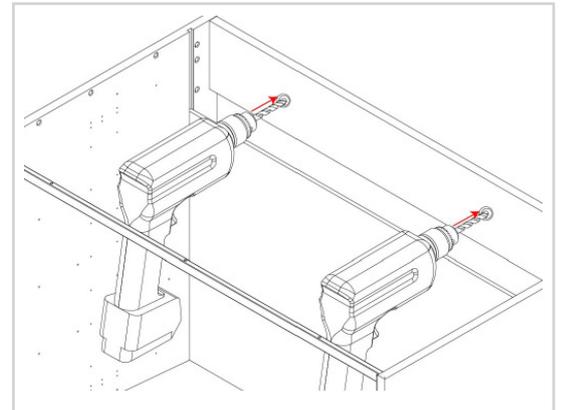

No screws are provided for attaching the unit to the wall.
This is due to variations in wall construction.

Inserting the screws

Insert the screws into the drilled holes and tighten to the wall.

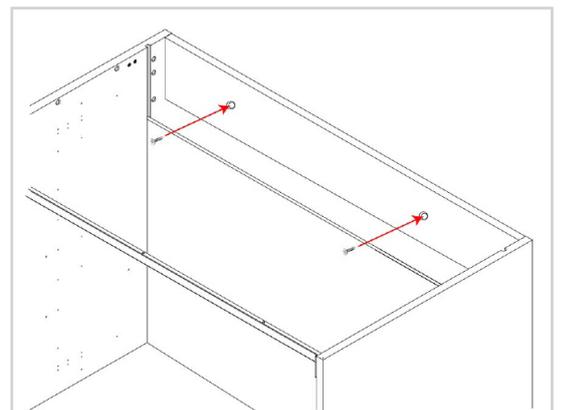


Securing to adjacent units

Clamp together the two units, checking the front edges are level and flush.


Using the screws provided, **1x30mm** screw should be fixed into each corner of the carcass side.

The screws can be concealed by placing them behind the shelf or behind the hinge plates. The cover caps can be used to hide any visible screw heads that remain.

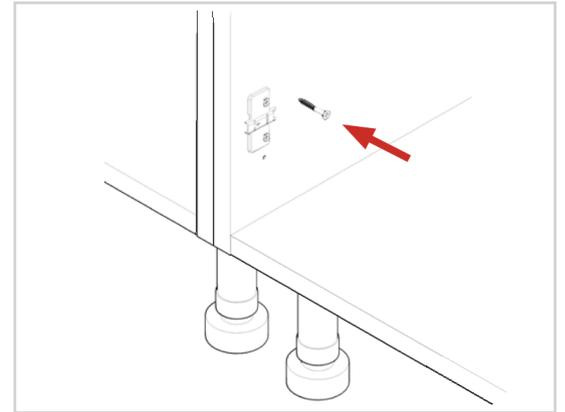


Inserting the shelf liner into position

The shelf liner should be inserted into the bottom of the sink unit ensuring it touches the back panel.

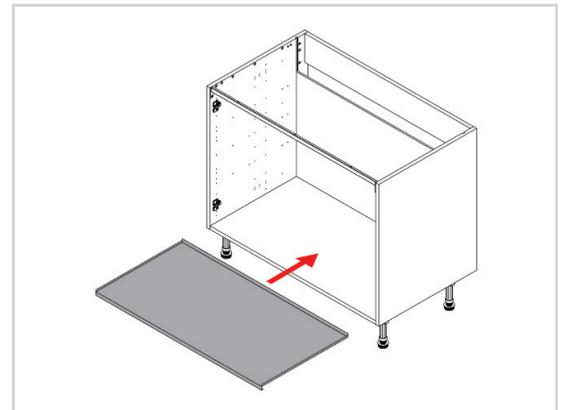


Attaching the frontal

The frontal should be re-attached to the unit by clipping the hinges onto the hinge plates. The bar of the hinge needs to be positioned into the hooks on the hinge plate. Then the rear of the hinge pushed to the hinge plate until it clicks.

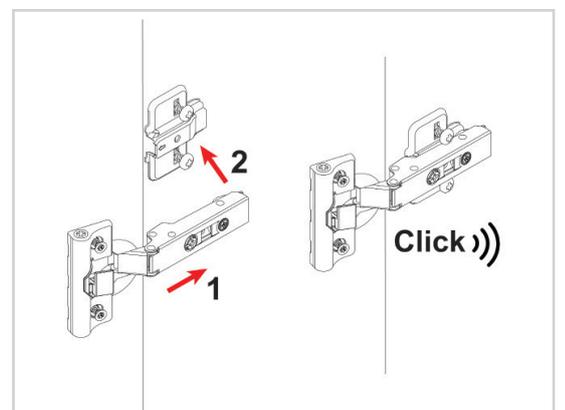


Adding the door buffers

Position **1x** door buffer at the top and bottom corners of the carcass, as illustrated in the image.

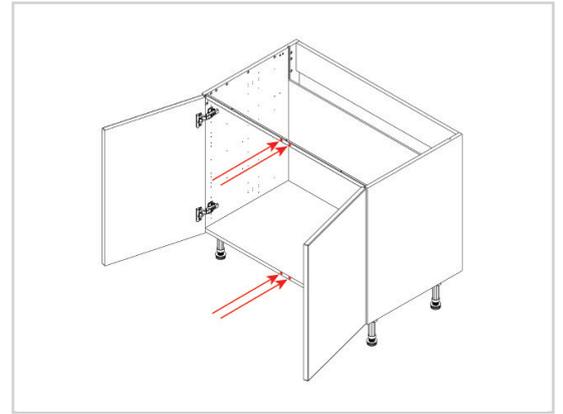

Removing the hinge cover cap

Use a flathead screwdriver to remove the hinge cover cap by inserting it into the slot of the cover cap and twisting.

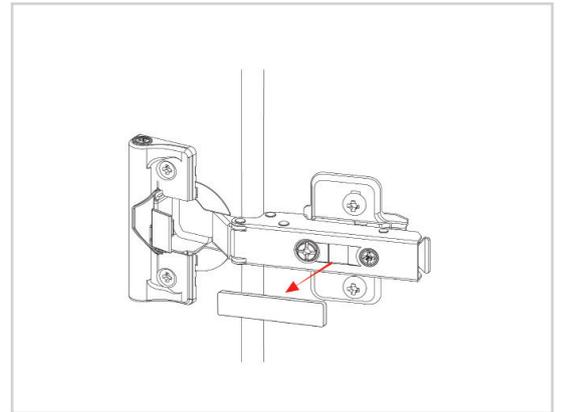


Adjusting the hinge

To adjust the hinges, use a screwdriver as required at points 1 and 2.

Point 1 - Will adjust the frontals left and right.
Point 2 - Will adjust the frontals in and out.

To move the hinges up or down, loosen the screws A and B. Manoeuvre the door, then retighten the screws.

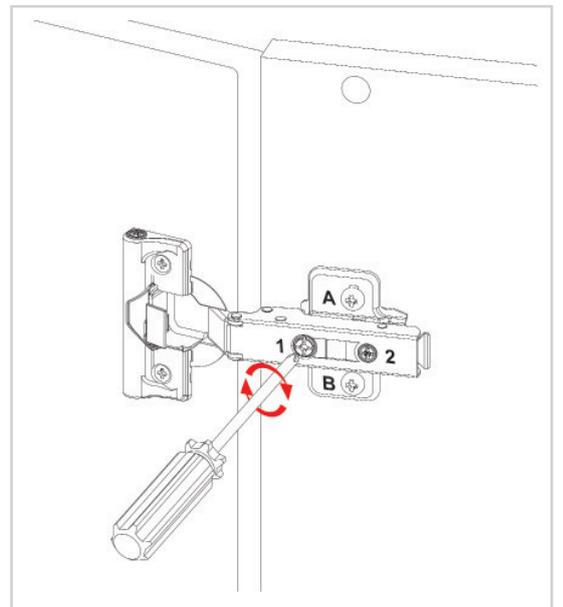


Altering the soft-close

Fit the hinge cover caps to the hinges by pressing down to secure.


Adjust the soft-close to suit (if required).

The soft-close is adjusted by turning the screw at the top of the hinge clockwise or anti-clockwise.

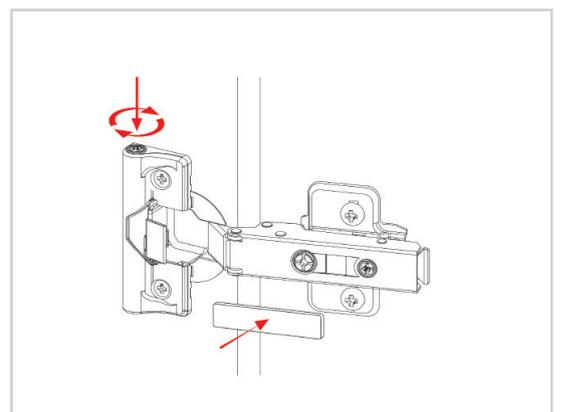

Cleaning the unit

Finally, the unit should be thoroughly cleaned to remove any debris that may have accumulated during the installation.

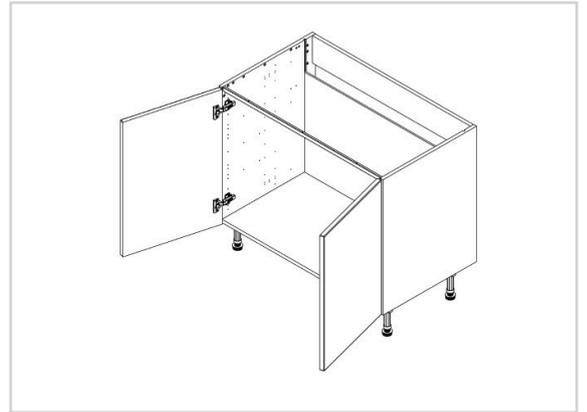

Store the plinth clips and the remaining 15mm screws.
These will be used later when attaching the plinth.

Store the L-brackets.
These will be used later when installing the worktop (laminated or timber).