

Electric chain hoist

EHOIST



Original of the OPERATING INSTRUCTIONS

Store for future use

Manufacturer address

Trading EU Ltd.
Gruckinger Strasse 4
D - 85461 Bockhorn

Tel.: +49 (0) 8123 - 989 0 900

Fax: +49 (0) 8123 - 989 0 904

E-mail: info@tradingeu.de

Web: www.tradingeu.de

Dear customer

The users must read and understand the Instruction manual and clear before operating the hoist.

Operating instructions

Document number:	Electric chain hoist EHOIST
Version:	1.0
Creation date:	10.05.2023
Last change:	10.05.2023
Model:	150,500kg
Year of manufacture:	2023

Customer entries

Inventory no:	
Location:	

Storage

The operating instructions must be kept in the responsible specialist department. They must always be at hand.

Table of contents

1	Safety instructions	1-1
1.1	Basic safety instructions	Fehler! Textmarke nicht definiert.
1.2	Consider work area environment.....	Fehler! Textmarke nicht definiert.
1.3	Guard against electric shock.....	Fehler! Textmarke nicht definiert.
1.4	Keep children away.....	1-1
1.5	Store idle tools	1-1
1.6	Dress properly	1-1
1.7	Do not abuse cord.....	1-1
1.8	Use right tools.....	1-1
1.9	Secure work	1-2
1.10	Do not overreach	1-2
1.11	Maintain tools with care	1-2
1.12	Avoid unintentional starting.....	1-2
1.13	Outdoor use extension cords	1-2
1.14	Stay alert.....	1-2
1.15	Check damaged parts	1-2
1.16	Warning	1-3
1.17	Additional safety rules	1-3
 2	 Use instructions.....	 2-5
2.1	Intended Use	2-5
2.2	Technical data.....	2-5
2.2.1	Unpacking.....	2-6
2.2.2	Checking for adequate voltage at point	2-6
2.2.3	Checking for others	2-6
2.2.4	Operating instructions.....	2-6
2.2.5	Periodic inspection.....	2-7
2.2.6	Hook inspection	2-8
2.2.7	Chain inspection.....	2-8
2.2.8	Lubrication	2-8
2.2.9	Bearing	2-8
2.2.10	Load chain removal/installation	2-9
2.2.11	Technical drawing	2-10
2.2.12	Part list chain hoist.....	2-11

1 Safety instructions

1.1 Basic safety instructions

Keep work area clean. Cluttered areas and benches invite injuries.

1.2 Consider work area environment

Do not expose electric tools to rain. Do not use electric tools in damp or wet locations. Keep work area well lit. Do not use electric tools near flammable liquids or gases.

1.3 Guard against electric shock

Prevent body contact with grounded surfaces, shall be sure the hoist with correct earth connection before applied to operation.

1.4 Keep children away

Do not let visitors contact electric tools or extension cord. All visitors should be kept away from work area.

1.5 Store idle tools

When not in use electric tools should be stored in a dry, high or locked-up place out of reach of children.

1.6 Dress properly

Do not wear loose clothing or jewellery, they can be caught in moving parts, rubber gloves and non-skid footwear are recommended when working outdoors. Wear protective hair covering to contain long hair.

1.7 Do not abuse cord

Never carry electric tool by cord or yank it to disconnect it from wall outlet. Keep cord from heat, oil and sharp edges.

1.8 Use right tools

Do not force small electric tools or attachments to do the job of a heavy duty, it will do a better job and operate more safely at the rate for which it was intended. Do not use electric tools for other than their intended purpose.

1.9 Secure work

Maintain firm footing or be otherwise secured when operating the hoist, use tools to hold the workplace, it is safer and frees both hands to operate electric tool.

1.10 Do not overreach

Keep proper footing and balance at all times.

1.11 Maintain tools with care

Keep electric tools sharp and clean for better and safer performance, follow instructions for lubricating and changing accessories. Inspect electric tools cords periodically and, if damaged, have them repaired by an authorized service facility, inspect extension cords periodically and replace if damaged. Keep handles dry, clean and free from oil and grease.

1.12 Avoid unintentional starting

DO not carry plugged-in electric tool with finger on switch, be sure that the electric tool is switched off before plugging in.

1.13 Outdoor use extension cords

When electric tool is used outdoors, use only extensions cords intended for use outdoors and so marked.

1.14 Stay alert

Watch what are you doing, use common sense. Do not operate electric tool, when you are tired, distracted or under the influence of drugs, alcohol or medication causing diminished control.

1.15 Check damaged parts

Before further use of the electric tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Not operate a damaged, malfunctioning unusually performing hoist.

1.16 Warning

Read and understand the instruction manual completely and clearly, before using the hoist.


Ensure that operator know how the machine works, and how it should be operated. The user shall always work in compliance with the operating instructions. The use of any other accessory or attachment other than recommended in the instruction manual present a risk of personal injury. Have your tool repaired by an expert. This electric appliance must only be carried out by experts, otherwise it may cause considerable danger for user.

1.17 Additional safety rules

1. Not operate the hoist until you have thoroughly read and understood this instructions manual
2. Not lifting more than rated load for the hoist
3. Not use the hoist with twisted, kinked, damaged, or worn load chain
4. Not use the hoist to lift, support, or transport
5. Not operate unless load is centered under hoist,
6. Not attempt to lengthen the load chain or repair damaged load chain
7. protect the hoist is load chain from weld splatter or other damaging contaminants
8. not operate hoist when it is restricted from forming a straight line from hook to hook in the direction of loading
9. not use load chain as a sling, or wrap chain around load
10. not apply the load to the tip of the hook or to the hook latch
11. not apply load unless load chain is properly seated in the chain sprocket
12. not operate beyond the limits of the load chain travel
13. not leave load supported by the hoist unattended unless specific have been taken
14. not operate a hoist unless load slings or other approved single attachments are properly sized and seated in the hook saddle
15. take up slack carefully-make sure load is balanced and load holding action is secure before continuing
16. shut down a hoist that malfunctions or performs unusually and report such malfunction
17. make sure hoist limit switches function properly
18. warn personnel of approaching load
19. check brake function by tensioning the hoist prior to each lift operation
20. avoid swinging the load or hook
21. make sure hook travel is in the same direction as shown on the controls

22. inspect the hoist regularly, replace damaged or worn parts, and keep appropriate records of maintenance
23. not use limit switches as routine operating stops. They are emergency devices only
24. not allow your attention to be diverted from operating the hoist
25. not allow your attention to be subjected to sharp contact with other hoist, structures, or objects through misuse
26. not allowed to use in potentially explosive atmosphere
27. the value of the equivalent sound emission pressure level at the operator is position is lower than 78db
28. Supplying power need: voltage $230V \pm 10\%$, frequency $50Hz \pm 1\%$
29. The hoist is used at relative humidity below 85%, height above sea below 1000 meters
30. The hoist's transportation and storage temperature may be above -25 $^{\circ}$ C, below 55 $^{\circ}$ C. It's highest temperature can not exceed 70 $^{\circ}$ C
31. Be supplied with a 10 A fuse or 10 A over-current circuit-breaker to protect your electric system
32. Do not try to lift a fixed or plugged load
33. Do not lift the load diagonally
34. Avoid excessive jogging (resulting in a short motor shock)

CIRCUIT DIAGRAM

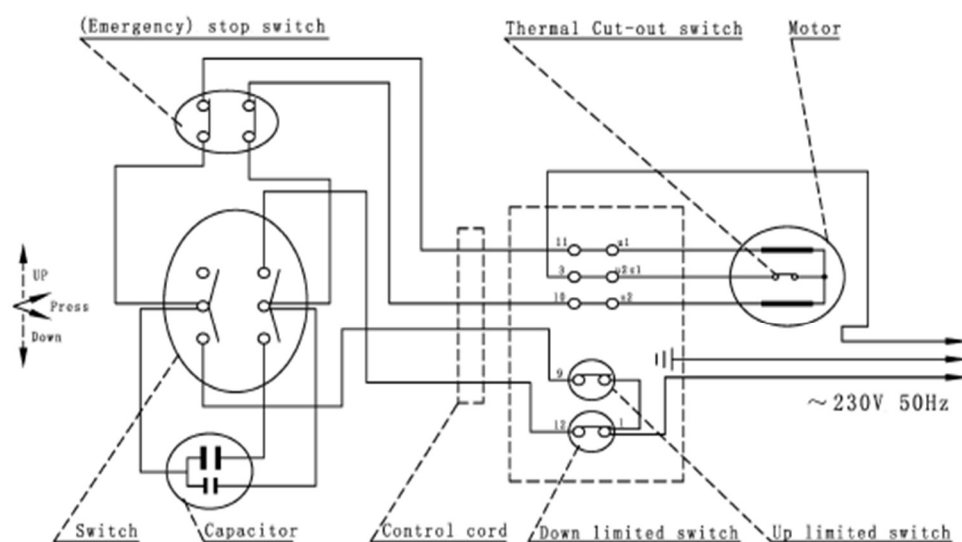


2 Use Instructions

2.1 Intended use

The electric chain hoist promises a improved work condition and high efficiency, with the limit switch devices, the features of compact structure, light weight, easily operation and nice appearance.

Description(FIG 1)

1. subjection hook.
2. hoist
3. chain.
4. Chain stop
5. Hook

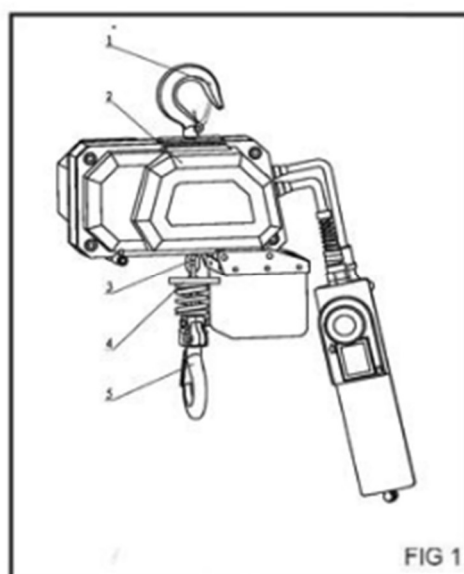

2.2 Technical data

Technical characteristics

model	BDH300	model	BDH300
voltage	230V,50Hz	Input power	410W
Current	1.7A	Rating lifting	300kg
Lifting speed	3m/min	Lifting height	3m
Speed ratio	119:1	Insulating grade	B
Protecting grade	IP54	Chain diameter	5.0mm
Group of mechanisms	M3	Work rate	S3 25%-10min
Cable tensile strength	$\geq 900\text{N/mm}^2$	Net weight	14.3kg

2.2.1 Unpacking

After opening the carton, carefully inspect the hoist frame, cords ,hooks, CHAIN and control station for damage that may have occurred during shipment

Mounting the hoist

Hang the hoist from its intended support. The structure used to support the hoist must have sufficient strength to withstand several times the load imposed. Suspending the hoist from an inadequate may allow the hoist and to fall and cause injured and/or damage.

2.2.2 Checking for adequate voltage at hoist

The hoist must be supplied with adequate electrical power for proper operation and to reduce problems that may result from insufficient power(low voltage),these include:

1. noise hoist operation due to brake and/or contactor chatter
2. Heating of the hoist motor and other internal components as well as heating of wires and connectors in the circuit feeding the hoist
3. Failure of the hoist to lift the load due to motor stalling
4. Slowing of motors connected to the same circuit

2.2.3 Checking for others

After the hoist is suspended from its support and you have made sure the power supply complies with the requirements the hoist is ready for operation

2.2.4 Operating instructions

1. Check if the (emergency) stop switch is pressed. Turn the red stop switch clockwise to engage
2. an overload is indicated when the hoist speed slows down, it raises the load in a jerky manner or it will not lift the load at all. Also, some clutching noise may be heard if the hoist is loaded beyond rated capacity. Should this occur, immediately release the "up" button to stop the operation of the hoist. At this point, the load should be reduced to the rated capacity. when the excessive load is removed, normal hoist operation is automatically restored
3. The hoist is not recommended for use in any application where there is a possibility of adding to an already suspended load to the point of overload. Also if the hoist is used at unusual extremes of ambient temperatures, above 40 C, or below -CC ,changes in lubricant properties may present possibility of damage or injury, and in that conditions the work duty is reduced than normal operating conditions
4. Hoist operation is controlled by depressing the control station push buttons. Depressing the "up" push button will move the load hook toward the hoist; depressing the "down" push button will move the load hook away from the hoist

5. The "up" and "down" buttons are momentary type and the hoist will operate in the selected direction as long as the button is held in the depressed position. release the push button and the hoist will stop
6. When preparing to lift a load, be sure that the attachments to the hook are firmly seated in hook saddle. Avoid off center loading of any kind, especially loading on the point of the hook
7. When lifting, raise the load only enough to clear the floor or support and check to be sure that attachment to the hook and load are firmly seated. Continue lift only after you are assured the load is free of all obstructions
8. Do not use this hoist out of its work duty
9. Stand clear of all loads and avoid moving a load over heads of other heads of other personnel. Warn personnel of your intention to move a load in their area
10. DO not leave the load suspended in the air unattended
11. Permit only qualified personnel to operate unit
12. Do not wrap the load chain around the load and hook on itself as a choker chain
13. Do not allow a load to bear against the hook latch. The latch is to help maintain the hook in position while the chain is slack before taking up the slack chain
14. Take up a slack load chain carefully and start load easily to avoid shock and jerking of hoist chain. If there is any evidence of overloading, immediately lower the load and remove the excess load
15. When the push button is pressed, the machine will stop

2.2.5 Periodic inspection

To maintain continuous and satisfactory operation, a regular inspection procedure must be initiated so that worn or damaged parts can be replaced before they become unsafe, the intervals of inspection must be determined by the individual application and are based upon the type of service to which the hoist will be subjected. Periodic inspections are to be performed semi-annually and should include the following:

1. external evidence of loose screws.
2. external evidence of worn, corroded, cracked or distorted hook fixing block, gears, bearings, chain stop ball and hook retainer.
3. external evidence of damage or excessive wear of the lift-wheel. Widening and deepening of pockets may cause chain to lift-up in the pockets and cause binding between lift-wheel and chain guide or between lower sheave and hook block. Check chain guide for wear or burring where the chain enters the hoist. severely worn or damaged parts should be replaced.
4. external evidence of excessive wearing of brake parts. Check the control station push buttons to make sure they operate freely and spring back when released.
5. check power cord, control cord and control station for damaged insulation.



6. check the chain pin or dead end pin and chain stop for wear and cracks. Any deficiencies noted must be corrected before the hoist is returned to service

2.2.6 Hook inspection

Hook damaged for chemicals, deformations or cracks or than have more than a 10° , twist from the plane of the unbent hook or excessive throat opening indicates abuse or overloading of the unit. Check to make sure that the latch is not damaged or bent and that it operates properly with sufficient spring pressure to keep the latch tightly against the lip of the hook and allow the latch to spring back to the tip when released. If the latch does not operate properly, it should be replaced.

2.2.7 Chain inspection

Nicks, gouges, twisted links, weld spatter, corrosion pits, striations, cracks in weld areas, wear and stretching. Chain with any one of these defects must be replaced. Lubricate the chain using 3#calcium-based grease after 200 per cycles. Life of chain is 50000cycles. Slack the portion of the chain that normally passed over the lift-wheel.

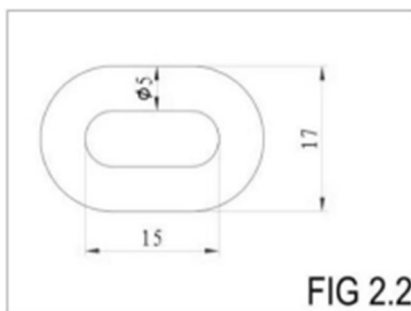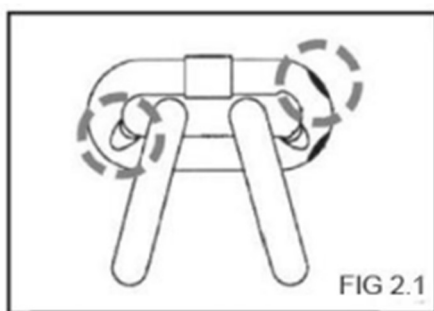

Examine the interlink area for the point of maximum wear. Measure and record the stock diameter at this point of the link. Then measure stock diameter in the same area on a link that does not pass over the lift wheel (use the link adjacent to the loose end link for this purpose). Compare these two measurements. If the stock diameter of the worn link is 0.254 mm (or more). Less than the stock diameter of the unworn link, the chain must be replaced. The chain length is 3 meter and it has 200 Knots. FIG 2.2 is specific dimensions of the chain.

2.2.8 Lubrication


The gears are packed at assembly with grease and should not need to be renewed unless the gears have been removed from the housing and degreased.

2.2.9 Bearing


Rotor bearing are pre-lubricated and require no lubrication. Needle bearings are packed at assembly with grease and should not to be relubricated. However, if the housings, lift-wheel or sheave wheel have been degreased, these bearing should be greased using lithium grease.

2.2.10 Load chain removal/installation (FIG3&FIG4&FIG5)


1. remove the chain bag(FIG 3)
2. remove the hook lock(FIG 4). Depress "up" button and run chain out of the hoist

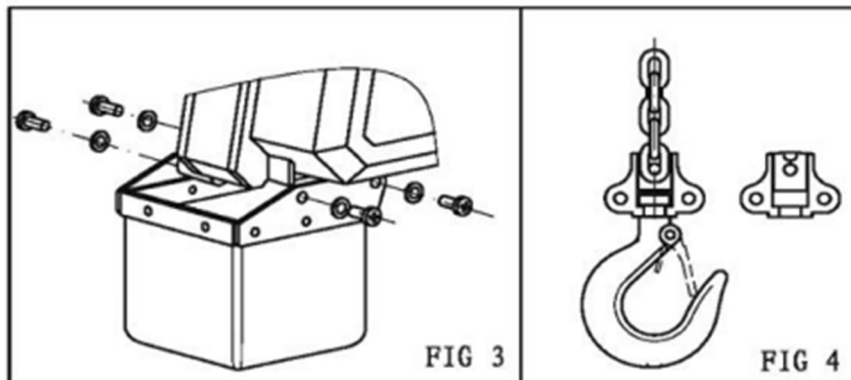

3. Jog the "down" push button while pulling on the new chain until the old chain comes out of the hoist.
4. Attach the hook block to the new chain.
5. Remove the chain stop ball from the old chain (FIG5) and attach it to the new chain by reusing the chain pin.

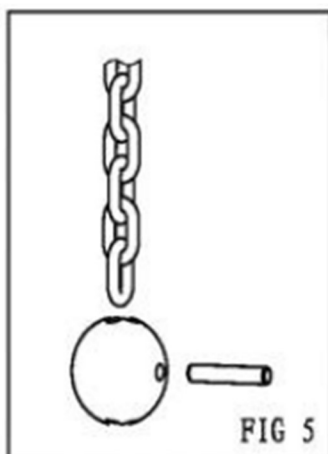

2.2.11 Technical drawing

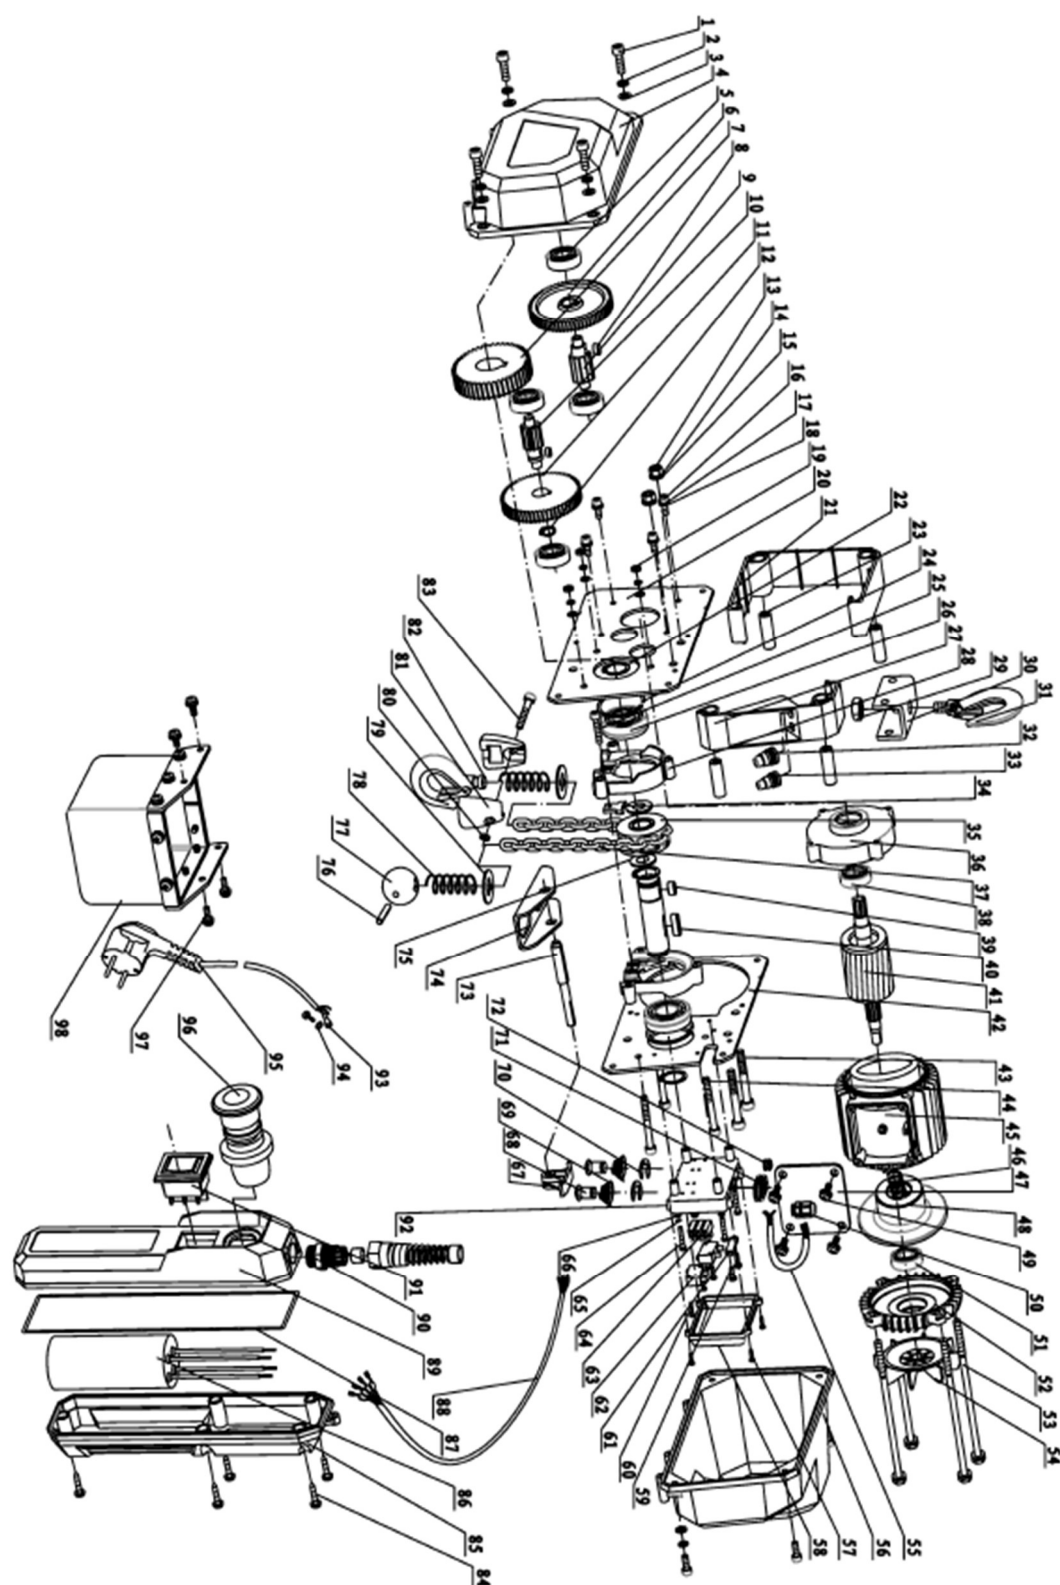

2.2.12 Part list of chain hoist

Part list of chain hoist BDH300

No.	Part name	Qty.	No.	Part name	Qty.
1	Hexagon socket head cap screws	8	50	Cord clip	1
2	Spring washers	11	51	Bearing	1
3	Plain washers	11	52	Motor cover	1
4	Gear box	1	53	Assembly of Hex head bolts	4
5	Bearing	4	54	Fan blade	1
6	Second stage gear	1	55	3 cord	1
7	Third stage gear	1	56	Motor housing	1
8	Flat pin	2	57	Cross recessed pan head tapping screws	4
9	Second middle shaft	1	58	Connection box	1
10	First middle shaft	1	59	Cross recessed pan head tapping screws	4
11	First stage gear	1	60	Cross recessed pan head tapping screws	5
12	Circlips for shaft	1	61	Clamp plate	1
13	Hexagon thin nuts	2	62	Limit switch	2
14	Spring washers	2	63	Terminal block	1
15	Plain washers	2	64	Cross recessed pan head screws	4
16	Hexagon socket head cap screws	4	65	Spring washers	4
17	Spring washers	4	66	Plain washers	4
18	Plain washers	4	67	Limit head	1
19	Hexagon thin nuts	3	68	Limit shaft	2
20	Plate	1	69	Limit switch spring	2
21	Right cover	1	70	"E" rings	2
22	Circlips for shaft	3	71	Limit shaft seal	1
23	Shoring	4	72	Ground wire sheath	1
24	Circlips for shaft	2	73	Limit lever shaft	1
25	Hexagon socket head cap screws	1	74	Limit lever	1
26	Bearing	2	75	Plain washers	2
27	Left cover	1	76	Spring-type straight pins	1
28	Chain shelf	2	77	Chain fixed block	1
29	Hexagon thin nuts	1	78	spring buffer	2
30	Hook base	1	79	Gasket buffer	2
31	Hook	1	80	Prevailing torque type hexagon nut	1
32	Big sheath	1	81	Hook block	2
33	Small sheath	1	82	Hook	1
34	Chain baffle	1	83	Hexagon socket head cap screws	1
35	Chain wheel	1	84	Cross recessed pan head tapping screws	7
36	Front cover	1	85	Controlling handle (base)	1
37	Chain	1	86	Capacitor	1
38	Bearing	1	87	Handle sealed loop	1
39	Flat pin	1	88	Control cord	1
40	Flat pin	1	89	Controlling handle (cover)	1
41	Rotor	1	90	sheath	1
42	Motor plate	1	91	positive and negative switch	1
43	Hexagon socket head cap screws	2	92	Base of connection box	1
44	Hexagon socket head cap screws	4	93	grouding sheet	1
45	Stator	1	94	lock washer sex ternal teeth	1
46	Brake spring	1	95	plug	1
47	Motor wire cover	1	96	Emergency stop switch	1
48	Brake assembly	1	97	Cross recessed pan head screws	4
49	Cross recessed pan head screws	5	98	Chain bag assembly	1