

# Squire®

*Stainless Steel Indirect Water Heater*

## Installation & Operation Manual

Models: SDT/SET065 - 119

**CAUTION:** The heat transfer medium must be water or other nontoxic fluid having a toxicity rating or class of 1, as listed in Clinical Toxicology of Commercial Products, 5th edition.

The pressure of the heat transfer medium must be limited to a maximum of 30 PSIG by an approved safety or relief valve.



SDT

Solar Dual Coil Tank



SET

Solar Electric Tank



### **WARNING**

This manual must only be used by a qualified heating installer / service technician. Read all instructions before installing. Perform steps in the order given. Failure to comply could result in severe personal injury, death, or substantial property damage.

Save this manual for future reference.

# Contents

<b>HAZARD DEFINITIONS</b> .....	2	Install Drain Valve .....	12
<b>PLEASE READ BEFORE PROCEEDING</b> .....	3	Temperature and Pressure (T&P) Relief Valve .....	12
<b>1. GENERAL INFORMATION</b>		Table 4A - Minimum Relief Valve (AGA Rating) ...	13
Operating Restrictions .....	4	<b>5. WIRING</b>	
Single-Wall Heat Exchanger .....	4	Electrical Connection and Thermostat Setup . . . . .	16
<b>2. PRE-INSTALLATION</b>		Indirect Water Heater Sensor Setup (Knight Boiler) .....	18
Locating the Tank .....	5	Install and Connect Tank Sensor .....	18
Recommended Clearances .....	5	Indirect Water Heater Controlled Using Aquastat and Zone Circulator .....	19
<b>3. BOILER SIDE PIPING (SDT MODELS)</b>		<b>6. START-UP AND CHECK-OUT</b> .....	20
Zone with Circulator to Aquastat .....	6	<b>7. MAINTENANCE</b>	
Zone with Valve to Aquastat .....	6	Maintenance Schedule .....	21
DHW Prioritization .....	6	To Fill the Water Heater .....	21
Multiple Tank Connections (Boiler Side) .....	6	To Drain the Water Heater .....	21
Table 3A - 3B - Pressure Drop Charts .....	7	<b>8. PERFORMANCE DATA</b>	
Table 3C - Pressure Drop Values .....	7	Performance Data Charts .....	22-24
Piping Diagrams .....	8-11	<b>9. High Output Piping</b>	
<b>4. DOMESTIC SIDE (TANK) PIPING</b>		High Domestic Hot Water Usage .....	25
Basic Domestic Piping .....	11	Series Piping .....	25-26
Multiple Tank Domestic Water Piping .....	11	Parallel Piping .....	25&27
Domestic Water Piping for Distant Fixtures .....	11	<b>REVISION NOTES</b> .....	Back Cover
Anti-scald Valves (Mixing Valves) .....	12		

## Hazard definitions

The following defined terms are used throughout this manual to bring attention to the presence of hazards of various risk levels or to important information concerning the life of the product.

### **DANGER**

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

### **WARNING**

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

### **CAUTION**

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

### **CAUTION**

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

### **NOTICE**

NOTICE indicates special instructions on installation, operation, or maintenance that are important but not related to personal injury or property damage.

## Please read before proceeding

### ⚠ WARNING

**Installer** – Read all instructions before installing. Perform steps in the order given.

Have this indirect water heater serviced/inspected by a qualified service technician, at least annually.

Failure to comply with the above could result in severe personal injury, death or substantial property damage.

### NOTICE

When calling or writing about the appliance – Please have the indirect water heater model and serial number from the indirect water heater rating plate.

Consider piping and installation when determining appliance location.

Any claims for damage or shortage in shipment must be filed immediately against the transportation company by the consignee.

Factory warranty (shipped with appliance) does not apply to appliances improperly installed or improperly operated.

### ⚠ WARNING

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

This appliance **MUST NOT** be installed in any location where gasoline or flammable vapors are likely to be present.

#### WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electric switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

### ⚠ WARNING

Failure to adhere to the guidelines on this page can result in severe personal injury, death, or substantial property damage.

#### When servicing the indirect water heater –

- To avoid severe burns, allow the appliance to cool before performing maintenance.

#### Indirect water heater operation –

- Should overheating occur or gas supply fail to shut off, do not turn off or disconnect electrical supply to circulator. Instead, shut off the gas supply at a location external to the appliance.
- Do not use this appliance if any part has been under water. The possible damage to a flooded appliance can be extensive and present numerous safety hazards. Any appliance that has been under water must be replaced.

The following chart details the relationship of water temperature and time with regard to scald injury and may be used as a guide in determining the safest water temperature for your applications.

#### APPROXIMATE TIME / TEMPERATURE RELATIONSHIPS IN SCALDS

120°F	More than 5 minutes
125°F	1 1/2 to 2 minutes
130°F	About 30 seconds
135°F	About 10 seconds
140°F	Less than 5 seconds
145°F	Less than 3 seconds
150°F	About 1 1/2 seconds
155°F	About 1 second



#### Hot Water Can Scald!

- Water heated to temperatures for clothes washing, dish washing, and other sanitizing needs can scald and cause permanent injury.
- Children, elderly, and infirm or physically handicapped persons are more likely to be permanently injured by hot water. Never leave them unattended in a bathtub or shower. Never allow small children to use a hot water tap or draw their own bath.
- If anyone using hot water in the building fits the above description, or if state laws or local codes require certain water temperatures at hot water taps, you must take special precautions:
- Use lowest possible temperature setting.
- Install some type of tempering device, such as an automatic mixing valve, at hot water tap or water heater. Automatic mixing valve must be selected and installed according to valve manufacturer's recommendations and instructions.
- Water passing out of drain valves may be extremely hot. To avoid injury:
- Make sure all connections are tight.
- Direct water flow away from any person.

Protection Must Be Taken Against Excessive Temperature and Pressure!

--Installation of a Temperature & Pressure (T&P) relief valve is required.

# 1 General Information

The Lochinvar SDT/SET series indirect water heater (FIG. 1-1) is designed to generate domestic hot water in conjunction with a solar panel using forced circulation with a backup heat source. This indirect water heater consists of a 316L Stainless Steel tank in which a smooth 316L stainless steel coil is located (Table 1A). Solar heating fluid is pumped through the coil and heats the water in the tank. If the solar panel cannot produce enough heat, the backup source should supply hot water. This tank is not intended for use in pool heating applications or for heating any fluid other than water. It is also not intended for use in gravity hot water heating systems.

## Operating Restrictions:

- Maximum domestic hot water temperature is 194°F.
- Maximum boiler water temperature is 210°F.
- Maximum working pressure for the vessel tank is 150 psig.

Table 1A Component Materials	
Component	Material
Tank	316L Steel Stainless Steel
Coil	316L Stainless Steel
Insulation	Polyurethane
Jacket	Polypropylene / ABS

## Single-Wall Heat Exchanger


### Uniform Plumbing Code

Single-wall heat exchangers are permitted if they satisfy all of the following requirements --

1. The heat transfer medium is potable water or contains only substances which are recognized as safe by the U.S. Food and Drug Administration.
2. The pressure of the heat transfer medium is maintained less than the normal minimum operating pressure of the potable water system.
3. The equipment is permanently labeled to indicate that only additives recognized as safe by the FDA shall be used in the heat transfer medium.

Other heat exchanger designs may be permitted where approved by the Administrative Authority.

**Figure 1-1 Lochinvar SDT and SET Series Indirect Water Heaters**

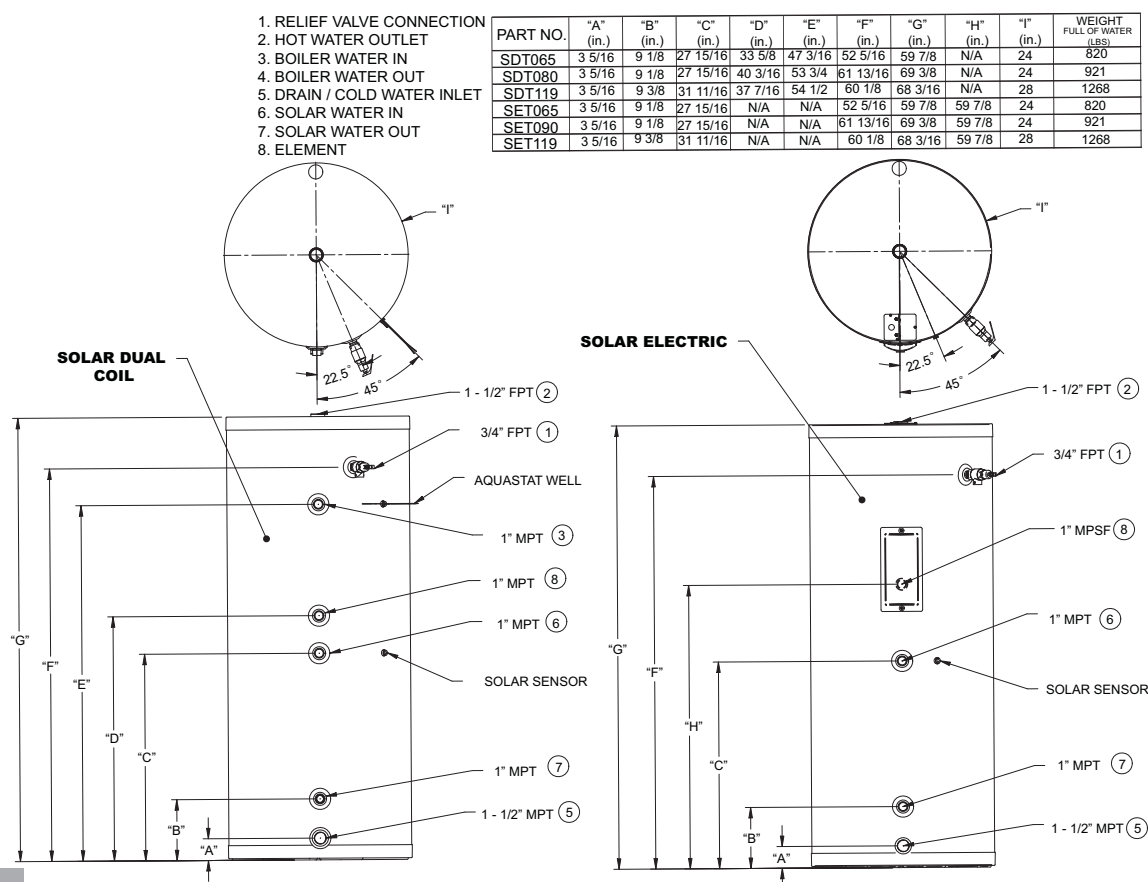

## 2 Pre-installation

1. The installation must conform to the instructions in this manual and all applicable local, state, provincial, and national codes, laws, regulations, and ordinances. Installations in Canada must conform to B149.2 Installation Code.
2. Be certain the domestic water supply to the tank has physical and chemical characteristics that fall within the limits shown in Table 2A. Where questions exist as to the composition of the water on the job, a qualified water treatment expert should be consulted.


### CAUTION

Water with characteristics outside the limits shown in Table 2A may severely shorten the life of the tank due to corrosion. Damage to tanks in such cases is not covered under warranty.

3. Read and understand all installation requirements in this manual.

Table 2A Water Chemistry Requirements		
Water used in the tank must have characteristics falling within the following limits:		
Characteristic	Min.	Max.
Ph	6.0	8.0
Chloride (PPM)	--	80

**Figure 2-1** Element Cover Clearances

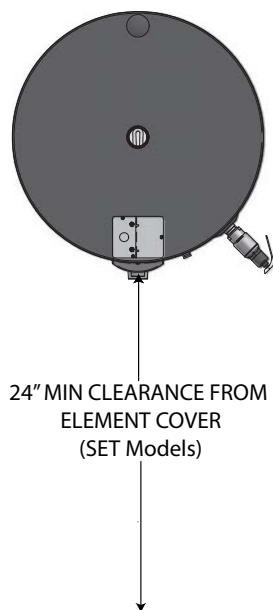

## Locating the Tank

1. Choose a location for your water heater centralized to the piping system. You must also locate the SDT/SET water heater where it will not be exposed to freezing temperatures. Additionally, you will need to place the water heater so that the controls, drain, and inlet/outlets are easily accessible. This appliance must not be installed outdoors, as it is certified as an indoor appliance, and must also be kept vertical on a level surface.
2. Keep distance between boiler and water heater to a minimum to:
  - a. reduce piping heat loss
  - b. provide minimal friction loss
3. Figure 1-1 on page 4 shows the weights of all the tanks filled with water. Make sure that the location chosen for the tank is capable of supporting it.

### CAUTION

This appliance must be placed where leakage from the relief valve, leakage from the related piping, or leakage from the tank or connections, will not result in damage to the surrounding areas, or to the lower floors of the building. A water heater should always be located in an area with a floor drain or installed in a drain pan suitable for water heaters. Lochinvar shall not be held liable for any such water damage.

4. The tank may be located some distance from the boiler provided the pump is designed to provide the flow called for in Table 3B (page 7)- *Pressure Drop Values*, through the coil. The further the tank is from the boiler, the longer the response of the boiler will be to a call from the tank zone. Insulate piping between the boiler and the tank.

### WARNING

Failure to properly support the tank could result in property damage or personal injury.

## Recommended Clearances

The installation location must provide adequate clearances for servicing and proper operation of the water heater. A 12 inch vertical clearance is recommended from the top of the water heater. A zero clearance is allowed for the sides of the water heater. However, boiler, electrical, and servicing clearances must be figured when locating the water heater.

### Minimum Clearance to the Element Cover

See FIG 2-1. Clearances must be a minimum of 24 inches to allow for element removal and replacement on SET model.

### 3 Boiler Side Piping (SDT models)

Figures 3-1 thru 3-4 show typical boiler side piping for several common situations. Regardless of which system is used it is imperative that the flow rates called for in Table 3C are developed through the coil. This requires properly sized piping and a properly sized pump.

The systems shown in FIG's 3-1 thru 3-4 are described below:

#### Zone with Circulator to Aquastat

This system is like the circulator zone system on a straight heat job except that one of the zones goes to the tank instead of radiation. As on any circulator zone system check valves should be installed in each zone to prevent unwanted circulation through zones which are not calling for heat. Figure 3-1 on page 8 illustrates typical circulator zone piping.

#### Zone with Valve to Aquastat

As with the circulator zone system, this system is just like a standard heating zone system except that one of the zones is connected to the tank coil as shown in FIG. 3-2 on page 9. The system circulator must be large enough to move boiler water through the coil regardless of the flow rate required through the heating zones.

#### DHW Prioritization

This piping system is designed to provide direct hot water priority over the other zones in the heating system. When there is a Domestic Hot Water (DHW) call for heat, the Knight control will shut off the boiler circulator and activate the domestic hot water circulator. Once the DHW demand is satisfied, the boiler circulator will be readjusted as demand requires. The circulator must be large enough to move the boiler water through the coil in the tank, and it must meet the minimum boiler flow requirements. The recommended piping for a DHW priority system is depicted in FIG. 3-3 on page 10.

#### Multiple Tank Connections (Boiler Side)


Multiple tank installations must be done in the "reverse-return" manner. The reason for this is to create the same pressure drop (and therefore, the same flow) through the coil of each tank. The boiler manifold piping must be sized so that each coil has the flow rate called for in Table 3B.

Because the pressure drop through tank coils varies from size to size, it is hard to predict the flow rate that will be developed through each coil when two tanks of different sizes are placed in the same manifold. For this reason it is best not to mix tanks of different sizes in the same zone if their recovery is critical.

### 3 Boiler Side Piping (SDT models) *(continued)*


**Table 3A** Pressure Drop Chart SDT/SET065-080

**Table 3A**  
Pressure Drop Chart SDT/SET065-080

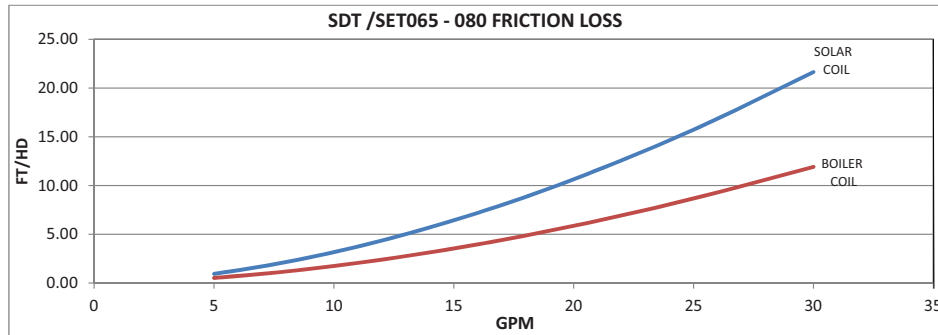

**Table 3B** Pressure Drop Chart SDT/SET119

**Table 3B**  
Pressure Drop Chart SDT/SET119

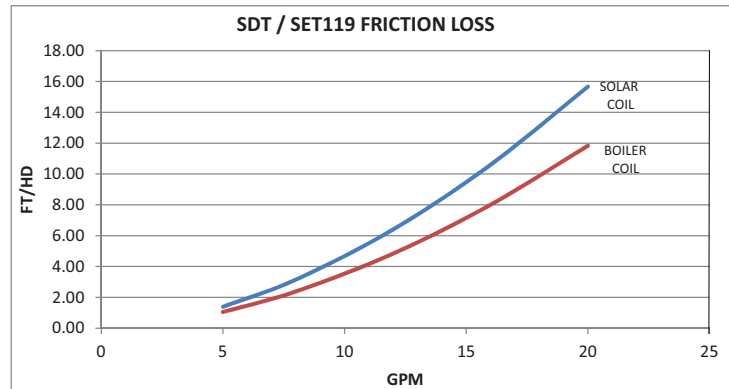


**Table 3C** Pressure Drop Values SDT/SET065-119

Table 3C Pressure Drop Values																			
MODEL	COIL CONN. (IN)	COIL LENGTH (FT)	SQ FT SURFACE AREA	PRESSURE DROP SOLAR COIL (FT / HD)							COIL LENGTH (FT)	SQ FT SURFACE AREA	PRESSURE DROP BOILER COIL (FT / HD)						
				5 GPM	8 GPM	12 GPM	16 GPM	20 GPM	25 GPM	30 GPM			5 GPM	8 GPM	12 GPM	16 GPM	20 GPM	25 GPM	30 GPM
SDT065	1	41.5	13.5	0.94	2.14	4.35	7.2	10.64	15.72	21.63	28	9.2	0.52	1.18	2.4	3.97	5.86	8.66	11.92
SDT080	1	41.5	13.5	0.94	2.14	4.35	7.2	10.64	15.72	21.63	28	9.2	0.52	1.18	2.4	3.97	5.86	8.66	11.92
SDT119	1	67.3	22	1.38	3.15	6.41	10.6	15.66	23.14	31.84	48.5	16	1.05	2.38	4.84	8.01	11.83	17.48	24.05
SET065	1	41.5	13.5	0.94	2.14	4.35	7.2	10.64	15.72	21.63									
SET080	1	41.5	13.5	0.94	2.14	4.35	7.2	10.64	15.72	21.63									
SET119	1	67.3	22	1.38	3.15	6.41	10.6	15.66	23.14	31.84									



### 3 Boiler Side Piping (SDT models)

**Figure 3-1** Piping Diagram Zoned with Circulators

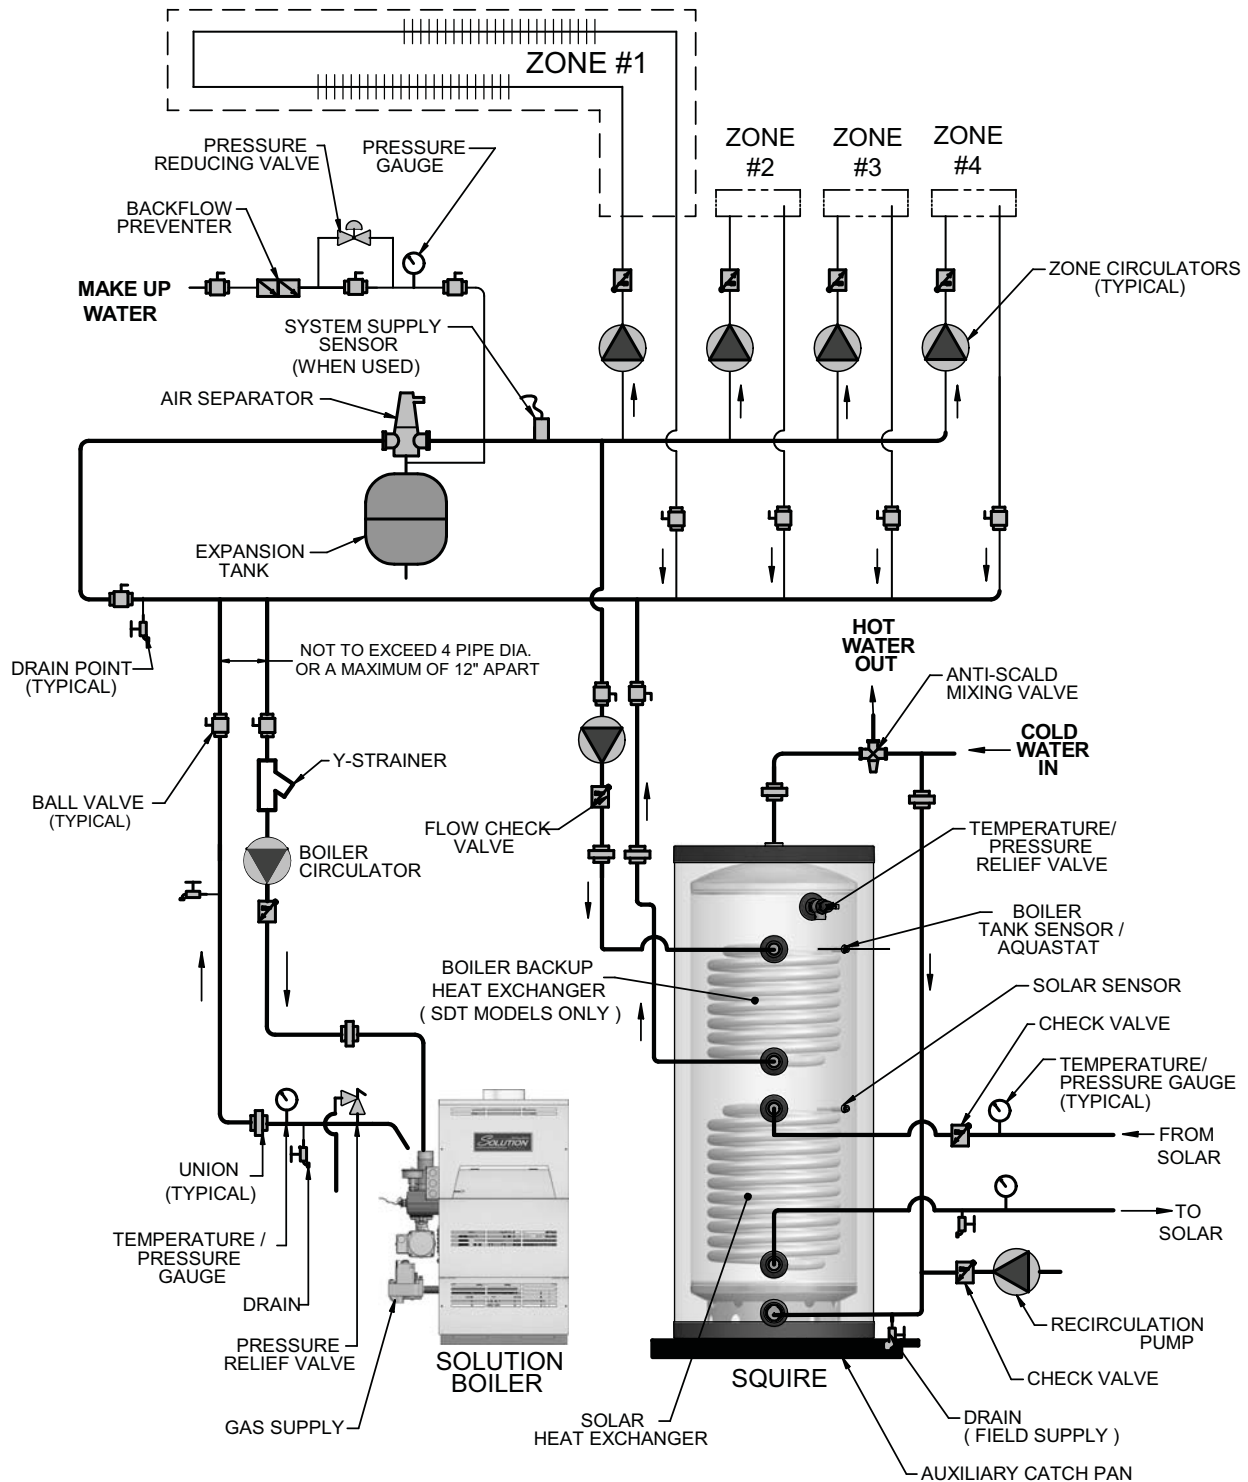

**NOTICE**

Please note that these illustrations are meant to show system piping concept only, the installer is responsible for all equipment and detailing required by local codes.


**NOTICE**

Please note that the installer is responsible for ensuring DHW prioritization when piped as a zone.



### 3 Boiler Side Piping (SDT models) *(continued)*

**Figure 3-2** Piping Diagram Zoned with Valves

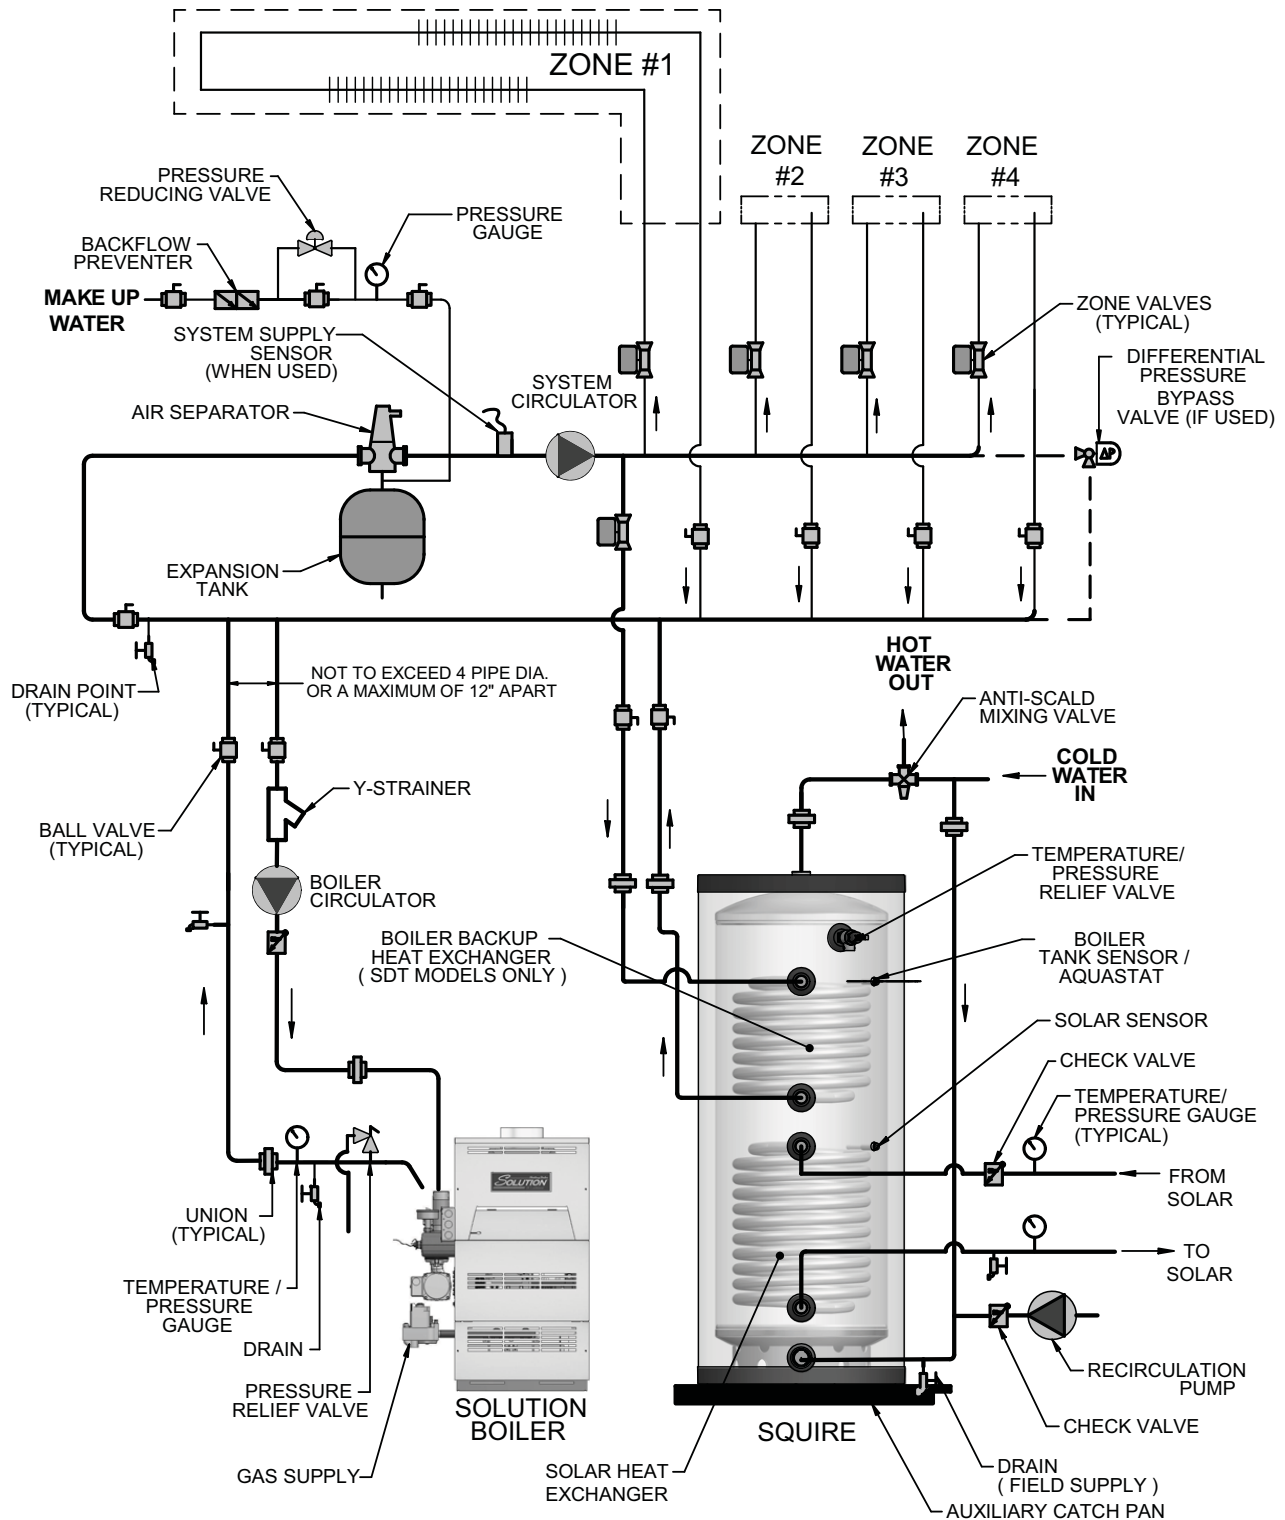

**NOTICE**


Please note that these illustrations are meant to show system piping concept only, the installer is responsible for all equipment and detailing required by local codes.

**NOTICE**

Please note that the installer is responsible for ensuring DHW prioritization when piped as a zone.

### 3 Boiler Side Piping (SDT models)

**Figure 3-3** Knight Boiler Primary / Secondary Piping

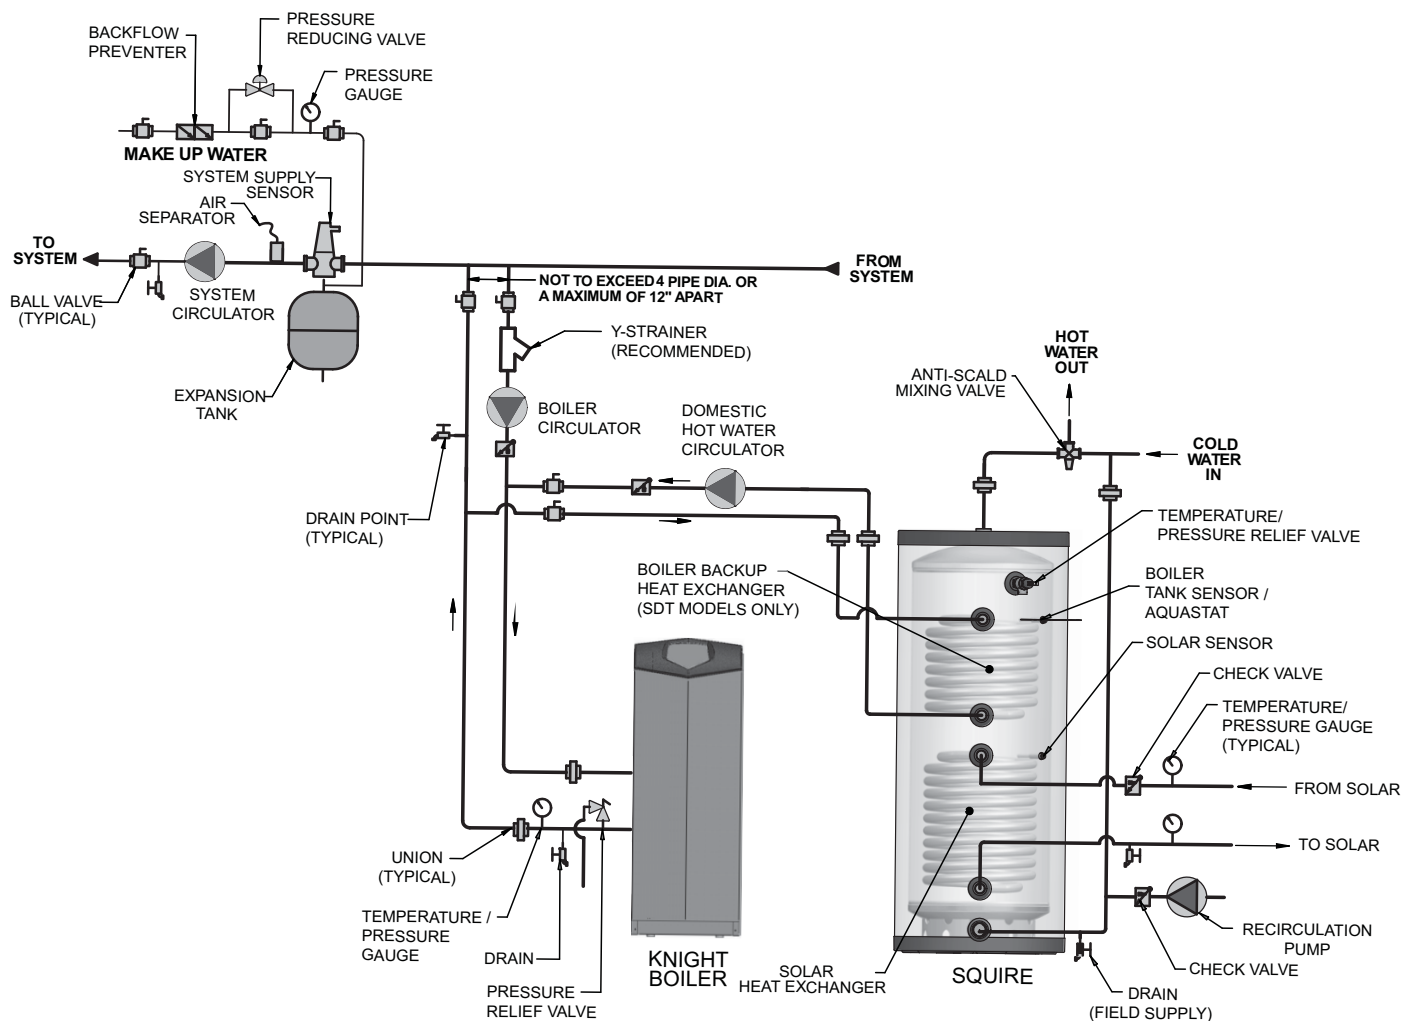


**NOTICE**

Please note that these illustrations are meant to show system piping concept only, the installer is responsible for all equipment and detailing required by local codes.

### 3 Boiler Side Piping (SDT models) *(continued)*

**Figure 3-4 Multiple Tank Connections**

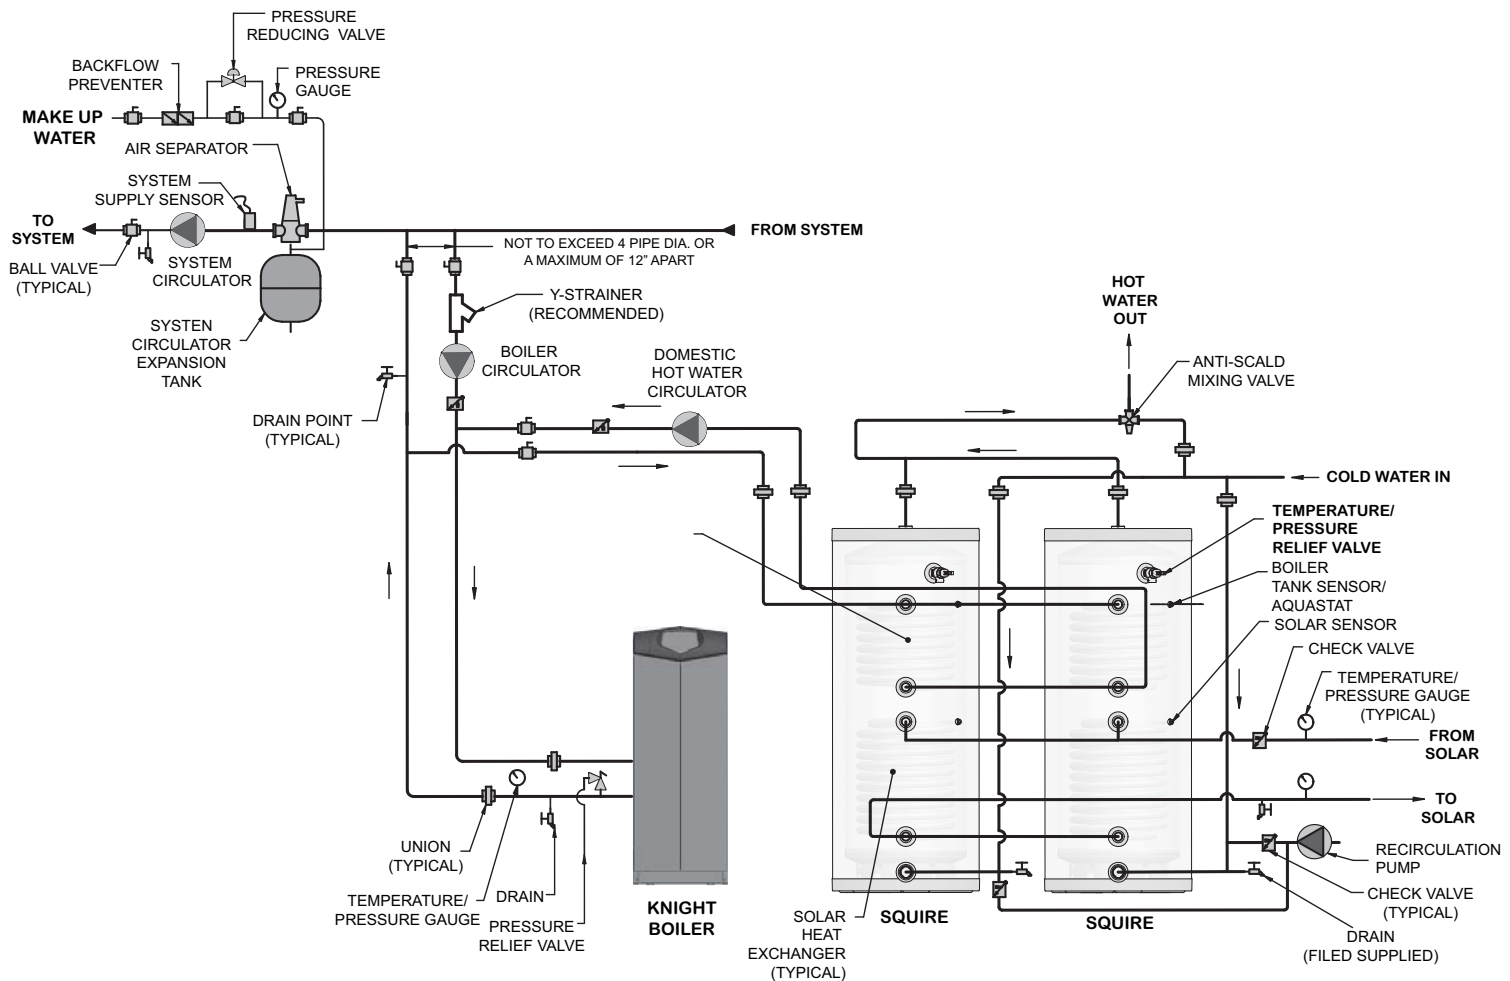

**NOTICE**

Please note that these illustrations are meant to show system piping concept only, the installer is responsible for all equipment and detailing required by local codes.

## 4 Domestic Side (Tank) Piping

### Basic Domestic Piping

Figure 4-2 on page 15 shows typical domestic water piping for a tank. The function of the components shown are as follows:

- a. Shut-off valves (recommended) - Used to isolate the tank for servicing.
- b. Backflow Preventer (required by some codes) - Used to prevent water from backing out of the tank and into the main potable water supply in the event that inlet water pressure drops.
- c. Expansion Tank (required for thermal expansion)- Absorbs the increased volume caused by heating water.

Use an expansion tank designed for use on domestic water systems. Refer to the expansion tank manufacturer's literature for the proper size expansion tank to use.

**NOTICE**

When an expansion tank is used, do not put any valves between the expansion tank and tank inlet.

- d. Unions (recommended) - Used to disconnect the tank in the unlikely event that this is necessary.
- e. Drain (required) - Used to drain the tank for inspection or servicing.

### Multiple Tank Domestic Water Piping

The two pipe reverse return piping uses more pipe than the two pipe direct return piping, but the flow is more balanced and even in the two pipe reverse return piping layout (see FIG. 3-4).

Each tank must have its own T&P valve. It is recommended that each tank be equipped with its own isolation valves, unions, and drains so that one tank may be removed from the system. If local codes require a backflow preventer, check with the appropriate authority to find out whether one backflow preventer may be used for tanks or each tank must be equipped with its own backflow preventer. If each tank must have its own backflow preventer, each tank must also have its own expansion tank. If a common backflow preventer is permitted, an expansion tank must be sized to accommodate the expansion volume of all tanks.

### Domestic Water Piping for Distant Fixtures

In some cases the furthest fixture may be quite distant from the tank. Such an installation would result in an unacceptable delay before hot water reaches these distant fixtures. Even if all the fixtures are relatively close to the tank, the building owner may want hot water at all fixtures as soon as they are opened.

To prevent delays, return circulation piping with a check valve that allows flow to the inlet of the tank. This should be installed on each branch circuit at the farthest fixture or device, so that hot water is supplied upon demand.

Because hot water is always circulating in the hot water branch, the entire branch should be insulated to prevent excessive heat loss.

## 4 Domestic Side (Tank) Piping *(continued)*

### Anti-scald Valves (Mixing Valves)

Anti-scald valves used with water heaters are also called tempering valves or mixing valves. An anti-scald valve mixes cold water in with the outgoing hot water to assure that hot water reaching a building fixture is at a temperature low enough to be safe. ASSE1017 and ASSE1070 certified valves are recommended.

Usually, the maximum temperature of the outlet water will stay near the setting of the tank control. In some cases, however, hot water usage patterns can cause the outlet water temperature to rise significantly above the control setting.

The temperature of water going to the fixtures may be more carefully controlled through the use of a thermostatic mixing valve. This device blends a controlled amount of cold water with the hot water leaving the tank so that water at a more constant temperature exits the mixing valve. Anti-scald mixing valve piping is illustrated in FIG.'s 3-1 thru 3-4.

#### **⚠ WARNING**

An anti-scald mixing valve does not eliminate the risk of scalding.

- Set the tank thermostat as low as practical.
- Feel water before bathing or showering.
- If anti-scald or anti-chill protection is required, use devices specifically designed for such service. Install these devices in accordance with their manufacturer's instructions.


### Install Drain Valve

Drain valve and fittings are supplied by others.

#### Standard Installation

- Install a tee connection at the domestic cold water inlet (FIG. 4-1).

**Figure 4-1** Drain Valve Installed

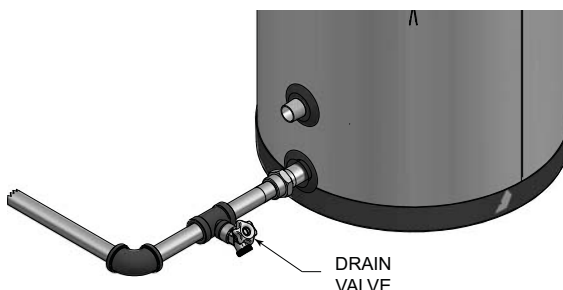

### Temperature & Pressure (T&P) Relief Valve

#### **⚠ WARNING**

For protection against excessive temperatures and pressure, install temperature and pressure protective equipment required by local codes, but not less than a combination temperature and pressure relief valve certified by a nationally recognized testing laboratory that maintains periodic inspection of production of listed equipment or materials as meeting the requirements for Relief Valves and Automatic Gas Shutoff Devices for Hot Water Supply Systems, ANSI Z21.22 and the Standard CAN1-4.4, Temperature, Pressure, Temperature and Pressure Relief Valves and Vacuum Relief Valves. The combination temperature and pressure relief valve shall be marked with a maximum set pressure not to exceed the maximum working pressure of the water heater. The combination temperature and pressure relief valve shall also have an hourly rated temperature steam BTU discharge capacity not less than shown in Table 4A, page 14.

Install the combination temperature and pressure relief valve into the opening provided and marked for this purpose on the water heater.

## 4 Domestic Side (Tank) Piping

### NOTICE

Verify that the combination temperature and pressure relief valve complies with local codes. If the combination temperature and pressure relief valve does not comply with local codes, replace it with one that does. Follow the installation instructions in this section.

Do not place a valve between the combination temperature and pressure relief valve and the tank.

Determine T&P relief valve size by the following specifications, unless they conflict with local codes:

- SDT/SET065/080/119 - 3/4" NPT with a minimum CSA Rating of 200,000 Btu/hr.

### NOTICE

The Lochinvar SDT/SET series water heaters will absorb/store less than 200,000 Btu/hr when domestic water outlet temperature is 210°F and boiler water supply temperature is 240°F. Listed outputs are based on ASME Section VIII Interpretation VIII-1-86-136. Check with local codes for applicability.

**Table 4A**  
**Minimum Relief Valve (CSA Rating)**

Model	BTU/hr
SDT/SET065	200,000
SDT/SET080	200,000
SDT/SET119	200,000

### Standard Installation

- Install the T&P relief valve in the connection marked "Relief Valve".

### T&P Relief Valve Discharge Piping

T&P relief valve discharge piping **must** be:

- made of material serviceable for a temperature of 250°F or greater.
- directed so that hot water flows away from all persons.
- directed to a suitable place for disposal.
- installed so as to allow complete draining of the T&P relief valve and discharge line.
- terminated within 6" of the floor.

T&P relief valve discharge piping **must not** be:

- excessively long. Using more than two (2) elbows or 15 feet of piping can reduce discharge capacity.
- directly connected to a drain. Refer to local codes.
- subject to freezing.

### ⚠ WARNING

Do not install any valve between the T&P relief valve and the tank connection or on the T&P relief valve discharge piping. Improper placement and piping of T&P relief valve can cause severe personal injury, death or substantial property damage.

### ⚠ CAUTION


The T&P relief valve is not intended for constant duty, such as relief of pressure due to repeated normal system expansion. Correct this condition by installing a properly sized expansion tank in a domestic water system. Refer to the expansion tank manufacturer's installation instructions for proper sizing.

### ⚠ WARNING

Failure to install and maintain a new, listed 3/4" X 3/4" temperature and pressure relief valve will release the manufacturer from any claim which might result from excessive temperature and pressures.

## 4 Domestic Side (Tank) Piping *(continued)*

**Figure 4-2** Recommended Domestic Water Piping SDT/SET models

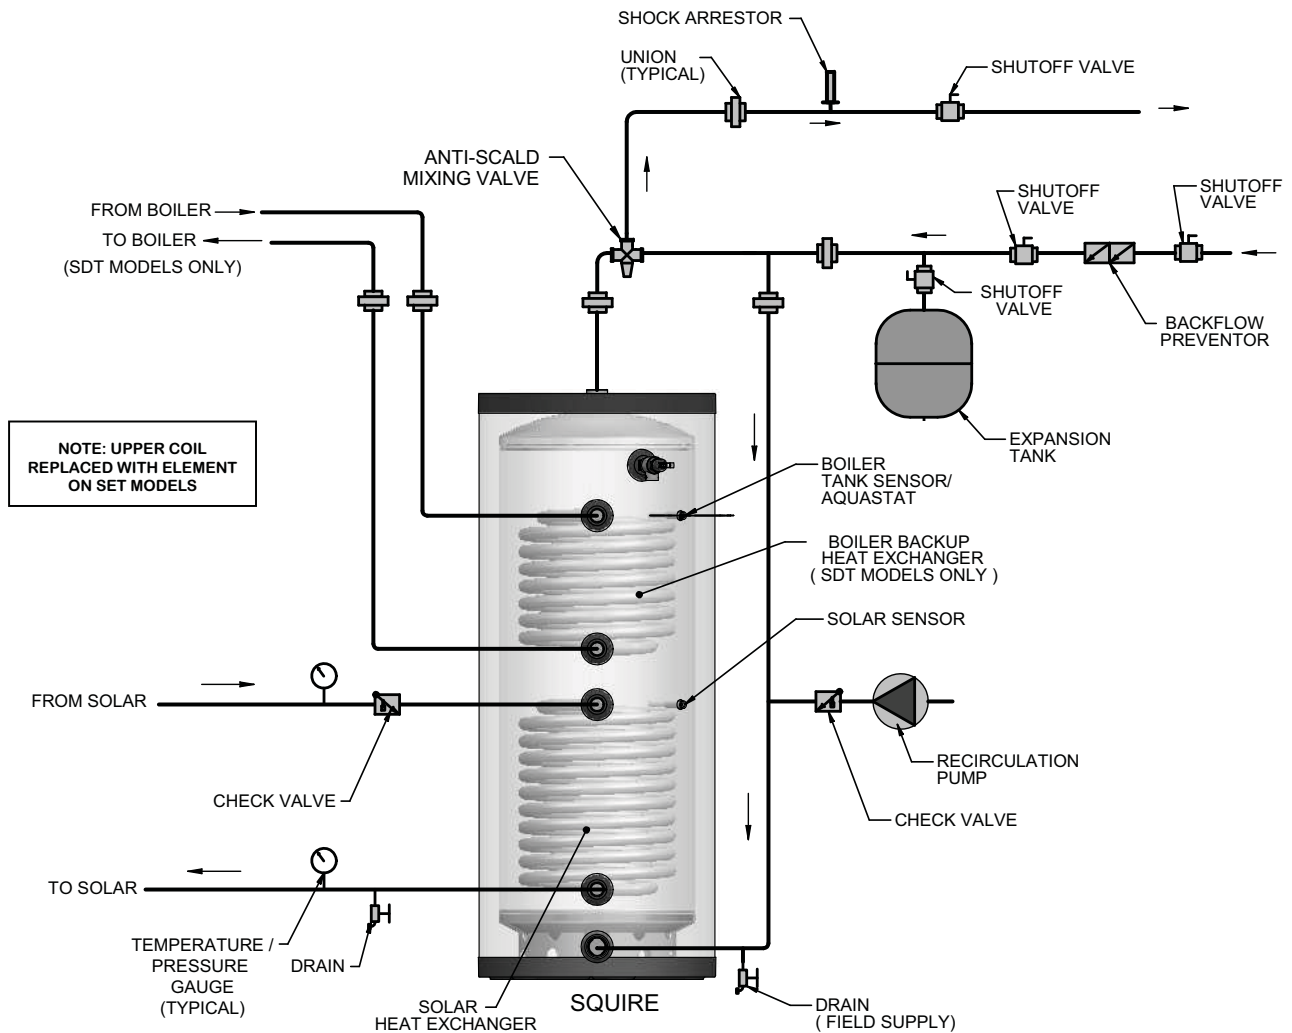

### NOTICE

Please note that these illustrations are meant to show system piping concept only, the installer is responsible for all equipment and detailing required by local codes.



## 5 Wiring

### Electrical Connection

(Squire solar water heater with electric back up only -- SET models only)

#### ⚠ WARNING

Tank must be full before the unit is turned on! The heating element will be damaged if energized for even a short period of time while tank is dry!

#### ⚠ CAUTION

Be sure to ground the water heater. The preferred way to ground is to use rigid metal conduit between the main panel and the water heater junction box with approved end fittings. The separate ground wire connection provided in the water heater junction box must also be grounded. Replace the junction box cover and insulation after you have made all wiring connections.

The 4500-watt heating element in the Squire SET is wired to the junction box on top of the heater and it requires 240-volt/ A.C. electrical service. The voltage requirement and wattage load for the heater is also specified on the heater identification plate. A 1/2" E.M.T. opening, located on top of the unit is provided for a field wiring connection. Consult an electrician to determine if your electrical service is adequate for the additional load of the heater. The electrical installation should be done by a qualified licensed electrician. All wiring must conform to the National Electric Code and local codes.

#### ⚠ CAUTION

The manufacturer's warranty does not cover any damage or defect caused by the installation, attachment or use of any type of unapproved devices into, onto or in conjunction with this water heater. The use of unauthorized energy saving devices may shorten the life of the water heater and may endanger life and property. The manufacturer disclaims any responsibility for such loss or injury resulting from the use of such unauthorized devices.

After the water and electrical connections have been made and the tank has been filled with water, turn on the power to the heater. The heater is now operational.

### Thermostat Adjustment

The thermostat is located in the front of the heater. The access cover must be removed to adjust to the factory default setting of 120°F. This temperature is satisfactory for the average household use.

1. Turn OFF power to the heater.
2. Remove access cover and insulation. Do NOT remove the thermostat protective cover.
3. Set the temperature indicator to desired temperature. Replace insulation access cover.
4. Turn ON power to heater.

### Combination "Thermostat and High Limit Control (ECO)"


This heater is equipped with a combination thermostat and high limit safety. If for any reason the water temperature becomes excessively high, the "High Limit Control (ECO)" breaks the circuit to the heating element. Once the switch opens, it must be reset manually.

#### NOTICE

The cause of the over temperature condition must be corrected first.

To reset, press the red button as shown in FIG. 5-1. Replace the insulation and access cover before turning on power to the heater.

**Figure 5-1** Thermostat

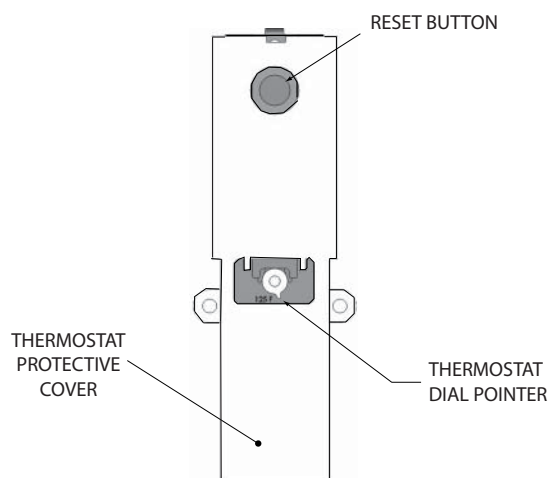


## 5 Wiring *(continued)*

**Table 5A** Wiring SET065-SET119

SET Wiring (Single Element)				
Model	Volts / Phase	Watts / AMPS	Breaker Type	*Wire Gage
SET065	240 VAC / 1 Ph	4500 / 18.3	25 AMP / DPDT	12 ga. THHW
SET080	240 VAC / 1 Ph	4500 / 18.3	25 AMP / DPDT	12 ga. THHW
SET119	240 VAC / 1 Ph	4500 / 18.3	25 AMP / DPDT	12 ga. THHW

\* Rated for 90°C

**Figure 5-2** Combination Thermostat and High Limit Control, SET 065-SET119

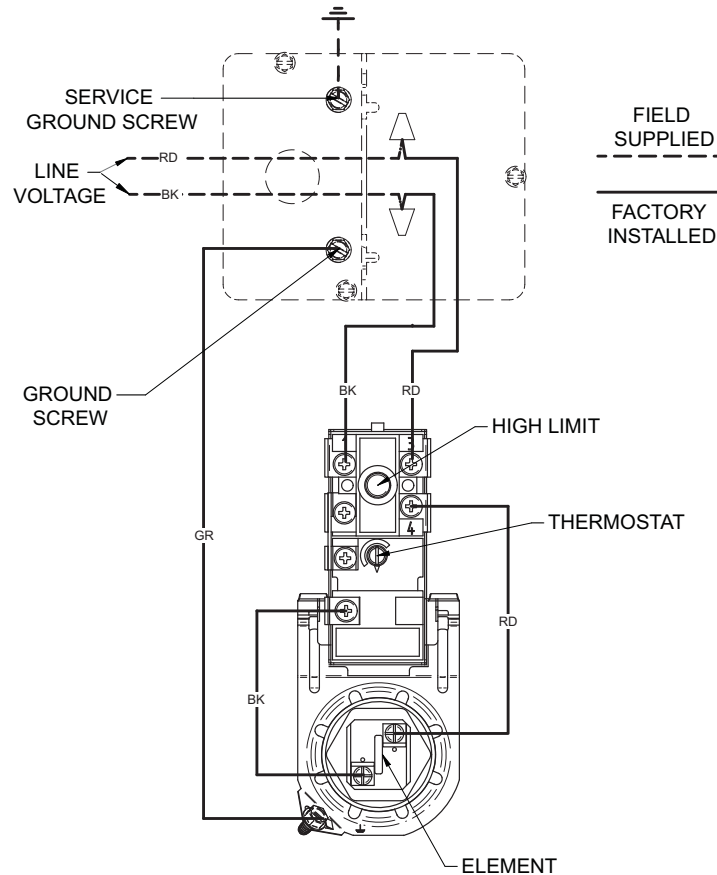

## 5 Wiring

### Indirect Water Heater Sensor Setup (Knight Boiler)

**CAUTION**

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

**NOTICE**

The supplied sensor contains an Auto Reset High Limit (194°F).

#### Install tank sensor



The tank sensor is a dual sensor which controls the temperature of the tank from the boiler (see FIG. 5-3). The tank sensor has a built-in high temperature limit set at 194°F.

1. Install the tank sensor inside the tank as depicted in FIG. 5-3.
2. Connect the wire leads to the DHW tank sensor (AUX) connection point on the Knight boiler connection board (see FIG. 5-3).
3. The Knight boiler will automatically read the sensor and default the tank temperature settings to 125°F.
4. Adjust the tank set point program. Reference the Knight Installation and Operation manual for a detailed explanation of the tank set point program.

#### Connect tank sensor

1. Turn OFF the power to the unit. Use wire strippers to strip one inch of insulation from the ends of each wire that will be spliced.
2. Splice the two ends of bare wire by twisting them together with a pair of electrical pliers. Turn the pliers three or four times to make a sufficient connection.
3. Attach a wire nut at the point where the two wires have been twisted together. Twist the wire nut until it fits snugly or until it can no longer be twisted.
4. Wrap the wire nut and the two wires with electrical tape to secure the connection. Cover any exposed wiring with electrical tape.

**Figure 5-3** Indirect Water Heater Controlled Using Tank Sensor

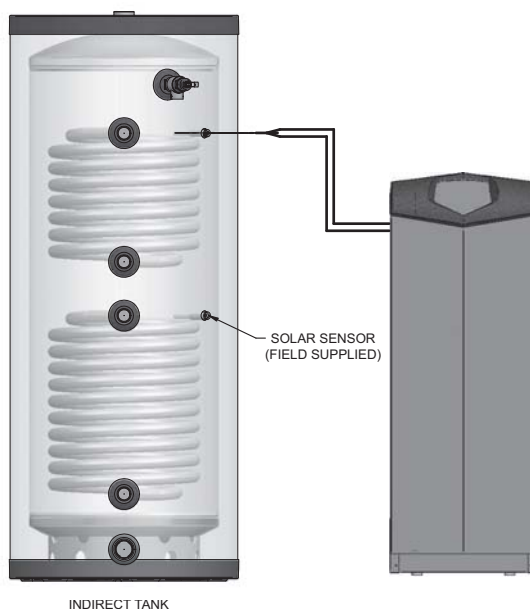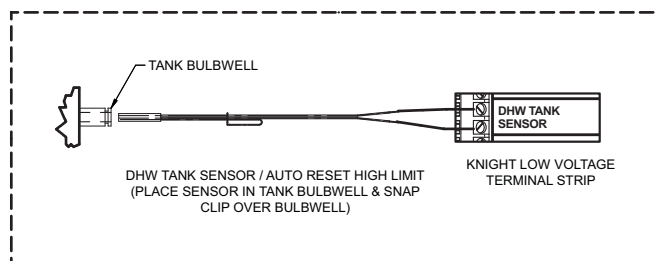


## 5 Wiring *(continued)*

### Indirect Water Heater Controlled Using Aquastat and Zone Circulator / Valve

1. Install Aquastat to tank. Aquastat control (TST20016) can be ordered from your local Lochinvar distributor.
2. Connect Aquastat to the zone controller for the Indirect Water Heater Zone.
3. Adjust Aquastat to the desired temperature.

**Figure 5-4** Wiring for Zone Control

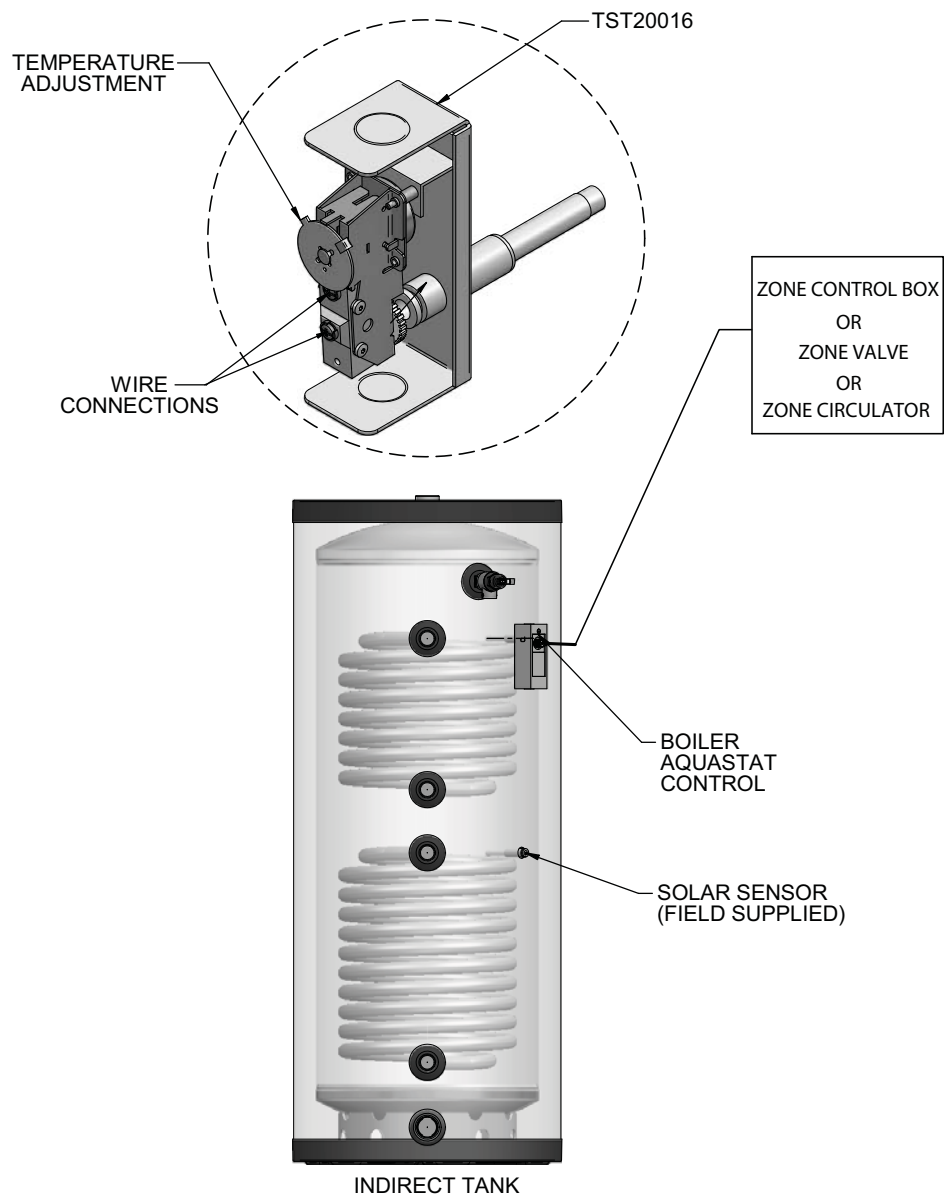

## 6 Start-up and Check-out

1. Make sure the system is free of leaks and that air is purged from the system.

**CAUTION**

Fix any leaks found before proceeding further. Leakage from the boiler piping can result in severe damage to the boiler.

2. Many soldering fluxes contain Zinc Chloride which can cause severe corrosion damage to stainless steel. After completing all domestic water connections, flush the indirect water heater thoroughly before leaving the installation. This is particularly important if the indirect water heater will be unused for an extended period of time after installation. Flush the indirect water heater by drawing at least three times its volume from the tank.
3. Make sure that all electrical connections are made correctly and that no high voltage wiring is exposed.
4. Make sure that each zone valve or circulator operates only when its thermostat calls for heat. Let each zone operate long enough to purge any remaining air from the system.
5. Set the indirect water heater to the desired temperature. Because hot water presents a scald hazard, it is best to set the thermostat at 120°F or lower and raise it only if necessary to provide adequate hot water.
6. Re-enable the burner and allow the boiler to operate. Make sure that the boiler shuts down when the indirect water heater is satisfied.

## 7 Maintenance

The Lochinvar SDT/SET series indirect water heater is an extremely simple device and it requires very little maintenance. There are, however, several items which should be inspected on an annual or as needed basis to ensure a reliable supply of hot water:

Make sure that the rest of the solar, boiler and domestic water piping is free of leaks.

- If there is an oil lubricated circulator in the system, make sure it is lubricated as called for by the circulator manufacturer.
- Make sure that the boiler is maintained in accordance with the boiler manufacturer's instructions.
- If a water treatment system is required to keep the water chemistry within the parameters shown in Table 2A (see Section 2 - *Pre-Installation*), make sure that this system is properly maintained.

### Maintenance Schedule

**Annual service by a qualified service technician should include the following:**

- ☐ Any procedure required by local codes.
- ☐ Verify system pressure. Air venting procedure may require adding water to bring boiler system up to pressure, typically 12 psig.
- ☐ Manually operate T&P relief valve at least once a year. This will release some hot water.

#### **⚠ WARNING**

Before operating a T&P relief valve, make sure no one is in front of or around the T&P relief valve discharge piping. Hot discharge water can cause severe personal injury or substantial property damage.

- ☐ Move operating lever to open position for a few seconds and then move it back, allowing it to snap closed. After the T&P relief valve is operated, if it continues to release water, close the cold water inlet to the water heater immediately. Follow the draining instructions, and replace the T&P relief valve. If the T&P relief valve weeps periodically, it may be due to thermal expansion. Do not plug the T&P relief valve or discharge piping.

#### **⚠ DANGER**

Plugging the T&P relief valve or discharge piping can cause excessive pressure in the water heater, resulting in severe personal injury, death, or substantial property damage.

- ☐ Follow instructions on circulator to oil, if required.
- ☐ Check mixing valve, valves, pipes, and fittings for leaks.
- ☐ Check function of the field-installed controls and valves. See component manufacturer's instructions.
- ☐ Review homeowner's maintenance responsibilities and their frequencies, including any not listed in the following section.

**Homeowner monthly maintenance to include:**

- ☐ Visually check valves, pipes, and fittings for leaks. Call a qualified service technician to repair leaks.

### To Fill the Water Heater

1. Close the water heater drain valve by turning the knob clockwise.
2. Open the cold water supply shutoff valve.
3. Open several hot water faucets to allow air to escape from the system.
4. When a steady stream of water flows from the faucets, the water heater is filled. Close the faucets and check for water leaks at the water heater drain valve, combination temperature and pressure relief valve and the hot and cold water connections.

#### **⚠ WARNING**

Water from opened drain valves, unions and other connections may be extremely hot. To avoid severe personal injury, death, or substantial property damage:

- Tighten all drain hose connections.
- Direct hot water away from all persons.

### To Drain the Water Heater

Should it become necessary to completely drain the water heater, be sure to follow the steps below:

1. Disconnect the power supply from the heat source. Consult a plumbing professional or the electric company in your area for service.
2. Close the cold water supply shutoff valve.
3. Open the drain valve on the water heater.
4. Open a hot water faucet to allow air to enter the system.

Drain the water heater if it will be shut off and exposed to freezing temperatures. Freezing water will expand and damage the water heater.

- If boiler water contains sufficient antifreeze, then only the domestic water needs to be drained.
- If boiler water does not contain sufficient antifreeze, the boiler water and the domestic water must be drained.

If antifreeze is used in the boiler water, check concentration. Boiler water (including additives) must be practically non-toxic, having a toxicity rating or class of 1, as listed in the *Clinical Toxicology of Commercial Products*. A maximum 50/50 mixture of inhibited propylene glycol is recommended. Follow the antifreeze manufacturer's instructions.

#### **⚠ WARNING**

Do not use automotive, ethylene glycol or petroleum-based antifreeze. Do not use any undiluted antifreeze. This can cause severe personal injury, death, or substantial property damage.

## 8 Performance Data

**Table 8A** SET Backup Recovery Performance

Model	Heat Exchanger Volume Gallons	Heated Water Volume Gallons	Recovery Back Up Minutes		* First Draw Gallons	
	Solar		65°F Rise	90°F Rise	115°F	140°F
SET065	2.2	28	78	108	34	26
SET080	2.2	35	89	123	44	31
SET119	3.2	44	120	166	55	42

**Table 8B** SDT Backup Recovery Performance

Model	Heat Exchanger Volume Gallons		Heated Water Volume Gallons	Recovery Back Up Minutes		Boiler Output for Recovery BTU/HR	* First Draw Gallons	
	Boiler	Solar		65°F Rise	90°F Rise		115°F	140°F
SDT065	1.9	2.2	32	8	13	128,000	42	30
SDT080	1.9	2.2	36	9	15	128,000	49	35
SDT119	2.6	3.2	53	10	17	217,000	65	50

\* Amount of water drawn from tank with no energy input

### How to Properly Size Your Indirect Water Heater

Use the First Hour Rating (FHR) to properly size your indirect water heater. The FHR is the amount of hot water (in gallons) that the water heater can supply in the first hour of operation (starting with a tank full of hot water). The FHR is dependent on tank capacity, source of heat, and the size of the burner.

The indirect water heater and boiler sizing charts can be found on pages 23 and 24. Locate your indirect water heater and boiler along with your required FHR. This will also determine the flow needed between the indirect water heater and boiler.

**NOTICE**

The charts utilize only the upper boiler coil and the upper half of the tank.



# 8 Performance Data *(continued)*

**Table 8C First Hour Rating - 180°F Boiler Loop Water (Knight and Wall Mount Boilers, Upper Coil SDT Models)**

		First Hour Rating - 180°F Boiler Loop Water (Knight Boiler - SDT065 - SDT119)																																						
		Model	SDT065										SDT080										SDT119																	
		Boiler Supply Water	180										180										180																	
		Circulator Flow GPM	5	8	12	16	20	25	30	5	8	12	16	20	25	30	5	8	12	16	20	25	30																	
		Domestic Outlet	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140						
Boiler Heating Capacity	WH 55	52,250	130	101	130	101									136	107	136	107										152	123	152	123									
	KB 81	72,000	167	127	167	127									174	134	174	134										191	150	191	150									
	WH 85	80,750	184	139	184	139									191	146	191	146										208	162	208	162									
	KB 106	99,750			221	166	220	165								228	172											245	189	245	189									
	WH 110	104,500					255	171								237	178											255	195	255	195									
	KB 151	142,500						255	190	269	200	301	222	301	222		241	181	264	198	290	216	305	227	310	230		291	221	329	248									
	WH 155	147,250												311	229										320	237	320	237		338	254									
	WH 199	189,999											320	236													342	253	374	276		341	257	385	288	413	308	422	314	
	KB 211	199,500																																	440	327	440	327		
	KB 286 / WH 285	270,750																																	475	352	529	390	580	426
	KB 400	372,267																																				587	431	
	MAX BTU INPUT	87,908	100,236	113,064	118,318	125,667	142,000	152,463	90,256	106,525	118,352	131,827	139,966	159,038	175,125	123,218	148,780	171,607	285,675	217,372	245,000	274,575																		

Note: Testing conducted with 50°F inlet cold water

**Table 8D First Hour Rating - 180°F Boiler Loop Water (Universal Sizing, Upper Coil SDT Models)**

First Hour Rating - 180°F Boiler Loop Water (Universal Sizing - 45,000 - 295,000 Btu/hr / SDT065-SDT119)																																								
Model	SDT065												SDT080												SDT119															
Boiler Supply Water	180												180												180															
Circulator Flow GPM	5	8	12	16	20	25	30	5	8	12	16	20	25	30	5	8	12	16	20	25	30	5	8	12	16	20	25	30												
Domestic Outlet	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140										
Boiler Heating Capacity	40,000	106	84	106	84										112	90	112	90										128	106	128	106									
	60,000	144	111	144	111										151	117	151	117										167	133	167	133									
	70,000	163	125	163	125										170	131	170	131										187	147	187	147									
	100,000	198	149	221	165	221	165	221	165						210	159	228	172										246	189	246	189									
	120,000					246	183	255	190	259	192						241	181	264	198	267	200	267	199				285	217	285	217									
	140,000							269	200	297	219	297	219							290	216	306	227	306	227	291	221	324	244											
	165,000									301	222	320	236															342	253	355	262			341	257	373	279	373	279	
	195,000																													374	276				385	288	413	308	431	321
	225,000																																		475	352	490	362		
	260,000																																				529	390	559	411
	295,000																																					587	431	
MAX BTU INPUT	87,908	100,236	113,064	118,318	125,667	142,000	152,463	90,256	106,525	118,352	131,827	139,966	159,038	175,125	123,218	148,780	171,607	285,675	217,372	245,000	274,575																			

Note: Testing conducted with 50°F inlet cold water

# 8 Performance Data

**Table 8E First Hour Rating 200°F Boiler Loop Water (Universal Sizing, Upper Coil SDT Models)**

		First Hour Rating - 200°F Boiler Loop Water (Universal Sizing - 45,000 - 295,000 Btu/hr / SDT065-119)																																								
		Model	SDT065												SDT080												SDT119															
		Boiler Supply Water	200												200												200															
		Circulator Flow GPM	5	8	12	16	20	25	30	5	8	12	16	20	25	30	5	8	12	16	20	25	30																			
		Domestic Outlet	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140												
Boiler Heating Capacity	WH 55	52,250	126	100	126	101										133	107	133	107								148	122	148	122												
	KB 81	72,000	162	127	162	127										170	134	170	134								185	149	185	149												
	WH 85	80,750	178	139	178	139										187	147	187	147								202	161	202	161												
	KB 106	99,750	213	165	213	165										222	173	222	173								237	188	237	188												
	WH 110	104,500	221	171	222	171										231	179	231	179								246	194	246	194												
	KB 151	142,500	251	192	272	208	292	223								264	203	303	232								318	247	317	247												
	WH 155	147,250					300	229	300	229							312	238									326	253	326	253												
	WH 199	189,999						328	249	358	271	379	287				323	247	351	267	367	279	388	295	392	297		354	274	407	312											
	KB 211	199,500									391	295	396	299												410	311	410	311		424	325										
	KB 286 / WH 285	270,750										425	321													435	329	465	351		429	329	485	370	526	400	558	424	558	423	558	423
	KB 400	372,267																																598	453	669	505	709	535			
	MAX BTU INPUT	120,500	131,500	147,000	162,000	179,000	196,200	215,250	121,786	153,207	168,199	176,608	188,081	212,900	228,875	162,144	202,222	231,672	253,492	291,792	329,875	351,500																				

**Table 8F First Hour Rating - 200°F Boiler Loop Water (Universal Sizing, Upper Coil SDT Models)**

First Hour Rating - 200°F Boiler Loop Water (Universal Sizing - 45,000 - 295,000 Btu/hr / SDT065-SDT119)																								
Model	SDT065								SDT080								SDT119							
Boiler Supply Water	200								200								200							
Circulator Flow GPM	5	8	12	16	20	25	30	5	8	12	16	20	25	30	5	8	12	16	20	25	30			
Domestic Outlet	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140		
Boiler Heating Capacity	40,000	103	84	104	84					110	90	110	90					125	105	125	105			
	60,000	140	111	140	111					148	118	148	118					163	133	163	133			
	70,000	158	124	159	125					166	132	166	132					181	147	181	147			
	100,000	213	165	214	165					223	173	223	173					238	188	238	188			
	120,000	250	192	251	192					260	201	260	201					275	216	275	216			
	140,000	251	192	272	208	287	219	287	219									313	243	313	243			
	165,000				300	229	328	249	332	252					323	247	345	263	345	263	345	263		
	195,000						358	271	389	294	388	293			351	267	367	279	388	295	401	304		
	225,000						391	295	425	321					435	329	458	346			472	329	472	360
	260,000															465	351				485	370	538	400
	295,000																				604	453	603	457
	325,000																						660	498
	368,999																					669	505	
	460,000																							709
MAX BTU INPUT	120,500	131,500	147,000	162,000	179,000	196,200	215,250	121,786	153,207	168,199	176,608	188,081	212,900	228,875	162,144	202,222	231,672	253,492	291,792	329,875	351,500			

Note: Testing conducted with 50°F inlet cold water

## 9 High Output Piping

### High Domestic Hot Water Usage

When a large amount of hot water is required by a Domestic Hot Water system, the dual coil indirect water heater can be piped together when given the high volume needed to satisfy the high load demands. This is achieved by piping the boiler coil and solar coil together. This will enable heat transfer to both the heat exchangers at the same time. This is done by series piping or piping in parallel. A decision must be made to choose a particular system based on the heating coil pressure drop and the desired flows. This type of piping can be done in a solar operation as well as with a boiler to achieve this maximum heat transfer into the water.

#### Series Piping

With this style of installation, the solar / boiler supply piping is connected to boiler water IN connection. When joining in this operation, all fittings must be no smaller than 1" in size. Then, the boiler water OUT and the solar water IN are connected. This will join the boiler and solar coils together. The return water is piped from the solar return to the solar / boiler supply. See FIG. 9-1 on page 26.

**NOTICE**

For tank operation use the lower bulbwell to turn the tank on and off.

### Parallel Piping

With this style of installation, both heat exchangers are used at the same time. Solar / boiler supply piping to the solar water IN and boiler coils will be at the same temperature at the same time. Then, the boiler return and the solar return are piped together again to return the water to the heat source. See FIG 9-2 on page 27.


**NOTICE**

For tank operation use the lower bulbwell to turn the tank on and off.

The two-pipe reverse return hydronic loop is more balanced and even than the two-pipe direct return hydronic loop. Both heat exchangers receive the same temperature of water so it is the same as the two-pipe return, but with more advantages. One of these advantages is a balanced flow of the reverse return system. This system can have a lower pressure drop for both heat exchangers than the two-pipe system, and it also requires less energy.

## 9 High Output Piping


**Figure 9-1 Indirect Boiler with Series Piping**

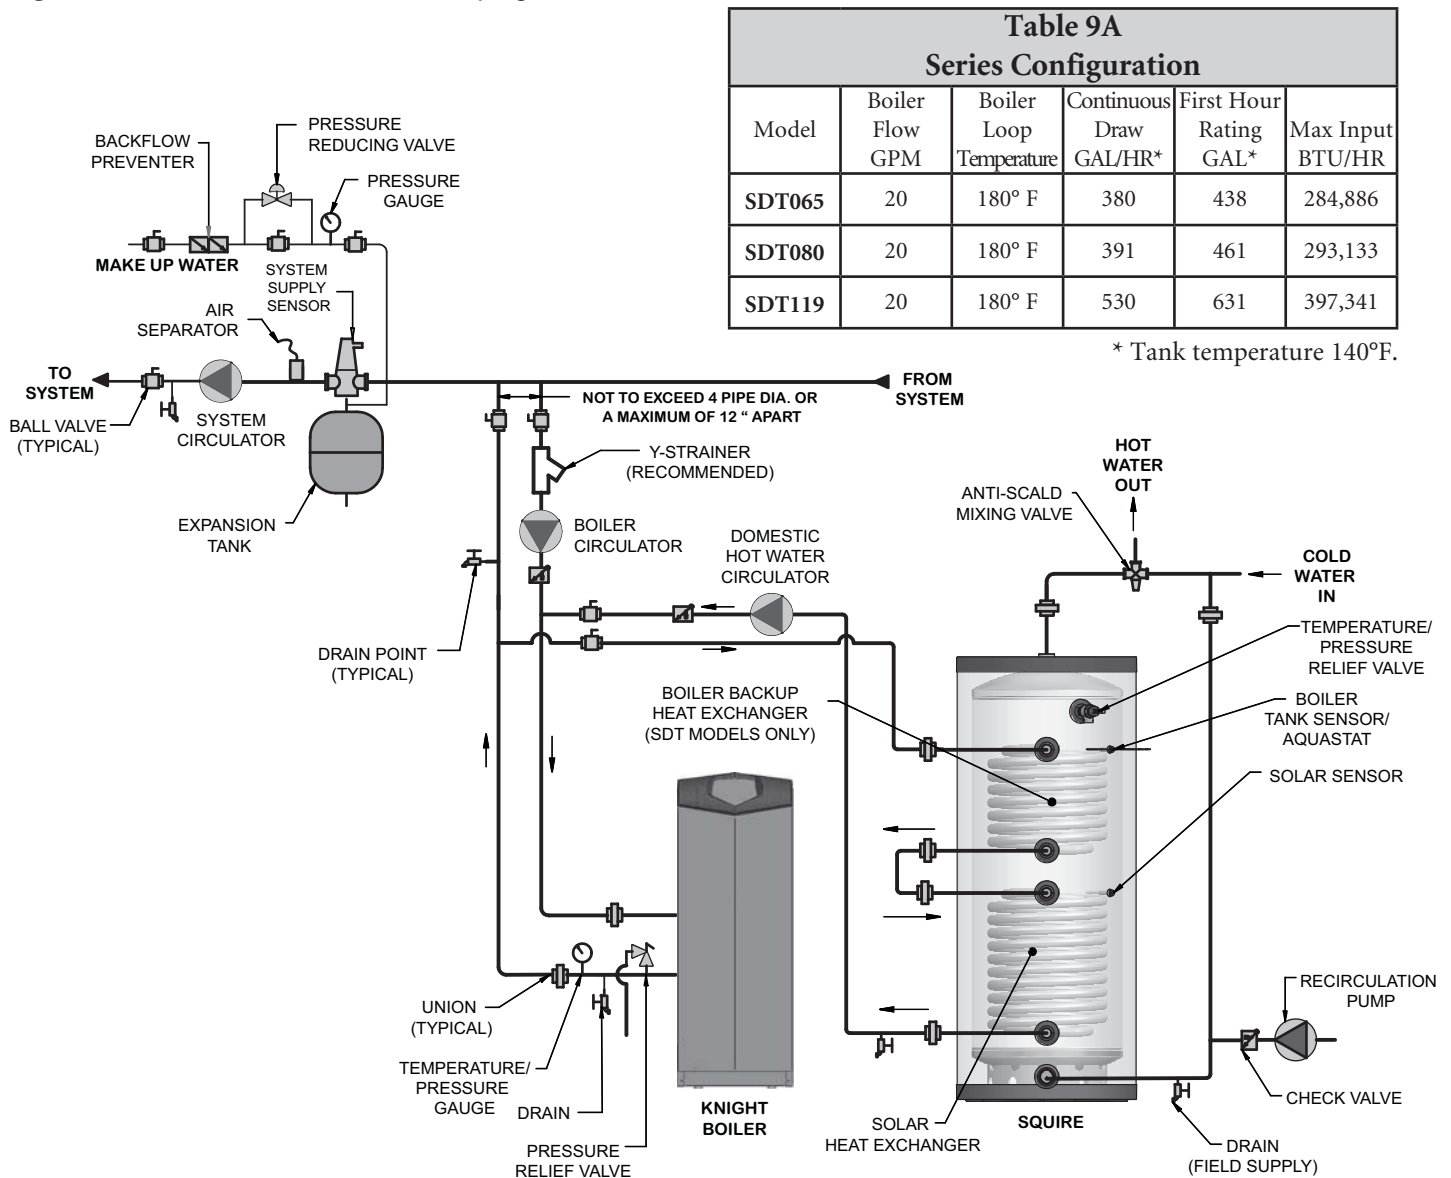

**NOTICE**


Please note that these illustrations are meant to show system piping concept only, the installer is responsible for all equipment and detailing required by local codes.

**Table 9B SDT Series Friction Loss**

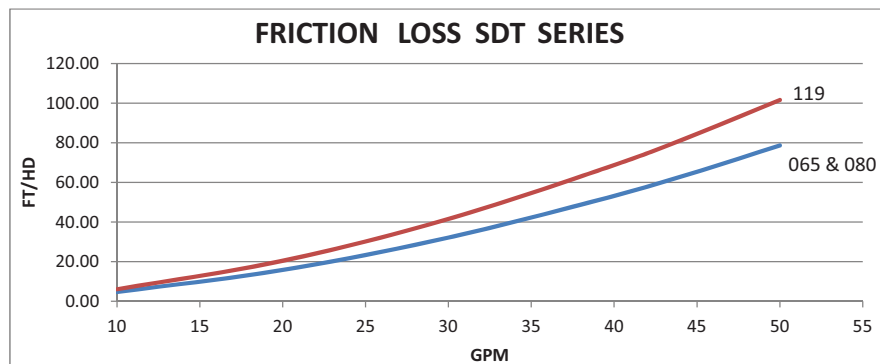

## 9 High Output Piping *(continued)*


**Figure 9-2** Indirect Boiler with Parallel Piping

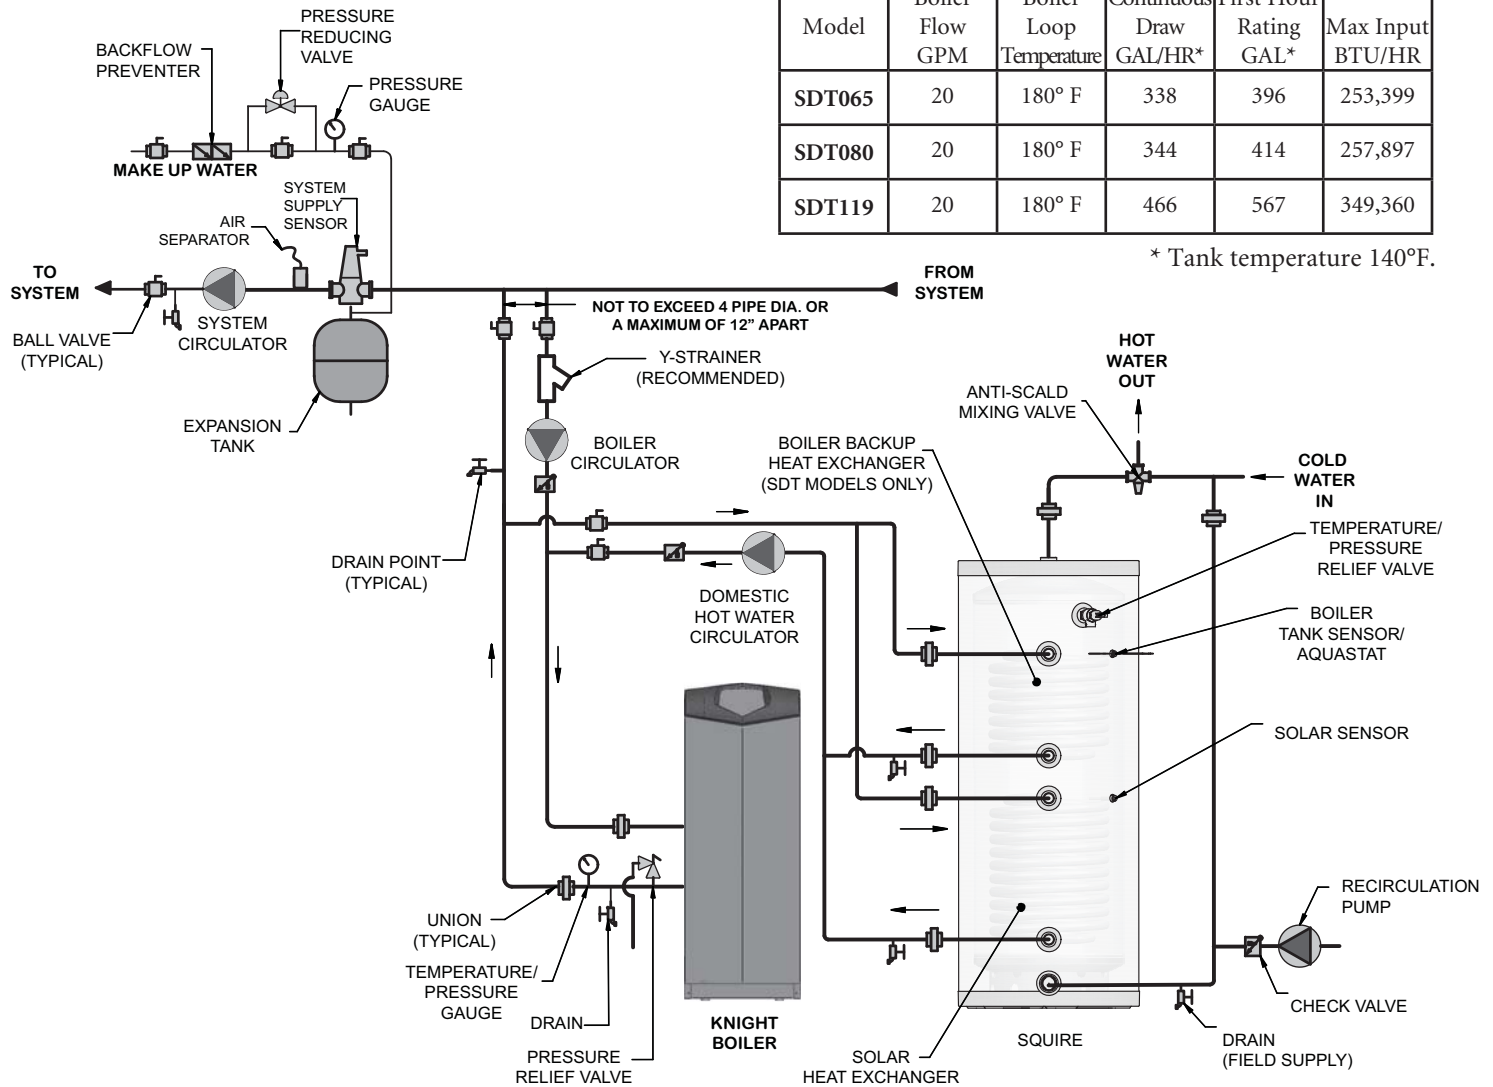

**NOTICE**

Please note that these illustrations are meant to show system piping concept only, the installer is responsible for all equipment and detailing required by local codes.

**Table 9D** SDT Parallel Friction Loss

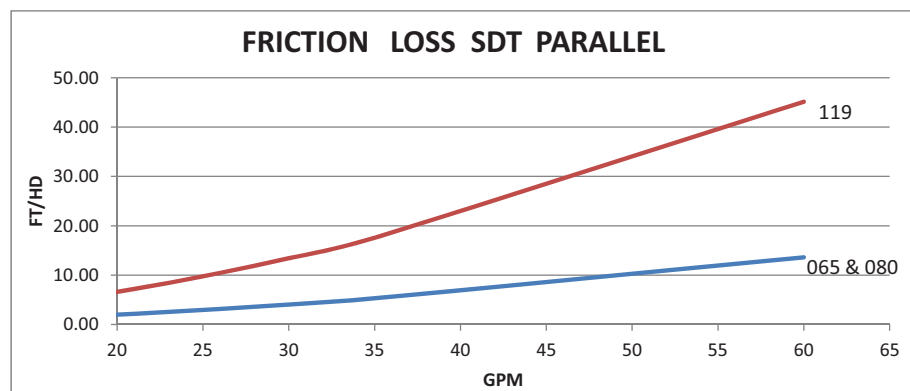

**Note:** This chart indicates total pressure drop for both coils piped in parallel.

**Revision Notes:** Revision A (ECO C05788) initial release.

*Revision B (ECO C05936) reflects the addition of "High Output Piping" section on pages 25-27, Series and Parallel piping diagrams on pages 26-27, and new friction loss charts for SDT Series and Parallel on pages 26 and 27.*

*Revision C (ECO C06300) reflects the update of tank images and additional CSA cautions on manual cover, "Connect tank sensor" section added to "Wiring" section on page 18, and tank temperature statement with correction of piping diagram headers and table 9A and 9C on pages 26 and 27.*

*Revision D (ECO C10301) reflects the update of series and parallel piping information on pages 26 and 27.*

*Revision E (ECO #C12382) reflects the addition of the CSA Low Lead Content logo.*

*Revision F (ECO C12829) reflects the update of coil material information in Table 1A on page 4.*

*Revision G (ECO C14064) reflects the update of the information in Tables 3A - 3C on page 4, and 9B - 9D on pages 26 - 27.*